

User Manual



www.micropowerbank.com

Thank you for purchasing this product.
Please carefully read the instructions before use.

Instructions for Use

What to power from AC power bank

- AC: Lamps, TVs, Pinballs, DVRs, Gas grills, Irons, Fans, Lamps, Car Pumps, Toilet Valves, Coffee Machines, Mini Fridges, Display Monitors, Small Appliances and other AC plug devices that are in less than 100W.
- USB: Smart Phones, MP3 Players, Game Players, Digital Cameras, E-Readers, Tablets, etc.
- TYPE C: Nintendo Switch, 12 inch MacBook, etc.
- Get pass-through charging manually. When the power bank is being charged, the display shows 100. Long press the power button to turn on the power bank and the display will show AC. And it's ready to charge.



lamp



Gas grills



Fan



Mini refrigerator



LED light



Smartphone



Laptop

 


TV

and more...


Instructions for Use

How to use AC power bank

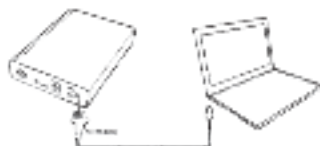

1. Charge from AC Outlet

 - Long press the power button to turn on the power bank, the digital screen will light up.
- Plug your adapter to the AC socket and it can start power your devices.
- Long press the power button to turn off the LED light off to save off the power bank after using.

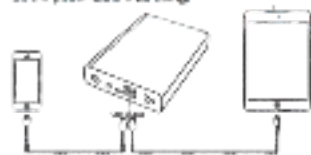


2. Charge from USB Ports

- Long press the power button to turn on the power bank, the digital screen will light up.
- Connect your USB device to the USB port via USB cable.
- It will output a suitable voltage (5V/9V/12V) automatically for your devices. (Note: It can Quick Charge for QC compatible devices.)
- Long press the power button to turn off the LED light off to turn off the power bank after using.

Instructions for Use

 
300

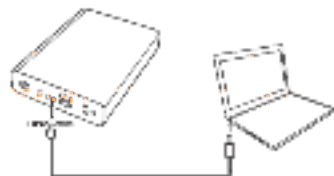

3. Charge from TYPE-C port

- Long press the power button to turn on the power bank, the digital screen will light up.
- Connect your TYPE-C device to the TYPE-C port (24W max).
- Long press the power button if the led light off to turn off the power bank after using.

 4. All output ports can charge several devices like laptop, tablet, cell phone etc safely.

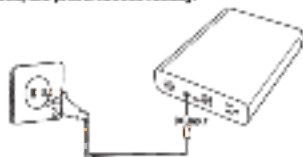

5. To charge the AG Power bank

Connect the charger with the DC-IN port, the other side connects to wall socket. The digital screen showing 100% means it is full charged.

Instructions for Use

300



6. Battery level indicator

Long press the power button, the screen will light up to show the battery level. If the digital screen does not light up, it means the power bank needs to be charged.

Specifications

300

Capacity: 6000mAh

Battery type: Lithium battery

DC Input: 15V/2A

AG Output: 11V/18W/13W (max)

20W/10W/7.5W (max)

TYPE-C Output: 5V/9W/12V 3A (max)

Quick Charge 3.0 USB 1: 5V/5W/12V 3A (max)

Quick Charge 3.0 USB 2: 5V/5W/12V 3A (max)

Package Contents

300

- 1* AC Power Bank
- 1* Multifunction Bag
- 1* Conversion Plug
- 1* Charger
- 1* Micro USB Cable
- 1* User Manual

Safety Instructions

300

Please observe these instructions to ensure safe usage.

- Do NOT disassemble, repair or modify the unit or the battery.
- Do NOT touch the unit or the plug's prongs if your hands are wet.
- Do NOT let children use the power supply unit.
- Do NOT drop, knock, squeeze the unit.
- Do NOT charge, use or store the unit in a bathroom or in an area exposed to rain or moisture.
- Do NOT connect any mobile connections, such as supply lines, directly to the output receptacle.
- Do NOT dispose of Use and / or after with household waste.
- Do NOT damage the unit and/or the battery, e.g. by dropping or exposing to fire.
- Only charge, use and store the unit within an ambient temperature of -10 to 50°C.
- Use the output receptacle only for connecting compatible electric devices and do not connect to the mains and/or city distribution.
- Recharge the unit once every six months when it is not used.
- Charge the unit prior to every use.

Warranty

300

The product is with a warranty of 12 months from the date of purchase.

300

300