

volkano™

Insta Series

HOME VLOGGING KIT *WITH FLOOR TRIPOD*



INSTRUCTION MANUAL

Please read and retain these instructions for future reference.



VK-6503-BK

 
PACKAGE CONTENTS

- 9cm LED Ring Light
- Phone Holder
- Microphone Holder
- Adjustable Microphone Boom Arm
- Tablet and Notes Holder
- Floor Standing Tripod

PACKAGE CONTENTS

- Volcano Insta Series Vlogging Kit including:
- Floor Standing Tripod
- Microphone Boom Arm
- Tablet Stand
- Phone Holder
- Microphone Holder
- Pop Filter
- Anti-Vibration Damper
- Instruction Manual

IDENTIFYING PARTS

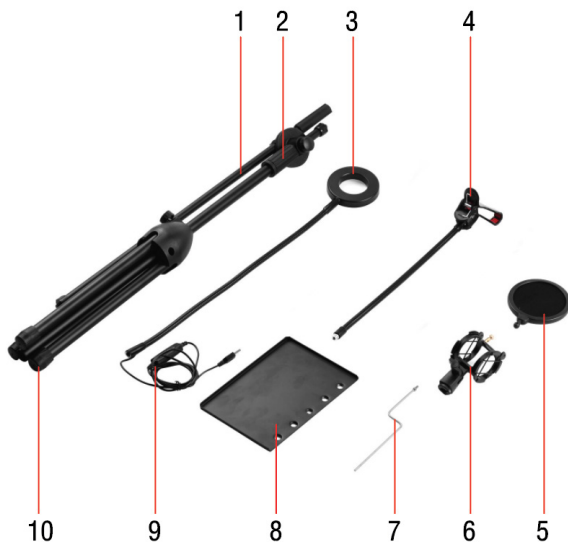

1. Microphone Boom Arm
2. Height Adjustment Clamp
3. Ring Light
4. Phone Holder
5. Microphone Pop Filter
6. Microphone Holder
7. Microphone Pop Filter Arm
8. Tablet / Script Tray
9. Controls
10. Tripod Stand

SETUP



1. Microphone Boom Adjustment

- Loosen the Microphone Boom Adjustment Knob to release the Adjuster
- Adjust the length of the Microphone Boom by sliding upwards or downwards and rotating the Boom
- Tighten the knob to lock in position

2. Stand Height Adjustment

- Turn the Height Adjustment Clamp anti-clockwise to release the inner pipe.
- Adjust the height of the stand by moving the pipe either upwards or downwards to achieve the desired height
- Tighten the Height Adjustment Clamp to lock height position.

Note: Do not over tighten as this may damage the pipe inside.

3. Tripod Stand

- Raise the center pole upwards.
- Tighten the clamp by turning the knob.
- Open the tripod legs by pulling them outwards completely and place on the ground


4. Mounting the Tablet / Script Tray

- Remove the Locking Nut from the top of the inner pole
- Place the tray on the inner pole using the middle mounting hole and screw the Locking nut back on to lock the tray in position

5. Mounting Flexible Ring Light and Phone Holder Arms


- Screw the Flexible arms directly into the mounting holes until tightly fitted
- Bend the arms to achieve desired angles

6. Attaching the Phone Holders

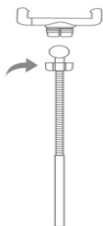

- Place the Mobile Phone Holder Nut over the connecting ball head, Insert the Mobile Phone Holder onto the connecting ball head and rotate the nut to fasten the holder in position
- Insert the Mobile Phone into the Mobile Phone Holder and adjust the position accordingly.

7. Attaching the Microphone Pop Filter

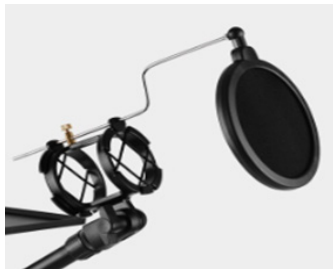

- Attach the Microphone Holder to the Microphone Boom
- Attach the Pop Filter Arm to the Microphone Holder
- Attach the Pop Filter to the Pop Filter Arm and position it so it is close to the front of the microphone without touching the microphone.

INSTRUCTIONS FOR USE

The Vlogging Kit Ring Light is powered by a USB Connection and must be powered in order for the Ring Light to be used.

- Plug the USB Connector into a USB Power source such as a PC, Laptop, Wall Charger or Power Bank.

 
Controls:

Increase Lighting Intensity level,
short press to increase intensity level

Short press to change Color Temperature

Decrease Lighting Intensity level,
short press to decrease intensity level

Power Button, short press to
Power On / Off

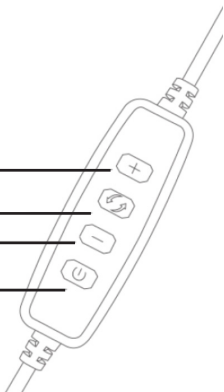

SAFETY PRECAUTIONS

- This product should only be used with the parts provided by the manufacturer.
- Avoid the use of this product near water or in areas where it can come into contact with water.
- Do not operate this product with a damaged cable, after it malfunctions, has been dropped or damaged in any manner.
- This product is intended for personal use only. Commercial use invalidates the warranty and the supplier cannot be held responsible for injury or damage caused when using the device for any other purpose than that which it was intended for.

- This product is not intended for use by children, persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision instructions concerning use of the device by a person responsible for their safety. Extreme caution must be exercised.
- Children should be supervised to ensure that they do not play with this product. Packaging must never be left within reach of children since it is potentially dangerous.


CLEANING AND CARE INSTRUCTIONS

- **Before cleaning:** Ensure that your Ring Light is not connected before cleaning or maintaining it.
- Remove any Phone, Microphone or object on the stand.
- **Cleaning:** Wipe down the surface of your Ring Light using a soft cloth.
- Do not use any harsh or abrasive cleaning chemicals or materials on your Ring Light as doing so may damage or scratch the surface finish.
- Do not expose your Ring Light to direct sunlight or high temperatures for extended periods of time.
- Do not store in temperatures over 140 °F (60 °C).

ENVIRONMENTALLY FRIENDLY DISPOSAL

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



 WARNING	<p>WARNING: This product can expose you to chemicals including styrene, ethylbenzene, and cumene, which are known to the State of California to cause cancer. For more information go to www.P65Warning.ca.gov.</p>
---	--

WARRANTY

This Volcano™ Insta Home Vlogging Kit with Floor Tripod comes with a standard 12-month limited warranty against manufacturing defects and faults. Should your product be unboxed with any faulty parts, poor finishing or visible damage, or fail to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange, or repair, depending on the store's returns policy. This warranty commences from the date of purchase.

Kindly retain your proof of purchase as well as the packaging for your warranty period.

Note: The Warranty does not apply to a product that:

1. Has failed due to excessive wear and tear beyond what is considered to be reasonable.
2. Has been misused or neglected.
3. Has been damaged accidentally or Force Majeure including fire and flooding.
4. Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase / Seller cannot accept any returned products that have not been returned in accordance with this warranty or which do not follow their own Returns Policy. Please refer to the Store of Purchase / Sellers Returns Policy for details.

Should you require any further assistance or have any questions on your warranty, please contact the store of purchase.