

windham

 
narrow library cabinet

style # WNNWLIBDBL (teal)
dpci # 249-14-1923
tcin # 50068949

style # WNNWLIBDWH (shell)
dpci # 249-14-1924
tcin # 50068950

style # WNNWLIBDGY (gray)
dpci # 249-14-1921
tcin # 50068951

style # WNNWLIBDOV (overcast)
dpci # 249-14-1922
tcin # 50068952

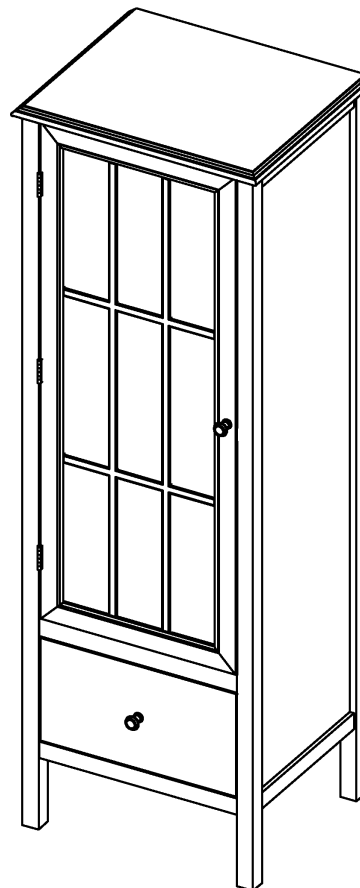

>> assembly instructions



Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time. Good luck—though we're confident you won't need it.

before you begin

1. Check for damaged or missing parts. Call 1-855-MYTGTHOME (855-698-4846) to order missing supplies.
2. Use the carton as a working surface to prevent product damage during assembly.
3. Read through and review assembly steps.
4. Gather all tools prior to assembly.

tools needed

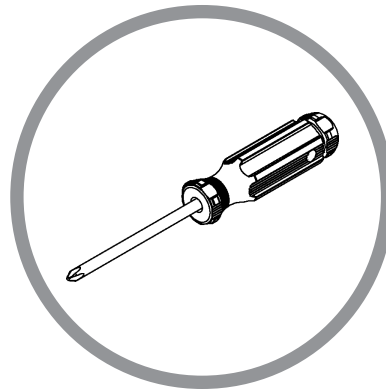 
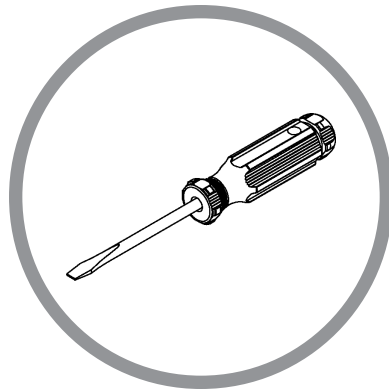 
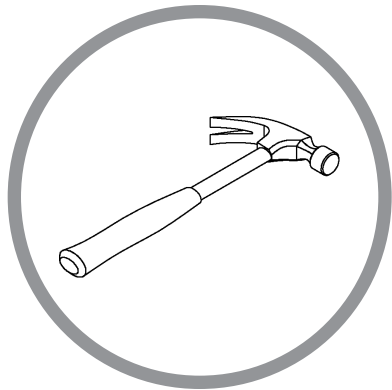 



table of contents

.....


introduction	2
hardware	4
parts list	5
how to use the cam lock system	6
assembly	7-16
how to adjust door alignment	17

hardware

 
(H1) x 12
wooden dowel

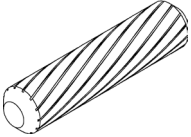


(H2) x 8
cam bolt

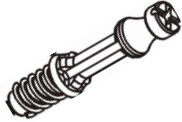 


(H3) x 8
cam

 


(H4) x 33
small pan
head screw

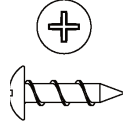 

(H5) x 6
small flat
head screw

 

(H6) x 8
shelf support

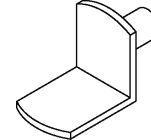 


(H7) x 2
knob




(H8) x 2
knob bolt



 
(H9) x 4
1-1/4" bolt




(H10) x 4
lock washer

 


(H11) x 4
washer

 


(H12) x 1
allen wrench

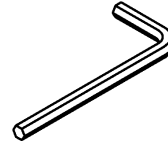 


(H13) x 4
1" flat head screw

 

(H14) x 2
magnet

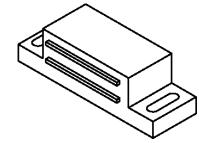 

(H15) x 1
truss head screw

 


(H16) x 1
wall strap




(H17) x 2
washer



 (H18) x 1
wall anchor




(H19) x 1
wall screw

 


exploded diagram

ITEM	DESCRIPTION	QUANTITY
A	right side rail	1
B	fixed shelf	1
C	bottom panel	1
D	left side rail	1
E	top panel	1
F	back panel	1
G	door	1
H	adjustable shelf	2
I	drawer face	1
J	right drawer side	1
K	left drawer side	1
L	drawer bottom	1
M	drawer back	1

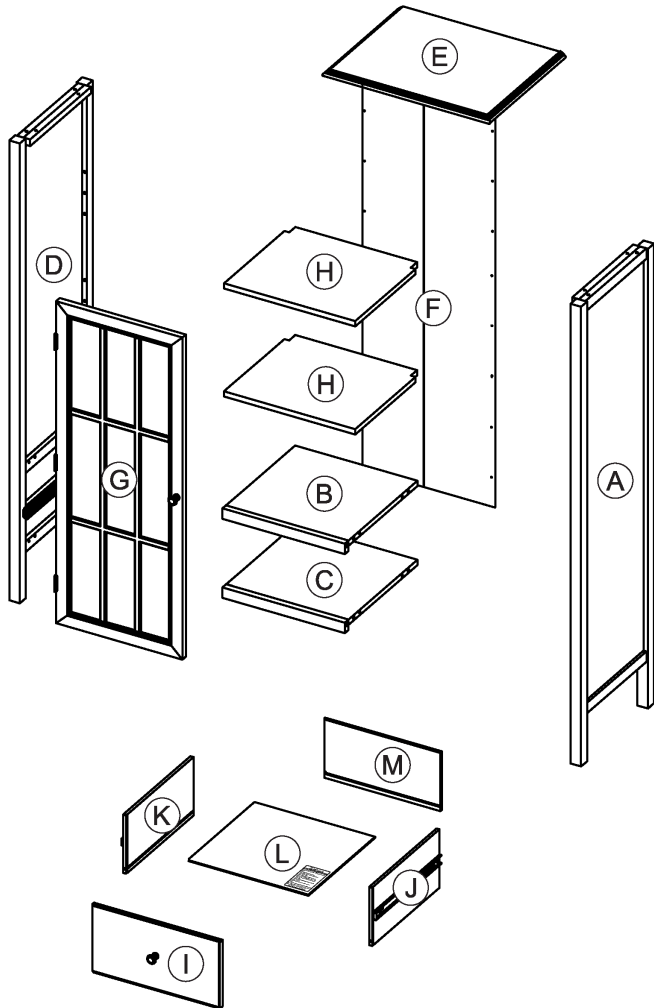 


how to use the cam lock system

 1.

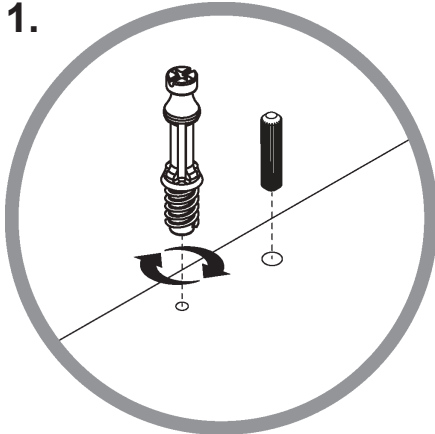


Screw cam bolt into panel

 2.

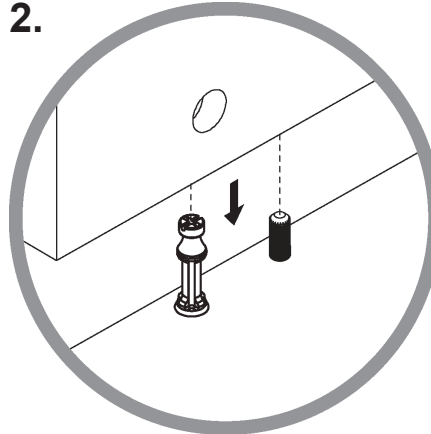


Align cam bolt(s) with cam(s)
and insert all the way into
cross-bored hole(s)

 3.

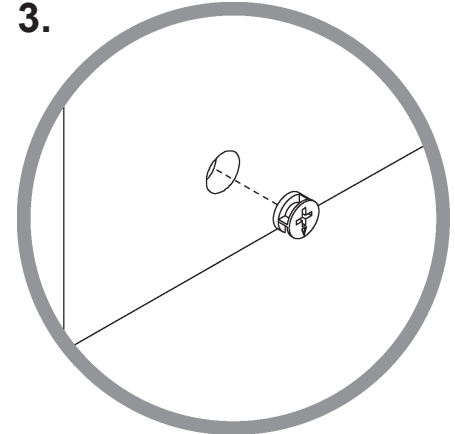


Push cam into panel - arrow feature
on cam top points to panel edge

 4.

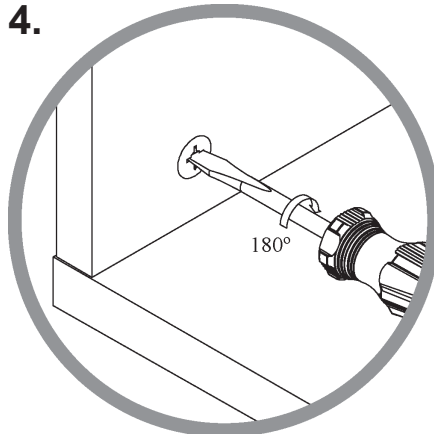


Rotate cam(s) clockwise 180° to
lock panels together

 5.


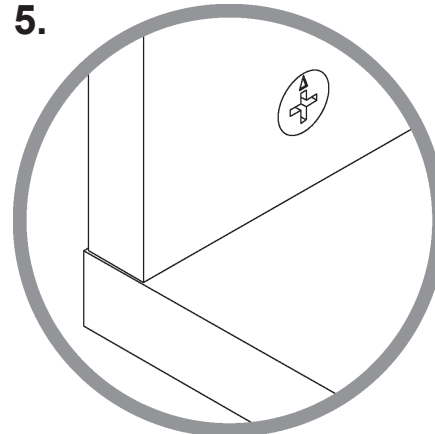


Panels should be tight against each
other and connection should be rigid

 step 1: prepare fixed shelf. attach shelf and bottom panel to right side rail.

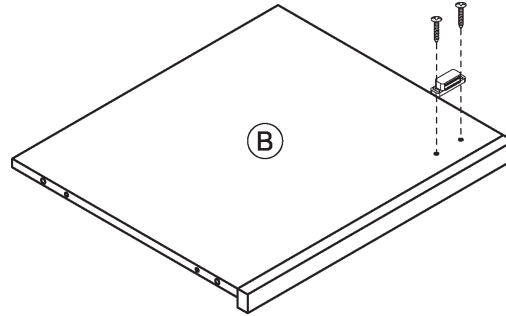


 
 
(H4) x 2 pan head screw
(H14) x 1 magnet



(H1) x 4 wooden dowel

(H2) x 4 cam bolt

   (H3) x 4 cam

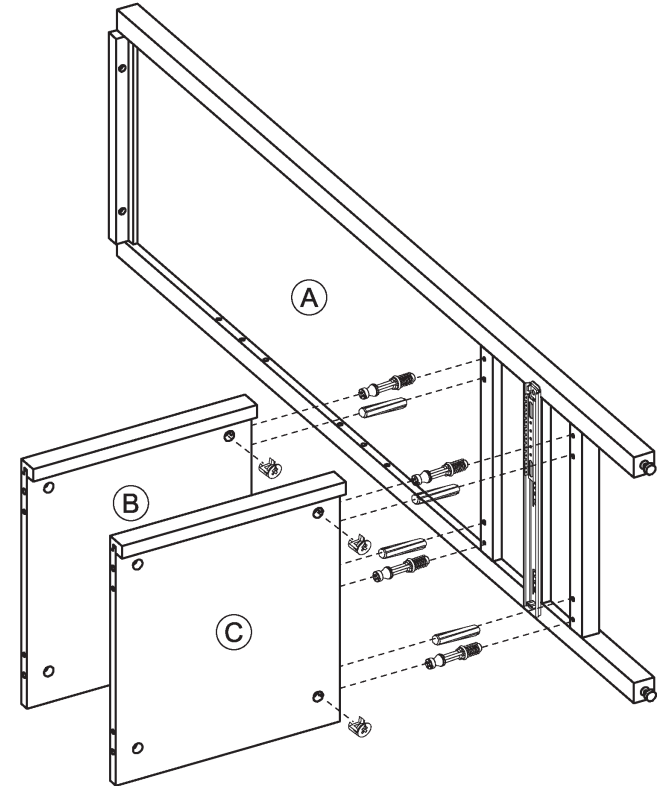




- 1.1. Carefully tap small wooden dowels into place. Leave 1/2" of the dowels sticking out.
- 1.2. Screw-In cam bolts must be screwed down flush.
- 1.3. Refer to page 6 for instructions on how to use the cam lock system.

step 2: attach left side rail

(H1) x 4
wooden dowel

(H2) x 4
cam bolt

   (H3) x 4
cam

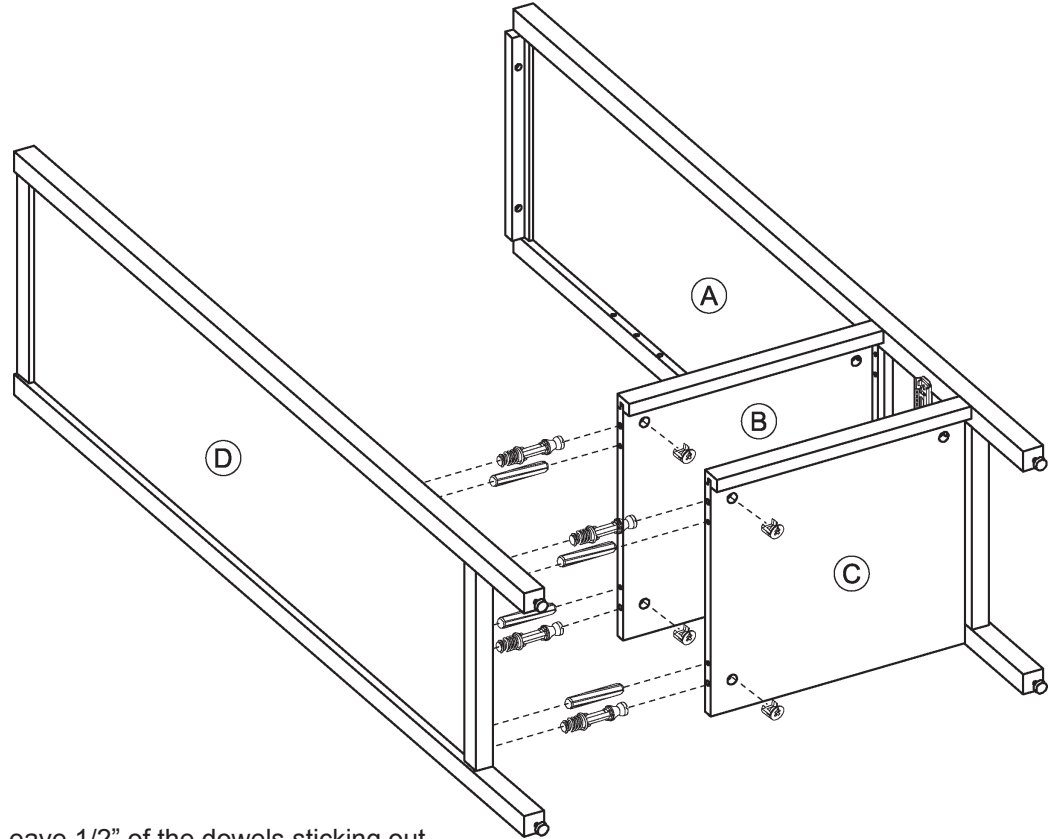




- 2.1. Carefully tap small wooden dowels into place. Leave 1/2" of the dowels sticking out.
- 2.2. Screw-In cam bolts must be screwed down flush.
- 2.3. Refer to page 6 for instructions on how to use the cam lock system.

step 3: attach top panel

(H1) x 4
wooden dowel

(H4) x 2
pan head screw

   (H14) x 1
magnet





(H9) x 4
1-1/4" bolt

(H10) x 4
lock washer


(H11) x 4
washer

  (H12) x 1
allen wrench

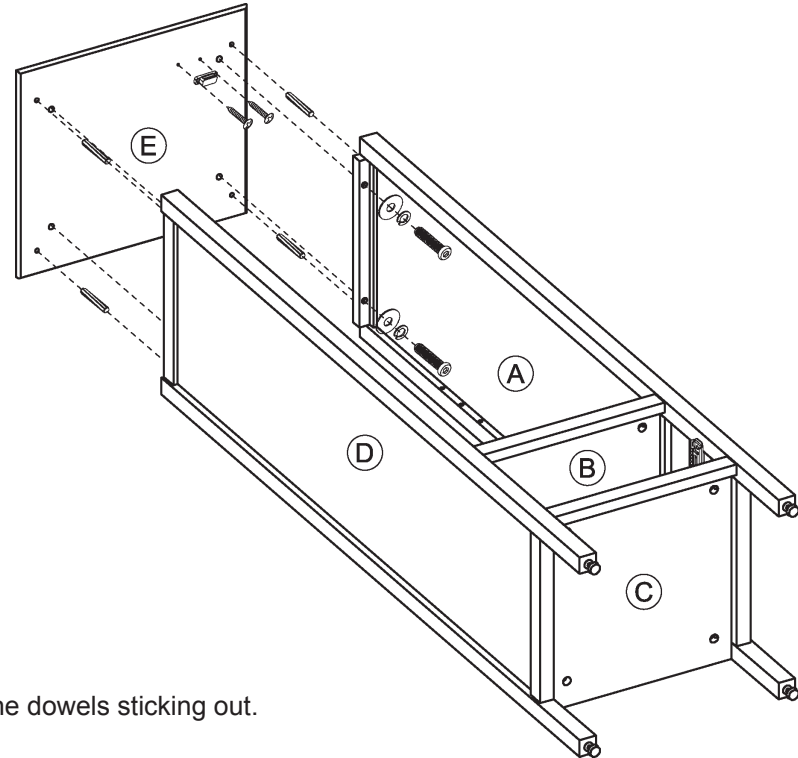


- 3.1. Carefully tap small wooden dowels into place. Leave 1/2" of the dowels sticking out.
- 3.2. Align screws with pre-drilled holes.
- 3.3. Align bolts with pre-drilled holes.
- 3.4. Do not over tighten screws or bolts.

 step 4: attach back panel

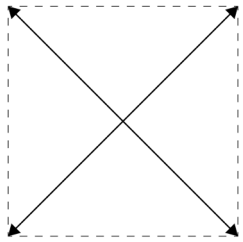

****FAILURE TO FOLLOW ALL DIRECTIONS ON THIS PAGE MAY RESULT IN UNEVEN DOOR ALIGNMENT****

 Begin by installing all of the screws along one edge of the back panel. Next, using a square or tape measure, make sure that the cabinet is square. (If using a tape measure, the distance from one corner, diagonally to the other corner should be the same in both directions.) If not, apply gentle pressure to the diagonally opposite corners to shift case into alignment. Re-measure to ensure equal distances. Install the remaining screws, starting with the corners.

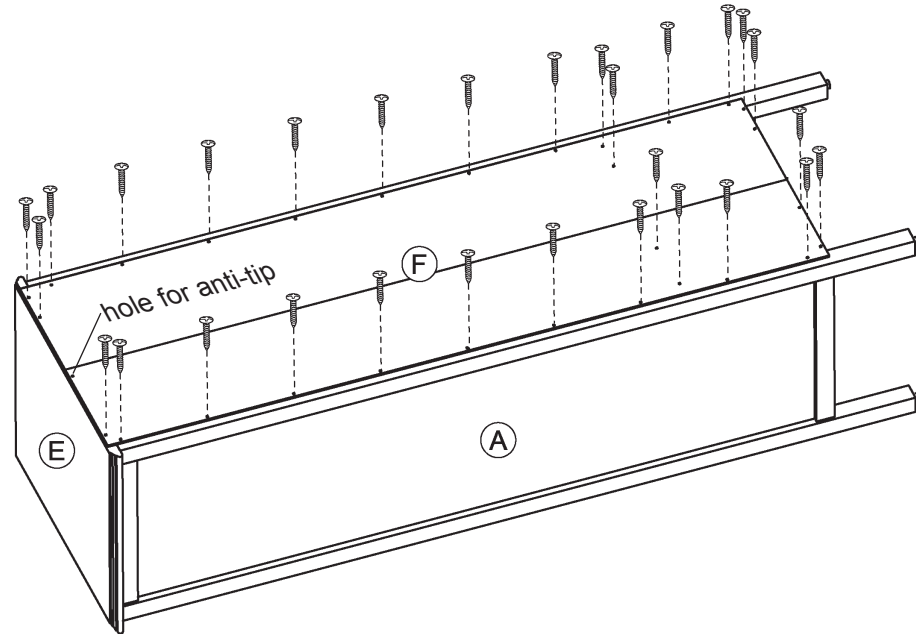

(H4) x 29
pan head screw



 
- 4.1. Make sure the screws go through the pre-drilled holes properly.
- 4.2. Do not over tighten screws.

step 5: attach knob

(H7) x 1
knob



(H8) x 1
knob bolt


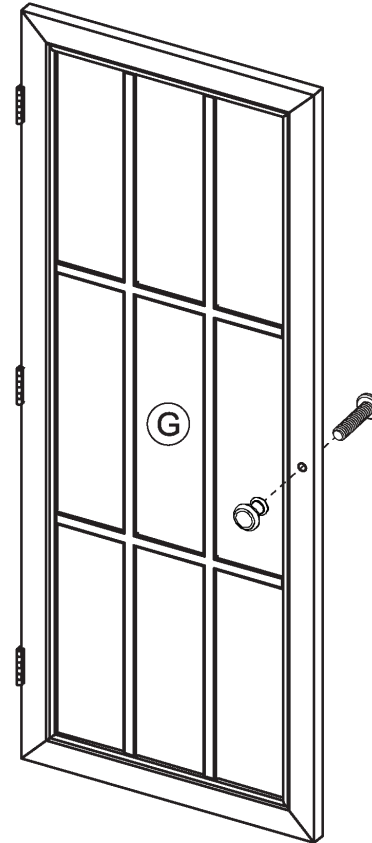


5.1. Align bolts with pre-drilled holes.

5.2. Do not over tighten bolts.


step 6: attach door

  (H5) x 6
flat head screw

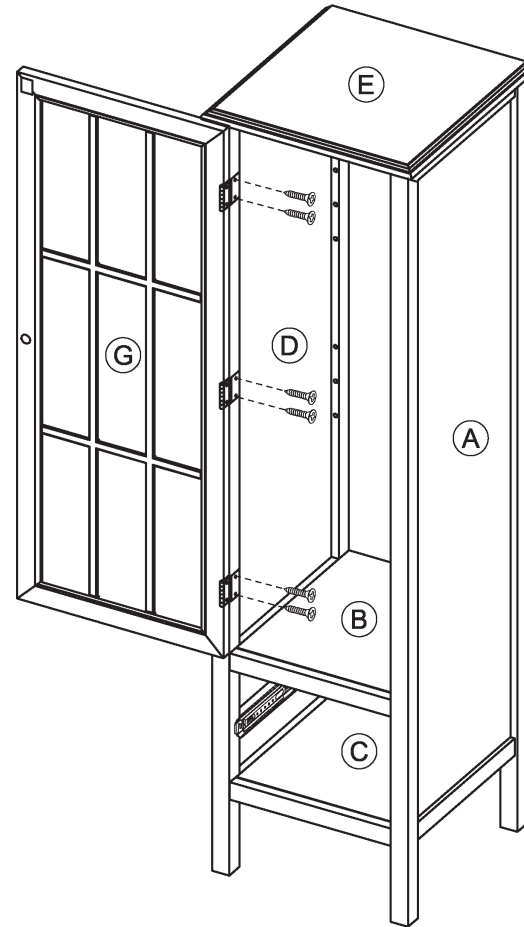


- 6.1. Align screws with pre-drilled holes.
- 6.2. Do not over tighten screws.

 step 7: install adjustable shelves

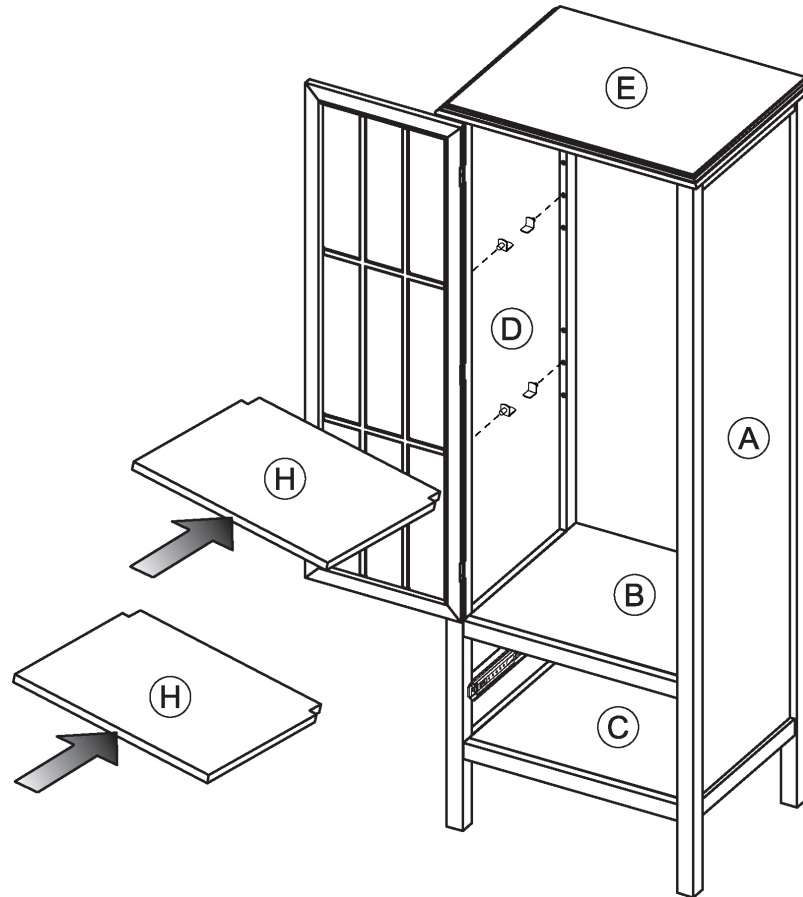


(H6) x 8
shelf support

 


7.1. Insert shelf supports into desired hole. Different holes accommodate different shelf heights.

7.2. Angle shelf to fit between the rails and set on top of shelf supports.

 step 8: assemble drawer starting with drawer sides / finish assembly with back panel

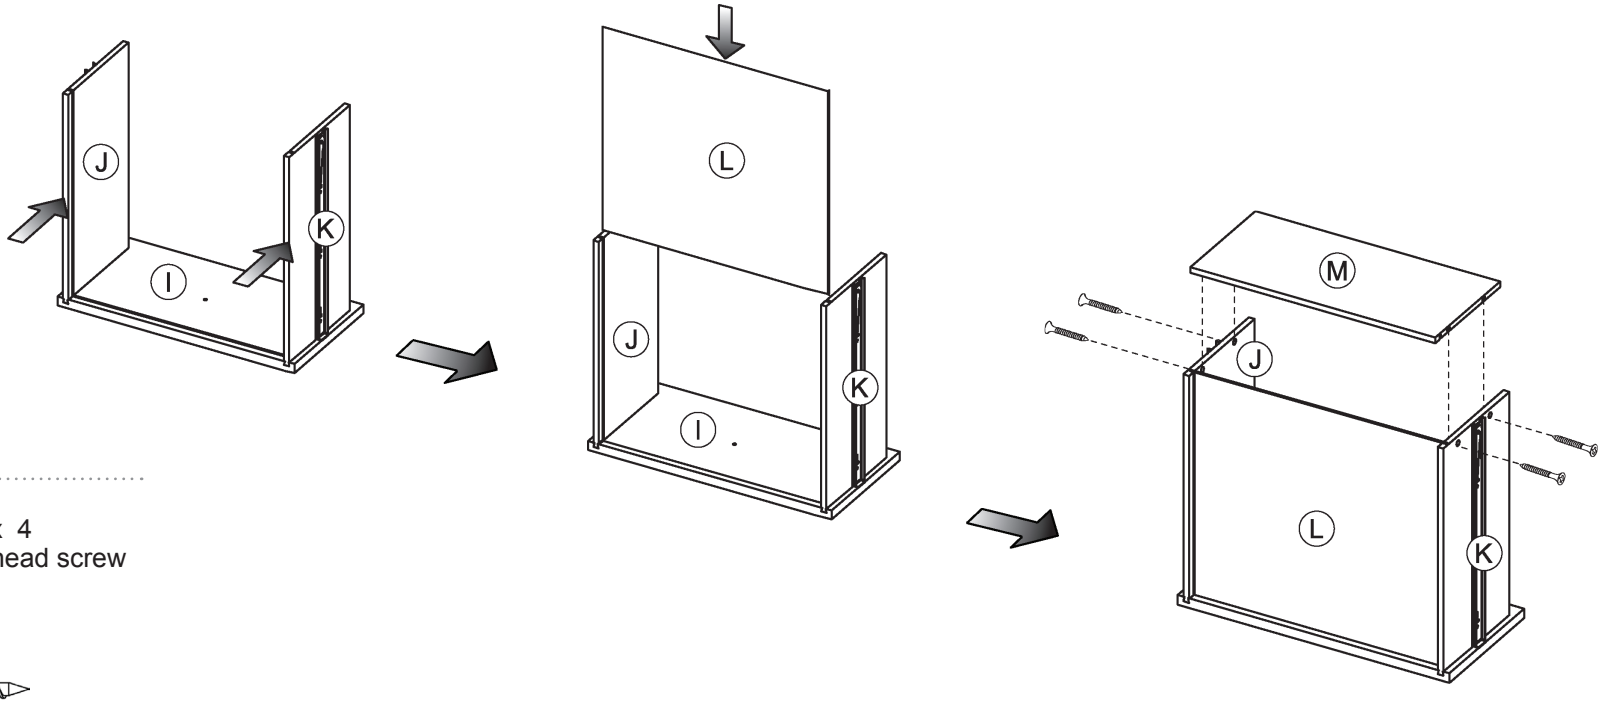

(H13) x 4
1" flat head screw

 

8.1. Align screws with pre-drilled holes.

 
8.2. Do not over tighten screws.

step 9: attach knob and install drawer

(H7) x 1
knob




(H8) x 1
knob bolt

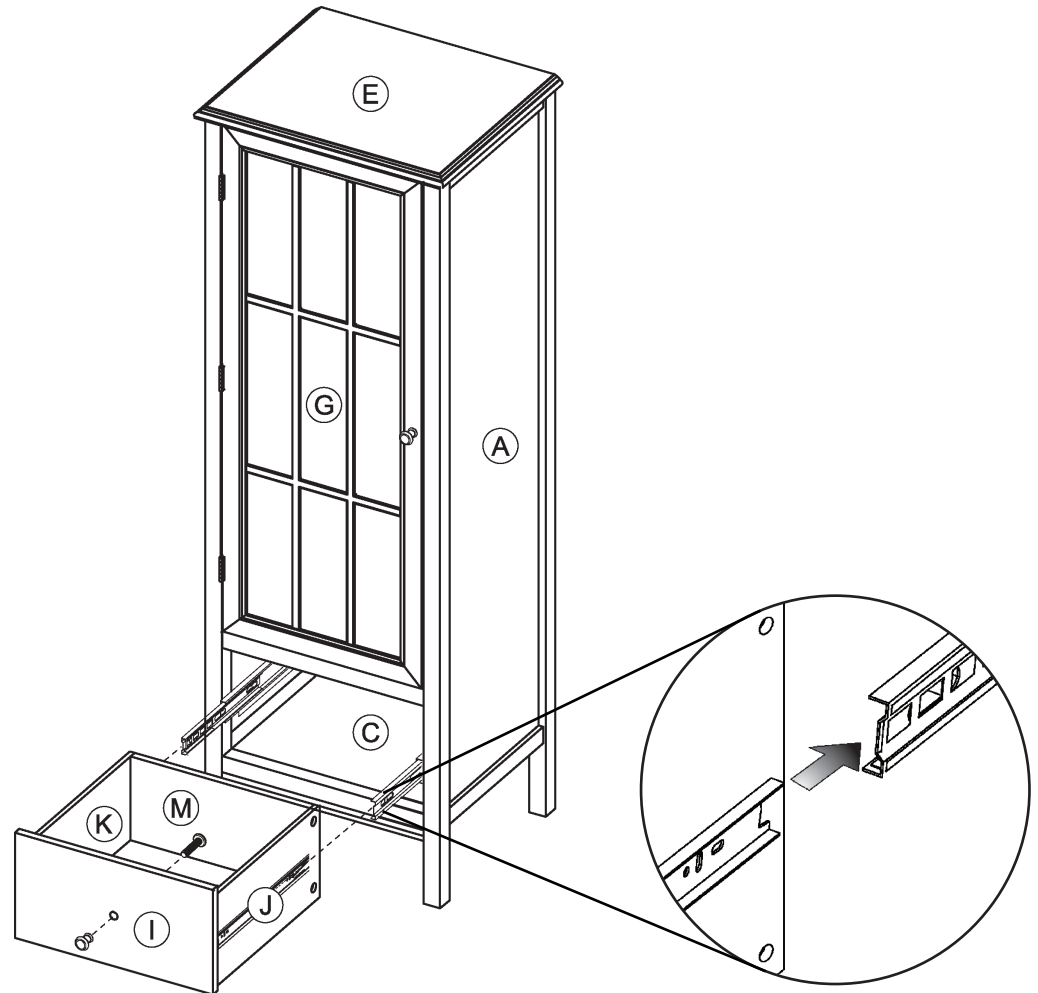

9.1. Align bolts with pre-drilled holes.

9.2. Do not over tighten bolts.

 step 10: install anti-tip kit

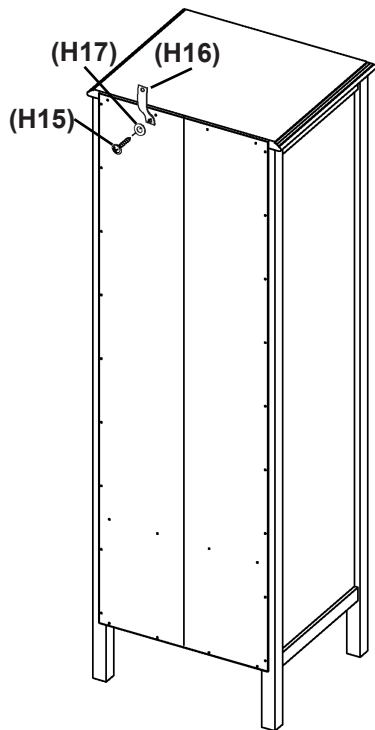


Position against wall


Mark position of strap hole on wall

Drill 1/4" hole

 Tap in wall anchor

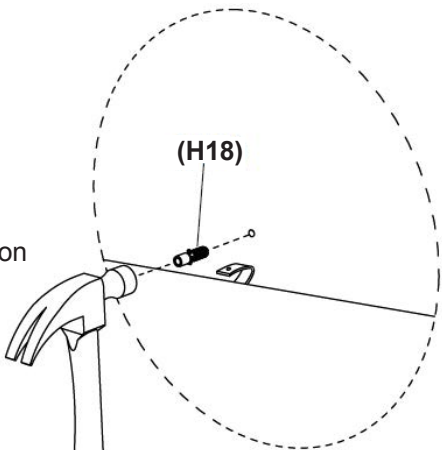

 Fasten anti-tip strap with flat-head screw provided

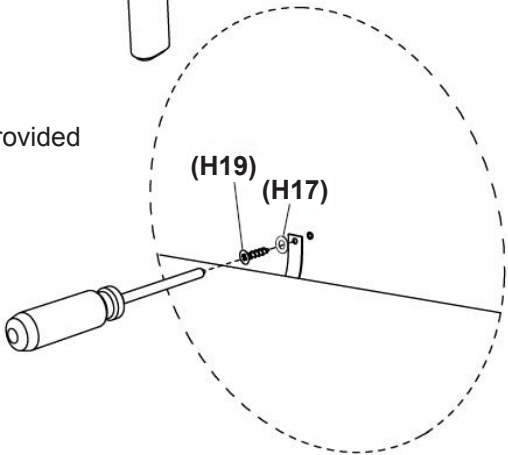




(H15) x 1
truss head screw

(H16) x 1
wall strap

(H17) x 2
washer

(H18) x 1
wall screw

   
(H19) x 1
wall screw




how to adjust door alignment


Tips for proper door alignment:

 - Adjustable levelers will reduce minor door mis-alignments caused by an uneven floor.
- Use a level to determine if the cabinet top is level. If not, start with the levelers retracted and adjust them as needed. To retract the levelers turn them counterclockwise. To extend the levelers turn them clockwise.
- If door mis-alignment persists, refer back to page 10 for additional information. If the cabinet is not square you will need to repeat this step.

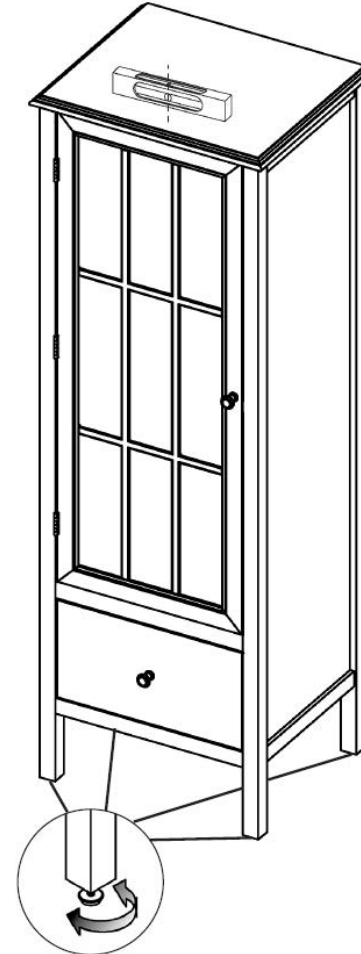

adjustable leg levelers

⚠ WARNING	
	<p>Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:</p> <ul style="list-style-type: none"> • Install tip-over restraint provided. • Place heaviest items in the lowest drawers. • Do not set TV's or other heavy objects on top of this product, unless the product is specifically designed to accommodate them. • Never allow children to climb or hang on drawers, doors, or shelves. • Never open more than one drawer at a time. <p>(OR)</p> <ul style="list-style-type: none"> • Do not defeat or remove the drawer interlock system. <p>Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.</p> <p><i>This is a permanent label. Do not remove.</i></p>

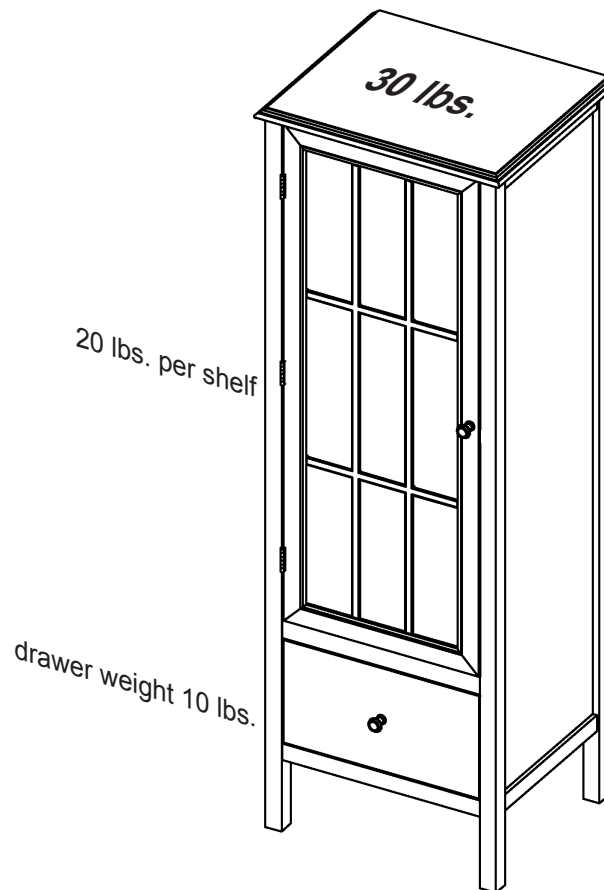

1. This unit has been designed for the weight shown. Exceeding this recommended weight could result in excessive “sagging” of the top. Extreme overloading can cause failure of the top and possible injury.
2. Furniture Care Instructions: Dust with a clean, lint-free cloth. Use a spray furniture polish as needed.

