

HUAWEI P30

User Guide

HUAWEI

Contents

Essentials

Basic Gestures	1
System Navigation	4
Lock and Unlock Your Screen	5
Screenshots & Screen Recording	6
Adjust Sound Settings	10
Show Date and Time When the Screen Is Off	12
Power On and Off or Restart Your Device	13
Charging	14
Get Familiar with the Home Screen	15
Notification and Status Icons	16
Shortcut Switches	18
Quickly Access Frequently Used App Features	19
Home Screen Widgets	19
Set Your Wallpaper	20
View and Clear Notifications	20
Multi-Window	21
Phone Clone	25
Enter Text	26

Smart Features

AI Lens	27
AI Touch	28
Easy Projection	29
Multi-screen Collaboration	33
Multi-screen Collaboration Between Your Tablet and Phone	38
Switch Audio Channels Between Devices	39
AI Search	40
Huawei Share	40

Camera and Gallery

Take Photos	45
Shoot in Portrait, Night, and Wide Aperture Modes	47
Zoom to Take Photos	49
Macro	49
Take Panoramic Photos	50
Take Black and White Photos	51
AR Lens	51
Moving Pictures	52
Add Stickers to Photos	52
Take High-Resolution Photos	53

Pro Mode	53
Record Videos	56
Slow-Mo Recording	58
Time-Lapse Photography	59
Dual-View Mode	59
Leica Colors	60
Manage Gallery	60
Huawei Vlog Editor	66
Huawei Vlogs	67
Highlights	67
Launch Camera	68
Light Painting	69
Take HDR Photos	70
Documents Mode	70
Filters	71
Adjust Camera Settings	71
Smart Photo Categorisation	72

Apps

Phone	74
Compass	82
Tips	82
Apps	83
Notepad	84
Mirror	86
App Twin	87
Contacts	87
Messaging	91
Calendar	92
Clock	93
Recorder	94
Email	95
Calculator	99
Torch	100
Optimizer	100
Phone Clone	104
HiSuite	104

Settings


Mobile Data	106
More Connections	109
Display & Brightness	119
Sounds & Vibration	122
Biometrics & Password	124

	Contents
Security	127
Accessibility Features	130
System & Updates	132
Search for Items in Settings	137
Wi-Fi	138
Bluetooth	139
Home Screen & Wallpaper	140
Notifications	141
Apps	143
Battery	143
Storage	145
Privacy	146
Users & Accounts	149
About Phone	150

Essentials





Basic Gestures

Basic Gestures and Shortcuts

 This feature may vary by device.

System Navigation Gestures

Go to **Settings > System & updates > System navigation**, and confirm that **Gestures** is selected.

	<p>Return to the previous screen Swipe inward from the left or right edge to return to the previous screen.</p>
	<p>Return to the home screen Swipe up from the bottom of the screen to return to the home screen.</p>
	<p>View recent tasks Swipe up from the bottom of the screen and hold to view recent tasks.</p>
	<p>Close an app When viewing recent tasks, swipe up on an app preview to close the app.</p>



Switch apps

- Slide along the bottom edge of the screen.
Before using this gesture, go to **System navigation > Settings** and confirm that **Slide across bottom to switch apps** is enabled.
- Swipe across the bottom of the screen in an arc.

Knuckle Gestures

Go to **Settings > Accessibility features > Shortcuts & gestures** to enable **Take screenshot, Record screen**.



Take a screenshot

Knock twice on the screen with a knuckle to take a screenshot.



Take a scrollshot

Knock on the screen with a knuckle and draw an "S" to take a scrolling screenshot.



Capture part of the screen





Knock and draw an enclosed area with a knuckle to capture part of the screen.






Record screen


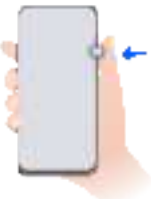
Knock twice on the screen with two knuckles to start or end a screen recording.

More Gestures

	<p>Access Home screen editing mode Pinch two fingers together on the home screen.</p>
	<p>Display the shortcut panel on the lock screen Swipe up from the bottom of the lock screen.</p>
	<p>Display the search bar Swipe down on the home screen.</p>
	<p>Open the notification panel Swipe down from the status bar.</p>

Button Shortcuts

	<p>Power off and restart Press and hold the Power button until the Power off and Restart options appear.</p>
	<p>Increase the volume Press the Volume up button.</p>
	<p>Decrease the volume Press the Volume down button.</p>

	<p>Take a screenshot Press the Volume down and Power buttons simultaneously.</p>
	<p>Ultra snapshot Double-press the Volume down button when the screen is off or locked to take a photo.</p>

 This feature may vary by device.


System Navigation

Change the System Navigation Mode

Navigate with Gestures

Go to **Settings > System & updates > System navigation**, and select **Gestures**.

You can then:

- Go back to the previous screen: Swipe inward from the left or right edge.
- Return to the home screen: Swipe up from the bottom of the screen.
- Access the recent tasks screen: Swipe up from the bottom of the screen and hold.
- Close an app: From the recent tasks screen, swipe up on an app preview. Swipe down on an app preview to lock an app. A locked app will not be cleared when you touch  on the recent tasks screen.
- Switch apps: Swipe across the bottom of the screen in an arc. Or when **Slide across bottom to switch apps** is enabled, swipe across the bottom edge of the screen.



You can enable **Show navigation bar** to display the navigation bar to assist your gesture operations.


 This feature may vary by device.

Use Three-Key Navigation


Go to **Settings > System & updates > System navigation**, and select **Three-key navigation**.

You can then:

- Touch  to return to the previous menu or exit the current app.
- Touch  to return to the home screen.

- Touch  to access the recent tasks screen.

You can touch **Settings** to configure more settings.

- Select a navigation key combination.
- Enable **Hide navigation keys** to allow you to hide the navigation bar when not in use.
- Touch  (if available in the selected navigation key combination) to open the notification panel.

Use the Navigation Dock to Operate the Device

Go to **Settings > System & updates > System navigation > Navigation dock**, and enable **Navigation Dock**.

After the Navigation dock button appears, you can:

- Drag the button to your desired position.
- Touch the button to go back.
- Double-touch the button to go back two steps.
- Touch and hold the button, then release it to go back to the home screen.
- Touch and hold the button, then swipe left or right to view recent tasks.

Lock and Unlock Your Screen

Lock and Unlock Your Screen

Lock the Screen

If your phone remains inactive for a period of time, it will automatically lock the screen and enter sleep mode to save power.

Alternative, you can manually lock the screen in either of the following ways:

- Press the Power button.
- On the home screen, pinch two fingers together to enter screen editing mode. Touch **Widgets**, then drag the **Screen Lock** icon to the home screen. You can now touch the **Screen Lock** icon to lock the screen.


Set the Screen Timeout Period

Go to **Settings > Display & brightness > Sleep** and select a screen timeout period.

Turn On the Screen

You can turn on the screen in any of the following ways:

- Press the Power button.

- Go to **Settings > Accessibility features > Shortcuts & gestures > Wake screen**, and enable **Raise to wake**, **Double-tap to wake**, and/or **Show palm to wake**. Then use the corresponding feature to turn on the screen.
-  If your device does not have this option, it indicates that this feature is not supported.

Unlock the Screen with Password

Once the screen is turned on, swipe up from the middle of the screen to display the password input panel. Then, enter your lock screen password.

Use Face Unlock

Turn on the screen and align it with your face. Your device will unlock once your face is recognised.

Use Fingerprint Unlock

Once the screen is turned on, the fingerprint icon will display on the screen. Touch the icon with an enrolled finger to unlock the screen.

Change the Lock Screen Display

When using an official theme, you can set to display your step count and signature on the lock screen.

Display Your Signature on the Lock Screen

Go to **Settings > Home screen & wallpaper**, touch **Lock screen signature**, then type text to display on the lock screen.

To remove the signature, touch **Lock screen signature** and delete the text.

Access Apps from the Lock Screen

You can access commonly used apps, such as Camera, Recorder, and Calculator, from the lock screen.

- Turn on the screen, and swipe up on the Camera icon in the lower right corner to open **Camera**.
- Turn on the screen, and swipe up from the bottom of the lock screen to open the shortcut panel. Then touch the app you wish to access from the available shortcuts, such as **Torch**, **Calculator**, or **Timer**.

Screenshots & Screen Recording

Take a Screenshot


Use Your Knuckle to Take a Screenshot

- 1 Go to **Settings > Accessibility features > Shortcuts & gestures > Take screenshot**, and ensure that **Knuckle screenshots** is enabled.
- 2 Knock the screen twice in quick succession with one knuckle to take a screenshot.

Use a Key Combination to Take a Screenshot

Press and hold the Power and Volume down buttons simultaneously to take a screenshot.

Use a Shortcut to Take a Screenshot

Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts. Touch  to take a screenshot.

Share and Edit a Screenshot or Switch to Scrollshot



After you take a screenshot, a thumbnail will be displayed in the lower left corner of the screen. You can then:

- Swipe down on the thumbnail to take a scrolling screenshot.
- Swipe up on the thumbnail to select a way to share the screenshot with your friends.

- Touch the thumbnail to edit or delete it. You can also touch **Scrollshot** to take a scrolling screenshot.

Screenshots are saved to **Gallery** by default.

Use Your Knuckle to Take a Scrolling Screenshot



- 1** Knock the screen with a knuckle and hold to draw an "S". The screen will automatically scroll down to the bottom for you to capture the entire page.
- 2** You can touch the screen at any point to stop the screenshot.

Precautions for Using Knuckle Screenshots

- Please double knock the screen consecutively at the same place and at an appropriate speed.
- Keep your knuckle vertical to the screen.
- If you want to take more than one screenshot, wait 2 seconds before knocking on the screen again.
- If there is a screen protector on the screen, knock the screen harder or remove the screen protector and try again.

Record the Screen

Record your screen activities in sharable videos to compose a tutorial, show off your awesome gaming skills, and a lot more.

Use a Key Combination to Start Screen Recording

Press and hold the Power and Volume up buttons simultaneously to start screen recording. To stop recording, press and hold both buttons again.

Use a Shortcut to Start Screen Recording

- 1 Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts.
- 2 Touch **Screen Recorder** to start screen recording.
- 3 To stop the recording, touch the timer at the top of the screen.
- 4 The recording will be saved to **Gallery**.

Use Two Knuckles to Start Screen Recording

- 1 Go to **Settings > Accessibility features > Shortcuts & gestures > Record screen**, and ensure that **Record screen** is enabled.
- 2 Knock the screen twice in quick succession with two knuckles to start screen recording. To stop recording, knock twice again.

Record Your Voice During Screen Recording


You can enable the microphone to record your voice while recording the screen.

After starting a screen recording, touch the microphone icon and ensure that it is displayed as




. You can now record your voice.



If the microphone is disabled (if it is displayed as ) , you will only be able to record system sounds, such as music. If you don't want any system sounds in your screen recording, mute your device and turn off any music or other media sounds before starting the screen recording.

Take a Partial Screenshot



- 1 Knock on the screen with a knuckle and hold to draw an outline around the part of the screen that you want to capture. Make sure that your knuckle does not leave the screen.
- 2 The screen will display the movement trajectory of your knuckle and take a screenshot of the selected area. You can then:
 - Drag the frame to the desired position or resize it.
 - Touch a shape icon to determine the shape of the partial screenshot, or retain the current shape.
- 3 Touch  to save the screenshot.

Adjust Sound Settings

Adjust Sound Settings

Press a Volume Button to Adjust the Volume

Press the Volume up or down button to adjust the volume.

Press the Power Button to Mute Your Device When It Rings

When your device rings for an incoming call or alarm, you can press the Power button to mute it.

Flip to Mute or Raise to Reduce Ringing Volume

When you receive an incoming call, you can flip your device to mute it, or raise it to reduce the ringing volume.

Go to **Settings > Accessibility features > Shortcuts & gestures > Mute ringtone/Reduce volume**, then enable **Flip to mute ringtone** and **Raise to reduce volume**.

Change the Sounds and Vibration Settings

You can set the messaging tone, notification tone, and call ringtone depending on your preferences, as well as set the vibration pattern.

1 Go to **Settings > Sounds & vibration**, and touch **Phone ringtone**, **Messaging tone**, or **Notification tone**.

2 You can then:

- Set the tone.

Select a preset tone, or touch **Music on device** to select a locally saved song.

If two SIM cards are being used, you can set the tones for them individually.

- Set the vibration pattern.

Touch **Vibration** and select a vibration pattern as you prefer.

When **Synchronised (default)** is selected, your phone will vibrate according to the rhythm of the tone.

For other options, the vibration pattern of your phone is fixed.

 The feature availability varies by device.

Use a Shortcut to Switch Between Sound, Vibration, and Silent Modes

1 Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts.

2 Touch the  **Sound**,  **Silent**, or  **Vibration** icon to switch between different modes.

In Sound mode, your phone plays all sounds as normal.

In Silent mode, your phone only mutes the ringtones for incoming calls, messages, notifications, and some third-party app notifications. Other sounds, including alarms, voice calls, music, videos, and games, will not be muted.

In Vibration mode, your phone is muted and vibrates to provide discreet alerts for calls or messages.

You can also go to **Settings > Sounds & vibration** to switch between **Sound**, **Vibration**, and **Silent** modes.

System Haptics

The system uses haptics to provide feedback when certain operations are completed, such as when you touch and hold text, a contact, or some other elements on the screen.

Go to **Settings > Sounds & vibration > More settings** and enable or disable **System haptics** according to your preferences.

Set More settings

On the **Sounds & vibration** screen, touch **More settings**, and set more notification methods according to your preferences. For example, you can set **Keypad tones** and **Screenshot**.

 This feature may vary by device.


Show Date and Time When the Screen Is Off

Show Date and Time When the Screen Is Off

With **Always On Display** enabled, the lock screen will show the date, time, and more when the screen is off.

Enable Always On Display

- 1 Go to **Settings > Home screen & wallpaper > Always On Display**, and enable **Always On Display**.
- 2 Set **Display mode** as prompted.
If you select **Smart**, your device will show the Always On Display information when it detects a glance or tap.

 The feature availability varies by device.



Set the Style for Always On Display

You can customise the display style for Always On Display according to your preferences.

- 1 After enabling **Always On Display**, touch **Display style**, and swipe across to view the available styles.
- 2 Select a preferred style, and touch **Apply**.



Add Graffiti

You can personalise Always On Display by specifying text to be displayed, selecting your preferred colour scheme, and adding stickers.

- 1 From under **Graffiti** on the **Always On Display** screen, touch the style you would like to use.
- 2 Enter text in the input box and set the style options, such as **Colour** or **Text size**.
You can also add **Stickers** and drag the sticker border to adjust its position and size, and touch  or  to change its direction or delete it.
- 3 Touch **Apply**.

Create an Artistic Image for Always On Display

You can choose from multiple modern art styles (such as the Mondrian style). You can also specify the colour scheme for the artistic image, by taking a photo or choosing from your favourite photos. The colours in the photo will form a colour palette for the artistic image.

- 1 From under **Artistic** on the **Always On Display** screen, touch the style you would like to use.
- 2 Set the related options for the **Artistic** style, such as **Layout**.
When setting **Colour**, your device can parse the colours in your specified photo and apply the abstracted colour palette to the artistic image.
Touch , take a photo or select a photo from Gallery, and then go to  > **Extract colours**.

- 3 Touch **Apply**.

Clock Styles

You can select an **Analogue** or **Digital** clock style for Always On Display.

- 1 From under **Analogue** or **Digital** on the **Always On Display** screen, swipe left or right to browse the clock styles and select your preferred clock style.
- 2 Set the related options for the selected clock style, such as **Show date**.
- 3 Touch **Apply**.

Get More Styles for Always On Display

On the **Always On Display** screen, touch **My AODs** or **More**.

Power On and Off or Restart Your Device

Turn On and Off or Restart Your Device

Power Your Device On and Off

To power off your device, press and hold the Power button for a few seconds, touch **Power off** and **Touch to power off**.

To power on your device, press and hold the Power button for a few seconds until your device vibrates and displays the logo.

Restart Your Device

Restart your device on a regular basis to clear the cache and keep the device in an optimal state. A restart can sometimes resolve the issue when your device encounters a problem.

Just press and hold the Power button for a few seconds, then touch **Restart** and **Touch to restart**.

Force Restart Your Device

You can force restart your device if it isn't working or won't turn off normally. To do this, just press and hold the Power 10 seconds or longer.

Charging

Charge Your Device

Your device will alert you when it is running out of power. Please make sure to charge your device in time to prevent it from turning off automatically when the power runs out.

Precautions for Charging

- Charge your device using the standard adapter and USB cable that came with your device. Using other chargers or USB cables may cause repeated restarts, slow charging, overheating, or other undesirable effects.
- Your device will automatically run a safety check when a charger or other device is connected to the USB port. If moisture is detected in the USB port, your device will automatically activate safety measures and stop charging. Disconnect your device from the USB port and wait until the USB port is dry.
- The time required to fully charge the battery depends on the ambient temperature and age of the battery.
- Batteries have a limited number of charge cycles. When the battery life becomes noticeably shorter, go to an authorised Huawei Customer Service Centre to replace the battery.
- Do not cover your device or charger during charging.
- Your device may heat up when you have been using it for an extended period of time, especially in high temperatures. In this case, stop charging, disable some features, and move your device to a cool place.
- Please do not use your device while it is charging.
- If your device does not respond after you press and hold the Power button, the battery may have run out. Charge for 10 minutes and then power it on.

Using the Charger that Came with Your Device

- 1 Use the USB cable that came with your device to connect your device and the adapter.
- 2 Plug the adapter into a power socket.





Charging Your Device With a PC

- 1 Connect your device to a PC or other device using a USB cable.
- 2 When the **Use USB to** dialog box is displayed on your device, touch **Charge only**.

If another option has been set previously, the dialog box will not pop up. Swipe down from the status bar to open the notification panel, touch **Settings**, then select **Charge only**.

Overview of Battery Icons

You can check the battery level from the battery icon on the device screen.

Battery Icon	Battery Level
	Less than 4% battery remaining
	Charging, less than 10% battery remaining
	Charging, 10% to 90% battery remaining
	Charging, at least 90% battery remaining If 100% is displayed next to the battery icon, or a charging complete message is displayed on the lock screen, the battery is fully charged.

Reverse Charge with an OTG Cable

On-The-Go (OTG) is a USB transmitting technology that allows a device to directly access files on a USB flash drive or digital camera, or connect to an external device such as a keyboard or mouse, with the help of an OTG cable.

You can use your device to charge other devices using an OTG cable.

- 1 Connect your device with the device to be charged using an OTG cable.
- 2 Swipe down from the status bar to open the notification panel, touch **Touch for more options**, and then select **Reverse charge**.
- 3 Follow the onscreen instructions on the device to be charged to start charging.

Get Familiar with the Home Screen

Get Familiar with the Home Screen

From the home screen, you can:

- Check the status of your device and notifications from the status bar at the top of the screen.
- Swipe left or right to view apps and widgets displayed on the home screen.



















































Notification and Status Icons

Notification and Status Icons

i Network status icons may vary according to your region or network service provider.

Supported functions vary according to the device model. Some of the following icons may not be applicable to your device.

	5G network connected		4G network connected
	3G network connected		2G network connected
	Full signal strength		Roaming

	Data saver enabled		No SIM card detected
	Hotspot enabled		Hotspot connected
	Wi-Fi connected		Hotspot disconnected
	Switching network via Wi-Fi+		Alarm set
	Battery empty		Low battery
	Charging		Quick charging
	Super charging		Super wireless charging
	Quick wireless charging		Regular wireless charging
	Power saving mode enabled		Digital balance enabled
	Bluetooth enabled		Bluetooth device battery
	Bluetooth device connected		VPN connected
	Driving mode		Projection device connected
	Location service enabled		Eye comfort mode enabled
	Headset connected		Headset with a microphone connected
	Calling		VoLTE enabled
	Missed call		Unread SMS
	Silence		Vibration
	NFC enabled		Do Not Disturb mode enabled
	Data syncing		Data sync failed
	Performance mode enabled		New email
	Event reminder		More notifications




Airplane mode enabled

Shortcut Switches


Use Shortcut Switches

Turn on a Shortcut Switch

Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts.

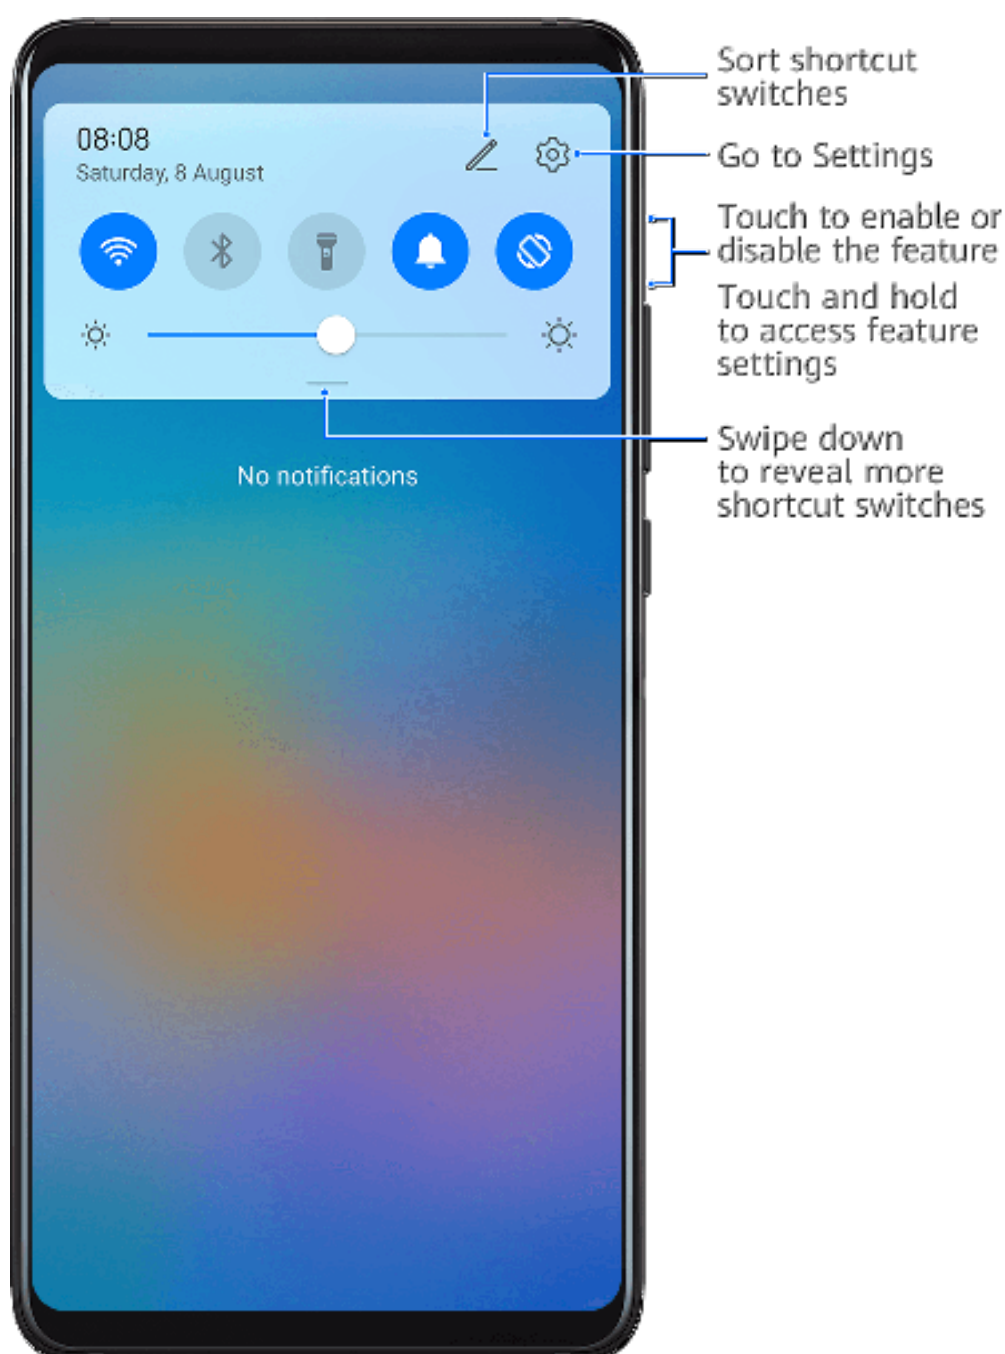

- Touch a shortcut switch to enable or disable the corresponding feature.

- Touch and hold a shortcut switch to access the settings screen of the corresponding feature. (Supported by some features.)
- Touch  to access the system settings screen.

Customise Shortcut Switches

Touch , touch and hold a shortcut switch, then drag it to the desired position.


Quickly Access Frequently Used App Features


Access Frequently Used App Features from the Home Screen

You can access frequently used features of certain apps from app icons on the home screen, and even add shortcuts for these features to the home screen.

Quickly Access Frequently Used App Features

Touch and hold an app icon until a pop-up menu is displayed, then touch a frequently used feature to access it.

For example, touch and hold the  icon, then touch a shooting mode, such as Selfie or Video, from the pop-up menu to access it.

-  If no pop-up menu is displayed after you touch and hold an app icon, it indicates that the app does not support this feature.

Add Frequently Used App Features to the Home Screen

Touch and hold an app icon on your home screen to bring up the pop-up menu. Touch and hold the desired feature and drag it to your home screen to create a shortcut.



Home Screen Widgets


Add, Move, or Delete Home Screen Widgets

You can add, move, or delete home screen widgets, such as Screen lock, Weather, Notepad, Clock, Contacts, and Calendar, according to your personal requirements.

Add Weather, Clock, and Other Widgets to the Home Screen

- 1 Pinch two fingers on the home screen to access Home screen settings mode.
- 2 Touch **Widgets**, then swipe left to view all widgets.
- 3 Some widgets, such as **Weather**, come in various formats. Touch the widget to show all formats, and swipe right to collapse.
- 4 Touch a widget to add it to the home screen. If there is no room on the current screen, touch and hold it, then drag it to a different screen.

 To configure the **Weather** app, open it, and touch  to set the configurations as prompted.

For example, to switch between Celsius and Fahrenheit, go to  > **Temperature unit**, and touch **Celsius (°C)** or **Fahrenheit (°F)**.


Move or Delete a Widget

Touch and hold a widget on your home screen until your device vibrates, then drag it to the desired position or touch **Remove**.


Set Your Wallpaper

Set Your Wallpaper

Use a Preset Wallpaper

- 1 Go to **Settings** > **Home screen & wallpaper** > **Wallpaper**.
- 2 Touch an image you want to set as the wallpaper.
- 3 Set the following according to your preferences:
 - **Blur**: applies a blur effect, which can be adjusted by dragging the slider.
 - **Scrollable**: enables the wallpaper to be scrollable on the home screen.
- 4 Touch , then determine whether you'd like to set it as the wallpaper for the **Lock screen**, **Home screen**, or **Both**.

Set an Image from Gallery as Your Wallpaper

- 1 Open **Gallery**, and open the image you want to set as your wallpaper.
- 2 Go to  > **Set as** > **Wallpaper**, then follow the onscreen instructions to complete the setting.

View and Clear Notifications



View and Clear Notifications

View Notifications


When there is a notification reminder, you can unlock the screen and swipe down from the status bar to open the notification panel and view the notification.


Clear Notifications

- You can remove a notification by swiping right on it.

- You can touch  to clear all notifications.
-  Some system notifications and notifications from apps running in the foreground cannot be cleared.

Do Not Disturb Settings for Notifications

If you wish not to be disturbed by a notification, swipe left on it, touch , and choose from options including **Disable notifications**, **Use gentle notifications**, and **DELAY**.

-  Some system notifications and notifications from apps running in the foreground cannot be disabled or delayed.

Multi-Window

Enable Split-screen Mode

Multi-Window allows you to open apps in split screen for multitasking.


Enable split-screen mode:

- 1 Open an app and swipe inward from the left or right edge and hold to bring up the Multi-Window dock.






- 2 Drag an app icon out of the Multi-Window dock.

Switch the split-screen panes:

Touch and hold  at the top of a split-screen pane until the pane shrinks, then drag it to the other side of the screen to switch panes.

Exit split-screen mode:

Touch and hold  or  in the middle of the split screen line and drag it until either pane disappears.

-  • Support for split-screen mode varies by app.
 - Split-screen mode is limited to two apps at any given time.





Drag and Drop Between Apps with Multi-Window

Use the Multi-Window feature to easily drag and drop images, text, and documents between apps.

- Drag and drop an image: When taking notes with **Notepad**, open **Files**, select the photo you want to add, and drag it into the **Notepad** editor.
- Drag and drop text: When sending an SMS message, open **Notepad**, touch and hold the text you want to send, and drag it into the message text input box.
- Drag and drop a document: When writing an email, open **Files**, select the document you want to attach, and drag it into the email editor.

 Not all apps fully support drag-and-drop with Multi-Window.

Add, Move, or Remove an App from the Multi-Window Dock

- Add an app: In the Multi-Window dock, touch , touch the app you want to add, then touch **Done**.
- Move an app: In the Multi-Window dock, touch , drag the desired app to any location in the dock, then touch **Done**.
- Remove an app: In the Multi-Window dock, touch , touch  in the upper right corner of the icon of the app you want to remove, then touch **Done**.

Switch Between Split-screen and Floating Window

- Switch from Split-screen mode to floating window: Touch and hold the bar at the top of a split-screen pane, then drag it to the left/right side of the screen when in Portrait mode or to the lower edge when in Landscape mode.
- Switch from floating window to Split-screen mode: Touch and hold the bar at the top of the floating window, then drag it to the upper/lower part of the screen when in Portrait mode, or to the left or right when in Landscape mode.

Multi-Window View for a Single App

You can create two task windows for the same app (such as Email and Notepad), and drag images, text, or documents between them.

 This feature is unavailable in some apps.

1 Enter the split-screen view within an app.

- Open the Email app.
- Swipe inward from the left or right edge of your device and hold to bring up the Multi-Window dock.
- Touch and hold the Email icon, and drag it to the screen to enter split-screen view.

2 Drag images, text, or documents between the split-screen windows.

- **Drag an image:** Select an image from one split-screen window and drag it to the other window.
- **Drag text:** Touch and hold the text and select the desired part from one split-screen window, then touch and hold the text again and drag it to the other window.
- **Drag a document:** Select a document from one split-screen window and drag it to the other window.

Disable Multi-Window

Multi-Window is enabled by default. To disable it, go to **Settings > Accessibility features > Multi-Window**, then disable **Multi-Window dock**.

Use the Floating Window

Open a floating window while gaming, and you can chat with a friend without missing a second of the action.

Display the floating window:

1 Swipe inward from the left or right edge and hold to bring up the Multi-Window dock.



2 Touch an app icon in the Multi-Window dock to open the app in a floating window.


Relocate the floating window:

Drag the bar at the top of the floating window to move the window to the desired location.


Resize the floating window:

Drag the bottom edge or corners of the floating window to resize it.

Display in full screen:


Touch  at the top of the floating window to display it in full screen.

Minimise the floating window:

Touch  at the top of the floating window to minimise and shrink it into a floating bubble.

 The floating bubble is able to house a maximum of 10 minimised floating windows.


Close the floating window:

Touch  at the top of the floating window to close it.

Find and Switch Between Floating Windows for Apps

You can quickly find and switch between floating windows for apps using the floating window management function.

1 Make sure that you have opened floating windows for multiple apps and minimised them into the floating ball.

- 2 Touch the floating ball to display all floating window previews:
 - **Browse through the floating window previews:** Swipe up or down to find the floating window preview of the app you are looking for.
 - **Display the floating window for an app:** Touch the floating window preview of the app to display it in a floating window.
 - **Close the floating window for an app:** Touch  on the floating window preview to close it.

Open an Attachment in a Floating Window

You can open a link or attachment within specific apps (such as Email and Notepad) in a floating window.

 This feature is unavailable in some apps.

- 1 Open the Email app.
- 2 Touch a link or attachment in the Email app to open it in the floating window.
 - **Open a link:** Touch a link in the Email app to display it in a floating window.
 - **Open an attachment:** Touch an attachment (such as a document, image, or video) in the Email app to display it in a floating window.


Phone Clone

Use Phone Clone to Move Data to Your New Device


Phone Clone lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.

Migrate Data from an Android Device

- 1 On your new device, open the **Phone Clone** app. Alternatively, go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, then touch **Huawei** or **Other Android**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open the **Phone Clone** app and touch **This is the old device**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then touch **Transfer** to start cloning.

 **Phone Clone** is only available on devices running Android 7.0 or later.





Migrate Data from an iPhone or iPad

- 1 On your new device, open the **Phone Clone** app. Alternatively, go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, then touch **iPhone/iPad**.
 - 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
 - 3 On your old device, open the **Phone Clone** app and touch **This is the old device**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
 - 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.
-  **Phone Clone** is only available on devices running iOS 8.0 or later.

Enter Text

Select, Copy, Paste, or Share Text

You can select text displayed on your screen, copy or cut it to the clipboard, then paste it somewhere else. You can also share it in multiple ways.

- 1 Touch and hold the text until  appears.
 -  What happens after you touch and hold the text may vary by app. Follow the onscreen instructions.
- 2 Drag  and  to select the text you need, or touch **Select all** to select all text.
- 3 Touch **Copy** or **Cut** as needed.
- 4 Touch and hold the space where you want to paste the text until **Paste** appears, then touch **Paste**.


Smart Features

AI Lens


Enable AI Lens

There are multiple ways to access **AI Lens**.


From Camera

Open **Camera**, select **Photo** mode, and touch  to access **AI Lens**.

From the Search Bar

When the screen is unlocked, swipe down from the centre of the home screen to open the search box, and touch  next to it to access **AI Lens**.



From the Lock Screen

Turn on the screen when it is locked, swipe up from the bottom to open the shortcuts panel, and touch  to unlock the screen and access **AI Lens**.

Scan to Shop

When you see an item you wish to buy in a magazine or when you are strolling on the street, you can use **AI Lens** to quickly search for the item and compare prices across multiple shopping platforms before making a purchase.



Scan to Shop Using Camera

- 1 Go to **Camera** > **Photo**, touch , and then touch .
- 2 Position the item you want to buy within the viewfinder, and wait for it to be identified.
- 3 After the item has been identified by **AI Lens**, links to purchase it on different shopping platforms will be displayed.

Scan to Translate

AI Lens allows you to scan and translate text in a foreign language, so you can easily read road signs, menus, or descriptions on cosmetics bottles when you are travelling or shopping abroad.



Scan to Translate Using Camera

- 1 Go to **Camera** > **Photo**, touch , and then touch .
- 2 Select the source and target languages from the language list.
- 3 Position the text you want to translate within the viewfinder, and wait for it to be translated.

Scan to Learn More

AI Lens allows you to learn more about artworks or landmarks you see by scanning the objects with your camera.




Scan to Learn More Using Camera

- 1 Go to **Camera > Photo**, touch , and then touch .
- 2 Position the object within the viewfinder and wait for it to be identified.
- 3 Touch the information card to obtain additional information.

Scan and Count Calories

AI Lens allows you to count the calories and nutrients in an item of food by scanning it with your camera.



Scan and Count Calories with Camera

- 1 Go to **Camera > Photo**, touch , and then touch .
 - 2 Position the food within the viewfinder and wait for information about the calories and nutrients per 100 g to be displayed.
-  The information is for reference only.

Scan Codes for Services and Information

You can scan different types of QR codes and bar codes with **AI Lens**, and then touch the identified result to be redirected to other pages for more services and information.

Scan Codes Using Camera

- 1 Go to **Camera > Photo**, touch , and then touch .
- 2 Position the QR code or barcode within the scan frame and wait for it to be recognised.

AI Touch

Enable AI Touch

When you see any content that you are interested in on your device, touch and hold the screen with two fingers spread slightly apart to bring up **AI Touch** to learn more.

Go to **Settings > Accessibility features > AI Touch** and enable **AI Touch**.

Shop with AI Touch

When you see an item you wish to buy on your device, you can use **AI Touch** to quickly search for the item and compare prices across multiple shopping platforms before making the purchase.

Touch and Hold the Screen with Two Fingers for Visual Shopping



- 1 Go to **Settings** > **Accessibility features** > **AI Touch** and enable **AI Touch**.
- 2 When you see an item you wish to buy on your device, touch and hold the screen with two fingers spread slightly apart.
- 3 When several items are displayed on the screen, adjust the size and position of the identification box to fit around the item you wish to buy.
- 4 After the item has been identified, links to purchase it on different shopping platforms will be displayed.

Easy Projection

Project Your Device Screen Wirelessly


For security reasons, after projecting your phone screen wirelessly to a large display (such as a TV) for work or entertainment, notifications such as incoming call notifications, SMS messages, and clock alarms will only be displayed on your phone.

- 1 Perform the following based on the model and functions of the large display:
 - **If the large display supports Miracast**, turn on its wireless projection switch.
 - **If the large display does not support Miracast**, connect a wireless HDMI adapter to it. Ensure that the wireless HDMI adapter is connected to a power supply.

 To check whether the large display supports Miracast and how to enable wireless projection on it, consult the user guide or customer service of the large display manufacturer.
- 2 On your device, swipe down from the status bar to open the notification panel, and turn on  .
- 3 Swipe down again to show all shortcuts and enable **Wireless Projection**. Your device will start searching for available display devices.
You can also go to **Settings** > **More connections** > **Easy Projection** and enable **Wireless Projection**.
- 4 In the device list, touch the name corresponding to the large display or wireless HDMI adapter to complete the projection connection.

After the connection is set up, you can place your phone in landscape mode for a better display. Incoming call notifications, messages, and clock alarms are only displayed on your

phone. To change the settings, touch  and disable **Hide notifications**.

To exit wireless projection, go to  > **Disconnect**.

Device Projection Using a Wired Connection

You can project your device screen on a large display (for example, a TV) using a wired connection.

It is recommended that you purchase the accessories from authorised channels.

Projection Using a Type-C Cable

- 1 Prepare a Type-C cable.
Use a Type-C to HDMI, Type-C to DP, or Type-C to MiniDP cable depending on your large display.



- 2 Connect the Type-C end to your device and the other end to the large display.



- 3 On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

Projection Using a Docking Station

You can use a docking station to connect your device with a large display, and connect them with a wired keyboard and mouse.

1 Prepare a docking station.

Multiple types of ports are available on a docking station. If the large display supports HDMI and you need to use a wired mouse and keyboard, use a docking station with at least one HDMI port and two USB ports.

**2** Connect your device and the large display to the docking station, then connect the wired mouse and keyboard to the docking station.**3** On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

Use Desktop Mode

After your phone screen is projected, go to  > **Projection mode** on your phone, and touch **Desktop mode**.

In **Desktop mode**, your phone and the large display work independently and can show different content. The content projected on the large display is in a layout similar to that on a computer desktop.

Therefore, you can edit a document on the large display while chatting on your phone. You don't need to worry about missing out on notifications, calls, or messages, as a red dot will appear on the notification panel on the external display to let you know.

Use Your Phone as a Touchpad

After projecting your phone on the large display in **Desktop mode**, if no keyboard is available, your phone can work as a touchpad to complete input operations of a mouse and keyboard.

Go to  > **Touchpad**. You can:

- Use gestures as instructed to simulate mouse commands.




- When no external keyboard is connected, touch the text input box on the external display to display the onscreen keyboard to input text.
If an external keyboard is connected, the onscreen keyboard will not be available. In this case, you need to use the external keyboard to input text.

Use Screen Projection to Make Work Easier

In **Desktop mode**, you can use the following features:

- **Multi-window display:** Open multiple windows at a time to multitask.
- **File management:** Save files to the desktop, create files or folders, and rename or delete files.
- **Quick search:** Search for documents, multimedia files, and apps using the start menu search box.
- **Quick app projection:** Touch and hold an app icon on your phone to view the projection options. You can then project and open the app on the large display.

Exit Desktop Mode





To exit Desktop mode, go to  > **Projection mode** and select **Phone**.

Multi-screen Collaboration


Multi-screen Collaboration Between Your Phone and PC

Connect your phone with a Huawei or Honor PC to use Multi-screen Collaboration for cross-device control, file sharing, and file editing.




Connect Your Phone to the PC through Huawei Share OneHop

- 1 Ensure that the PC supports  or .
- 2 On the PC, enable Wi-Fi, Bluetooth, and PC Manager, and agree to the user licence agreement.
- 3 On your phone, swipe down from the status bar to open the notification panel and the shortcuts menu, then enable **NFC**, **Wi-Fi**, and **Bluetooth**.
- 4 Place the NFC area (near the rear camera) on the back of your phone against the  or  label on the PC until your phone vibrates or plays a tone.
- 5 Follow the onscreen instructions to connect your phone and PC.

Connect Your Phone to the PC by Using Bluetooth Search

- 1 On your phone, swipe down from the status bar to open the notification panel, and enable .




- 2 Open PC Manager (version 10.0 or later), go to **My Phone > Connect**, and select to search for your phone over Bluetooth. Place your phone above the keyboard and your PC will start searching for your phone.

 To check the version of PC Manager, go to  > **About**. To update PC Manager, go to  > **Check for updates**.

- 3 Follow the onscreen instructions to connect your phone and PC.

Connect Your Phone to the PC by Scanning the QR Code

- 1 Open PC Manager (version 10.0 or later) on your PC, go to **Phone > Connect**, and select the QR code option in the upper left corner.

 To check the version of PC Manager, go to  > **About**. To update PC Manager, go to  > **Check for updates**.




- 2 Ensure that your phone is connected to the Internet and use it to scan the QR code displayed on the PC.

- 3 Follow the onscreen instructions to connect your phone and PC.


Connect Your Phone to the PC with a USB Cable

- 1 Use a USB cable to connect your phone and PC.

- 2 On the PC, open PC Manager (version 10.1 or later).

 To check the version of PC Manager, go to  > **About**. To update PC Manager, go to  > **Check for updates**.

- 3 Confirm to connect to the PC on your phone.

 If you cancel the connection on your phone, you can establish a wired connection again. To do so, open PC Manager and go to **Phone > Connect > Other ways to connect > USB**.

Disconnect Your Phone from Your PC

After you have finished using your phone and PC, you can disconnect them using the following methods:

- On your PC, open PC Manager, and click **Phone > Disconnect**.
- On your phone, swipe down from the status bar to open the notification panel, and touch **DISCONNECT**.
- If your phone and PC are connected via a USB cable, remove the cable to disconnect them.

Drag to Transfer Files Between Your Phone and PC

After connecting your phone and PC, you can transfer files between them to make work easier.

Drag and drop files


After Multi-screen Collaboration is established between your phone and PC, you can drag and drop files such as pictures and videos between them to make your work easier.

Transfer files from your phone to the PC.

- In the phone window on the PC, open **Gallery** or **Files**, click and hold a picture or video, click and hold any of the selected files until a dragging icon is displayed, then drag the files to a folder on your PC.
- In the phone window on the PC, drag the selected pictures or text and drop them in an opened document on your PC.

For example, drag a photo or text from Notepad in the phone window and drop it to an Office document opened on your PC, then continue editing on your PC.

Transfer files from your PC to your phone:

- Go to **Gallery** > **Albums** in the phone window, and drag a picture or video from your PC to the phone window.
- Open **Files** in the phone window, and drag a document from your PC to the phone window.
 -  The file will be saved in the folder that is open in **Files**, or in the **Huawei Share** folder by default.
- Open a file in the phone window on the PC, then drag a picture or text from Notepad to the phone window.

For example, drag a picture on your PC to a Notepad item opened in the phone window, then continue editing on your phone.


Use Huawei Share OneHop to Transfer Files


After Multi-screen Collaboration is enabled between your phone and PC, you can transfer files between them using Huawei Share OneHop, without needing a data cable or any software.


Share pictures and videos

- **Transfer pictures and videos from your phone to your PC:**

1 On your phone, select one or more pictures and videos in **Gallery**.

2 Place the NFC area (near the rear camera) on the back of your phone against the 


or  label on the PC until your phone vibrates or plays a tone. The selected pictures or videos will be quickly transferred to your PC.

You can click  in the picture browser to extract text from an image, and copy or save it into a new file.

- **Transfer pictures from your PC to your phone:**



1 Right-click a picture on your PC and use Huawei Image viewer to open it.


2 On your phone, exit **Gallery** or go to the home screen, and place your phone against your PC (in the same way as above) to transfer the picture from your PC to your phone.


-  Ensure that PC Manager is running version 9.0 or later.

Record the PC screen:

Shake your phone and place it against your PC to project and record the PC screen on your phone.

- 1 Shake your phone and immediately place the NFC area (near the rear camera) on the back of the phone against the  or  label on your PC until your phone vibrates or plays a tone. Your PC screen will then be projected and recorded on your phone. The PC screen recording can be up to 60 seconds.



- 2 Touch  on your phone to stop the screen recording, which will be saved to **Gallery** on your phone.

-  This feature is currently supported on Intel laptops only.
 - Ensure that PC Manager is running version 9.1 or later.

Share documents

• Transfer documents from your phone to your PC:


- 1 On your phone, use Microsoft Office to open the document you want to transfer.

- 2 Place the NFC area (near the rear camera) on the back of your phone against the  or  label on the PC until your phone vibrates or plays a tone. The selected documents will be quickly transferred to your PC.

• Transfer documents from your PC to your phone:

- 1 On your PC, use Microsoft Office to open the document you want to transfer.

- 2 On your phone, exit Microsoft Office or return to the home screen, then place the phone against your PC (in the same way as above). The file opened on your PC will then be transferred to your phone.

-  Ensure that PC Manager is running version 9.1 or later.

Operate Your Phone from Your PC

After Multi-screen Collaboration is enabled between your phone and PC, you can use a mouse and keyboard with the PC to facilitate using phone apps and files.


Operate Phone Apps on Your PC

Use a mouse to perform operations quickly


- Open an app: Click an app in the phone window on your PC to open it.
- **Browse a page:** Use the mouse scroll wheel to browse web pages in the phone window or scroll between desktop tabs.

Use a keyboard to perform operations quickly

- **Input text:** Use the input method on your PC to enter text in the phone window.

- **Copy and paste text:** Press Ctrl+C on the PC keyboard to copy text and press Ctrl+V to paste it in the phone window.
 -  To view information about the text you have copied recently, click the Notification Centre icon on the PC, then select the **Clipboard** tab.
- **Send messages quickly:** Press Ctrl+Enter on the keyboard to send a message in the phone window.
- Exit an app: Press the ESC key on the keyboard to exit an app in the phone window.


Always display the phone window on the top

In the phone window on your PC, click  to pin the phone window so that it will be always displayed on the top, and click this icon again to unpin the phone window.

Answer a Voice or Video Call on Your PC

After Multi-screen Collaboration is enabled between your phone and PC, you can use the PC to answer voice and video calls (such as those in WeChat, QQ, and MeeTime) from your phone. During a call, the audio and video can be played through your PC and its accessories such as the speaker and camera.


On your phone, swipe down from the status bar to open the notification panel, then touch **Play audio/video on phone** or **Play audio/video on PC** to switch the audio output device.

-  Ensure that PC Manager 10.1 or later has been installed on the PC.

Open and Edit Files on Your Phone Using Apps on the PC

After Multi-screen Collaboration is enabled between your phone and PC, you can use an app on the PC to open and edit files on your phone, such as in the following situations.

- **Documents:** Use Microsoft Office on your PC to open a document.
- **Pictures:** Use Photoshop on your PC to open a picture.
- **Audio and video files:** Use Windows Media Player to open an audio or video file.
- **Web pages:** Use IE browser on your PC to open a web page.
- **Compressed files:** Use WinRAR on your PC to extract and open compressed files.


-  Ensure that PC Manager 10.1 or later has been installed on the PC.

Share Your Phone's Mobile Data Network with Your PC

After Multi-screen Collaboration is enabled between your phone and PC, you can share your phone's hotspot with your PC in PC Manager.

- 1 Ensure that your phone is connected to the Internet using mobile data.
- 2 Open PC Manager and go to **My Phone > Instant Hotspot**.

After Instant Hotspot is enabled, your PC will use your phone's mobile data to access the Internet.

-  Ensure that PC Manager is running version 11.0 or later.

Multi-screen Collaboration Between Your Tablet and Phone

Multi-screen Collaboration Between Your Phone and Tablet


Connect your phone and tablet to use Multi-screen Collaboration for cross-device operations, such as to display your phone screen on the tablet, use your phone apps on the tablet, drag files across the two devices, and edit a file from your phone on the tablet.

Connect Your Tablet and Phone

 Only some Huawei and Honor tablets support this feature.

Connect your tablet and phone to enable Multi-screen Collaboration using any of the following methods:

Connect over Bluetooth:


- 1 Swipe down from the status bar on your tablet and enable **Multi-Screen Collaboration**.
- 2 On your phone, swipe down from the status bar to open the notification panel, and enable  .
- 3 Hold your phone close to your tablet and follow the onscreen instructions to establish a connection.

Scan QR code to connect:

- 1 On your tablet, enable **Multi-Screen Collaboration**, on the **Multi-Screen Collaboration** screen, touch **Scan to connect**.
- 2 Ensure that your phone is connected to the Internet, and connect your phone and tablet as prompted.

Connect by tapping against a NFC-capable keyboard:

You can place your phone against the standard NFC-capable keyboard that comes with your tablet to enable Multi-screen Collaboration.

- 1 Make sure that your tablet has been paired with the keyboard.
- 2 Swipe down from the status bar on your phone to open the notification panel, swipe down again to show all shortcuts, then turn on .
- 3 Tap the NFC area at the back of your phone (near the rear cameras) against the NFC area of the keyboard until your phone vibrates or plays a tone.
- 4 Connect your phone and tablet as prompted.

Access Phone Apps and Files from Your Tablet

After connecting your phone with your tablet, you can operate your phone from your tablet, such as to operate phone apps and files, view phone notifications (such as SMS messages), and make or answer phone calls.

When your phone screen is unlocked, you can perform the following operations in the phone window on your tablet:

- Open **Phone** to make a call by dialling a number.
- Open **Messaging** to view and reply to SMS messages.
- Open **Gallery** or **Files** to view photos, videos, and files, as well as to play video or audio files from your phone.
- Swipe down from the status bar on your phone or tablet to open the notification panel, then touch **Play audio/video on phone** or **Play audio/video on tablet** to switch the audio output device.
- If your tablet is connected to an external keyboard or a stylus, you can use it to input text and control the phone window on your tablet.

Drag to Transfer Files Between Your Phone and Tablet


- 1 Open **Gallery** or **Files**, and touch and hold a picture, video, or document.
- 2 Select more files if needed, touch and hold any of the selected files, then drag them when an icon for dragging files appears.

For example, you can:

- Drag to transfer files in **Gallery** or **Files** between your phone and tablet.
- Drag to transfer files in **Files** between your phone and tablet.
- Drag a picture, text, or file from your phone to an open document on your tablet, such as a Microsoft Office document, memo, or email.

Disconnect Your Phone from Your Tablet



After you have finished using your phone and tablet, you can disconnect them using the following methods:

- On the phone window displayed on the tablet, touch  to disconnect.
- On your phone or tablet, swipe down from the status bar to open the notification panel and touch **DISCONNECT**.

Switch Audio Channels Between Devices

Switch to a Different Output Device During Playback


When playing music or videos through your earphones, you can quickly switch playback to another device without having to unplug your wired earphones or disconnect your Bluetooth earphones.

- 1 Enable Bluetooth on your device and connect it to wired earphones or a Bluetooth audio device (such as Bluetooth earphones, a Bluetooth speaker, or a vehicle-mounted device).
 - 2 After pairing is successful, you will see the **Current audio output device** or **Current audio input/output device** card if you swipe down the notification panel on your device. Touch  on the card to display the audio output devices that are currently available. Select the device you want to switch the audio to.
-  If your device supports wired earphones with a non-Type-C port, the audio output channel of your device will be switched from **This device** to the wired earphones by default.

AI Search

Search for Apps and Settings on Your Device

You can search for keywords to find apps, settings, files, contacts, and notes on your device. Swipe down from the centre of the screen and enter a keyword in the search box, such as an app name or a setting, to find the corresponding content.

If you are searching for an app installed on your device, touch  to locate the app.

Huawei Share

Huawei Share

Huawei Share is a wireless sharing technology that allows you to quickly transfer images, videos, documents, and other types of files between devices. This technology uses Bluetooth to discover nearby devices that supports Huawei Share and Wi-Fi Direct to transfer files without using mobile data.


Enable or Disable Huawei Share



You can enable or disable Huawei Share in either of the following ways:

- Swipe down from the status bar to open the notification panel, swipe down on it again to show all shortcuts, then turn on or turn off **Huawei Share**. You can also touch and hold **Huawei Share** to access its settings screen.
- Go to **Settings > More connections > Huawei Share** to enable or disable **Huawei Share**.

Quickly Share Files Between Devices with Huawei Share

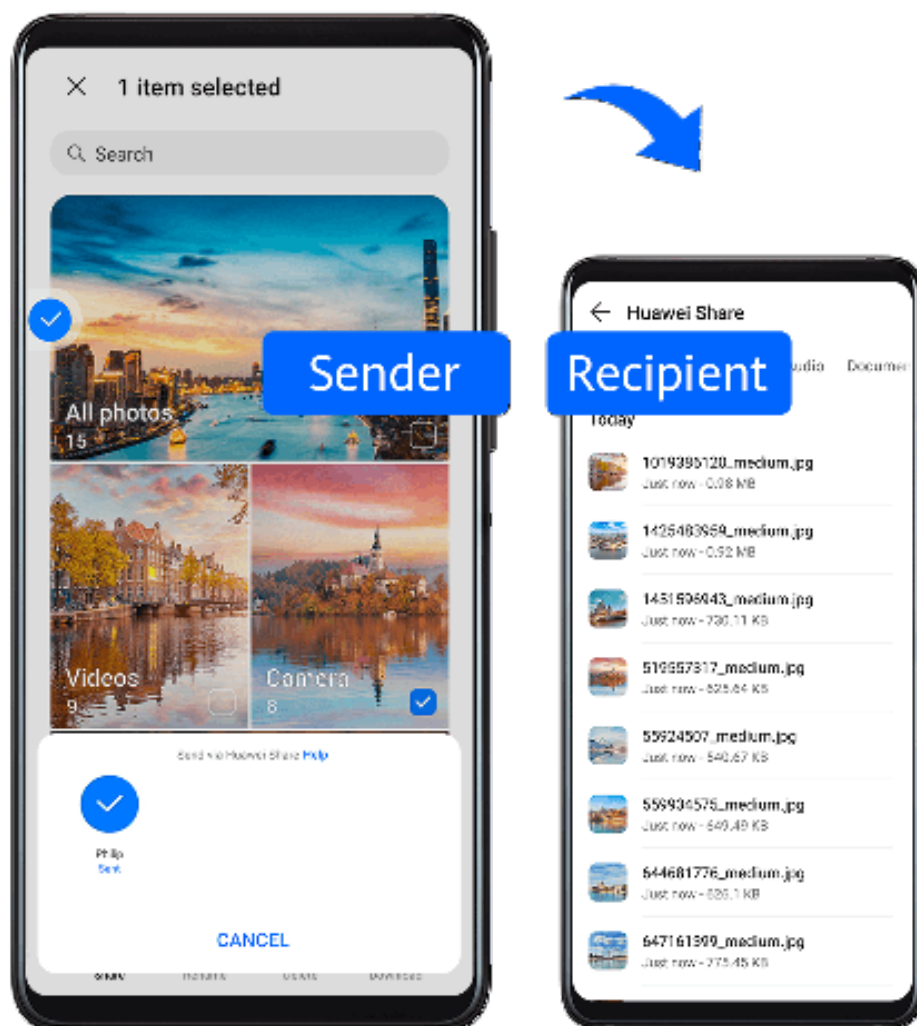You can use Huawei Share to quickly share files between Huawei devices. The recipient can preview the files before they are sent, then view the full content of the files once they have been received. For example, the recipient can view received pictures or videos in Gallery.




- 1 On the receiving device, enable **Huawei Share**.
- 2 On the sending device, touch and hold to select a file or album you want to share, then touch . Touch **Huawei Share**, then touch the icon of the receiving device to send the file.
 -  These steps may be different if you are sharing files directly from an app.
- 3 On the receiving device, touch **Accept** to accept the transfer.

To view the received files, open **Files**, touch the **Categories** tab, then go to **Internal storage** > **Huawei Share**.

You can also view the received images or videos by going to **Gallery** > **Albums** > **Huawei Share**.

Share Files Between Your Device and Computer with Huawei Share

You can use Huawei Share to easily share files wirelessly between your device and a computer (Windows or macOS).

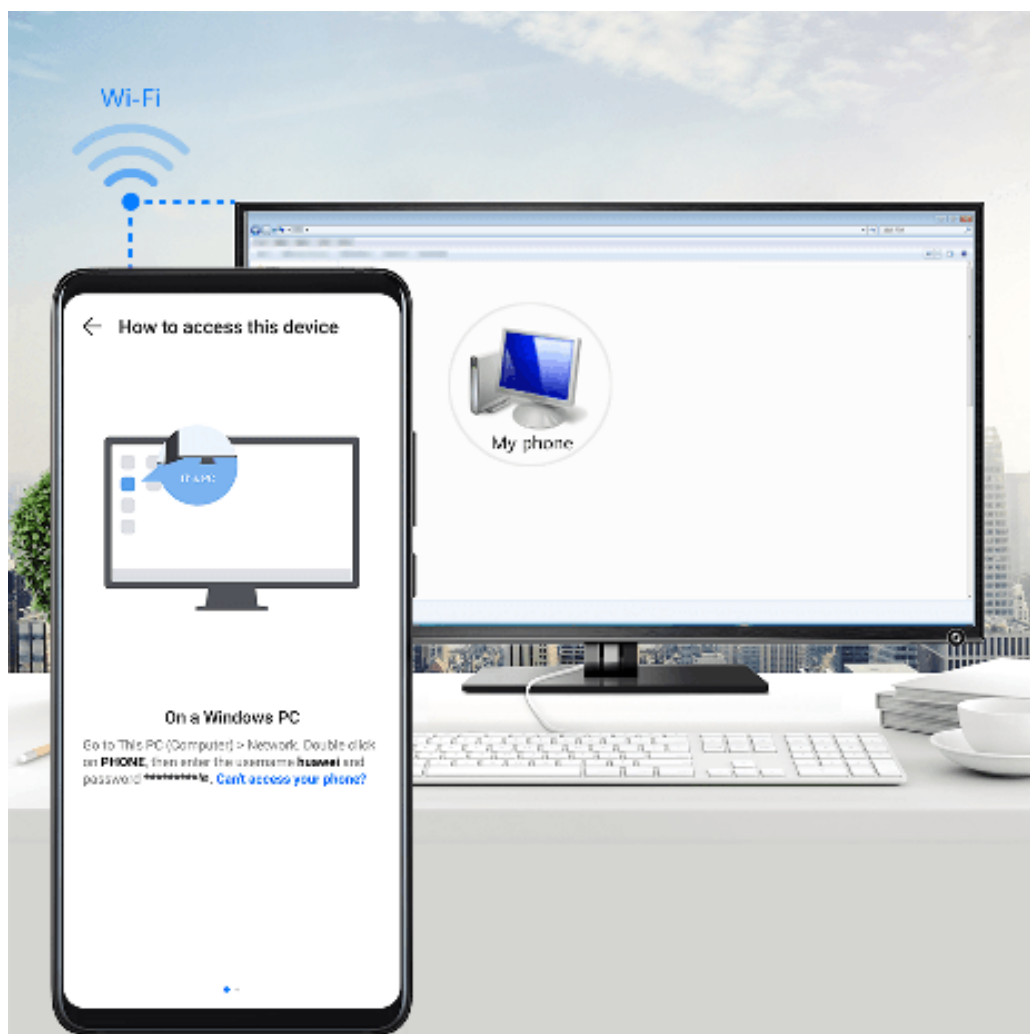

- 1 Make sure your device and computer are connected to the same Wi-Fi network.
- 2 On your device, enter the **Huawei Share** settings and enable **Huawei Share** and **Computer Share**.
- 3 Make a note of the name displayed next to **Name shown on computers**, as well as the user name and password under **Verification**.
- 4 Perform the following operations on a Windows-based computer (desktop or laptop) or a macOS-based computer (laptop):
 - Windows: Go to **This PC (Computer) > Network** on the computer.
 - macOS: Go to **Finder > Go to > Network** on the computer.
- ⓘ Currently, this feature is only available on Macs running macOS 10.8 to 10.14.
- 5 On your computer, double-click the name of your device and enter the user name and password previously noted down.
- 6 Open a shared folder on your device, such as the Internal storage or Album folder to view, edit, or copy files from your device to your computer or vice versa.


Changes made to files in the shared folders on your computer will be automatically synced to your device and vice versa.

One-Touch Printing with Huawei Share

When a printer that supports Huawei Share is nearby, you can use Huawei Share to find the printer and print out pictures or PDF files stored on your device.




- 1 Depending on the type of printer, ensure the following:
 - Wi-Fi capable printers: The printer must be powered on and connected to the same network as your device.
 - WiFi Direct capable printers: The printer must be powered on and have enabled WiFi Direct.
 - Bluetooth capable printers: The printer must be powered on and discoverable via Bluetooth.
- 2 On your device, preview the file to be printed, then go to **Share > Huawei Share**.
- 3 Once the printer has been discovered, touch its name on your device, and adjust the settings on the preview screen. Then touch **PRINT** to print.
If you are connecting a Bluetooth printer to your device for the first time, find the printer on your device, touch the printer name, then press and hold the Power button on the printer for about 1 second to confirm the connection.

-  For a list of supported printers, touch **Help** on the Huawei Share sharing screen, select **Printers**, then touch **What printers are supported?**.

Camera and Gallery

Take Photos

Take Photos

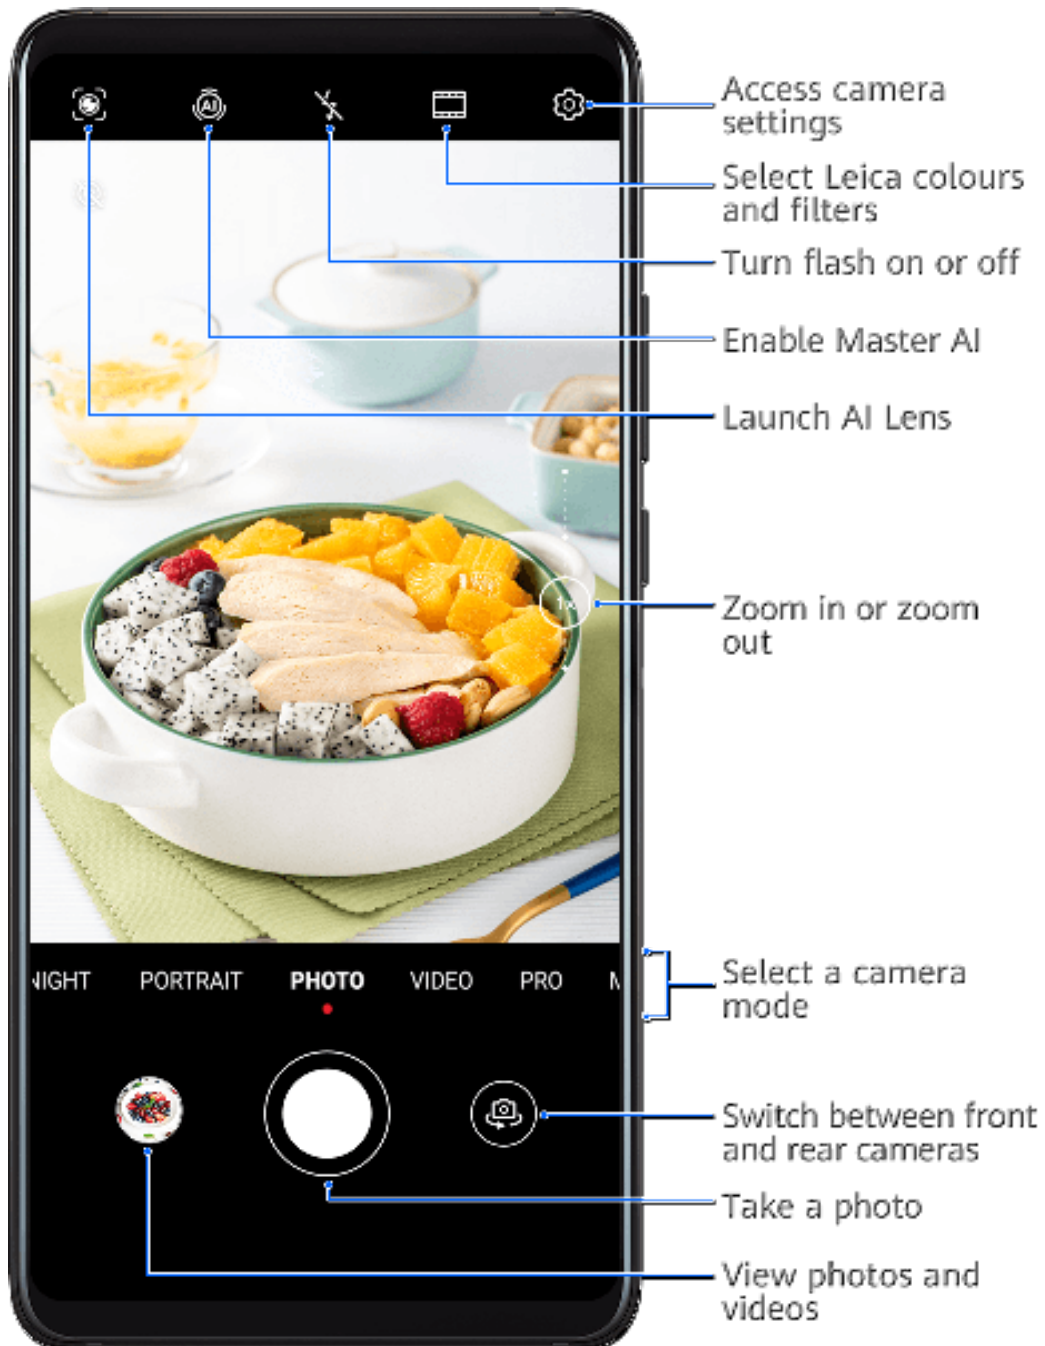







i The figures are for reference only.


1 Open **Camera**.

2 You can then:

- Focus: Touch the location you want to focus on.

To adjust focus and metering separately, touch and hold the viewfinder and drag the respective frame or ring to the desired location.

- Adjust brightness: Touch the viewfinder. When the  symbol appears next to the focus frame, drag it up or down.
- Zoom in or out: On the viewfinder, pinch in or out, or drag the zoom slider.
- Select a camera mode: Swipe up, down, left, or right across the camera mode options.
- Turn the flash on or off: Touch  and select  (Auto),  (On),  (Off), or  (Always on).


If you select  (Auto) and the camera detects that you are in a dimly lit environment, a flash icon will appear in the viewfinder and the flash will be automatically turned on when you take a photo.

 These features may not be available in some camera modes.

3 Touch the shutter button to take a photo.


Use the Floating Shutter to Take Photos

You can enable the floating shutter to display in the camera viewfinder, and drag it anywhere you like to take photos quickly.




- 1** Go to **Camera** > , and enable **Floating shutter**.
- 2** The floating shutter will then be displayed in the viewfinder. You can drag it anywhere you like.
- 3** Touch the floating shutter to take a photo.


Take Burst Photos

Use Burst mode to take a sequence of photos in quick succession so you can choose the best one.

- 1** Open **Camera**, select **Photo** mode, and make sure the rear camera is in use.
- 2** Touch and hold  or press and hold one of the Volume buttons to take a burst photo. When shooting, you'll see a counter, which indicates how many photos you've taken so far.
- 3** Lift your finger to stop shooting.


Select the Burst Photos You Want to Keep

- 1** Open **Gallery**. Touch a burst photo (which is tagged with ) , then touch .
- 2** Swipe through the burst photos, select the ones you want to keep, then touch  and follow the onscreen instructions.

To delete the whole burst photo, touch and hold to select the photo, then touch .


Take Timed Photos

The camera timer allows you to set a countdown so you can get into position after you have touched the shutter button.

- 1 Go to **Camera** >  > **Timer** and select a countdown.
- 2 Return to the viewfinder and touch the shutter button. Your device will take a photo when the countdown ends.

Use Audio Control to Take Photos

You can use your voice to take photos without having to touch the shutter button.

- 1 Go to **Camera** >  > **Audio control**, and select an option.
- 2 Go back to the viewfinder, then say your command to take a photo.

Shoot in Portrait, Night, and Wide Aperture Modes

Shoot in Portrait, Night, and Wide Aperture Modes

Use Portrait Mode to Shoot Portraits


Portrait mode lets you apply beauty and lighting effects to your photos to shoot stunning portraits.


- 1 Open **Camera** and select **Portrait** mode.
- 2 Frame your subject within the viewfinder.



To take a selfie, touch .


- 3 You can then:

- Enable beauty effect: Touch  and adjust beauty settings.

To disable the beauty effect, drag the setting to its lowest value, or touch .

- Set lighting effect: Touch  and select your preferred.
- Turn on the flash: When using the front camera, touch the flash icon at the top.


Select  (Auto) or  (Always on).

 This feature may vary by device.

- 4 Touch  to take a photo.


Take Night Shots

Night mode gives your photos sharper details and brighter colors even when shooting in low light or at night.

- 1 Open **Camera** and select **Night** mode.
- 2 If you are using the rear camera, touch **ISO** on the viewfinder to adjust the ISO sensitivity or **S** to adjust the shutter speed.
 This feature may vary by device.
- 3 Steady your device and touch the shutter button.
- 4 Your device will adjust the exposure time based on the ambient brightness. Keep your device steady until the countdown finishes.
 You can also touch the shutter button to stop the countdown and immediately take a photo.



Take Wide Aperture Photos

Wide aperture mode allows you to shoot photos where the background is blurred while your subject remains in sharp focus.

- 1 Open **Camera** and select **Aperture** mode.
- 2 Touch where you want to focus. For best results, your device needs to be within 2 m (about 7 ft.) of your subject.
- 3 Touch  in the viewfinder and drag the slider to adjust aperture settings. A smaller aperture value will create a more blurred background.
- 4 Touch the shutter button to take a photo.

Shoot Wide Aperture Videos





Wide aperture mode allows you to shoot videos where the background is blurred in real time so your subject always remains in sharp focus.

- 1 Open **Camera** and select **Aperture** mode.
- 2 Touch  to switch to video mode.
- 3 Touch where you want to focus. Touch  in the viewfinder and drag the slider to adjust aperture settings. A smaller aperture value will create a more blurred background.
- 4 Touch the shutter button to start recording. When recording, touch the viewfinder to adjust the focus.

Edit Background Blur in Wide Aperture Photos

You can adjust the focus and background blur after you've taken a wide aperture photo.

- 1 Go to **Gallery** > **Albums** > **Camera**.



- 2 Touch a photo tagged with , then touch  at the top of the photo.
- 3 Touch the photo to adjust the focus. Drag the slider at the bottom to adjust the aperture.
- 4 Touch  to save the settings.
- 5 Touch  to save the edited photo as a new photo. The new photo does not allow background blur editing.

Zoom to Take Photos



Take Wide-Angle or Long-Focus Photos

The zoom capabilities of your device's camera allow you to capture more of a scene, or distant vistas.

Take Wide-Angle Photos

- 1 Open **Camera** and select **Photo** mode.
- 2 Ensure that  is enabled.
- 3 Aim the camera at the object you want to take a photo of. The camera will automatically recommend **Super wide angle** mode if it detects a building. Touch **Wide** to have a wider angle of view.
You can also drag the zoom slider in the viewfinder, or pinch in or out to adjust the zoom level. A smaller value will result in a wider angle of view.
- 4 Touch  to take a photo.


Take Photos from Far Away

- 1 Open **Camera** and select **Photo** mode.
- 2 Aim the camera at a distant object you want to take a photo of. Drag the zoom slider or pinch in or out to adjust the zoom level.
When the zoom level is set to 15x or higher, a Picture in Picture preview is displayed in the viewfinder to help you focus.
 This feature may vary by device.
- 3 In the viewfinder, touch where you want to focus. When the camera is in focus, touch .



Macro

Use Super Macro to Shoot Close-ups

With Super macro mode, you can take photos of small objects such as dewdrops and leaves to explore and record the details of the world around you.

- 1 Go to **Camera** > **More** and select **Super macro** mode.
If your device allows, you can also drag the zoom slider in the viewfinder to take a macro photo with a focal length below 1x.
- 2 Touch  to take a photo.

Automatically Switch to Super Macro Mode

- 1 Open **Camera**. When the camera is close enough to the object you want to shoot, it will automatically focus on the object. If  is enabled, the screen will display **Super macro**.
- 2 Touch  to take a photo.




Take Panoramic Photos

Take Panoramic Photos




Add some width to your landscape or group photos with the Panorama feature. The camera takes multiple photos of objects within your field of view and stitches them together into a single panoramic photo.

Use the Rear Camera to Take Panoramic Photos

Panorama mode combines multiple shots into a seamless panoramic photo. Simply move the camera as you shoot and the camera will take care of the rest.

- 1 Go to **Camera** > **More** and select **Panorama** mode.
- 2 Touch  and set the pan direction.
- 3 Point the camera at your starting point, then touch  to start shooting. Move the camera in the direction of the arrow displayed on the screen. Keep the arrow on the centre line when you are taking the photo.
- 4 Touch  when you are finished.


Use the Front Camera to Take Panoramic Selfies

- 1 In **Panorama** mode, touch  to switch to the front camera.
Touch  and drag the slider to adjust the beauty effect. A larger value will produce a more pronounced beauty effect.
 - 2 Point the camera at the centre of your shot, then touch  to take the first photo.
 - 3 Turn the camera to the left and right slowly as instructed. When the two frames on the viewfinder overlap, the camera will automatically take the second and last photos.
- After the three photos are taken, the camera will automatically combine them into a panoramic photo.

Take Black and White Photos

Take Black and White Photos



Black and white photography removes distracting colours to help you focus more on form, shape, and texture.

- 1 Go to **Camera** > **More** and select **Monochrome** mode.
- 2 Select one of the following modes based on your subject and scene:
 - **Normal:** This mode suits all kinds of subjects.
 - **Aperture:** This mode blurs the background and lends greater emphasis to the subject.
 - **Portrait:** This mode blurs the background and lets you adjust the beauty effect.
 - **Pro:** This mode allows you to adjust the camera settings, including the metering mode, sensitivity, and shutter speed.
- 3 Touch  to take a photo.

AR Lens


Use AR Lens to Shoot Interesting Photos




Use 3D Qmoji to Create Your Own Qmojis

- 1 Go to **Camera** > **More**, select **AR lens** mode, and touch **3D Qmoji**.
- 2 Select an animated Qmoji. The Qmoji will then mimic and act out your facial expressions accordingly.
Touch  to enable or disable the background.
- 3 Touch **GIF** to enable GIF mode, then look straight at the front camera.
- 4 Touch and hold  to start recording.
- 5 After the recording is complete, add text or directly save the Qmoji. The Qmoji will be saved to Gallery in GIF format.

 This feature may vary by device.

Use 3D Qmoji to Record Videos

- 1 In **AR lens** mode, touch **3D Qmoji**, and select an animated Qmoji.
Touch  to enable or disable the background.
- 2 Touch **GIF** to disable GIF mode, then look straight at the front camera.


- 3 Touch  to start recording.
 - 4 Touch  to finish recording.
-  This feature may vary by device.

Moving Pictures

Take Moving Pictures to Bring Photos to Life


When you want to capture a photo-worthy moment, but do not feel sure about when to touch the shutter button, you can use the Moving picture feature.

Take Moving Pictures

- 1 Go to **Camera** > **More** and select **Moving picture** mode.
- 2 Touch  to take a photo.

Play Moving Pictures


Moving pictures are saved in JPG format in **Gallery**.

Go to **Gallery** > **Albums** > **Camera**, touch a moving picture, then touch  at the top of the picture to view it.

The moving picture will automatically stop after a complete playback. You can also touch the screen to stop the playback.


Share Moving Pictures

You can share moving pictures with Huawei or Honor devices using various methods, such as Wi-Fi Direct, Bluetooth, or Huawei Share.

Go to **Gallery** > **Albums** > **Camera**, touch and hold to select the moving pictures you want to share, then touch  to share them.

If you share moving pictures to third-party apps or incompatible devices, moving pictures will be displayed as static images.

Save a Moving Picture as a GIF File or Video


To save a moving picture as a GIF file or video, touch the moving picture in the album, touch , then select **Save as video** or **Save as GIF**.

Add Stickers to Photos

Add Stickers to Photos

Add a sticker, such as time, weather, mood, or food, to spice up your photos.

1 Go to **Camera > More** and select **Stickers** mode.

If the **Stickers** option is not present, touch , then download **Stickers**.

2 Touch  and select a sticker. The selected sticker will be displayed in the viewfinder.

3 Drag the sticker to change its position. You can also edit the text of some types of stickers.

4 Touch  to take a photo.

Take High-Resolution Photos

Take High-Resolution Photos

Take high-resolution photos if you would like to print them or display them on a large screen.

1 Go to **Camera > More** and select **High-res** mode.

2 If you see a high-resolution selector icon (such as ⁵⁰MP on top of the viewfinder), touch the icon and select ⁵⁰MP or ⁵⁰AI^{MP} depending on your preferences.

 The high-resolution selector icon may vary by device.

- When you are shooting static objects or scenery in well-lit conditions, select ⁵⁰AI^{MP} to capture higher quality photos. It may take longer to take the photo. Keep your device steady when the photo is being taken.
- To take a high-resolution photo quickly, select ⁵⁰MP.

3 Frame your subject within the viewfinder, then touch where you want to focus. In **High-res** mode, you won't be able to zoom in or out, or adjust the aspect ratio.

4 Touch  to take a photo.

 This feature may vary by device.

Pro Mode

Use Pro Mode to Shoot Like a Pro

Pro mode lets you fine-tune photos and videos and gives you full control over ISO sensitivity, focus mode, and more when taking photos or recording videos.




Use Pro Mode to Take Photos



1 Open **Camera** and select **Pro** mode.

2 You can then:

- Adjust the metering mode: Touch **M** and select a metering mode.

Metring Mode	Description
 Matrix	Measures the light in the whole frame. Applicable when shooting landscapes.
 Centre	Places more emphasis on light levels at the centre of the screen. Applicable when shooting portraits.
 Spot	Concentrates on the light in a small area of the screen, such as the subject's eyes.

- Adjust the ISO sensitivity: Touch **ISO** and drag the slider.


In low-light conditions, increase the ISO sensitivity. In well-lit environments, lower the ISO sensitivity to avoid image noise.

- Adjust the shutter speed: Touch **S** and drag the slider.
The shutter speed affects the amount of light allowed to enter the camera lens. When you are shooting stationary scenes or portraits, lower the shutter speed. When you are shooting moving scenes or objects, increase the shutter speed.
- Adjust EV exposure compensation: Touch **EV** and drag the slider.
Increase the EV value in low-light conditions and lower the EV value in well-lit environments.
- Adjust the focus: Touch **AF** and select a focus mode.

Focus Mode	Description
AF-S (single)	Applicable to stationary subjects.
AF-C (continuous)	Applicable to moving subjects.
MF (manual)	Touch the subject on which you want to focus.

- Adjust the colour cast: Touch **WB** and select a mode.

When shooting in bright sunlight, select . In low-light environments, select .

Touch  to adjust the colour temperature.


- Select the storage format: You can save the photo in JPG or RAW format. RAW format records more detail and gives you a wider range of post-processing options. JPG format, which can be high-resolution or default, takes up less storage space compared to RAW format.

Touch  to select a storage format.

If you select RAW format, photos that you take will be saved in RAW and standard formats. The RAW format photos will be saved to the RAW photo album in **Gallery**.

- Enable AF assist light: For better focus in low-light environments, touch .


3 Touch the shutter button to take a photo.



-  In Pro mode, changing a specific setting will sometimes cause other settings to change as well. Adjust them depending on your actual requirements.

Use Pro Mode to Record Videos

1 In **Pro** mode, touch  to switch to video mode. You can then:

- Adjust the metring mode: Touch **M** and select a metring mode.

Metring Mode	Description
 Matrix	Measures the light in the whole frame. Applicable when shooting landscapes.


Metring Mode	Description
 Centre	Places more emphasis on light levels at the centre of the screen. Applicable when shooting portraits.
 Spot	Concentrates on the light in a small area of the screen, such as the subject's eyes.


- Adjust the ISO sensitivity: Touch **ISO** and drag the slider.
In low-light conditions, increase the ISO sensitivity. In well-lit environments, lower the ISO sensitivity to avoid image noise.
- Adjust the shutter speed: Touch **S** and drag the slider.
The shutter speed affects the amount of light allowed to enter the camera lens. When you are shooting stationary scenes or portraits, lower the shutter speed. When you are shooting moving scenes or objects, increase the shutter speed.
- Adjust EV exposure compensation: Touch **EV** and drag the slider.
Increase the EV value in low-light conditions and lower the EV value in well-lit environments.
- Adjust the focus: Touch **AF** and select a focus mode.

Focus Mode	Description
AF-S (single)	Applicable to stationary subjects.
AF-C (continuous)	Applicable to moving subjects.
MF (manual)	Touch the subject on which you want to focus.

- Adjust the colour cast: Touch **WB** and select a mode.

When shooting in bright sunlight, select . In low-light environments, select .

Touch  to adjust the colour temperature.

2 Touch  to start recording.

- i** In Pro mode, changing a specific setting will sometimes cause other settings to change as well. Adjust them depending on your actual requirements.




Record Videos


Record Videos



1 Open **Camera** and select **Video** mode.


2 Adjust the following settings:

- Zoom in or out: Pinch in or out on the viewfinder, or drag the zoom slider.
- Focus: Touch the location you want to focus on. Touch and hold the viewfinder to lock the exposure and focus.


- Turn the flash on or off: Touch , then touch  to keep the flash on, or  to turn it off.

When using the front camera to record videos, you can set the flash to  (Always on) when there is insufficient light. The camera will then increase the screen brightness to illuminate the subject's face.


- Adjust the beauty effect: Touch  and drag the slider to adjust beauty settings.
- Adjust the video resolution and frame rate: Go to  > **Video resolution** and select the desired resolution. A higher resolution will result in a higher quality video with a larger file size.
Touch **Frame rate** to select a frame rate.



- Select a video format that saves on storage space: Touch  and enable **Efficient video format**.
When this feature is enabled, your device will use a video format that takes up less storage space. However, this may result in other devices being unable to play the video. Please exercise caution when selecting this option.

 Not all devices support these features.

3 Touch  to start recording.

While recording, touch and hold  or  to smoothly zoom in or out.

Touch  to take a photo while recording.

4 Touch  to pause the recording and  to end the recording.

Use AI Movie Effects to Record Videos


Use AI movie effects to add an artistic element to your videos without the need for post-processing.


1 Open **Camera** and select **Video** mode.


2 Switch to the rear camera, touch  or  to select a special effect.

3 Go to  > **Video resolution** and select 21:9 to give your video a cinematic character.

 This feature may vary by device.




4 Touch  to start recording.

While recording, touch  to take a photo with the selected special effect.

5 Touch  to end the recording.

Shoot 4K UHD Videos


Your device supports 4K Ultra HD (UHD) video recording.

- 1 Open **Camera** and select **Video** mode.
- 2 Go to  > **Video resolution** and select **[16:9] 4K**.
Beauty mode, filters, and special effects are not supported at 4K, and will be automatically disabled when you select the 4K resolution.
- 3 Return to the **Video** screen and touch  to record a video.
 -  A higher resolution will result in a higher quality video, but will also take up more storage space.

Slow-Mo Recording





Shoot Slow-Mo Videos



Use Slow-mo mode to capture fleeting moments in detail. Adjust the slow motion speed based on how slow you want your footage to appear. With a higher speed you'll get slower playback.

-  The available slow motion speeds vary by device.
- 256x: suitable for recording shooting, explosion, or other extreme fast-paced action scenes.
- 128x or 64x: suitable for recording balls being hit and racing.
- 32x or 16x: suitable for recording bubbles popping and water splashing.
- 8x or 4x: suitable for recording breakdowns of fast movements, such as diving into water and a football being kicked. You can customise the overall shooting length and the length of the slow-mo portion.





For best results, shoot the slow-mo videos in bright and natural lighting.

Shoot Super Slow-Mo Videos

- 1 Go to **Camera** > **More** and select **Slow-mo** mode.
- 2 Touch , select a speed, and make sure motion detection is enabled ( should be displayed at the top of the screen).
 -  Motion detection is not available for certain slow motion speeds.
- 3 Frame your subject within the viewfinder, then touch  to start recording. When the camera detects a moving object in the viewfinder, it will auto-record a super slow-mo video.





To record a video manually, touch  to disable motion detection, then touch .

Shoot Slow-Mo Videos

- 1 Go to **Camera** > **More** and select **Slow-mo** mode.
- 2 Touch  and select 4x or 8x.
 -  The 8x option is not available on certain devices.
- 3 Touch  to start recording.
- 4 Touch  to end the recording.

Adjust the Slow-Mo Part in Slow-Mo Videos



For a slow-mo video, you can change which part of it you want to play in slow motion.

-  This feature is only available for slow-mo videos recorded at 4x or 8x. The 8x option is not available on certain devices.
- 1 Go to **Gallery** > **Albums** > **Camera** and select a slow-mo video.
 - 2 Touch  to play the video. During playback, touch the video to display the editing area.
 - 3 Drag the sliders to adjust the part you want to be played in slow motion. Other parts of the video will be played at a normal speed.
 - 4 Go to  > **Save slow-mo file** to save your edits.
 -  For the best results when sharing, share the slow-mo videos in which your edits have been saved.

Time-Lapse Photography

Use Time-Lapse to Create a Short Video



You can use Time-lapse to capture images slowly over several minutes or even hours, then condense them into a short video. This allows you to capture the beauty of change – blooming flowers, drifting clouds, and more.

- 1 Go to **Camera** > **More** and select **Time-lapse** mode.
- 2 Place your device in position. To reduce camera shake, use a tripod to steady your device.
- 3 Touch  to start recording, then touch  to end the recording. The recorded video is automatically saved to Gallery.

Dual-View Mode



Record Dual-View Videos

The Dual-view feature splits the recording screen into two views, allowing you to watch the regular view side by side with a zoomed-in view.

- 1 Go to **Camera** > **More**, then touch **Dual-view**.
- 2 Frame your subject in the viewfinder, then touch  to start recording.
The regular view and the zoomed-in view display side by side on the screen, with the zoomed-in area being the centre of the regular view. You can adjust the zoom level by pinching or spreading two fingers on the zoomed-in view.
- 3 Touch  to end the recording.

Leica Colors

Use Leica Colours




- 1 Open **Camera** and make sure the rear camera is in use.
 - 2 Touch , then select **Leica standard**, **Leica vivid**, or **Leica smooth**.
 - 3 Touch the shutter button to take a photo or start recording a video.
-  Not all camera modes support Leica colours.

Manage Gallery

Edit Photos and Videos




Gallery offers a wide range of editing features for photos and videos.

Basic Editing




- 1 Open **Gallery**, touch the thumbnail of the photo you want to edit, then touch  to access the editing features.
 - Crop and rotate: Touch **Crop**, select a frame, then drag the grid or its corners to select which part you want to keep.
To rotate the photo, touch **Crop** and drag the angle wheel to the desired orientation.
To rotate the photo by 90 degrees, touch . To mirror the photo, touch .
 - Add a filter effect: Touch **Filter** to select a filter.
 - Adjust photo effects: Touch **Adjust** to adjust the brightness, contrast, saturation, and other aspects of the photo.
 - Other: Touch **More** to edit the photo in other ways, such as by adding a colour splash, blur, doodle, or text element.

2 Touch  or  to save your edits.


Add Stickers to Photos

- 1 In Gallery, touch a photo, then go to  > **More** > **Stickers**.
- 2 Select the type of sticker you want to add, such as **Time**, **Weather**, or **Mood**.
- 3 Select a sticker and drag it to change its position. You can also edit the text of some types of stickers.
- 4 Touch  to save your edits and touch  to save the photo.

Pixelate Photos




- 1 In Gallery, touch a photo, then go to  > **More** > **Mosaic**.
- 2 Select a mosaic style and size to cover parts of the photo.
- 3 To remove the mosaic, touch **Eraser** and wipe it off the photo.
- 4 Touch  to save your edits and touch  to save the photo.

Rename Photos


- 1 In Gallery, touch the photo thumbnail you want to rename.
- 2 Go to  > **Rename** and enter a new name.
- 3 Touch **OK**.

Collage

You can use the collage feature in Gallery to quickly combine multiple photos into one for easier sharing.


- 1 You can access the collage feature in either of the following ways:
 - On the **Discover** tab, touch **Make a collage**, select the desired photos, then touch **Create**.
 - On the **Photos** or **Albums** tab, touch and hold to select desired photos, then go to  > **Collage**.
- 2 Select a template. You can then:
 - Relocate a photo: Touch and hold the photo and drag it to a different position.
 - Adjust the displayed portion of a photo: Slide on the photo, or pinch in or out on it so that only the desired part is displayed in the grid.
 - Rotate a photo: Touch the photo, then touch  to rotate it or  to flip it.

- Add or remove borders: By default, borders are displayed between photos and along the grid edges. To remove them, touch **Frame**.

- 3** Touch  to save the collage.
To view the saved collage, go to **Albums > Collages**.

View Photos and Videos

In Gallery, you can view, edit, and share your photos and videos, as well as browse the clips automatically generated from them.

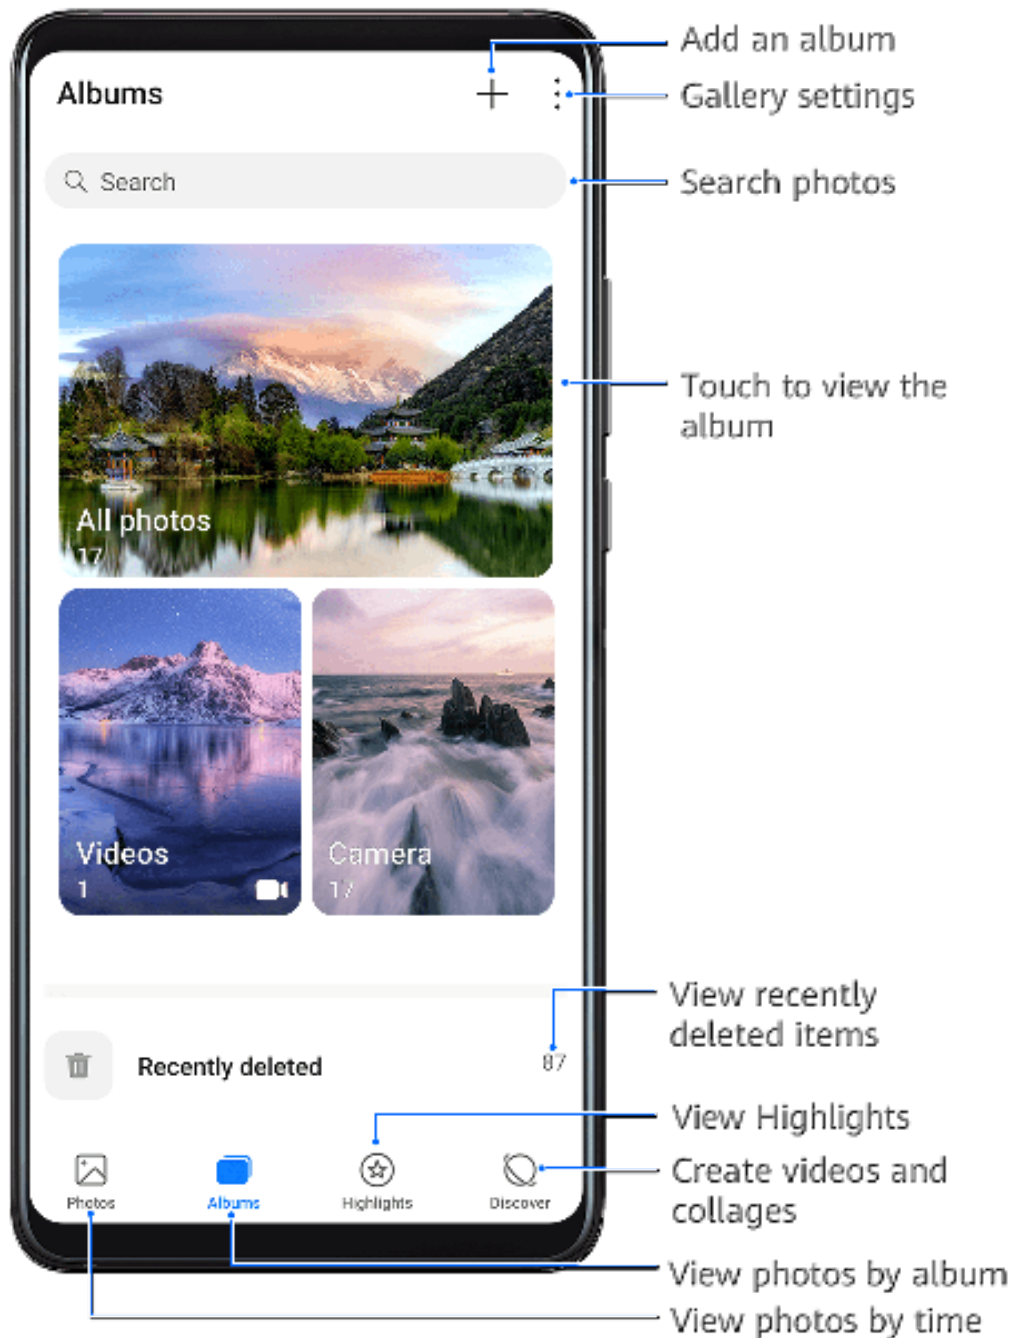

View by Shooting Time

Open **Gallery**. On the **Photos** tab, pinch in on the screen to switch to the monthly view and pinch out to switch to the daily view.

You can also drag the track ball on the edge to view the time.

View by Album

You can view photos and videos by album on the **Albums** tab.


Some photos and videos are stored in default albums. For example, videos recorded with the camera are saved in the **Camera** album. Screenshots and screen recordings are saved in the **Screenshots** album.

View by Category

Gallery intelligently sorts photos into categories, allowing you to quickly sift through large albums by category.


Touch a category album on the **Discover** tab (such as food, portrait, or scenery) to view photos in that album.


View Details About Photos and Videos

- 1 In Gallery, touch a photo or video to view it in Full screen mode. Touch the screen again to hide the menu.
- 2 When in Full screen mode, touch  to view details about the photo or video, such as the storage path, resolution, and size.

View Photos or Videos on Other Devices from Your Device

With Multi-device browsing, you can browse and search for photos and videos saved on other phones and tablets.

-  This feature is only available in some countries and regions.
 - Before using this feature, ensure that the battery level of your device is more than 10%.
- 1 Connect your device and the target device to the same router or personal hotspot, log in to the same HUAWEI ID, and enable Bluetooth on both devices. The two devices will then automatically connect to each other.
- 2 Go to **Settings > More connections > Multi-Device Collaboration** and ensure that **Multi-Device Collaboration** and **Multi-Device Gallery** (if displayed) are enabled. If your device does not have the **Multi-Device Collaboration** switch, it indicates that this feature is not supported.
- 3 After the connection is set up, the **Other devices** tab will be displayed under **Gallery > Albums**.
- 4 Touch the **Other devices** tab to view connected devices. You can:
 - Browse photos or videos on the connected devices: Touch a connected device to view the albums stored on that device.
 - Search for photos: On the **Albums** tab, enter a keyword (such as "food" or "scenery"). The search results will be displayed by device.

- Save items from other devices to your device: Touch the target device, touch and hold to select photos or videos, then touch .

The saved items are displayed in **Gallery > Albums > From other devices**.

To disable this feature, disable **Multi-Device Collaboration**.



Quickly Search for Photos in Gallery

Quickly locate a photo by searching with keywords in Gallery.

- 1 Open **Gallery**, then touch the search box at the top.
- 2 Enter a keyword (such as "food", "scenery", or "flower").
- 3 Photos related to that keyword as well as suggested keywords will be displayed. Touch a suggested keyword or enter more keywords for more precise results.

Share Photos and Videos


There are several ways to share photos and videos from **Gallery**:

- Share a single photo or video: Touch the photo or video, then touch .
- Share multiple photos or videos: In an album, touch and hold to select multiple photos and videos, then touch .



Organise Albums

Organise photos and videos into albums to easily sift through them.


Add Albums

- 1 Go to **Gallery > Albums**.
- 2 Touch , name the album, then touch **OK**.
- 3 Select the photos or videos you want to add, and then move or copy them to the album.

Sort Albums


- 1 Go to **Gallery > Albums >**  and touch **Sort albums**.
- 2 Drag  next to an album to the desired position. Touch **Reset** to reset the albums to the default order.

Move Photos and Videos

- 1 Open an album, then touch and hold to select the photos and videos you want to move.
- 2 Touch  > **Move** to select the desired album.
- 3 Once the items are moved, they will no longer be in their original album.


- i** The **All photos** and **Videos** albums show all photos and videos stored on your device. Moving items across albums will not affect the view in these albums.

Delete Photos and Videos


Touch and hold to select the items you want to delete, then go to  > **Delete**.

- i** Some preset albums, such as **All photos**, **My favourites**, **Videos**, and **Camera** albums, cannot be deleted.

Deleted photos and videos will be temporarily moved to the **Recently deleted** album before being permanently deleted after 30 days.

To permanently delete a photo or video manually, touch and hold its thumbnail in the **Recently deleted** album, then go to  > **Delete**.

Recover Deleted Photos and Videos

In the **Recently deleted** album, touch and hold to select the items you want to recover, then touch  to restore them to their original albums.

If the original album has been deleted, a new one will be created.

Add Photos and Videos to Favorites



Open a photo or video, then touch .

The item will appear in both its original album and the **My favourites** album.

Block Albums

Block third-party app albums to prevent them from being displayed in Gallery.

1 In the **Others** list, touch the album you want to block.

2 If  is displayed at the top, it indicates that the album can be blocked. Go to  > **Block**.


Blocked albums can only be viewed in **Files**.

3 To unblock an album, open the **Others** list, touch **View blocked albums**, then touch **Unblock** next to the album.

- i** Only some albums in **Others** can be blocked.

Hide Albums

- i** System albums such as **Camera**, **Videos**, **My favourites**, and **Screenshots** cannot be hidden.

From the **Albums** tab, go to  > **Hidden items** and toggle the switches on for albums that you want to hide.

Hidden albums and the photos and videos in them are hidden from view in Gallery.

Huawei Vlog Editor

Huawei Vlog Editor


The Huawei Vlog editor automatically creates Huawei Vlogs, such as Spotlight Reels, Highlights videos, and People albums, with added background music from your photos and videos.

You can also select photos and videos yourself to create your own Huawei Vlogs.


Either way, you can edit and share your Huawei Vlogs at the touch of a finger.

View Spotlight Reels

Spotlight Reel analyses your videos to create highlight clips of people and objects in them and presents them to you with background music.

- 1 Go to **Gallery > Albums > Videos**.
 - 2 Touch a video, then swipe up on the video. Touch a person's face or **Best cut** to view the created Spotlight Reel.
If a clip has not yet been generated, touch **GET STARTED** to create one.
 - 3 During playback, touch the video to edit the template, background music, filter, intro and outro, and more.
-  This feature works automatically when your device is charging and the screen is off. It only works on local videos between 10 seconds and 3 minutes long.


Share Huawei Vlogs

- 1 Go to **Gallery > Albums > Video Editor**, where you will find all your exported videos.
- 2 Touch and hold to select the videos you want to share, then touch .

Create Videos with Templates

The **Create story** feature allows you to fit multiple videos nicely into a preset template with transitions, background music, and other special effects.

- 1 Go to **Gallery > Discover** and touch **Create story**.
- 2 Touch a template to preview what it looks like, and touch **Create video** to start creating.
- 3 Follow the onscreen instructions to select multiple videos, then touch **Create**.
- 4 Your device will display the preview. You can touch **Filters** to change the filter or touch **Outro** to add an outro.

If you are unsatisfied with any of the clips, touch the clip in **Edit**, then touch  to select another clip, or touch **Replace** to select another video.

- 5 Touch  to save the video.

Huawei Vlogs


View, Edit, and Share People Album Videos

Gallery automatically creates People albums by identifying faces in photos.

View, edit, and share the videos generated in these People albums.


View People Album Videos

1 Go to **Gallery** > **Discover** and touch a People album.

2 Touch  on the album cover.

Share People Album Videos


Go to **Gallery** > **Albums** > **Video Editor**, where you will find all your exported videos.

Touch and hold to select videos you would like to share, then touch .

Highlights

Highlights

Gallery automatically creates **Highlights** albums from your best photos and videos based on time, location, and theme information, and even generates a short video clip so you can instantly relive the good times.

- To start using **Highlights**, go to **Camera** >  and enable **Location tag**.
- **Highlights** albums are created automatically when your device is charging and connected to a Wi-Fi network, the screen is turned off, and the battery is at least 50% charged. This process may take some time.



View Highlights Videos

1 Go to **Gallery** > **Highlights** and touch an album.

2 Touch  to play the video.

Change the Highlights Album Cover


1 On the **Highlights** tab, touch an album.

2 Go to  > **Change cover**, select a photo, then touch .


Share Highlights Videos

You can share Highlights videos as photos or videos.

Share Highlights Videos as Videos




- 1 Go to **Gallery** > **Albums** > **Video Editor**, where you will find all your exported videos.
- 2 Touch and hold to select the videos you want to share, then touch .

Share Highlights Videos as Photos


Touch the Highlights album you want to share, then go to  > **Share**. Follow the onscreen instructions to share the created photo.

You can also share the photo under **Gallery** > **Albums** > **Collages**, where the photos created for Highlights videos are saved by default.


Add or Remove Photos and Videos from Highlights Albums

- 1 On the **Highlights** tab, touch an album.
- 2 You can then:
 - Add photos or videos: Touch , select the items you want to add, then touch .
 - Remove photos or videos: Touch and hold to select photos or videos you want to remove, touch , then touch **Remove**.

Rename Highlights Albums

- 1 On the **Highlights** tab, touch an album.
- 2 Go to  > **Rename** and enter a new name.

Delete Highlights Albums

- 1 On the **Highlights** tab, touch an album.
- 2 Go to  > **Delete** and touch **Delete**.

Launch Camera

Launch Camera

There are multiple ways to open the Camera app.

From the Home Screen


From the home screen, open **Camera**.

From the Lock Screen

When the screen is locked, turn on the screen, then swipe up on the camera icon in the lower right corner to open the camera.

Using Ultra Snapshot

When enabled, simply double-press the Volume down button to open the camera or take a snapshot when the screen is off or locked.

- 1 Go to **Camera** >  > **Ultra Snapshot** and select **Open Camera** or **Take a snapshot**.
- 2 You can now open the camera or take a snapshot without unlocking your screen.

Light Painting



Use Light Painting to Shoot Light Trails

Light painting helps you capture light trails by allowing the shutter to stay open for a longer time. No manual aperture and shutter adjustment is involved.

Just choose from the available options depending on the subjects and light conditions. To reduce camera shake, a tripod is recommended to steady your device.



Capture Car Light Trails in Traffic Trails Mode

Traffic trails mode lets you create artistic photos of car light trails at night.

- 1 Go to **Camera** > **More** > **Light painting** and select **Traffic trails**.
- 2 Find a spot where you'll see the light trails created by cars from a distance. Ensure that car headlights do not point directly at the camera, as this can overexpose the image.
- 3 Touch  to start shooting. Look at the shot in the viewfinder.
- 4 When the exposure is just right, touch  to finish shooting.

Capture Light Drawings in Light Graffiti Mode



Light graffiti mode lets you create patterns or write words by moving a light source in front of the camera.

- 1 In **Light painting** mode, select **Light graffiti**.
- 2 In a dark environment without distracting light sources, move a suitably bright light source of an appropriate colour, such as a small torch or glow stick, in front of the camera. Avoid exaggerated body movements as this may affect the shooting results.
- 3 Touch  to start shooting. Look at the shot in the viewfinder.
- 4 When the exposure is just right, touch  to finish shooting.

Capture Rivers and Waterfalls in Silky Water Mode



Silky water mode lets you capture silky smooth photographs of waterfalls and rivers.

- 1 In **Light painting** mode, select **Silky water**.

- 2 This feature works best when taking photos of a stream or waterfall where there is a lot of flowing water.
- 3 Touch  to start shooting. Look at the shot in the viewfinder.
- 4 When the exposure is just right, touch  to finish shooting.

Capture the Beauty of the Stars in Star Trails Mode


Star trails mode lets you use your camera to capture the movement of the stars in the night sky.

- 1 In **Light painting** mode, select **Star trails**.
- 2 For best results, choose a clear night in a location without light pollution and with an unobstructed view of the sky.
- 3 Touch  to start shooting. Look at the shot in the viewfinder.
- 4 When the exposure is just right, touch  to finish shooting.

Take HDR Photos

Use HDR to Take Photos

When shooting photos with backlighting or a high light contrast, High Dynamic Range (HDR) mode can help you improve light and shadow effects in your photos, giving your photos sharper details.

- 1 Go to **Camera** > **More** and select **HDR** mode.
- 2 Steady your device.
- 3 Touch  to take a photo.


Documents Mode



Use Documents Mode to Straighten Photos

Images shot at an angle always suffer from the problem of perspective. If you aren't able to take a perfectly straight photo of a document, use Documents mode.

The camera will automatically adjust skewed images shot in Documents mode and remove shadows from them.

Shoot Photos in Documents Mode



- 1 Go to **Camera** > **More** and select **Documents** mode.
If the **Documents** option is not present in **More**, touch , then download **Documents**.

- 2 Frame the document you want to shoot within the viewfinder, then touch .
 - 3 The camera will automatically identify the text area within the viewfinder, unskew the image, and remove any shadows.
-  This feature may vary by device.

Adjust the Text Area



If you find the skew correction of a photo unsatisfactory, you can also manually adjust the text area.



This is only available for photos taken in **Documents** mode.

- 1 Go to **Gallery** > **Albums** > **Camera**, then touch the photo you wish to adjust.
- 2 Touch  above the photo.
- 3 Drag the four corners to customise the correction area. Then touch . Your device will reshape the photo as a flat, rectangular image.

Filters

Apply a Filter to Photos or Videos


- 1 Open **Camera** and select **Photo** or **Video** mode.
- 2 Touch  or  to select a filter and preview the effect.

 Some devices do not have the  icon.
- 3 Touch the shutter button to take a photo or start recording a video.

Adjust Camera Settings

Adjust Camera Settings

You can adjust the camera settings to take photos and videos more quickly.

-  The following features may not be available in some camera modes.

Adjust the Aspect Ratio

Go to **Camera** >  > **Aspect ratio** and select an aspect ratio.

-  This feature is not available in some modes.

Enable Location Tag

Enable **Location tag** to tag your location in photos and videos.

Swipe up on a photo or video in Gallery to view its shooting location.

Add Device Watermarks

Enable **Add watermark**. Photos and videos shot with the rear camera will have a device watermark added.

 Adding a device watermark to videos is not supported on certain devices.

Use the Assistive Grid to Compose Your Photos

Use the assistive grid to help you line up the perfect shot.


- 1 Enable **Assistive grid**. Grid lines will then appear in the viewfinder.
- 2 Place the subject of your photo at one of the intersecting points, then touch the shutter button.

Enable Mirror Reflection

When using the front camera, touch  to enable or disable **Mirror reflection**.

Mute the Shutter Sound

Enable **Mute** to mute the camera shutter sound.

 This feature is only available in some countries and regions.

Capture Smiles

Enable **Capture smiles**. The camera will take a photo automatically when it detects a smile in the viewfinder.

Use the Horizontal Level for Better Compositions

Enable **Horizontal level** to display a horizontal guiding line on the viewfinder.



When the dotted line overlaps with the solid line, it indicates that the camera is parallel with the horizontal level.

Smart Photo Categorisation

Smart Photo Categorisation

Gallery automatically sorts your photos into categories such as portraits, locations, and scenery, so you can quickly find what you're looking for.

Go to **Gallery > Discover** to view your photos organised into categories.

To remove a photo from an album, touch and hold to select the photo, then touch  (or  for portraits).

 Not all photos can be removed from the category albums.


View and Set People Albums

Once you have taken a sufficient number of photos, Gallery will automatically create People albums for individuals or groups by identifying faces in your photos. This will happen when your device is charging and the screen is off.

You can name these People albums and set the relationships of individuals with you.

Group photo albums require a specific number of photos containing 2 to 10 faces that have already been named in People albums.

1 Go to **Gallery > Discover** and view the generated People albums.

2 Touch an album, go to  > **Edit**, then set the name and relationship (such as **Baby** or **Mum**).

Once you have finished, you can find a People album by entering the name or relationship in the search bar.


Apps

Phone



Set a Ringtone for Incoming Calls

You can set your favourite music or a video as the ringtone for incoming calls.

If you are carrying your device in your pocket, the ringtone volume will gradually increase. This helps prevent you from missing important calls.


-  If your phone has two SIM cards installed, configure the settings for SIM 1 and SIM 2 respectively.

Set a Music Ringtone

- 1 Go to **Phone** >  > **Settings** > **Ringtone**.
Or go to **Settings** > **Sounds & vibration** > **Phone ringtone**.
- 2 Select a system ringtone, or touch **Music on device** to set a local song as the ringtone.
- 3 If you select a system ringtone, touch **Vibration** on the same screen, and select **Synchronised (default)**. When there is an incoming call, your device will vibrate with rhythm while the system ringtone is playing.
 -  Not all products support a synchronised vibration and ringtone.

Set a Video Ringtone

Set a video as the ringtone for incoming calls on your device.

- 1 Go to **Phone** >  > **Settings** > **Ringtone**.
Or go to **Settings** > **Sounds & vibration** > **Phone ringtone**.
- 2 Touch **Video ringtones** and select a video. You can then preview what it looks like for incoming calls.
- 3 Touch **Set** to set the video as the ringtone.


Set a Ringtone for a Contact

Set a different ringtone for a particular contact to distinguish more easily when that contact is calling you.

- 1 Open **Phone**, touch the **Contacts** tab, then select the contact you want to set a ringtone for.
- 2 On the contact details screen, touch **Ringtone** and select a ringtone.

Enable MeeTime

Open **Phone**, touch **MeeTime** at the bottom of the screen, and follow the onscreen instructions to activate and enable MeeTime.








-  Your linked phone number will be used by default to make and receive MeeTime calls. Other devices can confirm that you have enabled the feature by checking this number.

Charges for MeeTime

- MeeTime only uses Wi-Fi or mobile data and will not be charged as calls by your carrier. It is recommended that you use this feature over a Wi-Fi network.
- If you need to make a video call using mobile data, you can perform the following to save on the amount of mobile data you use: On the **MeeTime** screen, touch your account to access the **Settings** screen, then turn on the **Data saver** switch.


Make an HD Video or Voice Call



Once MeeTime is enabled, you can view the contacts who have enabled this feature in the **MeeTime** tab. MeeTime calls require an Internet connection.

- 1 On the **MeeTime** screen, select the contact or contact's device you wish to call, then touch  or  on the right.
- 2 During a video call, touch the screen and touch  to access the **Soften** function. Drag the slider left or right to adjust the beautification level.
 -  For better effects, keep your device within 1 metre of you and ensure that you are in a bright environment.
- 3 Touch **More**. You can then:
 - Touch  to mute the call.
 - Touch  to use the speaker.
 - Touch  to switch to a voice call.

Share Your Screen During a MeeTime Call

During a call, you can share your screen and doodle on it for both parties to convey messages with each other even more effectively. For example, show your parents how to use their phone by talking to them while operating on your phone. When discussing with your colleagues and customers over a call, you can demonstrate your idea and make notes on the screen.

During a video call, touch the screen and go to **More** >  to share your screen with the other party.



- During screen sharing, both parties can touch  in the upper part of their screen to enable or disable the doodle feature.
- During screen sharing, either party can touch  to end sharing.

Set MeeTime Phone Numbers

You can use MeeTime with more than one of your phone numbers.

1 On the **MeeTime** screen, touch your account to access the **Settings** screen.

2 Touch **Number settings**. You can then:





- Touch  to add another phone number if only one phone number has been linked.
- Touch  to delete any numbers or add new ones if multiple phone numbers have been linked.
- Select one of the added phone numbers to set it as the default number.

Manage Incoming Calls





You can use the call waiting feature to answer incoming calls when you are already engaged in a previous call. If you cannot answer a call because your device is faulty or the network signal is poor, you can also set call forwarding to forward calls to another number or device.

Answer or Reject an Incoming Call

If you receive a call when the screen is locked:


- Drag  right to answer the call.
- Drag  left to reject the call.
- Touch  to reject the call and reply with a message.
- Touch  to set a reminder for calling back.


If you receive a call when the screen is unlocked:

- Touch  to answer the call.
- Touch  to reject the call.
- Touch  to reject the call and reply with a message.
- Touch  to set a reminder for calling back.

Enable Call Waiting



The Call waiting feature lets you answer an incoming call when a call is already in progress by placing the first call on hold. This feature requires the support of your carrier. For details, contact your carrier.

Go to **Phone** >  > **Settings** and then go to **More** > **Call waiting**.

-  If your phone has two SIM cards installed, configure the settings for SIM 1 and SIM 2 respectively.



This feature may vary depending on your network provider.

Answer a New Incoming Call During a Call


- 1 When you receive an incoming call when you are already engaged in a previous call, touch  to answer it.
- 2 Touch  or touch a held call in the call list to switch between the two calls.

Enable Call Forwarding

After the Call forwarding feature is enabled, calls that meet your pre-set conditions will be automatically transferred to a specified phone number. This feature requires the support of your carrier. For details, contact your carrier.

- 1 Open **Phone**, go to  > **Settings**, and touch **Call forwarding**.
 - 2 Select and enable a forwarding method, then enter and confirm the target number.
-  If your phone has two SIM cards installed, configure the settings for SIM 1 and SIM 2 respectively.
- This feature may vary depending on your network provider.

Disable Call Forwarding

- 1 Open **Phone**, go to  > **Settings**, and touch **Call forwarding**.
- 2 Select the forwarding mode and disable it.

Make a Call

Dial a Number or Select a Contact to Make a Call


Use either of the following methods to make a call:

- Open **Phone**, enter part of a phone number, the first letter of a contact's name, or a contact's initials to find a contact, then touch to make a call.
- Open **Phone**, touch the **Contacts** tab, then search for a contact or select a contact in the contact list to make a call.

Touch  to end the call.


Use Speed Dial

Once you've set up speed dialling for a contact, you can quickly call that contact with the assigned number key.

Go to **Phone** >  > **Settings** > **Speed dial**, select a number key, then set a contact for this speed dial number.

Press the Power Button to End a Call

During a call, press the Power button to end the call.



Go to **Phone** >  > **Settings** > **More**, and enable **Power button ends call**.

Set a Call Background


To set a wallpaper as the call background, do the following:

- 1 Go to **Settings** > **Home screen & wallpaper** > **Wallpaper**.
- 2 Select a picture and set it as the wallpaper.

You can also set a profile picture for a contact to be shown on the call background.

- 1 Open **Phone**, touch the **Contacts** tab, then select a contact.
- 2 Touch  and then  to set a profile picture for the selected contact.


Make an International Call

- 1 Contact your mobile carrier to activate and inquire about the international calling service.
- 2 Open **Phone**, touch the **Contacts** tab, then select a contact to make a call.
- 3 For numbers that are not in the contacts list, open the dialler and hold the **0** number key until the **+** icon is displayed. Enter the country code and phone number, then touch  to make an international call.


Manage Call Logs

You can merge the call logs of the same contact or number for a tidier and more concise interface, or delete call logs as required.

Merge Call Logs



- 1 Go to **Phone** >  > **Settings** > **Merge call log**.
- 2 Select **By contact** and your device will automatically merge the call logs of the same number or contact.

View Missed Calls

- 1 To display all missed calls, open **Phone**, swipe down on the call log list, then touch the **Missed** tab.
All missed calls are displayed in red in the call log list for you to quickly identify them. You can also find them on the **All** screen.
- 2 Touch  next to a call log entry to call back or send a message.

Delete Call Logs


Delete call logs using any of the following methods:

- On the **Phone** screen, touch and hold an entry, then touch **Delete entry**.
- On the **Phone** screen, go to  > **Delete entries**, select the entries you want to delete, then touch **Delete**.
- On the **Phone** screen, swipe left on the entry you want to delete, then touch .

Use VoLTE to Make HD Video Calls


VoLTE (Voice over LTE) is an IP-based data transmission technology. After enabling VoLTE, it can provide you with fast call connection times and high-quality voice and video calls.

Enable VoLTE

- 1 Contact your network provider to activate the VoLTE service for your SIM card. If both the primary and secondary SIM card trays of a dual-SIM device support VoLTE, it can be enabled for both SIM cards.
- 2 If two SIM cards have been inserted, go to **Settings** > **Mobile network** > **Mobile data**. In the network settings area for SIM 1 or SIM 2, enable **VoLTE calls**.
 -  • This feature may vary depending on your network provider.
 - 5G services are only available in some countries and regions.

Make a Video Call


Video calls are only possible when both parties are using VoLTE-activated devices.

- 1 Open **Phone**, touch the **Contacts** tab at the bottom of the screen, then select the contact you want to call.
- 2 Touch  to make a video call.

During a voice call, you can touch  to switch to a video call.

Use VoWiFi for a Brand New Calling Experience

The VoWiFi function enables you to make calls on a Wi-Fi network. You can even make VoWiFi calls in Airplane mode.

- 1 This function requires support from your mobile carrier. Contact your carrier to activate the VoWiFi function.
- 2 Go to **Phone** >  > **Settings** > **Wi-Fi Calling**, then enable **Wi-Fi Calling**.

Filter and Block Spam Calls

Set different block rules to block sales, fraud, and other kinds of spam calls.

Filter Spam Calls





1 Go to **Phone** >  > **Blocked** > .

Alternatively, go to **Optimiser** > **Blocked** > .


2 Touch **Call block rules** and toggle on the switches of corresponding block rules.

Block Incoming Calls from Specific Numbers

You can block incoming calls from specific numbers using either of the following methods:

- Go to **Phone** >  > **Blocked** >  > **Blocklist**, touch , then add the phone numbers you want to block.
- Open **Phone**, touch the **Contacts** tab, touch the contact you want to block, then choose  > **Block contact**.

Set Whether to Receive Notifications for Blocked Calls

Go to **Phone** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when calls are blocked.

Manage Blocked Calls

On the Blocked screen, you can manage blocked calls, such as by calling back numbers, deleting records, or submitting appeals if a number has been incorrectly marked.

Go to **Phone** >  > **Blocked**. You can then:

- Touch a record and select **Call** to call back numbers, select **Add to trustlist** or **Add contact**, or touch **Delete** to delete call records.
- Touch **Clear** to delete blocked calls in batches.
- Touch **Block rules** to change the block rules.

Emergency SOS and Calls

Use Emergency SOS

If you are in an emergency situation, you can quickly and secretly send an SOS message or make an SOS call to your emergency contacts.

1 Go to **Settings** > **Security** > **Emergency SOS**, and touch **Emergency contacts** to add an emergency contact.

2 Enable **Also send SOS message** and **Auto-SOS call**, and set related permissions as prompted.


Once you have enabled the Emergency SOS feature and you are in an emergency situation, press the Power button five times in quick succession and your device will automatically send a message with your current location to your emergency contacts. It will also automatically


call your emergency contacts one by one and play a pre-recorded SOS message, then end the call automatically.

If **Auto-SOS call** is disabled, after the message is sent, your device will bring up the emergency call screen, from which you can quickly call an emergency service or one of your emergency contacts.

Make Emergency Calls





In the event of an emergency, you can make emergency calls directly from the lock screen of your device even if there is no signal.

 The emergency call feature is subject to local regulations and individual mobile carriers. Network issues or other types of interference may lead to emergency calls not working.

- 1 From the lock screen, access the screen for entering your password, and touch **Emergency**. If you are in an area with a good signal and your device has an Internet connection, it will automatically obtain your location and display it on the screen.
- 2 Enter your local emergency number and touch  to call the number. Alternatively, touch **Emergency information** and select an emergency contact to call.

Perform In-call Operations

During a call, an in-call menu will be displayed.


- Touch  to switch the audio channel to the speaker.
- Touch  to start another call. This feature requires the support of your carrier. For details, contact your carrier.
- Touch  to use the dialler.
- During a call, you can hide the call screen and access other apps by returning to the previous screen or home screen using the current navigation mode on your device. To return to the call screen, touch the green icon in the status bar.
- Touch  to end a call.

Use Voicemail

Divert calls to your voicemail when your device is switched off or when there is no cellular coverage. Callers can leave a voice message which you can listen to later.

This feature requires service support from your mobile carrier. Contact your mobile carrier for details.

Enable Voicemail

- 1 Go to **Phone** >  > **Settings** and touch **More**.

2 Go to **Voicemail > Voicemail number**, enter the voicemail number obtained from your network provider, and touch **OK**.

- i** If your phone has two SIM cards installed, configure the settings for SIM 1 and SIM 2 respectively.

Listen to a Voicemail Message

Touch and hold the 1 key on the dialler and then enter your voicemail number.

Compass

Compass

Compass shows you the direction your device is pointing, as well as your current coordinates and altitude.

- i** The feature availability varies by device.

1 You can open Compass using either of the following methods:

- Swipe down from the middle of the home screen to display the search box. Search for **Compass**, and the first result will be the pre-installed **Compass** app.
- Find **Compass** in the **Tools** folder.

2 To view your bearings, coordinates, and altitude:

- If you hold your device flat, the Compass screen will display a dial together with the direction your device is pointing, your current coordinates, and altitude.
- If you hold your device upright, the Compass screen will display the viewfinder of the rear camera on your device, together with the direction your device is pointing, your current coordinates, and altitude.

3 To lock your current direction, touch the compass dial. The dial marks will turn blue if you go off course.

For more accurate bearings, hold your device flat or upright when using Compass.

For more precise altitude data, touch  and enable **Online altitude calibration**.

Tips


Tips

Tips provides you with an abundance of information so you can quickly familiarise yourself with your device and make the best use of it. In **Tips**, you can also find a full set of user guides for more detailed instructions.

Introduction to **Tips** sections:

- **Collections:** Browse through the easy-to-read cards that contain a short clip or image to quickly get to grips with all the most useful features on your device. The cards are categorised so you can jump directly to a category you are interested in.
- **More Tips:** Find detailed instructions in the comprehensive user guides.
- **Me:** Configure the related settings. For example, check for updates of the **Tips** app.


Main functions provided by **Tips**:

- **Search:** Find what you are looking for by searching for it in the search bar of **Tips**. The search results will also include related topics you may want to know about.
 - **Like and dislike:** Rate the cards and give your feedback.
 - **Try out features:** A **TRY NOW** button is available in certain cards for you to try out the feature immediately.
-  The feature availability varies by device.

Apps


App Basics

Locate an Installed App


Swipe down from the middle of the home screen to show the search bar, and enter the app name. When the app is found, touch  next to its name.





Uninstall an App

You can uninstall an app using any of the following methods:

- When using the **Standard** style home screen, touch and hold the app icon on the home screen, then touch **Uninstall** and follow the instructions.
 - When using the **Drawer** style home screen, touch and hold the app icon in the drawer, then touch **Uninstall** and follow the instructions.
 - Go to **Settings > Apps > Apps**, touch the app, then touch **Uninstall**.
-  Some pre-installed system apps can't be uninstalled, as uninstalling them may cause system errors.

Manage Background Apps

- 1 Access the recent tasks screen using either of the following methods, depending on the navigation method you are using:
 - **Gestures:** Swipe up from the bottom of the screen and hold.
 - **Three-key navigation:** Touch .
- 2 On the recent tasks screen, you can:

- Swipe across to view app previews.
- Touch an app preview to access an app.
- Swipe up on an app preview to close an app.
- Swipe down on an app preview to lock it.  will appear at the top of the app preview. Touching  will not close this app.
- Swipe down again to unlock it.  will disappear.
- Touch  to close all apps (except for those you have locked).

Clear the Cache of an App

Delete app cache files to free up storage space.







Go to **Settings > Apps > Apps**, select the app for which you want to clear the cache, then go to **Storage > Clear cache**.

Notepad

Create a Note



To help you quickly keep a track of your thoughts and inspirations, you can create notes using the Handwrite (to write or draw content) and Scan document modes.

Add Content to a Note

- 1 Go to **Notepad > Notes** and touch .
- 2 Enter the title and content of the note. You can then perform the following:
 - Touch  to add a checklist.
 - Touch  to change the text style, paragraph alignment, and background.
 - Touch  to insert a picture. Touch and hold the picture, then drag it to the desired position in the note.
 - To organise your notes for easier access and viewing, touch  after finishing to add a tag for it.
- 3 Touch  to save the note.




Add a Note by Scanning Documents

- 1 Open **Notepad** and go to **Notes >  >  > Scan document**.

- 2 Align your phone camera with the picture or file you want to scan and touch  to start scanning. The scanned pages are saved in Notepad.
- 3 Go to **Extract text** > **Save** > **Save images and text** >  to save the note.

Add a Handwritten Note

You can add a handwritten note to write down thoughts and inspirations that would be difficult to convey through text.

- 1 Go to **Notepad** > **Notes** and touch .
- 2 Touch  to write or draw the content you need in the selected colour.
- 3 Touch  to save the note.



Manage Your Notepad


You can sort your Notepad items by category and put them into different folders, delete unwanted items, and share items with other people.

When viewing a list of items or an individual item in Notepad, touch the status bar at the top of the screen to quickly return to the first item or the beginning of the item you are viewing.

Use App Lock for Notepad or Lock a Note




Enable the app lock for Notepad: Go to **Settings** > **Security** > **App Lock**, enter the lock screen password or customise the app lock password as prompted, and then turn on the switch next to Notepad.



Lock a note: Open the note you need to lock in Notepad, go to  > **Add lock**, and follow the onscreen instructions. To unlock the note, go to  > **Remove lock**.

If your device supports fingerprint or face unlock, you can use fast authentication by performing the following: Go to **Notepad** >  > **Settings** > **Note lock**, then enable **Unlock with Fingerprint ID** and **Unlock with Face Recognition**.

Sort Notepad Items by Category

To sort the notes into different folders by category, you can add labels in different colours. You can sort notepad items using either of the following methods:

- On the **All notes** screen, swipe left on an item, select  or  to move this item to the top, or add a star mark to it.
- On the **All notes** or **All to-dos** screen, swipe left on an item, touch , and select a notebook for this item.




- Touch and hold a note or to-do item, select the ones you want to classify under the same category, then touch .
-  Items in an Exchange account cannot be moved.

Sync Notepad Items


Swipe down from the Exchange mail list to sync the notes and tasks from the current account to Notepad. The corresponding notes and to-do items will then be generated automatically. A folder named after the Exchange account will be automatically generated in Notepad.

Share Notepad Items

You can share Notepad items in the following ways:



- To share a single note or to-do item, open the one you want to share from the **All notes** or **All to-dos** screen, touch , and share it as prompted. Notes can be shared by touching **As image**, **As text**, **Export as document**, or **To another device**.
-  Handwritten notes cannot be exported, and other types of notes can be exported into TXT or HTML files. You can search for saved notes in **Files**.
- To share multiple notes, access the **All notes** screen, touch and hold a note, and select the ones you want to share. Then touch  and share them as prompted.


Print Notepad Items

- 1 On the **All notes** screen, open the item you want to print.
- 2 Go to  > **Print**, then select a printer and configure printing settings as prompted.

Delete Notepad Items

You can delete Notepad items using either of the following methods:

- On the **All notes** or **All to-dos** screen, swipe left on an item, and touch  to delete it.
- Touch and hold a note or to-do item you want to delete, select or drag over the check boxes of any other notes or to-do items you want to delete as well, then touch .






To restore a deleted Notepad item, touch **All notes** or **All to-dos**, select the item you want to restore in **Recently deleted**, then touch .

Mirror

Use Your Device as a Mirror

You can use your device as a mirror to check how you look.

Go to **Tools > Mirror**. You can then:

- Zoom in or out: Drag the zoom slider at the bottom. You can also touch the screen twice to zoom in and touch it twice again to restore the original view.
- Save the image: Touch the screen to pause on the current image. Touch the screen again to resume. When the image is paused, touch  to save the image. You can find the saved image in **Gallery**.
- Adjust mirror brightness: Touch  or  at the top of the screen.
- Fog up the screen: Touch  and enable **Blow**. Then blow air into the microphone so that the screen fogs up. Wipe the screen to clear the fog.
- Change the mirror frame: Touch  to switch to a different frame.
- Create a broken mirror effect: Touch and hold the screen to "break" the mirror, complete with a sound effect. Touch the screen again to "fix" the mirror.

App Twin

Enable App Twin

App Twin enables you to log in to two WhatsApp or Facebook accounts simultaneously, allowing you to keep your work and private life separate.

 **App Twin** is only supported by some apps.



Go to **Settings > Apps > App Twin**, and enable **App Twin**. The twin app will then be displayed on the home screen.

Contacts


Create and Edit Contact Information

You can create contacts in multiple ways, as well as view and manage your contacts list.




Create Contacts

- 1 Open **Phone**, touch the **Contacts** tab, and touch .
If you are creating a contact for the first time, touch **Create new contact** to start adding a contact.
- 2 Set a profile picture for the contact, enter information such as the name, organisation, and phone number of the contact, then touch .

Import Contacts

- 1 On the **Contacts** screen, go to  > **Settings** > **Import/Export**.
- 2 Select **Import via Bluetooth**, **Import via Wi-Fi Direct**, or **Import from storage**, then follow the onscreen instructions to import contacts.


Scan Business Cards to Add Contacts

- 1 On the **Contacts** screen, go to  > **Scan** or go to **Business cards** > **Scan**.
- 2 Place a business card on a flat surface, adjust the camera so that the contents on the business card are clearly displayed in the viewfinder, then touch  to capture a single or multiple business cards in a row.
- 3 After the photos are taken, your device will automatically identify the contact information. Touch  to save the contact.


You can view the scanned business cards in **Business cards**.

Scan a QR Code to Add a Contact


If a QR code contains contact information, you can scan the QR code to quickly add a contact.

- 1 On the **Contacts** screen, go to  > **Scan** or go to **Business cards** > **Scan**.
- 2 Take a photo of a QR code or select a photo of a QR card from Gallery, and contact information contained in the QR code can be identified and added.

Merge Duplicate Contacts


- 1 On the **Contacts** screen, go to  > **Settings** > **Organise contacts** > **Merge duplicate contacts**.
- 2 Select duplicate contacts you want to merge and touch **Merge**.

Search for Contacts

- 1 Open **Contacts**, go to  > **Settings** > **Display preferences**, and touch **All contacts** to display all your contacts. Ensure that the corresponding icon at the bottom is enabled.
- 2 Search for contacts using either of the following methods:
 - Swipe down from the middle of the home screen and enter a keyword for the contact you want to find in the search box (such as their name, initials, or email address). You can also enter multiple keywords, such as "John London", to quickly find matching contacts.
 - On the top of the **Contacts** screen, enter keywords for the contact you want to find in the search box.


Share Contacts

1 On the **Contacts** screen:

- Touch and hold the contact you want to share, then touch **Share contact**.
- Touch the contact you want to share, then go to  > **Share contact**.

2 Select a sharing method, then follow the onscreen instructions to share the contact.

Export Contacts




1 On the **Contacts** screen, go to  > **Settings** > **Import/Export**.



2 Touch **Export to storage** and follow the onscreen instructions to export contacts.

The contacts will be exported into **.vcf** files. You can search for and view these **.vcf** files in **Files**.

Delete Contacts

Delete contacts using either of the following methods:

- Touch and hold the contact you want to delete, then touch **Delete**.
- Touch the contact you want to delete, then go to  > **Delete contact**.
- On the **Contacts** screen, go to  > **Settings** > **Organise contacts** > **Delete multiple contacts**, select the contacts you want to delete, then touch .


To restore deleted contacts, go to  > **Settings** > **Organise contacts** > **Recently deleted**, touch and hold the contact you want to restore, select any other contacts you also want to restore, then touch .


Manage Contact Groups

You can conveniently send emails or messages to multiple contacts by creating and managing contact groups. Your device automatically groups contacts by company, city, and last contact time, but you can also create new groups based on your preferences.



Create a Contact Group

1 Open **Phone**, touch the **Contacts** tab, and touch **Groups**.

2 Touch , enter the group name, such as "Family" or "Friends", then touch **OK**.



3 Follow the onscreen instructions to add contacts to the group, then touch .

Edit a Contact Group

- 1 On the **Groups** screen, select the group you want to edit and touch  to add a new contact.
- 2 Touch  for **Remove members**, **Group ringtone**, **Delete group**, or **Rename**.



Send Group Messages or Emails

On the **Groups** screen, open a group. You can then:

- Touch  to send a group message.
- Touch  to send a group email.

Delete Contact Groups


On the **Groups** screen, do either of the following to delete a contact group from your device:

- Touch and hold the group and select **Delete**.
- Touch , select the groups you want to delete, and touch .


Create Personal Information

You can create a business card containing your personal information to share with others. You can also add personal emergency information so you can call for help quickly in an emergency.

Create a Personal Business Card


- 1 Open **Phone**, touch the **Contacts** tab, and touch **My card**.
- 2 Set your profile picture and enter personal information, such as your name, work address, and phone number.
- 3 Touch  to automatically create a QR code business card. You can share your business card using the QR code.

Add Emergency Information

- 1 From the **Contacts** screen, go to **My card** > **Emergency information**.
- 2 Touch  and set your personal, medical, and emergency contact information. Once you have added emergency contacts and you find yourself in an emergency, access the lock screen for inputting your password, go to **Emergency** > **Emergency information** > **Emergency contacts**, and select an emergency contact to make a call.

Erase Contact Traces

- 1 Open **Phone**, touch the **Contacts** tab, then touch a contact to erase your contact traces.




- Go to  > **Erase history** > **Erase** to delete all call and message records for that contact.

Messaging

Filter and Block Spam Messages

Set different block rules, such as your blocklist, to block sales, fraud, and other kinds of spam messages.




Block Spam Messages

- Go to **Messaging** >  > **Blocked** > .
Alternatively, go to **Optimiser** > **Blocked** > .
- Touch **Message block rules** and enable **Block unknown numbers**. Your device will then block all messages from unknown numbers.

Block Messages from Specific Numbers

- Go to **Messaging** >  > **Blocked** >  > **Blocklist**.
- Touch  and add the numbers you want to block. SMS and MMS messages sent by these numbers will all be blocked.

Block Messages Containing Specific Keywords


- Go to **Messaging** >  > **Blocked** >  > **Keyword blocklist**.
- Touch  and add the keywords to be filtered. All messages containing these keywords will be blocked.

Set Whether to Receive Notifications for Blocked Messages

Go to **Messaging** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when messages are blocked.

Manage Blocked Messages

On the Blocked screen, you can manage blocked message, such as by deleting records, restoring messages, or submitting appeals if a number has been incorrectly marked.

- Go to **Messaging** >  > **Blocked**. You can then:
- Touch a record and select **Restore to messages** to restore this message to the Messaging app. Touch **Add to trustlist** to add the number corresponding to this message to the trustlist. Touch **Delete** to delete the message record.
 - Touch **Clear** to delete blocked messages in batches.



- Touch **Block rules** to change the block rules.

Calendar

Use Events

Events help you schedule activities in your daily and work life, such as attending company meetings, arranging social get-togethers, and making credit card repayments. You can add events and set reminders to help you arrange your schedule in advance.


Add an Event

- 1 Open **Calendar** and touch .
- 2 Enter the details of the event, such as the title, location, and start and end times.
- 3 Touch **Add reminder** to set a time for the event reminder.
- 4 When you are finished, touch .

Search for an Event



- 1 On the **Calendar** screen, touch .
- 2 Enter keywords of your event in the search box, such as the title and location.

Share an Event

- 1 Open **Calendar**, then touch an event on a calendar screen or under the schedule tab.
- 2 Touch  to share the event however you prefer when prompted.

Delete an Event

You can delete an event using either of the following methods:

- On the **Calendar** screen, touch the event you want to delete, then touch .
- On the **Schedule** screen, touch and hold an event, select the events you want to delete, then touch .

Set a Calendar Notification


Set the calendar notification type according to your requirements. You can set status bar notifications, banner notifications, and ringtone notifications. After setting the default reminder time, your device will send a notification at the specified time.

Go to **Calendar** >  > **Settings**.

- Touch **Default reminder time** or **Reminder time for all-day events** to set a reminder time.
- Touch **Notifications** and enable **Allow notifications**. Then follow the onscreen instructions to set a notification type.


Customise Calendar View Settings

You can customise calendar view settings, such as by specifying the start day of the week, and whether to show week numbers.

- 1 Go to **Calendar** >  > **Settings**.
- 2 Select the start day of the week, or enable the switch to show week numbers.


Set Alternate Calendars

You can switch to other calendars, such as the Chinese lunar calendar or the Islamic calendar.

Go to **Calendar** >  > **Settings** > **Alternate calendars**, and select a calendar you want to use.

View National/Regional Holidays

View national/regional holidays in the calendar to help plan your trip.



- 1 Go to **Calendar** >  > **Settings** > **National/Regional holidays**.
- 2 Turn on the switch of a country/region, and your device will automatically download holiday information for that country/region and display it in Calendar.

Clock

Set Alarms

You can set alarms to play a sound or vibrate at specific times.

Set an Alarm

- 1 Go to **Clock** > **Alarm** and touch  to add an alarm.
- 2 Set the alarm sound, vibration pattern, repeat cycle, and other settings as needed.
- 3 When you are finished, touch .

Modify or Delete an Alarm

Touch an existing alarm to modify or delete it.

Snooze an Alarm

If you don't want to get up when an alarm rings, simply touch the snooze button or press the Power button.

The snooze length is set when creating the alarm.



Turn Off an Alarm

When an alarm rings, swipe left or right on the button that appears at the bottom of the screen to turn it off.

Use the Timer or Stopwatch

You can use the timer to count down from a specified time. You can also use the stopwatch to measure the duration of an event.

Timer


Go to **Clock** > **Timer**, set the duration of time, and touch  to start the timer. To stop it, touch .

Stopwatch

Go to **Clock** > **Stopwatch**, and touch  to start the stopwatch. To stop it, touch .

View the Time in Cities Worldwide


Use **Clock** to see the local time in different time zones around the world.

Go to **Clock** > **World clock**, touch , and enter the name of a city or select one from the list of cities.

Display Dual Clocks on the Lock Screen




When you are away from your home time zone, use **Dual clocks** to display the time of both your home city and current location on the lock screen.

Go to **Settings** > **System & updates** > **Date & time**, enable **Dual clocks**, and set a **Home city**. The time of your home city and current location will now both display on the lock screen.

-  Only one clock will display on the lock screen if your current location is in the same time zone as your home city.

Recorder




Recording

- 1 In the **Tools** folder, open **Recorder**, and touch  to start a recording.
 - 2 During a recording, you can touch  to add a tag.
 - 3 When you are finished, touch  to stop recording.
 - 4 You can also touch and hold a recording, then share, rename, or delete it.
- Recordings are saved under **Files** > **Categories** > **Internal storage** > **Sounds**.



Play a Recording

Recording files are listed on the **Recorder** home screen. Touch a recording to play it.


On the recording playback screen, you can:

- Touch  to skip the muted parts.
- Touch  to adjust the playback speed.
- Touch  to add a tag.
- Touch a tag to rename it.

Edit a Recording

- 1 On the **Recorder** home screen, touch a recording.
- 2 Touch  to display the waveform of the recording.
- 3 Drag the start and end bars to adjust the clip length. Pinch your fingers on the waveform to zoom in or out to adjust the clip length more precisely.
- 4 Touch  and select **Keep selected part** or **Delete selected part**.

Share Recordings

- 1 On the **Recorder** home screen, touch the recording you want to share.
- 2 Go to  > **Share**.
- 3 Select your preferred sharing method and follow the onscreen instructions to share the recording.

Email

Add Email Accounts

Add your email account in **Email** to start using your device for convenient email access.

Add a Personal Email Account

- 1 Open **Email** on your device, then select from the available mailbox providers or touch **Other**.
- 2 Enter your email address and password, touch **Sign in**, and follow the onscreen instructions to complete configuration. The system will automatically connect to the server and check the server settings.

Add an Exchange Account





Microsoft Exchange enables digital messaging within a company. If your company mailbox uses the Exchange server, you can log in to your company email account on your device.

- 1 Contact the administrator of the company email server to obtain the domain name, server address, port number, and security type.
- 2 Open **Email** and select **Exchange**.
- 3 Enter the email address, user name, and password.
- 4 Touch **Manual setup**. On the **Account setup** screen, enter the email domain name, server address, port number, and security type.
- 5 Touch **Next**, then follow the onscreen instructions to complete configuration. The system will automatically connect to the server and check the server settings.


Use Emails

Select an email account, then write an email and send it to the recipient's email addresses.

Send Emails

- 1 Open **Email** and touch .
- 2 Enter the recipient's email address, or touch  to select a contact or group, then touch .
- 3 Add the addresses of any recipients to whom you wish to CC or BCC the email. If you have more than one email account, you will also need to select the email address you wish to send the email from.
- 4 Write the email, enter the subject, then touch .




Save an Email as a Draft

On the **Compose** screen, enter the recipient's email address, subject, or email content, and touch  to save the email as a draft.

To view draft emails, go to **Inbox > Show all folders > Drafts**.



Reply to an Email

- 1 On the **Inbox** screen, open the email you wish to reply to.


- 2 Touch  to reply to the email sender, or touch  to reply to everyone in the thread.
- 3 After writing your reply, touch .

Set Encryption for Outgoing Emails

You can encrypt outgoing emails to protect your confidential information. Encrypted emails can only be viewed by recipients who have the required digital certificates, thereby ensuring information security.


- 1 Apply for and install a digital certificate.
 -  You need to apply for a digital certificate from a trusted third-party certificate authority (CA) before installing it. The processing procedure varies between different CAs. For details, refer to the relevant CA website.
- 2 From the **Inbox** screen, go to  > **Settings**.
- 3 Touch the account you want to set encryption for, touch **Email encryption**, then enable **Encrypt outgoing emails**.
- 4 If the certificate has been installed, select **Encryption certificate** and set **Encryption algorithm** according to your preferences.
If no certificate has been installed, enable **Send encrypted emails without installing certificates**.

Set Automatic Replies for an Exchange Account

- 1 Go to **Email** >  > **Settings**.
- 2 Select the Exchange account you want to set automatic replies for, touch **Automatic replies**, and turn on the **Automatic replies** switch.
- 3 Set the time or content of the automatic reply, then touch **Done**.

Set Email Notifications

Set a notification mode for your emails as needed.

- 1 Go to **Email** >  > **Settings** > **General** > **Notifications**, and enable **Allow notifications**.
- 2 Select the email account you want to set notifications for, turn on the **Allow notifications** switch, then select a notification mode.


View and Manage Emails

Receive, view, and manage your emails in the inbox.

View Emails

- 1 Open **Email**, then swipe down on the **Inbox** screen to refresh the email list.
If you have multiple email accounts, touch **Inbox** and select the email account you want to view.

2 Open an email, then view, reply to, forward, or delete the email.

If you are notified about an important event in an email, go to  > **Add to calendar** to import the event into your calendar.

3 Swipe left or right on the email screen to view the previous or next email.

Organise Emails by Subject


On the **Inbox** screen, go to  > **Settings** > **General**, and enable **Organise by subject**.

Add an Email Contact to a Group

You can create email groups to communicate more efficiently.

1 On the **Inbox** screen, open an email, and touch **Add to group**.

2 Choose to add the email sender or recipient to the group, and touch **OK**.


3 On the group selection screen, select an existing group, then touch  to save the contact in the group.

Alternatively, touch **Create group**, enter the group name, then touch **Save**.

Once you have created a group, you can select the group from the recipient drop-down list to send emails to group members.

Sync Emails Automatically

After automatic email syncing is enabled, the emails on your device will be automatically synced with those on the email server.

1 From the **Inbox** screen, go to  > **Settings**.


2 Touch the account you wish to sync emails for, then turn on the **Sync Email** switch.

3 Touch **Sync frequency** to set the automatic syncing period.

Search for Emails

On the **Inbox** screen, touch the search box, then enter keywords such as the subject or content of the email.


Delete Emails

On the **Inbox** screen, touch and hold the email you want to delete, touch any other emails you want to delete as well, then touch .

Manage Multiple Email Accounts

You can add and manage multiple email accounts.

Add Multiple Email Accounts


1 Go to **Email** >  > **Settings** > **Add account**.

- 2 Select an existing email service provider or touch **Other**, then follow the onscreen instructions to add an email account. Repeat for each of the accounts you wish to add.


Switch Between Email Accounts

On the **Inbox** screen, touch **Inbox** and select the email account you wish to use.

Change Account Name and Signature

On the **Inbox** screen, go to  > **Settings**, select an account, and set the corresponding **Account name**, **Signature**, and **Default account**.

Log Out of an Email Account


On the **Inbox** screen, go to  > **Settings**, select an account, and touch **Remove account**.

Manage VIP Contacts




Important email contacts can be added as VIP contacts. Emails from VIP contacts will be automatically stored in the VIP inbox.

Add a VIP Contact

You can add VIP contacts using either of the following methods:

- Go to **Email** >  > **Settings** > **VIP contacts**. On the **VIP list** screen, choose **Add** > **Create**, or touch **Add from contacts**.
- Open an email, touch a contact's profile picture, then touch **Add to VIP list**.

Delete a VIP Contact

- 1 Go to **Email** >  > **Settings** > **VIP contacts**.
- 2 On the **VIP list** screen, touch .
- 3 Select the VIP contact you want to delete, then touch .

Calculator

Calculator


Use the calculator on your device to perform basic mathematical calculations and for calculating exponential, logarithmic, and trigonometric functions.

Use the Basic Calculator


You can open the calculator using either of the following methods:

- Swipe down from the middle of the home screen to display the search box. Search for **Calculator**, and the first result will be the preinstalled **Calculator** app.





- Find **Calculator** in the **Tools** folder.

- Swipe up from the bottom of the lock screen to display the shortcut panel, then touch  to open the calculator.

Use the Scientific Calculator

Open the calculator and go to  > **Scientific**.



Copy, Delete, or Clear Numbers


- Copy a calculation result: Touch and hold the calculation result, touch **Copy**, then paste the result somewhere else, such as in a note or message.
- Delete the last digit: Touch .
- Clear the display: Touch . You can also touch  to clear the display after touching  to complete the calculation.

Torch

Torch

You can turn on the torch using either of the following methods:

- Swipe down from the status bar to open the notification panel, and touch  to turn the torch on or off.
- Swipe up from the bottom edge of the lock screen to display the shortcut panel, and touch  to turn the torch on or off.

When turned on, a notification indicating that the torch has been turned on will be displayed on the lock screen. Touch  to turn off the torch.

Optimizer

Clean Up Device Storage

You can use **Cleanup** in **Optimiser** to scan for redundant or large files, such as app residue, unwanted installation packages, WeChat data, and more. Once detected, you can choose whether or not to delete files as suggested.

- 1 Open **Optimiser**, then touch **Cleanup**.
- 2 When the scan is complete, touch **Clean up** after each item and delete any files you don't need.

Automatically Clean Up System Trash

- 1 Open **Optimiser**, and touch **Cleanup**.
- 2 Swipe down from the top of the screen, and your device will automatically clean up system trash.

Manually Clean Up System Trash

In addition to automatic cleanup, your device will also detect and recommend trash files for you to clean up manually.

On the **Cleanup** screen, touch **Clean up** next to a category, select the items you want to clean up, then touch **DELETE** .

Clean Up Duplicate Files

Optimiser can identify duplicate files on your device.

On the **Cleanup** screen, touch **Duplicate files** , then select unwanted files to delete them.

Manage Data Usage

Open **Optimiser**, then touch **Data usage** to view data usage and manage network access.

View and Manage High Data Consumption Apps


- 1 You can find out how much data your apps are using in comparison to each other by going to **Data usage this month** on the Data usage screen.
- 2 Touch a high data consumption app to set mobile data, roaming data, or background data usage limits for it.

View and Set the Network Access Permission of an App

On the Data usage screen, touch **Network access**, then change the settings for apps that consume a large amount of data (such as video streaming apps) so they can only be used when you are connected to a Wi-Fi network.

Enable or Disable Smart Data Saver

Enable Smart data saver to prevent apps from using mobile data in the background.

- 1 On the Data usage screen, touch **Smart Data Saver**, then enable it. The  icon will then display on the status bar.
- 2 If you want to allow unrestricted access to data for some apps even when they are running in the background, toggle on the switches for these apps.

Add Mobile Data Usage Reminders

Add data plans for your SIM cards and usage reminders in **Optimiser** to keep you informed of your data consumption.

- 1 On the **Data usage** screen, go to **More data settings** > **Monthly data limit** and follow the onscreen instructions to add a data plan.

- 2 On the **More data settings** screen, touch **Usage reminders**. From there, you can set whether a notification will be sent or if mobile data will be disabled once the monthly data limit or roaming data limit has been topped.
- 3 On the **More data settings** screen, you can set whether to **Show data used when the screen is locked**.

Filter and Block Spam Calls

Set different block rules to block sales, fraud, and other kinds of spam calls.

Filter Spam Calls





- 1 Go to **Phone** >  > **Blocked** > .

Alternatively, go to **Optimiser** > **Blocked** > .

- 2 Touch **Call block rules** and toggle on the switches of corresponding block rules.

Block Incoming Calls from Specific Numbers

You can block incoming calls from specific numbers using either of the following methods:

- Go to **Phone** >  > **Blocked** >  > **Blocklist**, touch , then add the phone numbers you want to block.
- Open **Phone**, touch the **Contacts** tab, touch the contact you want to block, then choose  > **Block contact**.

Set Whether to Receive Notifications for Blocked Calls

Go to **Phone** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when calls are blocked.

Manage Blocked Calls

On the Blocked screen, you can manage blocked calls, such as by calling back numbers, deleting records, or submitting appeals if a number has been incorrectly marked.



Go to **Phone** >  > **Blocked**. You can then:

- Touch a record and select **Call** to call back numbers, select **Add to trustlist** or **Add contact**, or touch **Delete** to delete call records.
- Touch **Clear** to delete blocked calls in batches.
- Touch **Block rules** to change the block rules.

Filter and Block Spam Messages

Set different block rules, such as your blocklist, to block sales, fraud, and other kinds of spam messages.



Block Spam Messages


1 Go to **Messaging** >  > **Blocked** > .

Alternatively, go to **Optimiser** > **Blocked** > .

2 Touch **Message block rules** and enable **Block unknown numbers**. Your device will then block all messages from unknown numbers.

Block Messages from Specific Numbers

1 Go to **Messaging** >  > **Blocked** >  > **Blocklist**.

2 Touch  and add the numbers you want to block. SMS and MMS messages sent by these numbers will all be blocked.

Block Messages Containing Specific Keywords

1 Go to **Messaging** >  > **Blocked** >  > **Keyword blocklist**.


2 Touch  and add the keywords to be filtered. All messages containing these keywords will be blocked.

Set Whether to Receive Notifications for Blocked Messages

Go to **Messaging** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when messages are blocked.

Manage Blocked Messages

On the Blocked screen, you can manage blocked message, such as by deleting records, restoring messages, or submitting appeals if a number has been incorrectly marked.

Go to **Messaging** >  > **Blocked**. You can then:

- Touch a record and select **Restore to messages** to restore this message to the Messaging app. Touch **Add to trustlist** to add the number corresponding to this message to the trustlist. Touch **Delete** to delete the message record.
- Touch **Clear** to delete blocked messages in batches.
- Touch **Block rules** to change the block rules.

One-Touch Optimisation

Use the **OPTIMISE** feature of **Optimiser** to keep your device in an optimal state.

1 Open **Optimiser**, and touch **OPTIMISE**.

2 Wait until **Optimiser** finishes checking your device and provides you with the optimisation results.


Phone Clone

Use Phone Clone to Move Data to Your New Device

Phone Clone lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.


Migrate Data from an Android Device

- 1 On your new device, open the **Phone Clone** app. Alternatively, go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, then touch **Huawei** or **Other Android**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open the **Phone Clone** app and touch **This is the old device**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then touch **Transfer** to start cloning.

 **Phone Clone** is only available on devices running Android 7.0 or later.

Migrate Data from an iPhone or iPad

- 1 On your new device, open the **Phone Clone** app. Alternatively, go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, then touch **iPhone/iPad**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open the **Phone Clone** app and touch **This is the old device**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.

 **Phone Clone** is only available on devices running iOS 8.0 or later.

HiSuite

Introduction to HiSuite

Huawei **HiSuite** is a PC-based tool used for managing Huawei smart devices (including phones and tablets).

With Huawei **HiSuite**, you can use a computer to manage the data of your device, such as contacts, messages, images, videos, and apps. You can also use this tool to back up or restore data, or update your device to the latest version.

- 1 Visit the official Huawei website on your computer, search for **HiSuite**, then download and install the latest version.

- 2 Use a USB cable to connect your device to your computer. When the **Use USB to** dialog box is displayed on your device, select **Transfer files**.
- 3 On the computer, open Huawei **HiSuite** and select **USB**. Then follow the onscreen instructions to establish a connection between your device and computer.


Back Up and Restore Data Using HiSuite

After installing **HiSuite** on your computer and connecting your computer with your device, you can use **HiSuite** to back up data (such as contacts, messages, call logs, photos, videos, audio files, and documents) from your device to your computer. You can also restore data on your device from your computer.

Back Up Data to a Computer

- 1 Open **HiSuite** on your computer, and click **Back Up** on its home screen.
- 2 Select the items you want to back up.
- 3 Click **Back Up**, follow the onscreen instructions to set the password and password hint, and confirm the settings.
Backup data won't be able to be restored if you forget the password.
- 4 **HiSuite** will then back up the data you selected. Keep the USB cable connected when the data is being backed up.
- 5 Click **Done** when all data has been backed up.

By default, the backup data is saved under **C:\Users\User name\Documents\HiSuite\backup**

on the computer. To change the backup directory on the computer, go to  > **Settings** > **Back Up**.

Restore Data


- 1 On the **HiSuite** home page, click **Restore**.
- 2 Click **Backup Files**, select the items you want to restore to your device, then click **Restore**.
- 3 Enter the password for the backup data and click **OK**.
- 4 **HiSuite** will then restore the items you have selected. Keep the USB cable connected when the data is being restored.
- 5 Click **Done** when all data has been restored successfully.

Settings

Mobile Data

Share Your Network Connection with Other Devices

Share Your Network via Personal Hotspot


-  The settings items vary by device. If your device does not provide a specific item, it indicates that the corresponding feature is not supported.
- Some Wi-Fi networks that require authentication cannot be shared.

Go to **Settings > Mobile network > Personal hotspot**, and enable **Personal hotspot**. The mobile data of your device will then be shared with other devices.

You can also perform the following for the personal hotspot:

- Set **Device name**.
- Set **Password**.
- Touch **Connected devices** to view the connected devices list and blocklist. Touch a device in the **Connected devices** list to move it to the **Blocklist** as prompted. You can also remove a device from the **Blocklist**.
- Touch **More** to set **Data limit** and **AP band**.

Share Your Network via Bluetooth

- Go to **Settings > Bluetooth**, and enable **Bluetooth**. Select a device, then follow the onscreen instructions to complete pairing.
- Go to **Settings > Mobile network > Personal hotspot > More**, and enable **Bluetooth tethering**.
- On the **Bluetooth** settings screen of the paired device, touch  next to the name of your device, then enable **Internet access** to share your network.

Share Your Network via USB

- Use a USB cable to connect your device to your computer.
- On your device, go to **Settings > Mobile network > Personal hotspot > More**, and enable **USB tethering** to share your mobile data or the currently connected Wi-Fi network.

Connect to Mobile Data

- Make sure that mobile data is available on your SIM card.
- Connect to mobile data using either of the following methods:

- Swipe down from the status bar to open the notification panel, then swipe down again to show all shortcuts. Turn on **Mobile data**.
- Go to **Settings > Mobile network > Mobile data**, and enable **Mobile data**.

To save battery power and mobile data, disable the mobile data service when you don't need it.

Manage SIM Cards

You can enable or disable SIM cards and name them for easier identification.

Enable or Disable a SIM Card

Go to **Settings > Mobile network > SIM management**, and enable or disable a SIM as needed.

Once disabled, a SIM card cannot be used for calling, messaging, or accessing the Internet.


Name Your SIM Card

You can name your SIM cards for easier identification and management. For example, you could mark one SIM card as "Work" and the other as "Personal".

Go to **Settings > Mobile network > SIM management**, and touch  to edit the SIM card name.

Configure Dual SIM Settings

If your device has two SIM cards inserted, you can set the default mobile data SIM and the default calling SIM, and enable call forwarding between the two SIM cards.


 This feature applies to dual-SIM devices only.

Set the Default Mobile Data and Default Calling SIM Cards

Go to **Settings > Mobile network > SIM management** and set SIM 1 or SIM 2 as the default mobile data or default calling SIM card.

Enable Call Forwarding Between SIM Cards



After enabling call forwarding for both SIM cards, if incoming calls cannot reach one of the SIM cards, they will be forwarded to the other one.

 This feature requires the support of your carrier. For details, contact your carrier.

- 1 Go to **Settings > Mobile network > SIM management > Call forwarding between SIMs**.
- 2 Select a call forwarding mode and turn on the corresponding switch.
Call forwarding between two SIM cards will be enabled when it is configured for both SIM cards.


Quickly Switch the Default Mobile Data SIM

If two SIM cards have been installed on your device, you can use a shortcut to quickly switch the default mobile data SIM card.

- 1 Swipe down from the status bar to open the notification panel, then swipe down again to show all shortcuts. Turn on **Mobile data**.
 - 2 Touch the text under  until a prompt is displayed, then select a SIM card and touch **OK**.
-  When the prompt is displayed, touch **Settings** to access the **SIM management** screen.

Enable Data Roaming

Once you have activated the international roaming service, you can enable this feature to use mobile data when travelling abroad.

-  . This feature requires the support of your carrier. For details, contact your carrier.
 - Charges may apply when using the international roaming service. For details about how data roaming fees are charged, contact your carrier.


Go to **Settings > Mobile network > Mobile data**, and enable **Data roaming**.

If your phone has two SIM cards installed, configure the settings for SIM 1 and SIM 2 respectively.

Use VoLTE to Make HD Video Calls


VoLTE (Voice over LTE) is an IP-based data transmission technology. After enabling VoLTE, it can provide you with fast call connection times and high-quality voice and video calls.


Enable VoLTE

- 1 Contact your network provider to activate the VoLTE service for your SIM card. If both the primary and secondary SIM card trays of a dual-SIM device support VoLTE, it can be enabled for both SIM cards.
 - 2 If two SIM cards have been inserted, go to **Settings > Mobile network > Mobile data**. In the network settings area for SIM 1 or SIM 2, enable **VoLTE calls**.
-  . This feature may vary depending on your network provider.
- 5G services are only available in some countries and regions.

Make a Video Call

Video calls are only possible when both parties are using VoLTE-activated devices.

- 1 Open **Phone**, touch the **Contacts** tab at the bottom of the screen, then select the contact you want to call.
- 2 Touch  to make a video call.

During a voice call, you can touch  to switch to a video call.

Manage Data Usage

Open **Optimiser**, then touch **Data usage** to view data usage and manage network access.

View and Manage High Data Consumption Apps


- 1 You can find out how much data your apps are using in comparison to each other by going to **Data usage this month** on the Data usage screen.
- 2 Touch a high data consumption app to set mobile data, roaming data, or background data usage limits for it.

View and Set the Network Access Permission of an App

On the Data usage screen, touch **Network access**, then change the settings for apps that consume a large amount of data (such as video streaming apps) so they can only be used when you are connected to a Wi-Fi network.

Enable or Disable Smart Data Saver

Enable Smart data saver to prevent apps from using mobile data in the background.

- 1 On the Data usage screen, touch **Smart Data Saver**, then enable it. The  icon will then display on the status bar.
- 2 If you want to allow unrestricted access to data for some apps even when they are running in the background, toggle on the switches for these apps.

Add Mobile Data Usage Reminders

Add data plans for your SIM cards and usage reminders in **Optimiser** to keep you informed of your data consumption.


- 1 On the **Data usage** screen, go to **More data settings** > **Monthly data limit** and follow the onscreen instructions to add a data plan.
- 2 On the **More data settings** screen, touch **Usage reminders**. From there, you can set whether a notification will be sent or if mobile data will be disabled once the monthly data limit or roaming data limit has been topped.
- 3 On the **More data settings** screen, you can set whether to **Show data used when the screen is locked**.

More Connections


Enable or Disable Airplane Mode

When taking a flight, you can enable Airplane mode if required to do so by the airline. In Airplane mode, your device will not be able to make calls, send or receive SMS messages, or use mobile data, but all other functions will be available.

You can enable or disable Airplane mode using either of the following methods:



- Swipe down from the status bar to open the notification panel, then swipe down again to display all shortcuts. Touch  to enable or disable **Airplane mode**.
- Go to **Settings > Mobile network**, and enable or disable **Airplane mode**.

When Airplane mode is enabled, Wi-Fi and Bluetooth will automatically be disabled. You can re-enable them if allowed to do so by the airline.

-  Please make sure your device has been updated to the latest system version. This feature may vary by device.


Project Your Device Screen Wirelessly

For security reasons, after projecting your phone screen wirelessly to a large display (such as a TV) for work or entertainment, notifications such as incoming call notifications, SMS messages, and clock alarms will only be displayed on your phone.

- 1 Perform the following based on the model and functions of the large display:
 - **If the large display supports Miracast**, turn on its wireless projection switch.
 - **If the large display does not support Miracast**, connect a wireless HDMI adapter to it. Ensure that the wireless HDMI adapter is connected to a power supply.
 -  To check whether the large display supports Miracast and how to enable wireless projection on it, consult the user guide or customer service of the large display manufacturer.
- 2 On your device, swipe down from the status bar to open the notification panel, and turn on .
- 3 Swipe down again to show all shortcuts and enable **Wireless Projection**. Your device will start searching for available display devices. You can also go to **Settings > More connections > Easy Projection** and enable **Wireless Projection**.
- 4 In the device list, touch the name corresponding to the large display or wireless HDMI adapter to complete the projection connection.

After the connection is set up, you can place your phone in landscape mode for a better display. Incoming call notifications, messages, and clock alarms are only displayed on your

phone. To change the settings, touch  and disable **Hide notifications**.

To exit wireless projection, go to  > **Disconnect**.

Device Projection Using a Wired Connection

You can project your device screen on a large display (for example, a TV) using a wired connection.

It is recommended that you purchase the accessories from authorised channels.

Projection Using a Type-C Cable

- 1 Prepare a Type-C cable.
Use a Type-C to HDMI, Type-C to DP, or Type-C to MiniDP cable depending on your large display.



- 2 Connect the Type-C end to your device and the other end to the large display.



- 3 On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

Projection Using a Docking Station

You can use a docking station to connect your device with a large display, and connect them with a wired keyboard and mouse.

- 1 Prepare a docking station.
Multiple types of ports are available on a docking station. If the large display supports HDMI and you need to use a wired mouse and keyboard, use a docking station with at least one HDMI port and two USB ports.



- 2 Connect your device and the large display to the docking station, then connect the wired mouse and keyboard to the docking station.



- 3 On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

Introduction to NFC

Near Field Communication (NFC) is a short-range wireless communications technology that allows mobile and other electronic devices to connect in countless ways, allowing you to transfer data and make mobile payments easily.

- Not all devices support NFC.
 - Enable **Read and write/P2P** on the NFC settings screen if available. This feature may vary depending on your network provider.


Enable or Disable NFC

You can enable or disable NFC as follows:

- Swipe down from the status bar to open the notification panel, swipe down further to show all shortcut switches, then enable or disable **NFC**. You can touch and hold **NFC** to access the settings screen.
- Go to **Settings > More connections > NFC**, then enable or disable **NFC**.

Share Data Using Huawei Beam

You can hold the NFC sensors of two Huawei devices against each other to quickly transfer data between them, without the need to pair the devices.

- 1 Go to **Settings > More connections** and enable **NFC** and **Huawei Beam** on the devices of both the sender and recipient.
- 2 On the device that is sending data, touch and hold a file, select the files you want to share, touch , and select **Huawei Beam**.
 - These steps may be different if you are sharing files directly from an app.
- 3 Keep the two devices unlocked and the screens turned on, then hold the NFC sensors (located around the rear camera) of the two devices against each other until a sound is heard and the sharing screen shrinks, which indicates that the connection was successful and the files have started transferring.
 - Once the transfer has started, you can separate the two devices slightly, but keep them within 10 cm of each other.

Make Quick Payments with NFC

If you have installed a payment app (such as Alipay or WeChat) on your device and enabled the payment service, you can make payments with NFC.

- 1 Open **NFC** and access the **NFC** settings screen, then select an app as the **Default app**.
- 2 Enable NFC payments in the payment app.
- 3 Hold the NFC sensor (located near the rear camera) of your device against the NFC sensor of a POS terminal to bring up the payment screen automatically. Complete the payment with a password or fingerprint.

Huawei Share

Huawei Share is a wireless sharing technology that allows you to quickly transfer images, videos, documents, and other types of files between devices. This technology uses Bluetooth to discover nearby devices that supports Huawei Share and Wi-Fi Direct to transfer files without using mobile data.


Enable or Disable Huawei Share



You can enable or disable Huawei Share in either of the following ways:

- Swipe down from the status bar to open the notification panel, swipe down on it again to show all shortcuts, then turn on or turn off **Huawei Share**. You can also touch and hold **Huawei Share** to access its settings screen.
- Go to **Settings > More connections > Huawei Share** to enable or disable **Huawei Share**.

Quickly Share Files Between Devices with Huawei Share

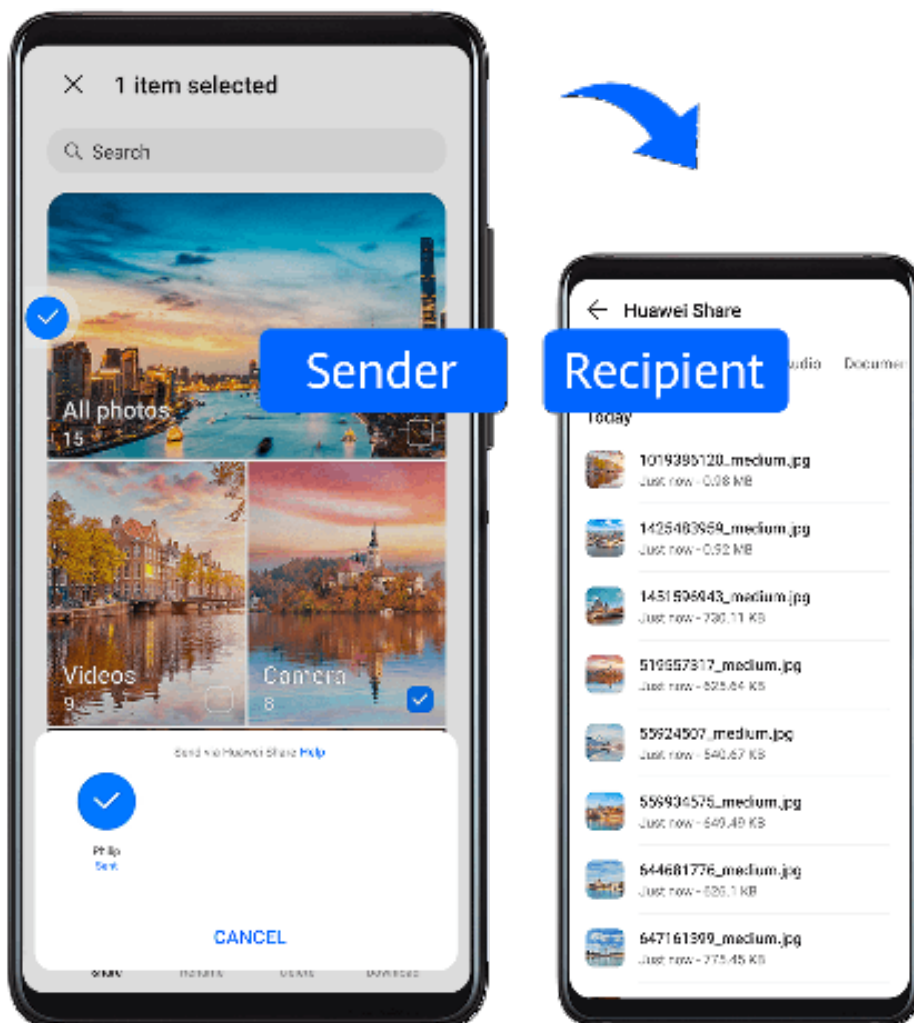You can use Huawei Share to quickly share files between Huawei devices. The recipient can preview the files before they are sent, then view the full content of the files once they have been received. For example, the recipient can view received pictures or videos in Gallery.




- 1 On the receiving device, enable **Huawei Share**.
- 2 On the sending device, touch and hold to select a file or album you want to share, then touch . Touch **Huawei Share**, then touch the icon of the receiving device to send the file.
 -  These steps may be different if you are sharing files directly from an app.
- 3 On the receiving device, touch **Accept** to accept the transfer.


To view the received files, open **Files**, touch the **Categories** tab, then go to **Internal storage** > **Huawei Share**.

You can also view the received images or videos by going to **Gallery** > **Albums** > **Huawei Share**.

Share Files Between Your Device and Computer with Huawei Share

You can use Huawei Share to easily share files wirelessly between your device and a computer (Windows or macOS).

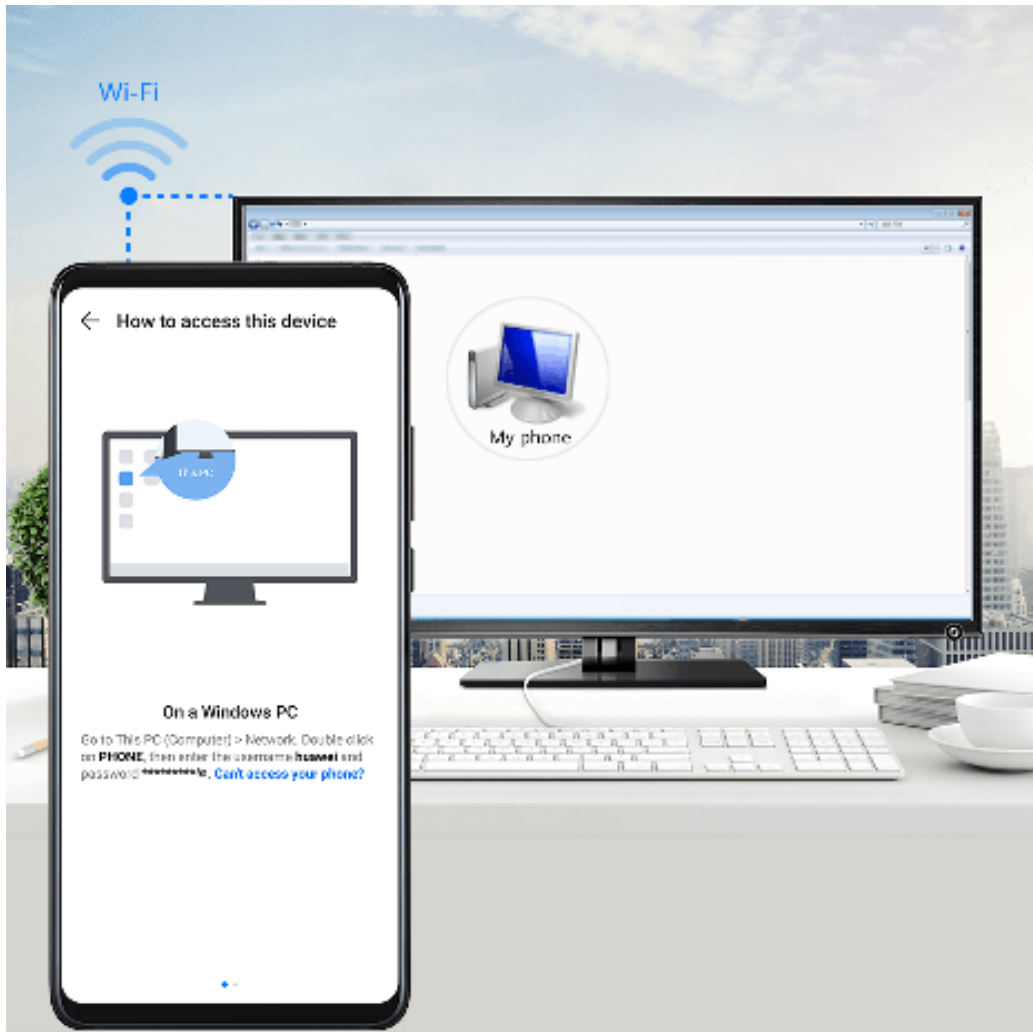

- 1 Make sure your device and computer are connected to the same Wi-Fi network.
 - 2 On your device, enter the **Huawei Share** settings and enable **Huawei Share** and **Computer Share**.
 - 3 Make a note of the name displayed next to **Name shown on computers**, as well as the user name and password under **Verification**.
 - 4 Perform the following operations on a Windows-based computer (desktop or laptop) or a macOS-based computer (laptop):
 - Windows: Go to **This PC (Computer)** > **Network** on the computer.
 - macOS: Go to **Finder** > **Go to** > **Network** on the computer.
-  Currently, this feature is only available on Macs running macOS 10.8 to 10.14.


- 5 On your computer, double-click the name of your device and enter the user name and password previously noted down.
- 6 Open a shared folder on your device, such as the Internal storage or Album folder to view, edit, or copy files from your device to your computer or vice versa. Changes made to files in the shared folders on your computer will be automatically synced to your device and vice versa.

One-Touch Printing with Huawei Share


When a printer that supports Huawei Share is nearby, you can use Huawei Share to find the printer and print out pictures or PDF files stored on your device.



- 1 Depending on the type of printer, ensure the following:
 - Wi-Fi capable printers: The printer must be powered on and connected to the same network as your device.
 - WiFi Direct capable printers: The printer must be powered on and have enabled WiFi Direct.
 - Bluetooth capable printers: The printer must be powered on and discoverable via Bluetooth.
- 2 On your device, preview the file to be printed, then go to **Share > Huawei Share**.

- 3 Once the printer has been discovered, touch its name on your device, and adjust the settings on the preview screen. Then touch **PRINT** to print.
If you are connecting a Bluetooth printer to your device for the first time, find the printer on your device, touch the printer name, then press and hold the Power button on the printer for about 1 second to confirm the connection.
-  For a list of supported printers, touch **Help** on the Huawei Share sharing screen, select **Printers**, then touch **What printers are supported?**.

Transfer Data Between Your Device and Computer with a USB Cable

- 1 Connect your device to a computer with a USB cable.
After the driver is automatically installed on the computer, the drive name corresponding to your device will be displayed when you touch **This PC (Computer)**.
- 2 On your device, swipe down from the status bar to open the notification panel, swipe down further to show all shortcut switches, go to **Touch for more options**, and select a USB connection mode to transfer data.
 - Touch **Transfer photos** and open the drive corresponding to your device on your computer. You can then view and copy pictures from your device to your computer. You can also copy pictures from your computer to your device.
 - Touch **Transfer files** and open the drive corresponding to your device on your computer. You can then view and copy audio clips, videos, and documents from your device to your computer. You can also copy and paste these files from the computer to your device.
 -  Install Windows Media Player 11 or later on your computer to view media files on your device.
 - Touch **Input MIDI** to use your device as the audio input device of the Musical Instrument Digital Interface (MIDI) and play music on your computer.

Print Images and Documents

Connect your device to a Mopria-certified printer via Wi-Fi, and then you will be able to print images and documents from your device.

Connect Your Device to a Printer

- 1 Check the printer manual or consult with its manufacturer to verify that it is Mopria-certified.
If it is not, consult with its manufacturer to install the corresponding app or plug-in for it on your device.
- 2 Connect your device and the printer to the same Wi-Fi network using any of the following methods:
 - Connect to a Wi-Fi router: Enable Wi-Fi on the printer and connect it to the Wi-Fi router. On your device, go to **Settings > Wi-Fi**, enable **Wi-Fi**, touch the same Wi-Fi router, and follow the onscreen instructions to complete the settings.

- Connect with Wi-Fi Direct: If your printer supports Wi-Fi Direct, follow the instructions in the printer manual to enable this feature. On your device, go to **Settings** > **Wi-Fi**, enable **Wi-Fi**, go to **More settings** > **Wi-Fi Direct**, then touch the printer to establish the connection.
 - Connect to your printer's hotspot: If your printer can double as a wireless hotspot, follow the instructions in the printer manual to enable the hotspot and set a password. On your device, go to **Settings** > **Wi-Fi**, enable **Wi-Fi**, touch the printer's hotspot, then follow the onscreen instructions to complete the settings.
- 3** Go to **Settings** > **More connections** > **Printing** > **Default Print Service**, and enable **Default Print Service**.
 - 4** Select the printer from the search results and follow the onscreen instructions to add the printer.

Print Files

To print files in **Gallery** and **Notepad**, do the following:

- Print an image: Open **Gallery**. Open the image you want to print, go to **More** > **Print or export to PDF**, select the printer, then follow the onscreen instructions to complete the printing.
- Print a note: Open **Notepad**. Open the note you want to print, touch **More** > **Print**, then follow the onscreen instructions to complete the printing.

Connect to a VPN Network

A virtual private network (VPN) is a temporary connection that extends a private network across a public network, encrypting data transmission to provide security.

When working outside the office, you can use a VPN to securely access your company's Intranet.

The following types of servers are supported:

- PPTP: It stands for Point-to-Point Tunneling Protocol, offering MPPE encryption.
- L2TP: It stands for Layer 2 (Data Link Layer) Tunneling Protocol, offering IPSec PSK and IPSec RSA encryption.
- IPSec Xauth: Offering PSK, RSA, and Hybrid RSA encryption.

Connect to a PPTP Server

- 1** Obtain the required data such as the VPN server name and address from your VPN server administrator.
- 2** Go to **Settings** > **More connections** > **VPN** > **Add VPN network**, enter the VPN name, set the server type to **PPTP**, then enter the server address.
- 3** If the VPN server does not have a DNS address, touch **Show advanced options** and enter the DNS domain, DNS server address, and forwarding route.
- 4** Touch **Save**.

- 5 Touch the VPN you have just set up, enter your VPN user name and password, then touch **Connect**.

Connect to an L2TP/IPSec PSK Server

- 1 Obtain the VPN server name, server address, L2TP key (optional), IPsec identifier (optional), and IPsec pre-shared key from your VPN server administrator.
- 2 Go to **Settings > More connections > VPN > Add VPN network**, enter the VPN name, set the server type to **L2TP/IPSec PSK**, then enter the server address, L2TP key, IPsec identifier, and IPsec pre-shared key.
- 3 If the VPN server does not have a DNS address, touch **Show advanced options** and enter the DNS domain, DNS server address, and forwarding route.
- 4 Touch **Save**.
- 5 Touch the VPN you have just set up, enter your VPN user name and password, then touch **Connect**.

Display & Brightness

Adjust the Screen Brightness, Colour Mode, and Colour Temperature

You can set the screen brightness, colour mode, and colour temperature according to your preferences.



Automatically Adjust the Screen Brightness

Go to **Settings > Display & brightness**, and enable **Automatic**.

Your device will automatically adjust the screen brightness according to the ambient lighting conditions.

Manually Adjust the Screen Brightness

You can manually adjust the screen brightness using either of the following methods:

- Swipe down from the status bar to open the notification panel. In the  section, drag the slider to adjust the screen brightness.
- Go to **Settings > Display & brightness**. In the  section, drag the slider to adjust the screen brightness.

Adjust the Colour Mode

Go to **Settings > Display & brightness > Colour mode & temperature**, and select the colour mode that you prefer. **Normal** mode will be easier on your eyes and is therefore recommended.

- **Normal**: natural colour tones
- **Vivid**: vivid colour tones

Adjust the Colour Temperature

Go to **Settings > Display & brightness > Colour mode & temperature**, and select the colour temperature that you prefer. **Default** and **Warm** will be easier on your eyes and are therefore recommended.

- **Default:** a natural tint
- **Warm:** a yellowish tint
- **Cool:** a whitish tint
- You can touch anywhere on the colour circle or drag the spot to adjust the colour temperature.

Automatically Switch Between Portrait and Landscape Orientation

Your device is able to automatically switch your screen display orientation, with the help of the built-in Swing Gesture Sensor (to detect your face orientation) and gravity sensor.

For example:

- When you need to switch your device between portrait and landscape orientation when it is placed on a surface, just rotate your device.
- When you are using your device while lying down, the screen will not change its display orientation when you change your lying posture.

Swipe down from the status bar to open the notification panel, then swipe down on it again

to show all shortcuts. Touch  to enable the Auto-rotate feature.

Introduction to GPU Turbo

GPU Turbo represents a radical redesign of the graphics processing framework of the device at its most basic level, integrating hardware and software to achieve accelerated graphics processing. It improves the device's graphics processing efficiency, image quality, and performance, whilst simultaneously reducing system power consumption.

The end result is a great improvement in user experience when playing graphically intense games.

Enable Dark Mode

You can enable Dark mode to apply a darker colour scheme, which helps prevent excessive screen light from irritating your eyes and saves battery power.

Go to **Settings > Display & brightness > Dark mode**, and follow the onscreen instructions to set the related configurations, such as when you would like this feature to take effect.

 The feature availability varies by device.

Adjust Text Style Settings

You can adjust the system text size and app display size, as well as the text style.

Enlarge or Reduce Text Size

Go to **Settings > Display & brightness > Text and display size**, and drag the slider for **Text size**.

Enlarge or Reduce Display Size

Display size determines the size of content (including text and images) displayed within apps.

Go to **Settings > Display & brightness > Text and display size**, and drag the slider for **Display size**.

Use Smart Screen Resolution

Go to **Settings > Display & brightness > Screen resolution**, and enable **Smart Resolution**. Your device will automatically adjust the screen resolution according to the current running status.

Set the Screen Resolution

Go to **Settings > Display & brightness > Screen resolution**, and select a screen resolution according to your preferences. A higher screen resolution will result in a clearer display, but will consume more power.

Full Screen Display

Apply Full Screen Display

- Most apps installed on your device will automatically adapt to display correctly in full screen.
- For apps that don't, go to **Settings > Display & brightness > More display settings > Full-Screen Display**, and toggle on their switches. Enabling **Full-Screen Display** may cause some apps to display incorrectly, for instance, by being improperly stretched.

Show the Notch

- 1** Go to **Settings > Display & brightness > More display settings > Cutout**, and select **Default**.
- 2** If you want to show or hide the notch for a specific app, touch **Custom**, select the app, then select one of the following options:
 - **Auto**
 - **Show cutout**
 - **Hide cutout**

Hide the Notch

Go to **Settings > Display & brightness > More display settings > Cutout**, and select **Hide cutout**.

Display Carrier Name and Network Speed in the Status Bar


You can check the carrier name and network speed with a single glance at the status bar. Go to **Settings > Display & brightness > More display settings**, and enable or disable **Display carrier name** and **Display network speed** according to your preferences.

Sounds & Vibration



Set a Ringtone for Incoming Calls

You can set your favourite music or a video as the ringtone for incoming calls.

If you are carrying your device in your pocket, the ringtone volume will gradually increase. This helps prevent you from missing important calls.


-  If your phone has two SIM cards installed, configure the settings for SIM 1 and SIM 2 respectively.

Set a Music Ringtone

- 1** Go to **Phone** >  > **Settings** > **Ringtone**.
Or go to **Settings** > **Sounds & vibration** > **Phone ringtone**.
- 2** Select a system ringtone, or touch **Music on device** to set a local song as the ringtone.
- 3** If you select a system ringtone, touch **Vibration** on the same screen, and select **Synchronised (default)**. When there is an incoming call, your device will vibrate with rhythm while the system ringtone is playing.
 Not all products support a synchronised vibration and ringtone.

Set a Video Ringtone

Set a video as the ringtone for incoming calls on your device.

- 1** Go to **Phone** >  > **Settings** > **Ringtone**.
Or go to **Settings** > **Sounds & vibration** > **Phone ringtone**.
- 2** Touch **Video ringtones** and select a video. You can then preview what it looks like for incoming calls.
- 3** Touch **Set** to set the video as the ringtone.


Set a Ringtone for a Contact

Set a different ringtone for a particular contact to distinguish more easily when that contact is calling you.

- 1** Open **Phone**, touch the **Contacts** tab, then select the contact you want to set a ringtone for.
- 2** On the contact details screen, touch **Ringtone** and select a ringtone.

Set a Notification Tone for a Specific App

You can set a notification tone for certain apps by doing the following:

- 1 Go to **Settings > Apps > Apps**.
 - 2 Select an app (for example, **Notepad**).
 - 3 Go to **Notifications > To-do notifications > Notification sound**.
 - 4 You can then:
 - Set a tone.
Select a preset tone, or touch **Music on device** to select a locally saved song.
 - Set a vibration pattern.
Touch **Vibration** and select your preferred type of vibration.
When **Synchronised (default)** is selected, your phone will vibrate according to the rhythm of the tone.
For other options, the vibration pattern of your phone is fixed.
-  The feature availability varies by device.

Enable Dolby Atmos

Dolby Atmos intelligently identifies audio content and automatically adjusts the audio quality to bring you an immersive surround sound experience.

Go to **Settings > Sounds & vibration > Dolby Atmos** and select an option.

Dolby Atmos will be enabled when the speaker is enabled on your device.


Set Do Not Disturb Mode

Do Not Disturb helps you prevent interruptions when you need to focus. When this mode is enabled, calls and messages will be muted and banner notifications will not be displayed.

Enable or Disable Do Not Disturb

You can enable or disable Do Not Disturb using either of the following methods:

- Swipe down from the status bar to open the notification panel, swipe down on it again to show all shortcuts, then turn on or turn off **Do Not Disturb**. You can touch and hold **Do Not Disturb** to access the settings screen.
- Go to **Settings > Sounds & vibration > Do Not Disturb**, and enable or disable **Do Not Disturb**.

Once Do Not Disturb has been enabled,  will display in the status bar. To check for notifications, go to the lock screen or swipe down from the status bar to open the

notification panel. Swipe left on a notification and touch  to delay the notification.

When receiving incoming calls, notifications, and messages, your device will be muted and will not automatically turn on its screen or display banner notifications.

Set a Schedule for Do Not Disturb

- 1 Go to **Settings > Sounds & vibration > Do Not Disturb**, and disable **Do Not Disturb**.
- 2 Enable **Scheduled**. Your device will enter Do not disturb mode at the specified time on Saturdays and Sundays by default.
- 3 Touch **Scheduled** to set the time frame and repeat cycle.
- 4 You can also touch **Add** to set multiple start times.

Make Exceptions in Do Not Disturb Mode

While in **Do Not Disturb** mode, you can enable your device to ring for calls and messages from certain sources so you don't miss anything important.

Go to **Settings > Sounds & vibration > Do Not Disturb**, and enable **Do Not Disturb** or **Scheduled**. Then you can:

- Touch **Calls** or **Messages** and select one of the options. If you set an exception, your device will ring for calls or messages from the selected source.
- Once **Repeated calls** is enabled, a second call from the same number within 15 minutes will not be silenced.

Biometrics & Password

Set Fingerprints

You can enrol a fingerprint and then use it to unlock the screen and access your Safe, App lock, and more.

Enrol an In-Screen Fingerprint

- 1 Go to **Settings > Biometrics & password > Fingerprint ID**, and follow the instructions to set or enter the lock screen password.
- 2 Touch **New fingerprint** to begin enrolling your fingerprint.
- 3 Place your fingertip on the in-screen fingerprint sensor. When you feel a vibration, lift your finger then press again. Move your finger around to enrol different parts of it.
- 4 When the enrolment has been completed, touch **OK**.

When the screen is locked, lift your device and the in-screen fingerprint sensor will appear. You can now place your finger on the fingerprint sensor to unlock the screen.

Rename or Delete a Fingerprint

- 1 Go to **Settings > Biometrics & password > Fingerprint ID** and enter your lock screen password.
- 2 In the **Fingerprint list** section, touch an enrolled fingerprint to rename or delete it.

Identify a Fingerprint


Fingerprint identification allows you to match your fingers with the enrolled fingerprints.

- 1 Go to **Settings > Biometrics & password > Fingerprint ID** and enter your lock screen password.
- 2 In the **Fingerprint list** section, touch **Identify fingerprint**.
- 3 Touch the fingerprint sensor with your finger. The recognised fingerprint will be highlighted.

Use Your Fingerprint to Access Your Safe

- 1 Go to **Settings > Biometrics & password > Fingerprint ID** and enter your lock screen password.
- 2 Turn on the switch for **Access Safe** and follow the onscreen instructions to link your fingerprint with the Safe.

Now you can go to **Files > Me**, touch **Safe**, then use your fingerprint to access it.

 Please make sure your device has been updated to the latest system version.

Use Your Fingerprint to Access a Locked App

- 1 Go to **Settings > Biometrics & password > Fingerprint ID** and enter your lock screen password.
- 2 Turn on the switch for **Access App Lock** and follow the onscreen instructions to link your fingerprint with App lock.

You can now touch a locked app on your home screen and use your fingerprint to access it.

Enable and Use Fingerprint Payment


You can use your fingerprint to verify your payments in a payment app.

Go to the payment app and follow the onscreen instructions to enable this feature.

Face Recognition

Face Recognition allows you to unlock your device or access locked apps with your facial data.

Enrol Facial Data

- 1 Go to **Settings > Biometrics & password > Face Recognition**, and enter your lock screen password.
- 2 Select **Enable raise to wake**.
 -  The settings items vary by device. If your device does not provide a specific item, it indicates that the corresponding feature is not supported.
- 3 Touch **Get started** and follow the onscreen instructions to enrol your facial data.


Set an Alternate Look

You can add an alternate look for more accurate and convenient face recognition.

On the **Face Recognition** screen, touch **Set an alternate look**, and follow the onscreen instructions to enrol the alternate facial data.

Enable Face Unlock

On the **Face Recognition** screen, touch **Unlock device**, and select an unlock method.

-  If you have enabled PrivateSpace on or added multiple users to your phone, you can use Face unlock only in MainSpace or with the Owner account.

Access App Lock with Face Recognition

On the **Face Recognition** screen, enable **Access App Lock**, and follow the onscreen instructions to add your facial data to App lock.

You can then touch a locked app on your home screen and use face recognition to access the app.

Disable or Delete Facial Data

On the **Face Recognition** screen, you can do the following:

- Disable facial data for certain features: Disable **Unlock device**, or **Access App Lock** as required. This will not delete your facial data.
- Delete facial data: Touch **Delete facial data** and follow the onscreen instructions to delete your facial data.

Enable Lockdown

There are many ways your device can be unlocked. In some cases (such as if you are asleep while taking public transport), password unlock is more secure than other unlock methods. When Lockdown mode is enabled, you will only be able to unlock your device using your lock screen password. Other unlock methods will be temporarily disabled.

You must set a lock screen password to use this feature.

- 1** Go to **Settings > Biometrics & password > Secure lock settings**, and enable **Show Lockdown option**.
- 2** Press and hold the Power button until the **Lockdown** option is displayed on the screen.
- 3** Touch **Lockdown** and follow the onscreen instructions to enable Lockdown mode. Once Lockdown mode is enabled, your device can only be unlocked using the lock screen password.
- 4** Lockdown mode is automatically disabled when you unlock your device. You can use other unlock methods as usual the next time you unlock your device. If you need to re-enable Lockdown mode, press and hold the Power button and touch the **Lockdown** option again.

Lock Screen Password

You can set a numeric, pattern, or hybrid password as your lock screen password.

Set the Lock Screen Password

You can set a numeric, pattern, or hybrid password.

- 1 Go to **Settings > Biometrics & password** and touch **Lock screen password**.
- 2 Enter a password containing 6 digits.
- 3 Alternatively, touch **Change unlock method** and select a password type, then follow the onscreen instructions to input a new password.

Change the Lock Screen Password

- 1 On the **Biometrics & password** screen, go to **Change lock screen password**.
- 2 Enter the original lock screen password.
- 3 Enter a new password, or touch **Change unlock method** to select a password type, then follow the onscreen instructions to input a new password.

Disable Lock Screen Password

On the **Biometrics & password** screen, go to **Disable lock screen password**.

Security


Use App Lock to Protect Your Privacy

You can lock apps containing private data, such as chat and payment apps, to prevent unauthorised access.

Enable App Lock

Go to **Settings > Security > App Lock > Enable**, then follow the onscreen instructions to set the App Lock password and select the apps to lock.

If you have enabled face or fingerprint unlock, you can link App Lock with a face ID or fingerprint ID as prompted.

 This feature may vary by device.


Change the App Lock Password or Security Questions

Enter the **App Lock** settings screen, go to  **> Password type**, and select **Lock screen password** or **Custom PIN** as the App Lock password.

If you select **Custom PIN**, you can go on to set a new password and security questions.

Cancel or Disable App Lock

On the **App Lock** settings screen, do the following:


- **Cancel App Lock:** On the locked app list, toggle off the switches beside the apps for which you want to cancel the lock.
- **Reset App Lock:** Go to  > **Disable App Lock** > **DISABLE**. This will cancel all locks, and clear all app lock settings.

Encrypt Content on the Memory Card

You can encrypt files stored on the memory card. Encrypted files can only be viewed and used on your device.

- 1** Insert a memory card into your device and ensure that the memory card has sufficient storage space.
- 2** Go to **Settings** > **Security** > **More settings** > **Encryption and credentials**.
- 3** Touch **Encrypt memory card** and follow the onscreen instructions to encrypt the memory card.
During the encryption, do not restart your device or forcibly remove the memory card. Otherwise, the encryption may fail or data may be lost.

To decrypt a memory card, touch **Decrypt memory card** and follow the onscreen instructions to decrypt files on the memory card. Formatting a memory card can also decrypt the memory card, but will erase all data on the memory card.

-  Encrypting and decrypting the memory card will not be supported if you are not logged in as the Owner.

Device Safe Mode

Safe mode uses a simplified operating system with only basic functions and pre-installed apps available. It can be used to locate third-party apps causing system failures.

Safe Mode Functions

After installing certain third-party apps, your device may fail to work properly. In this case, you can enter Safe mode to check whether the problem has been caused by a third-party app or by the system itself.

- If the system is running properly in Safe mode, the issue is likely caused by a third-party app. In Safe mode, go to **Settings** > **Apps** > **Apps**, find the third-party app in question, and uninstall it after switching back to the normal mode.
- If the system runs abnormally in Safe mode, then the system is faulty. Back up your data and take your device and proof of purchase to an authorised Huawei Customer Service Centre for assistance.


Enter and Exit Safe Mode

- **Enter Safe mode:** During the startup process, press and hold the Power and Volume up buttons simultaneously until the selection screen is displayed. Press the Volume button to select **Safe mode** and press the Power button to enter Safe mode. In Safe mode, **Safe mode** is displayed in the lower left corner.

- Exit **Safe mode**: Restart your device to exit.

Use the Password Vault to Automatically Fill in the Password

Password Vault saves your usernames and passwords and autofills them for you each time you log in to an app. This data is hardware encrypted and stored only on your device. Huawei does not have access to it, and will not upload it to the network or server.

-  Before using Password Vault, set a lock screen password for your device.
 - Password Vault is only compatible with certain apps.

Log In Faster with Password Vault

- 1** When you log in to an app for the first time, your device will automatically prompt you to save the password. Touch **SAVE** when prompted.
If you accidentally touch **Never save**, you can still enable the autofill feature for this app by going to **Settings > Security > Password Vault > Autofill settings**, and toggling on the switch next to this app. When the switch is toggled off, the autofill feature will be disabled.
- 2** If you log out of the app, the next time you log in, your device will autofill the username and password once you have verified your identity with your lock screen password, fingerprint, or face ID.

When you switch to a new Huawei device, you can use **Phone Clone** to transfer data in Password Vault to your new device.

View or Delete Stored Usernames and Passwords

You can view or delete the usernames and passwords stored in Password Vault at any time.

Go to **Settings > Security > Password Vault > ACCOUNTS** to view or delete the stored usernames and passwords.

Disable Password Vault

Password Vault is enabled by default, but can be disabled if required.

Go to **Settings > Security > Password Vault**, and disable **Password Vault**.

Set a SIM PIN Lock

A PIN is the identity code of a SIM card, and can be set as the SIM card lock. After you set it up, you will be required to enter the correct PIN to unlock the SIM card every time you power on your device or switch to a new device to prevent unauthorised access.

If you have entered a wrong PIN and exceeded the maximum number of attempts allowed to unlock the PIN, you will need to enter the PIN Unlocking Key (PUK) then reset the PIN. If you exceed the maximum number of attempts allowed to unlock the PUK, your SIM card will be permanently blocked.





The PIN and PUK of your SIM card are provided by your network provider. The number of digits and maximum number of attempts allowed to unlock your PIN and PUK are subject to your network provider.

- 1 Go to **Settings > Security > More settings** to enter the SIM lock settings screen.
- 2 Enable **Lock SIM card**, enter the PIN, then touch **OK**.
To change the PIN, touch **Change SIM PIN**, and follow the onscreen instructions.

Pin a Screen

You can pin the screen of an app so you can stay focused on it. Try this feature when playing games, watching videos, and more.

Go to **Settings > Security > More settings > Screen pinning**, and enable **Screen pinning**.

- When using gesture navigation, swipe up from the bottom of the screen and hold to access the recent tasks screen, then touch  on an app preview. To unpin, swipe up twice from the bottom of the screen.
- When using three-key navigation, touch  to access the recent tasks screen, and touch  on an app preview. To unpin, touch and hold .

Accessibility Features

Use a Screen Reader App

Screen reader apps are designed to assist visually impaired users to use a device.

Enable Colour Correction to Customise the Screen Colour

Colour correction helps people with poor eyesight see the screen content more easily.

- 1 Go to **Settings > Accessibility features > Accessibility > Colour correction** and enable **Colour correction**.
- 2 Touch **Correction mode** to select a colour correction mode.

Use Magnification Gestures

Use magnification gestures to zoom in on the screen.

On the **Accessibility > Magnification** screen, touch **Magnification**, then enable it.

Zoom in or out by touching the screen three times in a row.

- While zoomed in, spread two or more fingers to further zoom in, then pinch two or more fingers together to zoom back out.
- Drag the screen with two or more fingers to view other parts of the screen.

Enable Colour Inversion

Colour inversion allows you to invert the colour of the text and the background. When Colour inversion is enabled, your device will display text in white and the background black.

On the **Accessibility** screen, enable **Colour inversion**.

Use a Shortcut to Activate an Accessibility Feature

You can use Volume buttons to quickly activate an accessibility feature.

- 1 On the **Accessibility** screen, touch **Accessibility shortcut**.
- 2 Touch **Select feature** to select the feature you want to activate with the shortcut.
- 3 Enable **Accessibility shortcut**. You can now press and hold the Volume up and down buttons simultaneously for 3 seconds to activate the feature.

Adjust the Touch and Hold Delay

Touch & hold delay allows you to adjust the time the screen takes to respond when you touch and hold something.

On the **Accessibility** screen, touch **Touch & hold delay**, then select a delay option according to your preferences.

Protect Your Device with a Flip Cover

For best results, you are advised to use a standard Huawei flip cover.

Enable Smart Cover Mode

Go to **Settings > Accessibility features > Smart Cover**, and enable **Smart Cover**. If the flip cover comes with a display window, enable **Use display window** as well.


Open or Close the Flip Cover

- Flipping open the cover will wake your device and display the lock screen (or Magazine unlock screen).
- If a lock screen password has been set, closing the flip cover of your device will lock the screen if it is on standby.
- When a flip cover with a display window is closed, you can check the date, time, weather, and more in the window.

Use Your Device While Wearing Gloves

Your device can respond to your touches even when you are wearing gloves.

Go to **Settings > Accessibility features**, and enable **Gloves mode**.

-  To ensure a higher success rate, apply adequate force when touching or swiping on the screen.

Operate Your Device with One Hand

You can switch to a mini-screen view so you can use your device with one hand.

- 1 Go to **Settings > Accessibility features > One-Handed mode**, and enable **One-Handed mode**.
- 2 You can access **One-Handed mode** using any of the following methods:
 - If you are using **Gestures** and **Slide across bottom to switch apps** is enabled, slide across the bottom of the screen and hold.
 - If you are using **Gestures** and **Slide across bottom to switch apps** is disabled, slide across the bottom of the screen in an arc and hold.
 - If you are using **Three-key navigation**, slide across the bottom of the screen.
 - If you are using **Gestures** and there is no **Slide across bottom to switch apps** switch, slide across the bottom of the screen.
- 3 Touch any area outside the mini-screen view to exit.

One-handed mode will not work if Gesture magnification is enabled on your device.

 The feature availability varies by device.

Please make sure your device has been updated to the latest system version.

Enable or Disable Mistouch Prevention

Enable **Mistouch prevention** to prevent unintended operations caused by accidental touches on the screen, such as when your device is placed in your pocket or backpack.

Go to **Settings > Accessibility features**, and enable or disable **Mistouch prevention** as needed.

Set Scheduled Power On/Off

Use the **Scheduled power on/off** feature to power your device on and off at set times, to save power and prevent interruptions while resting.

- 1 Go to **Settings > Accessibility features > Scheduled power on/off**, and enable **Scheduled power on/off**.
- 2 Set the power on and off times, as well as the repeat cycle. Your device will power on and off automatically at the specified times.

To stop using this feature, disable **Scheduled power on/off**.

System & Updates

Back Up with an External Storage Device

Back Up with a Memory Card

Insert a memory card in your device so you can conveniently back up your data to keep it safe.

- 1 Go to **Settings > System & updates > Backup & restore > Data backup > External storage** and touch **Memory card**.
- 2 Touch **BACK UP**, select the data you want to back up, then touch **Back up**.
- 3 Follow the onscreen instructions to set the password and password hint. The data will be encrypted and backed up. The password will be required if you want to restore your data backup.

To reset the password, go to the **Memory card** backup screen, then  > **Reset password**.

 The new password is only valid for backups created thereafter.

- 4 After the backup is complete, you can find your data backup in the **Huawei** folder in **Files > Categories > Memory card**.

You can go to the **Memory card** backup screen and enable **Auto-backup**. Your device will then automatically back up your data every seven days when it is being charged, the screen is turned off, and the battery level is at least 75%.

Restore Your Backup from a Memory Card

- 1 Go to **Settings > System & updates > Backup & restore > Data backup > External storage** and touch **Memory card**.
- 2 Select the backup you want to restore from the **RESTORE FROM BACKUP** list.
- 3 Select the data you want to restore, touch **Restore**, and enter the password as prompted.

Back Up with a USB Storage Device

In case of insufficient storage space on your device, you can back up large files and any data on a USB storage device, such as a USB flash drive or card reader.

- 1 Connect your device to a USB storage device via a USB OTG cable.
- 2 On the **External storage** screen of your device, touch **USB storage**.
- 3 Touch **BACK UP**, select the data you want to back up, then touch **Back up**.
- 4 Follow the onscreen instructions to set the password and password hint. The data will be encrypted and backed up. The password will be required if you want to restore your data backup.

To reset the password, go to the **USB storage** backup screen, then  > **Reset password**.

 The new password is only valid for backups created thereafter.

Restore Your Data from a USB Storage Device


- 1 Connect your device to a USB storage device via a USB OTG cable.
- 2 On the **External storage** screen of your device, touch **USB storage**.
- 3 Select the backup you want to restore from the **RESTORE FROM BACKUP** list.
- 4 Select the data you want to restore, touch **Restore**, and enter the password as prompted.

Back Up with a NAS Device

You can back up your important data on a network-attached storage (NAS) device, also known as a private cloud storage server. The NAS device provides shared folders for data backup.

- 1 On the **External storage** screen of your device, touch **Shared folder**.
- 2 On your device, scan for available NAS devices using your Wi-Fi network, then touch an applicable one to access and add its shared folders.
- 3 Touch **BACK UP**, select the data you want to back up, then touch **Back up**.
- 4 Follow the onscreen instructions to set the password and password hint. The data will be encrypted and backed up. The password will be required if you want to restore your data backup.

To reset the password, go to the **Shared folder** backup screen, then  > **Reset password**.

 The new password is only valid for backups created thereafter.

Restore Your Data from an NAS Device

- 1 On the **External storage** screen of your device, touch **Shared folder**.
- 2 On your device, scan for available NAS devices using your Wi-Fi network, then touch an applicable one to access and add its shared folders.
- 3 Select the backup you want to restore from the **RESTORE FROM BACKUP** list.
- 4 Select the data you want to restore, touch **Restore**, and enter the password as prompted.

Change the System Language and Region

- 1 Go to **Settings** > **System & updates** > **Language & input** > **Language and region**, then select the language you want to use.
- 2 If the language is not listed, touch **Add language**, then locate and touch it to add it to the list.
- 3 Touch **Region** to select a country/region, so the display content will adapt to the local culture and habits of the country/region you have selected.

Set the System Date and Time

Your device is able to sync to the local date, time, and time zone over a mobile network. You can also manually set the date, time, and time zone for your device.

Go to **Settings** > **System & updates** > **Date & time**, then set the options according to your requirements.

Set the Date and Time Automatically or Manually

- Enable **Set automatically**, and your device will sync to the local date and time over a mobile network.
- To manually set the date and time, disable **Set automatically**.

Change the Time Zone

- Enable **Set automatically**, and your device will sync to the local time zone over a mobile network.
- To manually set the time zone, disable **Set automatically**.

Change the Time Format

- Enable **24-hour time** and your device will display time in the 24-hour format.
- Disable **24-hour time** and your device will display time in the 12-hour format.

Restore Your Device to Default Settings

Reset Network Settings

This operation will reset your Wi-Fi, mobile data network, and Bluetooth settings. It will not change any other settings on your device or delete any data.

Go to **Settings > System & updates > Reset**, touch **Reset network settings**, then follow the onscreen instructions to reset network settings.

Restore All Settings

This operation will reset all network settings, your lock screen password, and the home screen layout. If your device supports fingerprint or facial recognition, the enrolled fingerprints and facial data will be deleted as well. Other data or files will not be deleted from your device. This operation does not restore the settings of Find Device, Users & accounts, Device administrators, or app settings either.

Go to **Settings > System & updates > Reset**, touch **Reset all settings**, and follow the onscreen instructions to complete the operation.


Restore Factory Settings

This operation will erase data on your device, including your accounts, app data and system settings, installed apps, music, images, all files in the internal storage, security chip contents, and locally-stored system, app, and personal data related to HUAWEI IDs. Make sure to back up your data before restoring your device to its factory settings.

Go to **Settings > System & updates > Reset > Reset phone**, touch **Reset phone**, and follow the onscreen instructions to restore factory settings.

Enable or Exit Simple Mode

Simple mode adopts a more concise layout for easy navigation, enlarges icons and fonts for the home screen, and maximises the volume.

 This feature may vary by device.

Enable Simple Mode

Go to **Settings > System & updates > Simple mode** and touch **Enable**.


Touch and hold any icon to drag it to the desired location or uninstall it if it is not a mandatory app.

Exit Simple mode

Open **Settings** and touch **Exit Simple mode**.

Update Your Device System Online

When an update is available, your device will prompt you to download and install the update package.


-  Before updating, make sure your device is running an official system version. Otherwise, the update may fail and your device may experience unknown issues.
- Back up your user data before the update.
- After an update, third-party apps that aren't compatible with the new system version may become unavailable. In some cases, it may take some time for a compatible app version to be released.
- During the update, do not power off or restart your device, remove the memory card, or insert a memory card.

1 Go to **Settings > System & updates**, and touch **Software update**.

2 When an update is available, you can either manually download and install the update package, or update your device automatically overnight.

- Download and install the update package: Go to **New version > DOWNLOAD AND INSTALL**. To avoid data usage, connect your device to a Wi-Fi network when downloading the update package.

Your device will automatically restart once the update is complete.

- Update overnight: Touch , and enable **Auto-download over Wi-Fi** and **Update overnight**.

Your device will automatically update and restart between 02:00 – 04:00.

To ensure a successful overnight update, make sure that your device is powered on, the screen is locked, there are no alarms set for this period of time, and the battery level remains higher than 35%. Connect your device to a charger if necessary.

To disable automatic updates, touch  on the **Software update** screen, then disable **Auto-download over Wi-Fi**.

Use Another Input Method

You can download a third-party input method and set it as the default input method.


- 1 Download the input method from an official app market.
- 2 Follow the onscreen instructions to set it as the default input method, or go to **Settings > System & updates > Language & input > Default keyboard** and select the input method.

Use Phone Clone to Move Data to Your New Device

Phone Clone lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.


Migrate Data from an Android Device

- 1 On your new device, open the **Phone Clone** app. Alternatively, go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, then touch **Huawei** or **Other Android**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open the **Phone Clone** app and touch **This is the old device**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then touch **Transfer** to start cloning.

 **Phone Clone** is only available on devices running Android 7.0 or later.

Migrate Data from an iPhone or iPad

- 1 On your new device, open the **Phone Clone** app. Alternatively, go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, then touch **iPhone/iPad**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open the **Phone Clone** app and touch **This is the old device**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.

 **Phone Clone** is only available on devices running iOS 8.0 or later.

Search for Items in Settings

Quickly Find What You're Looking For

Tired of trudging through layers of settings? Just search for them using the search box.


- Swipe down from the middle of the screen to display the search box. Enter the name of a setting to obtain search results.
- Open **Settings**, and enter the name of a setting in the search box at the top of the screen, to obtain search results.

Wi-Fi

Introduction to Wi-Fi

Connecting to the Internet over Wi-Fi is an effective way to save mobile data. You can also enable Wi-Fi security monitoring to avoid risky hotspots and ensure safe Internet access.

Connect to a Wi-Fi Network



 Be extra careful when connecting to a free public Wi-Fi hotspot to avoid security risks and economic loss resulting from the leakage of your personal data.

- 1 Go to **Settings** > **Wi-Fi**, and enable **Wi-Fi**.
- 2 Connect to a Wi-Fi network on the **Wi-Fi** screen using either of the following methods:
 - Select a Wi-Fi network to connect to under **Available networks**. A password is required for encrypted networks.
 - To manually add a Wi-Fi network, scroll down to the bottom of the screen, touch **Add network**, and enter the SSID and password as prompted to complete the connection.

The  icon displayed on the status bar indicates that the device is connected to Wi-Fi.

Transfer Data Using Wi-Fi Direct

You can use Wi-Fi Direct to transfer data between Huawei devices. Wi-Fi Direct allows you to transfer large files to a nearby device more quickly than Bluetooth and without having to pair the devices.

- 1 On the receiving device, go to **Settings** > **Wi-Fi** and enable **Wi-Fi**.
- 2 Go to **More settings** > **Wi-Fi Direct** to start searching for nearby devices that have enabled Wi-Fi Direct.
- 3 On the sending device, touch and hold to select the files you want to share, touch , and select **Wi-Fi Direct**.
 -  These steps may be different if you are sharing files directly from an app.
- 4 Touch the icon of the receiving device to establish a connection, then share the files.
- 5 On the receiving device, accept the Wi-Fi Direct transfer request.

Then go to **Files** > **Categories** > **Internal storage** > **Wi-Fi Direct** to view the received files.

Select a Network Using Wi-Fi+

When Wi-Fi+ is enabled, if your device detects a Wi-Fi network that it has previously connected to or is free, it will automatically enable Wi-Fi and connect to the network. Your device will also evaluate the quality of the current Wi-Fi network and switch to mobile data if the Wi-Fi signal is poor.

- 1 Go to **Settings** > **Wi-Fi**.
- 2 Touch **More settings** and enable or disable **Wi-Fi+**.

Bluetooth

Bluetooth

You can connect your device to Bluetooth headsets, speakers, and car kits. You can also use Bluetooth to share data between your device and other devices.

Make sure your device is within 10 m (about 33 ft.) of other Bluetooth devices.

Enable or Disable Bluetooth

You can enable or disable Bluetooth in either of the following ways:

- Swipe down from the status bar to open the notification panel, swipe down further to show all shortcut switches, then enable or disable **Bluetooth**. Touch and hold the switch to enter the **Bluetooth** settings screen.
- Go to **Settings** > **Bluetooth**, then enable or disable **Bluetooth**.


Set a Bluetooth Name

Set a Bluetooth name for your device to easily identify it during connection.

- 1 On the **Bluetooth** settings screen, toggle the **Bluetooth** switch on.
- 2 Touch **Device name**, enter a name, then touch **OK**.


Pair with a Bluetooth Device


- 1 Enable Bluetooth on the target device and set it to discoverable. For detailed instructions, refer to the device's user guide.
- 2 From your device, access the **Bluetooth** settings screen, and enable **Bluetooth** to have your device automatically search for nearby Bluetooth devices.
- 3 From the list of **Available devices**, select the one you want to pair your device with, and follow the onscreen instructions to complete pairing.

On the **Bluetooth** settings screen, touch  to view tips for connecting various Bluetooth devices.

Transfer Files via Bluetooth


You can use Bluetooth to transfer videos, pictures, contacts, and more to another device provided that both devices are within the effective Bluetooth range.

- 1 Pair the sending and recipient devices via Bluetooth.
- 2 On the sending device, touch and hold a file, select the files you want to share, touch , and select **Bluetooth**.

 Operations may vary if you are sharing files from apps directly.

- 3 Touch the Bluetooth name of the recipient device to start sharing.
- 4 On the recipient device, accept the Bluetooth transfer request.

Unpair a Bluetooth Device

- 1 On the **Bluetooth** settings screen, enable the **Bluetooth** switch.
- 2 In the list of **Paired devices**, touch  next to the name of the device you wish to unpair, then touch **Unpair**.

Home Screen & Wallpaper

Manage the Home Screen Layout

You can customise the home screen layout to suit your device usage habits.

Move an App Icon on the Home Screen

Touch and hold an app icon until your device vibrates, then drag it to the desired position on the home screen.

Keep Home Screen Icons Aligned

Pinch two fingers together on the home screen to access **Home screen settings** mode, then enable **Auto-align**. With this feature enabled, empty spaces will automatically be filled when apps are removed.

Lock Home Screen Icon Positions

Pinch two fingers together on the home screen to access **Home screen settings** mode, then enable **Lock layout**.

Select the Home Screen Layout Pattern

Pinch two fingers together on the home screen, go to **Home screen settings > Layout**, then select a layout pattern you prefer.

Set Your Home Screen in Settings

You can also go to **Settings > Home screen & wallpaper > Home screen settings**, then enable **Auto-align** and more.

Put App Icons in Folders

For easy management of your app icons on the home screen, you can stack similar apps in a folder and name the folder.

- 1 Touch and hold an app icon until your device vibrates, then drag it over another app. A folder will automatically be created to house these two apps.

2 Open a folder, touch its name, then enter a name for it.

Add App Icons to a Folder or Remove Them

Open a folder and touch . Then you can:

- Select one or more apps, and touch **OK** to add them to the folder.
- Deselect one or more apps, and touch **OK** to remove them from the folder. If you deselect all apps, the folder will be deleted.

Use App Drawer to Store Apps

You can put your apps in a drawer and display only frequently used apps on your home screen to streamline your home screen.

 This feature may vary by device.

Enable App Drawer

Go to **Settings > Home screen & wallpaper > Home screen style**, and select **Drawer**.

Once enabled, you can swipe up on the home screen to access all of your apps in the drawer.

Add Apps in the Drawer to the Home Screen

In Drawer mode, you can swipe up on the home screen to display the App Drawer. Touch and hold the app you want to add until your device vibrates, then drag it to the desired position on the home screen.

Move Apps Back to the Drawer

Touch and hold an app icon until your device vibrates, then touch **Remove**. This operation will only remove the app icon from your home screen but will not uninstall it.

You can still find it in the app drawer.

Disable the Drawer Style

To disable the drawer style, set **Home screen style** to **Standard**.

Notifications

App Badges

When new notifications arrive for an app, a numbered badge will appear on the app icon. You can also set a dot as the badge, or hide the badge for some or all apps.

Turn Off App Badges

- 1** Go to **Settings > Notifications**, and touch **App icon badges**.
- 2** Turn off the switch for some or all apps.


Change the Badge Display Mode

On the **App icon badges** screen, touch **Badge display mode**, and select **Numbers** or **Dots** according to your preference.

Disable App Notifications

Disable Notifications from a Specific App

If you do not want to be disturbed by notifications from an app, perform either of the following:

- After you receive a notification from the app, swipe left on it in the notification panel, and go to  > **Disable notifications**.
- Go to **Settings** > **Notifications**, locate and touch the app for which you want to disable notifications, then disable **Allow notifications**.

Disable Notifications from Apps in Batches

To disable notifications from multiple apps at a time, go to **Settings** > **Notifications** > **Manage all**, and turn off the switch next to each app.

Hide Content of Notifications on the Lock Screen

Go to **Settings** > **Notifications** > **Lock screen notifications** and select **Show but hide contents**. The content of notifications will then not be displayed on the lock screen.

More App Notification Settings

Set the App Notification Mode

Go to **Settings** > **Notifications** and select an app. You can then set its notification mode.

- Enable **Gentle notifications**: Notifications will only be displayed in the notification panel. There will be no banners, lock screen notifications, or status bar icons, and your device will not ring or vibrate.
- Enable **Lock screen** and **Banners**.
- Set **Notification sound**: You can change the notification tone, set the vibration pattern, or select **None**.
- Enable **Allow interruptions**: You can still receive notifications from this app even if Do not disturb is enabled.

 This feature may vary by device.

Notifications Turn on Screen

Go to **Settings** > **Notifications** > **More notification settings**, and enable **Wake screen**. Your device will then automatically turn on the lock screen when it receives a notification.


Show Notification Icons in the Status Bar

Go to **Settings > Notifications > More notification settings**, and enable **Show notification icons in the status bar**.

Apps

Enable App Twin

App Twin enables you to log in to two WhatsApp or Facebook accounts simultaneously, allowing you to keep your work and private life separate.

 **App Twin** is only supported by some apps.

Go to **Settings > Apps > App Twin**, and enable **App Twin**. The twin app will then be displayed on the home screen.

View or Change App Settings

Go to **Settings > Apps > Apps** and touch an app. You can force stop it, uninstall it, view and change the app permissions, set notification modes, and more.


 Some apps cannot be uninstalled.

Battery

Enable Smart Charge

Smart Charge learns from your charging habits and manages the charging process intelligently. This feature reduces the battery wear level and prolongs the battery life by reducing the time your device spends fully charged. It is advised that you keep this feature enabled.

For example, if you are used to charging your devices overnight or for an extended period of time, Smart Charge will pause the charging when the battery capacity reaches a certain level. Before you get up in the morning, Smart Charge will resume charging until your device is fully charged. This reduces the time your device spends fully charged to slow down battery wear and prolong the battery life.

 Data about your charging habits will only be used on your device and will not be backed up or uploaded to the cloud.

To enable this feature, go to **Settings > Battery > More battery settings**, and enable **Smart Charge**.

Enable Smart Battery Capacity


Smart Battery Capacity intelligently adjusts the maximum available battery capacity based on the current battery state to slow down battery wear and prolong the battery lifespan. It is advised that you keep this feature enabled.

To enable this feature, go to **Settings > Battery > More battery settings**, and enable **Smart Battery Capacity**.

Check the Power Consumption of Your Device

Go to **Settings > Battery** (or **Optimiser > **), and you can:

- View **Power consumption details** to learn about the power consumption from the last 24 hours and the power usage ranking of apps.
- Touch a time slot in the Battery level chart to learn about the power consumption for the corresponding period.
- Touch an app and view its **Battery usage details**, or touch **Force stop** to close the app.

 Some pre-installed apps cannot be closed.

Power Management

On the **Battery** screen, you can check the estimated battery time remaining, and enable a power saving mode to extend the battery life of your device.

Enable Power Saving Mode

If **Power Saving mode** is enabled on your device and the battery level is higher than 10%, some functions will be disabled, background apps will be restricted, and visual effects will be weakened to reduce power consumption. When the battery level is lower than or equal to 10%, stricter power saving measures are taken to ensure the longest standby time. It is recommended that you enable **Power Saving mode** when the battery level is lower than or equal to 20%.

To do so, go to **Settings > Battery** (or **Optimiser > **), and enable **Power Saving mode**. A


 icon will then be displayed in the status bar.


You can touch **Learn more** to view details about power saving measures.

Enable Performance Mode

Performance mode adjusts power settings to deliver maximum performance. This will cause the battery to drain more quickly, especially when graphic-intensive apps are used.

When the battery level is sufficient, go to **Settings > Battery** (or **Optimiser > **) and enable **Performance mode**.


The  icon will then be displayed in the status bar.

 **Performance mode** is not available on some devices. If this option is not displayed in **Optimiser**, it indicates that your device does not support the feature.

Customise Battery Settings

You can also set whether to display the battery percentage in the status bar, and whether to maintain a network connection when the device screen is turned off.

Display Battery Percentage on the Status Bar

Go to **Settings** > **Battery** (or **Optimiser** > ) , touch **Battery percentage**, and choose to display the battery percentage, either inside or outside of the battery icon on the status bar.

Stay Connected while Your Device is Sleeping

If you would like your device to continue to receive messages or download data while it is in sleep mode, set to keep your device connected when it sleeps. Please note that this may increase power consumption.

On the **Battery** screen, touch **More battery settings**, then enable or disable **Stay connected while asleep** as required.

Storage

Check Storage Usage

Go to **Settings** > **Storage** to check storage usage and optimise it when you feel necessary.

Clean Up Device Storage

You can use **Cleanup** in **Optimiser** to scan for redundant or large files, such as app residue, unwanted installation packages, WeChat data, and more. Once detected, you can choose whether or not to delete files as suggested.

- 1 Open **Optimiser**, then touch **Cleanup**.
- 2 When the scan is complete, touch **Clean up** after each item and delete any files you don't need.

Automatically Clean Up System Trash

- 1 Open **Optimiser**, and touch **Cleanup**.
- 2 Swipe down from the top of the screen, and your device will automatically clean up system trash.

Manually Clean Up System Trash

In addition to automatic cleanup, your device will also detect and recommend trash files for you to clean up manually.

On the **Cleanup** screen, touch **Clean up** next to a category, select the items you want to clean up, then touch **DELETE** .

Clean Up Duplicate Files

Optimiser can identify duplicate files on your device.

On the **Cleanup** screen, touch **Duplicate files** , then select unwanted files to delete them.


Privacy

Use Location Services

Some apps need to obtain your location information to provide better services. You can enable or disable location services, and grant or deny the permission to access location information for particular apps as required.

Enable or Disable Location Services


You can enable or disable location services in either of the following ways:

- Swipe down from the status bar to open the notification panel and swipe down further to display all shortcut switches. Touch  to enable or disable this function.
- Alternatively, go to **Settings** > **Location** and enable or disable **Access my location**.

After location services are disabled, your device will prevent all apps and services from collecting and using location information, with the exception of some built-in apps. When these apps or services need to use location information, your device will remind you to enable location services again.

Increase the Accuracy of Location Services

You can improve the positioning accuracy of your device by allowing apps and services to scan for nearby Wi-Fi networks and Bluetooth devices or access correction data for global navigation satellite systems (GNSS).

 The feature availability varies by device.

Go to **Settings** > **Location** > **Advanced settings**, then set the options as required.

Allow or Forbid Apps to Obtain Location Information

You can allow or forbid an app to access location information, including granting one-time or permanent access, or denying access to location information during use of the app.

- 1 Go to **Settings** > **Privacy** > **Permission manager**, touch **Location**, and check which apps have been granted access to location information.
- 2 Touch the app for which you want to change settings and follow the onscreen instructions to grant or deny permissions.

Create a PrivateSpace for Your Private Data

Create your PrivateSpace that is completely independent of MainSpace (the original space) on your device, which can be accessed using your fingerprint or a password.

 Not all devices support fingerprint features.


You can move private photos, videos, and other files to your PrivateSpace to prevent unauthorised access. You can also move your payment and gaming apps to PrivateSpace to prevent them from being accessed by your child.

Enable and Access PrivateSpace

1 Go to **Settings > Privacy > PrivateSpace > Enable**, and follow the onscreen instructions to create a PrivateSpace.

2 You can enter your PrivateSpace using either of the following methods:

- On the lock screen, access PrivateSpace using the fingerprint or password set for the space.
- Alternatively, in MainSpace, go to **Settings > Privacy > PrivateSpace**, and touch **Log in**.

 If you restart your device, you have to enter the password to access the MainSpace first, then switch to the PrivateSpace.

Hide or Unhide the Entrance to PrivateSpace

You can hide the entrance to PrivateSpace in the MainSpace settings, so that you can only access PrivateSpace using the fingerprint or password set for the space.

- To hide the entrance to PrivateSpace: In PrivateSpace, go to **Settings > Privacy > PrivateSpace**, and enable **Hide PrivateSpace**.
- To unhide the entrance to PrivateSpace: In MainSpace, go to **Settings > Security > More settings**, then go to **Show all settings > OK**.

Transfer Files Between MainSpace and PrivateSpace

1 In PrivateSpace, go to **Settings > Privacy > PrivateSpace**, and touch **MainSpace to PrivateSpace** or **PrivateSpace to MainSpace**.


2 Select the files (such as photos, videos, and audio files) you want to transfer, touch **Move**, and follow the onscreen instructions to transfer the files.

In the target space, go to **Gallery > Albums > Others > SharedImages**, or **Gallery > Albums > Others > SharedVideos** to view photos and videos.

Reset Password for PrivateSpace

You can set a security question when creating the password for PrivateSpace, which will help you to reset the password if you happen to forget it.

1 In PrivateSpace, go to **Settings > Privacy > PrivateSpace**, then touch **Password protection**.

- 2 Follow the onscreen instructions to complete the verification, select and answer the security question, then touch **Finish**.
- 3 In MainSpace, go to **Settings > Privacy > PrivateSpace**, then go to  **> Reset password**, and follow the onscreen instructions to complete the verification and reset the password.

Transfer Data in PrivateSpace to Your New Device

You can quickly transfer your PrivateSpace data, such as contacts, photos, and files, from the old device to the new one.

- 1 On your new device, create and enter your PrivateSpace, go to **Settings > Privacy > PrivateSpace > Space Clone**, and select **This is the new device**.
- 2 In your old device, enter your PrivateSpace, go to **Settings > Privacy > PrivateSpace > Space Clone**, and select **This is the old device**.
- 3 Follow the onscreen instructions to scan the QR code or manually connect the old device to the new one.
- 4 On your old device, select the data to be transferred. You can cancel the data transfer during the process, and then continue it once you have connected your old device with the new one again.

Delete PrivateSpace

If you delete PrivateSpace, all apps and data stored in the space will be deleted and cannot be restored. Please exercise caution when deleting PrivateSpace.

You can delete PrivateSpace in either of the following ways:

- In MainSpace, go to **Settings > Privacy > PrivateSpace**, then go to  **> Delete PrivateSpace**.
- Alternatively, in PrivateSpace, go to **Settings > Privacy > PrivateSpace**, then touch **Delete**.

Manage App Access Permissions

Apps may require certain permissions, such as the Location permissions, in order to provide you with corresponding services.

However, some apps may obtain too many unnecessary permissions, posing potential risks to your privacy and information security. You can monitor the permissions granted to each app and deny those you deem unnecessary.

Manage the Location Permission

After being granted the Location permission, an app can obtain your location information. For example, if a map app is granted the Location permission, it can provide you with location and navigation services. You can revoke the permission if you do not need these services.

- 1 Go to **Settings > Apps > Permission manager**.

- 2 On the **Permission manager** tab, touch **Location**, touch the icon of the corresponding app, then select **Allow all the time**, **Allow only while in use**, or **Deny**.

Manage Permissions to Access Other Private Data

You can also manage permissions to access your personal data, such as Contacts, Messaging, Call logs, Body sensors, Calendar, and Camera, to enjoy better services and protect your privacy.

On the **Permission manager** screen, touch the permission you want to manage, and toggle the switch for each app on or off as required.

Users & Accounts

Add a User or Guest Account

- 1 Go to **Settings > Users & accounts > Users**, touch **Add user** or **Add guest**, then follow the onscreen instructions to add an account.
- 2 Touch **Switch** to switch to the user or guest account. Configure the settings for the new account as prompted.
- 3 Install apps as needed. Note that if a newer version of an app has been installed by another user, the app installation will fail.

A maximum of three user and one guest accounts can be added.


Authorise a User or Guest Account to Make Calls and Send Messages

You can set whether to allow a user or guest account to make calls, send SMS messages, and more.

- After accessing your device as the owner, go to **Settings > Users & accounts > Users**.
- Touch the related account, and select the permissions you want to authorise.

Switch Between the Owner, User, and Guest

You can switch to a different account using either of the following methods:


- Swipe down from the status bar to open the notification panel, touch , then touch the profile picture of the account you wish to switch to.
- Go to **Settings > Users & accounts > Users**, and touch the name of the account you wish to switch to.

Delete a User or Guest Account

Deleting a user or guest account will delete all its related data. Please exercise caution.

After accessing your device as the owner, use either of the following methods to delete a user or guest account:

- Go to **Settings > Users & accounts > Users**, touch the name of the account you wish to delete, then follow the onscreen instructions to delete it.

- Swipe down from the status bar to open the notification panel, touch  > **More settings**, touch the name of the account you wish to delete, then follow the onscreen instructions to delete it.

About Phone

Legal Notice

Copyright © Huawei 2021. All rights reserved.

This guide is for your reference only. The actual product, including but not limited to the colour, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.

Please visit <https://consumer.huawei.com/en/support/hotline> for up to date support hotline and email address information for your country or region.

Model: ELE-L09
ELE-L29

EMUI 11.0_01