

USER MANUAL

The full manual is available at the following internet address: www.denver-electronics.com

5 WATT

Wireless Charging Alarm Clock



Main Features

1. Time Display Mode: 12 or 24 hour time display
2. Calendar Mode: Display month and date
3. Alarm Mode: Triple alarm time setting
4. Temperature Mode: Range from 0°C - 50 °C (32 °F - 122 °F)
5. 3 Display Modes: dp-1, dp-2 and dp-3
6. Power saving mode: Activate LED display by touch
7. Power supply: 3xAAA Batteries for LED display (not included) or USB Cable Included for the wireless charger function). Use your own smartphone charger. CR2032 battery(included) to keep time memory



Operating Instructions

After power on, LED turns on with a beeping sound and will enter the time setting mode. Under time display mode, press the SET button to check below in sequence Time --> Calendar --> A1 (Alarm 1), A2 (Alarm 2), A3 (Alarm 3).

Time Setting

1. Under the Time Mode, press and hold the SET button for 2 seconds to set the clock.
2. Press the SET button repeatedly to set the time in the following sequence: 12/24hr switch over --> Hour --> Minute -->Exit
3. Press the UP / DOWN buttons to adjust the hour and minute digits. Press and

hold the UP / DOWN buttons to speed up the scanning of the digits.

4. When the 12-hour format is set, the PM indicator on the top left corner will appear in the afternoon
5. The setting mode will return to time display mode if there is no operation for 15 seconds.

Date Setting

1. Under the Calendar Mode, press and hold the SET button for 2 seconds to set the date.
2. Press the SET button repeatedly to set the date as the following sequence: Year -->month-->day-->Exit
3. Press the UP / DOWN buttons to adjust the year, month and date. Press and hold the UP / DOWN buttons to speed the scanning of the digits.
4. The setting mode will return to time display mode if there is no operation for 15 seconds.

Alarm Setting

3 different alarm time settings are possible and you can store 3 different alarm times in memory.

1. Under the Alarm Mode A1, press the UP button to turn on the alarm and press again to turn off.
2. When A1 is activated, 'oN A1' will appear on the display, quickly then it will enter to alarm time display.
3. Press the SET button for 2 seconds and the display will flash now you can set the alarm time.
4. Press UP/DOWN buttons to adjust the alarm time. Press and hold the UP/DOWN button to speed up the scanning of the digits.
5. When the Alarm is activated, the Alarm Symbol will turn on.
6. The setting mode will exit if there is no operation for 15 seconds.

*A2 and A3 alarm can be set in the same way as A1.

*Alarm will ring for 1 minute at the set time, press any button to stop the alarm.

*Please note the alarm symbol will stay on and will ring the next day at the same time unless deactivated in the alarm settings.

Temperature Display

*After the power is turned on, the clock will automatically detect the current room temperature and update the temperature every 60 seconds.

*Press the DOWN button for 2 seconds to switch between Celsius(°C) and Fahrenheit(°F)

OTHER FUNCTIONS

Voice Activation / Touch Feature

The Voice Activation feature will turn on the LED time and temperature reading when you make a noise (like a clap) or by touching the unit. Note this is a powersaving mode that can be turned off if you want the display to show all the time.

Display Modes

Under clock, calendar or temperature mode, press the UP button to switch between Dp-1, Dp-2 and dP-3 display modes.

dp-1 mode: LED alternately displays time and date. Time will display for 10 seconds, date will display for 2 seconds. For example: press the UP button to enter the dp-1 Mode, after setting it return back to time display. Under display mode, the LED display will alternate in the following sequence: --> time(10 seconds) --> date(2 seconds) .

dp-2 mode: Press the UP button to enter the dp-2 mode, set your desired mode (Time, Date or Alarm) to keep this mode on the screen. For example: press the UP button to enter to the dp-2 mode, after settings are finished it return back to time display. If you always want to keep Time display showing, press the SET button to enter Time mode, the screen will keep Time display. If you always want to keep Date display showing, press the SET button to enter Date mode, the screen will keep the Date display. If you always want to keep Alarm display showing, press the SET button to enter Alarm mode, the screen will keep the Alarm display.

dp-3 mode: Press the UP button to enter the dp-3 mode, under this mode, the

screen default Time will always display after 15 seconds For example: press the SET button to check Time-->Date-->Alarm as sequence, it will automatically return back to Time display after 15 seconds if there is no operation.

Power saving and Touch control mode

*The default mode is Sd (power saving off). Under Time Mode press the DOWN key to turn on the Power Saving Mode. The clock will then display 'oN Sd', press DOWN again to turn off the Power Saving Mode.*Under Power Saving Mode, without any operation for 30 seconds, the LED display will automatically turn off..*Under Power Saving Mode touch the LED clock or touch the table to turn on the LED display.*Under Power Saving Mode when alarm is ringing the LED display will automatically turn on.

Built in Time Memory

Built-in CR2032 battery keeps the time running when power is off, but other functions cannot be used. If time memory doesn't work anymore, please replace the built-in CR2032 battery behind the battery compartment.

Specifications

- > Input: 5V 1A
- > Output: 5V 1A
- > Standby Power: <0.2W
- > Charging Distance: 5-10 MM
- > Charging Effect: 75%
- > Charging Power: 5 W
- > Power Supply: USB 5V / 3*AAA battery case (battery not included) / button battery included for clock

Package contents

- Wireless Charging Alarm Clock x 1
- Micro USB Power Cable x 1

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type ECQ-104NL is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.denver-electronics.com and then click the search ICON on topline of website. Write model number: ECQ-104NL. Now enter product page, and red directive is found under downloads/other downloads.

Max Output Power: 9W

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denverelectronics