


## PENBERTHY SERIES M FLAT GLASS GAGES

### INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

Before installation these instructions must be read fully and understood

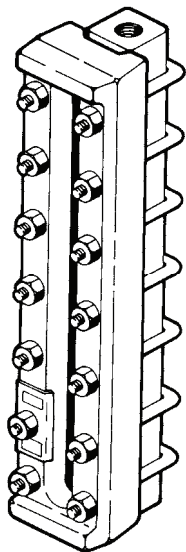

#### TABLE OF CONTENTS

Product warranty .....	1
<b>1 About the manual.....</b>	<b>2</b>
<b>2 Introduction .....</b>	<b>2</b>
2.1 System description .....	2
<b>3 Available models .....</b>	<b>2</b>
3.1 Design ratings at max. & min. operating temperatures .....	2
<b>4 Inspection .....</b>	<b>4</b>
4.1 Glass inspection .....	4
4.2 User rating inspection .....	4
<b>5 Installation.....</b>	<b>4</b>
5.1 Piping strain .....	4
5.2 Differential thermal expansion .....	4
5.3 Mirror viewing .....	4
5.4 Nut re-torquing.....	4
5.5 Belleville washers.....	5
<b>6 Operation .....</b>	<b>5</b>
6.1 Hydrostatic test.....	5
<b>7 Maintenance .....</b>	<b>6</b>
7.1 Maintenance procedures .....	6
7.2 Troubleshooting .....	7
<b>8 Removal - disassembly - reassembly .....</b>	<b>7</b>
8.1 Disassembly .....	7
8.2 Inspection of glass seating surfaces .....	7
8.3 Reassembly.....	8
<b>9 Disposal at end of useful life .....</b>	<b>8</b>
<b>10 Telephone assistance .....</b>	<b>9</b>
<b>11 Exploded parts drawing.....</b>	<b>9</b>

#### Tables and figures

Table 1 - Design ratings of RM & RMR gage ...	2
Table 2 - Design ratings of TM & TMR gage ....	3
Table 3 - Bolt torque values.....	5
Figure 1 - Nut tightening sequence .....	5
Figure 2 - Belleville washer position .....	5
Figure 3 - Nut loosening sequence.....	7
Figure 4 - Exploded parts drawing of transparent gage.....	9
Figure 5 - Exploded parts drawing of reflex gage.....	9

#### PRODUCT WARRANTY

Emerson warrants its Penberthy products as designed and manufactured by Emerson to be free of defects in the material and workmanship for a period of one year after the date of installation or eighteen months after the date of manufacture, whichever is earliest. Emerson will, at its option, replace or repair any products which fail during the warranty period due to defective material or workmanship.

Prior to submitting any claim for warranty service, the owner must submit proof of purchase to Emerson and obtain written authorization to return the product. Thereafter, the product shall be returned to Emerson with freight prepaid.

This warranty shall not apply if the product has been disassembled, tampered with, repaired or otherwise altered outside of the Emerson factory, or if it has been subject to misuse, neglect or accident.

The responsibility of Emerson hereunder is limited to repairing or replacing the product at its expense. Emerson shall not be liable for loss, damage or expenses related directly or indirectly to the installation or use of its products, or from any other cause or for consequential damages. It is expressly understood that Emerson is not responsible for damage or injury caused to other products, buildings, personnel or property, by reason of the installation or use of its products.

*This is Emerson's sole warranty and in lieu of all other warranties, expressed or implied which are hereby excluded, including in particular all warranties of merchantability or fitness for a particular purpose.*

This document and the warranty contained herein may not be modified and no other warranty, expressed or implied, shall be made by or on behalf of Emerson unless made in writing and signed by the general manager or director of engineering.

# PENBERTHY SERIES M FLAT GLASS GAGES

## INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

### 1 ABOUT THE MANUAL

This manual has been prepared as an aid and guide for personnel involved in installation or maintenance. All instructions must be read and understood thoroughly before attempting any installation, operation or maintenance.

#### Safety instructions

Emerson does not have any control over the manner in which its liquid level gage is handled, installed or used. Emerson cannot and will not guarantee that a liquid level gage is suitable or compatible for the user's specific application.

#### WARNING

*Contained fluids may be pressurized and can exit vessel connections unexpectedly due to apparatus or material failure. Safety glasses should be worn when installing a liquid level gage. Failure to follow instructions could result in serious physical injury.*

### 2 INTRODUCTION

Penberthy liquid level gages are used to allow direct visualization of liquid level in vessels. By peering through the glass, it is possible to monitor color, clarity and level of a gas/liquid interface. Gages are available in varying lengths and configurations (end connect, side connect, multiple sections, NPT or flange connections etc.). Visual indication can be enhanced by using reflex glass or illuminators (accessory).

#### 2.1 System description

Penberthy gages comprise six basic components. Each component may vary slightly, depending on the desired physical and mechanical properties for the gage. Use the exploded parts view in Section 11 as additional reference material.

**Chamber** - provides a pressure retaining metallic channel for the liquid to enter and be viewed. Slot(s) are machined into the chamber to provide direct visualization of the process fluid.

**Gaskets** - seal the gap and prevent leakage between the chamber and the glass. Gaskets are available in a variety of materials for compatibility with the media in the gage.

**Glass** - allows for visual observation of the process fluid in the chamber.

**Cushion** - acts as a protective buffer between the glass and the cover. For proper sealing, cushions must be as hard or harder than the gasket material.

**Cover** - protects the glass assembly from external hits and provides a flat, rigid surface that is used to compress the gage assembly evenly.

**Bolting** - compresses the components between the covers (transparent gages) or cover and chamber (reflex gages).

**Shield** - (optional on transparent gages; standard on STM gages) used to prevent the process medium from contacting the glass.

### 3 AVAILABLE MODELS

#### 3.1 Design ratings at maximum and minimum operating temperatures

TABLE 1 - DESIGN RATINGS OF RM & RMR GAGES

Gasket material	Glass size	Model RM & RMR reflex	
		Wetted parts material steel or stainless steel w/B7 bolting	
		-20°F (-29°C) to 100°F (38°C)	600°F (316°C)
Grafoil® (standard) or Non-asbestos	1	3000 psig (20680 kPa)	2220 psig (15310 kPa)
	2	2910 psig (20060 kPa)	2150 psig (14820 kPa)
	3	2820 psig (19440 kPa)	2080 psig (14340 kPa)
	4	2725 psig (18790 kPa)	2040 psig (14070 kPa)
	5	2630 psig (18130 kPa)	1950 psig (13440 kPa)
	6	2535 psig (17480 kPa)	1875 psig (12930 kPa)
	7	2440 psig (16820 kPa)	1805 psig (12450 kPa)
	8	2345 psig (16170 kPa)	1740 psig (12000 kPa)
	9	2250 psig (15510 kPa)	1660 psig (11450 kPa)
Top-Chem 2000®	1	3000 psig (20680 kPa)	100 psig (690 kPa) at 500°F (260°C)
	2	2910 psig (20060 kPa)	
	3	2820 psig (19440 kPa)	
	4	2725 psig (18790 kPa)	
	5	2630 psig (18130 kPa)	
	6	2535 psig (17480 kPa)	
	7	2440 psig (16820 kPa)	
	8	2345 psig (16170 kPa)	
	9	2250 psig (15510 kPa)	
25% glass filled PTFE	1 - 9	650 psig (4480 kPa) at -20°F (-29°C) to 100°F (38°C) 150 psig (1030 kPa) at 500°F (260°C)	
NBR (Buna-N)	1 - 9	300 psig (2070 kPa) at -20°F (-29°C) to 100°F (38°C) 225 psig (1550 kPa) at 250°F (121°C)	
FKM (Viton®)	1 - 9	300 psig (2070 kPa) at -20°F (-29°C) to 100°F (38°C) 180 psig (1240 kPa) at 400°F (204°C)	
PTFE (Teflon®)	1 - 9	300 psig (2070 kPa) at -20°F (-29°C) to 100°F (38°C) 150 psig (1030 kPa) at 500°F (260°C)	

**Note:** Lower temperatures are possible with metallic material variation. [e.g., 316 Stainless construction, Grafoil® gaskets/cushions useable to -325°F (-198°C)].

# PENBERTHY SERIES M FLAT GLASS GAGES

## INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

**TABLE 2 - DESIGN RATINGS OF TM & TMR GAGES**

Gasket material	Glass size	Model TM & TMR transparent	
		Wetted parts material steel or stainless steel w/B7 bolting	
		-20°F (-29°C) to 100°F (38°C)	600°F (316°C)
Grafoil® (standard) or Non-asbestos	1	2500 psig (17240 kPa)	1850 psig (12760 kPa)
	2	2315 psig (15960 kPa)	1720 psig (11860 kPa)
	3	2130 psig (14690 kPa)	1575 psig (10860 kPa)
	4	1940 psig (13380 kPa)	1435 psig (9890 kPa)
	5	1750 psig (12070 kPa)	1295 psig (8930 kPa)
	6	1565 psig (10790 kPa)	1160 psig (8000 kPa)
	7	1375 psig (9480 kPa)	1015 psig (7000 kPa)
	8	1190 psig (8200 kPa)	880 psig (6070 kPa)
	9	1000 psig (6890 kPa)	740 psig (5100 kPa)
Top-Chem 2000®	1	2500 psig (17240 kPa)	100 psig (690 kPa) at 500°F (260°C)
	2	2315 psig (15960 kPa)	
	3	2130 psig (14690 kPa)	
	4	1940 psig (13380 kPa)	
	5	1750 psig (12070 kPa)	
	6	1565 psig (10790 kPa)	
	7	1375 psig (9480 kPa)	
	8	1190 psig (8200 kPa)	
	9	1000 psig (6890 kPa)	
25% glass filled PTFE	1 - 9	650 psig (4480 kPa) at -20°F (-29°C) to 100°F(38°C) 150 psig (1030 kPa) at 500°F (260°C)	
NBR (Buna-N)	1 - 9	300 psig (2070 kPa) at -20°F (-29°C) to 100°F(38°C) 225 psig (1550 kPa) at 250°F (121°C)	
FKM (Viton®)	1 - 9	300 psig (2070 kPa) at -20°F (-29°C) to 100°F(38°C) 180 psig (1240 kPa) at 400°F (204°C)	
PTFE (Teflon®)	1 - 9	300 psig (2070 kPa) at -20°F (-29°C) to 100°F(38°C) 150 psig (1030 kPa) at 500°F (260°C)	
PCTFE/(Kel-F®) shields 0.063" (1.6mm) thick	1 - 9	300 psig (2070 kPa) at -20°F (-29°C) to 100°F(38°C) 180 psig (1240 kPa) at 400°F (204°C)	

**Note:** Lower temperatures are possible with metallic material variation. [e.g., 316 Stainless construction, Grafoil® gaskets/cushions useable to -325°F (-198°C)].

The pressure and temperature ratings may deviate from tables 1 and 2 if the gasketing materials of construction and/or bolting are other than those specified. Higher and/or lower temperature ratings are available with different materials of construction. To determine the maximum allowable working pressure for a specific temperature within the design limits stated in the tables, the user should refer to relevant technical datasheets or, when provided, the specifically stated design limits on a product proposal.

### NOTE

Under no circumstances should shields be used in reflex style gages. Installation of shields in reflex style gages will keep the liquid from coming in contact with the refractive prisms, thereby prohibiting visualization of the liquid level in the gage.

### DANGER

*NEVER exceed these design ratings or application data. Exceeding design ratings or application data may result in mechanical failure of gage components resulting in death, serious personal injury and property damage.*

# PENBERTHY SERIES M FLAT GLASS GAGES

## INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

---

### 4 INSPECTION

Upon receipt of a liquid level gage, check all components carefully for damage incurred in shipping. If damage is evident or suspected, do not attempt installation. Notify the carrier immediately and request damage inspection. The standard 1 section TM & TMR gage consists of: (1) chamber, (2) gaskets, (2) borosilicate flat glass, (2) rubber bands, (2) cushions, (2) covers, (1) washer, (1) nameplate and (6-14) bolting sets, depending on the size.

#### 4.1 Glass inspection

The self stick caution tape was applied at the factory to protect the glass during shipping, handling and installation. Do not remove the tape from the glass until all installation procedures have been completed, except during receiving inspection to inspect glass momentarily for shipping damage. Glass that is not protected will be vulnerable to dust, grit, tools and any other objects which may scratch, chip or break the glass.

#### WARNING

*DO NOT use glass that is chipped or even slightly scratched. Glass surface defects weaken the glass, which may result in glass breakage and fluid loss under pressure resulting in serious personal injury and property damage.*

#### 4.2 User rating inspection

The user should confirm that:

1. The Series M liquid level gage model and assembly number stamped on the nameplate conforms to the description on the user's purchase order.
2. The operating conditions described in the purchase order agree with the actual operating conditions at the installation site.
3. The actual operating conditions at the installation site are within the application data shown on the relevant technical datasheet or product proposal referred to above.
4. The materials of construction of the liquid level gage are compatible with both the contained media and surrounding atmosphere in the specific application.

#### Safety instructions

If the size, model or performance data of the liquid level gage as received does not conform with any of the criteria above, do not proceed with installation. Contact an authorized Penberthy distributor for assistance. The incorrect gage can result in unacceptable performance and potential damage to the gage.

### 5 INSTALLATION

Installation should only be undertaken by qualified, experienced personnel who are familiar with equipment of this type. They should have read and understood all of the instructions in this manual. The user should refer to relevant technical datasheets or product proposal to obtain dimensional information for the specific size and model of liquid level gage.

It is recommended that all liquid level gage installations be provided with gagecock sets equipped with ball check shut-off. Gagecock sets are designed to isolate the gages from the pressure vessel when it becomes necessary to drain or service the gages. The ball check shut-off is designed to retard leakage of the contained fluid in the event of gage glass breakage. Ball checks are available for both positive and negative vessel pressures.

The number of different types of gage and gagecock installations is too great to detail adequately in an installation manual. Therefore, it is the user's responsibility to ensure that the knowledgeable installation personnel plan and carry out the installation in a safe manner. The following procedures are some of the installation guidelines that should be employed:

#### 5.1 Piping strain

The gage should be mounted and connected so that it does not support any piping weight. Piping not properly supported, independent of the gage, may subject the gage to stresses that can cause leaks or glass breakage. Support brackets are available as an accessory.

#### 5.2 Differential thermal expansion

High mechanical loads may be imposed on a gage by expanding and contracting pipes due to hot or cold service. Such mechanical loads on the gage must be minimized by the use of expansion loops in the system. Failure to allow for expansion or contraction can result in leaks or glass breakage.

#### 5.3 Mirror viewing

For added safety, a system of indirect viewing by means of mirrors should be installed to protect personnel from the hazards of possible gage failure.

#### 5.4 Nut re-torquing

Nut re-torque is vital to the operation of a liquid level gage because gaskets take permanent set under initial bolt loading at assembly. Tightening of nuts before installation to values specified in Table 3 is necessary to ensure pressure retaining capabilities of a liquid level gage to specific design ratings. The user must refer to the liquid level gage model and assembly number and to the purchase order or tag to determine materials of construction.

#### Safety instructions

Before placing a liquid level gage into initial operation, torque values must be verified. From factory testing to installation, gasketing may take 'set' reducing closure force. Re-torquing before operation reduces chance of leakage or gasket 'blow out'.

PENBERTHY SERIES M FLAT GLASS GAGES

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

TABLE 3 - BOLT TORQUE VALUES

Gage models & gasket material	ft-lb [N-m]
RM, RMR, TM, TMR w/Grafoil® (standard)	25 to 30 [34 to 41]
RM, RMR, TM, TMR w/Non-asbestos (optional)	30 to 35 [41 to 48]
Top-Chem 2000®	25 to 30 [34 to 41]
PTFE and PCTFE (Kel-F® )	20 to 25 [27 to 34]
25% glass filled PTFE	19 to 22 [26 to 30]
All models with FKM or elastomeric (optional)	10 to 15 [14 to 20]
TM, TMR with PCTFE (Kel-F®) shields (optional) 0.063" [1.6mm]	20 to 25 [27 to 34]

Using a torque wrench, tighten nuts in 5 ft-lb (7 N-m) increments following the 'Z' pattern sequence in Figure 1, until the torque values shown in Table 3 above for the specific liquid level gage are reached. For multiple section gages, torque the center section(s) and progressively work toward the ends of the gage.

If bolting, gasketing or glass on any repaired section of a multi-section gage is disturbed, all sections must be checked for integrity and retorqued as necessary.

WARNING

Failure to comply with the proper torquing sequence or force value can lead to leakage, gasket blow-out or glass breakage resulting in gage failure, serious personal injury or property damage.

NOTE

Depending on gage size there may be less bolting than shown in Figure 1. Start at the center and follow 'Z' pattern outward to the limit of bolting on a specific gage.

5.5 Belleville washers

Belleville washers are used to reduce the need to retorque nuts. This is especially important for gages subject to pressure and/or thermal cycling. The conical washers allow for material expansion and contraction while maintaining axial bolt loading and, therefore, compression on the gasket. Model RM & RMR gages require 4 washers per nut; model TM, TMR gages require 2 washers per nut (4 per bolt). Washers should be assembled with cupped side facing the gage cover. Refer to Figure 2 for proper washer assembly.

NOTE

The following procedure is to be done on only one side of a transparent gage. Using a torque wrench, tighten nuts in 5 ft-lb (7 N-m) increments following the 'Z' pattern sequence found in Figure 1 until the torque values shown in Table 3 are reached.

6 OPERATION

Before initializing liquid level gage operation, check that all installation procedures have been completed. Use only qualified experienced personnel who are familiar with liquid level gage equipment and understand the implications of the tables and all the instructions thoroughly. Check to determine that all connections are pressure tight. Ensure that nuts have been re-torqued to their proper values as specified in Table 3. Remove self stick caution tape from the glass and inspect to be sure that glass is clean and free of any damage such as cracks, scratches, pits and chips.

6.1 Hydrostatic test

DANGER

Liquid level gage installations should be brought into service slowly to avoid excessive shock or stress on the glass. Rapid pressurization or sudden changes in temperature may cause glass breakage. To avoid excessive thermal shock or mechanical stress on glass, the connecting gagecocks should be opened slightly and the gage temperature and pressure allowed to equalize slowly. If the gagecocks are equipped with ball checks, the gagecocks must be opened all the way after the pressure and temperature have equalized to permit operation of the automatic ball checks in the event of failure. Failure to follow the recommended operating procedures can result in death, severe personal injury and/or property damage.

Take all precautions necessary to handle the possibility of leakage during the test. Hydrostatically pressure test all installations to at least 100 psig (690 kPa) but less than the design pressure and correct any leakage before proceeding.

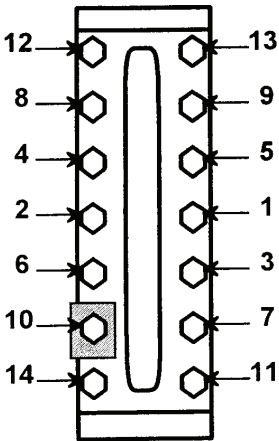


FIGURE 1  
Nut tightening sequence

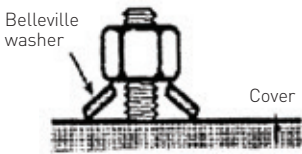


FIGURE 2  
Belleville washer position

# PENBERTHY SERIES M FLAT GLASS GAGES

## INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

---

### 7 MAINTENANCE

#### WARNING

*Use only qualified experienced personnel who are familiar with liquid level gage equipment and thoroughly understand the implications of the tables and all the instructions. DO NOT proceed with any maintenance unless the liquid level gage has been relieved of all pressure or vacuum, has been allowed to reach ambient temperature and has been drained or purged of all fluids. Failure to follow instructions can cause serious personal injury and property damage.*

The rate at which components degrade is dependent on a variety of conditions. Pressure, temperature and process media all influence the rate at which gage components deteriorate. Higher temperatures can accelerate the deterioration of gaskets, cushions, glass and metals. Acids and similar chemicals can break down the integrity of almost any material. Concentration of chemicals can accelerate the corrosion rate. Emerson cannot create a blanket maintenance schedule for every application.

The end user is the most familiar with the process media and conditions and must be responsible for creating a maintenance schedule. The user must create maintenance schedules, safety manuals and inspection details for each liquid level gage. Realistic maintenance schedules can only be determined with full knowledge of the services and application situations involved. These will be based upon the user's own operating experience with their specific application.

If bolting, gasketing or glass on any section of a multi-section gage is disturbed, all sections must be checked for integrity and re-torqued or repaired as necessary.

On all installations, the following items should be evaluated regularly by the user for purposes of maintenance:

1. Glass, for cleanliness and signs of damage or wear.
2. Shields, if used, for signs of clouding, wear or deterioration.
3. Gage, for signs of leakage around gaskets or at connections.
4. Gage, for signs of internal or external corrosion.

#### 7.1 Maintenance procedures

**Glass** should be given regular and careful attention. Keep glass clean using a commercial glass cleaner and a soft cloth. Inspect the surface of the glass for any clouding, etching or scratching or physical damage such as bruises, checks or corrosion. Glass that is damaged is weakened and may break under pressure. Shining a light at approximately a 45° angle will aid in detecting some of these conditions. Typical damaged areas will glisten more brightly than the surrounding glass because the light is reflected.

Detection of any damage, problem areas or surface wear is sufficient evidence to take the liquid level gage out of service. DO NOT proceed with operation of the liquid level gage until the glass has been replaced with a glass replacement kit following the disassembly-reassembly instructions in Section 8.

**Shields** showing any signs of clouding, wear or deterioration are an indication that the gage glass has been exposed, or could soon be exposed to the contained fluid. Take the liquid level gage out of service immediately. DO NOT proceed with operation of the liquid level gage until shields and glass have been replaced by following the disassembly-reassembly instructions in Section 8.

**Gasket leaks** must be repaired immediately. DO NOT proceed with operation of a liquid level gage until gaskets have been replaced by following Section 8 disassembly-reassembly instructions.

**Connection leaks** at a flanged or threaded connection should be corrected by tightening the bolting at the connection or by taking the liquid level gage out of service and wrapping the connection threads with PTFE tape on all male pipe threads.

**Corrosion** may occur if the user has selected an improper material for the liquid level gage application. It is the responsibility of the user to choose a material of construction compatible with both the contained fluid and the surrounding environment. If internal or external corrosion is present, an investigation must be performed by the user immediately. It may be necessary to contact an authorized Penberthy distributor to better determine the origin of the corrosion.

# PENBERTHY SERIES M FLAT GLASS GAGES

## INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

### 7.2 Troubleshooting

- Problem: glass becomes etched or clouded in service prematurely
- Cause: fluid being handled is not compatible with the glass or shields
- Solution: replace the glass and install shields which will not be affected by contained fluid
- Problem: glass breaks in service continually despite careful attention to maintenance procedures
- Cause: thermal shock, hydraulic shock, mechanical loads, exceeding design ratings or a combination of these
- Solution: check entire system to determine possible sources of loads. Check application to determine actual operating conditions and contact an authorized Penberthy distributor on how to proceed.

### 8 REMOVAL - DISASSEMBLY - REASSEMBLY

#### WARNING

*Use only qualified experienced personnel who are familiar with liquid level gage equipment and understand the implications of the tables and all the instructions thoroughly. DO NOT proceed with any maintenance unless the liquid level gage has been relieved of all pressure or vacuum, has been allowed to reach ambient temperature and has been drained or purged of all fluids. Failure to follow instructions can cause serious personal injury and property damage.*

#### 8.1 Disassembly

Use a secure workbench longer than the liquid level gage and sufficiently wide to lay out parts as they are removed.

1. Lay gage on bench so nut side of fastener is up.
2. Hold gage firmly; loosen nuts starting at both ends of each section and then proceed from both ends to the center of each section as shown in Figure 3.
3. Nut loosening sequence -remove nuts, washer, belleville washers (if any) and nameplate -tap covers with rubber hammer as needed to loosen and remove.
  - for belleville washer assemblies: to remove covers, studs may need to be removed by laying the assembly on its side and knocking the stud/U-bolts through the cover with a hammer and punch.
  - remove cushions, glass, shields (if any) and gaskets.
  - tap liquid chamber or remaining covers as necessary with rubber hammer to break loose and remove remaining components.
  - remove, destroy and dispose of all glass, cushions, gaskets and shields. Under no circumstances should these components be re-used or installed on a gage.

#### NOTE

If size of gage is smaller than shown, follow spiraling sequence from the ends until all bolting is loosened.

#### WARNING

*Once used, cushions, gaskets and shields are deformed permanently by compression and, if re-used, may cause leaks and high stress points resulting in glass breakage. Glass may contain hidden damage and internal stresses caused by previous usage. If re-used, the glass may break under pressure causing severe personal injury or property damage.*

#### 8.2 Inspection of glass seating surfaces

Clean the glass seating surfaces on the liquid chamber and cover with a soft metal scraper (preferably brass) to remove all burrs, rust and remnants of the previous gaskets and cushions. Exercise extreme care to avoid gouging or scarring gasket and cushion seating surfaces. Use a known flat piece of metal the same approximate length as the glass or a new piece of glass and a thickness gage to check flatness of each glass seating surface on liquid chamber and under cover. Surface must be flat within 0.002 inch (0.05 mm). If any one surface is found to be beyond a tolerance of 0.002 inch (0.05 mm), the entire gage must be disposed of and replaced. Gasket seating surface must have a final surface finish of 62 to 250 AARH.

#### WARNING

*Flatness of glass seating surfaces outside 0.002 inch (0.05 mm) tolerance specified is an indication of the gage having been overstressed through repeated exposure to mechanical, thermal or hydraulic shock during its previous service. Operation of a liquid level gage which has been overstressed will result in abnormal stresses on the glass which may cause it to break. If the surface finish is not in the 62-250 AARH range, the gasket may extrude under pressure with resulting sudden release of pressure, leakage of contained fluid, serious personal injury or property damage.*

Glass seating surfaces should NOT be machined to achieve seating tolerance. The chamber and cover are designed for a critical thickness to achieve the pressure/temperature ratings. Machining glass seating surfaces may result in non-compliance to the necessary critical thickness due to material removal.

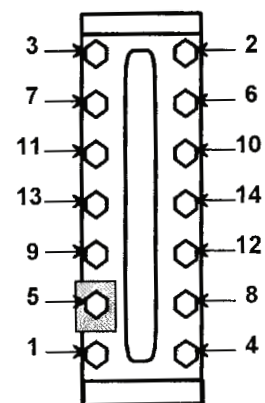


FIGURE 3  
Nut loosening sequence



# PENBERTHY SERIES M FLAT GLASS GAGES

## INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

---

### 8.3 Re-assembly

If all glass seating surfaces are found to be within the 0.002 inch (0.05 mm) tolerance described in the previous section, proceed to obtain new glass, gaskets, cushions and shields (if used) and proceed to re-assemble as follows (refer to exploded parts view in Section 11 if needed):

1. Clean threads on bolt and nuts to remove all paint, rust and scale. Apply a light coat of oil to the threads.
2. For transparent gages, insert bolts through half the cover and lay out covers along the bench, side by side, with the liquid chamber. Use chamber to space covers and line them up with vision slots.
3. For reflex style and belleville reflex style gages, lay out covers along bench, side by side, with liquid chamber. Use chamber to space covers and line them up with vision slots.
4. For transparent belleville style gages, thread nuts on stud, place two belleville washers under nut with pointed end toward the nut (see Figure 2), insert stud through each cover and lay out covers along bench, side by side, with liquid chamber. Use chamber to space covers and line them up with vision slots.
5. Install one cushion inside each cover.

### WARNING

*Separate installation instructions are supplied with replacement glass. All instructions supplied with the glass must be followed, as there are precautions to be taken when handling gage glass. Among the precautions is avoidance of bumping or sliding glass against any surface and inspection of individual pieces. Failure to follow any of the replacement gage glass installation instructions could result in glass breakage with resulting sudden release of pressure, severe personal injury or property damage.*

6. Install rubber band around each piece of glass, then place glass centered inside each cover.
7. Install shields, if used, and gasket on glass being careful to keep components centered.
8. Place liquid chamber on the gaskets making sure all components are aligned with vision slot.
9. For reflex gage, install U-bolts in place by tapping as needed with rubber hammer, being careful not to lose alignment with vision slot.
10. For reflex gage, turn over assembly onto backside of U-bolts quickly. Assemble nameplate, washer and nuts to U-bolts. Tighten nuts with fingers. Using a torque wrench, tighten nuts in 5 ft-lb (7 N-m) increments, following the sequence in Figure 1 until the torque values shown in Table 3 are reached.

### NOTE

Depending on gage size there may be less bolting than shown in Figure 1. Start at the center and follow 'Z' pattern outward to the limit of bolting on a specific gage.

11. For transparent gage, install gaskets and shields, if used, centered on vision slots.
12. Install rubber band around each piece of glass, then place glass centered on gasket or shields, if used.
13. Install one cushion on each piece of glass.
14. Install covers in place being careful to maintain components' alignment inside.
15. Install nameplate, washer and nuts to bolts. Tighten nuts with fingers. Using a torque wrench, tighten nuts in 5 ft-lb (7 N-m) increments, following the sequence in Figure 1 until the torque values shown in Table 3 are reached.
  - A. For transparent belleville style gages: install nameplate and two belleville washers under each nut with pointed end toward the nut (see Figure 2). Finger tighten nuts.

### NOTE

The following procedure is to be done on only one side of the gage.

- B. For reflex belleville style gages: install nameplate and four belleville washers under each nut with pointed end toward the nut (see Figure 2). Finger tighten nuts.
16. Using a torque wrench, tighten nuts in 5 ft-lb (7 N-m) increments, following the sequence in Figure 1, until the torque values shown in Table 3 are reached.

Refer to Section 5 for installation and Section 6 for operation of liquid level gage when returning to service.

### 9 DISPOSAL AT END OF USEFUL LIFE

---

Penberthy gages are used in a variety of fluid applications. By following the appropriate federal and industry regulations, the user must determine the extent of preparation and treatment the gage must incur before its disposal. A Material Safety Data Sheet (MSDS) may be required before disposal services accept certain components. Metal, glass and polymers should be recycled whenever possible. Refer to order and relevant technical datasheets for materials of construction.



# PENBERTHY SERIES M FLAT GLASS GAGES

## INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

### 10 TELEPHONE ASSISTANCE

If you are having difficulty with your liquid level gage, contact your local Penberthy distributor. You may also contact the factory direct at (956) 430-2500 and ask for an applications engineer. So that we may assist you more effectively, please have as much of the following information available as possible when you call:

- Model #
- Name of the company from whom you purchased the liquid level gage
- Invoice # and date
- Process conditions (pressure, flow rates, tank shape, etc)
- A brief description of the problem
- Trouble shooting procedures that failed

If attempts to solve your problem fail, you may request to return your liquid level gage to the factory for intensive testing. You must obtain a Return Authorization (R.A.) number from Emerson before returning anything. Failure to do so will result in the unit being returned to you without being tested, freight collect. To obtain an R.A. number, the following information (in addition to that above) is needed:

- Reason for return
- Person to contact at your company
- 'Ship-to' address

There is a minimum charge for evaluation of non-warranty units. You will be contacted before any repairs are initiated should the cost exceed the minimum charge. If you return a unit under warranty, but is not defective, the minimum charge will apply.

### NOTES

Grafoil® is a registered trademark of GrafTech.  
Top Chem 2000® is a registered trademark of Klinger.  
PCTFE (Formerly known as Kel-F®, a registered trademark of 3M) is manufactured by Daikin.  
Viton® and Teflon® are registered trademarks of the Chemours Company.

### 11 EXPLODED PARTS DRAWING

FIGURE 4  
Transparent


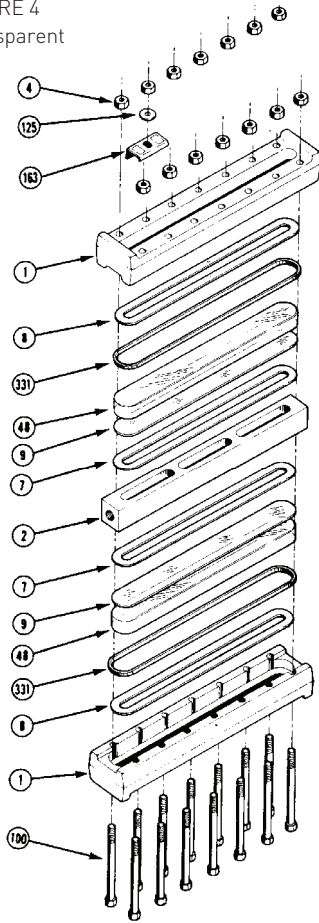


FIGURE 5  
Reflex

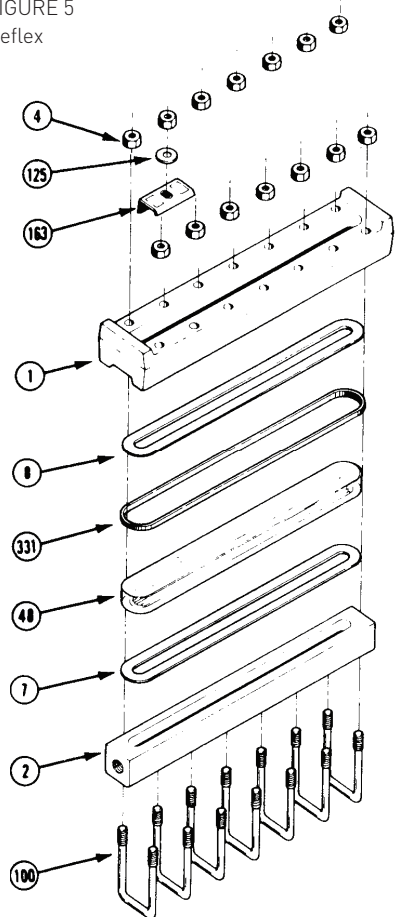

**Note:** size 9 shown - actual gage may be shorter and require fewer bolting components.

### PARTS LIST

Ref #	Item
1	Cover
2	Chamber
4	Nut
48	Glass
7	Gasket
8	Cushion
9	Shield
100	Bolt/U-bolt
125	Washer
163	Nameplate
331	Band

### RECOMMENDED SPARE PARTS

Ref #	Item	Qty.
100	Bolt/U-bolt	2/1 per sect.
4	Nut	2 per sect.
48	Glass	1
7	Gasket	2
8	Cushion	2
9	Shield (if used)	2

