


Lutron 0–10 V $\overline{\text{V}}$ Wallbox Controls with a Power Pack and Wired Occupancy Sensor

The NTSTV-DV and DDTV are 0–10 V $\overline{\text{V}}$ controls for compatible 0–10 V $\overline{\text{V}}$ LED drivers and fluorescent ballasts. This guide demonstrates how to wire a Lutron occupancy sensor with the NTSTV-DV or DDTV in the same installation.


Notes:

- Requires the use of a Lutron PP Series power pack (e.g., PP-DV or PP-347H).
- If the dimmer is in the OFF position, the occupancy sensors will NOT turn the lights on when the room becomes occupied.
- If the dimmer is in the ON position, the occupancy sensor will turn the lights ON to the last set level when the room becomes occupied.
- If the occupancy sensor turns the lights OFF due to time-out and the dimmer remains in the ON position, the occupancy sensor will return the lights to the last set level once the room becomes occupied.
- Must use a shielded cable with drain grounded and grounded faceplate/yoke in Class 2 installations.
- The following wiring installation is valid for Lutron LOS-CIR, LOS-CUS, LOS-CDT, LOS-WIR and LOS-WDT series occupancy sensors

Wiring Diagram: NTSTV-DV

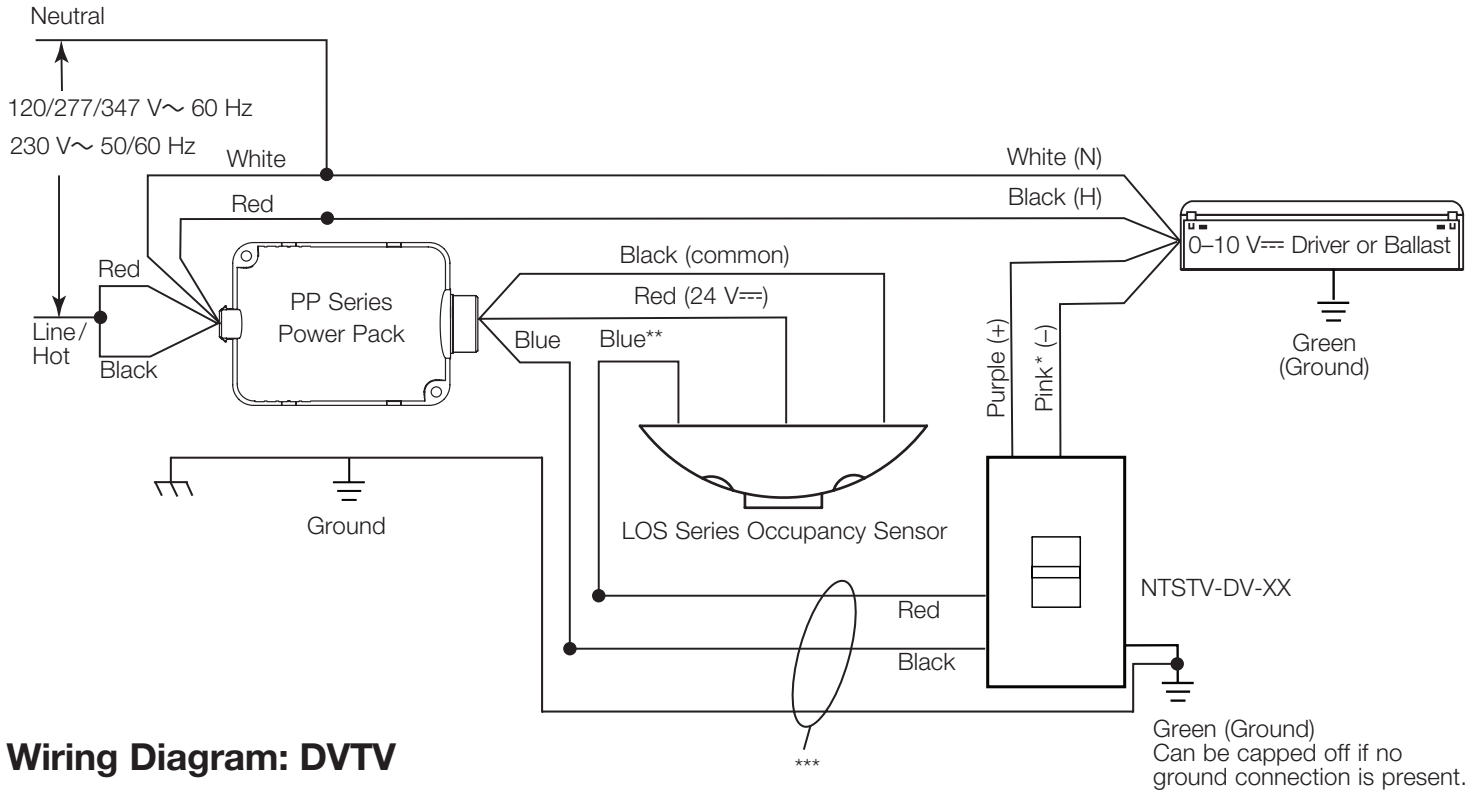

Wiring Diagram: DDTV

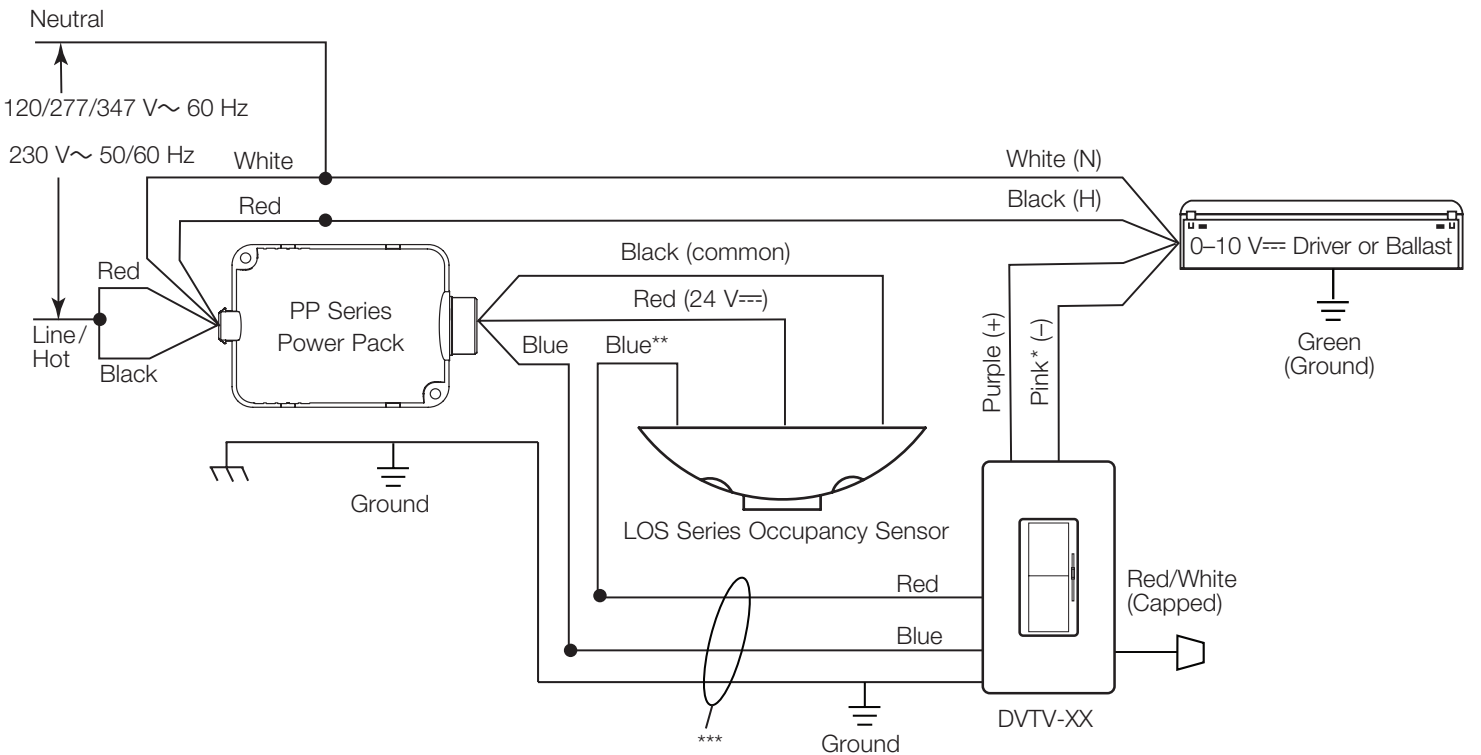

* This wire/terminal may be gray on older products or in retrofit applications.

** For LOS-CDT-500R-WH, LOS-CDT-1000R-WH, LOS-CDT-2000R-WH, and LOS-WDT-R-WH models: Use the pink* wire instead of the blue wire to use the photo cell option. The photo cell option prevents the lights from turning on when there is sufficient natural light and is available only with these -R models. These models also contain a separate relay output (yellow/white, black/white, and blue/white wires) that is not needed for this installation.

*** Must use a shielded cable with drain grounded and grounded faceplate/yoke.

Lutron is a trademark of Lutron Electronics Co., Inc., registered in the U.S. and other countries.

Lutron Contact Numbers

WORLD HEADQUARTERS USA

Lutron Electronics Co., Inc.
7200 Suter Road
Coopersburg, PA 18036-1299
TEL: +1.610.282.3800
FAX: +1.610.282.1243
Customer Assistance:
1.844.LUTRON1
support@lutron.com
www.lutron.com/support

North & South America Customer Assistance

USA, Canada, Caribbean:
1.844.LUTRON1 (1.844.588.7661)
Mexico:
+1.888.235.2910
Central/South America:
+1.610.282.6701

EUROPEAN HEADQUARTERS United Kingdom

Lutron EA Limited
125 Finsbury Pavement
4th floor, London EC2A 1NQ
United Kingdom
TEL: +44.(0)20.7702.0657
FAX: +44.(0)20.7480.6899
FREEPHONE (UK): 0800.282.107
Technical Support: +44.(0)20.7680.4481
lutronlondon@lutron.com

ASIAN HEADQUARTERS Singapore

Lutron GL Ltd.
390 Havelock Road
#07-04 King's Centre
Singapore 169662
TEL: +65.6220.4666
FAX: +65.6220.4333
Technical Support: 800.120.4491
lutronsea@lutron.com

Asia Technical Hotlines

Northern China: 10.800.712.1536
Southern China: 10.800.120.1536
Hong Kong: 800.901.849
Indonesia: 001.803.011.3994
Japan: +81.3.5575.8411
Macau: 0800.401
Taiwan: 00.801.137.737
Thailand: 001.800.120.665853
Other Countries: +65.6220.4666