

O & M Manual for the EGSC Service Entrance Automatic Transfer Switch



Contents

Description	Page
1. Introduction	2
2. Receiving, Handling, and Storage	5
3. Equipment Description	5
4. Installation and Wiring	8
5. Functional Testing	12
6. Adjustments	13
7. Maintenance and Component Replacement	14




⚠ WARNING

READ AND UNDERSTAND THE INSTRUCTIONS CONTAINED HEREINAFTER BEFORE ATTEMPTING TO UNPACK, ASSEMBLE, OPERATE, OR MAINTAIN THIS EQUIPMENT

HAZARDOUS VOLTAGES ARE PRESENT INSIDE TRANSFER SWITCH ENCLOSURES THAT CAN CAUSE DEATH OR SEVERE PERSONAL INJURY. FOLLOW PROPER INSTALLATION, OPERATION, AND MAINTENANCE PROCEDURES TO AVOID THESE VOLTAGES.

THE TRANSFER SWITCH EQUIPMENT COVERED BY THIS INSTRUCTION BOOK IS DESIGNED AND TESTED TO OPERATE WITHIN ITS NAMEPLATE RATINGS. OPERATION OUTSIDE OF THESE RATINGS MAY CAUSE THE EQUIPMENT TO FAIL RESULTING IN DEATH, SERIOUS BODILY INJURY, AND/OR PROPERTY DAMAGE. ALL RESPONSIBLE PERSONNEL SHOULD LOCATE THE DOOR MOUNTED EQUIPMENT RATINGS LABEL AND BE FAMILIAR WITH THE INFORMATION PROVIDED ON THE LABEL. A TYPICAL EQUIPMENT RATINGS LABEL IS SHOWN IN FIGURE 1.

Figure 1. Typical Service Entrance Rated Metered Automatic Transfer Switch Ratings Label.

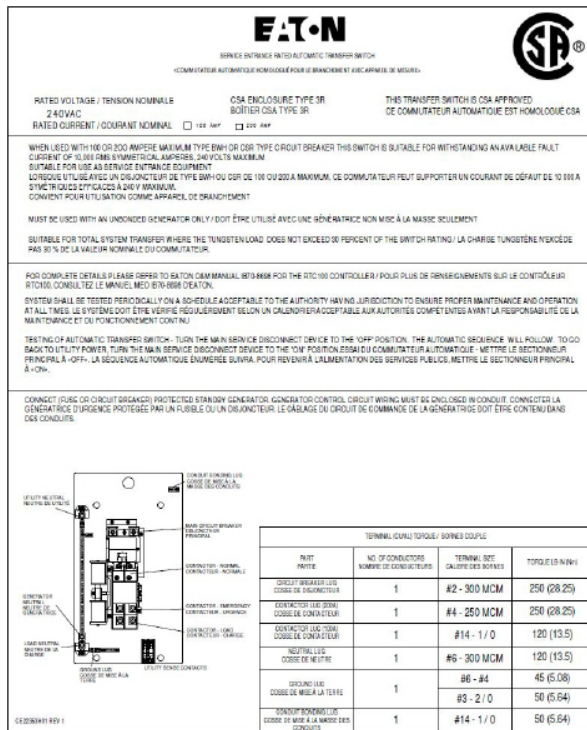

All possible contingencies that may arise during installation, operation, or maintenance, and all details and variations of this equipment do not purport to be covered by these instructions. If further information is required by the purchaser regarding a particular installation, application, or maintenance activity, please contact an authorized Eaton sales representative or the installing contractor.

Section 1: Introduction

1.1 Preliminary Comments and Safety Precautions

This technical document is intended to cover most aspects associated with the installation, application, operation, and maintenance of the Automatic Transfer Switch (ATS). It is provided as a guide for authorized and qualified personnel only. Please refer to the specific WARNING and CAUTION in Section 1.1.2 before proceeding. If further information is required by the purchaser regarding a particular installation, application, or maintenance activity, please contact an authorized Eaton sales representative or the installing contractor.

1.1.1 Warranty and Liability Information

No warranties, expressed or implied, including warranties of fitness for a particular purpose of merchantability, or warranties arising from course of dealing or usage of trade, are made regarding the information, recommendations, and descriptions contained herein. In no event will Eaton be responsible to the purchaser or user in contract, in tort (including negligence), strict liability, or otherwise for any special, indirect, incidental or consequential damage, or loss whatsoever, including but not limited to damage or loss of use of equipment, plant or power system, cost of capital, loss of power, additional expenses in the use of existing power facilities, or claims against the purchaser or user by its customers resulting from the use of the information and descriptions contained herein.

1.1.2 Safety Precautions

All safety codes, standards, and/or regulations must be strictly observed in the installation, application, operation, and maintenance of this device.

⚠ WARNING

THE WARNINGS AND CAUTIONS INCLUDED AS PART OF THE PROCEDURAL STEPS IN THIS DOCUMENT ARE FOR PERSONAL SAFETY AND PROTECTION OF EQUIPMENT FROM DAMAGE. AN EXAMPLE OF A TYPICAL WARNING LABEL HEADING IS SHOWN ABOVE TO FAMILIARIZE PERSONNEL WITH THE STYLE OF PRESENTATION. THIS WILL HELP TO ENSURE THAT PERSONNEL ARE ALERT TO WARNINGS, WHICH APPEAR THROUGHOUT THE DOCUMENT. IN ADDITION, CAUTIONS ARE ALL UPPER CASE AND BOLDFACE.

⚠ CAUTION

READ AND UNDERSTAND THE MATERIAL PRESENTED IN THIS DOCUMENT BEFORE ATTEMPTING INSTALLATION, APPLICATION, OPERATION, OR MAINTENANCE OF THE EQUIPMENT. IN ADDITION, ONLY QUALIFIED PERSONS SHOULD BE PERMITTED TO PERFORM ANY WORK ASSOCIATED WITH THE EQUIPMENT. ANY WIRING INSTRUCTIONS PRESENTED IN THIS DOCUMENT MUST BE FOLLOWED PRECISELY. FAILURE TO DO SO COULD CAUSE PERMANENT EQUIPMENT DAMAGE.

1.2 General Information

ATSs are used to protect critical electrical loads against loss of power. The load's utility power source is backed up by a generator power source. An ATS is connected to both the utility and generator power sources and supplies the load with power from one of these two sources. In the event that power is lost from the utility power source, the ATS transfers the load to the generator power source. Once the utility power is restored, the load is automatically transferred back to the utility power source (Figure 2).

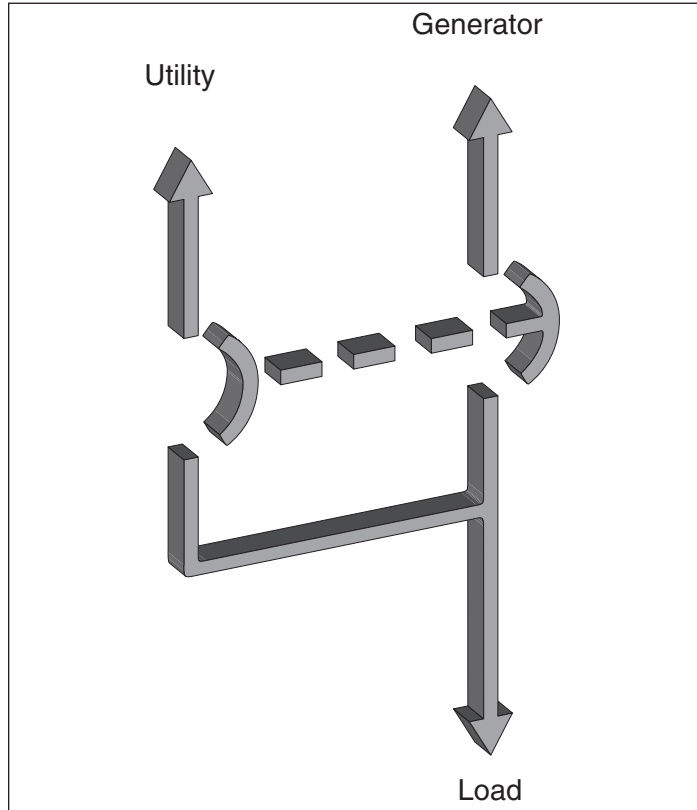


Figure 2. Typical Load Transfer Switch (Contactor) Schematic.

An intelligence system initiates the transfer when the utility power source fails or falls below a preset voltage. An engine start is then initiated by the ATS or the generator and the ATS transfers to the generator power source when sufficient generator voltage is available. When the utility power source is restored, the ATS automatically transfers back and the generator will shut down after a time delay. In the event the utility power source fails and the generator power source does not appear, the ATS remains connected to the utility power source until the generator power source does appear. Conversely, if connected to the generator power source and the generator power source fails while the utility power source is still unavailable, the ATS remains connected to the generator power source.

ATSs automatically perform the transfer function, and include three basic elements.

1. Main contacts to connect and disconnect the load to and from the source of power.
2. Solenoids to make the transfer of the main contacts from source to source.
3. Intelligence/supervisory circuits to constantly monitor the condition of the power sources and thus provide the intelligence necessary for the switch and related circuit operation.


1.2.1 Design Configuration

The Eaton Service Entrance Rated, Automatic Transfer Switch is a rugged, compact design that combines a service entrance rated disconnect, and ATS all in a single enclosure. The design provides for top entry service cabling from a meter socket. A factory wired 100, 200 or 400A circuit breaker provides a Canadian approved service entrance rated disconnect means. The ATS is controlled by an Eaton RTC-100 controller or relay, and utilizes power contactors to transfer essential loads from one power source to another (see Figure 3). The switch's design uses suitable mechanical and electrical interlock switches to eliminate the possibility of connecting the utility service to the generator output. In addition, a manual override lever is provided for the transfer function.

⚠ WARNING

DO NOT MANUALLY TRANSFER THE SWITCH WHILE UNDER LOAD.

Figure 3. EGSCA200ASE (200 A) deadfront removed.

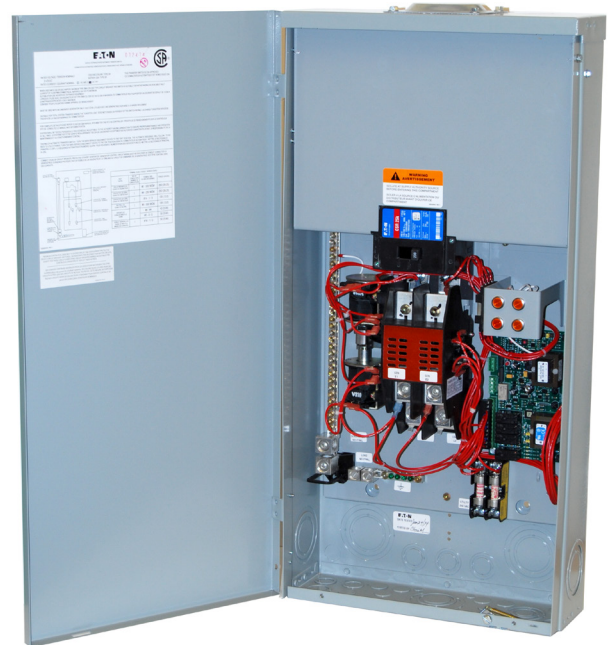

The benefits of the SE configuration are:

- Combined service disconnect and over-current protection in the ATS reduces the overall equipment and installation costs.
- Fewer components and power connections reduce maintenance requirements.


1.2.3 Load Shed Contacts

Two sets of contacts are available with the transfer switches that utilize the RTC-100 controller, and can be used to control large connected loads on the generator (i.e. air conditioners, hot tubs, etc.). The contacts are rated for 250 Vac, 5 amps maximum. This functionality requires that Load monitoring CT's are installed (sold separately, PN CS200)

1.3 Transfer Switch Catalogue Number Identification

ATS equipment catalogue numbers provide a significant amount of relevant information pertaining to a specific piece of equipment. The Catalogue Number Identification Table (see Table 1) provides the required interpretation information.

Table 1. ATS Catalogue Numbering System.

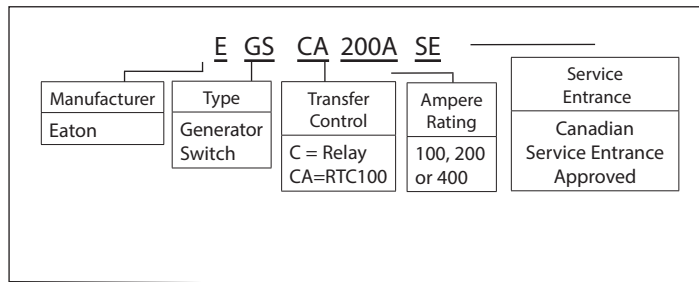

1.4 Environmental and Operational Conditions

Normally, an ATS is applied indoors in an electrical equipment room. It can also be used for normal outdoor applications (with standard type 3R enclosure) where the equipment is subject to falling rain, freezing temperatures, and 95% humidity (non-condensing). The ambient temperature range for operation is between -20 and 70°C (-4 and 158°F)..

1.5 Glossary

With respect to their use within this document and as they relate to transfer switch and controller operation, the following terminology is defined.

Available

A source is defined as "available" when it is within its undervoltage setpoint ranges for the nominal voltage setting.

Connected

Connected is defined as when the input is shorted by an external contact or connection.

Failed or Fails

A source is defined as "failed" when it is outside of the applicable voltage setpoint ranges for the nominal voltage and for a time exceeding 0.5 seconds after the time delay emergency fail (TDEF) time delays expires.

Failsafe

Failsafe is a feature that prevents disconnection from the only available power source and also forces a transfer or re-transfer operation to the only available power source.

Re-Transfer

Re-transfer is defined as a change of the load connection from the Generator to the Utility.

Utility

Utility is the primary source (normal source, normal power source, or normal).

Generator

Generator is the secondary source (generator emergency source, emergency power source, emergency, standby, or backup source).

Utility: Failed or Fails

Utility is defined as "failed" when it is outside of its undervoltage setpoint ranges for the nominal voltage and frequency setting.

Generator: Failed or Fails

Generator is defined as "failed" when it is outside of its undervoltage/underfrequency/overfrequency (if applicable) setpoint ranges for the nominal voltage and frequency setting for a time exceeding 0.5 seconds after the Time Delay Emergency Fail (TDEF) time delay expires.

Transfer

Transfer is defined as a change of the load connection from the Utility to the Generator power source.

Unconnected

Unconnected is defined as when the input is not shorted by an external contact or connection.

Section 2: Receiving, Handling, and Storage

2.1 Receiving

Every effort is made to ensure that the ATS equipment arrives at its destination undamaged and ready for installation. The packing is designed to protect the internal components as well as the enclosure. Care should be exercised, however, to protect the equipment from impact at all times. Do not remove the protective packaging until the equipment is at the installation site and ready to be installed.

When the ATS equipment reaches its destination, the customer should inspect the shipping container for any obvious signs of rough handling and/or external damage that occurred during transportation. Record any external and internal damage for reporting to the transportation carrier and to the Eaton sales representative, once a thorough inspection is complete. All claims should be as specific as possible and include the General Order numbers.

A shipping label affixed to the shipping container includes a variety of equipment and customer information, such as General Order and catalogue numbers. Make certain that this information matches the other shipping paper information.

Each ATS enclosure is packaged in its own box. Do not discard the packing material until the equipment is ready for installation.

Once the packaging is removed from the shipment, the enclosure door can be opened. A plastic bag of documents will be found in the enclosure. Important documents, such as wiring diagrams and appropriate instruction leaflets are enclosed within the bag and should be filed in a safe place.

2.2 Handling

As previously mentioned, ATS equipment is packaged in its own box. Protect the equipment from impact at all times and do not double stack. Once the equipment is at the installation site and ready to be installed, the packaging material can be removed. Refer to Section 4 of this manual for specific installation instructions.

2.3 Storage

Although well packaged, this equipment is not suitable for outdoor storage. The equipment warranty will not be applicable if there is evidence of outdoor storage. If the equipment is to be stored indoors for any period of time, it should be stored with its protective packaging material in place. Protect the equipment at all times from excessive moisture, construction dirt, corrosive conditions, and other contaminants. It is strongly suggested that the package-protected equipment be stored in a climate-controlled environment of -20 to 70°C (-4 to 158°F), with a relative humidity of 80% or less. Do not, under any circumstance, stack other equipment on top of an ATS equipment enclosure, whether packaged or not.

Section 3: Equipment Description

3.1 Introduction

The Eaton service entrance rated ATS is assembled and tested at the factory. It is designed to be used in conjunction with standby power distribution equipment to provide an alternate source of power to critical circuits in the event that the primary power source is interrupted.

The Advanced ATS with RTC-100 control monitors both utility and generator power sources and automatically transfers critical load circuits between the two sources, depending on which source is available. The utility power source is preferred and will remain connected to the switch if it is available. The Relay ATS relies on the Generator Controller to monitor utility and generator power, and signals the relay to control ATS position.




3.2 Service Disconnect

The Service Entrance (SE) section of the ATS is used for making the primary utility power, and neutral connections. Factory cabling from the load side of the main circuit breaker service disconnect connects to the utility lugs of the power contactor assembly.

3.2.1 Main Contacts

This ATS incorporates a power contactor. The main contacts connect and disconnect the load to and from the different power sources. The power contactor is mechanically and electrically interlocked to prevent the two sets of main contacts from being closed simultaneously.

Figure 4. Typical Advanced 200 Ampere Interior Assembly.

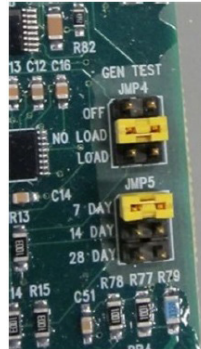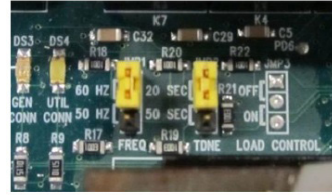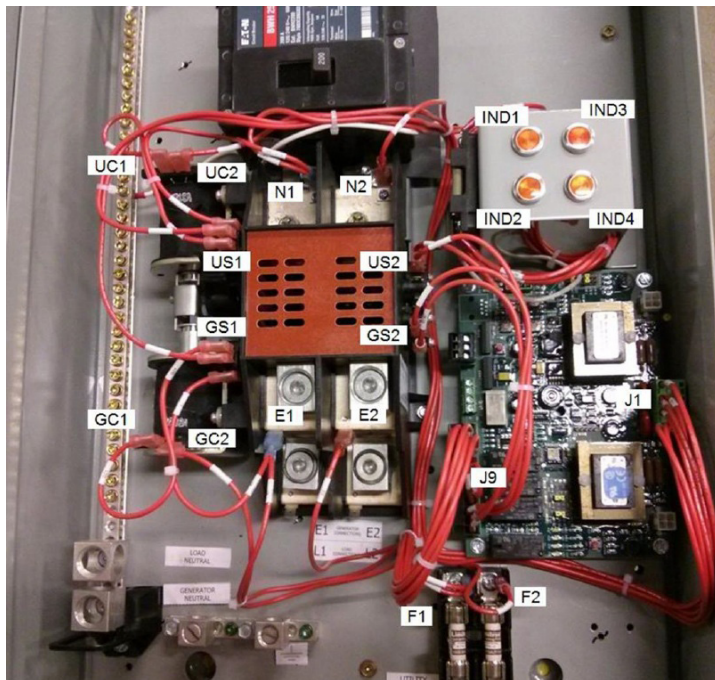

RTC100 JUMPER SETTINGS:

- FREQ: 60 HZ
- TDNE: 20 SEC
- LOAD CONTROL (IF AVAILABLE): OFF
- GEN TEST JMP 4: NO LOAD
- GEN TEST JMP 5: 7 DAY

3.3 RTC-100 Logic Panel on EGSCA100ASE, EGSCA200ASE and EGSCA400ASE

The RTC-100 is a microprocessor based transfer switch logic control package. The hardware and software of the controller contain the intelligence/supervisory circuits that constantly monitor the condition of the power sources. It provides the intelligence necessary for the operation of the ATS. Please refer to IB 70-8698 for complete details.

For the Load Management function, the unit requires Control Transformers to monitor the load (Not supplied - Purchased Separately PN CS200 for 100 and 200A, PN CS400 for 400A unit)

The RTC-100 controller has an operating temperature of -20 to 70°C (-4 to 158°F).


The controller circuit board is protected by an insulating conformal coating.

The specifications, under normal operating conditions, are as follows:

- Tolerance for voltage sensing function: $\pm 1\%$ of full scale
- Tolerance for frequency sensing function: ± 0.3 Hz of setting

Figure 5. Typical Basic 100 Ampere Interior Assembly.

- UC1: Utility Coil 1
- UC2: Utility Coil 2
- N1: Normal (utility) 1
- N2: Normal (utility) 2
- USW: Utility switch position
- GSW: Generator switch position
- GC1: Generator coil 1
- GC2: Generator coil 2
- E1: Emergency line 1
- E2: Emergency line 2
- L1: Load line 1
- L2: Load line 2
- F1: Fuse line 1 (used for utility sensing to generator N1)
- F2: Fuse line 2 (used for utility sensing to generator)
- REL: Transfer signal Relay
- 23, 194: Transfer signal connection from generator

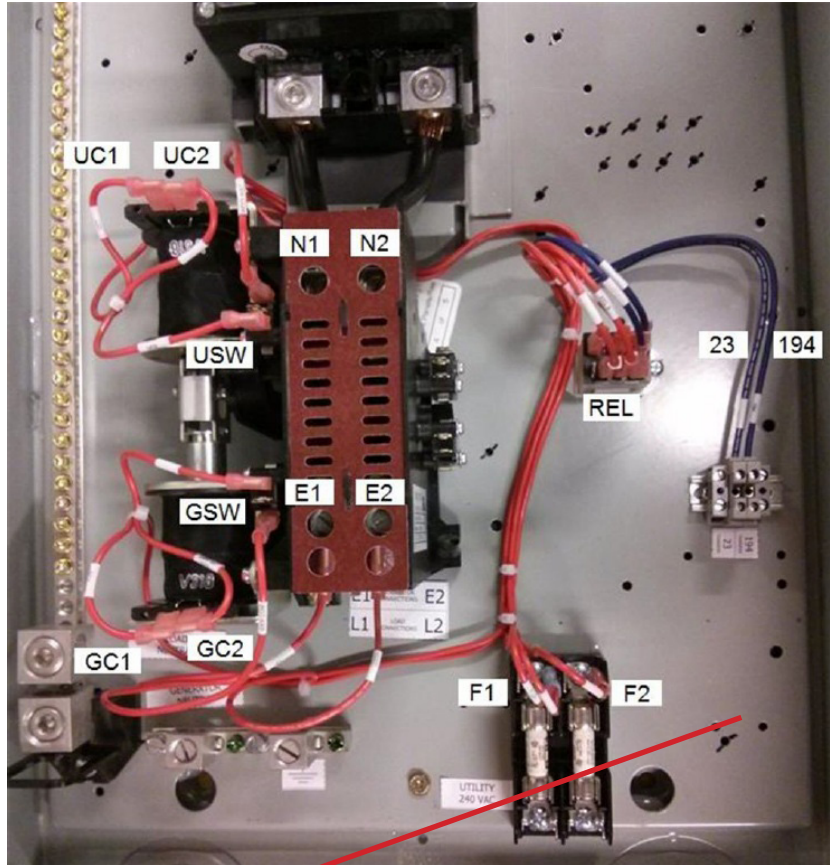

Install T1 Fuse Block (provided with Eaton generator) in this position, install jumper to L1 or L2 to ensure generator battery is charging when on utility and on generator source

PN's starting with EGSC: Require Qty 5 Control wires N1 (F1), N2 (F2), T1, 23 & 194 (DC Common "O" not required) for installation with Eaton/Generac Brand Generators

PN's starting with EGSCA: Require Qty 3 Control wires N1 (F1), N2 (F2), T1, for installation (23 & 194 Not Needed) when installed with Eaton/Generac Brand Generators

PN's starting with EGSCA when used with Engine Start type Generators: Require Control wires Qty 2-3 wires from RTC-100 Controller J7 for Engine Start signal (refer to Generator manual for other requirements)

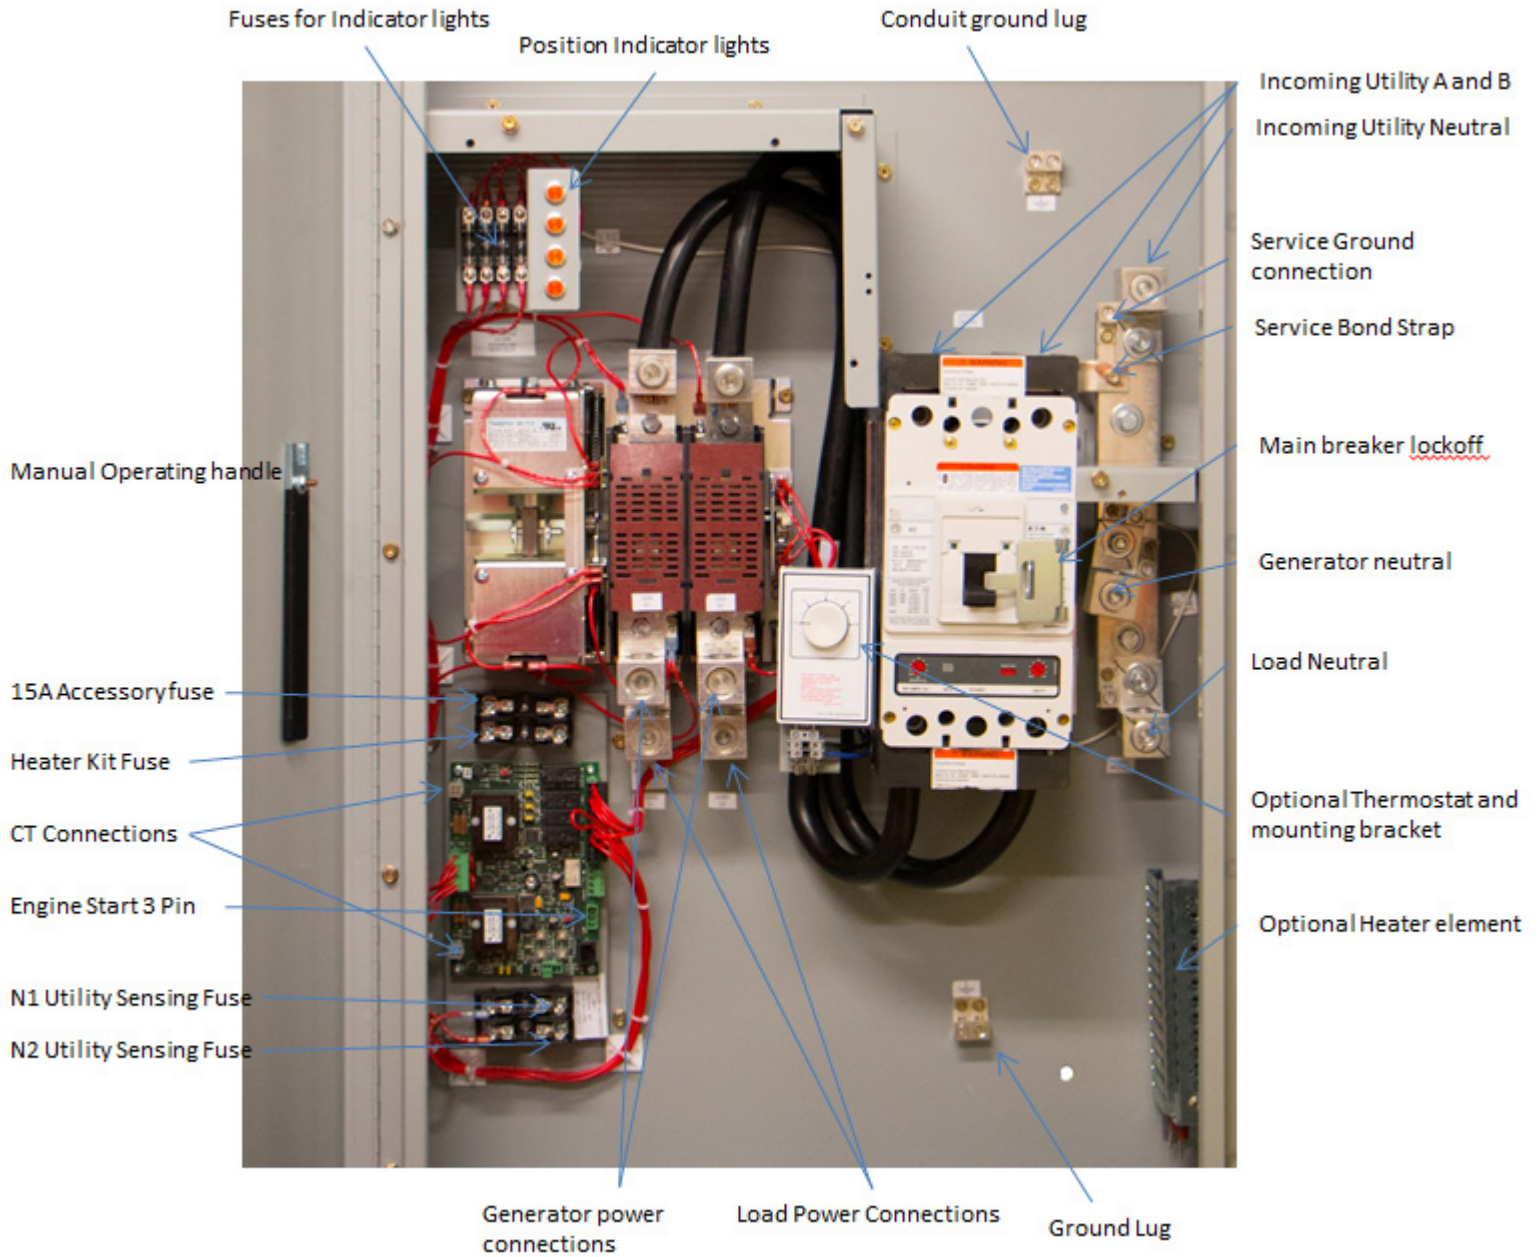


Figure 8. Typical Advanced 400 Ampere

4.5 Generator & Load Power Cable Connection

⚠ WARNING

POWER CONDUCTORS MAY HAVE VOLTAGE PRESENT THAT CAN CAUSE SEVERE PERSONAL INJURY OR DEATH. DE-ENERGIZE ALL POWER OR CONTROL CIRCUIT CONDUCTORS TO BE CONNECTED TO THE ATS EQUIPMENT BEFORE BEGINNING TO WORK WITH THE CONDUCTORS AND/OR TERMINATING THEM TO THE EQUIPMENT

⚠ CAUTION

TO HELP PREVENT COMPONENT DAMAGE OR FUTURE MALFUNCTIONS, USE EXTREME CARE TO KEEP CONTAMINANTS OUT OF THE ATS EQUIPMENT WHEN MAKING THE POWER CABLE CONNECTIONS.

Test all power cables prior to connection to the unit to ensure that the conductors or cable insulation has not been damaged while being pulled into position.

Power cables are to be connected to solderless, screw type lugs located on the Main Breaker assembly. Verify that the lugs supplied will accommodate the power cables being used. Also verify that the cables comply with all local electrical codes. Standard ATS equipment, as supplied from the factory, will accommodate the wire sizes shown in Table 3.

Table 3. Wire Sizes for ATSS.

Transfer Switch Amp Rating	Main Breaker Lug Size Range	Number of Cables per Phase
100	#2 AWG - 300 MCM	1
200	#2 AWG - 300 MCM	1
400	2/0 AWG - 500 MCM	1
	2/0 AWG - 250 MCM	2

⚠ CAUTION

IMPROPER POWER CABLE CONNECTIONS CAN CAUSE EXCESSIVE HEAT AND SUBSEQUENT EQUIPMENT FAILURE.

Note: Tighten the cable lugs to the torque identified on the label affixed to the unit's door.

Connect cables as follows (see Table 3):

- The generator power cables to the generator lugs on the contactor assembly.
- The load power cables to the load lugs on the contactor assembly.
- The generator neutral cable to the generator neutral lug on the neutral bar assembly.
- The load neutral cable to the load neutral lug on the neutral bar assembly.
- The generator and load ground cable to the generator and load ground lugs on the ground bar assembly.

⚠ WARNING

FAILURE TO PROPERLY CONNECT THIS TRANSFER SWITCH PER CANADIAN ELECTRIC CODE, MAY RESULT IN PRODUCT FAILURE, FIRE, LOSS OF PROPERTY, LOSS OF LIFE, ETC.

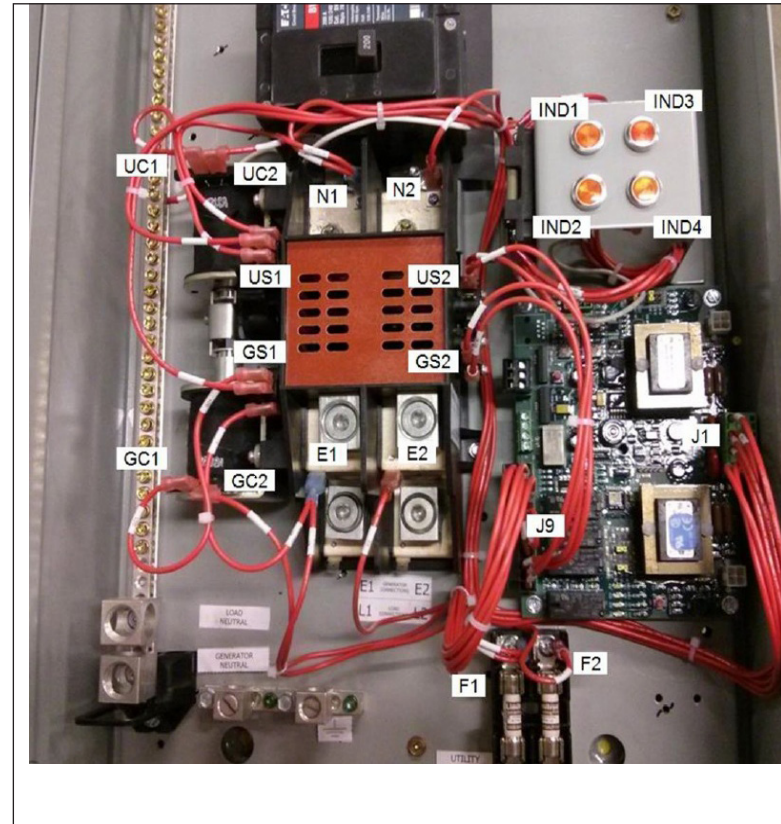


Figure 9. Generator & Load Power Cable Connection Locations.

4.6 Wiring

⚠ WARNING

POWER CONDUCTORS AND CONTROL WIRING MAY HAVE VOLTAGE PRESENT THAT CAN CAUSE SEVERE PERSONAL INJURY OR DEATH. DE-ENERGIZE ALL POWER OR CONTROL CIRCUIT CONDUCTORS BEFORE BEGINNING TO PERFORM ANY WIRING ACTIVITY TO OR WITHIN THE ATS EQUIPMENT.

⚠ CAUTION

CHECK THE ATS EQUIPMENT NAMEPLATE FOR RATED VOLTAGE. IT SHOULD BE THE SAME AS THE UTILITY AND GENERATOR LINE VOLTAGES. OPERATING THE EQUIPMENT ON IMPROPER VOLTAGE CAN CAUSE EQUIPMENT DAMAGE.

4.7 Installation

In a typical installation (see Figure 11), the generator (2) and utility power connect to the ATS (1). Power from the utility or the generator (2) is fed to the main circuit breaker panel from the ATS (1). The circuit breaker in the ATS is the service entrance disconnect for the installation.

When the utility power fails, the ATS will sense the failure, the generator will start, and when sufficient generator voltage is available, the ATS will switch. All loads will receive power from the generator. When utility power returns, the ATS will switch all power back to the utility source and the generator will shut down after its defined cooled down period.

4.7 Generator Start Connection

The generator start contact connection terminal blocks are located on the RTC-100 controller.

Note: Prior to making the generator start connection to the ATS, set the generator control selector switch to the OFF position to prevent an unwanted generator start. Control wiring, such as the generator start wires, must be run in a separate conduit from the power cables.

A normally open and normally closed contact as well as a common from the RTC-100 control board are wired out to this set of terminal blocks. The RTC-100 controller initiates the start of the generator by closing or opening these contacts. The start signal requirements of the generator will determine which contact is used to control the start up. Use the proper wire size as listed by the generator set (Genset) manufacturer. Pins 1-2 are NO, pins 2-3 are NC

4.8 Preliminary Checks

After the ATS enclosure is installed and power cables are connected to the equipment, thoroughly inspect the unit to ensure that no tools were left inside and that the cabinet is free of debris. If necessary, use a vacuum cleaner to remove any and all construction or installation debris from the equipment.

Read and understand all labels on the equipment. Review and understand the wiring diagrams supplied with the equipment. Note any optional accessories that may have been furnished with this unit and review their operation.

Verify that the phase-to-phase line voltages of both the utility and generator power sources are the same and that they match the rated voltage as indicated on the ATS ratings label.

CAUTION

SEVERE EQUIPMENT DAMAGE CAN RESULT IF THE UNIT IS NOT APPLIED AT PROPER VOLTAGE. DO NOT ENERGIZE THE EQUIPMENT IF THE SUPPLY VOLTAGES DO NOT MATCH EQUIPMENT RATINGS LABEL.

4.9 Protection

For Catalogue #EGSC100ASE, EGSCA100ASE, EGSC200ASE, EGSCA200ASE, EGSC400ASE and EGSCA400ASE

This switch is equipped with integral over-current protection. Continuous load current not to exceed 80 percent of switch rating.

This Transfer Switch is rated for use on a circuit capable of delivering not more than 25,000 rms symmetrical amperes, 240 volts maximum on 100 and 200A. 400A rating is 35,000 rms symmetrical amperes.

Section 5: Functional Testing

WARNING

YOU ARE READY TO ENERGIZE THE EQUIPMENT. VOLTAGES WITHIN THE ENCLOSURE ARE CAPABLE OF CAUSING SEVERE PERSONAL INJURY OR DEATH. USE EXTREME CAUTION TO AVOID CONTACT WITH ENERGIZED EQUIPMENT.

5.1 Preliminary Checks

Step 1: Check all loads connected to the ATS to ensure that they are ready to be energized.

5.2 Energize the Switch

Step 1: With the service entrance barrier removed use a voltmeter to measure the line-to-line and the line-to-neutral voltages on the line side of the circuit breaker. Confirm the utility voltage is correct then replace the service entrance barrier.

Step 2: Ensure the generator control selector switch located on the standby generator is set to the OFF position. If so equipped, remove the control fuse from the generator control panel to ensure the generator does not initiate a start during this phase of the preliminary check. Open the generator power source circuit breaker located on the generator assembly.

Step 3: Close the service entrance disconnect circuit breaker in the switch to connect the ATS to the utility power source voltage. If the ATS unit is not already in the UTILITY position, and the voltage is acceptable, the solenoid will engage and the contactor will automatically switch to the UTILITY position.

WARNING

CONTACT WITH ENERGIZED COMPONENTS WILL CAUSE ELECTRICAL SHOCK CAPABLE OF PRODUCING SEVERE PERSONAL INJURY OR DEATH. USE EXTREME CAUTION TO AVOID CONTACT WITH ENERGIZED COMPONENTS WHEN USING A METER FOR VOLTAGE CHECKS.

Step 4: Replace the control fuse in the generator control panel removed in Step 2 of Section 5.2. Position the generator control selector switch, located on the standby generator, to the AUTOSTART position. (It may also be labeled REMOTE START or AUTO.). Close the generator power source circuit breaker opened in Step 2 of Section 5.2.

5.3 Control Wires

Connect cables as follows (see Table 3):

- Generator N1 to Fuse F1
- Generator N2 to Fuse F2
- Generator T1 (Battery Charger) to ATS fuse T1 (fuse block provided with Eaton Standby Generator for Air Cooled products. On the 400A switch, this is pre-installed)
- EGSC* switches, require 23 and 194 connection from Genset (do not require "0" DC Common)
- EGSCA* switches DO NOT REQUIRE Genset 0, 23 or 194 connection
- The generator and load ground cable to the generator and load ground lugs on the ground bar assembly.

5.4 Operational Checks

Step 1: Open the service entrance disconnect circuit breaker originally closed in Step 3 of Section 5.2.

NOTICE

THIS WILL SIMULATE AN INTERRUPTION OF THE UTILITY POWER SOURCE.

Step 2: After a time delay (based on the generator settings), the standby generator engine will start.

Step 3: Using a voltmeter, measure the line-to-line and line-to-neutral voltages across the generator line terminals to ensure that the generator emergency voltage is correct. If necessary, make adjustments to the voltage regulator on the generator according to the manufacturer's recommendations to correct any voltage deviations. The ATS will only respond to the correct voltage from the generator power source.

Step 4: The ATS Time Delay Normal (Utility) to Emergency (Generator) (TDNE) will begin to time after the generator engine begins to run. After time out, the solenoid will engage and the contactor will automatically switch from the UTILITY to the GENERATOR position.

Step 5: Close the service entrance disconnect circuit breaker described in Step 3 of Section 5.2.

Step 6: The ATS Time Delay Emergency (Generator) to Normal (Utility) (TDEN) timer will begin timing, and the solenoid will engage and automatically switch from the GENERATOR to the UTILITY position and the generator will shut down after a cool down period.

5.5 Manual Operation

⚠ WARNING

DO NOT ATTEMPT TO MANUALLY OPERATE THE ATS WITH THE UTILITY OR GENERATOR AVAILABLE.

⚠ WARNING

HIGH VOLTAGES ARE PRESENT IN AND AROUND TRANSFER SWITCH EQUIPMENT. BEFORE ATTEMPTING TO MANUALLY TRANSFER, DISCONNECT THE LINE POWER FROM THE EQUIPMENT BEING SERVICED BY OPENING AND LOCKING OUT, IF POSSIBLE, THE NEXT HIGHEST DISCONNECT DEVICE. FAILURE TO FOLLOW THIS PROCEDURE COULD CAUSE SEVERE PERSONAL INJURY AND/OR DEATH.

ALWAYS TURN THE UTILITY POWER OFF AND TURN THE GENERATOR (IF A GENERATOR) CONTROL SELECTOR SWITCH TO THE "OFF" POSITION AND GENERATOR MAIN BREAKER TO "OFF" BEFORE ATTEMPTING A MANUAL TRANSFER.

⚠ WARNING

INSURE THE DEADFRONT IS INSTALLED PRIOR TO ENERGIZING THE TRANSFER SWITCH.

To Manually Operate

- Step 1: Disconnect all sources of power.
- Step 2: Remove lower deadfront on 100A and 200A switches. Locate the manual lever between the solenoids.
- Step 3: Locate the handle used to manually transfer the switch.
- Step 4: Attach the handle to the manual lever.
- Step 5: Move the lever up to go to utility or move the lever down to go to generator.
- Step 6: Reconnect the power.

Section 6: Adjustments

6.1 General

Refer to IB01602019E, supplied with the ATS for RTC-100 Controller adjustments and programming.

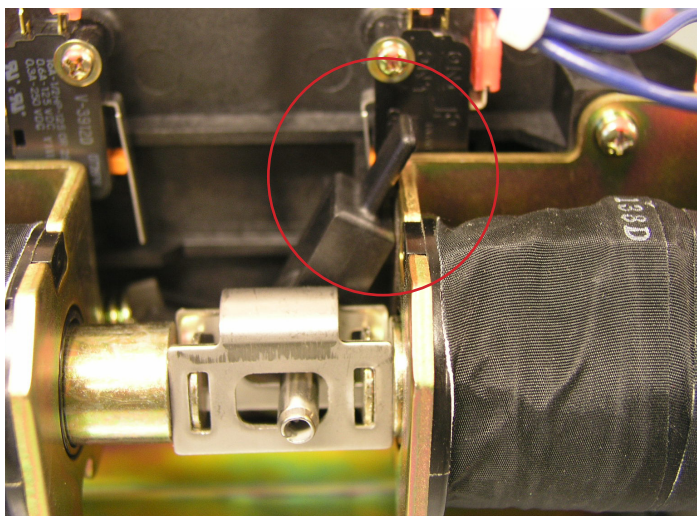


Figure 10. ATS Manual Operating Lever.



Figure 11. ATS Manual Operating Handle.

Section 7: Maintenance and Component Replacement

7.1 Introduction

WARNING

HIGH VOLTAGES ARE PRESENT IN AND AROUND TRANSFER SWITCH EQUIPMENT. BEFORE INSPECTING OR MAINTAINING THIS EQUIPMENT, DISCONNECT THE LINE POWER FROM THE EQUIPMENT BEING SERVICED BY OPENING AND LOCKING OUT, IF POSSIBLE, THE NEXT HIGHEST DISCONNECT DEVICE. FAILURE TO FOLLOW THIS PROCEDURE COULD CAUSE SEVERE PERSONAL INJURY AND/OR DEATH.

In general, ATS equipment is designed to be relatively maintenance free under normal usage. However, because of the variability of application conditions and the importance placed on dependable operation by this type of equipment, inspection and maintenance checks should be made on a regularly scheduled basis. Since equipment maintenance will consist mainly of keeping the equipment clean, the frequency of maintenance will depend, to a large extent, on the cleanliness of its surroundings. If a significant amount of dust or foreign matter is present, a more frequent maintenance schedule should be followed.

It is suggested that visual inspections of the equipment be made on a regular basis, not just during regularly scheduled periods. Always be alert for an accumulation of dirt in and around the structure, loose parts and/or hardware, cracks and/or discoloration to insulation, and damaged or discolored components.

Figure 16 is the wiring diagram for the EGS ATS switch.


Note: Only qualified and experienced personnel should attempt any diagnostic work using this diagram.

7.2 Procedures

A suggested maintenance procedure to be followed is outlined in Table 4.


Table 4. Recommended Periodic Maintenance Procedures

Step	Action
a. Make the transfer switch equipment safe for inspection and/or maintenance.	Disconnect the line power from the equipment being serviced by opening next highest disconnect device. Make certain that any accessory control power is switched off.
b. Inspect the structure area for safety hazards or potential maintenance problems.	Inspect the area, especially where the contactor is installed, for any safety hazards, including personal safety and fire hazards. Exposure to certain chemical vapors can cause deterioration of the electrical connections. Inspect for accumulated dirt, loose hardware, or physical damage. Examine the primary insulation for evidence of cracking or overheating. Overheating will show as discoloration, melting, or blistering of the conductor insulation, or as pitting or melting of the conductor surfaces due to arcing. Inspect the secondary control connections for damage, and control wiring for insulation integrity.
c. Inspect the contactor for dust, dirt, soot, grease, moisture, or corrosion.	Remove dust, dirt, soot, grease, moisture, and corrosion contamination from the surface of the switching device using a dry, soft lint-free cloth, dry soft bristle brush, and vacuum cleaner. Do not blow debris into the contactor. If contamination is found, look for the source and fix the problem.
d. Check for material integrity, uneven wear, discoloration, or loose hardware.	Severe material cracking will require replacement and loose hardware will need to be tightened.
e. Check the terminals and connectors for looseness or signs of overheating.	Overheating will show as discoloration, melting, or blistering of the conductor insulation. Connections that do not have signs of looseness or overheating should not be disturbed.
f. Exercise the contactor if it is not often exercised while in operation. This will permit the wiping action by the contacts.	If a switching device is used for frequent switching during normal operation, this step can be disregarded.
g. Return the transfer switch equipment to service.	Make certain all barriers are in place and the door is closed. Re-apply generator and utility power.

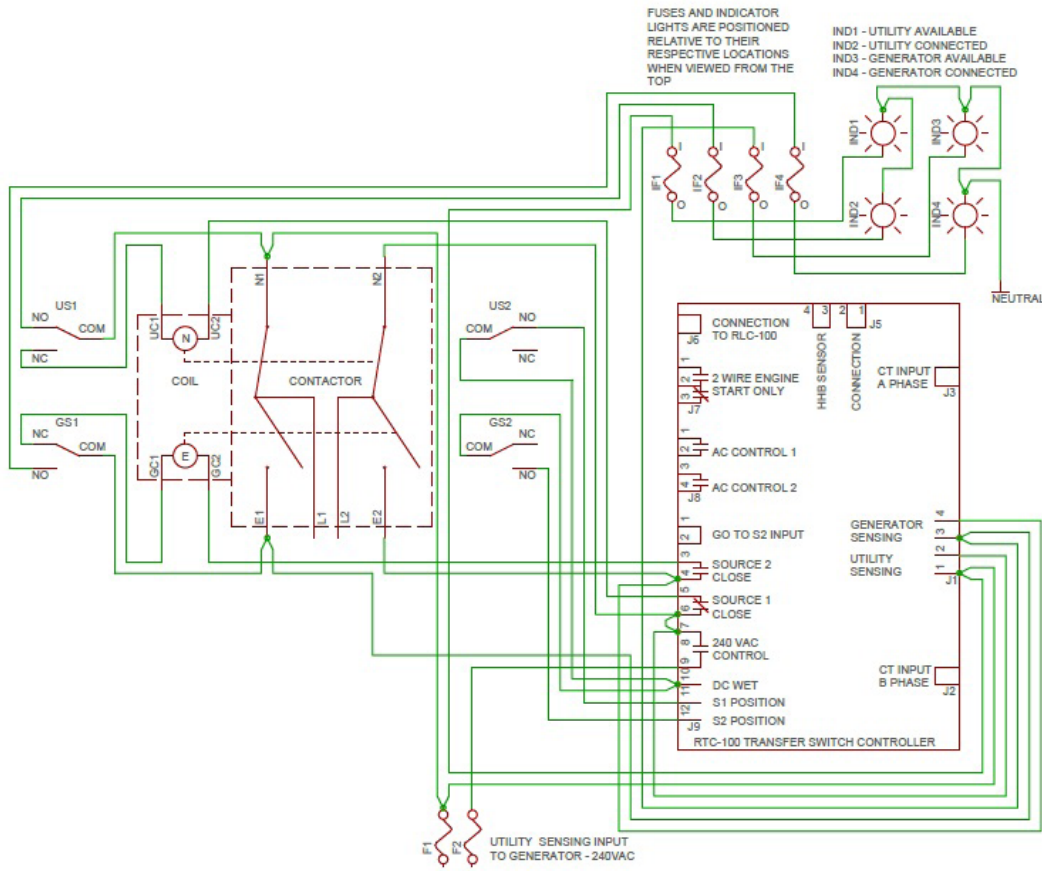

WIRING SCHEMATIC FOR RTC-100 STYLE
G03 - EGSCA100ASE
G04 - EGSCA200ASE

Figure 12. Wiring Diagram for the EGS ATS (Shown Connected to Normal Source 1- (N) Utility).

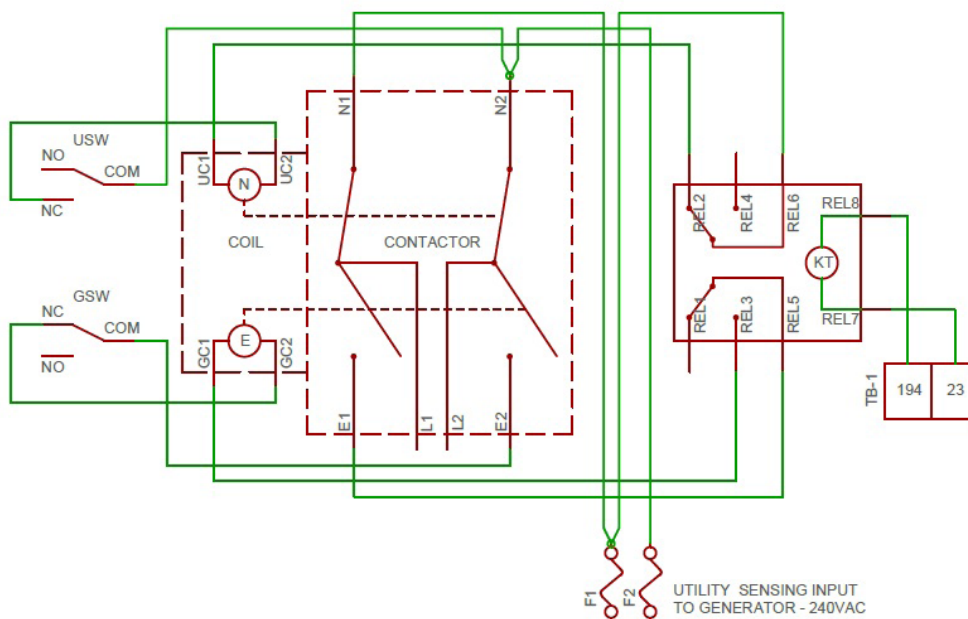

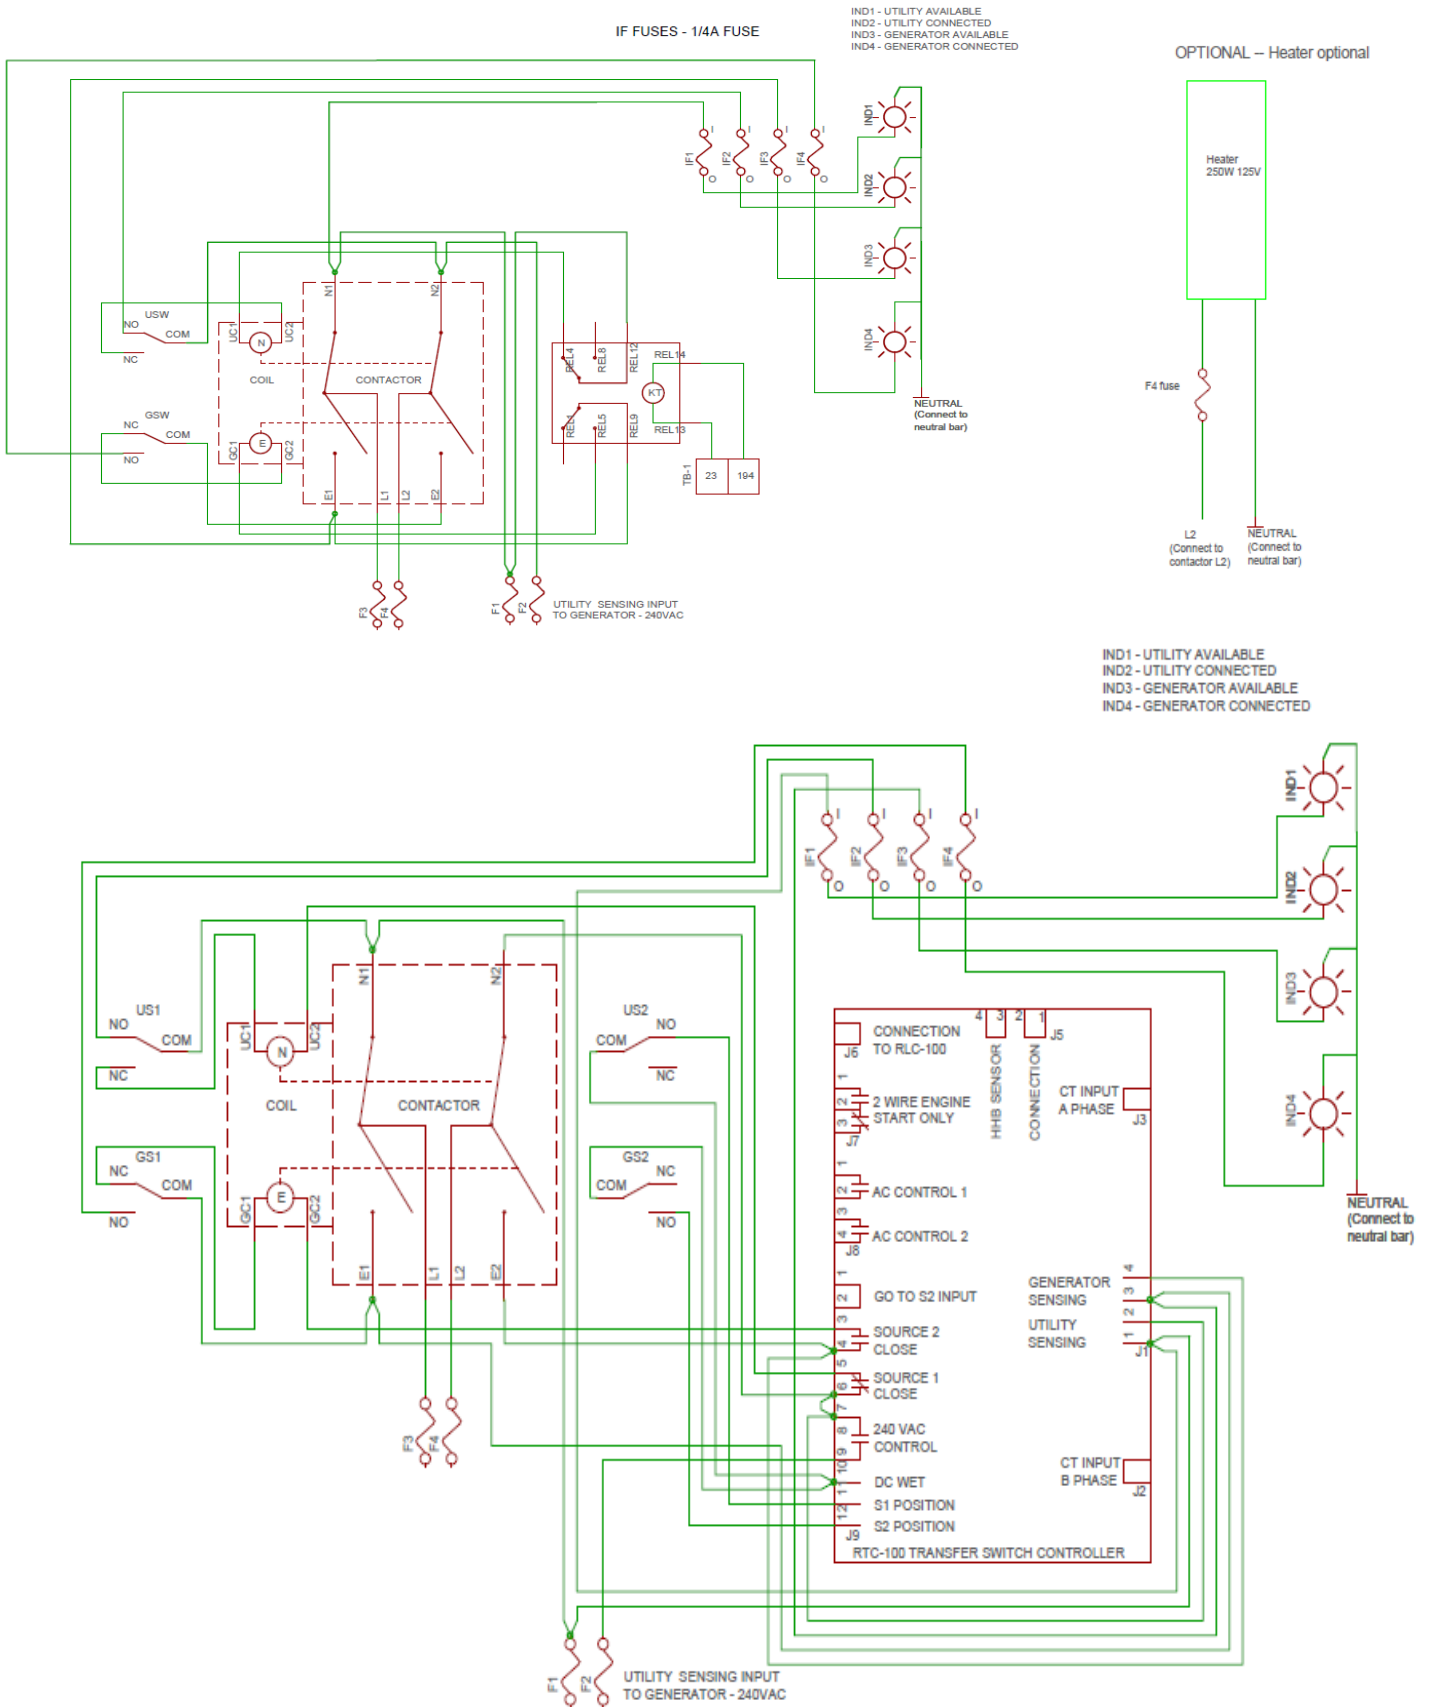


Figure 13. Wiring Diagram for the EGSC400ASE and EGSCA400ASE ATS (Shown Connected to Normal Source 1- (N) Utility).

7.4 Component Replacement

Certain components within the ATS are field replaceable. Table 5 lists the part numbers to use when ordering replacement components. To order replacement components, contact an authorized Eaton Sales Representative.

Table 5. Field Replaceable Components.

Component	Part Number	ATS Model
Contactors	99-5638	100A
Contactors	99-5702-15	200A
Contactors	99-5702-16	400A
RTC-100 Controller	RTC100	100/200/400A
Service Entrance Breaker	CSR2100 & MCBK225	100A
Service Entrance Breaker	CSR2200 & MCBK225	200A
Service Entrance Breaker	KD2400F	400A
Relay	D7PR2R1	100/200/400A

WARNING

HIGH VOLTAGES ARE PRESENT IN AND AROUND TRANSFER SWITCH EQUIPMENT. BEFORE ATTEMPTING TO REPLACE ANY COMPONENT, DISCONNECT THE LINE POWER FROM THE EQUIPMENT BEING SERVICED BY OPENING AND LOCKING OUT, IF POSSIBLE, THE NEXT HIGHEST DISCONNECT DEVICE. FAILURE TO FOLLOW THIS PROCEDURE COULD CAUSE SEVERE PERSONAL INJURY AND/OR DEATH.

ALWAYS TURN THE UTILITY (SOURCE 1) POWER OFF AND TURN THE GENERATOR (SOURCE 2) CONTROL SELECTOR SWITCH TO THE "OFF" POSITION BEFORE ATTEMPTING TO REPLACE ANY COMPONENTS.

NOTICE

APPLY UTILITY (SOURCE 1) POWER AND PLACE THE GENERATOR CONTROL SELECTOR SWITCH IN THE "AUTO" POSITION AFTER THE COMPONENT HAS BEEN REPLACED. TEST THE SYSTEM FOR PROPER FUNCTIONALITY.


7.5 Troubleshooting

Table 6 contains troubleshooting information for the EGS ATS. If a problem still exists after completing the troubleshooting procedures, contact an authorized Eaton sales representative.


Table 6. Troubleshooting Chart.

Problem	Cause	Correction
The automatic transfer switch does not transfer to the generator.	1 The generator breaker is open. 2. The generator voltage is not acceptable.	1. Reset the generator circuit breaker. 2. Refer to the generator User's Manual
The automatic transfer switch does not transfer to the utility.	1. The service disconnect breaker is open. 2. The utility voltage is not acceptable.	1. Reset the service disconnect breaker. 2. Wait for the utility voltage to return to normal
The generator is still running after the transfer switch transfers to the utility.	Engine cool down period.	The engine should stop after the cool down.

100 and 200A Versions

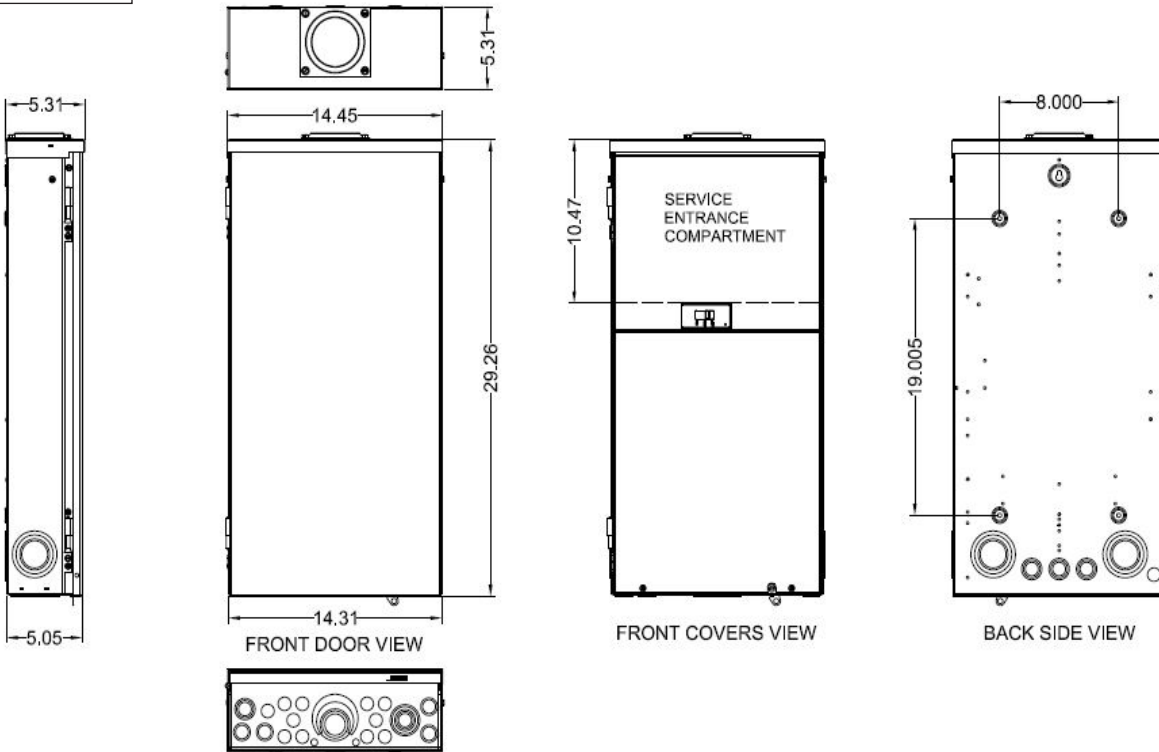

400A

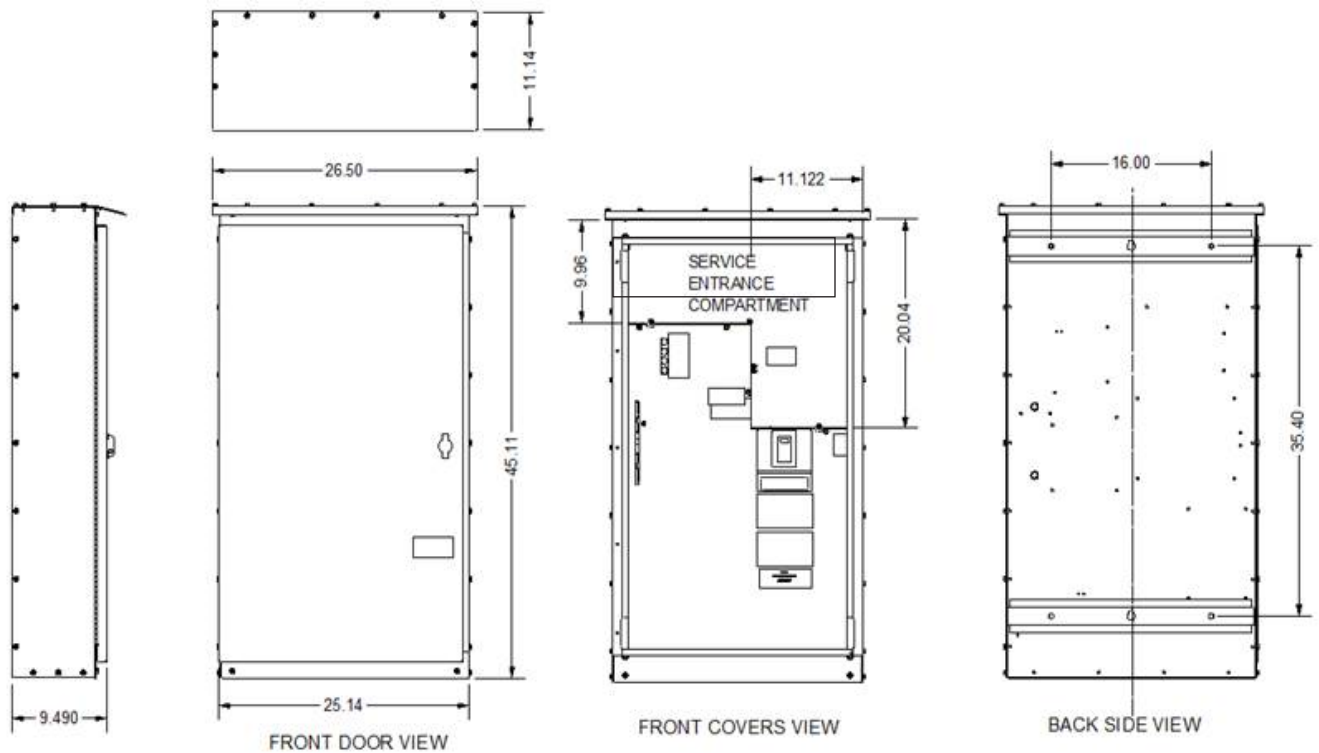

Note: Top conduit or side entry within SERVICE ENTRANCE COMPARTMENT dimensions with approved watertight connections is allowed

is published solely for information purposes
dered all-inclusive. If further information is
consult an authorized Eaton sales representa-

shown in this literature is subject to the
outlined in appropriate Eaton selling policies
ement between the parties. This literature
does not enlarge or add to any such contract.
ing the rights and remedies of any purchaser
contract between the purchaser and Eaton.

ESSED OR IMPLIED, INCLUDING WARRANTIES
CULAR PURPOSE OR MERCHANTABILITY, OR
OM COURSE OF DEALING OR USAGE OF TRADE,
THE INFORMATION, RECOMMENDATIONS, AND
ED HEREIN. In no event will Eaton be respon-
user in contract, in tort (including negli-
otherwise for any special, indirect, incidental
e or loss whatsoever, including but not
s of use of equipment, plant or power sys-
of power, additional expenses in the use of
or claims against the purchaser or user by
om the use of the information, recommen-
contained herein.

Eaton Corporation
Electrical Group
5050 Mainway
Burlington, ON L7L 5Z1
Canada
1-800-268-3578
www.eatoncanada.ca

© 2015 Eaton Corporation
All Rights Reserved
Printed in Canada
Publication No. IB.0162064EN
October 2015