



54 Series Remote Control

Features

Voice Commands

Take the guesswork out of navigating your Hopper system by using voice commands to find your programming, tune to channels, launch Netflix, and more!

Since the Google Assistant is built into your receiver, you can also use voice commands to find a recipe, get information on an actor, find weather and traffic in your area, manage your appointments, and get answers on pretty much anything else you want to know about.

Voice functionality requires active internet connection.

Remote Finder

Can't find your remote? Don't panic! Simply press the Locate Remote button on the front panel of your receiver.

Personalize Your Remote

With customizable buttons, you can turn closed captioning on and off, launch Netflix®, turn on Picture-in-Picture (PiP), record a program, and more, with just one click.

Let There Be Light

Too dark to see the buttons on your remote? Activate the backlighting on your remote by simply picking it up, moving it, or shaking it gently in a dark room.

Remote Buttons

Click a button on the remote to see its functions, or get a list of all buttons with their functions.
[Log in to shop remotes.](#)

Power Button

Cycle power on/off

DVR Button

Display Recordings menu (if pressed one time); Display PrimeTime Anytime menu (if pressed two times)

Home Button

Display the Home Screen (if pressed one time)

Display Menu (if pressed two times)

Display Diagnostics (if pressed three times)

Guide Button

Display Program Guide (if pressed one time)

Access Guide Options (if pressed two times)

**Options Button**

Access applicable Options menu (if pressed one time)

Display Accessibility Settings (if pressed twice on Live TV)

Microphone Button

Initiate voice commands (if pressed and held)

Back/Live TV Button

Return to the previous menu/screen (if pressed one time)

Access live TV (if pressed and held)

Info/Help Button

Display program info (if pressed one time)

Display on-screen help overlays (if pressed and held)

Left Button

Left one

Right Button

Right one

Up Button

Up one

Down Button

Down one

Select Button

Select highlighted option

Display program banner showing recording and playback options (if pressed on live TV)

Skip Back Button

Skip back 10 seconds (if pressed one time)

Skip back 10 frames (if paused)

Skip back 2 hours (if on Guide with "Enlarge Font" on)

Skip back 2.5 hours (if on Guide with "Enlarge Font" off)

Skip back 24 hours (if on Guide and held)

Rewind speed to 15x (if pressed one time while rewinding)

Rewind speed to 60x (if pressed two times while rewinding)

Rewind speed to 300x (if pressed three times while rewinding)

Navigate through tabs (if on an applicable menu)

Play/Pause Button

Start playback (if on Recordings menu)

Resume playback (if paused)

Pause (if watching live TV or a recording)



Skip Forward Button

Skip forward 10 seconds (if pressed one time)
Skip forward 10 frames (if paused)
Skip forward 2 hours (if on Guide with “Enlarge Font” on)
Skip forward 2.5 hours (if on Guide with “Enlarge Font” off)
Skip forward 24 hours (if on Guide and held)
Fast-forward speed to 15x (if pressed one time while fast forwarding)
Fast-forward speed to 60x (if pressed two times while fast forwarding)
Fast-forward speed to 300x (if pressed three times while fast forwarding)
Navigate through tabs (if on an applicable menu)

Volume Up/Down Button

Increase/decrease sound

Recall Button

Moves a recording to the trash (if pressed when a recording is selected in the Recordings menu)
Recovers a deleted recording from the trash (if pressed when a recording is selected in the Trash menu)
Recalls to last channel watched (if “Tunes to Last Channel” is enabled)
Recalls to last channel watched and displays the Recall Banner (if “Both (Tunes and Shows Banner)” is enabled)

Mute Button

Cycles sound on/off

Channel Up/Down Button

Changes the channel up or down one (if watching live TV)
Pages up or down (if on Guide or a menu)

Number Pad

Input alphanumeric values

Customizable Button

Programmable button

SAT Button

Put in SAT mode
Perform HDMI-CEC function (if enabled)

TV Button

Put in TV mode

AUX Button

Put in AUX mode

Input Button

Swap Picture in Picture windows (if in SAT mode, P.i.P. is enabled, and “Swaps Main and P.i.P. Windows” is enabled)
Swap to last channel, maintaining swap buffer (if in SAT mode and “Swaps to Last Channel” is enabled or if in SAT mode, P.i.P. is disabled, and “Swaps Main and P.i.P. Windows” is enabled)



Display Swap Banner (if in SAT mode and “Shows Swap Banner” is enabled)
Cycle through TV Inputs (if in TV mode)

Feature FAQ's

Why don't I have Google Assistant on my Voice Remote?

Follow these instructions to activate the Google Assistant on your receiver.

Why won't the Google Assistant show my calendar and other personal information?

Your Google account must be linked to your receiver to view personal information on your TV.

Why won't my remote change the volume on my TV?

Your remote may not be programmed to control functions on your TV. Check out these step-by-step instructions to pair your remote to your TV or another device.

Why won't my remote work with my DISH receiver?

Often, this problem is due to dead batteries, or a remote or receiver error. Follow these steps to resolve your remote control issue.

What type of batteries does my remote take?

Your remote takes two AA batteries.