



305400

Illustrated Parts List

Model Series

305400

AIR COOLED

TYPE NUMBERS
0005 to 3087.

 
 
 
 
 
 
 
 
 
 
Not for
Reproduction

 
 
 
 
 
 
 
 
 
 
 


 
 
 
 
PRINTED IN U.S.A.

 
 
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

 
 
 
 
1036 EMISSIONS LABEL	
1058 OPERATOR'S MANUAL	
1330 REPAIR MANUAL	
1319 WARNING LABEL	
WARNING	
	Read and follow Operating Instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
	Engines emit carbon monoxide, DO NOT run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.
REQUIRED when replacing parts with warning labels affixed.	

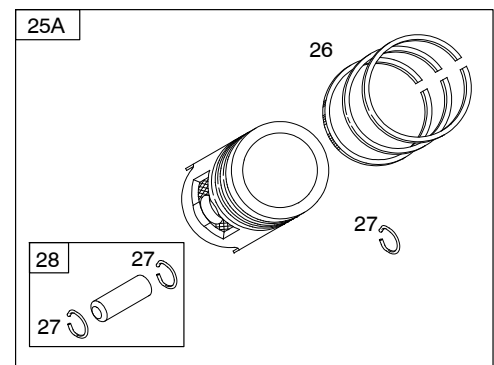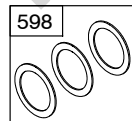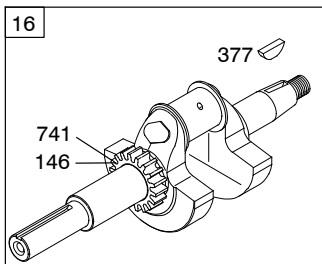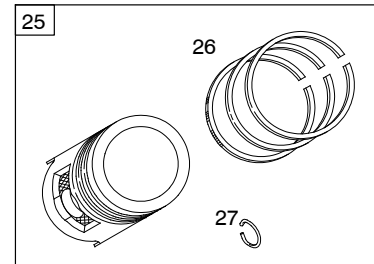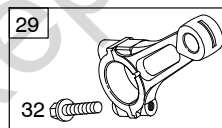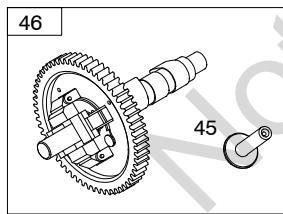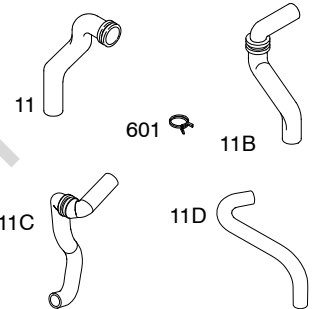 
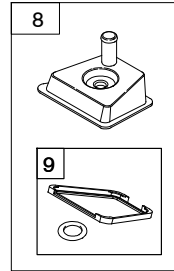 
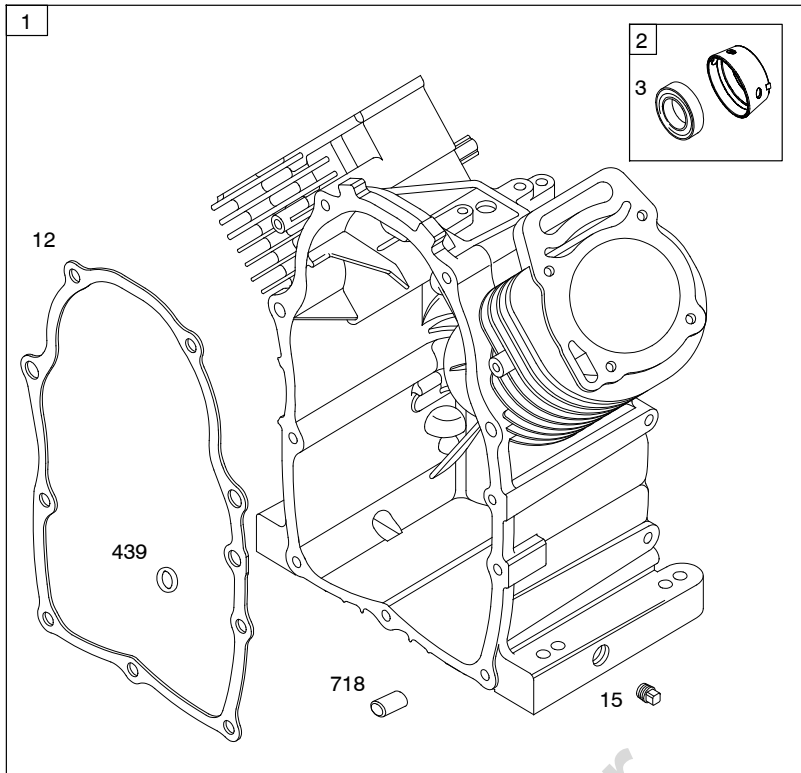 


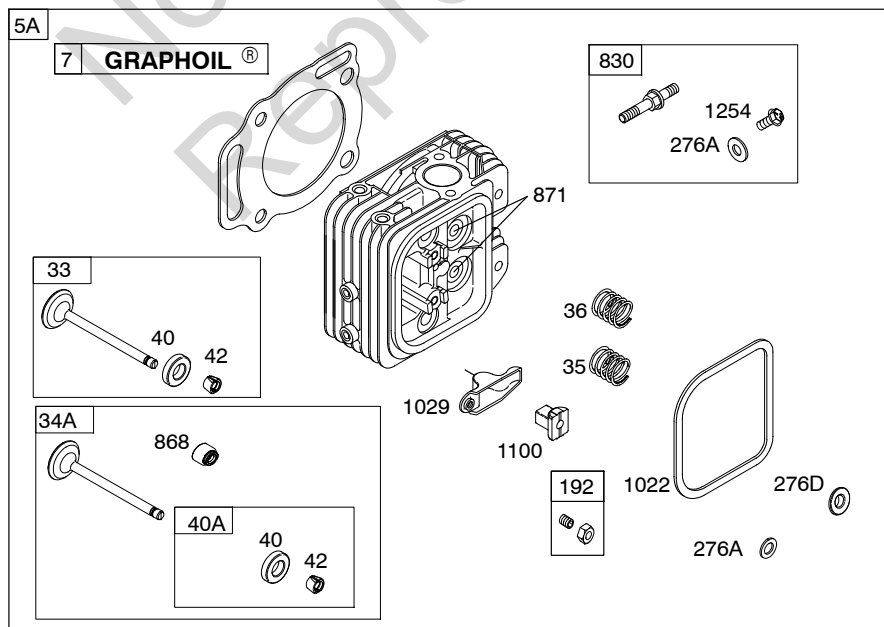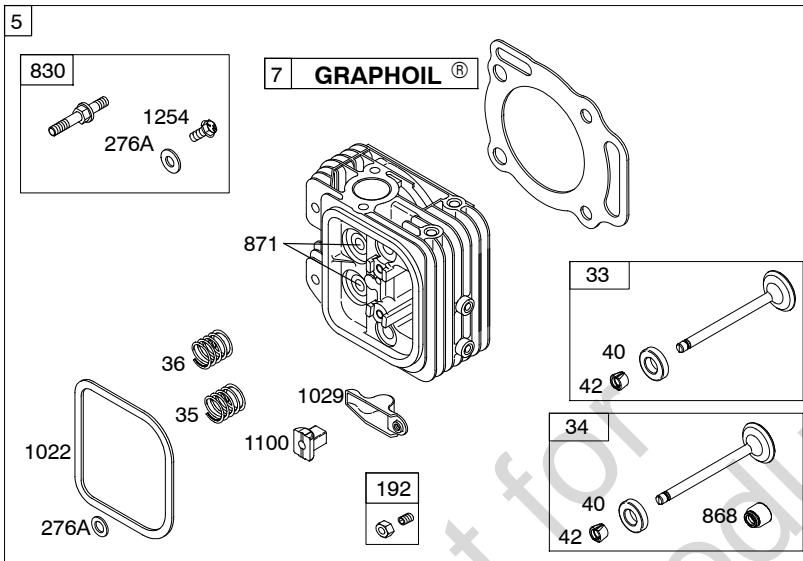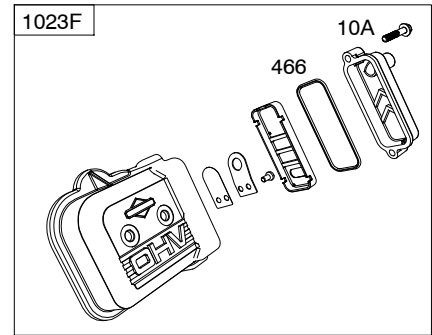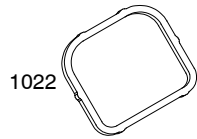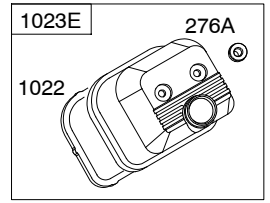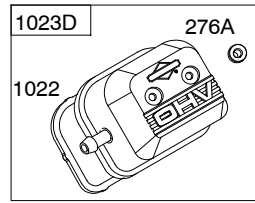 
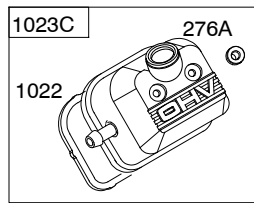 
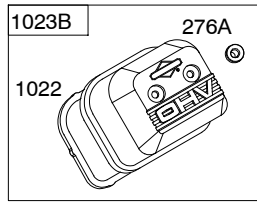 
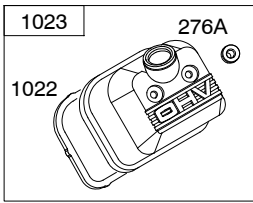 


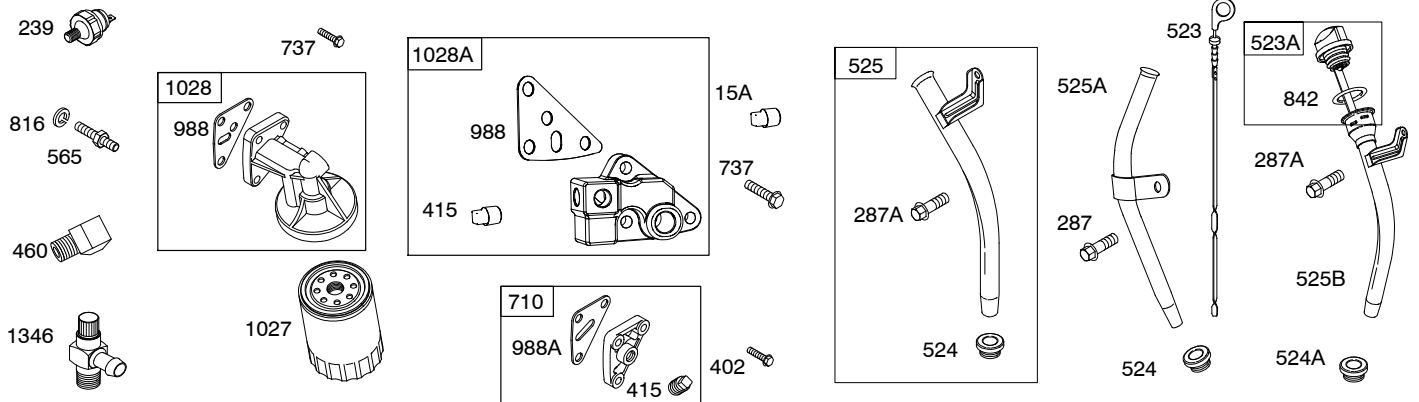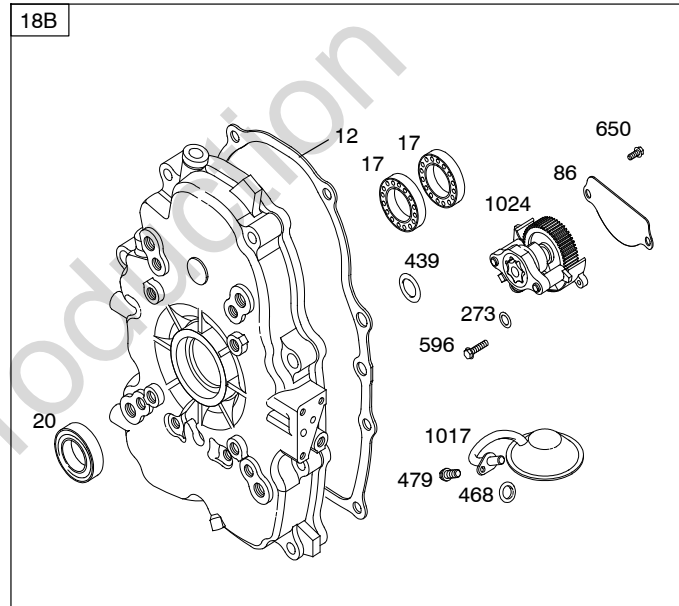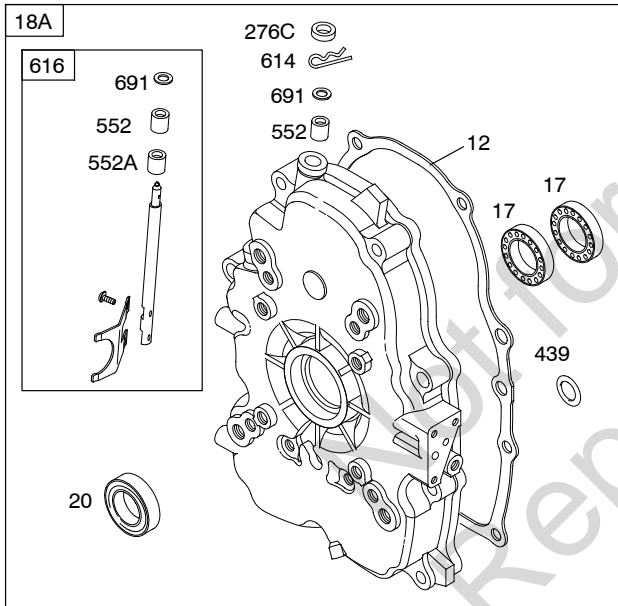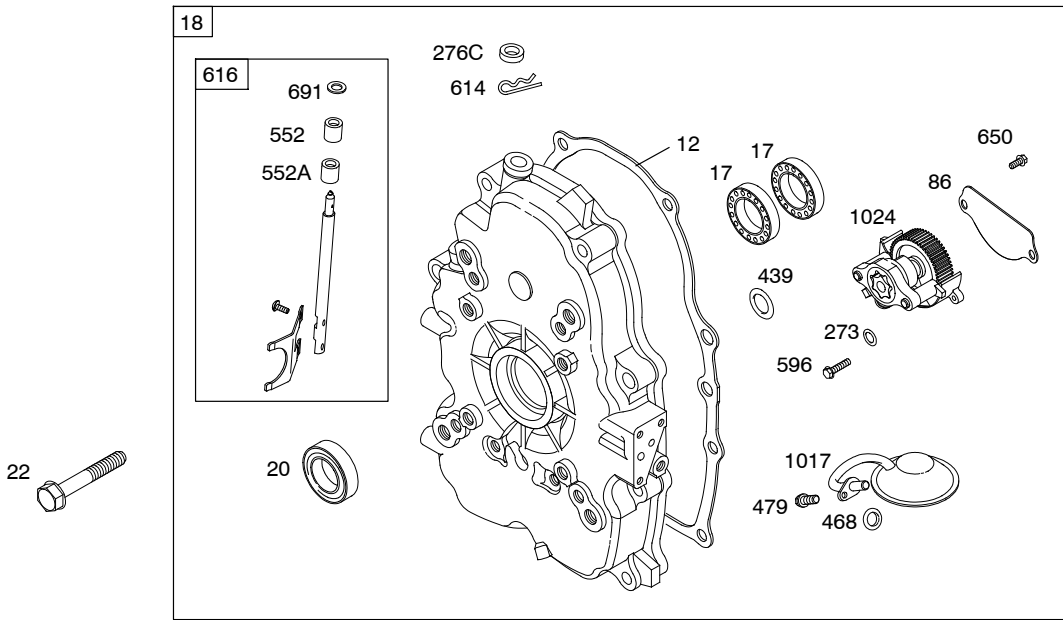 


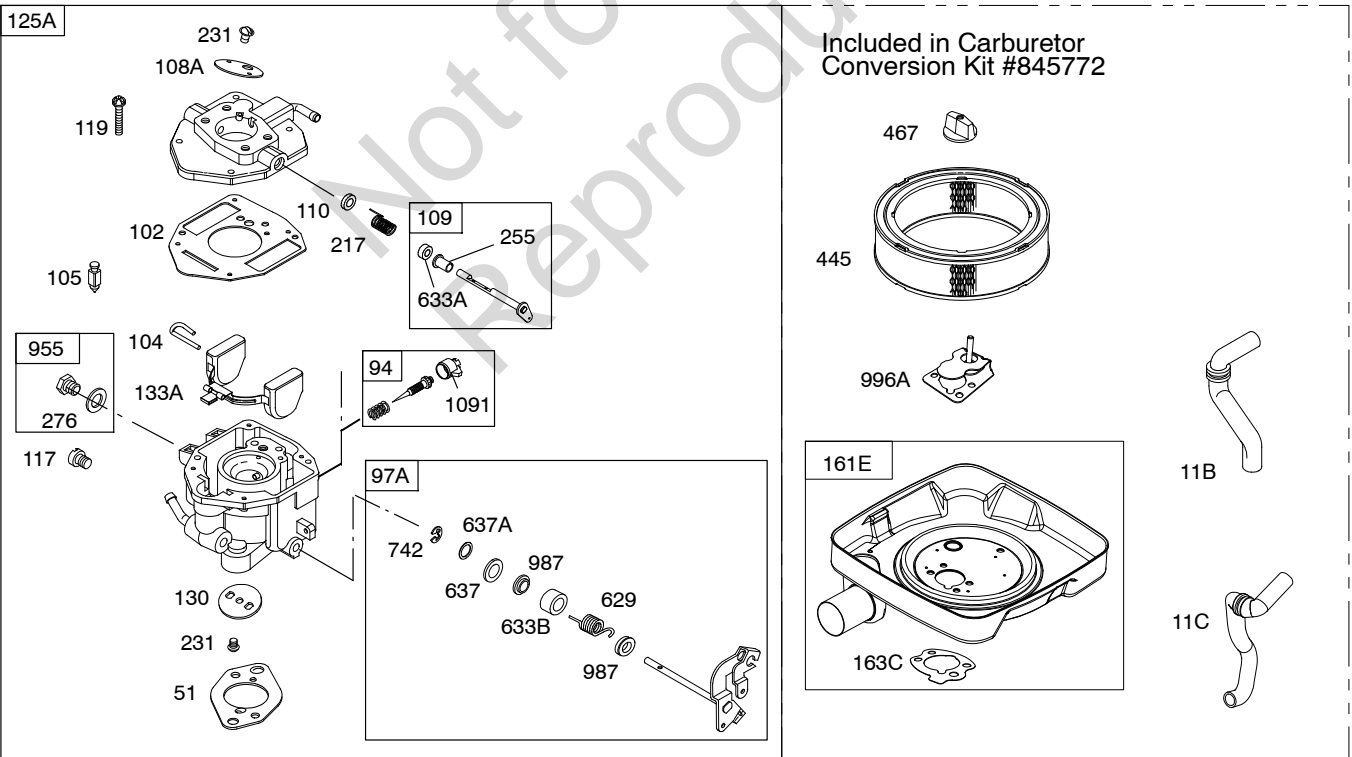 
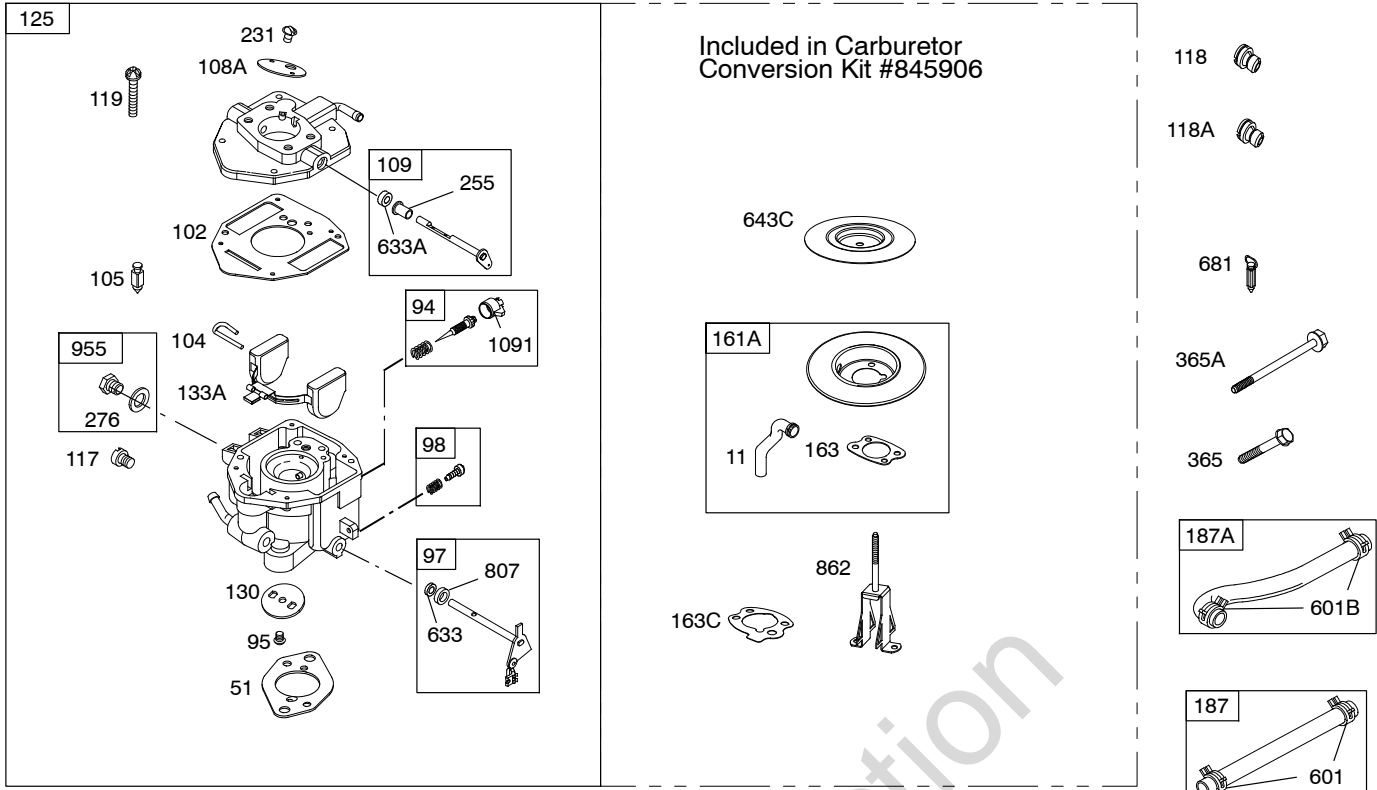 


 
 
 
 
 
 
 
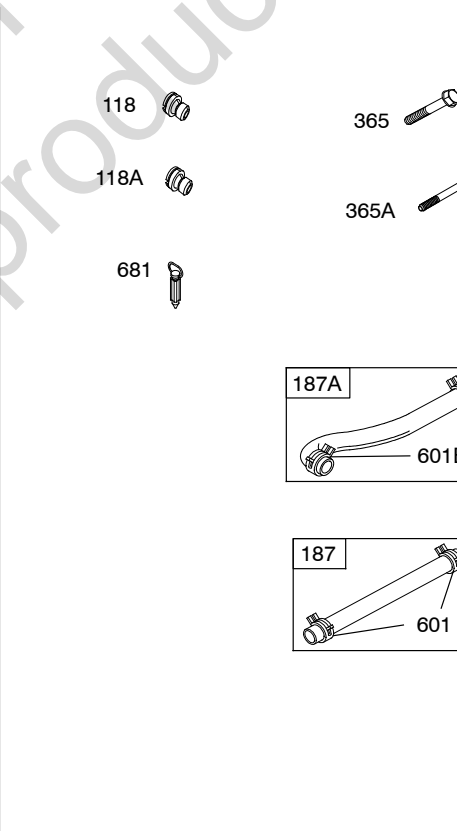 
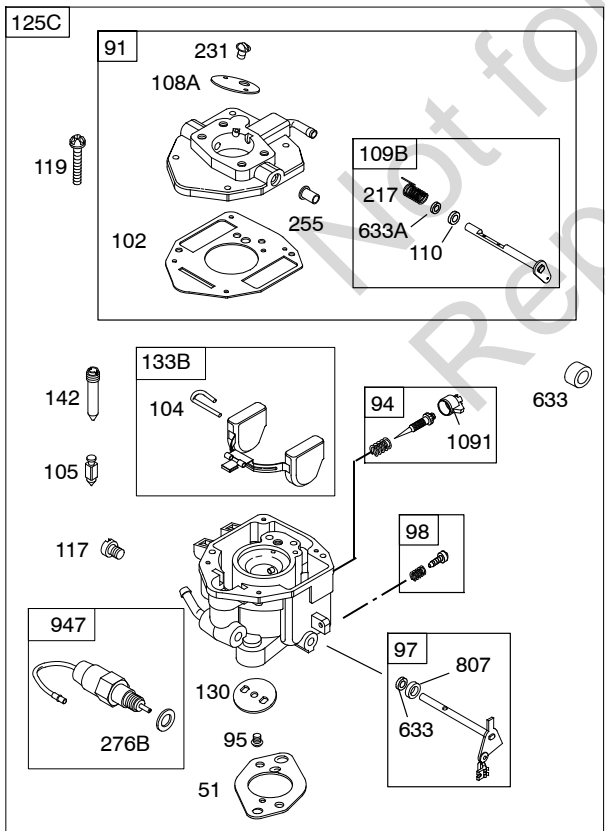 
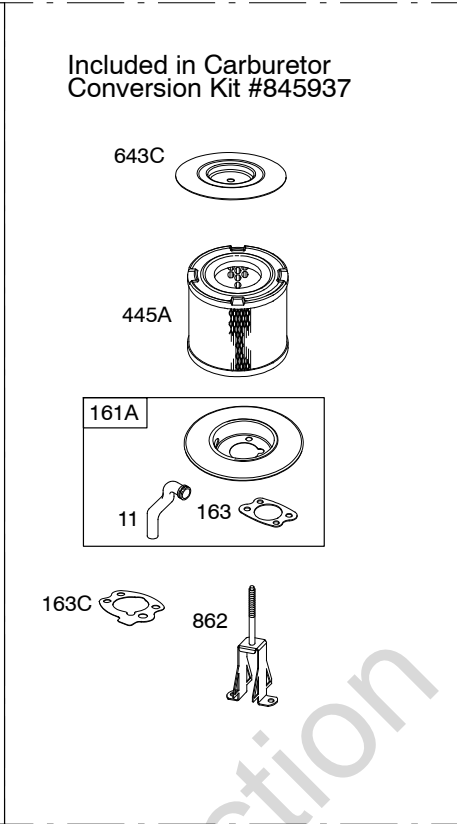 
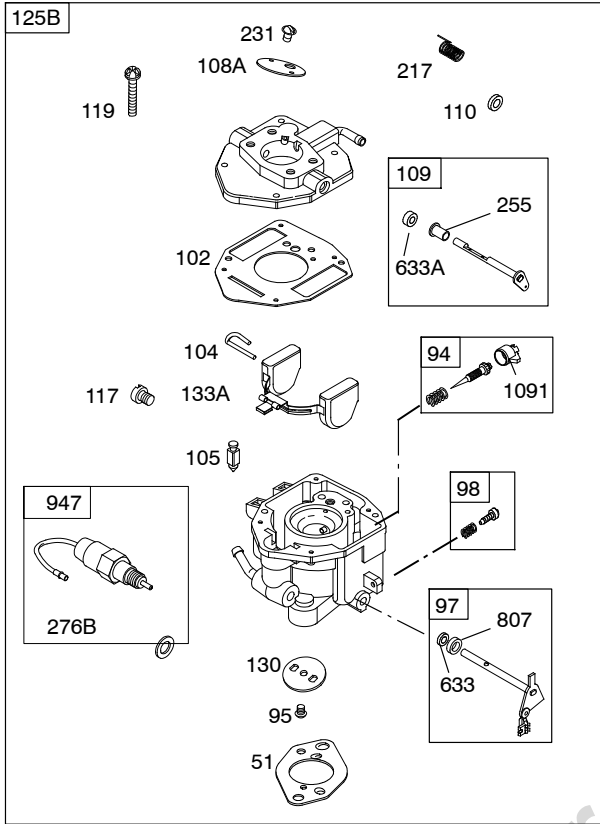 


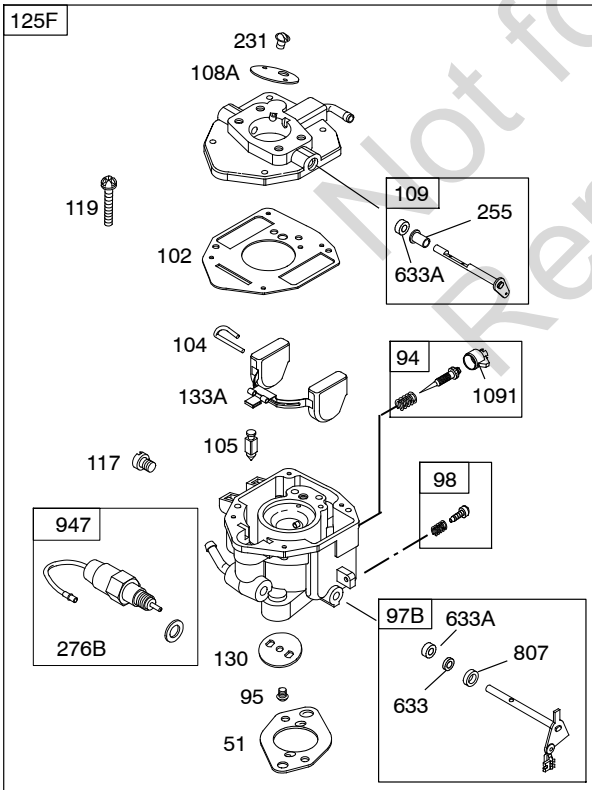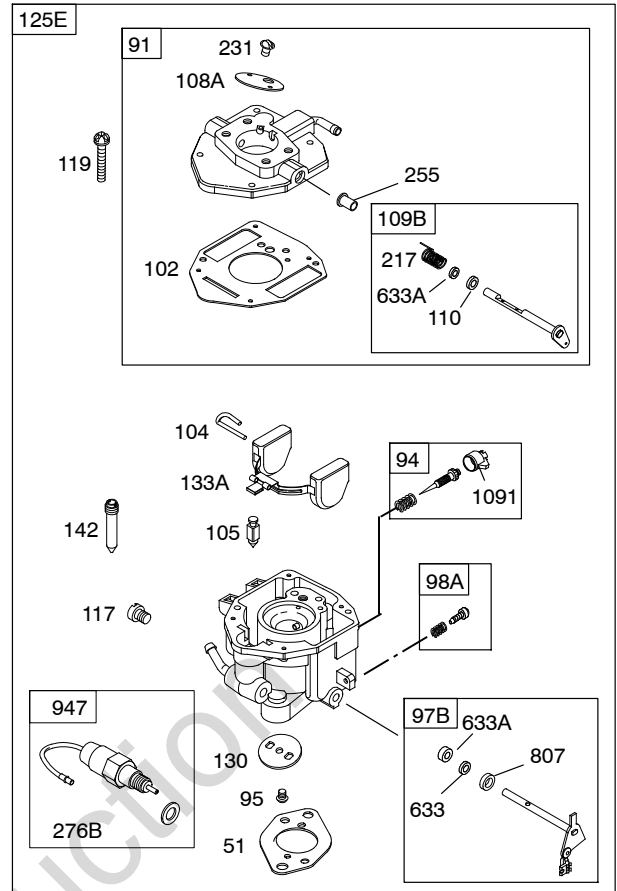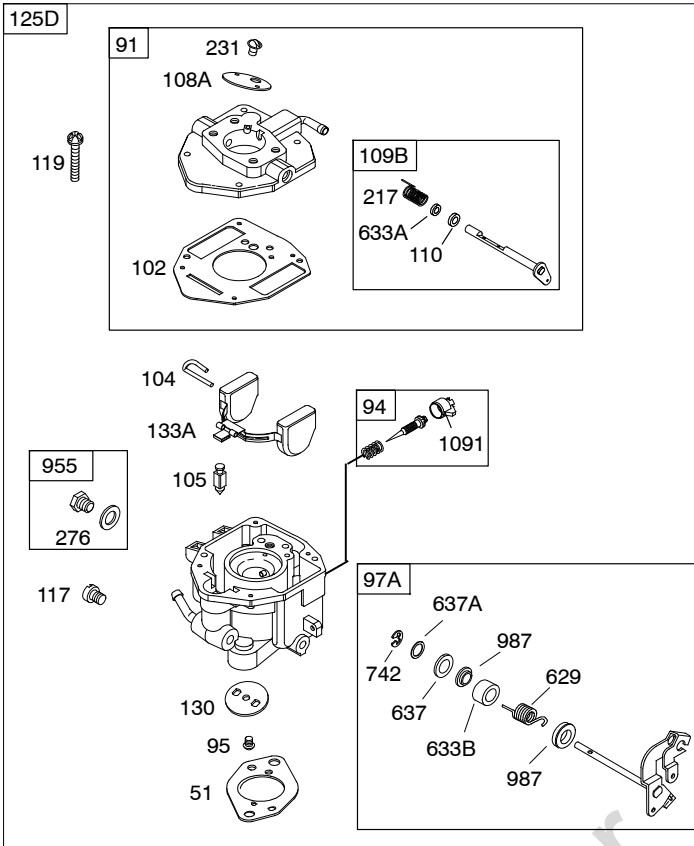

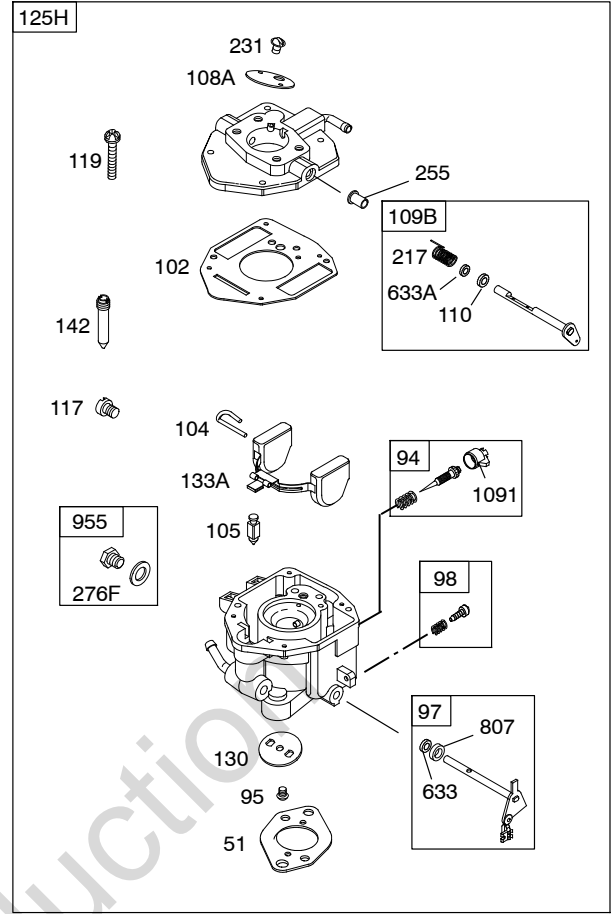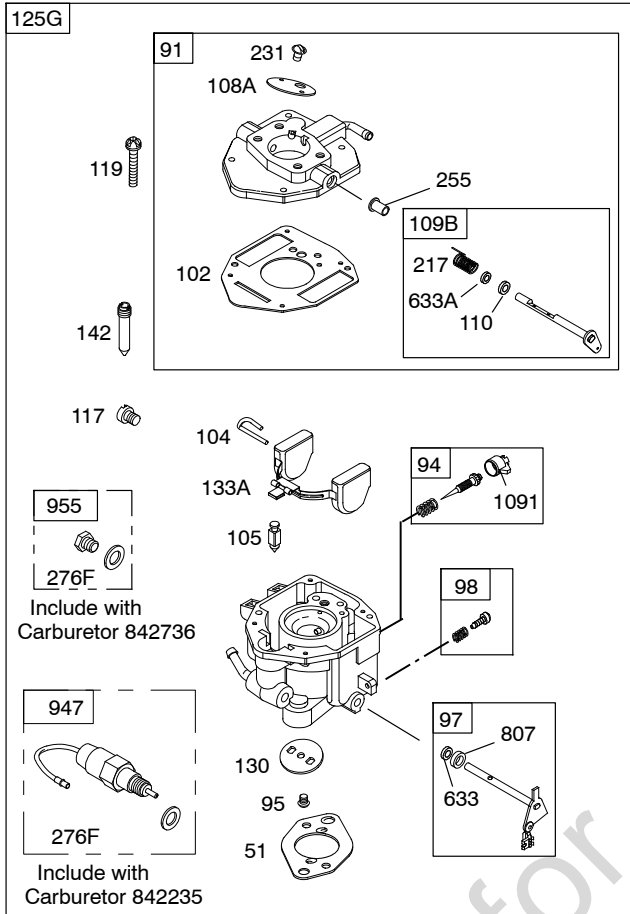

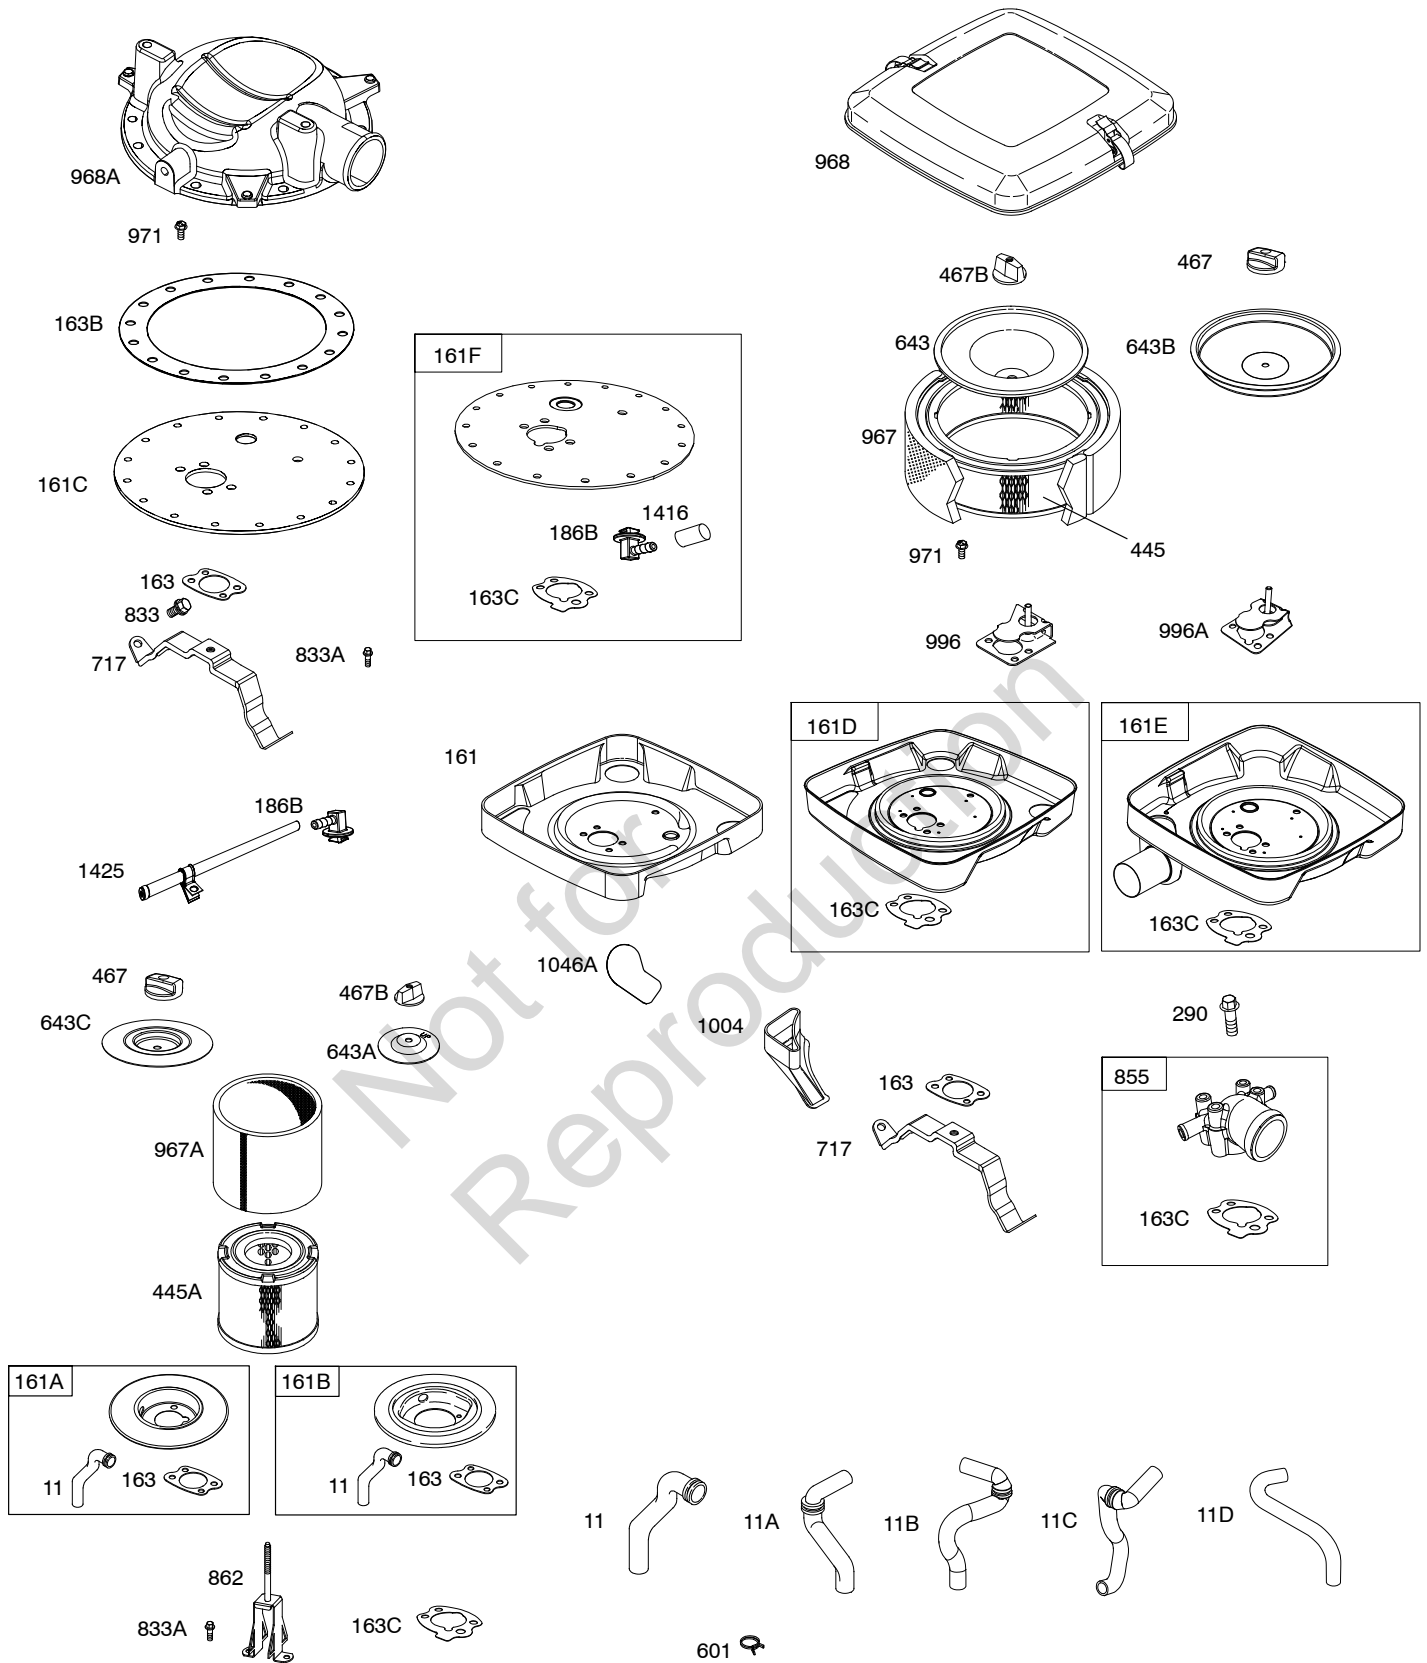






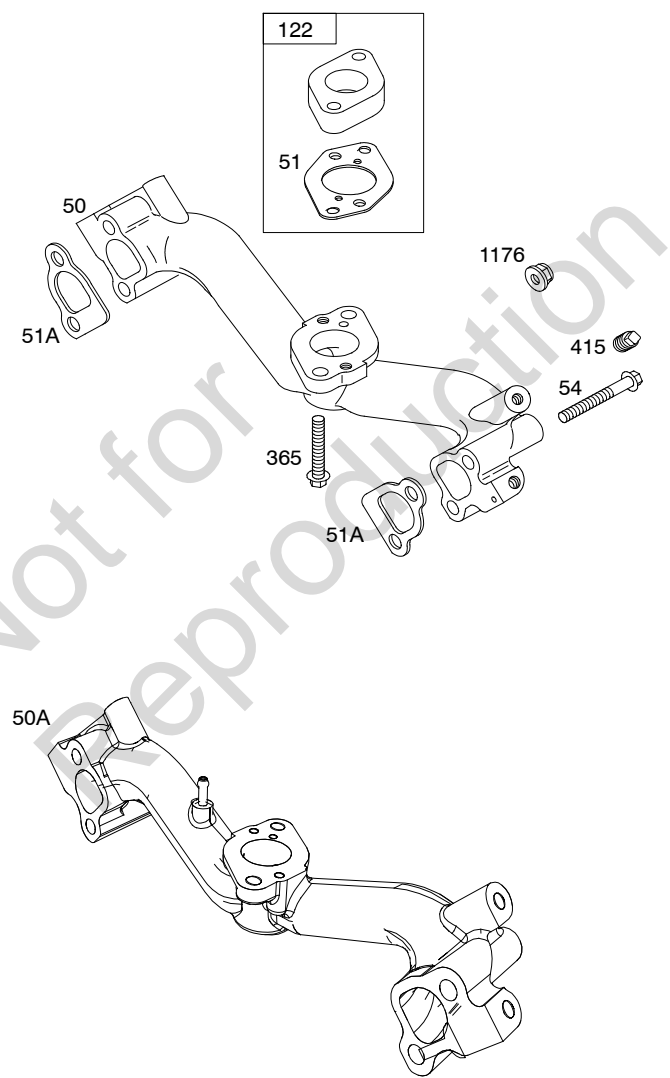
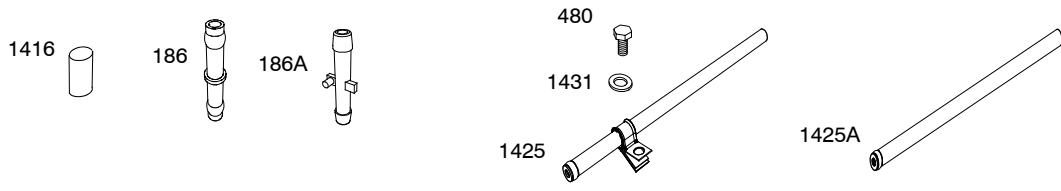


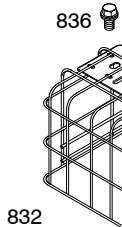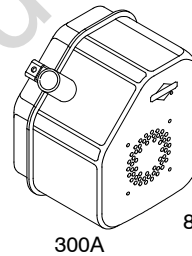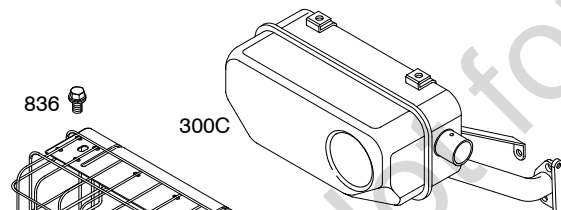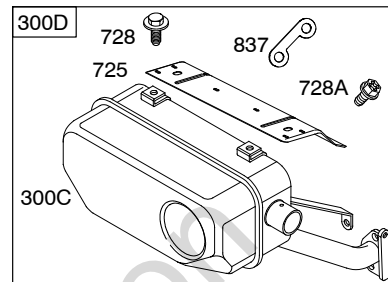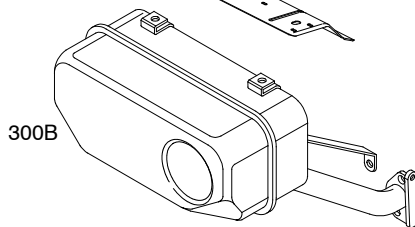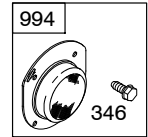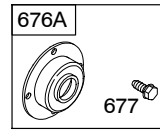
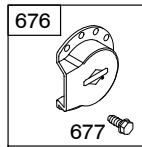
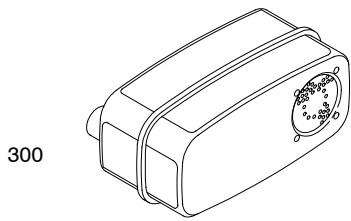


300C




          151






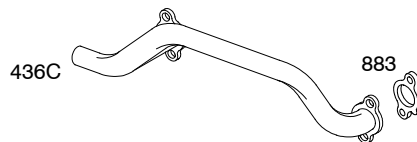
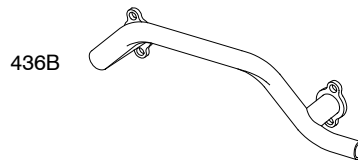
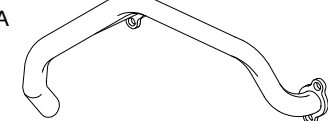
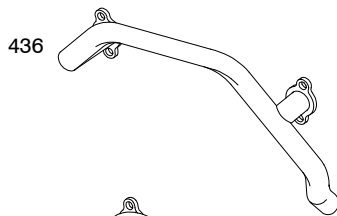
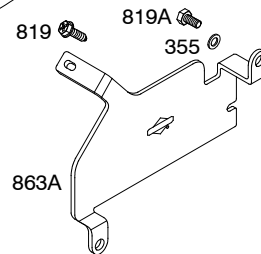



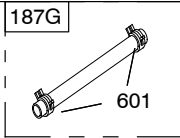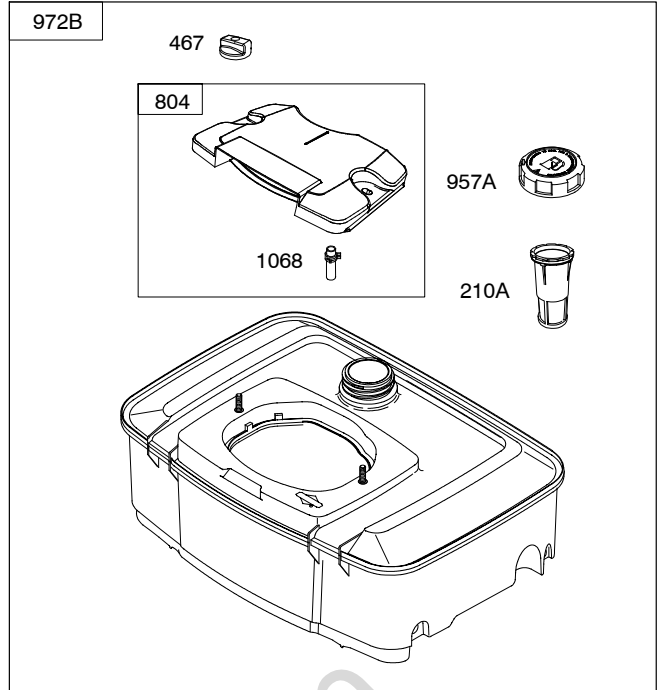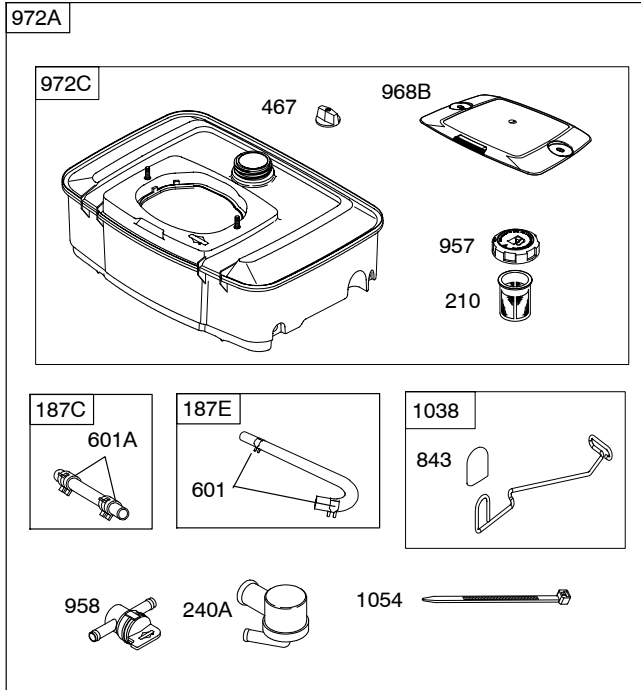



Included in Fuel Tank Service #845137

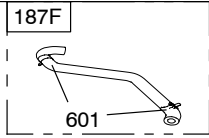 

Included in Fuel Tank Service #845138

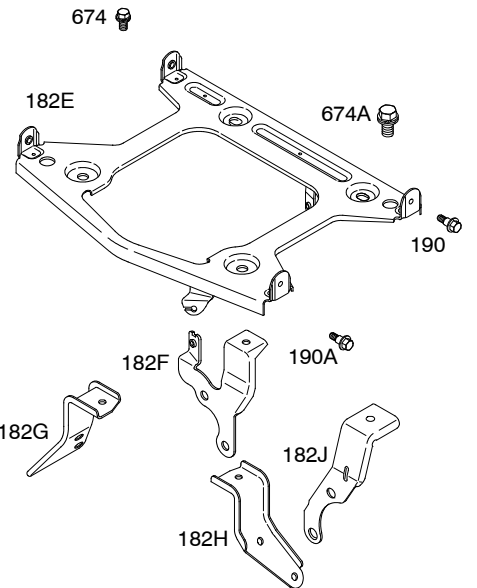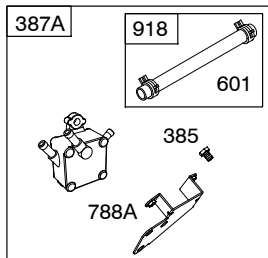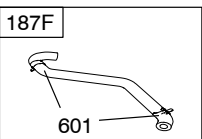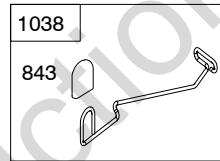           


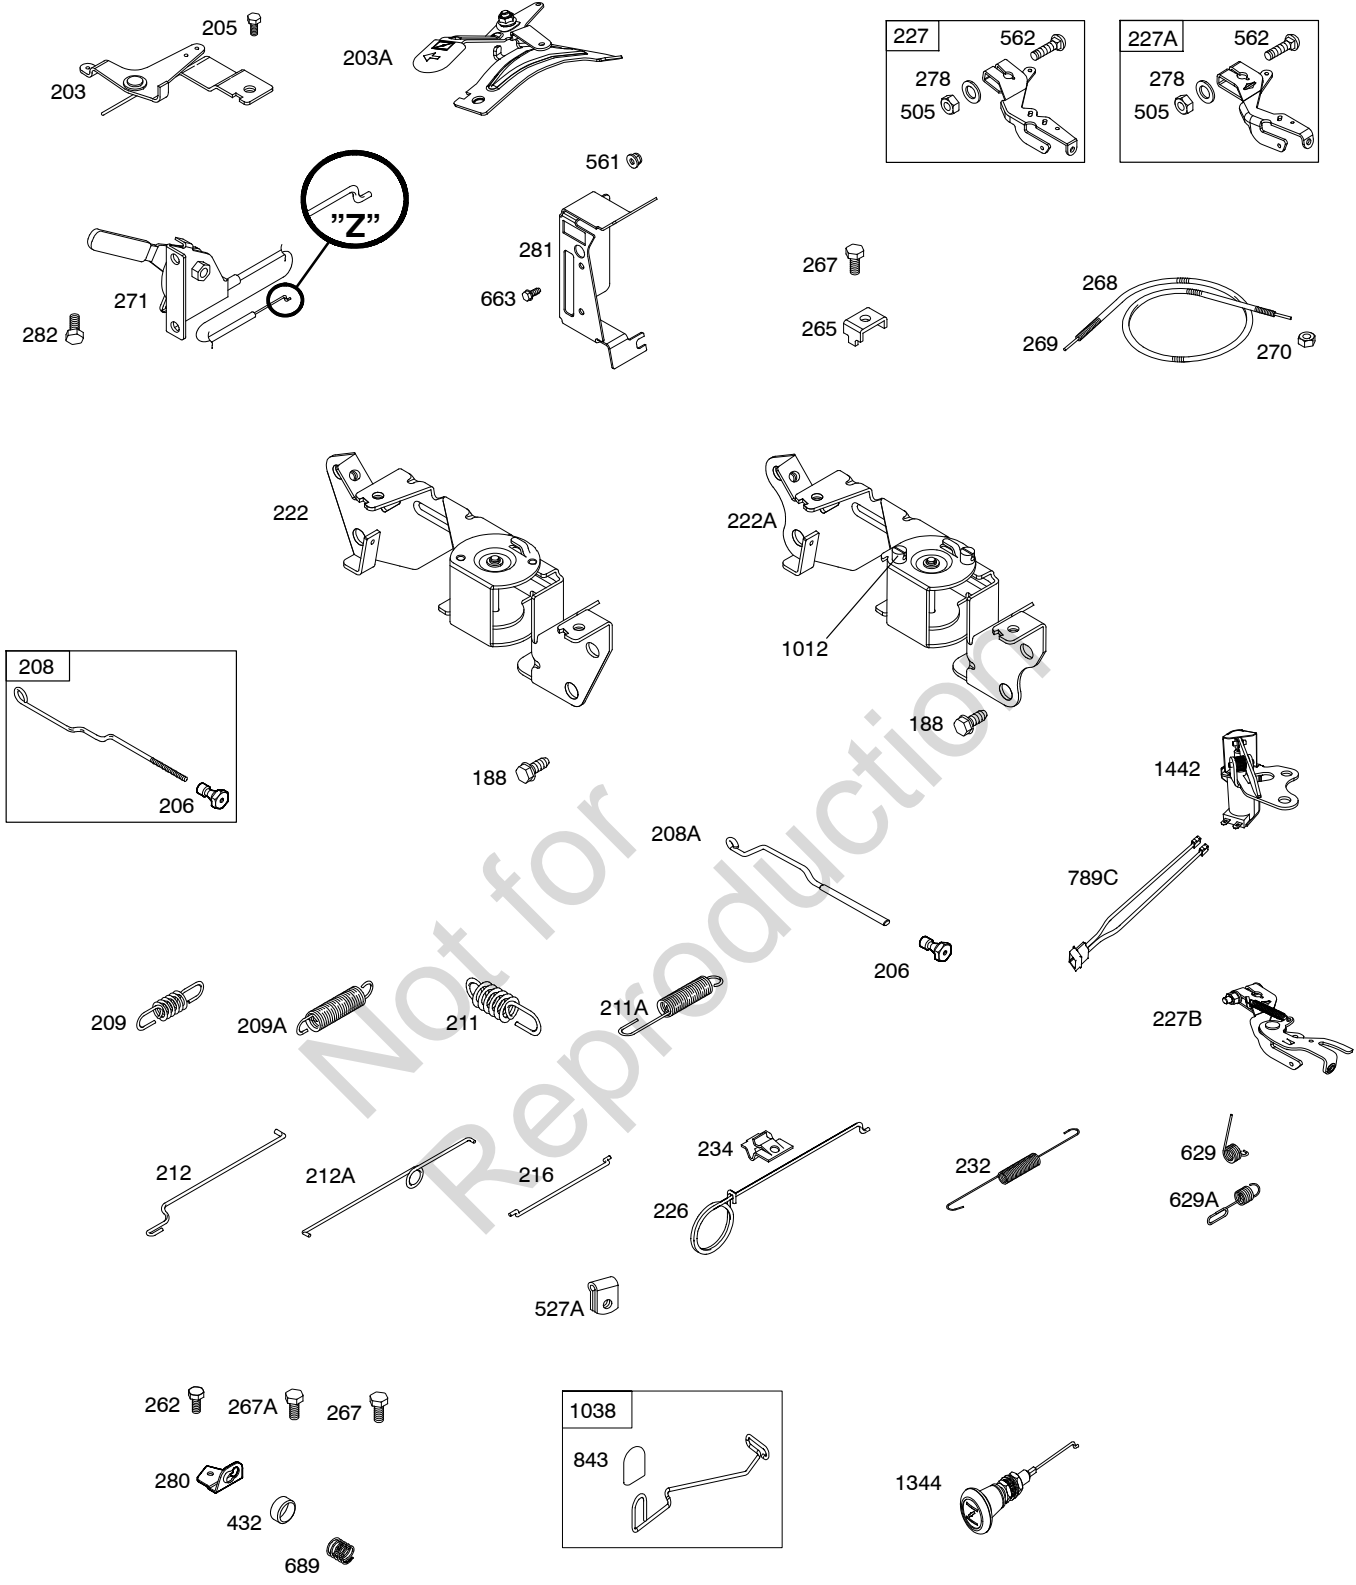 




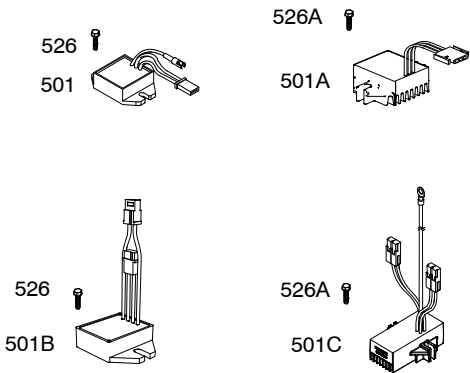 



DUAL CIRCUIT		10 - 16 AMP		20 AMP		20 AMP POWER LINK	
474	1059	474A	1059	474B	1059	474C	

       
NOTE: All stators use a No. 1119 mounting screw.

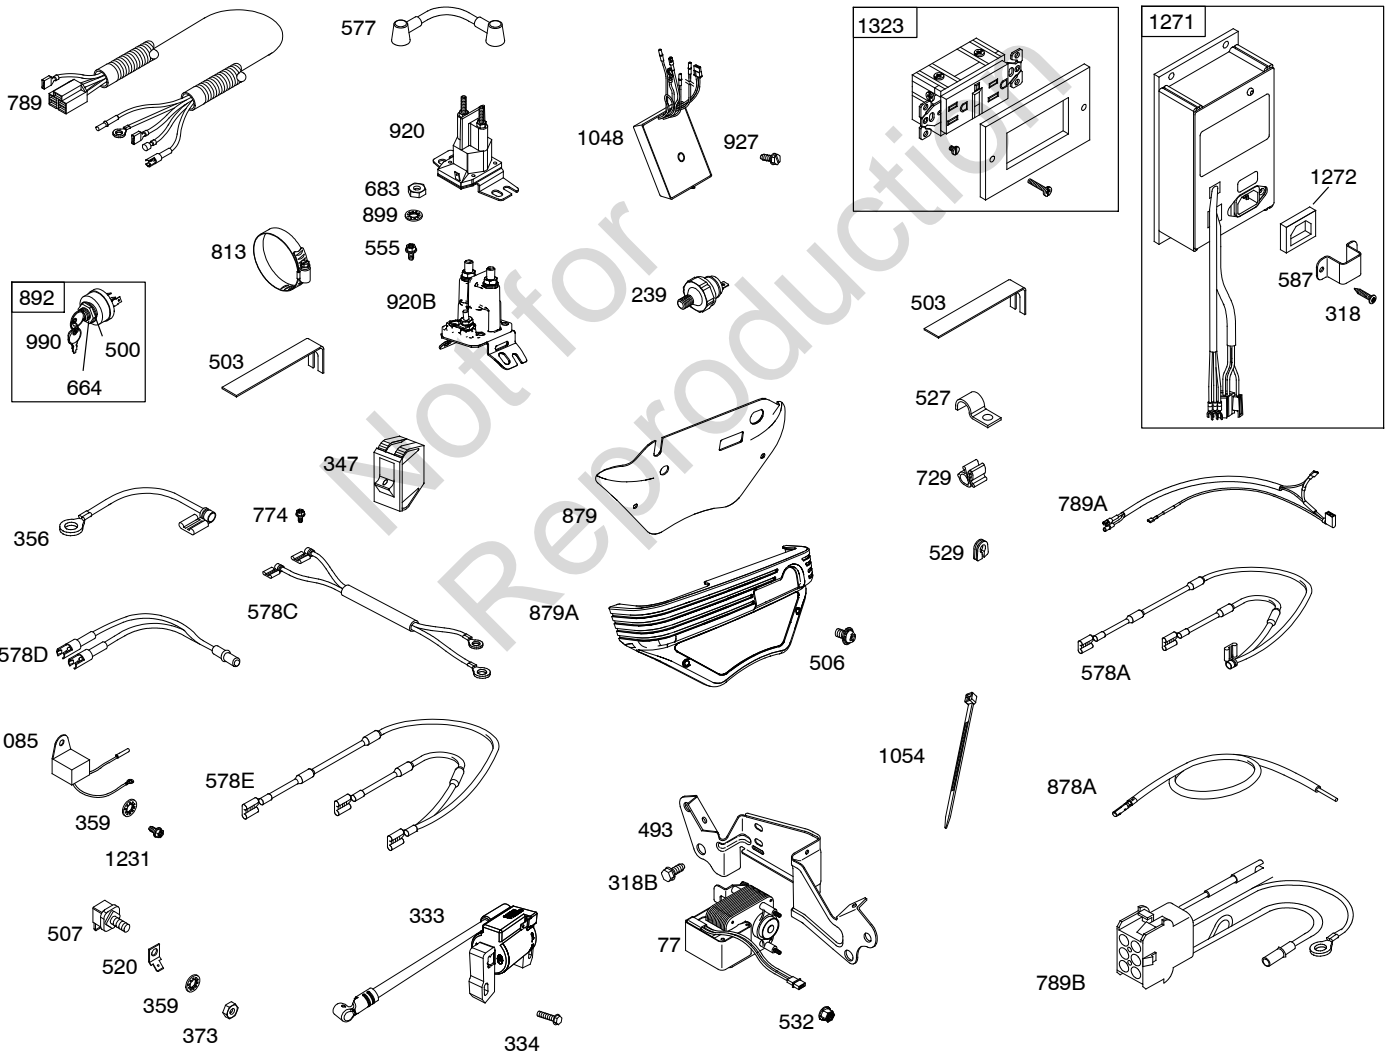 


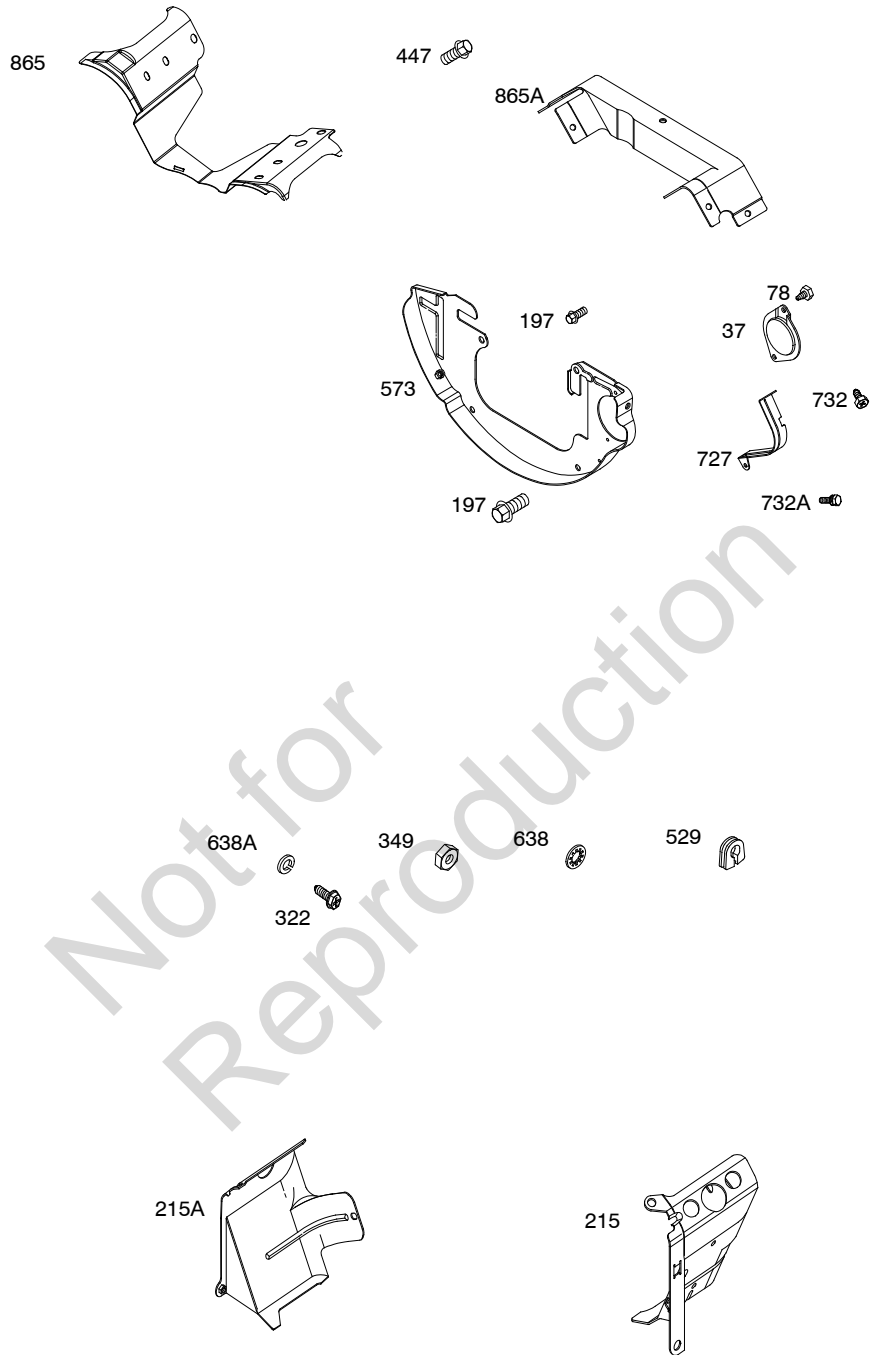

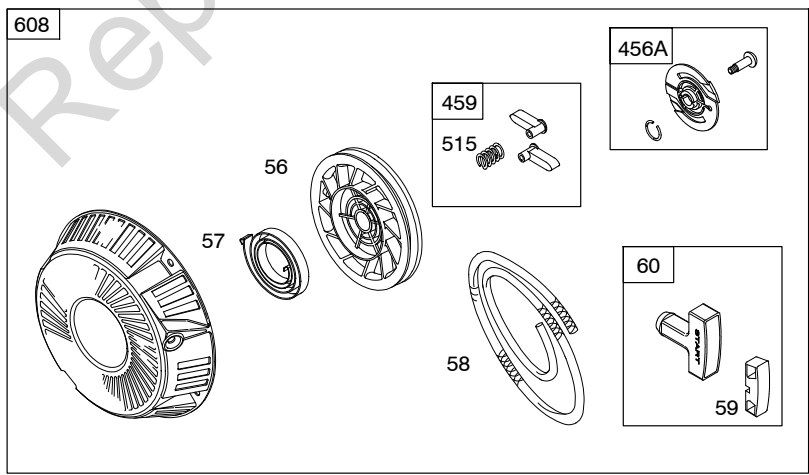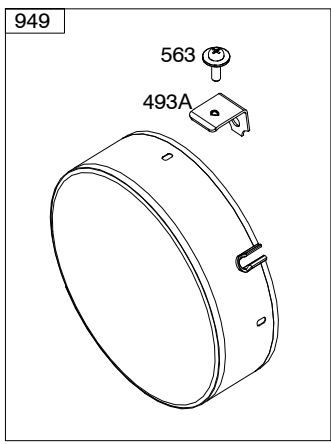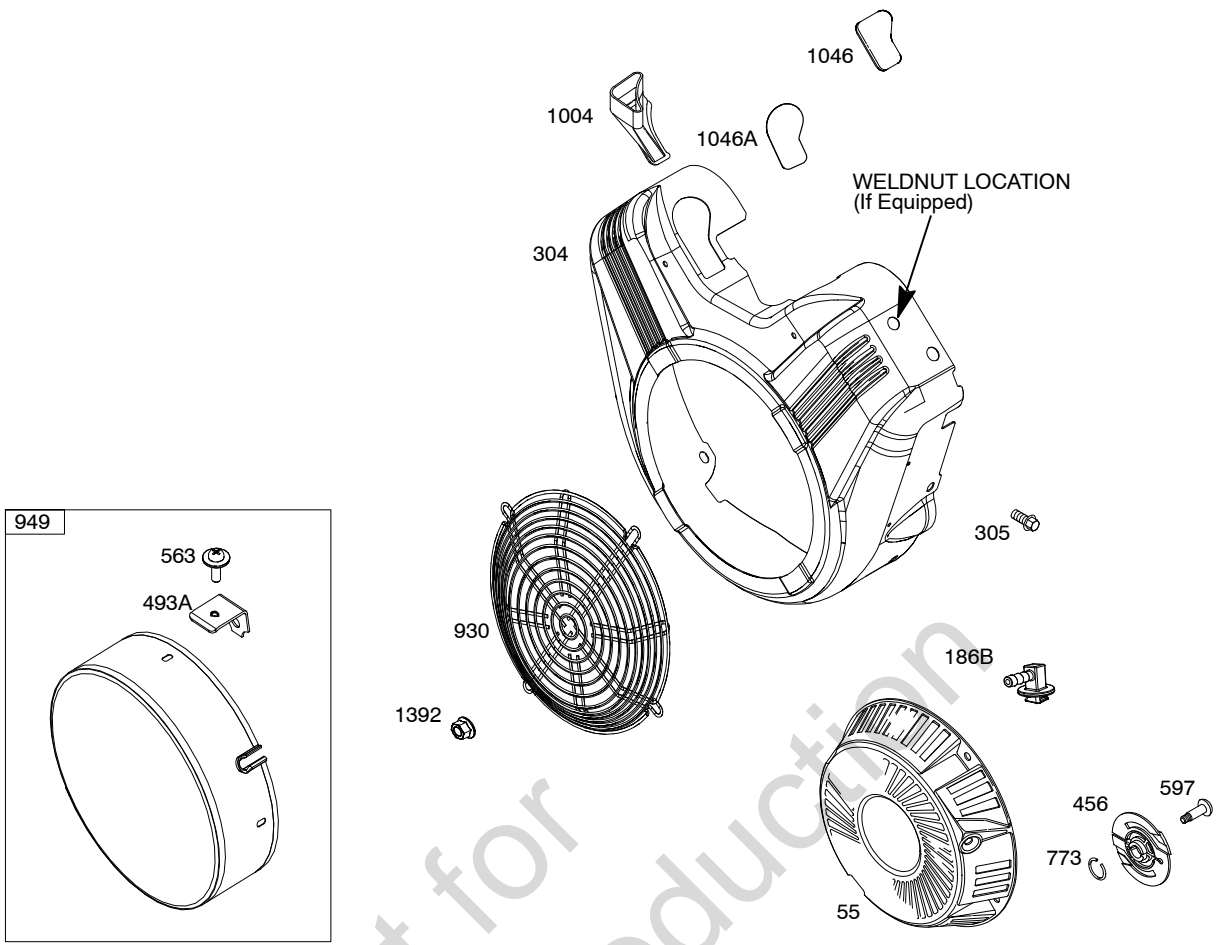


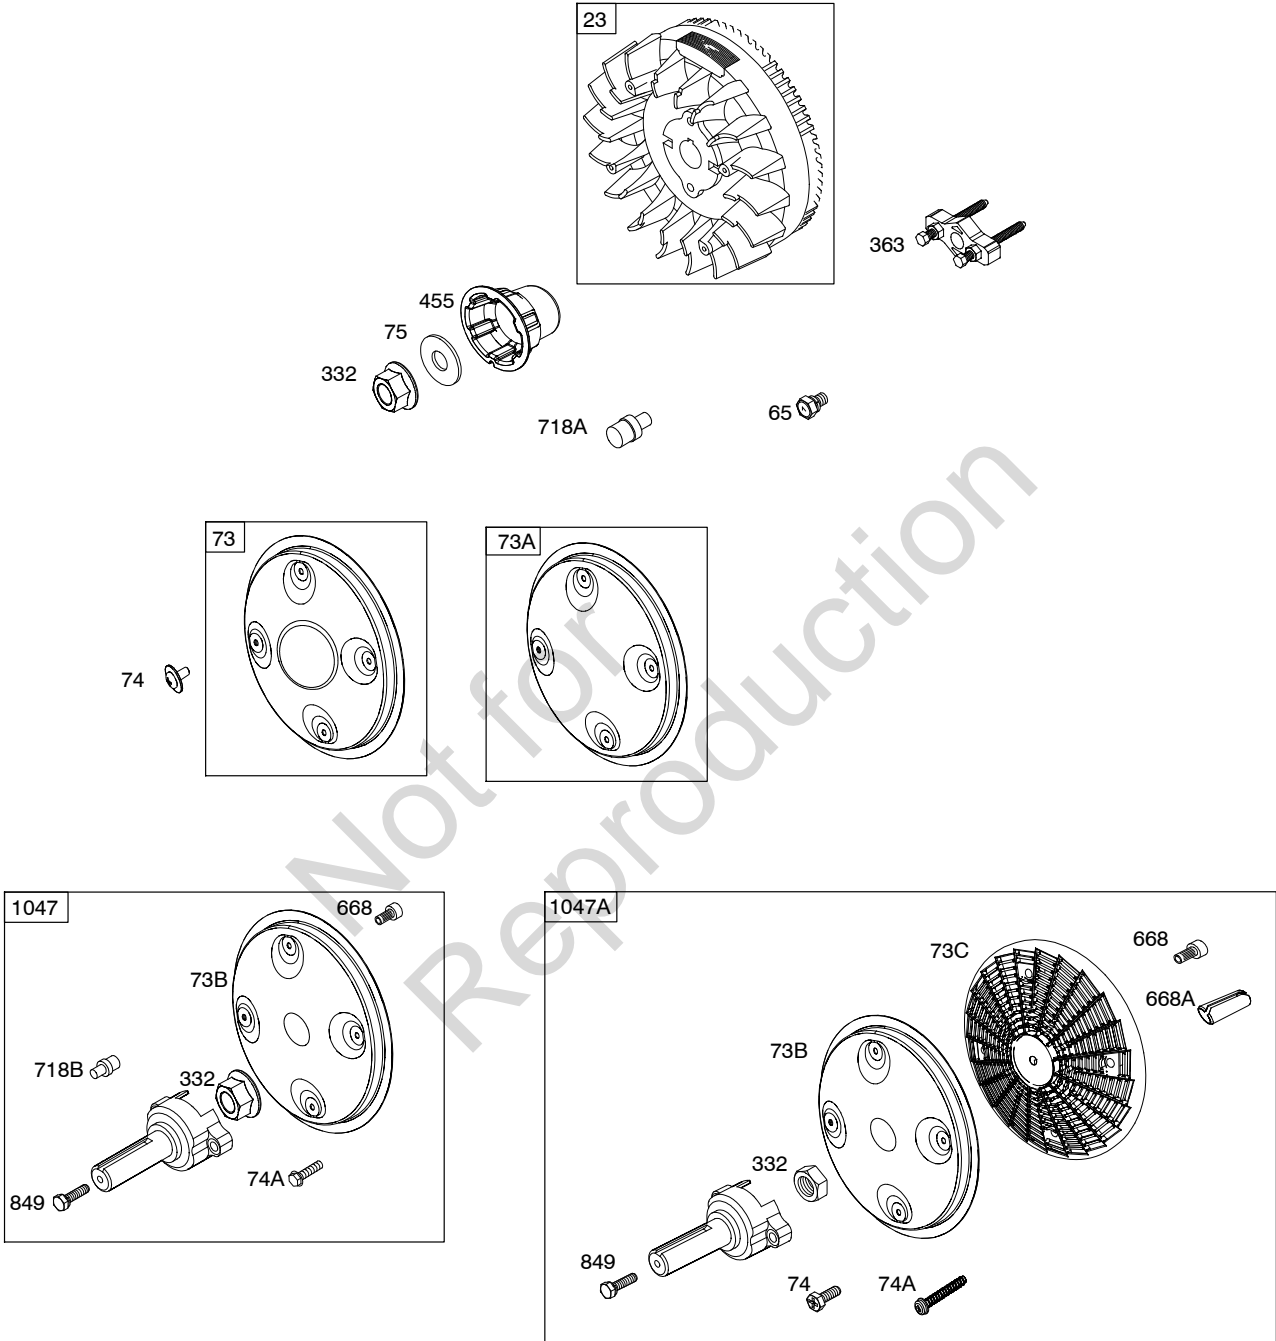


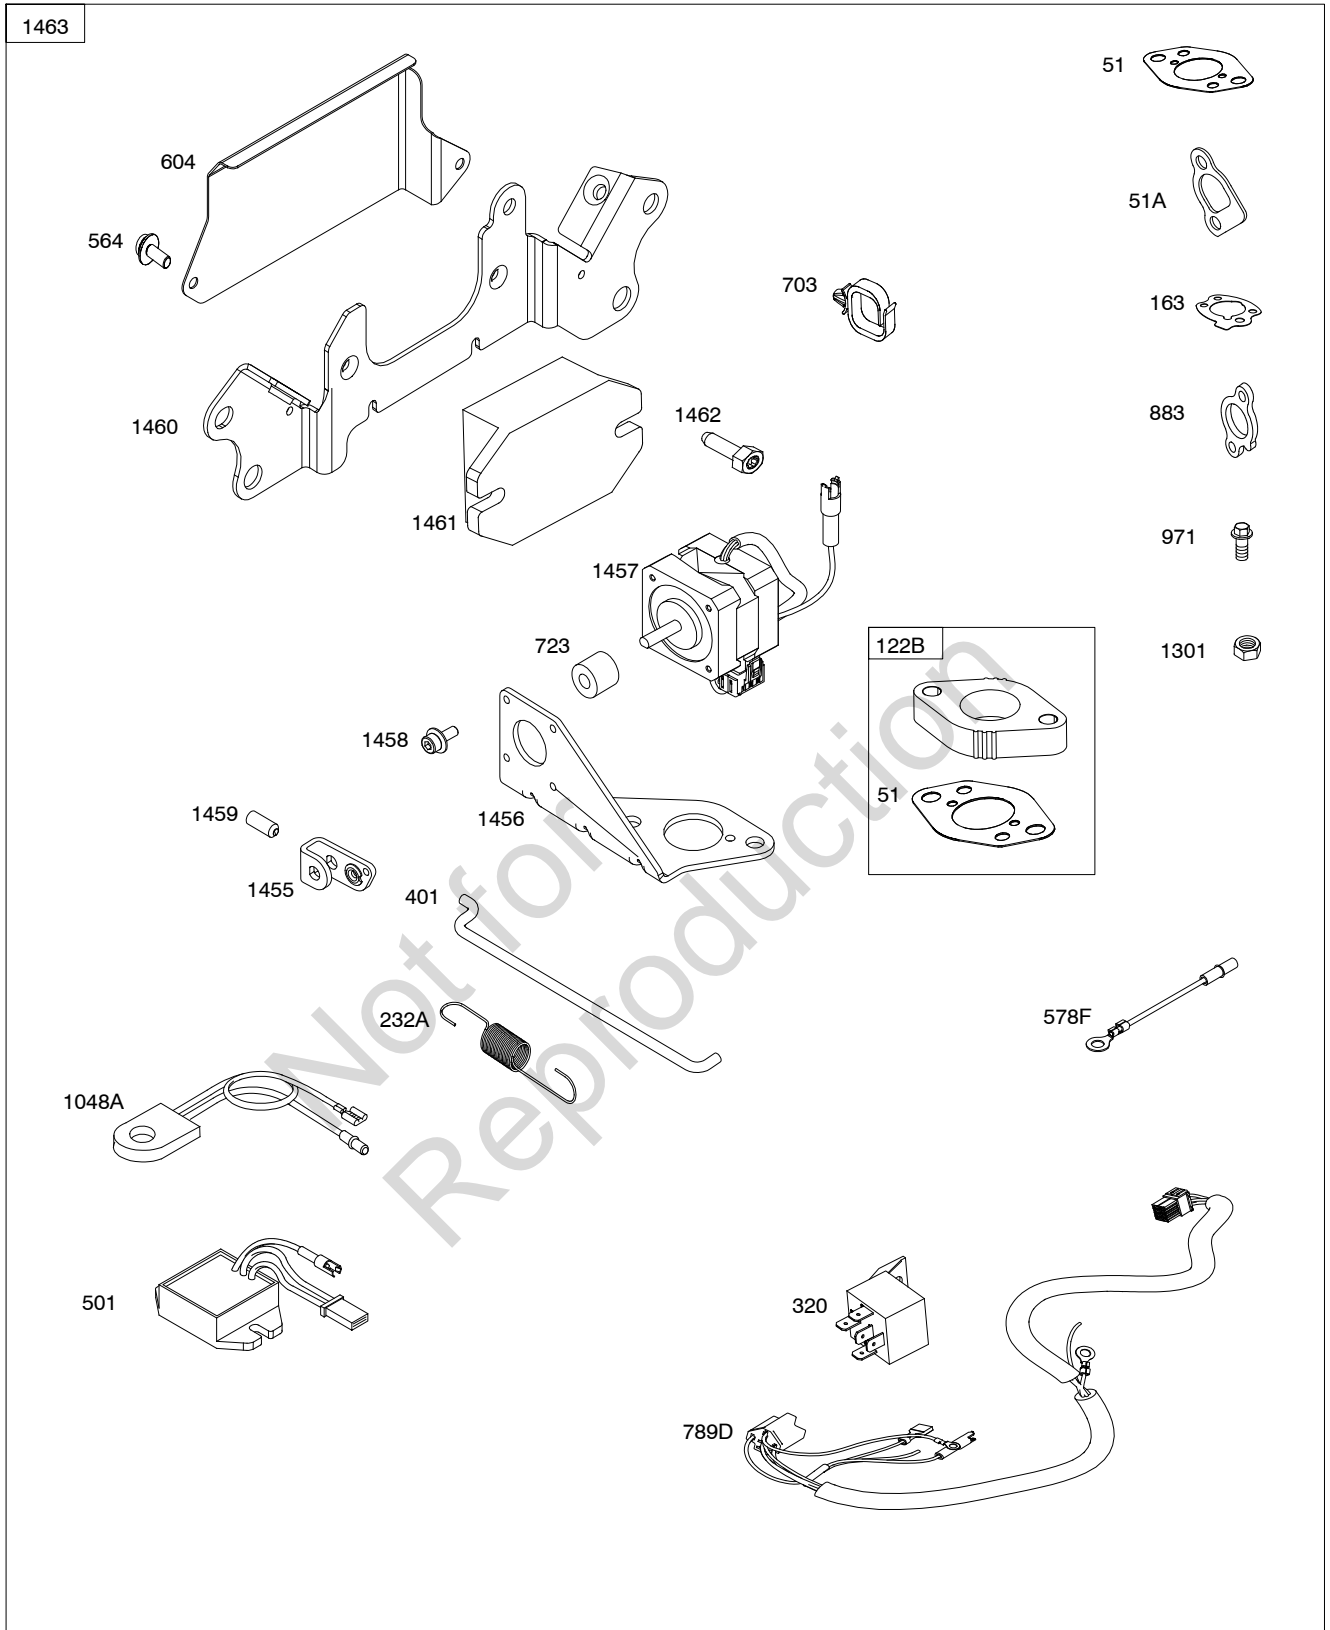




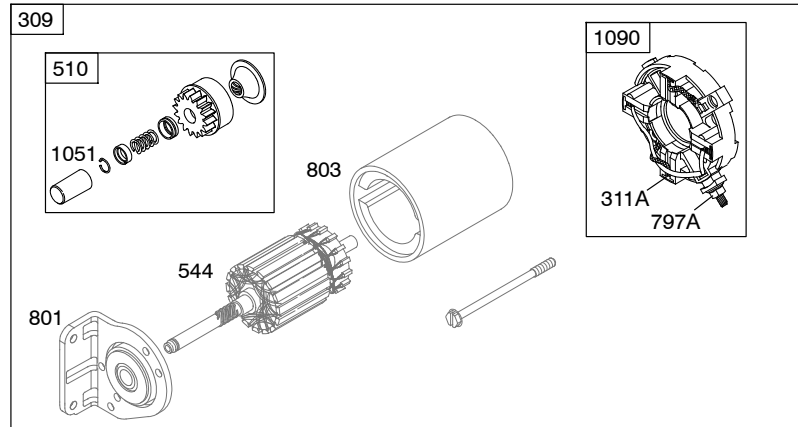


697

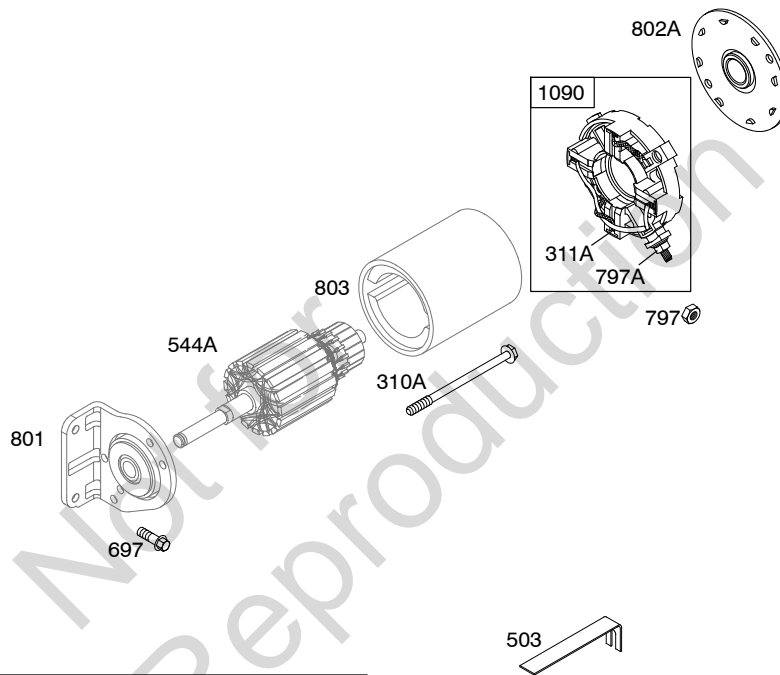 

1099

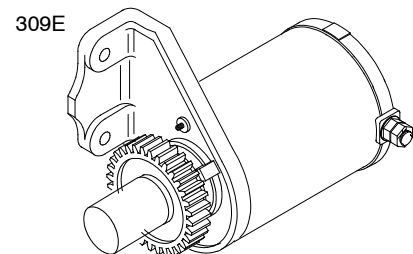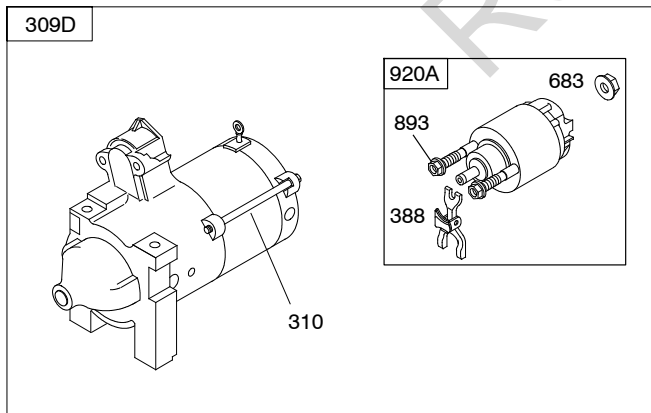  

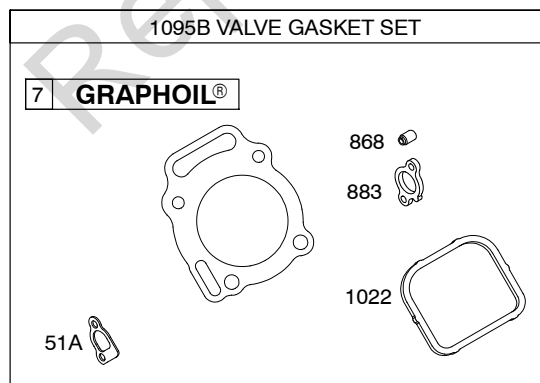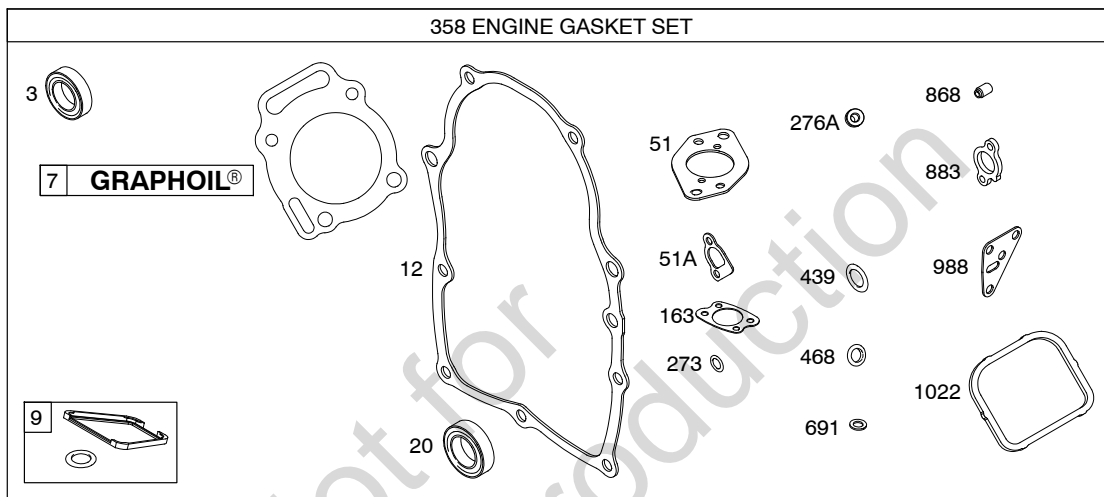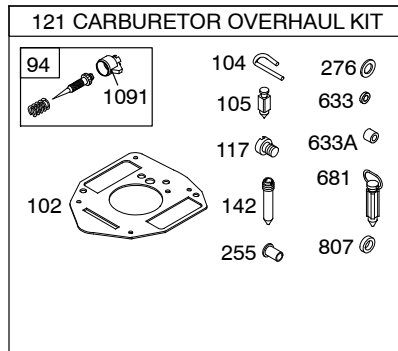   

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692178	Cylinder Assembly ----- Note ----- 841829 Cylinder Assembly Used on Type No(s). 0111. 841081 Cylinder Assembly Used on Type No(s). 0126, 0146, 0292, 0320.	16	692161	Crankshaft ----- Note ----- 692168 Crankshaft Used on Type No(s). 0178, 0203, 0264, 0265, 0285. 692163 Crankshaft Used on Type No(s). 0003, 0005, 0078, 0112, 0113, 0115, 0116, 0132, 0133, 0145, 0171, 0175, 0197, 0233, 0234, 0242, 0248, 0255, 0281, 0301, 0305, 1409, 2133, 3078.	18	844588	Cover-Crankcase ----- Note ----- 844724 Cover-Crankcase (Used After Code Date 07101400). Used on Type No(s). 0127, 0143, 0144, 0216, 0284, 1144, 1216.
2	808534	Kit-Bushing/Seal (Magneto Side)				18A	808851	Cover-Crankcase (Used Before Code Date 07101500). Used on Type No(s). 0127, 0144.
3	805101s	Seal-Oil (Magneto Side)				18B	844725	Cover-Crankcase Used on Type No(s). 0005, 0145, 0218, 0252, 0281, 0328, 1409, 1410, 2218, 3052.
5	809200	Head-Cylinder ----- Note ----- 808688 Head-Cylinder Used on Type No(s). 0222.				20	805049s	Seal-Oil (PTO Side)
5A	845716	Head-Cylinder ----- Note ----- 808689 Head-Cylinder Used on Type No(s). 0222.				21	809500	Cap-Oil Fill
7	806085s	Gasket-Cylinder Head				22	807362	Screw (Crankcase Cover/Sump)
8	808984	Breather Assembly						
9	844986	Gasket-Breather						
10	690751	Screw (Breather Assembly)						
10A	806421	Screw (Breather Cover)						
11	691556	Tube-Breather						
11A	806083s	Tube-Breather (Used Before Code Date 09121800).						
11B	844921	Tube-Breather (Used After Code Date 09121700).						
11C	844976	Tube-Breather Used on Type No(s). 0218, 0222, 0252, 1410.						
11D	845585	Tube-Breather Used on Type No(s). 0285, 293.						
12	842589	Gasket-Crankcase						
13	692059	Screw (Cylinder Head)						
15	690946	Plug-Oil Drain						
15A	691686	Plug-Oil Drain Used on Type No(s). 0221, 0222.	17	843827	Bearing-Ball (Crankcase Cover Requires Two (2) Ball Bearings) ----- Note ----- 691541 Bearing-Ball (Crankcase Cover Requires Two (2) Ball Bearings) Used on Type No(s). 0127, 0143, 0144.			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION			
23	841825	Flywheel ----- Note ----- 841830 Flywheel Used on Type No(s). 0111. 841908 Flywheel Used on Type No(s). 0027, 0112, 0113, 0114, 0120, 0121, 0123, 0127, 0156, 0183, 0187, 0197, 0207, 0220, 0234, 0235, 0266, 0267, 0274, 0277, 0278, 0299, 0300, 0307, 0315, 0318, 0327, 0527, 1127, 1187, 1266. 842514 Flywheel Used on Type No(s). 0119, 0135, 0139, 0147, 0155, 0177, 0180, 0181, 0184, 0186, 0205, 0239, 0240, 0243, 0244, 0253, 0262, 0271, 0279, 0280, 0286, 0292, 0298, 0303, 0320, 1135, 1139, 1181, 1186, 1205, 1217, 1226, 1253. 842515 Flywheel Used on Type No(s). 0142. 841657 Flywheel Used on Type No(s). 0169, 0170, 0194, 0195, 0204, 0255, 0325. 845266 Flywheel (Used After Code Date 09122000). Used on Type No(s). 0218, 0222, 0252, 0328, 2218, 3052. 842683 Flywheel (Used Before Code Date 09122100). Used on Type No(s). 0218, 0222, 1409, 1410.	25	843952	Piston Assembly (Standard) (Used After Code Date 07122300). ----- Note ----- 843956 Piston Assembly (.020" Oversize) (Used After Code Date 07122300).	27	690683	Lock-Piston Pin	28	844541	Pin-Piston (Standard) (Used After Code Date 07122300). ----- Note ----- 807621 Pin-Piston (Standard) (Used Before Code Date 07122400).
			25A	843951	Piston Assembly (Standard) (Used Before Code Date 07122400). ----- Note ----- 843958 Piston Assembly (.020" Oversize) (Used Before Code Date 07122400).	29	807900s	Rod-Connecting	32	690698	Screw (Connecting Rod)
			26	843953	Ring Set (Standard) (Used After Code Date 07122300). Ring Set (Standard) (For Replacement Rings, Order Reference 25A) (Used Before Code Date 07122400) ----- Note ----- 843957 Ring Set (.020" Oversize) (Used After Code Date 07122300). Ring Set (.020" Oversize) (For Replacement Rings, Order Reference 25A) (Used Before Code Date 07122400)	33	807681	Valve-Exhaust ----- Note ----- 808687 Valve-Exhaust Used on Type No(s). 0222.	34	807680	Valve-Intake
						34A	843751	Valve-Intake	35	692084	Spring-Valve (Intake)
						36	692084	Spring-Valve (Exhaust)	37	841309	Guard-Flywheel
						40	692058	Retainer-Valve	40A	844895	Retainer-Valve
						42	807683	Keeper-Valve	45	843379	Tappet-Valve ----- Note ----- 690977 Tappet-Valve Used on Type No(s). 0255.

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
46	845649	Camshaft ----- Note ----- 692157 Camshaft Used on Type No(s). 0005, 0145, 0218, 0252, 0281, 0328, 1409, 1410, 2218, 3052. 842064 Camshaft Used on Type No(s). 0255.	73	841662	Screen-Rotating	86	690745	Deflector-Oil
			73A	841440	Screen-Rotating	91	809208	Body-Upper Carburetor
			73B	841582	Screen-Rotating Used on Type No(s). 0150, 0154, 0178, 0193-E1, 0217, 0221, 0264, 0270, 0285, 0323, 0325, 1217.			----- Note ----- 807919 Body-Upper Carburetor Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0265, 0269, 0270.
50	690754	Manifold-Intake ----- Note ----- 692124 Manifold- Intake Used on Type No(s). 1409.	73C	494439	Screen-Rotating			842236 Body-Upper Carburetor Used on Type No(s). 0119.
			74	841441	Screw (Rotating Screen)			843532 Body-Upper Carburetor Used on Type No(s). 1409.
50A	844034	Manifold-Intake Used on Type No(s). 0075, 0077, 0078, 0079, 0087, 0217, 0230, 0231, 0240, 0243, 0246, 0252, 0264, 0265, 0268, 0276, 0277, 0285, 0287, 0289, 0292, 0293, 0320, 1217, 1268, 3052, 3075, 3077, 3078, 3079, 3087.	74A	691647	Screw (Rotating Screen)			842835 Body-Upper Carburetor Used on Type No(s). 0142, 1410.
			75	691490	Washer (Flywheel)	94	844987	Kit-Idle Mixture ----- Note ----- 842870 Kit-Idle Mixture Used on Type No(s). 0079, 0100, 0110, 0111, 0119, 0142, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0178, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0264, 0265, 0269, 0270, 1409, 1410.
			77	690819	Motor-Servo (Motor-Servo Is No Longer Available)(See Reference 1463 For Replacement Kit). Used on Type No(s). 0005, 0145, 0281.			
			78	690688	Screw (Flywheel Guard)			
51	691694	Gasket-Intake						
51A	692035	Gasket-Intake						
54	690676	Screw (Intake Manifold) (M8x63mm)						
55	691568	Housing-Rewind Starter						
56	692085	Pulley-Starter						
57	692086	Spring-Rewind Starter						
58	66574	Rope-Starter						
59	805957	Insert-Grip						
60	808167	Grip-Starter Rope						
65	690341	Screw (Rewind Starter) (5/16-18, x 0.875)						
65A	841233	Screw (Rewind Starter) (M6 x 10mm)						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
95	690718	Screw (Throttle Valve)	108A	844989	Valve-Choke ----- Note ----- 690719 Valve-Choke (Used Before Code Date 10010100). Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0265, 0269, 0270. 690719 Valve-Choke Used on Type No(s). 0110, 0111, 0119, 0142, 0178, 0264, 1409, 1410.	117	690881	Jet-Main (Standard) ----- Note ----- 690862 Jet-Main (Standard) (Used Before Code Date 10010100). Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0265, 0269, 0270. 690862 Jet-Main (Standard) Used on Type No(s). 0178, 0264, 0285, 0293. 842238 Jet-Main (Standard) Used on Type No(s). 0119. 842318 Jet-Main (Standard) (Used After Code Date 06092900). Used on Type No(s). 1409. 806859 Jet-Main (Standard) (Used Before Code Date 06093000). Used on Type No(s). 1409. 842314 Jet-Main (Standard) Used on Type No(s). 0110, 0111. 842782 Jet-Main (Standard) Used on Type No(s). 0142, 1410.
97	809007	Shaft-Throttle	109	808398	Shaft-Choke			
97A	809095	Shaft-Throttle Used on Type No(s). 0218, 0252, 0328, 1409, 1410, 2218, 3052.	109B	809096	Shaft-Choke ----- Note ----- 808962 Shaft-Choke Used on Type No(s). 1409.			
97B	807495	Shaft-Throttle Used on Type No(s). 0178, 0264, 0285, 0293.	110	806861	Washer (Choke Shaft)			
98	808177	Kit-Idle Speed						
98A	808981	Kit-Idle Speed						
102	692077	Gasket-Carburetor Body						
104	690723	Pin-Float Hinge						
105	797410	Valve-Float Needle ----- Note ----- 805620 Valve-Float Needle Used on Type No(s). 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0177, 0180, 0183, 0190, 0194, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0239, 0254, 0255, 0257, 0266, 0267, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0523, 0527, 0568, 1124, 1127, 1216, 1266.						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
118	844990	<p>Jet-Main (High Altitude) (Over 5000 Feet)</p> <p>842311 Jet-Main (High Altitude) (Over 5000 Feet) Used on Type No(s). 0264.</p> <p>----- Note -----</p> <p>842311 Jet-Main (High Altitude) (Over 5000 Feet) (Used Before Code Date 09121700). Used on Type No(s). 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0174, 0177, 0180, 0183, 0190, 0194, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0254, 0255, 0266, 0267, 1216.</p> <p>842311 Jet-Main (High Altitude) (Over 5000 Feet) (Used Before Code Date 10012000). Used on Type No(s). 0239, 0257.</p>							<p>----- Note -----</p> <p>842837 Jet-Main (High Altitude) (Over 5000 Feet) Used on Type No(s). 0110, 0111.</p> <p>842314 Jet-Main (High Altitude) (5000 Ft.) Used on Type No(s). 0142, 1410.</p> <p>842841 Jet-Main (High Altitude) (Over 5000 Feet) Used on Type No(s). 0119.</p> <p>842318 Jet-Main (High Altitude) (6500 Ft.) Used on Type No(s). 0119.</p>	
					<p>842311 Jet-Main (High Altitude) (Over 5000 Feet) (Used Before Code Date 10010100). Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0265, 0269, 0270.</p> <p>842311 Jet-Main (High Altitude) (Over 5000 Feet) (Used Before Code Date 05101200). Used on Type No(s). 0178-E1.</p> <p>----- Note -----</p> <p>807012 Jet-Main (High Altitude) (Over 5000 Feet) Used on Type No(s). 0285, 0293.</p> <p>807012 Jet-Main (High Altitude) (Over 5000 Feet) (Used Before Code Date 10120100). Used on Type No(s). 0218, 0252, 1410.</p> <p>----- Note -----</p> <p>807114 Jet-Main (High Altitude) (Over 5000 Ft.) (Used Before Code Date 06100100). Used on Type No(s). 1409.</p> <p>842836 Jet-Main (High Altitude) (Over 5000 Ft.) (Used After Code Date 06093000). Used on Type No(s). 1409.</p>					

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
118A	809442	Jet-Main (High Altitude) (9000 Feet) ----- Note ----- 807011 Jet-Main (High Altitude) (9000 Feet) (Used Before Code Date 10120100). Used on Type No(s). 0218, 0252, 1410. ----- Note ----- 842311 Jet-Main (High Altitude) (9000 Feet) (Used Before Code Date 06100100). Used on Type No(s). 1409. 842839 Jet-Main (High Altitude) (9,000 Feet) (Used After Code Date 06093000). Used on Type No(s). 1409. ----- Note ----- 842840 Jet-Main (High Altitude) (10,000 Feet) Used on Type No(s). 0110, 0111. 842783 Jet-Main (High Altitude) (9,000 Feet) Used on Type No(s). 0142, 1410. 842842 Jet-Main (High Altitude) (10,000 Feet) Used on Type No(s). 0119.	119	690720	Screw (Upper To Lower Carburetor Body) (M4x18mm) ----- Note ----- 842761 Screw (Upper To Lower Carburetor Body) (M4x16mm) Used on Type No(s). 0110, 0111, 0119, 0142, 1409, 1410.	121	809021	Kit-Carburetor Overhaul
						122	690691	Spacer-Carburetor
						122B	845817	Spacer-Carburetor
						125	844992	Carburetor (Used After Code Date 09121600). Used on Type No(s). 0002, 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0174, 0177, 0180, 0183, 0190, 0194, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0254, 0255, 0266, 0267, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0327, 0523, 0527, 0568, 1124, 1127, 1216, 1266. ----- Note ----- 845906 Carburetor (Conversion Kit) (Used Before Code Date 09121700). Used on Type No(s). 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0174, 0177, 0180, 0183, 0190, 0194, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0254, 0255, 0266, 0267, 1216.

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	844988	Carburetor Used on Type No(s). 0003, 0005, 0006, 0007, 0075, 0077, 0078, 0087, 0112, 0116, 0117, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0146, 0147, 0155, 0157, 0169, 0170, 0171, 0175, 0181, 0186, 0187, 0191, 0192, 0193, 0195, 0196, 0204, 0206, 0208, 0222, 0242, 0243, 0244, 0248, 0261, 0262, 0268, 0284, 0286, 0289, 0298, 0301, 0303, 0305, 0310, 0321, 0322, 1135, 1139, 1144, 1181, 1186, 1187, 1244, 1261, 1268, 2133, 2206, 3075, 3077, 3078, 3087.	125B	845084	Carburetor (Used After Code Date 10011900). Used on Type No(s). 0001, 0239, 0257, 0271, 0290. ----- Note ----- 845937 Carburetor (Conversion Kit) (Used Before Code Date 10012000). Used on Type No(s). 0239, 0257. ----- Note ----- 844991 Carburetor (Used After Code Date 09123100). Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0269, 0270, 0281, 0287, 0291, 0292, 0320, 0323, 1205, 1217, 1226, 1253, 1263, 1269, 2209, 3079.	125D	843129	Carburetor (Used After Code Date 06093000). Used on Type No(s). 1409. ----- Note ----- 809152 Carburetor (Used Before Code Date 06100100). Used on Type No(s). 1409.
125A	844993	Carburetor (Used After Code Date 10113000) Used on Type No(s). 0218, 0252, 0328, 2218, 3052. ----- Note ----- 845772 Carburetor (Conversion Kit) (Used Before Code Date 10120100). Used on Type No(s). 0218, 0252, 1410.	125C	809011	Carburetor (Used Before Code Date 10010100). Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0265, 0269, 0270. ----- Note ----- 809011 Carburetor (Used Before Code Date 05101200). Used on Type No(s). 0178-E1	125E	842729	Carburetor Used on Type No(s). 0178, 0264.
						125F	845255	Carburetor Used on Type No(s). 0285, 0293.
						125G	842235	Carburetor Used on Type No(s). 0119. ----- Note ----- 842736 Carburetor Used on Type No(s). 0142, 1410.
						125H	841834	Carburetor Used on Type No(s). 0110, 0111.
						130	690726	Valve-Throttle
						133A	844546	Float-Carburetor ----- Note ----- 806961 Float -Carburetor Used on Type No(s). 0110, 0111, 0119, 0142, 0178, 0264, 0285, 0293, 1409, 1410.
						133B	843320	Float-Carburetor (Used After Code Date 10010100). Used on Type No(s). 0079, 0100, 0150, 0151, 0152, 0153, 0154, 0165, 0168, 0173, 0184, 0189, 0203, 0205, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0236, 0240, 0246, 0253, 0263, 0265, 0269, 0270.

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
142	690725	Nozzle-Carburetor (Standard) ----- Note ----- 842240 Nozzle-Carburetor (Standard) Used on Type No(s). 0119, 0142, 1410. 842319 Nozzle-Carburetor (Standard) (Used After Code Date 06093000). Used on Type No(s). 1409. 806860 Nozzle-Carburetor (Standard) (Used Before Code Date 06100100). Used on Type No(s). 1409. 806987 Nozzle-Carburetor (Standard) Used on Type No(s). 0110, 0111.	161A	845088	Base-Air Cleaner (Metal) Used on Type No(s). 0001, 0007, 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0174, 0177, 0180, 0183, 0190, 0194, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0239, 0254, 0255, 0257, 0266, 0267, 0271, 0272, 0276, 0279, 0274, 0277, 0278, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0327, 0527, 0568, 1124, 1127, 1216, 1266.	161D	844929	Base-Air Cleaner Used on Type No(s). 0005, 0007, 0075, 0077, 0078, 0079, 0087, 0100, 0116, 0117, 0112, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0146, 0147, 0152, 0153, 0155, 0157, 0168, 0169, 0173, 0175, 0181, 0184, 0186, 0187, 0191, 0192, 0193, 0194, 0195, 0196, 0204, 0205, 0206, 0208, 0209, 0217, 0221, 0223, 0226, 0230, 0231, 0240, 0242, 0243, 0244, 0246, 0248, 0253, 0255, 0261, 0263, 0268, 0269, 0270, 0281, 0284, 0286, 0287, 0289, 0291, 0298, 0301, 0305, 0310, 0321, 0322, 0232, 1135, 1139, 1144, 1181, 1186, 1205, 1217, 1226, 1244, 1253, 1261, 1268, 1269, 2206, 3087.
146	691639	Key-Timing	161B	808414	Base-Air Cleaner (Metal)			
151	841185	Stud (Exhaust Manifold)	161C	841824	Base-Air Cleaner (Metal)			
161	691561	Base-Air Cleaner (Metal) ----- Note ----- 842830 Base-Air Cleaner (Metal) Used on Type No(s). 0150, 0151, 0154, 0165, 0187, 0189, 1410.						----- Note ----- 845142 Base-Air Cleaner Used on Type No(s). 0242, 0262, 0303, 0322, 0328, 1187, 1263, 1268, 2133, 2206, 2209, 3075, 3077, 3078, 3087.

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION			
161E	844994	Base-Air Cleaner Used on Type No(s). 0150, 0151, 0154, 0165, 0189, 0218, 0230, 0231, 0252, 0292, 0320, 1410. ----- Note ----- 845600 Base-Air Cleaner Used on Type No(s). 2218.	163	692081	Gasket-Air Cleaner	182E	841601	Bracket-Fuel Tank			
			163B	841823	Gasket-Air Cleaner	182F	691520	Bracket-Fuel Tank			
			163C	844931	Gasket-Air Cleaner Used on Type No(s). 0001, 0005, 0007, 0075, 0077, 0078, 0079, 0087, 0100, 0116, 0117, 0118, 0112, 0113, 0114, 0126, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0146, 0147, 0150, 0151, 0152, 0153, 0154, 0155, 0157, 0165, 0168, 0169, 0172-H1, 0173, 0175, 0181, 0184, 0186, 0187, 0189, 0191, 0192, 0193, 0194, 0195, 0196, 0204, 0205, 0206, 0208, 0209, 0217, 0218, 0221, 0222, 0223, 0226, 0230, 0231, 0233-H1, 0234, 0235, 0240, 0242, 0243, 0244, 0246, 0248, 0253, 0255, 0261, 0262, 0263, 0268, 0269, 0270, 0271, 0280, 0281, 0283, 0284, 0285, 0286, 0287, 0288, 0289, 0290, 0291, 0292, 0298, 0293, 0300, 0301, 0305, 0310, 0315, 0316, 0320, 0321, 0322, 0323, 0327, 0328, 1135, 1139, 1144, 1181, 1186, 1187, 1205, 1216, 1217, 1226, 1244, 1263, 1410, 1253, 1261, 1268, 1269, 2218, 2133, 2206, 2209, 3075, 3077, 3078, 3087.	182G	841600	Bracket-Fuel Tank	182H	691524	Bracket-Fuel Tank
						182J	691525	Bracket-Fuel Tank			
						186	844032	Connector-Hose			
						186A	845121	Connector-Hose			
						186B	845141	Connector-Hose			
						187	791766	Line-Fuel (15" Long) (Cut To Length) ----- Note ----- 791745 Line-Fuel (23" Long) (Cut To Length)			
161F	844996	Base-Air Cleaner Used on Type No(s). 0222.				187A	791744	Line-Fuel (Formed) (14" Long) (Cut To Length) ----- Note ----- 791801 Line-Fuel (Formed) (7.33" Long) (Cut To Length)			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187B	692107	Line-Fuel	188	692056	Screw (M8x14mm) (Control Bracket)	209	692070	Spring-Governor
187C	692106	Line-Fuel						----- Note -----
187E	844556	Line-Fuel Used on Type No(s). 0001, 0002, 0013, 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0172, 0174, 0177, 0180, 0183, 0190, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0239, 0254, 0257, 0266, 0267, 0270, 0271, 0272, 0276, 0279, 0274, 0277, 0278, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0327, 0523, 0527, 0568, 1124, 1127, 1216, 1266.	190	692056	Screw (Fuel Tank)			690710 Spring-Governor Used on Type No(s). 0150, 0239, 0240, 0271.
			190A	692199	Screw (Fuel Tank)			690716 Spring-Governor Used on Type No(s). 0007, 0119, 0135, 0142, 0156, 0244, 0286, 0322, 1135, 1244.
			192	807623	Adjuster-Rocker Arm			691506 Spring-Governor Used on Type No(s). 0003, 0078, 0132, 0133, 0301, 2133, 3078.
			197	807163	Screw (Back Plate)			691507 Spring-Governor Used on Type No(s). 0110, 0111, 0130, 0157, 0172, 0193, 0207, 0274, 1226, 2206.
			203	690923	Crank-Bell			691508 Spring-Governor Used on Type No(s). 0152, 0170, 0194, 0195, 0196, 0203, 0221, 0270, 0323, 0325.
			203A	808753	Crank-Bell Used on Type No(s). 0222..			691546 Spring-Governor Used on Type No(s). 0242.
			205	692083	Screw (Bell Crank)			692071 Spring-Governor Used on Type No(s). 0138, 0178, 0209, 0230, 0231, 0236, 0246, 0264, 0285, 0287, 0289, 0292, 0320, 0321, 2209.
			206	691244	Nut-Governor Adjusting			692072 Spring-Governor Used on Type No(s). 0154, 0165, 0222.
			208	808453	Rod-Governor Control			805630 Spring-Governor Used on Type No(s). 0255.
			208A	844796	Rod-Governor Control Used on Type No(s). 0242.			
187F	844560	Line-Fuel Used on Type No(s). 0001, 0002, 0113, 0114, 0115, 0118, 0121, 0156, 0197, 0207, 0220, 0257, 0266, 0267, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0523, 0527, 0568, 1124, 1127, 1266.						
187G	844557	Line-Fuel Used on Type No(s). 0023, 0027, 0068, 0120, 0123, 0124, 0126, 0127, 0143, 0172, 0174, 0177, 0180, 0183, 0190, 0213, 0216, 0228, 0233, 0234, 0235, 0239, 0254, 0327, 1216.						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		806507 Spring-Governor Used on Type No(s). 0130, 0206, 0226.	215	841183	Cover-Cylinder Head (Cylinder 1) ----- Note ----- 841316 Cover-Cylinder Head (Cylinder 2) Used on Type No(s). 0175, 0178, 0193, 0203, 0217, 0236, 0248, 0265, 0281, 0285, 1217.	232	692073	Spring-Governor Link
209A	690709	Spring-Governor Used on Type No(s). 0112, 0113, 0115, 0116, 0171, 0175, 0197, 0233, 0234, 0248.				232A	845816	Spring-Governor Link
210	691370	Strainer-Fuel				234	691723	Clip-Control Rod
210A	845270	Strainer-Fuel Used on Type No(s). 0001, 0194, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0523, 0527, 0568, 1124, 1127, 1266.	215A	841182	Cover-Cylinder Head (Cylinder 2) ----- Note ----- 841317 Cover-Cylinder Head (Cylinder 1) Used on Type No(s). 0175, 0178, 0193, 0203, 0217, 0236, 0248, 0265, 0281, 0285, 1217.	239	690233	Switch-Oil Pressure ----- Note ----- 697049 Switch-Oil Pressure Used on Type No(s). 0142, 0239, 0140, 0271.
		691505 Spring-Governed Idle Used on Type No(s). 0110, 0111, 0119, 0130, 0135, 0157, 0206, 0207, 0226, 0244, 0274, 0286, 0318, 1135, 1226, 1244, 2206.	216	690705	Link-Choke	240	691035	Filter-Fuel
211	692069	Spring-Governed Idle ----- Note ----- 691553 Spring-Governed Idle Used on Type No(s). 0142, 0155, 0246, 0287.	217	806862	Spring-Choke Return	240A	808116s	Filter-Fuel ----- Note ----- 844545 Filter-Fuel Used on Type No(s). 0001, 0002, 0023, 0027, 0068, 0113, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0172, 0174, 0177, 0180, 0183, 0190, 0197, 0207, 0213, 0216, 0218, 0220, 0228, 0233, 0234, 0235, 0239, 0254, 0257, 0266, 0267, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0327, 0523, 0527, 0568, 1124, 1127, 1216, 1266.
		692068 Spring-Governed Idle Used on Type No(s). 0003, 0078, 0132, 0133, 0255, 0265, 0301, 2133, 3078.	222	845305	Bracket-Control			
211A	690707	Spring-Governed Idle Used on Type No(s). 0112, 0113, 0115, 0116, 0117, 0171, 0175, 0197, 0234, 0248. ----- Note -----	222A	844169	Bracket-Control Used on Type No(s). 0007, 0110, 0111, 0119, 0142, 0322.	240B	845125	Filter-Fuel Used on Type No(s). 0169, 0170, 0194, 0195, 0196, 0204, 0325, 0328.
		692075 Rod-Hand Choke	226	692075	Rod-Hand Choke			
		690236 Lever-Governor Control	227	690236	Lever-Governor Control	255	690721	Bushing-Choke Shaft
		845484 Lever-Governor Control Used on Type No(s). 0003, 0078, 0112, 0113, 0115, 0116, 0132, 0133, 0171, 0175, 0197, 0233, 0234, 0248, 0255, 0301, 2133, 3078.	227A	845484	Lever-Governor Control Used on Type No(s). 0242.	262	692083	Screw (Rod Bracket)
		844799 Lever-Governor Control Used on Type No(s). 0242.	227B	844799	Lever-Governor Control Used on Type No(s). 0242.			
212	690712	Link-Throttle	231	690718	Screw (Choke Valve)			
212A	691519	Link-Throttle Used on Type No(s). 0005, 0145, 0281.						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
265	691024	Clamp-Casing	300A	692099	Muffler	309	691564	Motor-Starter
267	841552	Screw (Casing Clamp) (M5X20mm)			Used on Type No(s). 0068, 0121, 0123, 0124, 0127, 0132, 0133, 0135, 0139, 0143, 0144, 0145, 0156, 0168, 0172, 0173, 0174, 0195, 0196, 0208, 0213, 0216, 0220, 0223, 0228, 0242, 0244, 0248, 0253, 0254, 0266, 0267, 0276, 0277, 0283, 0284, 0286, 0288, 0291, 0299, 0301, 0305, 0327, 0568, 1124, 1127, 1135, 1144, 1216, 1244, 1253, 1266, 2133.	309D	808817	Motor-Starter Used on Type No(s). 0111, 0126, 0146, 0320.
267A	692083	Screw				309E	844717	Motor-Starter Used on Type No(s). 0001, 0005, 0007, 0023, 0068, 0075, 0077, 0078, 0079, 0087, 0100, 0115, 0116, 0117, 0118, 0124, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0147, 0150, 0151, 0152, 0153, 0154, 0155, 0157, 0165, 0168, 0172, 0175, 0177, 0180, 0181, 0184, 0186, 0189, 0191, 0192, 0193, 0205, 0206, 0208, 0209, 0213, 0216, 0217, 0221, 0222, 0223, 0226, 0228, 0233, 0236, 0239, 0240, 0242, 0243, 0244, 0248, 0253, 0255, 0262, 0263, 0268, 0269, 0270, 0271, 0272, 0276, 0279, 0280, 0281, 0283, 0284, 0286, 0288, 0289, 0290, 0291, 0294, 0298, 0301, 0305, 0308, 0310, 0311, 0317, 0218, 0322, 0568, 1124, 1135, 1139, 1144, 1181, 1186, 1205, 1216, 1217, 1226, 1244, 1253, 1261, 1268, 1269, 2133, 2206, 2209, 3075, 3077, 3078, 3087.
268	691025	Casing-Control Wire (Cut To Required Length)	300B	690906	Muffler Used on Type No(s). 0147, 0152, 0154, 0165, 0168, 0184, 0189, 0190, 0197, 0206, 0240, 0243, 0270, 0294, 0303, 0308, 0310, 0323, 2206.			
269	691026	Wire-Control (Cut To Required Length)						
270	691027	Nut (Control Wire Casing)						
271	692541	Lever-Control (Cable Wire With "Z" Formed End)						
273	690681	Seal-O Ring (Oil Pump)						
276	690724	Washer-Sealing						
276A	807085	Washer-Sealing (Head)(Rocker Cover)						
276B	806137	Washer-Sealing (Solenoid)						
276C	690704	Washer-Sealing (Crankcase Cover/Sump)						
276D	691766	Washer-Sealing (Head)(Rocker Cover)						
276F	693497	Washer-Sealing Used on Type No(s). 0110, 0111, 0119, 0142, 1409, 1410.						
278	842122	Washer (Governor Control Lever)						
280	691526	Bracket-Rod	300C	691562	Muffler Used on Type No(s). 0001, 0194, 0207, 0218, 0239, 0252, 0257, 0263, 0269, 0271, 0274, 0290, 0300, 0318, 0325, 0328, 1269, 1410, 2218, 3052.			
281	690742	Panel-Control						
282	692083	Screw (Control Lever)						
287	692062	Screw (Dipstick Tube)						
287A	806660	Screw (Dipstick Tube) (M8x18mm)						
290	809911	Screw (Adapter-Air Cleaner) (M6x55mm) Used on Type No(s). 0293.	300D	808379	Muffler Used on Type No(s). 0194, 0257, 0300, 1410.			
300	498984s	Muffler Used on Type No(s). 0150, 0151, 0221.	304	842681	Housing-Blower			
			305	692062	Screw (Blower Housing)			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
310		Screw (Starter Motor) (For Replacement Starter Motor, Order Reference 309) ----- Note ----- 820807 Screw (Starter Motor) Used on Type No(s). 0111, 0126, 0146.	337	491055s	Plug-Spark ----- Note ----- 496018s Plug-Spark Used on Type No(s). 0007, 0119, 0142, 0178, 0203, 0218, 0221, 0252, 0264, 0265, 0285, 0293, 0322, 0328, 2218, 3052.	356	690796	Wire-Stop
310A	690323	Screw (Starter Motor)			792015 Plug-Spark Used on Type No(s). 0005, 0027, 0068, 0075, 0077, 0078, 0079, 0087, 0110, 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0146, 0150, 0151-B1, 0152, 0153, 0154, 0158, 0165, 0169, 0170, 0172, 0174, 0175, 0190, 0192, 0193, 0194, 0195, 0196, 0197, 0204, 0207, 0208, 0209, 0213, 0222, 0223, 0228, 0230, 0233, 0234, 0235, 0248, 0254, 0255, 0261, 0262, 0263, 0266, 0267, 0268, 0269, 0270, 0274, 0276, 0277, 0281, 0283, 0288, 0291, 0292, 0298, 0308, 0310, 0315, 0316, 0317, 0318, 0320, 0325, 0327, 0323, 0527, 0568, 1124, 1261, 1263, 1266, 1268, 1269, 1409, 1410, 2209, 3075, 3077, 3078, 3079, 3087.	357	691483	Key-Drive Pulley
311A	497608	Brush Set				358	841188	Gasket Set-Engine
318	807130	Screw (Mounting Bracket)				359	691077	Washer (Ignition Module)
318B	690932	Screw (Mounting Bracket) Used on Type No(s). 0005, 0145, 0281.				363	19203	Puller-Flywheel
320	1726829SM	Relay (Single Pole, Double Throw)				365	690711	Screw (Carburetor) (M8 x 38mm)
322	692067	Screw (Cylinder Head Cover)				365A	690866	Screw (Carburetor) (M6 x 98mm)
332	690887	Nut (Flywheel)				373	691612	Nut (Ground Terminal)
333	844548	Armature-Magneto				377	808095	Key-Woodruff
334	692066	Screw (Magneto Armature)				383	19576s	Wrench-Spark Plug
						385	807084	Screw (Fuel Pump)
						387	808656	Pump-Fuel
						387A	845148	Pump-Fuel Used on Type No(s). 0178, 0203, 0264, 0265, 0271, 0285, 0293.
						388	820799	Lever-Pinion Drive (Used Before Code Date 10050800). ----- Note ----- Level-Pinion Drive (See Ref 309D For Correct Replacement Starter-Motor) (Used After Code Date 10050700).
						401	845814	Link-Actuator
						402	690679	Screw (Oil Filter Cover)
						415	794903	Plug
						432	691509	Cap-Spring
						436	692061	Manifold-Exhaust
						436A	691499	Manifold-Exhaust
						436B	691501	Manifold-Exhaust
						436C	691502	Manifold-Exhaust
						437	691902	Screw (Exhaust Manifold) (M8 x 20mm)
						439	692154	Seal-O Ring (Crankcase Cover/Sump)
			346	690661	Screw (Spark Arrestor)			
			347	691995	Switch-Rocker			
			349	690238	Nut (Cylinder Head Cover)			
			355	690944	Washer (Muffler Bracket)			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
445	394018s	Filter-Air Cleaner Cartridge	474A	696458	Alternator (16 Amp Regulated)	505	690238	Nut (Governor Control Lever)
445A	393957s	Filter-Air Cleaner Cartridge	474B	696579	Alternator (20 Amp) Used on Type No(s). 0119, 0135, 0139, 0147, 0155, 0177, 0180, 0181, 0184, 0186, 0194, 0205, 0239, 0240, 0243, 0244, 0253, 0262, 0271, 0279, 0280, 0286, 0292, 0298, 0320, 1135, 1139, 1181, 1186, 1205, 1244, 1253.	506	807120	Screw (M4x18mm) (Carburetor Cover)
		----- Note ----- 845090 Filter-Air Cleaner Cartridge Used on Type No(s). 0001, 0007, 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0156, 0172, 0177, 0180, 0183, 0194, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0239, 0240, 0243, 0244, 0246, 0254, 0257, 0266, 0267, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0327, 0527, 0568, 1124, 1127, 1216, 1266.	474C	841833	Alternator ----- Note ----- 841178 Alternator (20-50 Amp) Used on Type No(s). 0142.	507	691972	Insulator
447	841233	Screw (Air Guide Cover)	479	807084	Screw (Oil Pump Screen)	510	496881	Drive-Starter
454	693289	Cap-Breather Used on Type No(s). 0222.	480	806660	Screw (Hose-Purge Line) (M8x18mm)	515	691528	Spring-Pawl
455	841794	Cup-Flywheel	493	691518	Bracket-Mounting Used on Type No(s). 0005, 0145, 0281.	520	691084	Terminal-Ground
456	691529	Plate-Pawl Friction	493A	845729	Bracket-Mounting	523	693175	Dipstick
456A	845219	Plate-Pawl Friction	500	691086	Washer (Key Switch)	523A	692100	Dipstick Used on Type No(s). 0217, 0236, 1217.
459	845218	Pawl-Ratchet	501	845907	Regulator	524	693172	Seal-Dipstick Tube
460	806667	Connector-Filter Adapter	501A	691573	Regulator Used on Type No(s). 0119, 0135, 0139, 0147, 0155, 0177, 0180, 0181, 0184, 0186, 0205, 0239, 0240, 0243, 0244, 0253, 0262, 0271, 0279, 0280, 0286, 0298, 0303, 1135, 1139, 1181, 1186, 1205, 1244, 1253.	524A	281370s	Seal-Dipstick Tube Used on Type No(s). 0217, 0236, 1217.
466	806466	Seal-O Ring (Breather Assembly)	501B	493219	Regulator Used on Type No(s). 0117, 0118, 0316.	525	693174	Tube-Dipstick
467	844618	Knob-Air Cleaner (Used After Code Date 1003310). ----- Note ----- 691985 Knob-Air Cleaner (Used Before Code Date 10040100).	501C	841170	Regulator Used on Type No(s). 0142.	525A	693173	Tube-Dipstick Used on Type No(s). 0110, 0230, 0231, 0236, 0281, 0292, 0320, 1409.
467B	691668	Seal-Air Cleaner Nut	503	691532	Strap-Starter (82mm Long) ----- Note ----- 845016 Strap-Starter (60mm Long)	525B	690897	Tube-Dipstick Used on Type No(s). 0217, 0236, 1217.
468	690690	Seal-O Ring (Oil Pump Screen)				526	692067	Screw (Regulator)
474	696459	Alternator (Dual Circuit)				526A	691547	Screw (Regulator) Used on Type No(s). 0119, 0135, 0139, 0142, 0147, 0155, 0177, 0180, 0181, 0184, 0186, 0205, 0239, 0240, 0243, 0244, 0253, 0262, 0271, 0279, 0280, 0286, 0298, 0303, 1135, 1139, 1181, 1186, 1205, 1244, 1253.
						527	690423	Clamp-Tube
						527A	807116	Clip
						529	690744	Grommet
						529A	691527	Grommet
						532	691115	Nut (Mounting Bracket) Used on Type No(s). 0005, 0145, 0281.
						544		Armature-Starter (For Replacement Armature, Order Reference 309)

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
544A		Armature-Starter (For Replacement Armature, Order Reference 309)	597	690876	Screw (Pawl Friction Plate)	643	692079	Retainer-Air Filter
552	690701	Bushing-Governor Crank	598	807625	Shim-End Play (Crankshaft or Camshaft Bearing)	643A	690447	Retainer-Air Filter
552A	806686	Bushing-Governor Crank	601	691038	Clamp-Hose	643B	844932	Retainer-Air Filter Used on Type No(s). 0005, 0007, 0100, 0116, 0117, 0112, 0123, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0146, 0147, 0150, 0151, 0152, 0153, 0154, 0155, 0157, 0168, 0169, 0173, 0181, 0184, 0186, 0187, 0195, 0196, 0204, 0217, 0218, 0221, 0223, 0226, 0240, 0242, 0243, 0244, 0246, 0253, 0255, 0261, 0262, 0263, 0269, 0270, 0281, 0284, 0286, 0287, 0289, 0291, 0292, 0298, 0301, 0303, 0305, 0310, 0320, 0321, 0322, 0323, 0325, 0328, 1135, 1139, 1144, 1181, 1186, 1187, 1205, 1217, 1226, 1244 1253, 1261, 1263, 1268, 1269, 1410, 2133, 2206, 2209, 2218, 3075, 3077, 3078, 3087.
555	692067	Screw (Starter Solenoid)	601A	691522	Clamp-Hose			
561	690713	Nut (Control Lever)	601B	791850	Clamp-Hose			
562	690239	Bolt (Governor Control Lever)	604	845821	Cover-Control			
563	841735	Screw (Debris Screen Guard)	608	841729	Starter-Rewind			
564	690677	Screw (Control Cover)	613	691902	Screw (Muffler)			
565	690682	Stud (Oil Filter Adapter)	613A	692067	Screw (Muffler)			
572	690686	Baffle-Breather	614	691550	Retainer-Governor Shaft			
573	841310	Plate-Back ----- Note ----- 841311 Plate-Back Used on Type No(s). 0111. 841127 Plate-Back Used on Type No(s). 0126, 0146, 0292, 0320. 841314 Plate-Back Used on Type No(s). 0142.	616	806685	Crank-Governor			
577	690795	Cable-Starter	628	806660	Screw (M8x18mm) (Fuel Pump Bracket)			
578	692306	Wire Assembly	629	807004	Spring-Throttle Return ----- Note ----- 806716 Spring- Throttle Return Used on Type No(s). 0005, 0145, 0281.			
578A	844547	Wire Assembly	629A	806717	Spring-Throttle Return Used on Type No(s). 0005, 0145, 0281.			
578C	690809	Wire Assembly Used on Type No(s). 0027, 0112, 0113, 0114, 0120, 0127, 0143, 0183, 0187, 0197, 0207, 0234, 0235, 0266, 0267, 0274, 0278, 0315, 0318, 0327, 0527, 1127, 1187, 1266.	633	806131	Seal-Choke/Throttle Shaft			
578D	692961	Wire Assembly Used on Type No(s). 0005, 0145, 0281.	633A	690722	Seal-Choke/Throttle Shaft			
578E	691999	Wire Assembly	633B	807003	Seal-Choke/Throttle Shaft			
578F	845849	Wire-Assembly	635	692076	Boot-Spark Plug			
587	698024	Clamp-Cable	637	806999	Washer (Throttle Shaft)			
592	690939	Nut (M6) (Rewind Starter)	637A	807000	Washer (Throttle Shaft)			
596	691492	Screw (Oil Pump)	638	691551	Washer (Cylinder Head Cover)			
			638A	690706	Washer (Cylinder Head Cover)			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
643C	845087	Retainer-Air Filter Used on Type No(s). 0001, 0007, 0023, 0027, 0068, 0075, 0077, 0078, 0079, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0174, 0177, 0180, 0183, 0189, 0190, 0191, 0192, 0193, 0194, 0197, 0205, 0207, 0208, 0209, 0213, 0216, 0220, 0228, 0230, 0231, 0233, 0234, 0235, 0239, 0254, 0255, 0257, 0263, 0266, 0267, 0269, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0327, 0527, 0568, 1124, 1127, 1216, 1266.	681	808798	Kit-Needle/Seat	789	691996	Harness-Wiring ----- Note ----- 691578 Harness-Wiring Used on Type No(s). 0119, 0135, 0139, 0147, 0177, 0180, 0181, 0184, 0186, 0205, 0239, 0240, 0243, 0244, 0253, 0262, 0271, 0279, 0280, 0286, 0298, 0303, 1135, 1139, 1181, 1186, 1205, 1244, 1253. 841318 Harness-Wiring Used on Type No(s). 0126, 0146.
			683	691029	Nut (Starter Solenoid) (Used Before Code Date 10050800). ----- Note ----- Nut (See Ref 309D For Correct Replacement Starter-Motor) (Used After Code Date 10050700).			
			689	691272	Spring-Friction	789A	844549	Wire Assembly Used on Type No(s). 0005, 0145, 0281.
			691	842826	Seal-Governor Shaft	789B	796030	Wire Assembly Used on Type No(s). 0213.
			697	692062	Screw (Drive Cap)	789C	844798	Wire Assembly Used on Type No(s). 0242.
			703	691010	Clip	789D	845788	Wire Assembly
			710	807689	Cover-Oil Filter	797	691029	Nut (Brush Retainer)
			717	692153	Strap/Stud-Air Cleaner Mounting	797A	693167	Nut (Brush Retainer)
			718	806469	Pin-Locating	801		Cap-Drive (For Replacement Starter Motor, Order Reference 309(A))
			718A	690740	Pin-Locating (28MM)	802A	691286	Cap-End
			718B	841581	Pin-Locating (32MM)	803		Housing-Starter (For Replacement Starter Motor, Order Reference 309)
			723	845818	Seal-Foam			
			725	691498	Shield-Heat			
			727	841313	Cover-Starter Drive			
			728	691514	Screw (Heat Shield)			
			728A	692067	Screw (Heat Shield)			
650	841233	Screw (Oil Deflector)	729	690586	Clip-Wire			
663	692083	Screw (Control Panel)	732	690688	Screw (Starter Drive Cover)			
664	691087	Nut (Key Switch)	732A	841233	Screw (Starter Drive Cover)			
668	691500	Spacer	737	690679	Screw (Oil Filter Adapter)			
668A	691215	Spacer	741	691530	Gear-Timing			
674	692062	Screw (M8x18mm) (Fuel Tank Bracket)	742	807001	Retainer-E Ring			
674A	692056	Screw (Fuel Tank Bracket)	773	690875	Retainer			
676	795036	Deflector-Muffler Used on Type No(s). 0127, 0143, 0144, 0145, 0150, 0151, 0173, 0213, 0221, 0284, 0288, 1127, 1144, 1216.	774	692067	Screw (Stop Wire)			
676A	396903	Deflector-Muffler	788	691559	Bracket-Fuel Pump			
676B	495518	Deflector-Muffler	788A	844643	Bracket-Fuel Pump Used on Type No(s). 0178, 0203, 0264, 0265, 0271, 0285, 0293.			
677	690661	Screw (Muffler Deflector)						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
804	844727	Canister-Carbon Used on Type No(s). 0001, 0194, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0523, 0527, 0568, 1124, 1127, 1266.	862	691565	Strap/Stud-Air Cleaner Mounting ----- Note ----- 845089 Strap/Stud-Air Cleaner Mounting Used on Type No(s). 0001, 0007, 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0158, 0172, 0174, 0177, 0180, 0183, 0190, 0194, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0239, 0254, 0255, 0257, 0266, 0267, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0327, 0527, 0568, 1124, 1127, 1216, 1266.	865	843768	Cover-Air Guide
807	805557	Spacer-Throttle	863	691513	Bracket-Muffler	865A	841319	Cover-Air Guide (Aluminum) Used on Type No(s). 0175, 0178, 0193, 0203, 0217, 0230, 0231, 0233, 0239, 0248, 0265, 0285, 1217. ----- Note ----- 841231 Cover-Air Guide Used on Type No(s). 0236, 0281.
813	690635	Clamp	863A	690756	Bracket-Muffler Used on Type No(s). 0121, 0127, 0156, 0266, 0267, 0277, 1127, 1266.	868	691963	Seal-Valve
816	690706	Washer (Oil Filter Adapter)				871	692057	Bushing-Valve Guide
819	692056	Screw (Muffler Bracket)				877	393456	Wire/Connector- Alternator
819A	690943	Screw (Muffler Bracket)				877C	399916	Wire/Connector- Alternator
819C	692067	Screw (Muffler Bracket) Used on Type No(s). 0127, 0156.				877D	698092	Wire/Connector- Alternator
819D	692062	Screw (Muffler Bracket) Used on Type No(s). 0165, 1263.				878	398661	Harness-Alternator
830	809157	Stud-Rocker Arm				878A	691362	Harness-Alternator
832	691571	Guard-Muffler				879	842123	Cover-Carburetor ----- Note ----- 842269 Cover- Carburetor Used on Type No(s). 0142, 0150, 0151, 0154, 0165, 0169, 0187, 0189, 0191, 0209, 0230, 0231, 0236, 0292, 0320.
833	807084	Screw (Air Cleaner Mounting Strap/Stud)				879A	807460	Cover-Carburetor 842127 Cover- Carburetor Used on Type No(s). 0112, 0187, 0205, 0208, 1187.
833A	691593	Screw (Air Cleaner Mounting Strap/Stud)				883	691613	Gasket-Exhaust
836	691514	Screw (Muffler Guard)				884	690898	Clamp-Muffler
836A	692067	Screw (Muffler Guard)				884A	691956	Clamp-Muffler Used on Type No(s). 0150, 0151, 0158, 0165.
837	808085	Spacer-Muffler						
842	690611	Seal-O Ring						
843	691322	Sleeve-Lever						
849	691088	Screw (Stub Shaft)						
855	845586	Adapter-Air Cleaner Used on Type No(s). 0285, 0293.						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
892	692318	Switch-Key	920B	845269	Solenoid-Starter	947	692094	Solenoid-Fuel
893	820805	Nut (Starter Solenoid) (Used Before Code Date 10050800). ----- Note ----- Nut (See Ref 309D For Correct Replacement Starter-Motor) (Used After Code Date 10050700).			Used on Type No(s). 0007, 0075, 0077, 0078, 0079, 0087, 0130, 0206, 0271, 0294, 0303, 0322, 2206. ----- Note ----- 557067 Solenoid-Starter Used on Type No(s). 0001, 0003, 0005, 0006, 0023, 0068, 0075, 0077, 0078, 0079, 0087, 0115, 0116, 0117, 0118, 0124, 0130, 0132, 0133, 0135, 0139, 0144, 0145, 0147, 0155, 0168, 0171, 0172, 0174, 0175, 0180, 0181, 0184, 0186, 0190, 0192, 0205, 0208, 0213, 0216, 0228, 0233, 0239, 0240, 0242, 0243, 0244, 0248, 0253, 0254, 0257, 0261, 0262, 0263, 0268, 0269, 0271, 0272, 0276, 0279, 0280, 0281, 0283, 0284, 0286, 0288, 0290, 0291, 0298, 0301, 0303, 0305, 0308, 0310, 0311, 0316, 0317, 0523, 0568, 1124, 1135, 1139, 1144, 1181, 1186, 1205, 1216, 1244, 1253, 1261, 1263, 1268, 1269, 2133, 3075, 3077, 3078, 3079, 3087.			----- Note ----- 842239 Solenoid-Fuel Used on Type No(s). 0119.
899	691077	Washer (Starter Solenoid)				949	845728	Guard-Debris Screen
914	807084	Screw (Rocker Cover)				955	807723	Plug-Carburetor ----- Note ----- 808176 Plug-Carburetor Used on Type No(s). 0110, 0111, 0119, 0142, 1409, 1410.
918	791880	Hose-Vacuum (Cut To Length)				957	795027	Cap-Fuel Tank (Plastic)
920	691656	Solenoid-Starter				957A	844728	Cap-Fuel Tank (Plastic) Used on Type No(s). 0001, 0194, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0523, 0527, 0568, 1124, 1127, 1266.
920A	825418	Solenoid-Starter (Used Before Code Date 10050800). ----- Note ----- Solenoid Starter (See Ref 309D For Correct Replacement Starter-Motor) (Used After Code Date 10050700).				958	692008	Valve-Fuel Shut Off (Plastic) ----- Note ----- 698183 Valve-Fuel Shut Off (Plastic) Used on Type No(s). 0007, 0169, 0170, 0195, 0196, 0204, 0322.
			927	691116	Screw (Electronic Governor Module) Used on Type No(s). 0005, 0145, 0281.	964	590799	Cap-Connector
			930	841490	Guard-Rewind Used on Type No(s). 0132, 0151, 0184, 0189, 0223, 0240, 0263, 0290, 0305, 1263.	967	272490s	Filter-Pre Cleaner
						967A	271794s	Filter-Pre Cleaner
						968	699959	Cover-Air Cleaner
						968A	841822	Cover-Air Cleaner Used on Type No(s). 0110, 0111, 0119.

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION																					
968B	844559	Cover-Air Cleaner Used on Type No(s). 0005, 0023, 0068, 0075, 0077, 0078, 0079, 0100, 0116, 0117, 0112, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0146, 0147, 0152, 0153, 0155, 0156, 0157, 0168, 0169, 0172, 0173, 0177, 0180, 0181, 0184, 0186, 0183, 0187, 0190, 0191, 0192, 0193, 0194, 0195, 0196, , 0197, 0204, 0205, 0207, 0208, 0209, 0213, 0216, 0217, 0220, 0221, 0222, 0223, 0226, 0228, 0233, 0234, 0235, 0239, 0240, 0242, 0243, 0244, 0246, 0253, 0254, 0255, 0266, 0263, 0269, 0267, 0270, 0281, 0287, 0289, 0310, 0322, 1268, 2206, 3087.	972B	844726	Tank-Fuel Plastic Used on Type No(s). 0001, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0527, 0523, 0568, 1124, 1127, 1266. ----- Note ----- 845771 Tank-Fuel (Plastic) Used on Type No(s). 0325.	972C	844561	Tank-Fuel Plastic Used on Type No(s). 0194. ----- Note ----- 844558 Tank-Fuel Used on Type No(s). 0002, 0023, 0027, 0068, 0113, 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0172, 0174, 0177, 0180, 0183, 0190, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0239, 0254, 0257, 0266, 0267. 0327, 1216.	987	807002	Seal-Throttle Shaft	988	692063	Gasket-Oil Adapter	988A	690687	Gasket-Oil Adapter	990	691959	Key Set	994	794945	Arrestor-Spark	996	691577	Shield-Carburetor	996A	844930	Shield-Carburetor Used on Type No(s). 0005, 0007, 0075, 0077, 0078, 0079, 0100, 0116, 0117, 0112, 0130, 0132, 0133, 0135, 0138, 0139, 0144, 0145, 0146, 0147, 0150, 0151, 0152, 0153, 0154, 0155, 0157, 0165, 0168, 0169, 0173, 0181, 0184, 0186, 0187, 0189, 0191, 0192, 0193, 0194, 0195, 0196, 0204, 0205, 0208, 0209, 0217, 0218, 0221, 0223, 0226, 0230, 0231, 0240, 0242, 0243, 0244, 0246, 0252, 0253, 0255, 0261, 0262, 0263, 0269, 0303, 0270, 0281, 0284, 0286, 0287, 0289, 0291, 0292, 0298, 0301, 0305, 0310, 0320, 0321, 0322, 0323, 0328, 1135, 1139, 1144, 1181, 1186, 1187, 1205, 1217, 1226, 1244, 1253, 1261, 1263, 1268, 1269, 1410, 2133, 2206, 2209, 3075, 3077, 3078, 3087, 2218.
971	807084	Screw (Air Cleaner Base to Carburetor) (M6x14mm)																											
972A	845137	Tank-Fuel (Plastic) ----- Note ----- 845138 Tank-Fuel (Plastic) Used on Type No(s). 0002, 0113, 0114, 0115, 0118, 0121, 0156, 0197, 0207, 0220, 0257, 0266, 0267.																											

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1004	841656	Duct-Air	1025	690689	Spool-Governor	1038	844555	Rod-Fuel Shut Off
1009	806474	Screw (Starter Motor)	1026	691836	Rod-Push (Steel)(Intake)			Used on Type No(s). 0001, 0002, 0023, 0027, 0068, 0113. 0114, 0115, 0118, 0120, 0121, 0123, 0124, 0126, 0127, 0143, 0156, 0172, 0174, 0177, 0180, 0183, 0190, 0197, 0207, 0213, 0216, 0220, 0228, 0233, 0234, 0235, 0239, 0254, 0257, 0266, 0267, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0289, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0527, 0523, 0568, 1124, 1127, 1266.
1012	690592	Retainer-Link			----- Note ----- 691758 Rod-Push (Aluminum)(Exhaust)			
1017	690900	Screen-Oil Pump	1027	842921	Filter-Oil			
1022	806039s	Gasket-Rocker Cover			----- Note ----- 795890 Adaptor-Oil Filter Used on Type No(s). 0320.			
1023	843749	Cover-Rocker	1028	808235	Adapter-Oil Filter			
1023B	691494	Cover-Rocker			----- Note ----- 808033 Adapter-Oil Filter Used on Type No(s). 0003, 0006, 0068, 0132, 0133, 0135, 0143, 0145, 0150, 0165, 0172, 0173, 0174, 0186, 0208, 0213, 0216, 0223, 0228, 0242, 0244, 0248, 0254, 0255, 0276, 0283, 0286, 0288, 0291, 0301, 0305, 0310, 0568, 1135, 1186, 1216, 1244, 2133.			
1023C	690910	Cover-Rocker				1046	692082	Plug-Blower Housing
		----- Note ----- 842823 Cover-Rocker Used on Type No(s). 0001, 0194, 0271, 0272, 0274, 0276, 0277, 0278, 0279, 0280, 0283, 0288, 0290, 0294, 0299, 0300, 0307, 0308, 0311, 0315, 0316, 0317, 0318, 0325, 0527, 0523, 0568, 1124, 1127, 1266.				1046A	843068	Plug-Blower Housing
1023D	691558	Cover-Rocker	1028A	492687	Adapter-Oil Filter Used on Type No(s). 0221, 0222.	1047	841580	Shaft-Stub
1023E	691531	Cover-Rocker (Used On Engines Equipped With 9 Quart Fuel Tanks)	1029	807323	Arm-Rocker	1047A	844148	Shaft-Stub
1023F	843750	Cover-Rocker Used on Type No(s). 0222.	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)			Used on Type No(s). 0150, 0154, 0178, 0193, 0221, 0264, 0270, 0285, 0323, 0325. ----- Note ----- 844149 Shaft-Stub Used on Type No(s). 0217, 1217.
1024	843825	Pump-Oil (Used After Code Date 07101400). ----- Note ----- Pump-Oil (Oil Pump Is No Longer Available)(See Reference 18 For Correct Replacement Crankcase Cover). (Used Before Code Date 07101500).						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

305400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1425	844712	Hose-Purge Line (Cut To Length) Used on Type No(s). 0075, 0077, 0078, 0079, 0087, 0217, 0230, 0231, 0240, 0242, 0243, 0246, 0252, 0262, 0264, 0265, 0268, 0276, 0277, 0284, 0285, 0286, 0287, 0289, 0291, 0292, 0293, 0298, 0301, 0303, 0305, 0320, 0321, 0322, 0328, 1135, 1139, 1144, 1181, 1186, 1187, 1205, 1217, 1226, 1244, 1253, 1261, 1263, 1268, 1269, 2133, 2206, 2209, 2218, 3075, 3077, 3078, 3079, 3087.	1425A	8445717	Hose-Purge Line (Cut To Length) Used on Type No(s). 3075, 3077, 3078, 3087.	1442	844797	Solenoid-Idle Down Used on Type No(s). 0242.
			1431	844035	Washer (Hose-Purge Line) Used on Type No(s). 0075, 0077, 0078, 0079, 0087, 0217, 0230, 0231, 0240, 0243, 0246, 0252, 0264, 0265, 0268, 0276, 0277, 0285, 0287, 0289, 0292, 0293, 0320, 1217, 1268, 3075, 3077, 3078, 3079.	1455	845813	Lever-Actuator
						1456	845815	Bracket-Stepper Motor
						1457	845819	Stepper Motor
						1458	845812	Screw (Stepper Motor)
						1459	845820	Screw-Set
						1460	845822	Bracket-Governor Control
						1461	845824	Eng Control Unit (ECU)
						1462	792629	Screw (ECU)
						1463	845825	Kit-Electronic Governor Conversion

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

Not for
Reproduction

Not for
Reproduction

