

Excel 10

W7750A,B,C CONSTANT VOLUME AHU CONTROLLER

SYSTEM ENGINEERING

Contents

Introduction	6
Description of Devices	6
Control Application	6
Control Provided	7
Products Covered.....	8
Applicable Literature	8
Organization of Manual	8
Product Names	8
Agency Listings	8
Abbreviations and Definitions.....	9
Construction	11
Controllers	11
Performance Specifications	13
LONMARK® Functional Profile.....	17
Inputs/Outputs	18
Analog Inputs.....	18
Digital Inputs.....	19
Triac Outputs (W7750B,C Models Only)	19
Digital Outputs	19
Wall Modules	20
Duct Sensor	20
Configurations	21
General	21
Allowable Heating and Cooling Equipment Configurations	23
Staged Heating/Cooling Control	24
Modulating Heating/Cooling Control.....	24
Heat Pump Control	24
Economizer Control	25
Pneumatic Actuator Control.....	26
Mixed Output-type Control.....	26
Occupancy Sensor	26
Window Open/Closed Digital Input	26
Wall Module Options	26
Dirty Filter Monitor	27
Indoor Air Quality (IAQ) Override	27
Smoke Control	27
Freeze Stat (W7750B2011 or W7750C)	27
Modes of Operation.....	27
Application Steps	28
Overview	28
Step 1. Plan the System.....	29
Step 2. Determine Other Bus Devices Required.....	29
Step 3. Lay Out Communications and Power Wiring	30
LONWORKS® Bus Layout	30
Power Wiring	32
Power Budget Calculation Example	32
Line Loss	32
Step 4. Prepare Wiring Diagrams.....	35

General Considerations	35
W7750 Controllers	35
Factory Default Digital Outputs.....	37
LONWORKS® Bus Termination Module	43
Step 5. Order Equipment	45
Step 6. Configure Controllers.....	48
Step 7. Troubleshooting	48
Troubleshooting Excel 10 Controllers and Wall Modules	48
Temperature Sensor and Setpoint Potentiometer Resistance Ranges	49
Alarms	49
Broadcasting the Service Message	50
W7750 Controller Status LED	51
T7770C,D Wall Module Bypass Pushbutton and Override LED	51
T7560A,B Bypass Pushbutton and LCD Display Occupancy Symbols	51
Appendices	52
Appendix A: Using LONSPEC™/Care to Commission a W7750 Controller.....	52
Sensor Calibration	52
Setting the Pid Parameters	52
Appendix B: Sequences of Operation.....	53
Common Operations	53
Room Temperature Sensor (RmTemp)	54
Remote Setpoint (RmtStptPot).....	55
Setpoint Limits (LoSetptLim and HiSetptLim).....	55
Bypass Mode (StatusOvr and StatusLed).....	55
BYPASSTIME.....	55
OverrideType.....	55
OverridePriority	55
Cycles per Hour (ubHeatCph and ubCoolCph).....	55
T7770C,D or T7560A,B Wall Module Bypass Pushbutton Operation	55
Standby Mode (StatusOcySen)	56
Continuous Unoccupied Mode	56
Occupancy Mode and Manual Override Arbitration	56
Time Clock (Occ_Time_Clock).....	57
Schedule Master (Sched_Master).....	57
Setpoint Ramping.....	57
Recovery Ramping for Heat Pump Systems.....	57
Fan Operation	58
Window Sensor (StatusWndw).....	58
Smoke Control.....	58
Demand Limit Control (DLC).....	58
Dirty Filter Monitor	59
Start-Up	59
Temperature Control Operations	59
Staged Cooling Control	59
Staged Heating Control	60
Cascade Control of Modulating Cooling/Heating	61
Series 60 Modulating Control	61
Pulse Width Modulating (PWM) Control	61
Outdoor Air Lockout of Heating/Cooling	61
Economizer Damper Control	61
Indoor Air Quality (IAQ) Override	61
Freeze Stat	62
Discharge Air Low Limit Control	62
Economizer Enable/Disable Control.....	62
Appendix C: Complete List of Excel 10 W7750 Controller User Addresses	63
User Address Indexes	63
Mappable User Addresses and Table Number	65
Failure Detect User Addresses and Table Number	65
Appendix D: XL5000 Q7750A Excel 10 Zone Manager Point Estimating Guide	109
Approximate Memory Size Estimating Procedure.	109
Appendix E: Sensor Data for Calibration	110
Resistance Sensors	110
Voltage/Current Sensors	111

List of Figures

Fig. 1. Typical system overview.	6
Fig. 2. Typical W7750 control application.	7
Fig. 3. Excel 10 W7750A Constant Volume AHU Controller.	12
Fig. 4. W7750A construction in in. (mm).	13
Fig. 5. Excel 10 W7750B Constant Volume AHU Controller.	14
Fig. 6. Excel 10 W7750C Constant Volume AHU Controller.	15
Fig. 7. W7750B,C construction in in. (mm). W7750C (shown) has three 4 to 20 mA analog outputs.)	16
Fig. 8. DIN rail adapters.	17
Fig. 9. Functional profile of LONMARK® RTU object details (variables not implemented in Excel 10 CVAHU are greyed).	18
Fig. 10. T7770A,B,C,D construction in in. (mm).	20
Fig. 11. T7560A,B construction in in. (mm).	21
Fig. 12. C7770A construction in in. (mm).	21
Fig. 13. Fan with two stages of heating and two stages of cooling.	24
Fig. 14. Fan, modulating heating and modulating cooling.	24
Fig. 15. Heat pump with two compressors and auxiliary heat stage(s).	25
Fig. 16. Economizer control.	25
Fig. 17. Modulating heat with pneumatic valve actuator.	26
Fig. 18. Connecting the portable operator terminal to the LONWORKS® Bus.	29
Fig. 19. Wiring layout for one doubly terminated daisy-chain LONWORKS® Bus segment.	31
Fig. 20. Wiring layout for two singly terminated LONWORKS® Bus segments.	32
Fig. 21. NEMA class 2 transformer voltage output limits.	33
Fig. 22. Power wiring details for one Excel 10 per transformer.	33
Fig. 23. Power wiring details for two or more Excel 10s per transformer.	34
Fig. 24. Transformer power wiring details for one Excel 10 used in UL 1995 equipment (U.S. only).	34
Fig. 25. Attaching two or more wires at terminal blocks.	36
Fig. 26. W7750B High-Side/Low-Side selectable switching and jumper location (on W7750B2011 and W7750C).	36
Fig. 27. Typical W7750A Controller AHU application wiring. (For more information on note 2, refer to Fig. 25.)	38
Fig. 28. Typical W7750A Controller with separate transformer application wiring. (For more information on note 2, refer to Fig. 25.)	38
Fig. 29. W7750A Controller floating economizer damper wiring. (For more information on note 2, refer to Fig. 25.)	39
Fig. 30. Typical W7750B Controller with staged heating and cooling wiring. (For more information on note 2, refer to Fig. 25.)	40
Fig. 31. W7750B Controller with floating heating, cooling and economizer wiring. (For more information on note 2, refer to Fig. 25.)	40
Fig. 32. W7750B,C Controller PWM damper actuator wiring. (For more information on note 2, refer to Fig. 25.)	41
Fig. 33. W7750B,C wiring with 4 to 20 mA enthalpy sensors and digital inputs. (For more information on note 2, refer to Fig. 25.)	41
Fig. 34. W7750B,C wiring with C7600C 4 to 20 mA solid state humidity sensor. (For more information on note 2, refer to Fig. 25.)	42
Fig. 35. W7750C Controller with 4 to 20 mA heating, cooling and economizer wiring. AOs must use terminals 16, 17 or 18. The AOs can be set to be reverse acting. (For more information on note 2, refer to Fig. 25.)	42
Fig. 36. Pneumatic transducer to W7750B,C.	43
Fig. 37. RP7517,B pneumatic transducer to W7750C.	43
Fig. 38. Typical doubly terminated daisy-chain LONWORKS® Bus segment termination module wiring.	44
Fig. 39. LONWORKS® Bus termination wiring options.	45
Fig. 40. Temperature sensor resistance plots.	49
Fig. 41. Location of the Service Pin Button.	51
Fig. 42. LED location on W7750.	51
Fig. 43. The T7770C,D Wall Modules LED and Bypass pushbutton locations.	51
Fig. 44. T7560A,B Digital Wall Module Bypass pushbutton location.	51
Fig. 45. LED and Bypass pushbutton operation.	56
Fig. 46. Setpoint ramping parameters with ramp rate calculation.	57
Fig. 47. Setpoint ramping parameters with setpoint calculation.	58
Fig. 48. Setpoint ramping parameters with ramp rate calculation.	58
Fig. 49. Schematic diagram for a typical W7750B Unit.	59
Fig. 50. Staged output control versus PID Error.	60
Fig. 51. Point capacity estimate for Zone Manager.	109
Fig. 52. PT3000 Sensor resistance versus temperature.	110
Fig. 53. 20K ohm sensor resistance versus temperature.	110
Fig. 54. C7600B Sensor voltage versus humidity.	111

EXCEL 10 W7750A,B,C CONSTANT VOLUME AHU CONTROLLER

Fig. 55. C7600C output current versus humidity.....	111
Fig. 56. C7400A Sensor current versus enthalpy (volts).	112
Fig. 57. Partial psychrometric chart for a C7400A Solid State Enthalpy Sensor.	113
Fig. 58. C7400A Solid State Enthalpy Sensor output current versus relative humidity.	113
Fig. 59. C7232, C7632 voltage versus CO ₂ concentration.	114
Fig. 60. P7640 voltage (Vdc) versus pressure (in. w.c.).	114

List of Tables

Table 1. Agency Listing.	9
Table 2. List of Differences in W7750A and W7750B,C Controllers.	11
Table 3. Common Configuration Options Summary For W7750A,B,C Controllers.	22
Table 4. Configuration Options Summary for W7750A,B,C Controllers.	23
Table 5. Modes Of Operation For The Excel 10 W7750 Controller	27
Table 6. Application Steps.	28
Table 7. LONWORKS® Bus Configuration Rules and Device Node Numbers.	30
Table 8. VA Ratings For Transformer Sizing.	32
Table 9. Field Wiring Reference Table (Honeywell listed as AK#### or equivalent).	35
Table 10. W7750A Version I/O Description.	37
Table 11. Excel 10 W7750 Controller Ordering Information.	46
Table 12. Excel 10 Alarms.	50
Table 13. Recommended Values For PID Parameters.	52
Table 14. Common Configuration Options Summary For W7750A,B,C Controllers.	53
Table 15. Configuration Options Summary For W7750A,B,C Controllers.	54
Table 16. Bypass Pushbutton Operation.	55
Table 17. Interstage Minimum Times.	60
Table 18. Excel 10 W7750 Controller User Address Point Types.	63
Table 19. Engineering Units For Analog Points.	66
Table 20. Input/Output Points.	67
Table 21. Control Parameters.	74
Table 22. Energy Management Points.	78
Table 23. Status Points.	81
Table 24. Calibration Points.	93
Table 25. Configuration Parameters.	94
Table 26. LONMARK®/Open System Points.	98
Table 27. Direct Access And Special Points.	106
Table 28. Data Share Points.	108
Table 29. PT3000 Sensor Resistance Versus Temperature.	110
Table 30. C7600B Sensor Voltage Versus Humidity.	111
Table 31. C7600C Sensor Current Versus Humidity.	111
Table 32. C7400A Sensor Current Versus Enthalpy (volts).	112
Table 33. C7232, C7632 Voltage Versus CO ₂ Concentration.	114
Table 34. P7640 Voltage (Vdc) Versus Pressure (in. w.c.).	114

INTRODUCTION

Description of Devices

The W7750 is the Constant Volume Air Handling Unit (CVAHU) Controller in the Excel 10 product line family. The CVAHU is a LONMARK® compliant device designed to control single zone and heat pump air handlers. W7750 systems control the space temperature in a given zone by regulating the heating and cooling equipment in the air handler that delivers air to that space. The W7750 air handler is typically an all-in-one constant air volume packaged unit, located on the roof of the building. In addition to standard heating and cooling control, the W7750 provides many options and advanced system features that allow state-of-the-art commercial building control. The W7750 Controller is capable of stand-alone operation; however, optimum functional benefits are achieved when the network communication capabilities are used. The W7750 utilizes the Echelon® LONWORKS® network (LONWORKS Bus) for communications, and conforms with the LONMARK HVAC Interoperability standard for Roof Top Unit Controllers (see Fig. 9).

The T7770 or T7560 direct-wired Wall Modules are used in conjunction with W7750 Controllers. The zone controlled by the W7750 Controller typically can use a T7770A through D or a T7560A,B Wall Module. Additional features available in T7770A through D models include analog setpoint input knob, override digital input pushbutton, override status LED and LONWORKS Bus network access jack. Additional features available in T7560A,B models include analog setpoint input knob, override digital input pushbutton, humidity sensor (T7650B model), override status LCD and digital display.

The Q7750A Excel 10 Zone Manager is a communications interface that allows devices on the LONWORKS Bus network to communicate with devices on the standard EXCEL 5000® System C-Bus. Fig. 1 shows an overview of a typical system layout. The Q7750A also provides some control and monitoring functions.

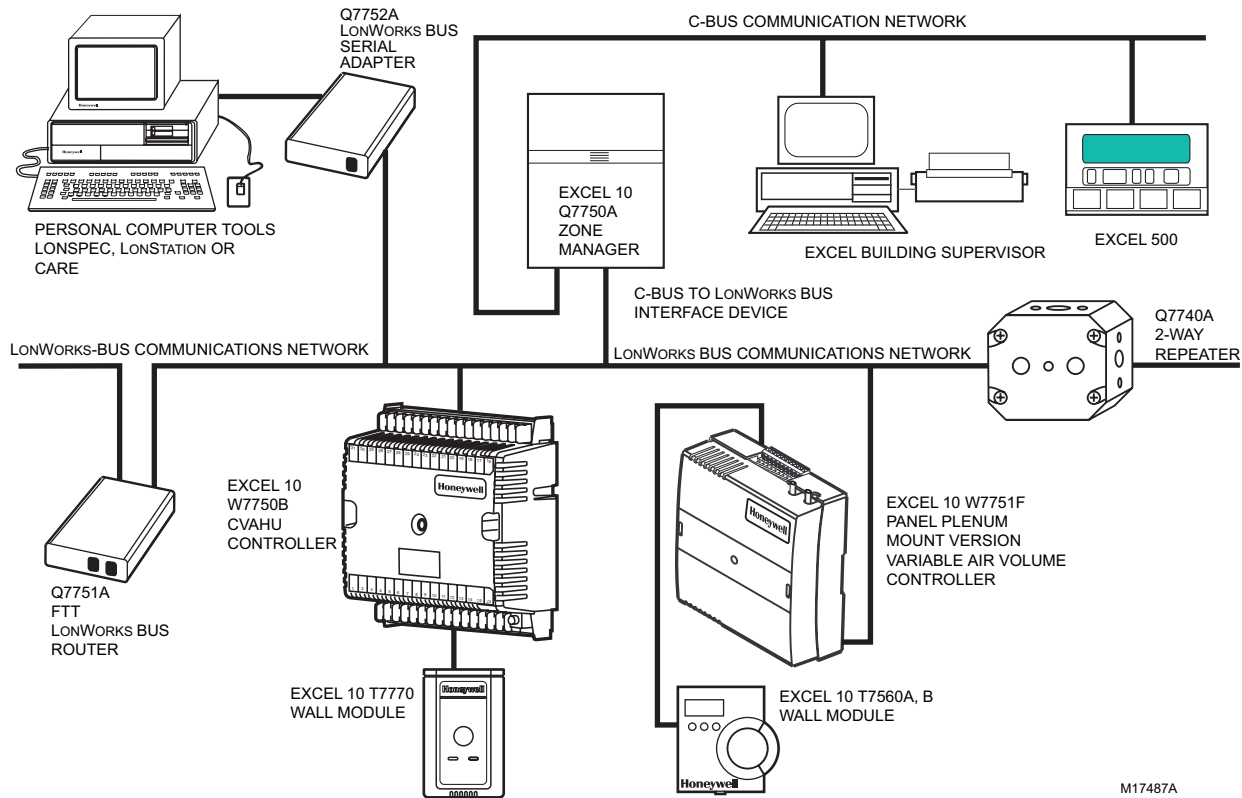


Fig. 1. Typical system overview.

Control Application

W7750 systems in commercial buildings typically incorporate a packaged air handler system that delivers a constant volume of air at preconditioned temperatures to the zone being served. Each zone is usually serviced by a separate AHU; however, sometimes two or more AHUs service the same zone. Note that the W7750 is not designed to control Variable Air Volume (VAV) air handlers or Multi-Zone air handlers, where one air handler simultaneously controls the space temperature in many zones.

The W7750 can control staged or modulating heating and cooling coils, mixed air economizer dampers, and the system fan. Control of heat pump units, where the compressor(s) is used for both cooling and heating, is also provided. The zone the W7750 services can use a T7770 or T7650 for space temperature sensing and a LONWORKS Bus network access for users. Fig. 2 shows a typical W7750 control application.

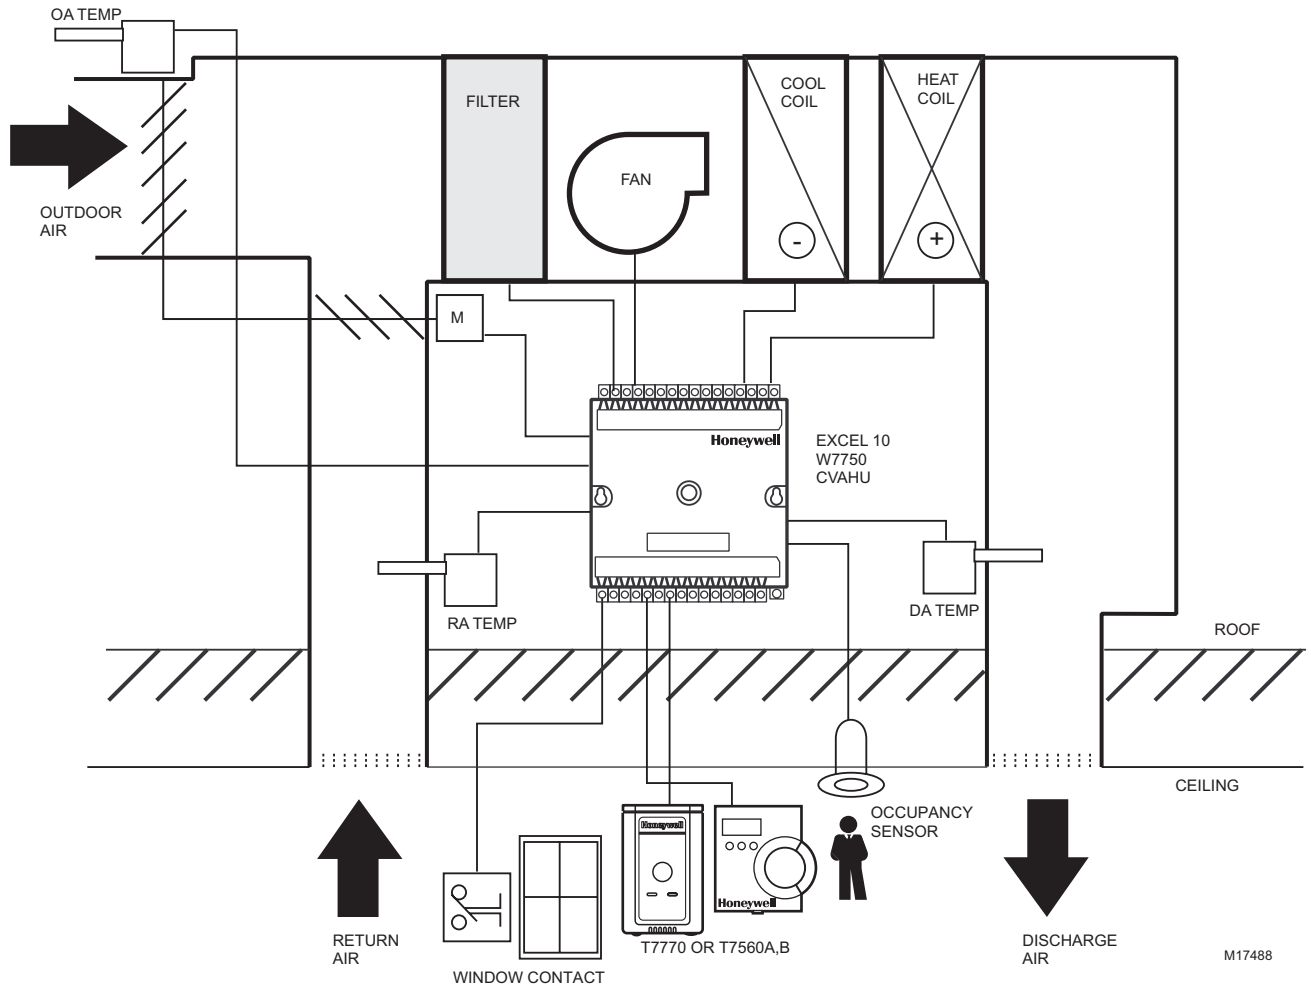


Fig. 2. Typical W7750 control application.

Control Provided

The W7750 Controller is designed to control a single air handler to maintain the units space temperature at the current setpoint. Heating and cooling control is provided for either staged or modulating equipment. Up to four stages of mechanical cooling and up to four stages of heating are allowed. Modulating outputs can be either *floating type* such as a Series 60 control, or Pulse Width Modulated (PWM W7750B,C only) control.

The economizer dampers can be controlled directly with floating or PWM outputs, or indirectly using a digital output as an enable/disable signal to a packaged economizer controller. The economizer enable function, which decides when to allow outdoor air to be used for free cooling, can be configured to one of ten strategies based on the inputs. For more details, see Appendix B—Sequences of Operation. When the economizer position is controlled from the W7750, the minimum position setting (for ventilation requirements) can be adjusted based on indoor air quality (IAQ) needs in the space. IAQ monitoring is provided through either a CO₂ sensor or a digital input from a space-mounted IAQ limit switch.

For heat pump configurations, up to four compressors can be controlled, along with up to four stages of auxiliary heat, and a heat/cool change over valve. Including the supply fan, the combination of these items may not exceed eight outputs if a W7750B,C is used, or six outputs for a W7750A. (The eight outputs on the W7750C consist of five digital and three analog outputs.)

Like the W7751 VAV Box Controller, the W7750 Controller can monitor a space-mounted occupancy sensor, and a door/window contact. These inputs affect the operational mode of the controller (see Table 5 for a list of all possible modes of operation).

The W7750 Controller allows other controllers in the system to use the W7750s physical inputs and outputs. A digital input and an analog input can be configured to read switch states and voltage sensor values, respectively, and send them out over the LONWORKS Bus network. The Q7750A Zone Manager can use these values in custom control strategies. Additionally, two of the W7750 digital outputs are available for control program use. These outputs only respond to signals sent over the network, and are not controlled by the W7750 internal control algorithms.

Products Covered

This System Engineering Guide describes how to apply the Excel 10 family of W7750 CVAHU Controllers and related accessories to typical applications. The specific devices covered include:

- W7750A,B,C Controllers.
- T7770A through D Wall Modules.
- T7560A,B Wall Modules.
- Q7751A,B Router (FTT to FTT and TPT to FTT).
- Q7752A Serial Interface.
- Q7740A,B Repeaters (2-way and 4-way).
- 209541B FTT Termination Module.

Applicable Literature

The following list of documents contains information related to the Excel 10 W7750 CVAHU Controller and the LCBS/EXCEL 5000® OPEN™ SYSTEM in general:

Form No	Title
74-2956	Excel 10 W7750A,B,C Controller Specification Data
74-2697	Excel 10 T7770A,B,C,D,E,F,G Wall Module Specification Data
74-3097	T7560A,B Digital Wall Module Specification Data
74-2950	Excel 10 Q7750A, Zone Manager Specification Data
74-2952	Excel 10 Q7751A,B Router Specification Data
74-2954	Excel 10 Q7752A Serial Interface Specification Data
74-3067	Q7752B PCMCIA LONWORKS PCC-10 Card Specification Data
74-2858	Excel 10 Q7740A,B FTT Repeaters Specification Data
74-2951	Excel 10 Q7750A Zone Manager Checkout and Test Manual
95-7521	Excel 10 W7750A,B,C Controller Installation Instructions
95-7538	Excel 10 T7770A-G Wall Module Installation Instructions
95-7620	T7560A,B Digital Wall Module Installation Instructions
95-7509	Excel 10 Q7750A Zone Manager Installation Instructions
95-7510	Excel 10 Q7751A,B Router Installation Instructions
95-7511	Excel 10 Q7752A Serial Interface Installation Instructions
95-7613	Q7752B PCMCIA LONWORKS PCC-10 Card Installation Instructions
95-7555	Excel 10 Q7740A,B FTT Repeaters Installation Instructions
95-7554	Excel 10 209541B Termination Module Installation Instructions
74-2937	LONSPEC™ User's Guide
74-3068	LONSTATION™ User's Guide
74-5587	CARE User's Manual
74-1392	CARE Excel 10 Zone Manager User's Guide
74-5577	CARE Icon Guide
74-2039	XBS User's Manual
74-5018	XBS Application Guide

Organization of Manual

This manual is divided into three basic parts: the Introduction, the Application Steps, and the Appendices that provide supporting information. The Introduction and Application Steps 1 through 5 provide the information needed to make accurate material ordering decisions. Application Step 6 and

the Appendices include configuration engineering that can be started using LONSPEC™ or Care PC Software after the devices and accessories are ordered. Application Step 7 is troubleshooting.

The organization of the manual assumes a project is being engineered from start to finish. If an operator is adding to, or is changing an existing system, the Table of Contents can provide the relevant information.

Product Names

The W7750 Controller is available in three models:

- **W7750A** Constant Volume AHU Controller - W7750A Version.
- **W7750B** Constant Volume AHU Controller - W7750B Version.
- **W7750C** Constant Volume AHU Controller - W7750C Version.

The T7770 Wall Module is available in four models. The T7770 Wall Modules will work with all Excel 5000 and Excel 10 Controllers (except the W7751A,C,E,G):

- **T7770A1xxx** Wall Module with nonlinearized 20K ohm NTC sensor only.
- **T7770A2xxx** Wall Module with nonlinearized 20K ohm NTC sensor and LONWORKS Bus jack.
- **T7770A3xxx** Wall Module with nonlinearized 10K ohm NTC sensor for averaging two sensors.
- **T7770B1xxx** Wall Module with nonlinearized 20K ohm NTC sensor, 10K ohm setpoint, and LONWORKS Bus jack.
- **T7770C1xxx** Wall Module with nonlinearized 20K ohm NTC sensor, 10K ohm setpoint, bypass button and LED, and LONWORKS Bus jack.
- **T7770D1xxx** Wall Module with nonlinearized 20K ohm NTC sensor, bypass button and LED, and LONWORKS Bus jack.

NOTE: The T7770B,C Models are available with a absolute 55 to 85°F (10 to 85°C) or a relative scale plate adjustable to ±9°F (±5°C).

The T7560A,B Wall Module is available in two models:

- **T7560A** Wall Module displays and provides space temperature, setpoint, Occ/Unocc override, override status LCD and digital display.
- **T7560B** Wall Module displays and provides space temperature, humidity sensor, setpoint, Occ/Unocc override, override status LCD and digital display.

Other products:

- **Q7750A** Excel 10 Zone Manager.
- **Q7751A,B** Bus Router.
- **Q7752A** Serial Adapter.
- **Q7740A,B** FTT Repeaters.
- **209541B** FTT Termination Module.

Refer to Table 11 in Application Step 5. Order Equipment for a complete listing of all available part numbers.

NOTE: The Q7750A Zone Manager is referred to as (E-Link) in internal software and CARE.

Agency Listings

Table 1 provides information on agency listings for Excel 10 products. Be sure to always follow Local Electrical Codes.

Table 1. Agency Listing.

Device	Agency	Comments
W7750A,B,C Controllers	UL	Tested and listed under UL916 (file number E87741). The CVAHU W7750A,B,C Controllers are UL94-5V listed and suitable for plenum mounting.
	cUL	Listed (E87741).
	CE	General Immunity per European Consortium Standards EN50081-1 (CISPR 22, Class B) and EN 50082-1:1992 (based on Residential, Commercial, and Light Industrial). EN 61000-4-2: IEC 1000-4-2 (IEC 801-2) Electromagnetic Discharge. EN 50140, EN 50204: IEC 1000-4-3 (IEC 801-3) Radiated Electromagnetic Field. EN 61000-4-4: IEC 1000-4-4 (IEC 801-4) Electrical Fast Transient (Burst). Radiated Emissions and Conducted Emissions: EN 55022: 1987 Class B. CISPR-22: 1985.
	FCC	Complies with requirements in FCC Part 15 rules for a Class B Computing Device. Operation in a residential area can cause interference to radio or TV reception and require the operator to take steps necessary to correct the interference.
T7770A,B,C,D and T7560A,B Wall Modules	UL	(Not applicable.)
	cUL	(Not applicable.)
	FCC	(Not applicable.)
Q7750A Excel 10		
Zone Manager	UL	Tested and listed under UL916, file number S4804 (QVAX, PAZY).
	CSA	Listing pending.
	FCC	Complies with requirements in FCC Part 15 rules for a Class A Computing Device. Operation in a residential area can cause interference to radio or TV reception and require the operator to take steps necessary to correct the interference.
Q7740A,B FTT Repeaters, Q7751A,B Routers and Q7752A Serial Adapter	UL	UL1784.
	CSA	Listed.
	FCC	Complies with requirements in FCC Part 15 rules for a Class B Computing Device.

Abbreviations and Definitions

AHU—Air Handling Unit; the central fan system that includes the blower, heating equipment, cooling equipment, ventilation air equipment, and other related equipment.

CO—Carbon Monoxide. Occasionally used as a measure of indoor air quality.

CO₂—Carbon Dioxide. Often used as a measure of indoor air quality.

CARE—Computer Aided Regulation Engineering; the PC based tool used to configure C-Bus and LONWORKS Bus devices.

C-Bus—Honeywell proprietary Control Bus for communications between EXCEL 5000® System controllers and components.

CPU—Central Processing Unit; an EXCEL 5000® OPEN™ SYSTEM controller module.

cUL—Underwriters Laboratories Canada

CVAHU—Constant Volume AHU; refers to a type of air handler with a single-speed fan that provides a constant amount of supply air to the space it serves.

DDF—Delta Degrees Fahrenheit.

D/X—Direct Expansion; refers to a type of mechanical cooling where refrigerant is (expanded) to its cold state, within a heat-exchanging coil that is mounted in the air stream supplied to the conditioned space.

Echelon—The company that developed the LONWORKS Bus and the Neuron® chips used to communicate on the LONWORKS Bus.

Economizer—Refers to the mixed-air dampers that regulate the quantity of outdoor air that enters the building. In cool outdoor conditions, fresh air can be used to supplement the mechanical cooling equipment. Because this action saves energy, the dampers are often referred to as *economizer dampers*.

EMI—Electromagnetic Interference; electrical noise that can cause problems with communications signals.

E-Link—Refers to the Q7750A Zone Manager. This name is used in internal software and in CARE software.

EMS—Energy Management System; refers to the controllers and algorithms responsible for calculating optimum operational parameters for maximum energy savings in the building.

EEPROM—Electrically Erasable Programmable Read Only Memory; the variable storage area for saving user setpoint values and factory calibration information.

Enthalpy—The energy content of air measured in BTUs per pound (KiloJoules per Kg).

EPROM—Erasable Programmable Read Only Memory; the firmware that contains the control algorithms for the Excel 10 Controller.

Excel 10 Zone Manager—A controller that is used to interface between the C-Bus and the LONWORKS Bus. The Excel 10 Zone Manager also has the functionality of an Excel 100 Controller, but has no physical I/O points.

NOTE: The Q7750A Zone Manager can be referred to as E-Link in the internal software, CARE.

E-Vision—User interface software used with devices that operate via the FTT LONWORKS Bus communications protocol.

Firmware—Software stored in a nonvolatile memory medium such as an EPROM.

Floating Control—Refers to Series 60 Modulating Control of a valve or damper. Floating Control utilizes one digital output to pulse the actuator open, and another digital output to pulse it closed.

FTT—Free Topology Transceiver.

IAQ—Indoor Air Quality. Refers to the quality of the air in the conditioned space, as it relates to occupant health and comfort.

I/O—Input/Output; the physical sensors and actuators connected to a controller.

I x R—I times R or current times resistance; refers to Ohms Law: $V = I \times R$.

K—Degrees Kelvin.

Level IV—Refers to a classification of digital communication wire. Formerly known as UL Level IV, but *not* equivalent to Category IV cable. If there is any question about wire compatibility, use Honeywell-approved cables (see Step 5 Order Equipment section).

LONWORKS Bus—Echelons LONWORKS network for communication among Excel 10 Controllers.

LONWORKS Bus Segment—An LONWORKS Bus section containing no more than 60 Excel 10s. Two segments can be joined together using a router.

NEC—National Electrical Code; the body of standards for safe field-wiring practices.

NEMA—National Electrical Manufacturers Association; the standards developed by an organization of companies for safe field wiring practices.

Node—A Communications Connection on a network; an Excel 10 Controller is one node on the LONWORKS Bus network.

NV—Network Variable; an Excel 10 parameter that can be viewed or modified over the LONWORKS Bus network.

PC—An Personal Computer with Pentium processor capable of running Microsoft® Windows™ 95.

Pot—Potentiometer. A variable resistance electronic component located on the T7770B,C or T7560A,B Wall Modules; used to allow user-adjusted setpoints to be input into the Excel 10 Controllers.

PWM—Pulse Width Modulated output; allows analog modulating control of equipment using a digital output on the controller.

RTD—Resistance Temperature Detector; refers to a type of temperature sensor whose resistance output changes according to the temperature change of the sensing element.

Subnet—A LONWORKS Bus segment that is separated by a router or repeater.

TOD—Time-Of-Day; the scheduling of Occupied and Unoccupied times of operation.

TPT—Twisted Pair Transceiver.

VA—Volt Amperes; a measure of electrical power output or consumption as applies to an ac device.

Vac—Voltage alternating current; ac voltage rather than dc voltage.

VAV—Variable Air Volume; refers to either a type of air distribution system, or to the W7751 Excel 10 VAV Box Controller that controls a single zone in a variable air volume delivery system.

VOC—Volatile Organic Compound; refers to a class of common pollutants sometimes found in buildings. Sources include out-gassing of construction materials, production-line by-products, and general cleaning solvents. A VOC is occasionally used as a measure of indoor air quality.

W7750—The model number of the Excel 10 CVAHU Controllers (also see CVAHU).

W7751—The model number of the Excel 10 VAV Box Controllers (also see VAV).

Wall Module—The Excel 10 Space Temperature Sensor and other optional controller inputs are contained in the T7770 or the T7560A,B Wall Modules. See Application Step 5. Order Equipment for details on the various models of Wall Modules.

XBS—Excel Building Supervisor; a PC based tool for monitoring and changing parameters in C-Bus devices.

Construction

Controllers

The Excel 10 W7750 Controller is available in three different models. The W7750A Model, which is a low cost controller made for simple single zone air handlers and heat pump controls. The W7750B,C Models are intended for more complex applications.

The W7750B,C Models use Triacs for their digital outputs, where as the W7750A Model uses dry-contact relays. The W7750C Model also has three analog outputs available on terminals 16, 17 and 18.

All wiring connections to the controller are made at screw terminal blocks. Connection for operator access to the LONWORKS Bus is provided by plugging the SLTA connector cable into the LONWORKS Bus communications jack.

The W7750A,B,C Models consist of a single circuit board that is mounted in a sheet metal subbase and protected by a factory snap-on cover. The three controllers have the same physical appearance except for terminals 16 through 20

(W7750A) and different labels next to the wiring terminals (see Fig. 3, 5 or 6). Wires are attached to the screw terminal blocks on both sides of the controller. The controllers mount with two screws (see Fig. 4 or 7). The W7750 can also be mounted using DIN rail. To mount the W7750 on DIN rail, purchase two DIN rail adapters (obtain locally) part number TKAD, from Thomas and Betts, see Fig. 8, then snap onto standard EN 50 022 35 mm by 7.5 mm (1-3/8 in. by 5/16 in.) DIN rail. DIN rail is available through local suppliers.

A channel in the cover allows the controller status LED to be visible when the cover is in place. There are no field-serviceable parts on the circuit board and, therefore, *it is intended that the cover never be removed.*

The W7750A,B,C can be mounted in any orientation. Ventilation openings were designed into the cover to allow proper heat dissipation regardless of the mounting orientation. See Fig. 4 and 7.

The input/output and control differences between the two models are summarized in Table 2. The I/O points in Table 2 are the free I/O points that are not reserved for Wall Module use.

Table 2. List of Differences in W7750A and W7750B,C Controllers.

	W7750A Model	W7750B,C Models
Digital Outputs	Six Relay Outputs	Eight Triac Outputs (Five Triac outputs on W7750C)
Digital Inputs	Two	Four
Wall Module	One*	One ^a
Analog Outputs	None	Three 4 to 20 mA Outputs (W7750C only)
Analog Inputs	One (Resistive Input Only)	Four (Two Resistive and two Voltage/Current Inputs)
DC Power	None	20 Vdc available to power optional sensors
Floating (Series 60) Control	Economizer Only	Heating, Cooling, and/or Economizer
PWM Control	None	Heating, Cooling, and/or Economizer

^a The T7770 or the T7560 Wall Modules includes I/O points for two analog inputs for the space temperature and the setpoint knob, a digital input for the Bypass pushbutton, and a digital output for the LED Bypass Indicator. These W7750 I/O points are configurable, but are normally used for the Wall Module.


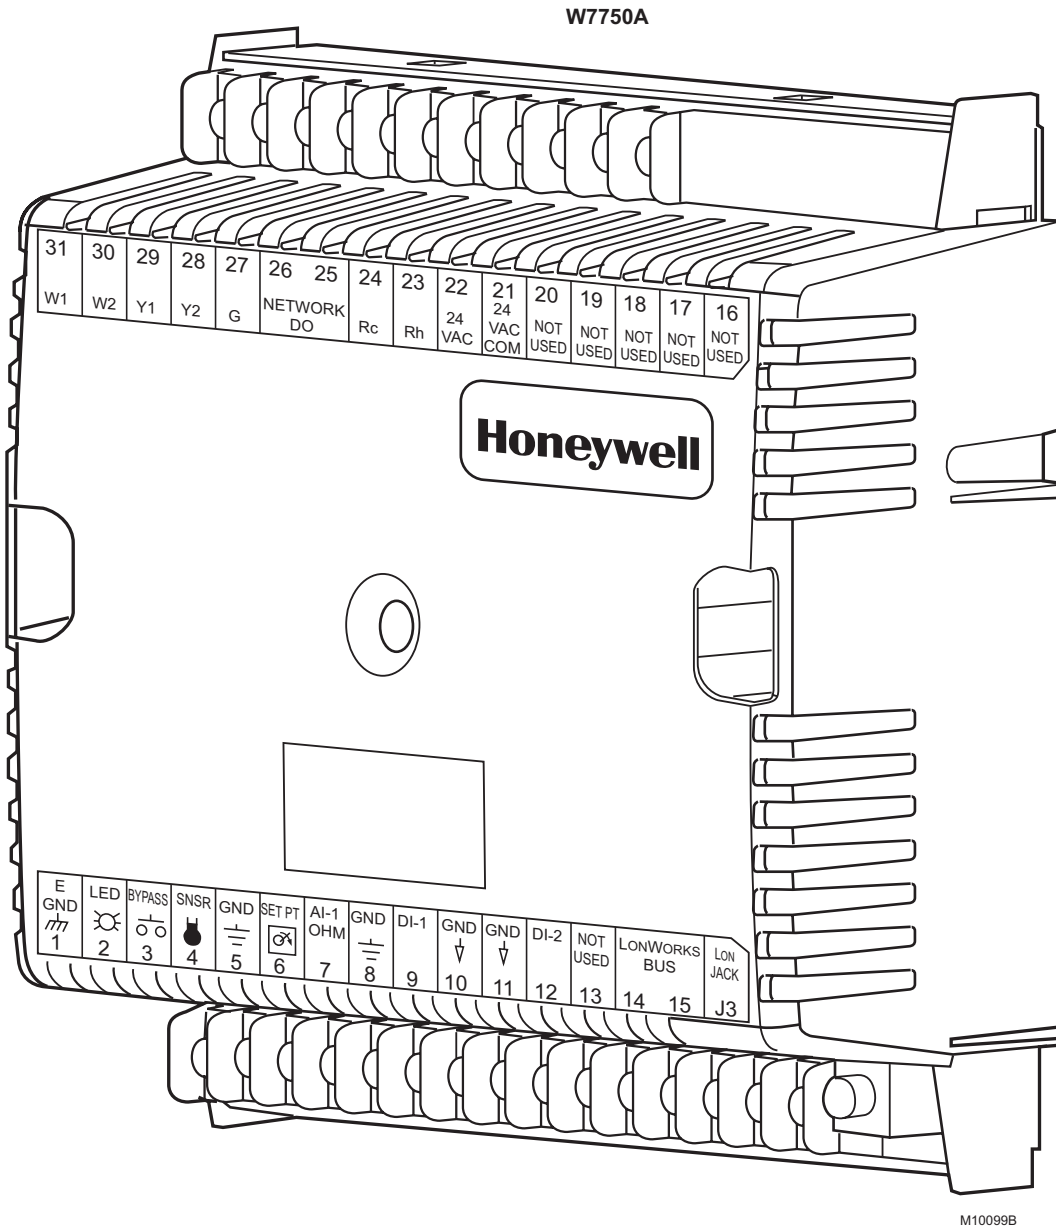


Fig. 3. Excel 10 W7750A Constant Volume AHU Controller.

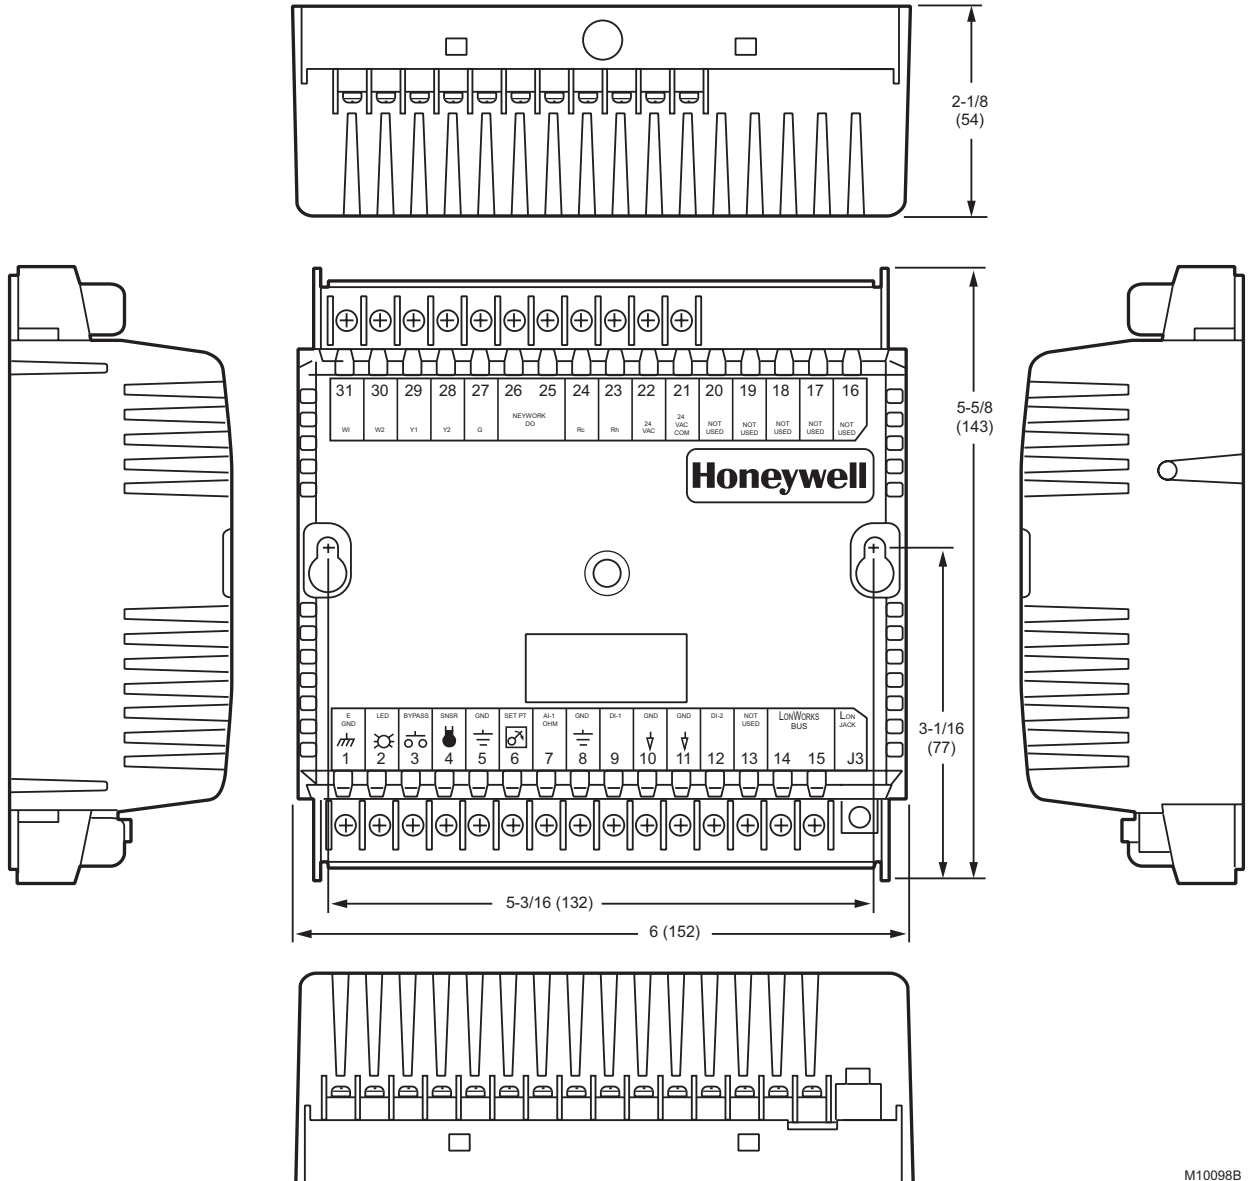

M10098B

Fig. 4. W7750A construction in in. (mm).

Performance Specifications


Power:

24 Vac with a minimum of 20 Vac and a maximum of 30 Vac at either 50 or 60 Hz. The W7750A power consumption is 6 VA maximum at 50 or 60 Hz. The W7750B,C power consumption is 12 VA maximum at 50 or 60 Hz. The W7750A,B,C is a NEC Class 2 rated device. This listing imposes limits on the amount of power the product can consume or directly control to a total of 100 VA.

Special Note for the W7750B,C Unit:

The individual Triac outputs incorporate an internal common connection with the input power transformer. The Triacs provide a switched path from the hot side (R - high-side switching) of the transformer through the load to the common of the transformer. (Refer to Fig. 26 and 30 for low-side switching - J2 jumper.) The W7750B,C Controller design *must* use the same power transformer for any loads connected to that controller; see Fig. 30.

Each individual Triac is rated 1A at 30 Vac maximum. Under all operating conditions, the maximum load/source power budget for the W7750B,C Controller is 100 VA. Actual allowable Triac current is 500 mA MAX.

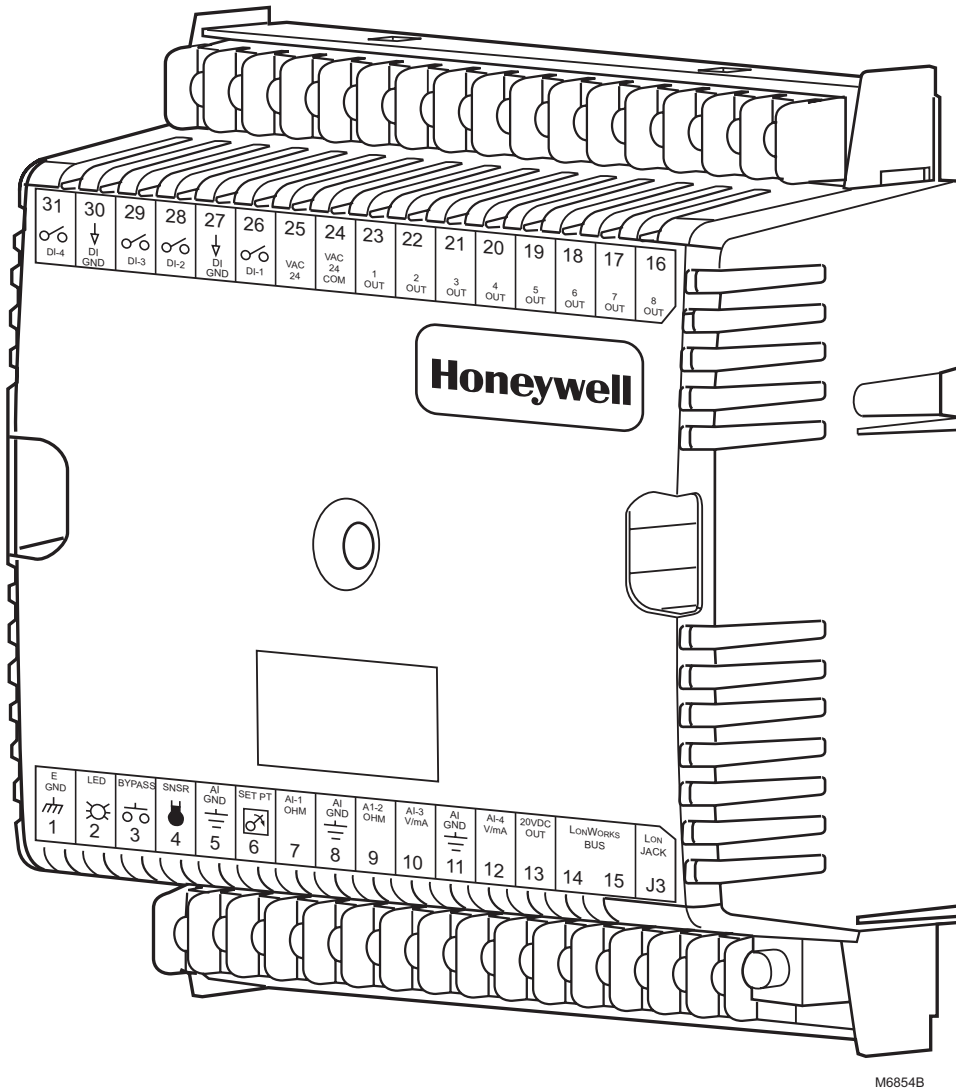

M6854B

Fig. 5. Excel 10 W7750B Constant Volume AHU Controller.

CPU:


Motorola or Toshiba 3150 Neuron processor, containing three eight-bit CPUs. Each Neuron has a unique 48-bit network identification number.

Memory Capacity:

64K ROM/PROM (6K reserved for network operations, 58K usable for control algorithm code).
512 bytes EEPROM.
2K RAM.


Specified Space Temperature Sensing Range:

45 to 99°F (7 to 37°C) with an allowable control setpoint range from 50 to 90°F (10 to 32°C) when initiated from the network and 55 to 85°F (13 to 29°C) when configured and connected to T7770 or T7560 Wall Modules.

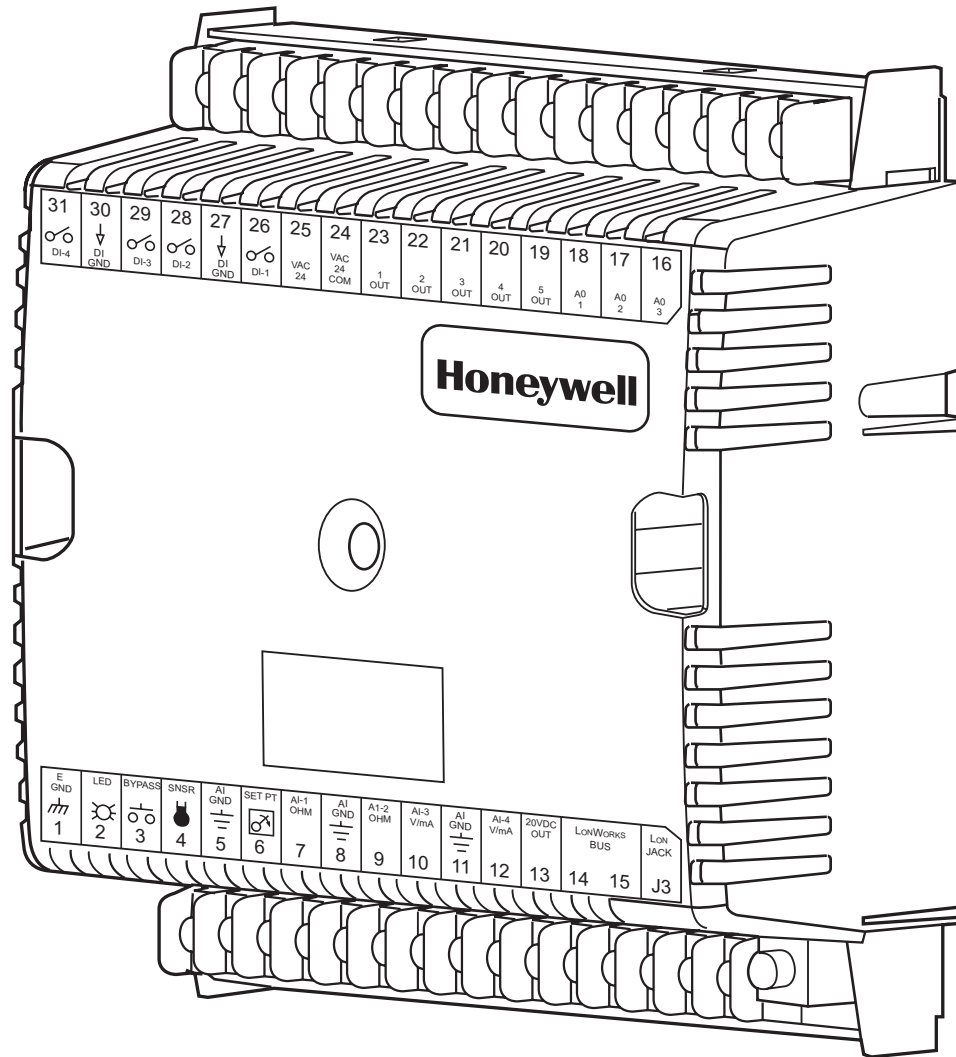

M17489

Fig. 6. Excel 10 W7750C Constant Volume AHU Controller.

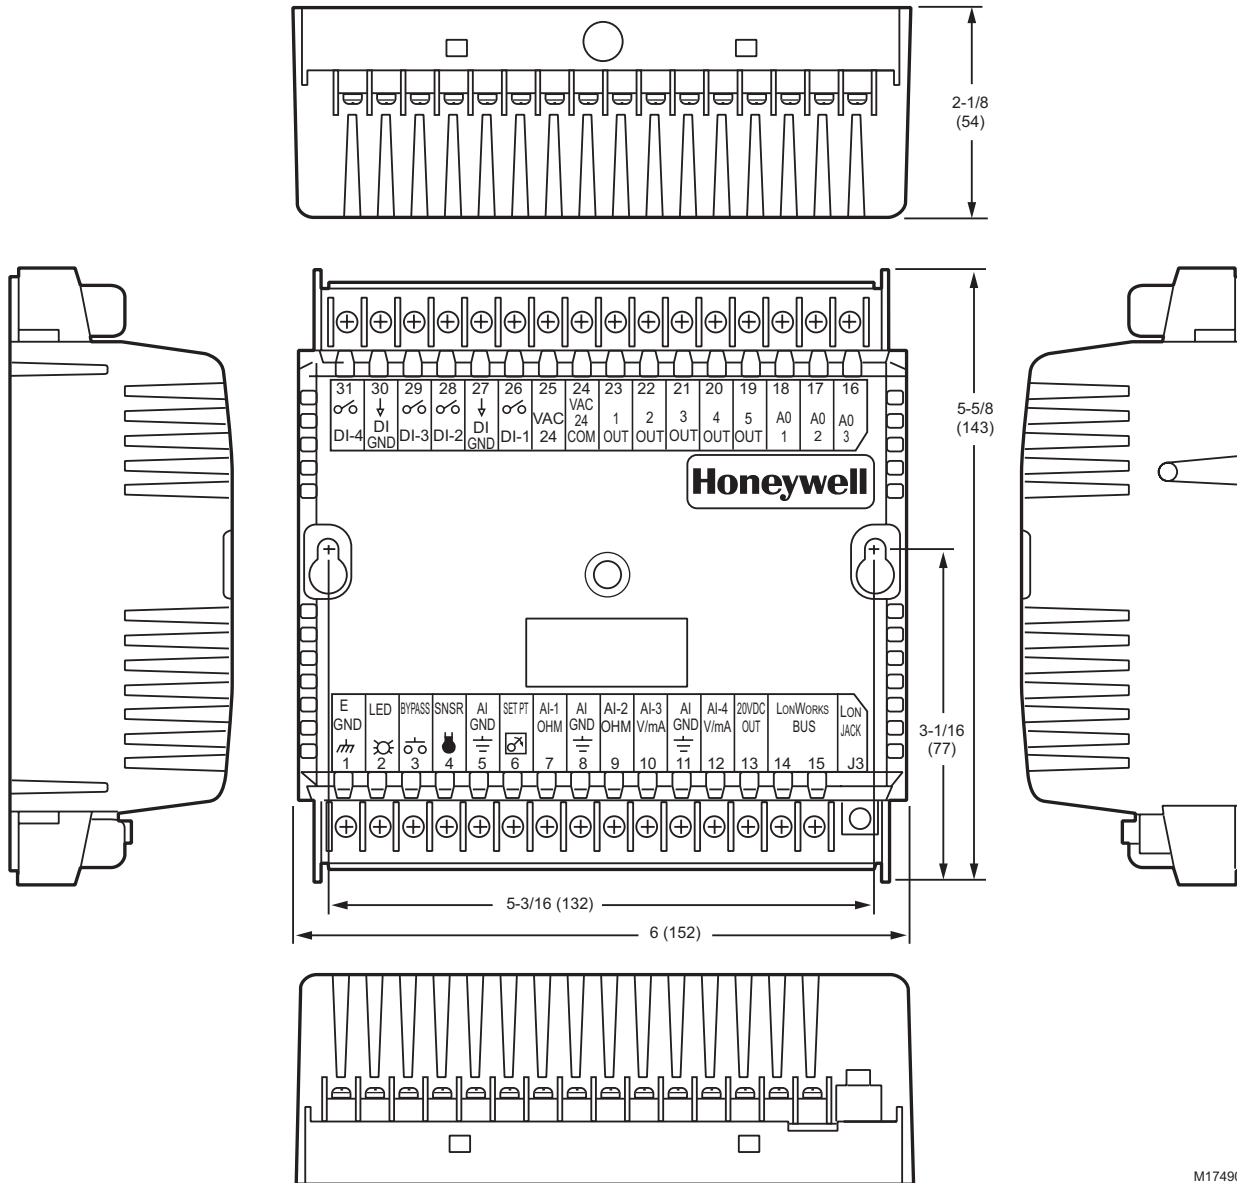

M17490

Fig. 7. W7750B,C construction in in. (mm). W7750C (shown) has three 4 to 20 mA analog outputs.)

Communications:

The W7750A,B,C Controller uses a Free Topology Transceiver (FTT) transformer-coupled communications port running at 78 kilobits per second (kbps). Using the transformer-coupled communications interface offers a much higher degree of common-mode noise rejection while ensuring dc isolation.

Approved cable types for LONWORKS Bus communications wiring is Level IV 22 AWG (0.34 mm²) plenum or nonplenum rated unshielded, twisted pair, solid conductor wire. For

nonplenum areas, use Level IV 22 AWG (0.34 mm²) such as: U.S. part AK3781 (one pair), U.S. part AK3798 (one pair stranded), or U.S. part AK3782 (two pair). In plenum areas, use plenum-rated Level IV, 22 AWG (0.34 mm²) such as U.S. part AK3791 (one pair) or U.S. part AK3792 (two pair). (See Tables 9 and 11 for part numbers.) Contact Echelon Corp. Technical Support for the recommended vendors of Echelon approved cables.

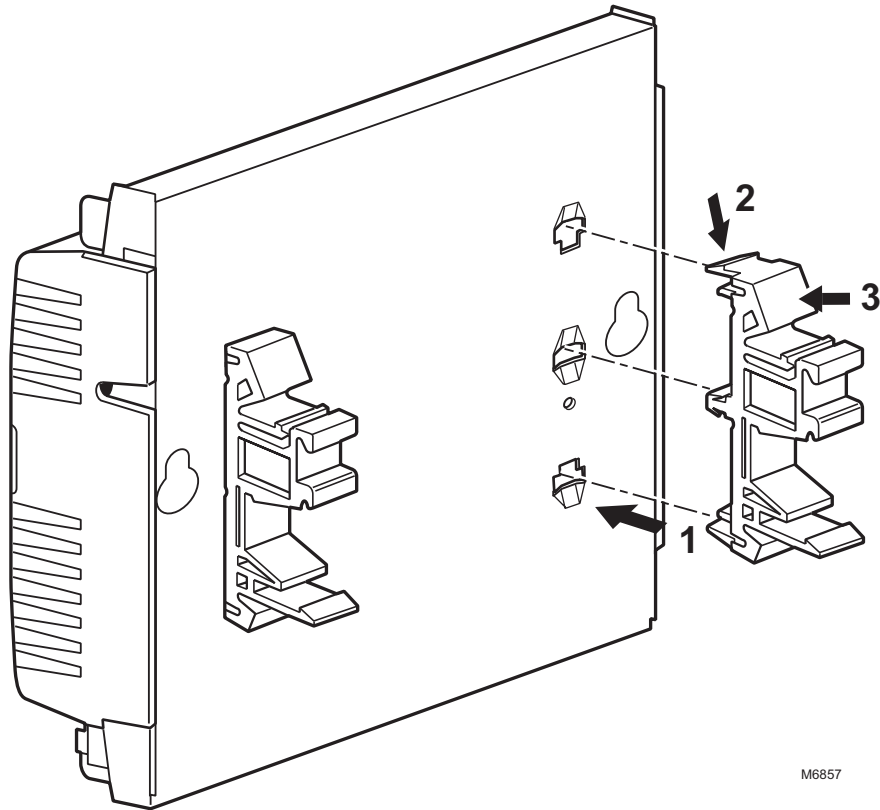


Fig. 8. DIN rail adapters.

The FTT supports polarity insensitive free topology wiring. This frees the system installer from wiring using a specific bus topology. T-tap, star, loop, and mixed wiring topologies are all supported by this architecture. The maximum LONWORKS Bus length when using a combination of T-tap, star, loop, and bus wiring (singly terminated) is 1640 ft. (500m) with the maximum node-to-node length of 1312 ft. (400m). In the event that the total wire length is exceeded, then a Q7740A 2-Way Repeater or a Q7740B 4-Way Repeater can be used to allow the number of devices to be spread out as well as increasing the length of wire over which they communicate. The maximum number of repeaters per segment is one. A Q7751A,B LONWORKS Bus Router can also be used to effectively double the maximum LONWORKS Bus length.

NOTE: For LCBS the router must be configured as a repeater.

The advantage of using the router is that it segregates traffic to a segment while when using the repeater, all traffic is repeated on each segment. When utilizing a doubly

terminated LONWORKS Bus structure, use a continuous daisy-chain with no stubs or taps from the main backbone. The maximum LONWORKS Bus length is 4593 ft. (1400m) with the maximum node-to-node length of 3773 ft. (1150m).

FTT networks are very flexible and convenient to install and maintain, but it is imperative to carefully plan the network layout and create and maintain accurate documentation. This aids in compliance verification and future expansion of the FTT network. This also keeps unknown or inaccurate wire run lengths, node-to-node (device-to-device) distances, node counts, total wire length, inaccurate repeater/router locations, and misplaced or missing terminations minimized. Refer to LONWORKS Bus Wiring Guidelines form, 74-2865 for complete description of network topology rules.

LONMARK® FUNCTIONAL PROFILE

W7750 Controllers support the LONMARK Functional Profile number 8030 Roof Top Unit Controller, version 1.0 (see Fig. 9).

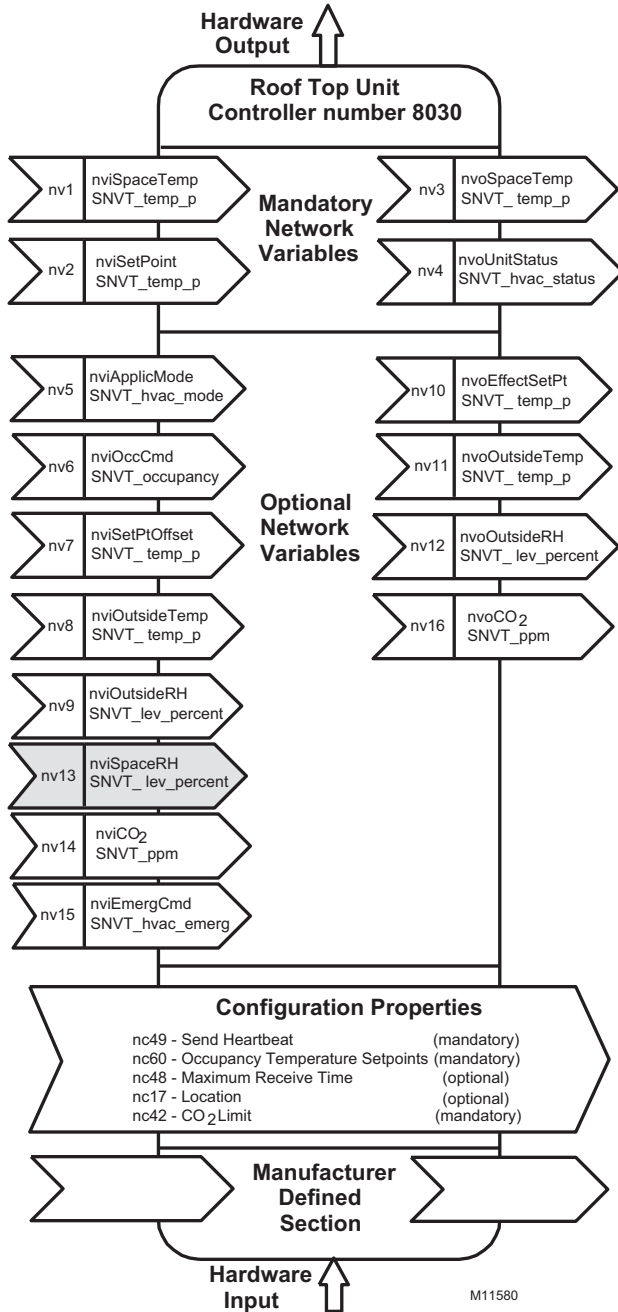


Fig. 9. Functional profile of LONMARK® RTU object details (variables not implemented in Excel 10 CVAHU are greyed).

Environmental:

Operating Temperature: -40 to 150°F (-40 to 65.5°C).

Shipping Temperature: -40 to 150°F (-40 to 65.5°C).

Relative Humidity: 5% to 95% noncondensing.

Vibration: Rated V2 level compliant.

Inputs/Outputs

The W7750A Unit supports the following hardware features:

- Three 20K ohm NTC (2021 ohms at 180°F through 834K ohms at -40°F) or PT3000 (3973 ohms at 180°F through 2916 ohms at -40°F) resistive analog inputs (one reserved for space temperature and one reserved for the setpoint knob).
- Three dry contact digital inputs (one reserved for the Bypass pushbutton).
- LED digital output (*only* for the wall module LED) 2.5V at 3 mA.
- Six 24 Vac relay digital outputs (1.5A relays rated at 7.5A inrush current).

The W7750B,C Units support the following hardware features:

- Four 20K ohm NTC (2021 ohms at 180°F through 834K ohms at -40°F) or PT3000 (3973 ohms at 180°F through 2916 ohms at -40°F) resistive analog inputs (one reserved for space temperature and one reserved for the setpoint knob).
- Two 0.2 to 10 Vdc or 4 to 20 mA (user selectable) analog inputs.
- Five dry contact digital inputs (one reserved for the Bypass pushbutton).
- Eight on the W7750B (five on the W7750C) 24 Vac Triac digital outputs (500 mA MAX). The W7750C Unit also supports three 4 to 20 mA analog outputs.
- LED digital output (*only* for the wall module LED, T7770 models or LCD, T7560A,B) 2.5V at 3 mA.
- One 20 Vdc power supply for auxiliary devices with a maximum current of 50 mA.

ANALOG INPUTS

Only one of each type of input is allowed. For example, only one Outdoor Air Temperature sensor is allowed. No duplicate Outdoor Air Temperature sensors are usable on the same controller.

Space Temperature: Type: RTD.

Supported Sensors: T7770A,B,C,D; T7560A,B.

Discharge Air Temperature:

Type: RTD.

Supported Sensors: C7041B,C,D,F,J,K, C7100A1015 (see note below), C7770A1006.

Outdoor Air Temperature:

Type: RTD.

Supported Sensors:

PT3000: C7170A1002, C7031G2014.

20K ohm: C7041F.

Return Air Temperature:

Type: RTD.

Supported Sensors: C7041B,C, C7100A, C7770A.

NOTE: PT3000 sensors (such as the C7100A) are not recommended for floating control (real time - discharge or return configured as space sensor). They are intended for monitoring or differential (staged) control.

Outdoor Air Humidity (W7750B,C only):

Type: Voltage/Current.

Supported Sensors:

0-10 Vdc or 4-20 mA: H7635C.

2 to 10 Vdc only: C7600B.

4 to 20 mA only: C7600C.

Return Air Humidity (W7750B,C only):

Type: Voltage/Current.

Supported Sensors:

- 0-10 Vdc or 4-20 mA: H7625B, H7635B, H7655B.
- 2 to 10 Vdc only: C7600B.
- 4 to 20 mA only: C7600C.

Outdoor Air Enthalpy (W7750B,C only):

Type: Current.

Supported Sensors: C7400A1004 (4 to 20 mA).

Return Air Enthalpy (W7750B,C only):

Type: Current.

Supported Sensors: C7400A1004 (4 to 20 mA).

Air Filter Differential Pressure (W7750B,C only):

Type: Voltage.

Supported Sensors: P7640 (set for 4 to 20 mA; use 500 ohm resistor for 2 to 10 Vdc) 0 to 5 in. w.c. (1.25 kPa).

CO₂ Sensor (W7750B,C only):

Type: Voltage.

Supported Sensors: C7232A,B (set for 0-2000 ppm); C7632A,B (0-2000 ppm, fixed), 0-10 Vdc for both.

Monitor Sensor for network use (W7750B,C only):

Type: Voltage.

Supported Sensors: Third party 2 to 10 Vdc, 2 to 10V displayed.

DIGITAL INPUTS

NOTE: Only one of each type of input is allowed. For example, only one Smoke Monitor is allowed. No duplicate Smoke Monitors are usable on the same controller.

Dry-contact inputs are sensed using a 9 milliamp at 4.8 volts detection circuit. It is very important that the device used contains high quality, noncorroding contacts with resistivity that does not degrade; that is, increase over time. Use noble metal (such as gold or silver), or pimpled or sealed contacts to assure consistent, long-term operation.

Two of the following Digital Inputs (DIs) can be configured when using the W7750A, and four of the following when using the W7750B,C:

- Fan Status:
Contact Closed = Fan on
- IAQ Switch:
Contact Closed = Poor Air Quality
- Time Clock:
Contact Closed = Occupied Mode; Contact Open = Unoccupied Mode
- Schedule Master:
Contact Closed = Local time clock is used as master time clock
- Economizer Enable Signal:
Contact Closed = Economizer Enabled for cooling use
- Smoke Monitor:
Contact Closed = Smoke Detected
- Dirty Filter:
Contact Closed = Dirty Filter

- Shutdown Signal:
Contact Closed = Shut off all equipment
- Occupancy Switch:
Contact Closed = Room is Occupied; Contact Open = Room is Unoccupied
- Window Monitor:
Contact Closed = Window is Closed
- Coil Freeze Stat: (Only use this DI when using E-Vision.)
Contact Closed = Coil Freeze condition sensed
- Wall Module Bypass Pushbutton:
Momentary DI (See Appendix B—Sequences of Operation for bypass details.)

TRIAC OUTPUTS (W7750B,C MODELS ONLY)

Power ratings: 20 Vac to 30 Vac at 25 mA MIN to 500 mA MAX current for any voltage.

IMPORTANT

When any device is energized by a Triac, the device must be able to sink a minimum of 25 mA.

NOTE: Triacs sink current to the 24 Vac hot (high side switching - factory default) or common (low side switching); see Fig. 30 for wiring example of high side switching.

IMPORTANT

If non-Honeywell motors, actuators, or transducers are to be used with Excel 10 Controllers, Triac compatibility must be verified (see previous NOTE).

DIGITAL OUTPUTS


- COOL STAGE 1
- COOL STAGE 2
- COOL STAGE 3
- COOL STAGE 4
- HEAT STAGE 1
- HEAT STAGE 2
- HEAT STAGE 3
- HEAT STAGE 4
- CHANGE OVER RELAY
- FAN
- AUX ECON
- OCCUPANCY STATUS
- ECON OPEN
- ECON CLOSE
- COOL OPEN
- COOL CLOSE
- HEAT OPEN
- HEAT CLOSE
- HEAT COOL STAGE 1
- HEAT COOL STAGE 2
- HEAT COOL STAGE 3
- HEAT COOL STAGE 4
- FREE1 (NOTE: *Free1, Free1 Pulse On and Free1 Pulse Off* are three separate and unique digital output points. Because they are not related, they all can be configured in a CVAHU controller at the same time.)
- FREE2
- FREE1 PULSE ON
- FREE1 PULSE OFF
- ECON PWM
- HEAT PWM
- COOL PWM
- UNUSED

Wall Modules

The T7770 or T7560 Wall Modules for the Excel 10 Controllers are available in a variety of configurations. The models T7770A1006 and T7770C1002 are shown in Fig. 10. The T7770B,D are the same physical size (see Product Names section for differences). The models T7560A, and T7560B are shown in Fig. 11. The T7560A,B are the same physical size.

Duct Sensor

The dimensions of the C7770A duct-mounted sensor are shown in Fig. 12.

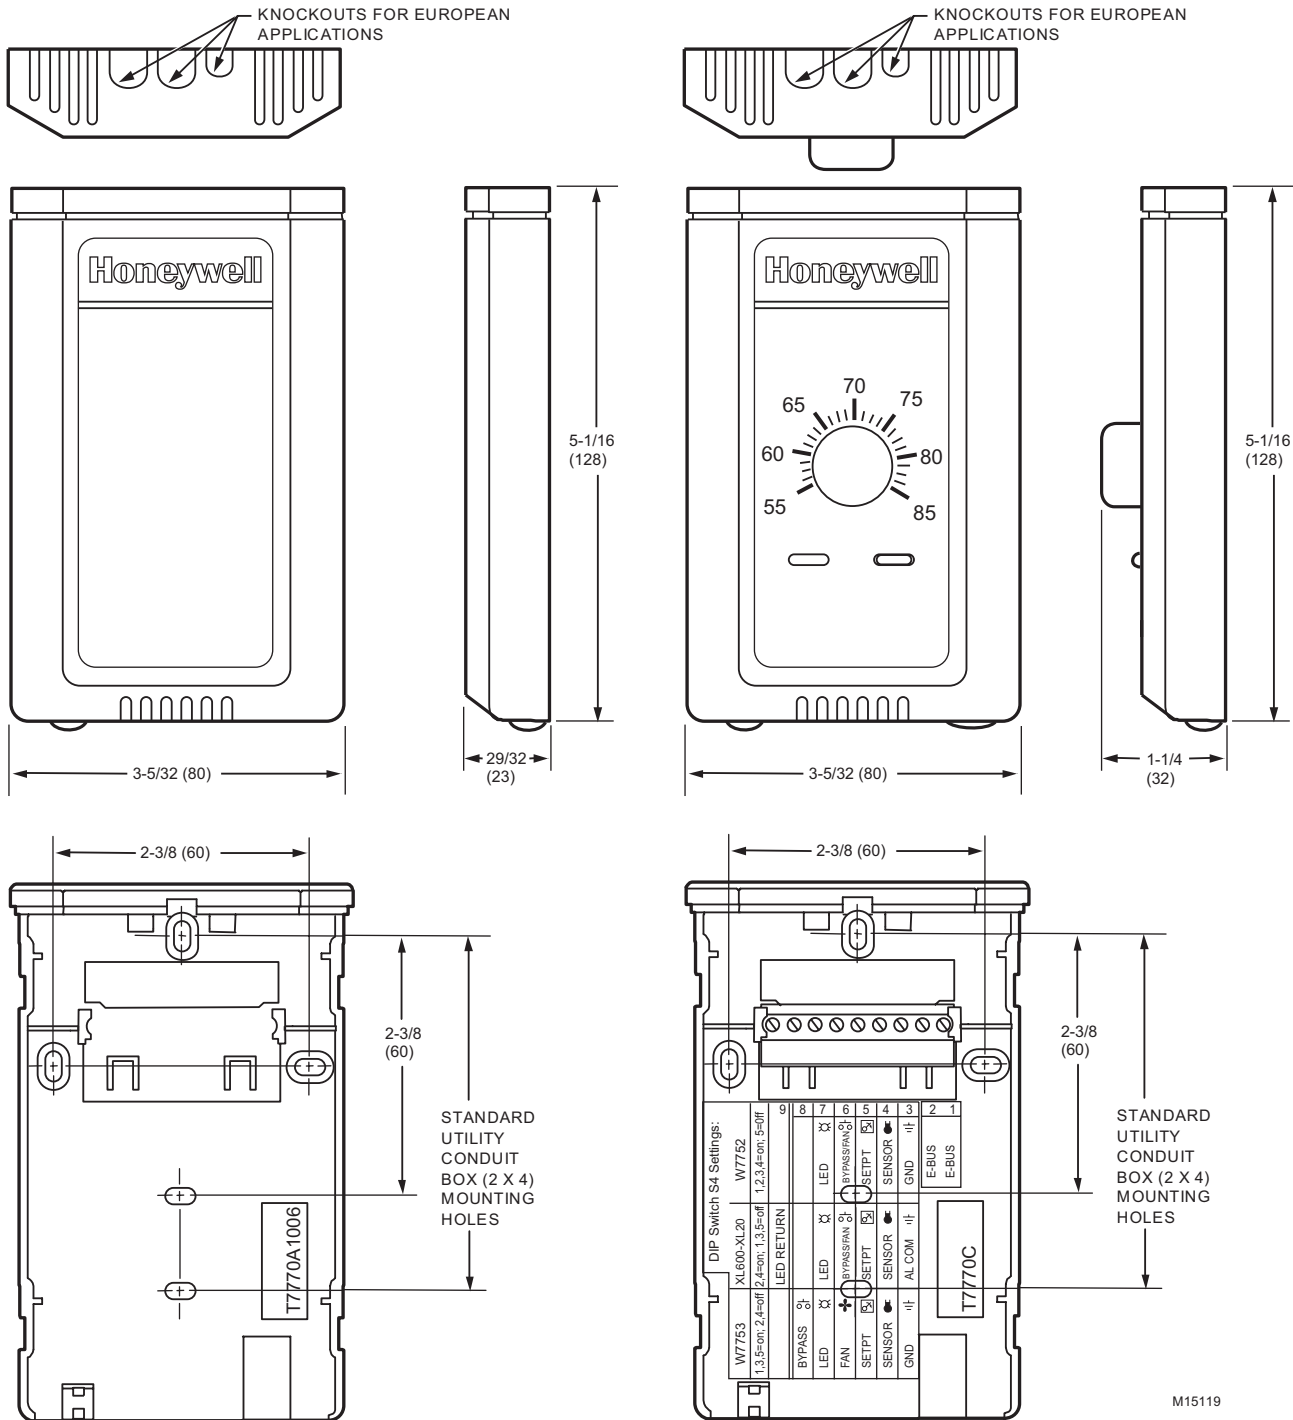

M15119

Fig. 10. T7770A,B,C,D construction in in. (mm).

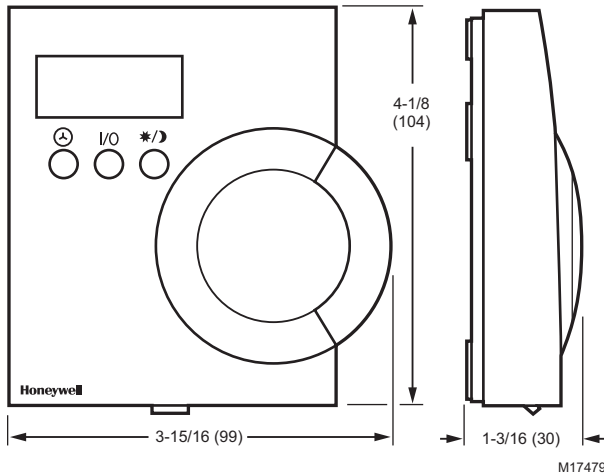


Fig. 11. T7560A,B construction in in. (mm).

Configurations

General

Tables 3 and 4 provide an overview of the Excel 10 W7750 configuration options. All W7750s are assumed to have a supply fan digital output. Additionally, Tables 3 and 4 list the general mechanical equipment options available with the W7750 Controller. See Application Step 6. Configure Controllers, for further information on configurations.

IMPORTANT

For floating control, the Excel 10 W7750 Controller is designed to work only with Series 60 valve and damper actuators. Full stroke actuator drive-time must be between 20 and 240 seconds (0.25 to 4.0 minutes).

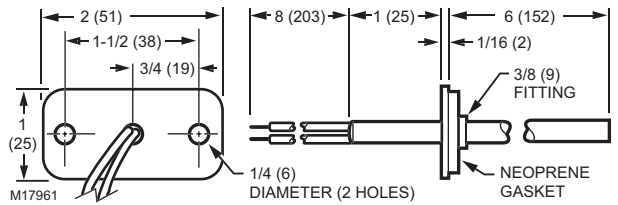


Fig. 12. C7770A construction in in. (mm).

Table 3. Common Configuration Options Summary For W7750A,B,C Controllers.

Option	Possible Configurations Common To All W7750 Models
Supply Fan	1. Mandatory Digital Output.
Type of Air Handler	1. Conventional.
	2. Heat Pump.
Occupancy Sensor	1. None.
	2. Connected: Contacts closed equals Occupied.
	3. Network (Occ/Unocc signal received via the LONWORKS Bus network).
Window Sensor	1. None.
	2. Physically Connected: Contacts closed equals window closed.
	3. Network (Window Open/Closed signal received via the LONWORKS Bus).
Wall Module Option (The T7560A,B has no LONWORKS Bus access)	1. Local (direct wired to the controller).
	2. Network (sensor value received via the LONWORKS Bus).
Wall Module Type (All wall modules have a LONWORKS Bus access jack except T7560A,B)	1. Sensor only.
	2. Sensor and Setpoint adjust.
	3. Sensor, Setpoint adjust and Bypass.
	4. Sensor and Bypass.
Smoke Emergency Initiation	1. None.
	2. Physically Connected: Contacts closed equals smoke detected.
	3. Network (Emergency/Normal signal received via the LONWORKS Bus).

Table 4. Configuration Options Summary for W7750A,B,C Controllers.

Option	Possible Configurations for the W7750A Model	Possible Configurations for the W7750B,C Models
Type of Heating	1. One stage.	1. One stage.
	2. Two stages.	2. Two stages.
	3. Three stages.	3. Three stages.
	4. Four stages.	4. Four stages.
	5. None.	5. Series 60 Modulating electric valve, or pneumatic via transducer.
		6. Pulse Width Modulating electric valve, or pneumatic via transducer.
		7. None.
Type of Cooling	1. One stage.	1. One stage.
	2. Two stages.	2. Two stages.
	3. Three stages.	3. Three stages.
	4. Four stages.	4. Four stages.
	5. None.	5. Series 60 Modulating electric valve, or pneumatic via transducer.
		6. Pulse Width Modulating electric valve, or pneumatic via transducer.
		7. None.
Type of Economizer^a	1. Digital Output Enable/Disable signal for controlling an external economizer package (comes on with the fan).	1. Digital Output Enable/Disable signal for controlling an external economizer package.
	2. Series 60 Modulating electric damper motor, or pneumatic via transducer.	2. Series 60 Modulating electric damper motor, or pneumatic via transducer.
	3. None.	3. Pulse Width Modulating electric damper motor, or pneumatic via transducer.
		4. None.
IAQ Option	1. None.	1. None.
	2. Local IAQ Digital Input—directly wired to the controller. (Contacts closed means poor IAQ is detected.)	2. Local IAQ Digital Input—directly wired to the controller. (Contacts closed means poor IAQ is detected.)
	3. Network (IAQ Override signal received via the LONWORKS Bus).	3. Network (IAQ Override signal received via the LONWORKS Bus).
		4. Local CO ₂ Analog Input—directly wired to the controller. (The sensor must be a 0 to 10V device representing 0 to 2000 PPM CO ₂ .)
Coil Freeze Stat Option	1. None.	1. None.
	2. Local Coil Freeze Stat Digital Input—directly wired to the controller. (Contacts closed means that coil freeze condition is sensed.)	2. Local Coil Freeze Stat Digital Input—directly wired to the controller. (Contacts closed means that coil freeze condition is sensed.)
Filter Monitor Option	1. None.	1. None.
	2. Local Dirty Filter Digital Input—directly wired to the controller. (Contacts closed means that the filter is dirty.)	2. Local Dirty Filter Digital Input—directly wired to the controller. (Contacts closed means that the filter is dirty.)
		3. Local Analog Input for Differential Pressure across the Filter (directly wired to the controller). The sensor must be a 2 to 10V device representing 0 to 5 in. w.c. (1.25 kPa).

Allowable Heating and Cooling Equipment Configurations

Each W7750 device can control a variety of different types of mechanical cooling and heating equipment within roof top air

handlers. See Fig. 13 through 17 for a conceptual overview of some typical configurations. For specific wiring details, see the Prepare Wiring Diagrams section.

Staged Heating/Cooling Control

Staged equipment control is available for up to four stages of heating or four stages of cooling. On the W7750, the stages are activated through digital outputs (Triacs on the W7750B,C and dry-contact relays on the W7750A) one for each stage wired to 24 Vac contactors (see Fig. 27 and 30 in Step 4. Prepare Wiring Diagrams section for wiring details). Note that the number of physical Digital Outputs (DOs) on the controller limits the total number of stages that can be controlled. For example, the W7750A Model has six digital outputs, and because one is used for the supply fan, there are five DOs available for any combination of heating and cooling stages (with a maximum of four stages of heating and four stages for cooling). The W7750B Model offers two additional DOs, for a total of eight. The W7750C offers five DOs and three Analog Outputs (AOs). Fig. 13 shows a typical application of two stages of heat and two stages of cooling.

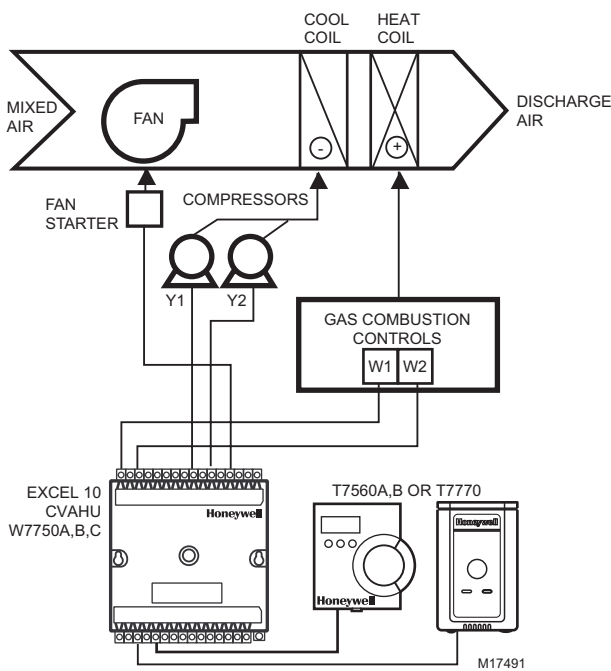


Fig. 13. Fan with two stages of heating and two stages of cooling.

Modulating Heating/Cooling Control

The W7750 Controller provides modulating equipment control for heating and cooling equipment (and economizer dampers, see Fig. 16) using either Series 60 Floating Control or Pulse Width Modulated (PWM) control, (PWM control is available on the W7750B,C *only*). The Series 60 Modulating Control is provided through two Relay digital outputs on the W7750A (for economizer only) or two Triac digital outputs on the W7750B,C (one to pulse the valve actuator open and one to pulse it closed). PWM control positions the actuator based on the length, in seconds, of the pulse from the digital output. For PWM, the controller outputs a pulse whose length consists of two parts, a minimum and a maximum. The minimum pulse

time represents the analog value of 0 percent and the maximum pulse length that represents an analog value of 100 percent. If the analog value is greater than 0 percent, an additional time is added to the minimum pulse time. The length of time added is directly proportional to the magnitude of the analog value. The PWM actuator will begin to use the analog value at the end of the pulse and will continue to use this value until a new pulse is received. Refer to Appendix B under PWM Control for an example. Series 60 actuators are generally less expensive than those for PWM, but the trade-off is that PWM requires only a single controller digital output while floating control uses two DOs. Refer to Appendix B under Series 60 Modulating Control for an example. Fig. 14 illustrates a system with modulating heating and cooling (see Fig. 29 and 31 in Step 4. Prepare Wiring Diagrams section.

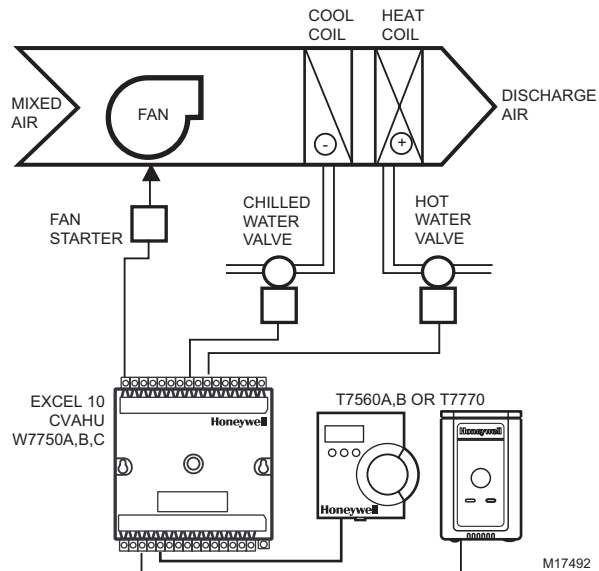


Fig. 14. Fan, modulating heating and modulating cooling.

NOTE: Pneumatically actuated valves can be controlled using a pneumatic transducer device. See Fig. 17. Also, transducer devices are available from third party vendors to convert PWM outputs to a voltage or current signal if desired.

Heat Pump Control

The W7750 Controller handles heat pump applications similarly to staged heating/cooling control. Heat pump applications are supported by providing outputs for up to four compressor stages, a change-over relay for the refrigerant reversing valve, and up to four stages of auxiliary heat. Note that the W7750A Model has six digital outputs, and therefore, with one DO used for the supply fan and one for the change-over relay, there are four outputs available for any combination of compressors and auxiliary heat stages. The W7750B Model offers two additional DOs for a total of eight, while the W7750C Model offers five DOs and 3 AOs. Fig. 15 illustrates a typical heat pump system with auxiliary heat.

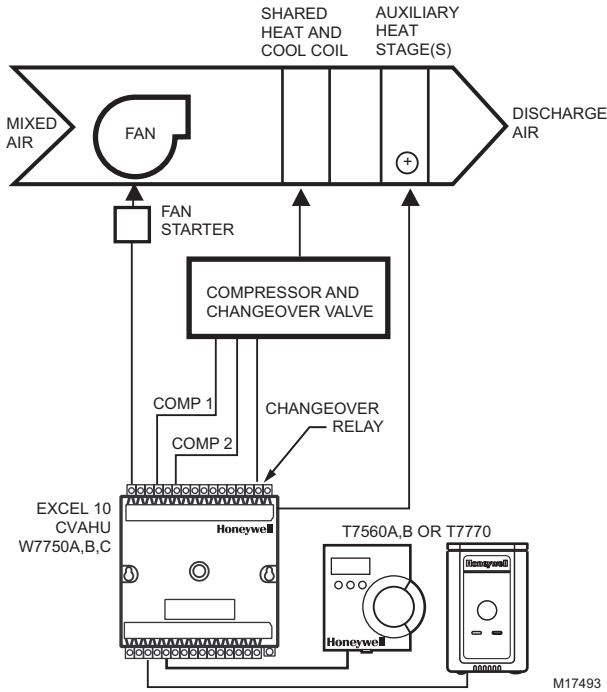


Fig. 15. Heat pump with two compressors and auxiliary heat stage(s).

Economizer Control

Economizer control is available concurrently with any configuration in the W7750 when DOs are not all used by the heating and cooling equipment. Two types of economizer controls are supported by the W7750 Controller, modulating control and enable/disable control. Modulating control can be either Series 60 Floating Control or PWM control (PWM

control is available on the W7750B,C only). A discharge air temperature sensor is required for modulating economizer damper control. Enable/disable control is provided to emulate the Honeywell T7300 thermostat economizer operation, where a DO tracks the occupancy status of the controller. An external packaged economizer control then modulates the dampers. For modulating control, the economizer is enabled or disabled based on one of ten available strategies (see Appendix B—Sequences of Operation—Economizer Enable/Disable Control section, for further details). Fig. 16 illustrates a system with modulating economizer dampers (see Fig. 29, 31, 32 and 35 in Step 4. Prepare Wiring Diagrams section, for wiring details).

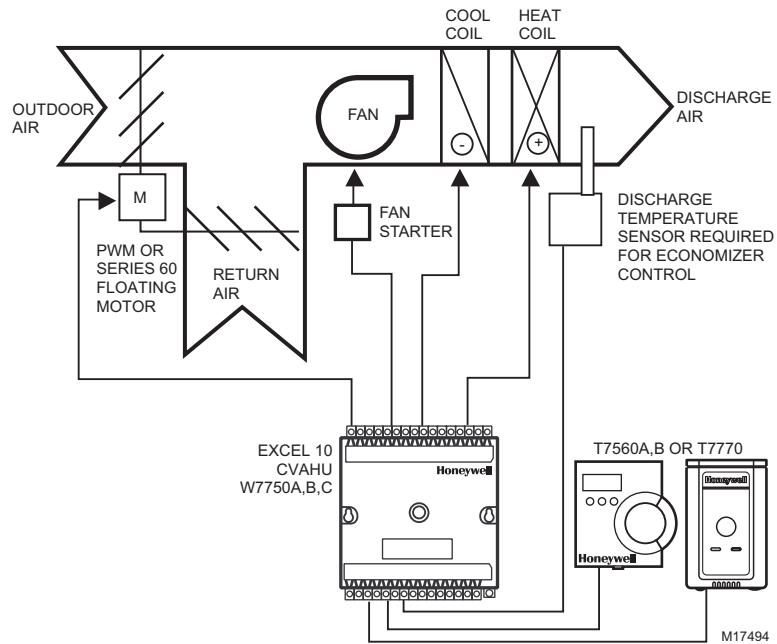


Fig. 16. Economizer control.

Pneumatic Actuator Control

The W7750B,C Controller can control pneumatic actuators for any or all of the three modulating outputs provided by the control algorithm (heat, cool and economizer). Control of pneumatic water/steam valves and damper actuators is provided through a transducer device using either Series 60 Floating Control or PWM DOs. A floating-to-pneumatic, or a PWM-to-pneumatic transducer is required for each output signal. The W7750A Controller can drive Series 60 Floating Control for only economizer control. There are no PWM outputs configurable on the W7750A model.

For projects with existing pneumatically actuated reheat valves, the Excel 10 W7750 Controller output must be converted to a pneumatic signal using a transducer device developed for use with Excel 10 Controllers. The transducer is available through Honeywell, or directly from a third party manufacturer.

Fig. 17 depicts a typical W7750 System with modulating heating valve using a pneumatic valve actuator. Also see Fig. 37 for wiring an RP7517B Pneumatic Transducer to a W7750C Controller.

NOTE: When choosing the pneumatic pressure range, make sure that the close-off pressure is 2 to 3 psi greater than that of the spring range. When using a spring range of 5 to 10 psi with 10 psi as the closed position, *do not* use a 0 to 10 psi model transducer; use a 0 to 20 psi transducer as the recommended selection.

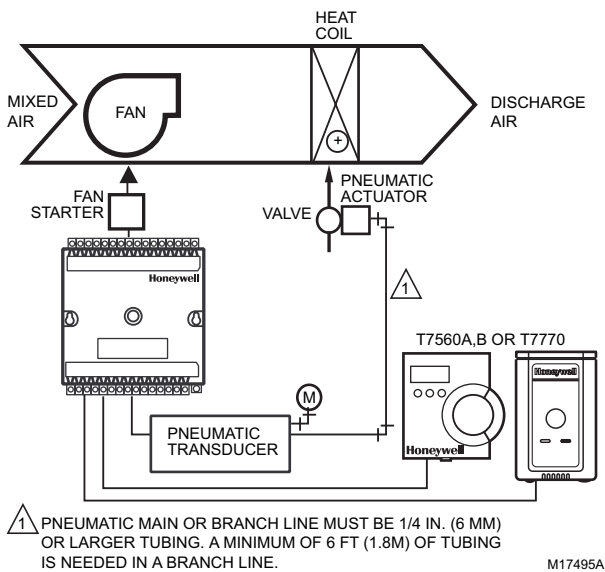


Fig. 17. Modulating heat with pneumatic valve actuator.

Mixed Output-type Control

The W7750B,C Controller provides control for mixed-output-types of applications such as PWM heating and staged cooling control occurring simultaneously with Series 60 Floating Economizer Damper Control.

Occupancy Sensor

Excel 10 W7750 Controllers provide a digital input for connection to an occupancy sensor. This is a device, such as a passive infrared motion detector, that contains a dry contact

(see following NOTE) closure to indicate whether or not people are present in the space. The Excel 10 W7750 Controller expects a contact closure to indicate the space is Occupied. See Fig. 27 through 35 in Application Step 4, Prepare Wiring Diagrams, for details on wiring connections.

The control algorithm in the Excel 10 Controller uses the occupancy sensor, if configured, to determine the Effective Occupancy (see Table 5) mode of operation. If the Time Of Day (TOD) schedule indicates an Occupied state, and the occupancy sensor contact is closed, the Effective Occupancy mode is Occupied. However, if the TOD schedule indicates an Occupied state and the occupancy sensor contact is open, then the Effective Occupancy mode is STANDBY. The temperature control algorithm is then controlled to the STANDBY Cooling and Heating Setpoints.

If the occupancy sensor is not configured, a local controller can be put in the STANDBY mode only by either a one-to-one association of the occupancy sensor from another Excel 10 Controller to the local controller, or by receiving the STANDBY mode signal via the LONWORKS Bus.

NOTE: The Excel 10 Controller has limited power available (only 9 mA at 4.8 volts) for checking the digital inputs for contact closures. It is very important that the device used contains high quality, noncorroding contacts with resistivity that does not degrade; that is, increase over time. Use noble metal (such as gold or silver), or pimpled or sealed contacts to assure consistent, long-term operation.

Window Open/Closed Digital Input

A digital input is also provided for detecting whether a window in the space was opened. The Excel 10 W7750 Controller can be connected to a dry contact (see the following NOTE and Fig. 27 through 35 in Application Step 4. Prepare Wiring Diagrams, for details) or a set of contacts wired in series (for monitoring multiple windows) to verify that the window(s) are closed. The algorithm expects a contact closure to indicate the window is closed. If an open window is detected, the algorithm changes the mode of operation to FREEZE_PROTECT, which shuts down the control functions, and watches for low space temperature conditions. The frost protection setpoint is 46.4°F (8°C), and the frost alarm occurs at 42.8°F (6°C).

NOTE: (This is the same NOTE as in the Occupancy Sensor section.) The Excel 10 has limited power available (only 9 mA at 4.8 volts) for checking the digital inputs for contact closures. It is very important that the device used contains high quality, noncorroding contacts with resistivity that does not degrade; that is, increase over time. Use noble metal (such as gold or silver), or pimpled or sealed contacts to assure consistent, long-term operation.

Wall Module Options

As previously discussed, there are four basic varieties of the T7770 Wall Modules and two of the T7560 Digital Wall Module (see the Product Names and the Construction sections). Also, a T7770 and T7560 Wall Modules can be shared among two or more W7750s. The control algorithm must be given this wall module information when configuring the W7750.

Dirty Filter Monitor

The air filter in the air handler can be monitored by the W7750 and an alarm is issued when the filter media needs replacement. The two methods of monitoring the filter are:

1. Connecting a differential pressure switch to a digital input on the W7750A or W7750B,C.
2. Wiring a 2 to 10V differential pressure sensor (such as the P7640A,B 4-20 mA with 500 ohm resistor) to a voltage input on the W7750B,C. If the analog input sensor is used, its measured value 0 to 5 in. w.c. (0 to 1.25 kPa) is compared to a user-selectable setpoint [FiltrPressStPt—valid range: 0 to 5 in. w.c. (0 to 1.25 kPa)], and the Dirty Filter alarm is issued when the pressure drop across the filter exceeds the setpoint.

Indoor Air Quality (IAQ) Override

The Excel 10 W7750 Controller provides IAQ ventilation control using one of two different methods of detecting poor air quality. The first is with an IAQ switch device connected to a digital input on the W7750 Controller, where a contact closure indicates poor air quality, and initiates the IAQ Override mode. The device can detect poor air quality using any desired measure such as CO₂, VOC, CO, etc. The second method, which is only available on the W7750B,C, is through an analog input that connects to a CO₂ sensor (0 to 10 Vdc, as provided with the C7232A,B). The measured value of CO₂ from this sensor (0 to 2000 PPM) is compared to the setpoint (IAQSetpt). When the CO₂ level is higher than the

setpoint (800 PPM *adjustable*), the IAQ Override is initiated. The IAQSetpt hysteresis is 50 PPM, IAQ Override is deactivated at a CO₂ level less than 50 PPM below setpoint.

The effect of initiating the IAQ Override mode is that the economizer dampers are allowed to open above the standard minimum position setting to allow more fresh air to enter the building. See Appendix B—Sequences of Operation, for further control details.

Smoke Control

The Excel 10 W7750 Controller supports smoke-related control strategies that are initiated either via a network command (DestEmergCmd) or from a local (physically connected) smoke detector digital input. The details of the W7750 smoke-related control operation are described in Appendix B—Sequences of Operation.

Freeze Stat (W7750B2011 or W7750C)

A freeze stat can be monitored by the W7750 and issue a freeze stat alarm indicating the CVAHU is in danger of freezing its coil. The details of the W7750 freeze stat related control operation are described in Appendix B—Sequences of Operation.

Modes of Operation

The possible modes of operation for the W7750 Controller are listed in Table 5.

Table 5. Modes Of Operation For The Excel 10 W7750 Controller .

Mode	Description	Events causing a controller to switch to this mode
Effective Occupancy (User Address: StatusOcc)		
OCCUPIED	Controller is in Occupied mode	Any of the following: Network input (DestSchedOcc) containing a time-of-day schedule or a Time Clock DI, Occupancy Sensor DI; or from Network input (DestManMode) for manual override to OCC mode. DestManMode has the highest priority, followed by the Time Clock DI, and then DestSchedOcc.
STANDBY	Controller is in Standby mode	Either: (A) Network input (DestSchedOcc) containing a time-of-day schedule or other LONWORKS Bus node is STANDBY, or (B) Network input (DestSchedOcc) is OCCUPIED and the Occupancy Sensor DI is UNOCCUPIED.
UNOCCUPIED	Controller is in Unoccupied mode	Network input (DestSchedOcc) containing a time-of-day schedule or the network input DestManOcc has a value of UNOCCUPIED.
BYPASS OCCUPIED	Controller is in Occupied mode through a Bypass command	This mode is derived from the schedule occupancy (DestSchedOcc) having a state of UNOCCUPIED and a manual request for occupancy from one of three sources. Two of these are signals originated external to the unit, and received by DestManOcc and DestBypass. The third source for an occupancy request is from an override button located on a wall module. These three sources are arbitrated in a scheme determined by the configuration parameter (Network Wins or Last-in Wins from OvrPriority).
Override Modes (User Address: StatusOvr)		
OCCUPIED	Controller occupancy mode was overridden to Occupied mode	Network input (DestManOcc) containing a time-of-day schedule override signal of OCCUPIED from another LONWORKS Bus device.
STANDBY	Controller occupancy mode was overridden to Standby mode	Network input (DestManOcc) containing a time-of-day schedule override signal of STANDBY from another LONWORKS Bus device.
UNOCCUPIED	Controller occupancy mode was overridden to Unoccupied mode	Network input (DestManOcc) containing a time-of-day schedule override signal of UNOCCUPIED from another LONWORKS Bus device.

Table 5. Modes Of Operation For The Excel 10 W7750 Controller (Continued).

Mode	Description	Events causing a controller to switch to this mode
BYPASS	Controller occupancy mode was overridden to Bypass the current Unoccupied mode	DI (Bypass) was pressed, and the Bypass duration timer has not yet expired, or the network input DestManOcc has a value of BYPASS.
NOT ASSIGNED	No Bypass action	No Override input received.
Operational Modes (User Address: StatusMode)		
START-UP AND WAIT	On power-up, provides a staggered start sequence to evenly apply the load to the electrical system.	This mode occurs on controller power-up, and after downloading to the controller from the configuration tool. Temperature control loops are disabled.
COOLING	The Excel 10 is controlling the Cooling mode.	Space temperature has risen above the current cooling setpoint, or the network input (DestHvacMode) is COOL.
HEATING	The Excel 10 is controlling the Heating mode.	Space temperature has fallen below the current heating setpoint, or the network input (DestHvacMode) is HEAT.
EMERGENCY HEAT	Compressors are disabled and only Auxiliary Heat stages are allowed to operate.	The network input (DestManHvacMode) is EMERG_HEAT.
OFF MODE	The heat/cool control is turned off immediately. The node is not running its normal temperature control.	Network input (DestManMode) containing AHU operational mode information from C-Bus has value of MORNING WARM-UP.
DISABLED MODE	The heat/cool control and frost protection are turned off immediately. The node is not running its normal temperature control.	—
SMOKE EMERGENCY	The node has entered a smoke emergency. The fan and dampers are then set to the conditions configured by SmkCtlMode. The control remains in SMOKE_EMERGENCY until power is cycled or the node receives DestEmergCmd set to EMERG_NORMAL.	Network input (DestEmergCmd) containing smoke control signal from another LONWORKS Bus device has value of SMOKE_EMERG.
FREEZE PROTECT	The temperature control is set to HEAT with the setpoint set to the frost limit setpoint 46.4°F (8°C).	The Window digital input detects an open window.
MANUAL POSITION	The physical outputs are being controlled manually. The temperature control loop is turned off.	Typically this is done by the user through LONSPEC™ setting the point DestManMode to MANUAL mode.
FAN ONLY	Control algorithm is disabled, except that the fan is turned on.	The space temperature sensor has failed, or the network input (DestHvacMode) is FAN ONLY.
DISABLED	Control algorithm is shut off.	Network input (DestManMode) containing AHU operational mode information from an operator or the network that has a value of DISABLED.

NOTE: During all modes all digital and analog physical inputs are periodically read, the diagnostic output network variables can be polled, the input network variables are received, and the output network variables are sent periodically.

APPLICATION STEPS

Overview

The seven application steps shown in Table 6 are planning considerations for engineering an Excel 10 W7750 System. These steps are guidelines intended to aid understanding of the product I/O options, bus arrangement choices, configuration options and the Excel 10 W7750 Controller role in the overall LCBS/EXCEL 5000® OPEN™ SYSTEM architecture.

Table 6. Application Steps.

Step No.	Description
1	Plan The System
2	Determine Other Bus Devices Required
3	Lay Out Communications and Power Wiring

Step No.	Description
4	Prepare Wiring Diagrams
5	Order Equipment
6	Configure Controllers
7	Troubleshooting

Step 1. Plan the System

Plan the use of the W7750 Controllers according to the job requirements. Determine the location, functionality and sensor or actuator usage. Verify the sales estimate of the number of W7750 Controllers, T7770 and T7560 Wall Modules required for each model type. Also check the number and type of output actuators and other required accessories.

When planning the system layout, consider potential expansion possibilities to allow for future growth. Planning is very important to be prepared for adding HVAC systems and controllers in future projects.

T7560 Wall Modules can only be hard-wired, they have no LONWORKS Bus access. T7770 Wall Modules can be installed as either hard-wired I/O-only devices or additional wiring can be run to them (for the LONWORKS Bus network) to allow a LONSPEC™ or Care user access to the LONWORKS Bus. The application engineer needs to determine how many wall modules, T7770s and T7560s are required. All T7770 Wall Modules, except the T7770A1006, can be connected via the LONWORKS Bus jack. Also the application engineer needs to know how many T7770s without LONWORKS Bus network connections are being installed on the job, and then clearly document which wall modules (if any) have network access. This information is required during installation to ensure that the proper number and type of wires are pulled to the wall modules, and the building operators are informed about where they can plug in to the LONWORKS Bus network with a portable operator terminal (see Fig. 18, 19 and 20). Refer to Step 4. Prepare Wiring Diagrams for details, about the about the wiring differences between the two types.

The FTT communication wiring, (LONWORKS Bus) between controllers is a free topology scheme that supports T-tap, star, loop, and mixed wiring architecture. Refer to the LONWORKS Bus Wiring Guidelines form, 74-2865 for complete description of network topology rules. See Application Step 3. Lay Out Communications and Power Wiring, for more information on bus wiring layout, and see Fig. 27 through 35 in Application Step 4. Prepare Wiring Diagrams, for wiring details.

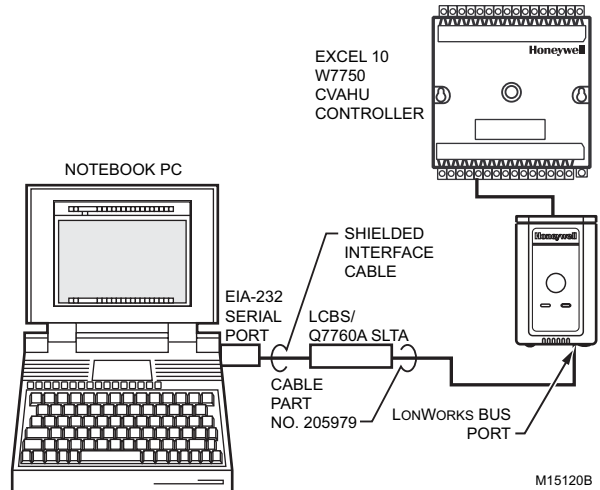


Fig. 18. Connecting the portable operator terminal to the LONWORKS® Bus.

The application engineer must review the Direct Digital Control (DDC) job requirements. This includes the Sequences of Operation for the W7750 units, and for the system as a whole. Usually there are variables that must be passed between the W7750 Controllers and other zone controller(s), or central plant controller(s) that are required for optimum system-wide operation. Typical examples are the TOD Occ/Unocc signal, the outdoor air temperature, the demand limit control signal, and the smoke control mode signal.

It is important to understand these interrelationships early in the job engineering process to ensure implementation when configuring the controllers. (See Application Step 6. Configure Controllers, for information on the various Excel 10 parameters and on Excel 10 point mapping.)

Step 2. Determine Other Bus Devices Required

A maximum of 62 nodes can communicate on a single LONWORKS Bus segment. Each W7750 (CVAHU) Controller constitutes one node. If more nodes are required, a Q7740A1008 Two-way Repeater, a Q7740B1006 Four-way Repeater, or a Q7751A,B Router is necessary. Using a router allows up to 125 nodes, divided between two LONWORKS Bus segments. The router accounts for two of these nodes (one node on each side of the router); an XL5000 Q7750A Excel 10 Zone Manager takes one node and two nodes are available for operator terminal nodes, leaving 120 nodes available for Excel 10/15 Controllers. All 120 controllers are able to talk to each other through the repeater/router.

Each LONWORKS Bus segment is set up with two unused nodes to allow for a LONSPEC™/LONSTATION™ or CARE operator terminal to be connected to the LONWORKS Bus. Multiple CARE terminals (for XL5000 system), or one LonSpec and one LonStation (for LCBS systems) can be connected to the LONWORKS Bus at the same time. Table 7 summarizes the LONWORKS Bus segment configuration rules.

Table 7. LONWORKS® Bus Configuration Rules and Device Node Numbers.

One LONWORKS Bus Segment Example	Maximum Number of Nodes Equals 62
One Q7750A Excel 10 Zone Manager	1 node
Port for operator terminal access (LONSPEC™ or CARE)	1 node
Maximum number of Excel 10/15s	60 nodes (Excel 15s supported by LCBS only)
Total	62 nodes
Two LONWORKS Bus Segments Example	Maximum Number of Nodes Equals 125
One Q7750A Excel 10 Zone Manager	1 node (supported on XL5000 only)
One Q7751A,B Router	2 nodes (1 in each Bus Segment); Repeaters do not have nodes
Ports for operator terminal access: two CARE terminals, or one LONSPEC™ and one LONSTATION™ terminal	2 nodes (1 in each Bus Segment)
Maximum number of Excel 10/15s in segment number one	60 nodes (Excel 15s supported by LCBS only)
Maximum number of Excel 10/15s in segment number two	60 nodes (Excel 15s supported by LCBS only)
Total	125 nodes

Refer to the LONWORKS Bus Wiring Guidelines form, 74-2865 for complete description of network topology rules and the maximum wire length limitations. If longer runs are required, a Q7740A 2-Way or Q7740B 4-Way Repeater can be added to extend the length of the LONWORKS Bus. A Q7751A,B Router can be added to partition the system into two segments and effectively double the length of the LONWORKS Bus. Only one router is allowed with each Excel 10 Zone Manager, and each network segment can have a maximum of one repeater.

NOTE: LCBS does not support a router unless it is configured as a repeater.

In addition, all LONWORKS Bus segments require the installation of a 209541B Termination Module for a singly terminated LONWORKS Bus or two 209541B Termination Modules for a doubly terminated LONWORKS Bus. For more details on LONWORKS Bus termination, refer to the LONWORKS Bus Wiring Guidelines form, 74-2865, or see Application Step 3. Lay Out Communications and Power Wiring, and the LONWORKS Bus Termination Module subsection in Application Step 4.

Step 3. Lay Out Communications and Power Wiring

LONWORKS® Bus Layout

The communications bus, LONWORKS Bus, is a 78-kilobits per second (kbps) serial link that uses transformer isolation and differential Manchester encoding. Approved cable types for

LONWORKS Bus communications wiring is Level IV 22 AWG (0.34 mm²) plenum or non-plenum rated unshielded, twisted pair, solid conductor wire. For nonplenum areas, use Level IV 22 AWG (0.325 mm²), such as U.S. part AK3781 (one pair) or U.S. part AK3782 (two pair). In plenum areas, use plenum-rated Level IV, 22 AWG (0.325 mm²) such as U.S. part AK3791 (one pair) or U.S. part AK3792 (two pair). See Tables 9 and 11 for part numbers. Contact Echelon Corp. Technical Support for the recommended vendors of Echelon approved cables. The FTT communications bus, LONWORKS Bus, supports a polarity insensitive, free topology wiring scheme that supports T-tap, star, loop, and mixed bus wiring.

LONWORKS Bus networks can be configured in a variety of ways, so refer to the LONWORKS Bus Wiring Guidelines form, 74-2865 for complete description of network topology rules and Table 7. Fig. 19 and 20 depict two typical LONWORKS Bus network topologies; One has only one doubly terminated LONWORKS Bus segment that has 60 nodes or less, and one showing two singly terminated LONWORKS Bus segments that has 120 nodes or less (60 MAX per each segment). The bus configuration is set up using the Network Manager tool from within LONSPEC™ or CARE.

NOTE: For wiring details see the LONWORKS Bus Termination Module subsection in Step 4. For wall module wiring, U.S. part AK3782 (non-plenum) or U.S. part AK3792 (plenum) can be used. For a LONWORKS Bus that is a doubly terminated daisy-chain, these cables contain two twisted pairs (one for the run down to the wall module, and one for the run back up to the controller) for ease of installation.

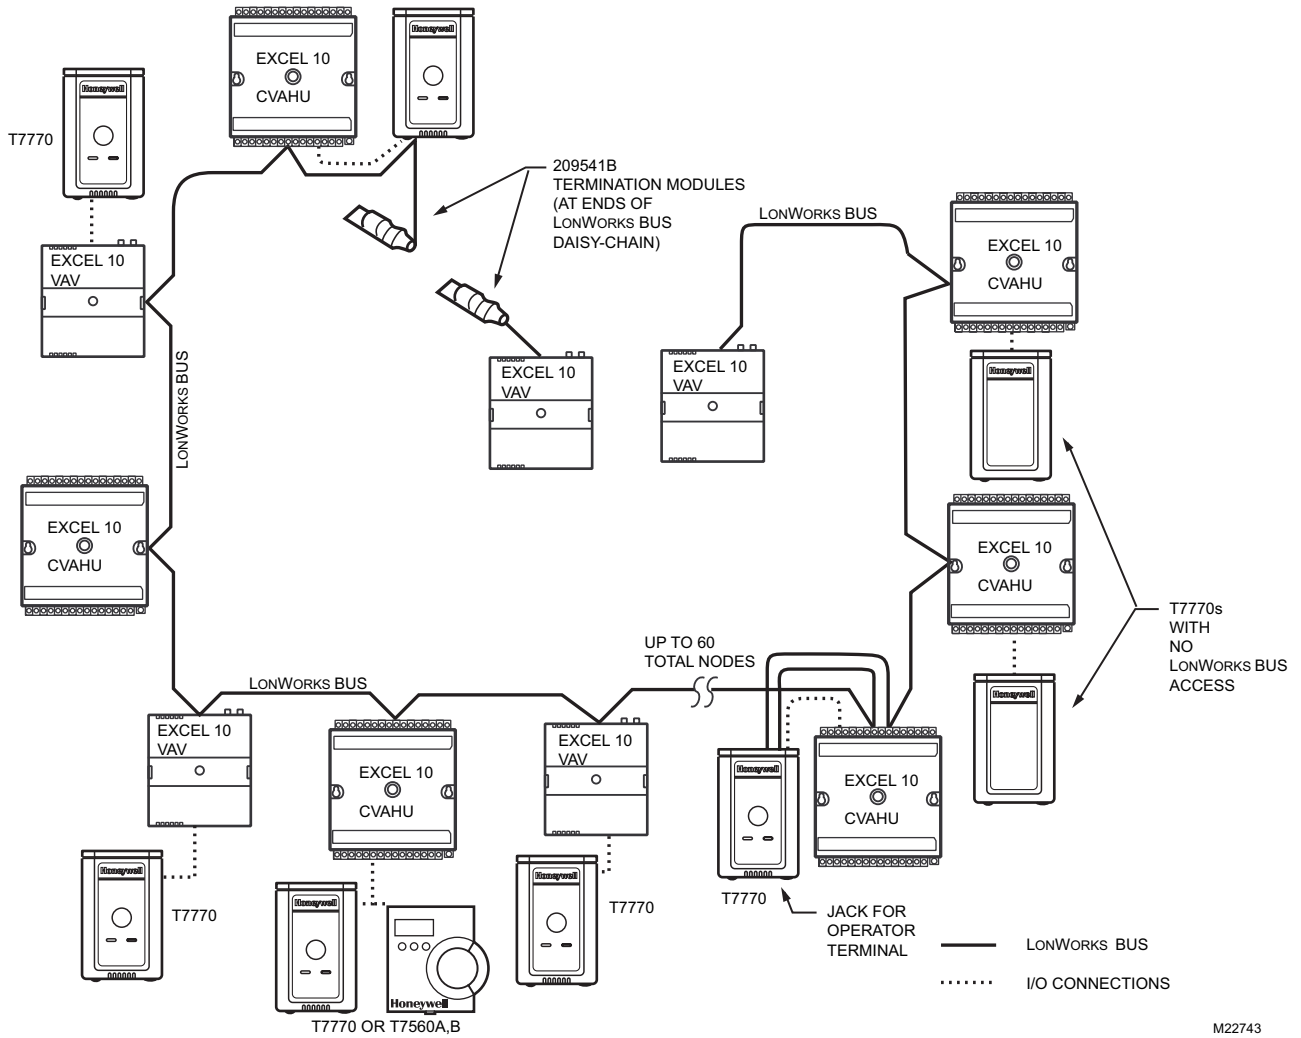


Fig. 19. Wiring layout for one doubly terminated daisy-chain LONWORKS® Bus segment.

NOTE: See the LONWORKS Bus Termination Module section for wiring details.

IMPORTANT

Notes on communications wiring:

- All field wiring must conform to local codes and ordinances or as specified on installation wiring diagrams.
- Approved cable types for LONWORKS Bus communications wiring is Level IV 22 AWG (0.34 mm²) plenum or non-plenum rated unshielded, twisted pair, solid conductor wire. For nonplenum areas, use Level IV 22 AWG (0.34 mm²), such as U.S. part AK3781 (one pair) or U.S. part AK3782 (two pair). In plenum areas, use plenum-rated Level IV, 22 AWG (0.34 mm²) such as U.S. part AK3791 (one pair) or U.S. part AK3792 (two pair). See Tables 9 and 11 for part numbers. Contact Echelon Corp. Technical Support for the recommended vendors of Echelon approved cables.
- Unswitched 24 Vac power wiring can be run in the same conduit as the LONWORKS Bus cable.
- Do not use different wire types or gauges on the same LONWORKS Bus segment. The step change in line impedance characteristics causes unpredictable reflections on the bus. When using different types is unavoidable, use a Q7751A,B Router at the junction.
- In noisy (high EMI) environments, avoid wire runs parallel to noisy power cables, or lines containing lighting dimmer switches, and keep at least 3 in. (76 mm) of separation between noisy lines and the LONWORKS Bus cable.
- Make sure that neither of the LONWORKS Bus wires is grounded.

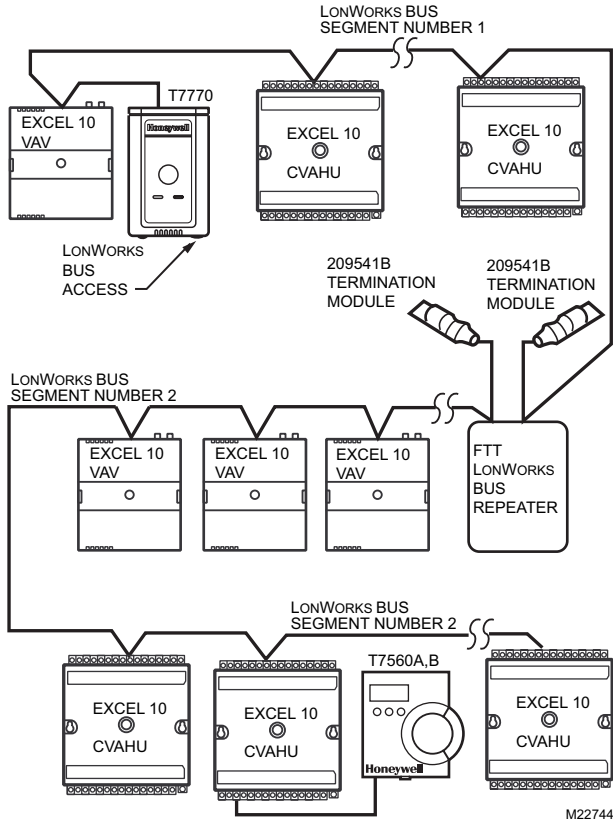


Fig. 20. Wiring layout for two singly terminated LONWORKS® Bus segments.

Power Wiring

A power budget must be calculated for each Excel 10 W7750 Controller to determine the required transformer size for proper operation. A power budget is simply the summing of the maximum power draw ratings (in VA) of all the devices to be controlled by an Excel 10 W7750 Controller. This includes the controller itself, the equipment actuators (ML6161, or other motors) and various contactors and transducers, as appropriate, for the Excel 10 configuration.

Power Budget Calculation Example

The following is an example power budget calculation for a typical Excel 10 W7750B Controller.

Assume a W7750 unit with a fan, two stages of D/X cooling, modulating steam valve for heating, and modulating economizer dampers. The power requirements are:

Device	VA	Information Obtained from
Excel 10 W7750B,C Controller	12.0	W7750 Specification Data
ML6161 Damper Actuator	2.2	TRADELINE® Catalog
R8242A Contactor for fan	21.0	TRADELINE® Catalog in-rush rating
D/X Stages	0.0	

NOTE: For this example, assume the cooling stage outputs are wired into a compressor control circuit and, therefore, have no impact on the power budget.)

M6410A Steam Heating Coil Valve 0.7 TRADELINE® Catalog, 0.32A at 24 Vac
 TOTAL: 35.9 VA

The Excel 10 System example requires 35.9 VA of peak power; therefore, a 40 VA AT72D Transformer is able to provide ample power for this controller and its accessories. Alternatively, a 75 VA AT88A Transformer could be used to power two Excel 10 Systems of this type, or a 100 VA AT92A Transformer could be used to power two of these Excel 10 Systems and meet NEC Class 2 restrictions (no greater than 100 VA). See Fig. 22 and 23 for illustrations of power wiring details. See Table 8 for VA ratings of various devices.

Table 8. VA Ratings For Transformer Sizing.

Device	Description	VA
W7750A	Excel 10 W7750 Controller	6.0
W7750B,C	Excel 10 W7750 Controllers	12.0
ML6161A/B	Damper Actuator, 35 lb-in.	2.2
R8242A	Contactors	21.0
M6410A	Valve Actuator	0.7
ML6464	Damper Actuator, 66 lb-in.	3.0
ML6474	Damper Actuator, 132 lb-in.	3.0
ML6185	Damper Actuator SR 50 lb-in.	12.0
ML7984B	PWM Valve Actuator	6.0

For contactors and similar devices, the in-rush power ratings should be used as the worst case values when performing power budget calculations. Also, the application engineer must consider the possible combinations of simultaneously energized outputs and calculate the VA ratings accordingly. The worst case, that uses the largest possible VA load, should be determined when sizing the transformer.

Line Loss

Excel 10 Controllers must receive a minimum supply voltage of 20 Vac. If long power or output wire runs are required, a voltage drop due to Ohms Law (I x R) line loss must be considered. This line loss can result in a significant increase in total power required and thereby affect transformer sizing. The following example is an I x R line-loss calculation for a 200 ft. (61m) run from the transformer to a W7750 Controller drawing 37 VA using two 18 AWG (1.0 mm²) wires.

The formula is:

$$\text{Loss} = [\text{length of round-trip wire run (ft.)}] \times [\text{resistance in wire (ohms per ft.)}] \times [\text{current in wire (amperes)}]$$

From specification data:

18 AWG twisted pair wire has 6.52 ohms per 1000 feet.

$$\text{Loss} = [(400 \text{ ft.}) \times (6.52/1000 \text{ ohms per ft.})] \times [(37 \text{ VA})/(24\text{V})] = 4.02 \text{ volts}$$

This means that four volts are going to be lost between the transformer and the controller; therefore, to assure the controller receives at least 20 volts, the transformer must output more than 24 volts. Because all transformer output voltage levels depend on the size of the connected load, a larger transformer outputs a higher voltage than a smaller one for a given load. Fig. 21 shows this voltage load dependence.

In the preceding I x R loss example, even though the controller load is only 37 VA, a standard 40 VA transformer is not sufficient due to the line loss. From Fig. 21, a 40 VA transformer is just under 100 percent loaded (for the 37 VA controller) and, therefore, has a secondary voltage of 22.9 volts. (Use the lower edge of the shaded zone in Fig. 21 that represents the worst case conditions.) When the I x R loss of four volts is subtracted, only 18.9 volts reaches the controller, which is not enough voltage for proper operation.

In this situation, the engineer basically has three alternatives:

1. Use a larger transformer; for example, if an 80 VA model is used, see Fig. 21, an output of 24.4 volts minus the four volt line loss supplies 20.4V to the controller. Although acceptable, the four-volt line-loss in this example is higher than recommended. See the following **IMPORTANT**.
2. Use heavier gauge wire for the power run. 14 AWG (2.0 mm²) wire has a resistance of 2.57 ohms per 1000 ft. which, using the preceding formula, gives a line-loss of only 1.58 volts (compared with 4.02 volts). This would allow a 40 VA transformer to be used. 14 AWG (2.0 mm²) wire is the recommended wire size for 24 Vac wiring.
3. Locate the transformer closer to the controller, thereby reducing the length of the wire run, and the line loss. The issue of line-loss is also important in the case of the output wiring connected to the Triac digital outputs. The same formula and method are used. The rule to remember is to keep all power and output wire runs as short as practical. When necessary, use heavier gauge wire, a bigger transformer, or install the transformer closer to the controller.

IMPORTANT

No installation should be designed where the line loss is greater than two volts to allow for nominal operation if the primary voltage drops to 102 Vac (120 Vac minus 15 percent).

To meet the National Electrical Manufacturers Association (NEMA) standards, a transformer must stay within the NEMA limits. The chart in Fig. 21 shows the required limits at various loads.

With 100 percent load, the transformer secondary must supply between 23 and 25 volts to meet the NEMA standard. When a purchased transformer meets the NEMA standard DC20-1986, the transformer voltage-regulating ability can be considered reliable. Compliance with the NEMA standard is voluntary.

The following Honeywell transformers meet this NEMA standard:

Transformer Type	VA Rating
AT20A	20

Transformer Type	VA Rating
AT40A	40
AT72D	40
AT87A	50
AK3310 Assembly	100

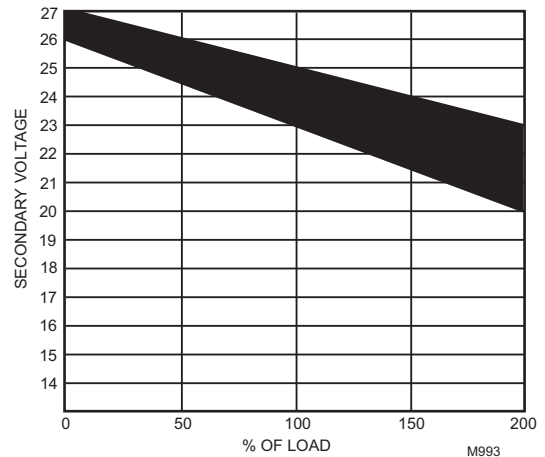


Fig. 21. NEMA class 2 transformer voltage output limits.

Attach earth ground to W7750 Controller terminal 1. See Fig. 22, 23, 24, and 27 through 35.

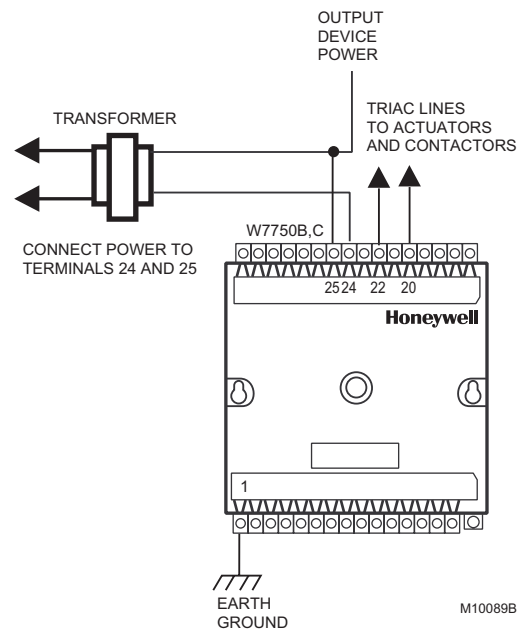


Fig. 22. Power wiring details for one Excel 10 per transformer.

See Fig. 23. for wiring more than one Excel 10 per transformer.


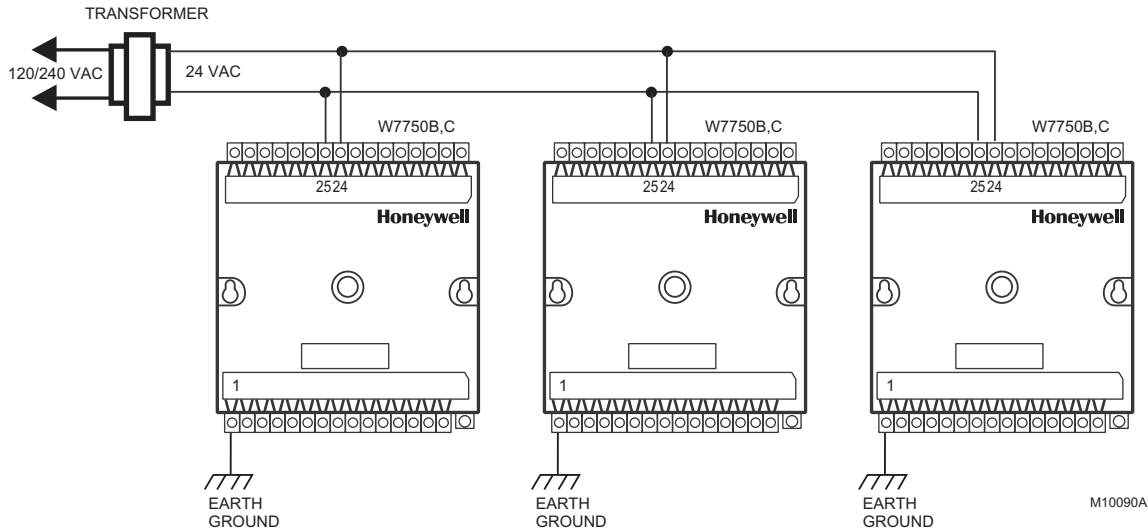


Fig. 23. Power wiring details for two or more Excel 10s per transformer.

IMPORTANT

If the W7750 Controller is used on **Heating and Cooling Equipment (UL 1995 U.S. only)** devices and the transformer primary power is more than 150 volts, connect the transformer secondary to earth ground, see Fig. 24.

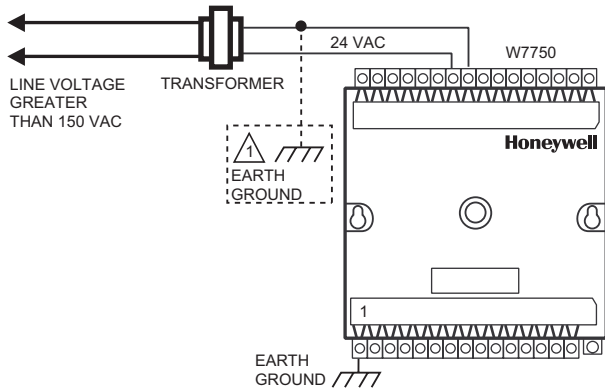

⚠ IF THE W7750 CONTROLLER IS USED IN UL 1995 EQUIPMENT AND THE PRIMARY POWER IS MORE THAN 150 VOLTS, GROUND 24 VAC COM SIDE OF TRANSFORMER SECONDARY. M10088A

Fig. 24. Transformer power wiring details for one Excel 10 used in UL 1995 equipment (U.S. only).

IMPORTANT

Notes on power wiring:

- All field wiring must conform to local codes and ordinances or as specified on installation wiring diagrams.
- To maintain NEC Class 2 and UL ratings, the installation must use transformers of 100 VA or less capacity.
- For multiple controllers operating from a single transformer, the same side of the transformer secondary must be connected to the same input terminal in each controller (21 on the W7750A and 24 on the W7750B,C) and the ground terminals must be connected to a verified earth ground for each controller in the group. See Fig. 23. (Controller configurations are not necessarily limited to three devices per transformer.)
- For the W7750B,C Controller (which has Triac outputs), all output devices must be powered from the same transformer as the one powering the Excel 10 W7750 Controller.
- Use the heaviest gauge wire available, up to 14 AWG (2.0 mm²) with a minimum of 18 AWG (1.0 mm²) for all power and earth ground connections.
- To minimize EMI noise, do not run Triac output wires in the same conduit as the input wires or the LONWORKS Bus communications wiring.
- Unswitched 24 Vac power wiring can be run in the same conduit as the LONWORKS Bus cable.
- Make earth ground connections with the shortest possible wire run using 14 AWG (2.0 mm²) wire. A good earth ground is essential for W7750 operation. Ideally, connect the earth ground to the ground bus at a motor control center or circuit breaker panel. However, if the nearest ideal earth ground is inaccessible, consider an alternate source for earth ground. Metal water pipe is generally a good ground, but do not use sprinkler pipe if prohibited by local codes. Attention must be given when duct work, conduit, or rebar are to be considered as ground sources. It is the responsibility of the installer to assure that these structures are tied back to a known earth ground.

Step 4. Prepare Wiring Diagrams

General Considerations

The purpose of this step is to assist the application engineer in developing job drawings to meet job specifications. Wiring details are included for the W7750A,B,C Controllers and the T7770 and T7560A,B Wall Modules. The drawings detail I/O, power, and LONWORKS Bus communication wiring connections.

NOTE: For field wiring, when two or more wires, other than 14 AWG (2.0 mm²) are to be attached to the same connector block terminal, be sure to twist them together. Deviation from this rule can result in improper electrical contact. See Fig. 25.

The connector block terminals on the W7750 Controllers and on the T7770 Wall Modules accept 14 through 22 AWG (2.0 to 0.34 mm²) wire. The connector block terminals on the T7560A,B Wall Modules accept 18 through 22 AWG (1.0 to 0.34 mm²) wire. Table 9 lists wiring types, sizes, and length restrictions for Excel 10 products.

Table 9. Field Wiring Reference Table (Honeywell listed as AK#### or equivalent).

Wire Function	Recommended Minimum Wire Size AWG (mm ²)	Construction	Specification or Requirement	Vendor Wire Type	Maximum Length ft. (m)
LONWORKS Bus (Plenum)	22 AWG (0.34 mm ²)	Twisted pair solid conductor, nonshielded or Echelon approved cable.	Level IV 140°F (60°C) rating	Honeywell AK3791 (one twisted pair) AK3792 (two twisted pairs)	Refer to LONWORKS Bus Wiring Guidelines for maximum length
LONWORKS Bus (Non-Plenum)	22 AWG (0.34 mm ²)	Twisted pair solid/stranded conductor, nonshielded or Echelon approved cable.	Level IV 140°F (60°C) rating	Honeywell AK3781 (one twisted pair) AK3782 (two twisted pairs) AK3798 (one twisted pair - stranded)	Refer to LONWORKS Bus Wiring Guidelines for maximum length
Input Wiring Sensors Contacts	18 to 22 AWG (1.0 to 0.34 mm ²)	Multiconductor (usually five-wire cable bundle). For runs >200 ft. (61m) in noisy EMI areas, use shielded cable.	140°F (60°C) rating	Standard thermostat wire	1000 ft. (305m) for 18 AWG 200 ft. (61m) for 22 AWG
Output Wiring Actuators Relays	14 AWG (2.0 mm ²) 18 AWG (1.0 mm ²) acceptable for short runs)	Any pair nonshielded (use heavier wire for longer runs).	NEC Class 2 140°F (60°C) rating	Honeywell AK3702 (18 AWG) AK3712 (16 AWG) AK3754 (14 AWG)	Limited by line-loss effects on power consumption. (See Line Loss subsection.)
Power Wiring	14 AWG (2.0 mm ²)	Any pair nonshielded (use heavier wire for longer runs).	NEC Class 2 140°F (60°C) rating	Honeywell AK3754 (14 AWG) twisted pair AK3909 (14 AWG) single conductor	Limited by line-loss effects on power consumption. (See Line Loss subsection.)

W7750 Controllers

Fig. 27 through 35 illustrate W7750A,B,C Controller wiring for various configurations. Connections to the wall module terminals (2 through 6) and the communications terminals (14

and 15) are made at terminal blocks. Connection for access to the LONWORKS Bus is provided by plugging the connector into the communications jack.

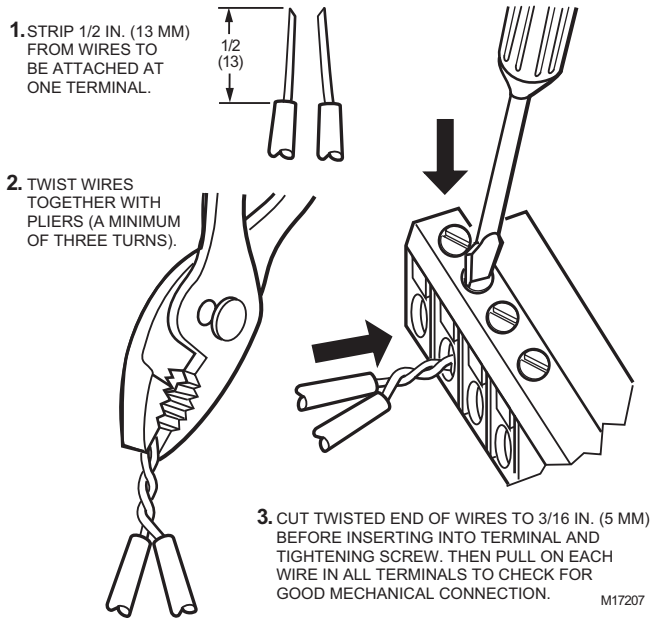


Fig. 25. Attaching two or more wires at terminal blocks.

The W7750B provides a jumper to select High-Side or Low-Side switching of the digital outputs. Fig. 26 shows the W7750B High-Side/Low-Side selectable switching. (See wiring diagrams, Fig. 30 through 34.)

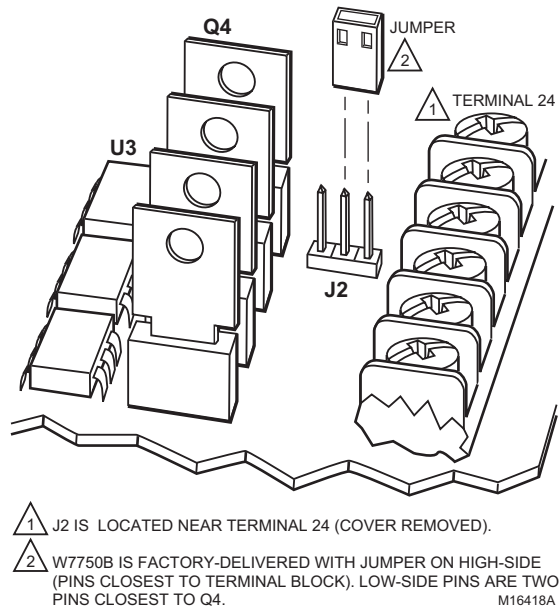


Fig. 26. W7750B High-Side/Low-Side selectable switching and jumper location (on W7750B2011 and W7750C).

NOTE: If an Excel 10 W7750A,B,C Controller is not connected to a good earth ground, the controller internal transient protection circuitry is compromised and the function of protecting the controller from noise and power line spikes cannot be fulfilled. This can result in a damaged circuit board and require replacing the controller.

See Table 10 for a description of the W7750A terminals.

Table 10. W7750A Version I/O Description.

Terminal	Terminal Number	Description
DO6-(W1)	31	Heat 1 (or Reversing Valve for a Heat Pump)
DO5-(W2)	30	Heat 2 (or Aux. Heat for a Heat Pump)
DO4-(Y1)	29	Cool 1 (or Compressor 1 for a Heat Pump)
DO3-(Y2)	28	Cool 2 (or Compressor 2 for a Heat Pump)
DO2-(G)	27	Fan
DO1-NET	26	Network Digital Output
DO1-NET	25	Network Digital Output (connect to terminal number 22 +24Vac)
Rc	24	Control power for relay contacts DO2 (G), DO3 (Y1) and DO4 (Y2)
Rh	23	Control power for relay contacts DO5 (W1) and DO6 (W2)
+24Vac (H)	22	Power for the controller
COM (N)	21	Return for power to controller
E-Bus	14 and 15	Echelon communications (LONWORKS Bus) screw terminals
DI - 2	12	Digital Input 2
DGND	11	Digital Ground
DGND	10	Digital Ground
DI - 1	9	Digital Input 1
AGND	8	Analog ground
AI - 1 OHM	7	Analog Input 1 (used for Discharge Air Temperature Sensor)
SET PT	6	Space temperature setpoint potentiometer
GROUND	5	Wall Module
SENSOR	4	Space temperature sensor
BYPASS	3	Space override button
LED	2	Space LED for indication of manual occupancy status
EARTH GND	1	Earth Ground

IMPORTANT

If the W7750A controller is configured by LONSPEC™ or Care, the outputs may be assigned in different order than the factory defaults. Use the Custom Wiring function to re-assign the outputs to the desired terminals.

The W7750B,C Versions are preconfigured with the same factory default setup as the W7750A Model; however, some terminals for wiring connections differ on the W7750B,C Models. See Fig. 30 for the terminal names on the W7750B Model and Fig. 35 for the terminal names on the W7750C Model. The factory default configuration of the digital output points on the W7750B,C Models follow (terminal names are from the W7750A):

Factory Default Digital Outputs

FREE 1 (OUT 1) DO1	NETWORK DO
(OUT 2) DO2	SUPPLY FAN START/STOP
(OUT 3) DO3	COOL_STAGE_2
(OUT 4) DO4	COOL_STAGE_1
(OUT 5) DO5	HEAT_STAGE_2
(OUT 6) DO6	HEAT_STAGE_1
DO7	UNUSED
DO8	UNUSED

The Wall Module terminals are identical for the W7750A,B,C Models.

The W7750B,C Models offers two voltage/current sensor input terminals. When current-type sensors (4 to 20 mA) are configured, the W7750B,C automatically switches a 249 ohm resistor into the sensing circuit; so no external resistor is required. The W7750A Model does not support voltage or current inputs.

NOTE: If using factory defaults, DI1 is local Time clock input, and the DI-2 input is configured for ScheduleMaster (nvoIO.SchedMaster). For a stand-alone unit, either connect an external time clock to terminals 9 and 10 or put a jumper on terminals 9 and 10 (using a jumper puts the controller in continuous occupied mode).

EXCEL 10 W7750A,B,C CONSTANT VOLUME AHU CONTROLLER

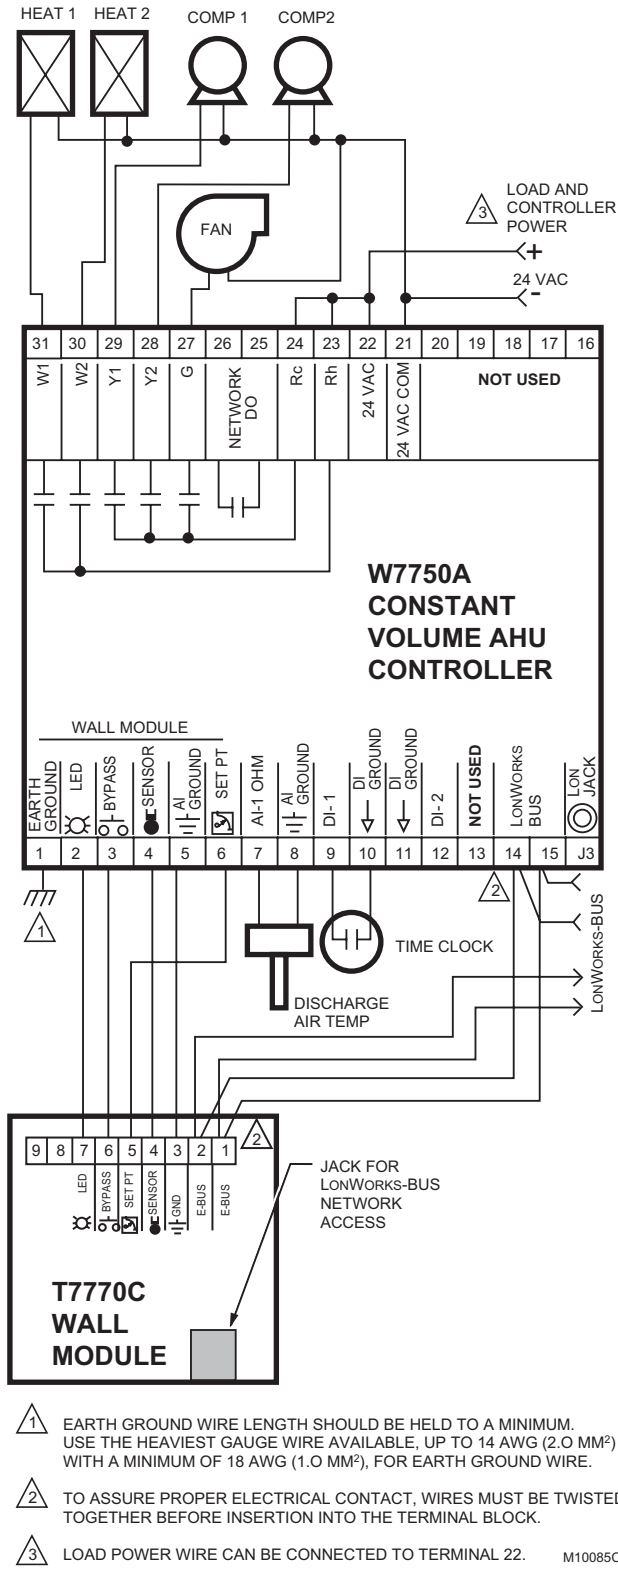


Fig. 27. Typical W7750A Controller AHU application wiring. (For more information on note 2, refer to Fig. 25.)


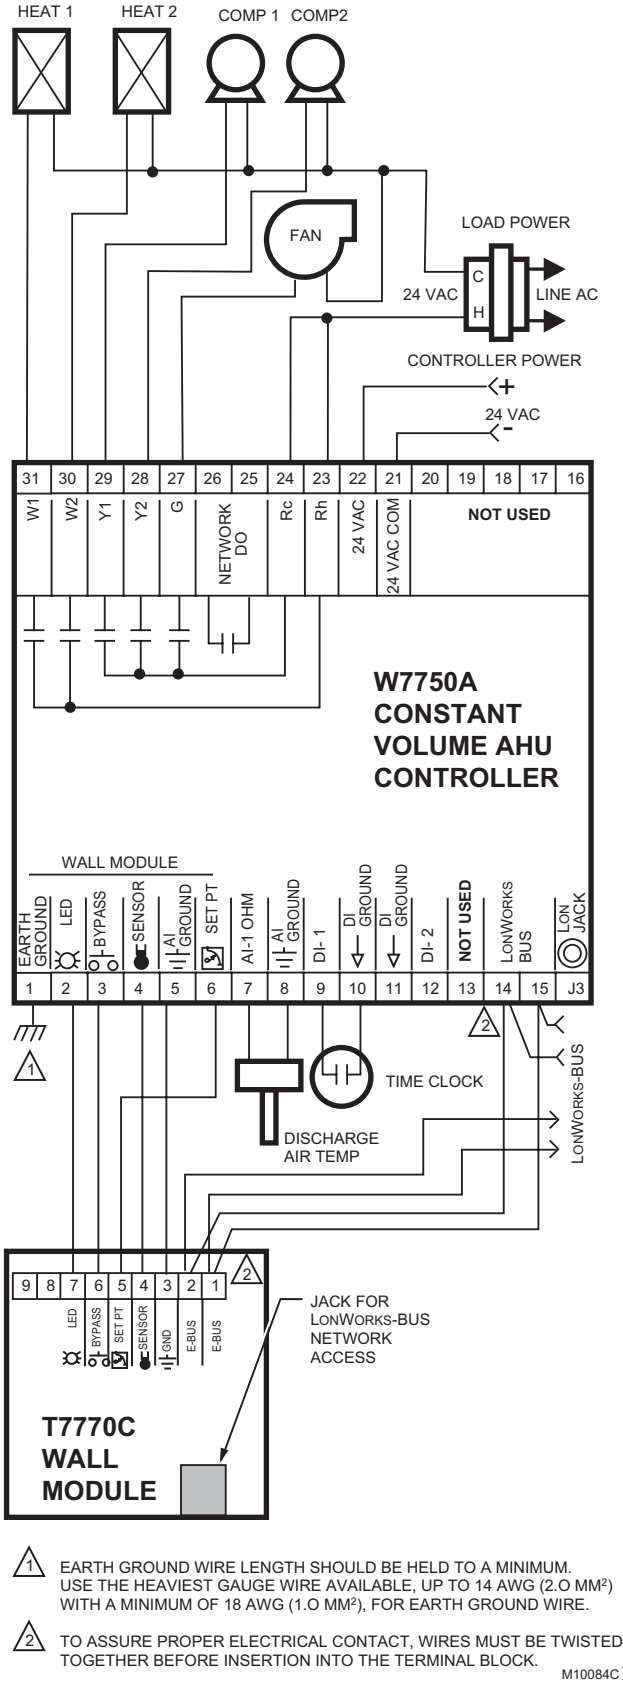



Fig. 28. Typical W7750A Controller with separate transformer application wiring. (For more information on note 2, refer to Fig. 25.)

NOTE: Digital outputs are configurable. The terminal locations for each function are user-selectable. The Network DO is configured to be economizer float close in this figure and W2 is configured to be economizer float open. Physical output terminal features are done in LONSPEC™/Care by the custom wiring function.

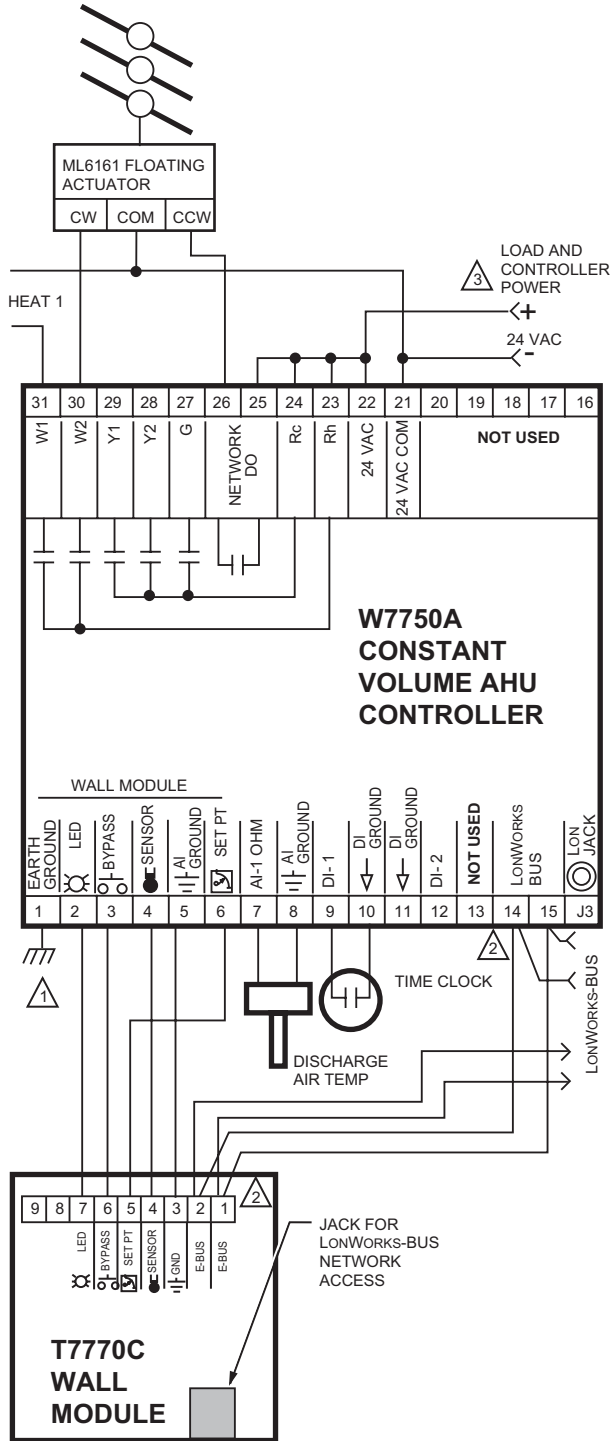

- ⚠ 1 EARTH GROUND WIRE LENGTH SHOULD BE HELD TO A MINIMUM. USE THE HEAVIEST GAUGE WIRE AVAILABLE, UP TO 14 AWG (2.0 MM²) WITH A MINIMUM OF 18 AWG (1.0 MM²), FOR EARTH GROUND WIRE.
- ⚠ 2 TO ASSURE PROPER ELECTRICAL CONTACT, WIRES MUST BE TWISTED TOGETHER BEFORE INSERTION INTO THE TERMINAL BLOCK.
- ⚠ 3 LOAD POWER WIRE CAN BE CONNECTED TO TERMINAL 22. M10083C


Fig. 29. W7750A Controller floating economizer damper wiring. (For more information on note 2, refer to Fig. 25.)

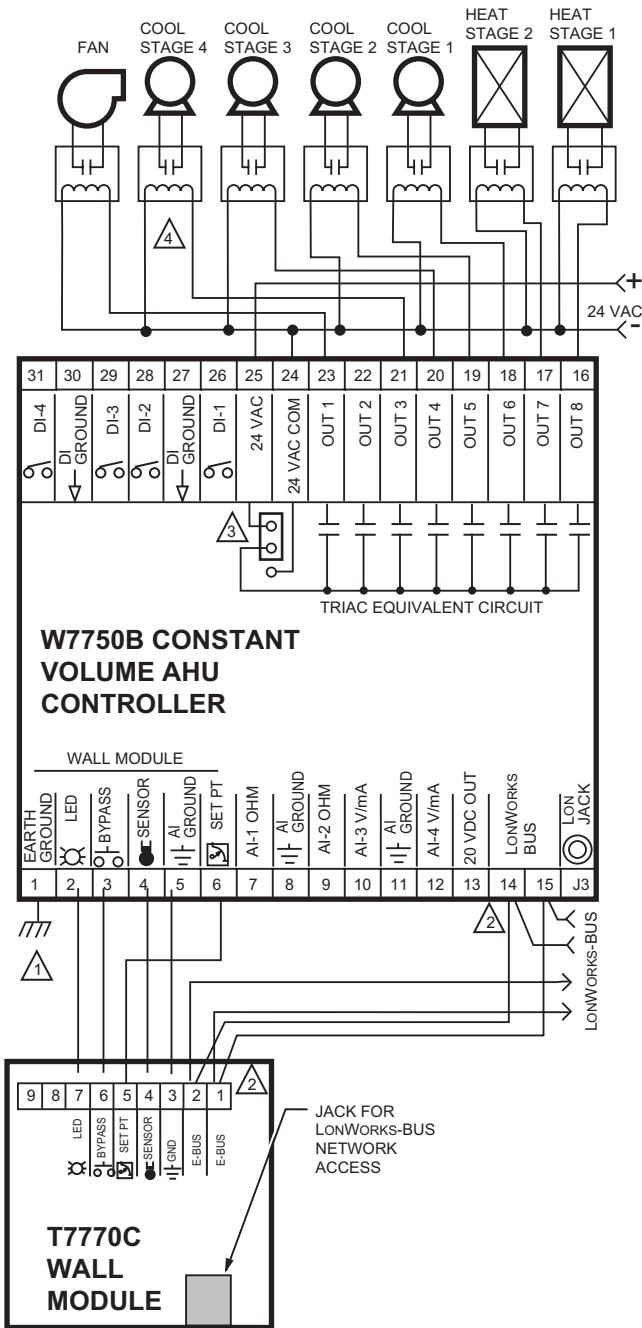

- 1 EARTH GROUND WIRE LENGTH SHOULD BE HELD TO A MINIMUM. USE THE HEAVIEST GAUGE WIRE AVAILABLE, UP TO 14 AWG (2.0 MM²) WITH A MINIMUM OF 18 AWG (1.0 MM²), FOR EARTH GROUND WIRE.
- 2 TO ASSURE PROPER ELECTRICAL CONTACT, WIRES MUST BE TWISTED TOGETHER BEFORE INSERTION INTO THE TERMINAL BLOCK.
- 3 WIRING DIAGRAM SHOWS JUMPER (FOR J2) IN FACTORY DEFAULT HIGH-SIDE POSITION.
- 4 ISOLATING RELAYS MUST BE USED WHEN CONNECTING TO STAGED HEAT/COOL EQUIPMENT.

M10082D

Fig. 30. Typical W7750B Controller with staged heating and cooling wiring. (For more information on note 2, refer to Fig. 25.)

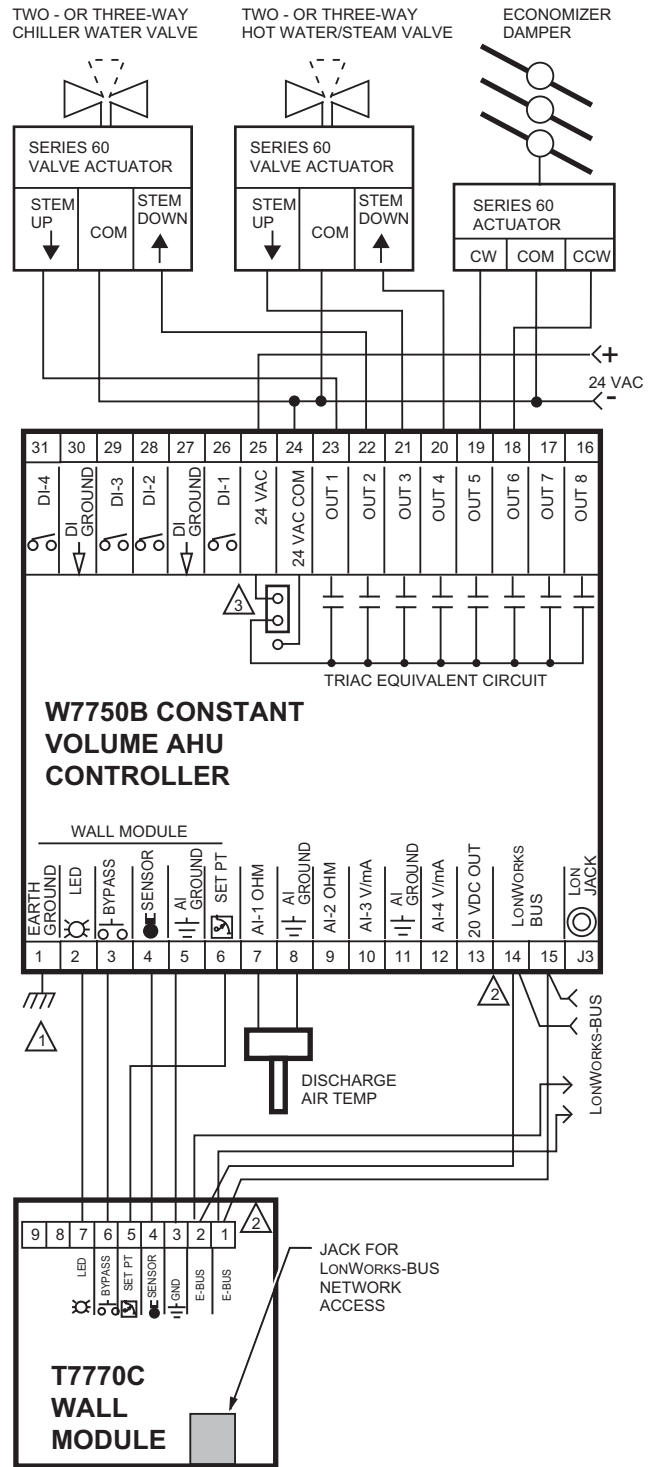

- 1 EARTH GROUND WIRE LENGTH SHOULD BE HELD TO A MINIMUM. USE THE HEAVIEST GAUGE WIRE AVAILABLE, UP TO 14 AWG (2.0 MM²) WITH A MINIMUM OF 18 AWG (1.0 MM²), FOR EARTH GROUND WIRE.
- 2 TO ASSURE PROPER ELECTRICAL CONTACT, WIRES MUST BE TWISTED TOGETHER BEFORE INSERTION INTO THE TERMINAL BLOCK.
- 3 WIRING DIAGRAM SHOWS JUMPER (FOR J2) IN FACTORY DEFAULT HIGH-SIDE POSITION.

M10081C

Fig. 31. W7750B Controller with floating heating, cooling and economizer wiring. (For more information on note 2, refer to Fig. 25.)

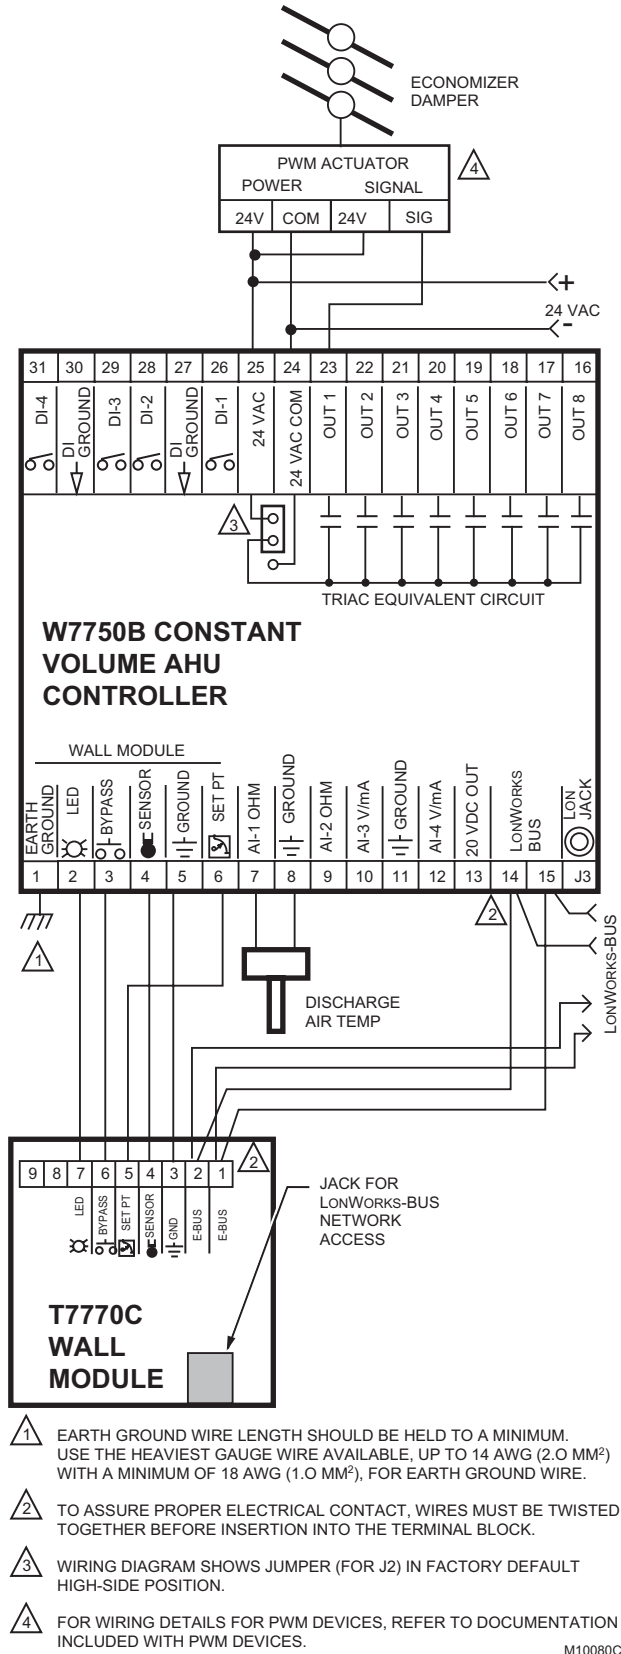


Fig. 32. W7750B,C Controller PWM damper actuator wiring. (For more information on note 2, refer to Fig. 25.)


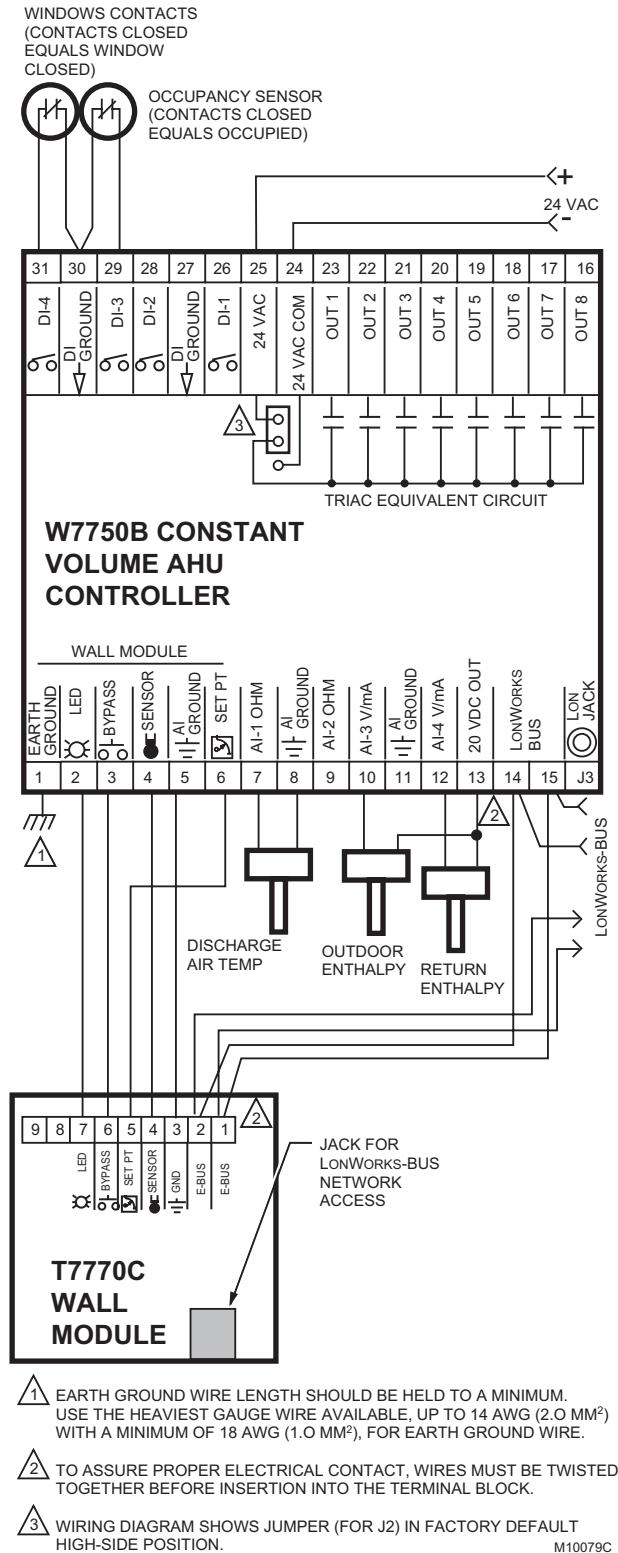


Fig. 33. W7750B,C wiring with 4 to 20 mA enthalpy sensors and digital inputs. (For more information on note 2, refer to Fig. 25.)


EXCEL 10 W7750A,B,C CONSTANT VOLUME AHU CONTROLLER

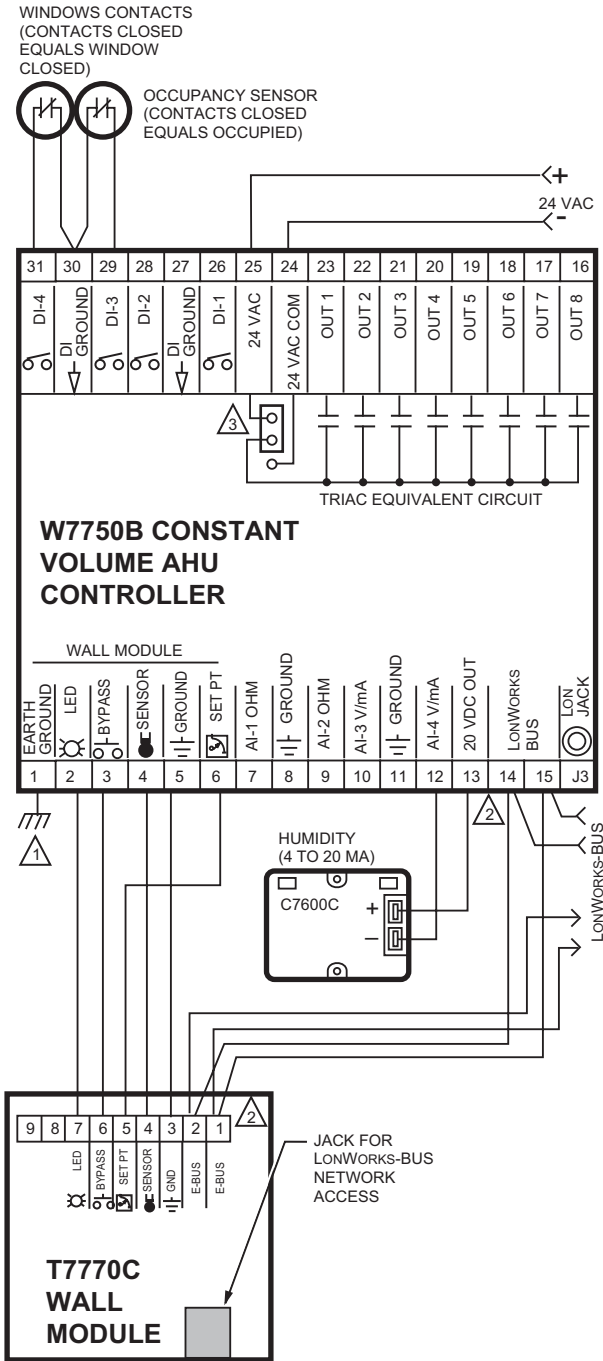

- ① EARTH GROUND WIRE LENGTH SHOULD BE HELD TO A MINIMUM. USE THE HEAVIEST GAUGE WIRE AVAILABLE, UP TO 14 AWG (2.0 MM²) WITH A MINIMUM OF 18 AWG (1.0 MM²), FOR EARTH GROUND WIRE.
- ② TO ASSURE PROPER ELECTRICAL CONTACT, WIRES MUST BE TWISTED TOGETHER BEFORE INSERTION INTO THE TERMINAL BLOCK.
- ③ WIRING DIAGRAM SHOWS JUMPER (FOR J2) IN FACTORY DEFAULT HIGH-SIDE POSITION.

M11619B

Fig. 34. W7750B,C wiring with C7600C 4 to 20 mA solid state humidity sensor.
(For more information on note 2, refer to Fig. 25.)

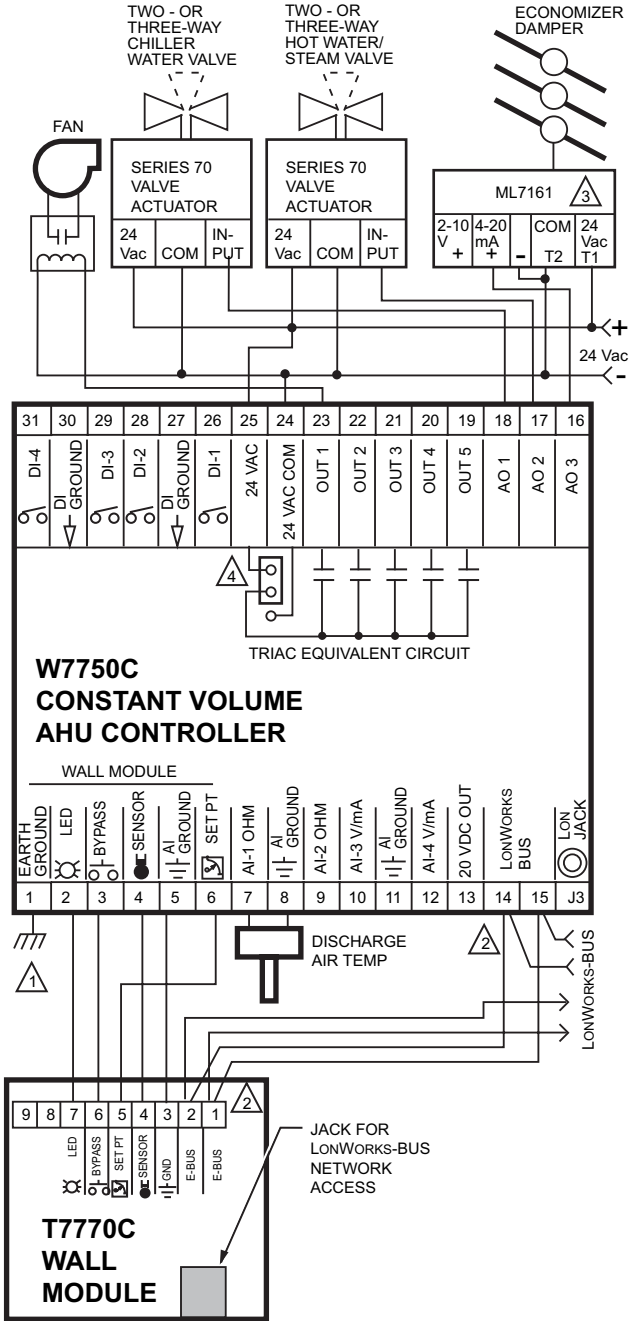


- ① EARTH GROUND WIRE LENGTH SHOULD BE HELD TO A MINIMUM. USE THE HEAVIEST GAUGE WIRE AVAILABLE, UP TO 14 AWG (2.0 MM²) WITH A MINIMUM OF 18 AWG (1.0 MM²), FOR EARTH GROUND WIRE.
- ② TO ASSURE PROPER ELECTRICAL CONTACT, WIRES MUST BE TWISTED TOGETHER BEFORE INSERTION INTO THE TERMINAL BLOCK.
- ③ IF AN ANALOG OUTPUT DEVICE HAS A SIGNAL COM (-) TERMINAL, CONNECT IT TO THE 24 VAC COM TERMINAL NUMBER 24.
- ④ WIRING DIAGRAM SHOWS JUMPER (FOR J2) IN FACTORY DEFAULT HIGH-SIDE POSITION.

M16417C

Fig. 35. W7750C Controller with 4 to 20 mA heating, cooling and economizer wiring. AOs must use terminals 16, 17 or 18. The AOs can be set to be reverse acting. (For more information on note 2, refer to Fig. 25.)

See Fig. 36 or 37 to wire a pneumatic transducer to a W7750B or W7750C.

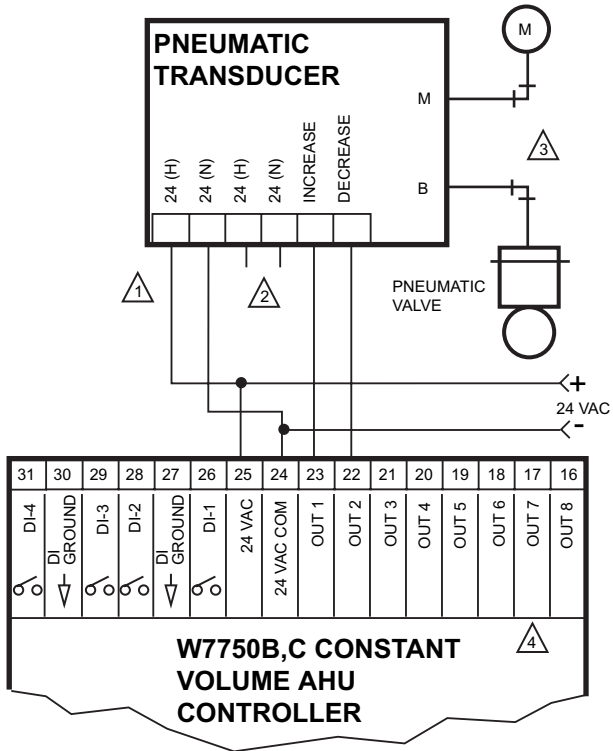


- 1 MAKE SURE ALL TRANSFORMER/POWER WIRING IS AS SHOWN; REVERSING TERMINATIONS RESULTS IN EQUIPMENT MALFUNCTION.
- 2 OPTIONAL 24 VAC WIRING TO NEXT CONTROLLER.
- 3 USE 1/4 IN (6 MM) PNEUMATIC TUBING. MINIMUM BRANCH LINE MUST BE 6 FT. (1.8M) OR LONGER.
- 4 W7750B SHOWN. TERMINALS 16,17,18 ARE DIGITAL OUTPUTS. M10078D

Fig. 36. Series 60 pneumatic transducer to W7750B,C.

To use the analog outputs on the W7750C with 2 to 10V actuators or transducers, a 500 ohm (1 percent or better tolerance) resistor must be placed across the 4 to 20 mA devices input and ground terminal. See Fig. 37 for an example. The resistor converts a 4 to 20 mA signal into a 2 to 10V signal.

NOTE: Wire the 500 ohm resistor physically as close as possible to the driven device. If the resistor is located far away from the driven device, it is possible that noise will be added onto the 2 to 10V signal to ground line. This noise could cause an actuator to re-position (jitter) and reduce the actuators life.

RP7517B PNEUMATIC TRANSDUCER

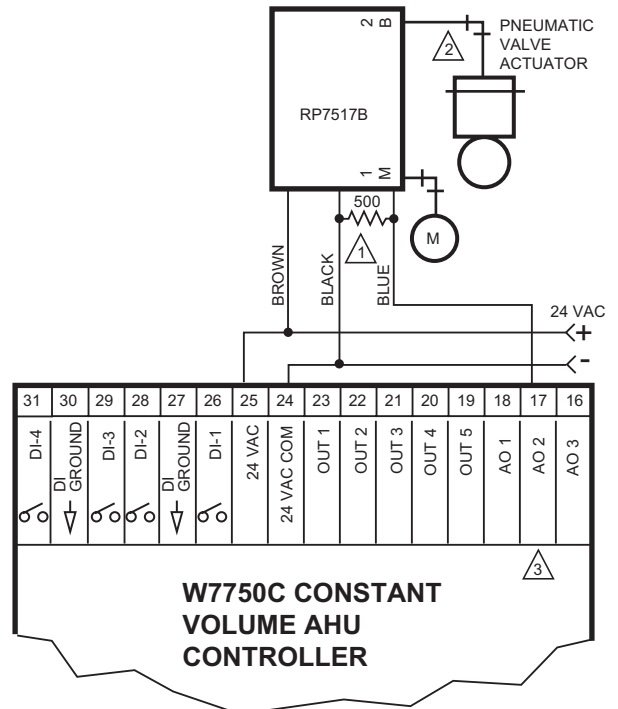

- 1 ANALOG OUTPUTS FROM W7750C ARE 4 TO 20 mA SIGNALS. A 500 OHM 1% TOLERANCE (OR BETTER) PRECISION RESISTOR IS REQUIRED TO DRIVE THIS (RP7517B) AND OTHER 2 TO 10V DEVICES. PLACE THIS RESISTOR AS CLOSE AS POSSIBLE TO THE DRIVEN DEVICE.
- 2 USE 1/4 IN (6 MM) PNEUMATIC TUBING. MINIMUM BRANCH LINE MUST BE 6 FT. (1.8M) OR LONGER.
- 3 TERMINALS 16 TO 18 ARE ANALOG OUTPUTS (W7750C ONLY). M17368

Fig. 37. RP7517B Pneumatic Transducer to W7750C.

LONWORKS® Bus Termination Module

One 209541B Excel 10 FTT Termination Module is required for a singly terminated LONWORKS Bus segment. Two 209541B Excel 10 FTT Termination Modules are required for a doubly terminated daisy-chain LONWORKS Bus segment (see Fig. 38). Refer to LONWORKS Bus Wiring Guidelines form, 74-2865 for termination module placement rules.

For 209541B Excel 10 FTT Termination module placement and wiring options, see Fig. 39.

EXCEL 10 W7750A,B,C CONSTANT VOLUME AHU CONTROLLER



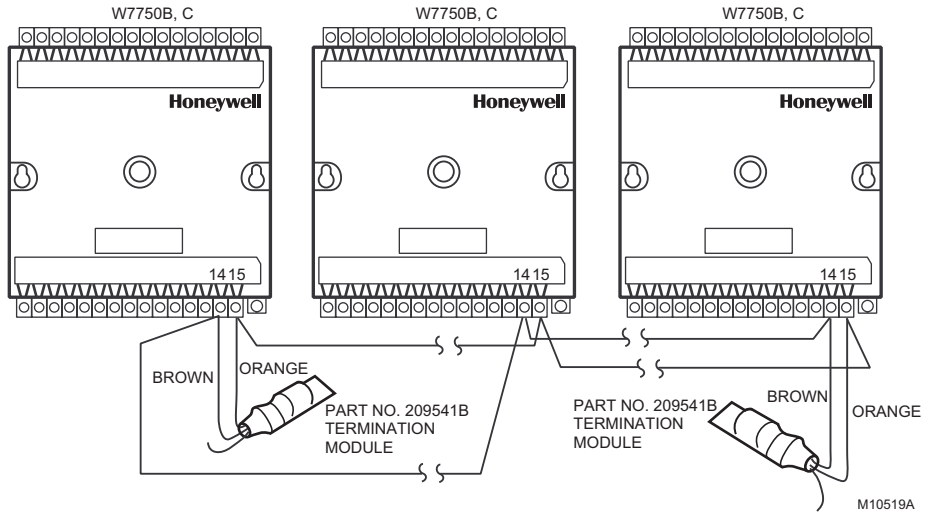



Fig. 38. Typical doubly terminated daisy-chain LONWORKS® Bus segment termination module wiring.

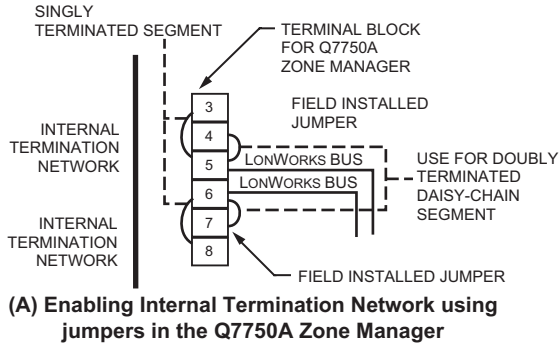

(A) Enabling Internal Termination Network using jumpers in the Q7750A Zone Manager

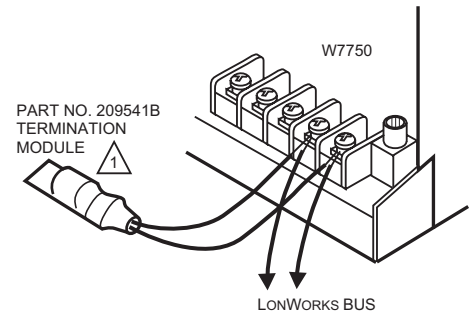


(B) Installing LonWorks Bus Termination Module at W7750

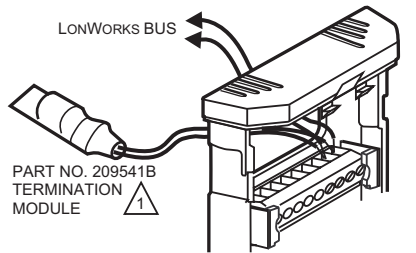


INSERT INTO TERMINALS 1 AND 2 WITH THE LONWORKS BUS WIRE. TERMINATION MODULE IS PHYSICALLY LOCATED BEHIND THE T7770 INSIDE THE 2 X 4 OR 60 MM BOX.

(C) LonWorks Bus Termination Module installed at 2 x 4 or 60 mm box-mounted T7770

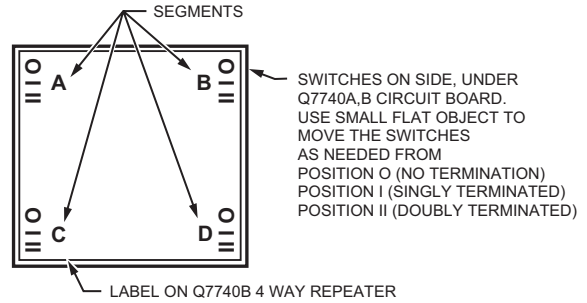


NOTE: Q7740B 4 WAY REPEATER SHOWN, Q7740A 2 WAY REPEATER HAS TWO SWITCHES.

(D) LonWorks Bus Termination network switches in the Q7740A, B Repeaters

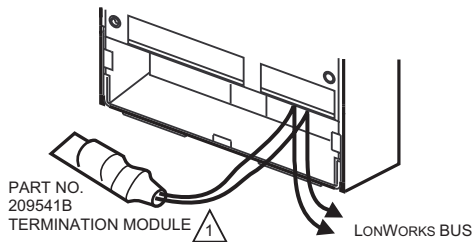

(E) Installing LonWorks Bus Termination Module at W7751H (terminals 11 and 12)

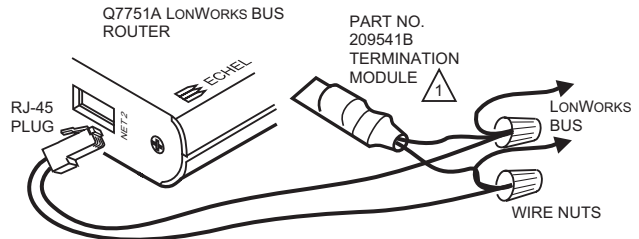

(F) Twist wires and attach wire nuts to RJ-45 Adapter cables, LonWorks Bus segment wires and Termination Module to connect to a Q7751A,B Router

1 209541B TERMINATION MODULE IS A THREE WIRE DEVICE. FOR SINGLE TERMINATED NETWORKS USE BROWN AND YELLOW LEADS. FOR DOUBLE TERMINATED NETWORKS USE BROWN AND ORANGE LEADS.

M11618B

Fig. 39. LONWORKS® Bus termination wiring options.

Step 5. Order Equipment

After compiling a bill of materials through completion of the previous application steps, refer to Table 11 for ordering information. Contact Honeywell for information about Controllers and Wall Modules with no logo. See Table 11. Excel 10 W7750 Controller Ordering Information.

Table 11. Excel 10 W7750 Controller Ordering Information.

Part Number	Product Description	Comments
Excel 10 W7750 Controllers:		
W7750A2005	Constant Volume AHU Controller (W7750A)	Three Analog Inputs, Three Digital Inputs and Six 24 Vac Relay Outputs
W7750B2011	Constant Volume AHU Controller (W7750B)	Six Analog Inputs, Five Digital Inputs and Eight (High-side Low-side switchable) Triac Outputs
W7750C2001	Constant Volume AHU Controller (W7750C)	Six Analog Inputs, Five Digital Inputs, Five Triac Outputs and Three Analog Outputs
Echelon Based Components and Parts:		
Q7750A2003	Excel 10 Zone Manager	Free Topology Transceiver (FTT)
Q7751A2002	Router	(FTT)
Q7751B2000	Router	Twisted Pair Transceiver (78 kbps) to FTT
Q7752A2001	Serial Interface	(FTT)
Q7752A2009	Serial Interface (PCMCIA card)	(FTT)
Q7740A1008	Excel 10 2-Way Repeater	Used to extend the length of the LONWORKS Bus. Contains built in termination modules.
Q7740B1006	Excel 10 4-Way Repeater	Used to extend the length of the LONWORKS Bus. Contains built in termination modules.
XD 505A	Standard C-Bus Communications Submodule	—
XD 508	C-Bus Communications Submodule (1 megabit baud rate)	—
209541B	Termination Module	One/two required per LONWORKS Bus segment
205979	Operator Terminal Cable for LONWORKS Bus	Serial interface to wall module or controller
T7770 and T7560 Wall Modules:		
T7770A1006	Sensor with Honeywell Logo	Used with Excel 5000 and Excel 10 Controllers
T7770A2004	Sensor, LONWORKS Jack and Honeywell Logo	Used with Excel 5000 and Excel 10 Controllers
T7770B1004	Sensor with Setpoint and LONWORKS Jack, Honeywell Logo	Degrees F Absolute
T7770B1046	Sensor with Setpoint and LONWORKS Jack, Honeywell Logo	Relative Setpoint
T7770B1020	Sensor with Setpoint and LONWORKS Jack, Honeywell Logo	Degrees C Absolute
T7770C1002	Sensor with Setpoint, Bypass/LED and LONWORKS Jack, Honeywell Logo	Degrees F Absolute
T7770C1044	Sensor with Setpoint, Bypass/LED and LONWORKS Jack, Honeywell Logo	Relative Setpoint
T7770C1010	Sensor with Setpoint, Bypass/LED and LONWORKS Jack, No Logo	Degrees F Absolute
T7770C1028	Sensor with Setpoint, Bypass/LED and LONWORKS Jack, Honeywell Logo	Degrees C Absolute
T7770C1051	Sensor with Setpoint, Bypass/LED and LONWORKS Jack, No Logo	Relative Setpoint
T7770D1000	Sensor with Bypass/LED and LONWORKS Jack, Honeywell Logo	Degrees F Absolute
T7560A1018	Digital Wall Module with Sensor, Setpoint and Bypass/LCD, Honeywell Logo	
T7560A1042	Digital Wall Module with Sensor, Setpoint and Bypass/LCD, Honeywell Logo	All White
T7560B1016	Digital Wall Module with Sensor, Setpoint, Bypass/LCD and Humidity, Honeywell Logo	
T7560B1032	Digital Wall Module with Sensor, Setpoint, Bypass/LCD and Humidity, Honeywell Logo	All White

Table 11. Excel 10 W7750 Controller Ordering Information. (Continued)

Part Number	Product Description	Comments
Temperature Sensors (Various Applications):		
C7041C2003	Duct Discharge/Return Air Sensor. 20K ohm	18 in. (457mm) insertion length.
C7041D2001	Hot or chilled Water Temperature Sensor. 20K ohm NTC	Use 50001774-001 Immersion Well
C7041F2006	Outside Air Temperature Sensor. 20K ohm NTC	W7750B,C only
C7041J2007	Averaging Discharge/Return Air Temperature Sensor. 20K ohm NTC	Duct element cord length 12 ft. (3.7m).
C7041B2005	Discharge/Return Air Temperature Sensor. 20K ohm NTC	Element length 6 in. (152 mm).
C7041B2013	Discharge/Return Air Temperature Sensor. 20K ohm NTC	Element length 12 in. (305 mm).
C7041K2005	Hot or chilled Water Temperature Sensor. 20K ohm NTC	Strap-on
C7100A1015	Averaging Discharge/Return Air Temperature Sensor. PT3000	13 in. (330mm) insertion length.
C7031G2014	Outdoor Air Temperature Sensor. PT3000	Weatherproof, 1/2 in. conduit knockout.
C7170A1002	Outdoor Air Temperature Sensor. PT3000	—
C7770A1006	Air Temperature Sensor. 20K ohm NTC nonlinearized	Duct-mounted sensor that functions as a primary and/or secondary sensor.
Sensors (CO₂, Humidity, Enthalpy, and Pressure):		
C7232A1008	CO ₂ Wall Mount Sensor/Monitor with display	Use to measure the levels of carbon dioxide
C7232A1016	CO ₂ Wall Mount Sensor/Monitor without display	Use to measure the levels of carbon dioxide
C7232B1006	CO ₂ Duct Mount Sensor/Monitor with display	Use to measure the levels of carbon dioxide
C7232B1014	CO ₂ Duct Mount Sensor/Monitor without display	Use to measure the levels of carbon dioxide
C7400A1004	Solid State Enthalpy Sensor (4 to 20 mA)	For outdoor and return air enthalpy
C7600B2008	Solid State Humidity Sensor (2 to 10 Vdc)	For wall mount air humidity
C7600C1008	Solid State Humidity Sensor (4 to 20 mA)	For outdoor and return air humidity
C7632A1004	Solid State Humidity Sensor without display	For wall mount air humidity
C7632B1002	Solid State Humidity Sensor without display	For duct mount air humidity
H7625A, H7635A	Solid State Humidity Sensor, wall mount	Includes a 20K ohm temperature sensor
H7625B, H7635B, H7655B	Solid State Humidity Sensor, duct mount	Includes a 20K ohm temperature sensor
H7635C	Solid State Humidity Sensor, outdoor mount	Includes a 20K ohm temperature sensor
P7640A,B	Pressure Sensor (4 to 20 mA), use 500 ohm resistor	Set for 0 to 5 in. w.c.
Accessories:		
ML7984B3000	Valve Actuator Pulse Width Modulation (PWM)	Use with V5011 or V5013 F and G Valves
ML6161B1000	Damper Actuator Series 60	—
M6410A	Valve Actuator Series 60	Use with V5852/V5853/V5862/V5863 Valves
ML684A1025	Versadrive Valve Actuator with linkage, Series 60	Use with V5011 and V5013 Valves
ML6464A1009	Direct Coupled Actuator, 66 lb-in. torque, Series 60	—
ML6474A1008	Direct Coupled Actuator, 132 lb-in. torque, Series 60	—
ML6185A1000	Direct Coupled Actuator, 50 lb-in. spring return	Series 60
V5852A/V5862A	Two-way terminal unit water valve; 0.19, 0.29, 0.47, 0.74, 1.2, and 1.9 C _v 1/2 in. npt (13 mm) or 2.9 and 4.9 C _v 3/4 in. npt (19 mm)	Use with M6410 Valve Actuator. Close-off rating for 0.19 to 1.9 C _v is 65 psi; for 2.9 and 4.9, C _v is 45 psi. (Coefficient of volume or capacity index C _v = gallons per minute divided by the square root of the pressure drop across the valve.)

Table 11. Excel 10 W7750 Controller Ordering Information. (Continued)

Part Number	Product Description	Comments
V5853A/V5863A	Three-way mixing terminal unit hot water valve; 0.19, 0.29, 0.47, 0.74, 1.2, and 1.9 C _v 1/2 in. npt (13 mm) or 2.9 and 4.9 C _v 3/4 in. npt (19 mm)	Use with M6410 Valve Actuator. Close-off rating for 0.19 to 0.74 C _v is 55 psi; 1.2 and 1.9 C _v is 22 psi; 2.9 and 4.9 C _v is 26 psi.
R8242A	Contactors, 24 Vac coil, DPDT	—
AT72D, AT88A, AK3310, etc.	Transformers	—
EN 50 022	DIN rail 35 mm by 7.5 mm (1-3/8 in. by 5/16 in.)	Obtain locally: Each controller requires 5 in.
—	Two DIN rail adapters	Obtain locally: Part number TKAD, from Thomas and Betts, two for each controller.
Cabling:		
—	Serial Interface Cable, male DB-9 to female DB-9 or female DB-25.	Obtain locally from any computer hardware vendor.
Honeywell AK3791 (one twisted pair) AK3792 (two twisted pairs)	LONWORKS Bus (plenum): 22 AWG (0.34 mm ²) twisted pair solid conductor, nonshielded or Echelon approved cable.	Level IV 140°F (60°C) rating
Honeywell AK3781 (one twisted pair) AK3782 (two twisted pairs)	LONWORKS Bus (nonplenum): 22 AWG (0.34 mm ²) twisted pair solid conductor, nonshielded or Echelon approved cable.	Level IV 140°F (60°C) rating
Honeywell AK3725	Inputs: 18 AWG (1.0 mm ²) five wire cable bundle	Standard thermostat wire
Honeywell AK3752 (typical or equivalent)	Outputs/Power: 14 to 18 AWG (2.0 to 1.0 mm ²)	NEC Class 2 140°F (60°C) rating
Honeywell AK3702 (typical or equivalent)	18 AWG (1.0 mm ²) twisted pair	Non-plenum
Honeywell AK3712 (typical or equivalent)	16 AWG (1.3 mm ²) twisted pair	Non-plenum
Honeywell AK3754 (typical or equivalent)	14 AWG (2.0 mm ²) two conductor	Non-plenum

Step 6. Configure Controllers

LONSPEC™ or Care PC Software is used to configure W7750 Controllers to match their intended application. Refer to the LONSPEC™ 74-2937 or Care 74-5587 User Guides for details on operating the PC software.

W7750 Controllers are shipped from the factory with a default hardware configuration. On power-up, the controller configuration parameters are set to the default values listed in

Table 20 in Appendix C. The controller can operate normally in this mode (if the equipment and wiring match the default setup), and given valid sensor inputs, the outputs are controlled appropriately to maintain space temperature at the default setpoint. The default I/O arrangement for the W7750A is printed on the terminal labels. Also see the wiring details in Fig. 27 in Step 4, Prepare Wiring Diagrams. The labeled I/O terminals are defined in Table 10.

Step 7. Troubleshooting

Troubleshooting Excel 10 Controllers and Wall Modules

In addition to the following information, refer to the Installation Instructions and Checkout and Test manual for each product. Most products have a Checkout and Test section in their Installation Instructions manual. If not, look for a separate Checkout and Test manual. See the Applicable Literature section for form numbers.

1. Check the version numbers of the controller firmware.
2. Check the wiring to the power supply and make sure there is a good earth ground to the controller.
3. Check the occupancy and HVAC modes.

4. Compare the current actual setpoint with the actual space temperature.
5. Check the desired configuration settings.
6. Check the network wiring and type of wire used.
7. Check the bindings and referred points.

NOTE: If the fan shuts off periodically for no specific reason and the controller restarts the fan by itself after about 20 to 60 seconds, the cause could be a bad Air Flow switch. If the controller has a digital input assigned as a Proof of Air Flow input, try unconfiguring this digital input to see if these shutdowns continue. If not, adjust or replace the Air Flow switch to get it working.

Temperature Sensor and Setpoint Potentiometer Resistance Ranges

The T7770 or T7560A,B Wall Modules or the C7770A Air Temperature Sensor has the following specified calibration points, which are plotted in Fig. 40:

Temperature (°F)	Resistance Value (ohms)
98	11755
80	18478
70	24028
60	31525
42	52675

The T7770 Wall Module setpoint potentiometers have the following linear calibration points:

Temperature (°F)	Resistance Value (ohms)
85	1426
70	5500
55	9574

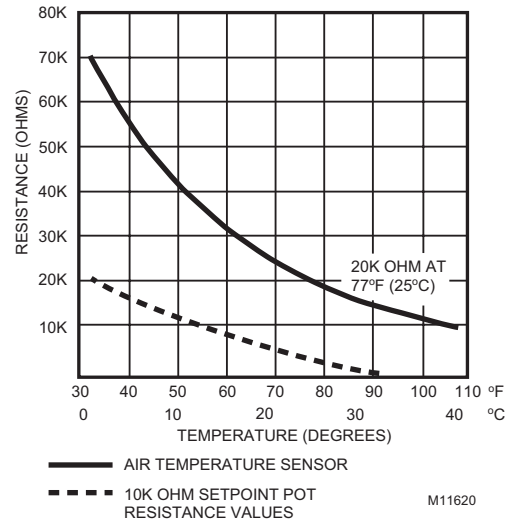


Fig. 40. Temperature sensor resistance plots.

NOTE: 10K ohm values apply to the T7770A3xxx Sensors.

Alarms

When an Excel 10 has an alarm condition, it reports it to the central node on the LONWORKS Bus (typically, the Excel 15A Building Manager or the Excel 10 Zone Manager). See Table 12. Information contained in an alarm message is:

- Subnet Number:
LONWORKS Bus subnet that contains the Excel 10 node that has the alarm condition.
- Node Number:
Excel 10 node that has the alarm condition (see Network Alarm).
- Alarm Type:
Specific alarm being issued. An Excel 10 can provide the alarm types listed in Table 12.

Table 12. Excel 10 Alarms.

Name of alarm or error bit	Alarm type number	Meaning of alarm code or error bit
RETURN_TO_NORMAL	128U	Return to no alarm after being in an alarm condition. This code is added numerically to another alarm code to indicate that the alarm condition has returned to normal.
ALARM_NOTIFY_DISABLED	255U	The alarm reporting was turned off by DestManMode. No more alarms are reported until DestManMode turns on alarm reporting or on application restart.
NO_ALARM	0	No alarms presently detected.
INPUT_NV_FAILURE	1	One or more NV inputs have failed in receiving an update within their specified FAILURE_DETECT_TIME.
NODE_DISABLED	2	The control algorithm has stopped because the controller is in DISABLED_MODE, MANUAL or FACTORY_TEST mode. No more alarms are reported when the controller is in the DISABLED_MODE. Alarms continue to be reported if the controller is in the MANUAL or FACTORY_TEST mode.
SENSOR_FAILURE	3	One or more sensors have failed.
FROST_PROTECTION_ALARM	4	The space temperature is below the frost alarm limit 42.8°F (6°C) when the mode is FREEZE_PROTECT. The alarm condition remains until the temperature exceeds the alarm limit plus hysteresis.
INVALID_SET_POINT	5	One of the setpoints is not in the valid range.
LOSS_OF_AIR_FLOW	6	The Fan Status DI indicates that there is no air flow when the node is commanding the fan to run. The control is shut down and disabled until power is cycled or the node is reset. See NOTE below. The alarm is not issued until FanFailTime seconds have elapsed since the loss-of-flow condition was first reported
DIRTY_FILTER	7	The pressure drop across the filter exceeds the limit and the filter requires maintenance. The control runs normally.
SMOKE_ALARM	8	The smoke detector has detected smoke and the node has entered an emergency state.
IAQ_OVERRIDE	9	The indoor air quality sensor has detected that the indoor air quality is less than the desired standard and additional outdoor air is being brought into the conditioned space.
LOW_LIM_ECON_CLOSE	10	The economizer has to close beyond the minimum position to prevent the discharge air temperature from going below the discharge temperature low limit.

NOTE: The node can be reset by switching the node to MANUAL and then to the normal operating mode (see Fan Operation in Appendix B).

Also, the Excel 10 variables, *AlarmLogX* where X is 1 through 5, that store the last five alarms to occur in the controller, are available. These points can be viewed through LONSPEC™ LONSTATION™ or Care.

Certain alarm conditions are suppressed conditionally as follows:

Broadcasting the Service Message

The Service Message allows a device on the LONWORKS Bus to be positively identified. The Service Message contains the controller ID number and, therefore, can be used to confirm the physical location of a particular Excel 10 in a building.

There are three methods of broadcasting the Service Message from an Excel 10 W7750 Controller. One uses a hardware service pin button on the side of the controller (see Fig. 41). The second uses the wall module pushbutton (see

Fig. 43 and 44). By pressing the wall module pushbutton for more than four seconds, the controller sends out the Service Message. The third involves using the PC Configuration tool, as follows.

When an *Assign ID* command is issued from the commissioning tool, the node goes into the SERVICE_MESSAGE mode for five minutes. In the SERVICE_MESSAGE mode, pressing the Occupancy Override button on the remote wall module (refer to Fig. 43 and 44 for override button location) causes the Service Message to be broadcast on the network. All other functions are normal in the SERVICE_MESSAGE mode. Even if an Excel 10 W7750 Controller does not have an Override button connected, it can broadcast the Service Message on the network by temporarily shorting the Controller Bypass Input terminal to the Sensor Ground terminal on the W7750A,B,C (short terminals 3 and 5).

The LONSPEC™ or Care PC tool is used to perform the ID Assignment task.

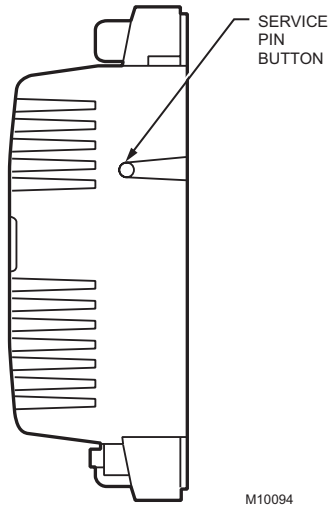


Fig. 41. Location of the Service Pin Button.

W7750 Controller Status LED

The LED on the front and center of a W7750 Controller provides a visual indication of the status of the device. See Fig. 42. When the W7750 receives power, the LED should appear in one of the following allowable states:

1. Off—no power to the processor.
2. Continuously On—processor is in initialized state.
3. Slow Blink—controlling, normal state.
4. Fast Blink—when the Excel 10 has an alarm condition.

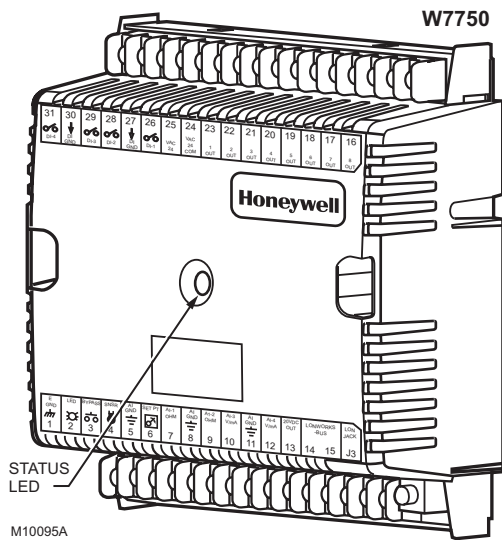


Fig. 42. LED location on W7750.

T7770C,D Wall Module Bypass Pushbutton and Override LED

Pressing the bypass pushbutton, located on the T7770C,D Wall Modules in Fig. 43, causes the override LED to display the Manual Override mode of the controller. The modes are:

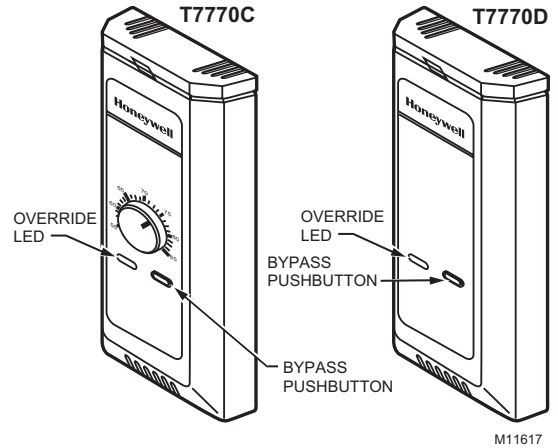


Fig. 43. The T7770C,D Wall Modules LED and Bypass pushbutton locations.

1. LED = Off. No override active.
2. LED = Continuously on. Bypass mode (timed Occupied override).
3. LED = One flash per second. Continuous Unoccupied override.
4. LED = Two flashes per second. Remote only, continuous Occupied override.

T7560A,B Bypass Pushbutton and LCD Display Occupancy Symbols

See Fig. 44 for the T7560A,B Digital Wall Module bypass pushbutton location.

Press and release the bypass pushbutton, located on the T7560A,B Digital Wall Modules in Fig. 44 for more than one second to cause the sun symbol on the bottom right side of the LCD display to appear. Pressing the bypass pushbutton for more than four seconds causes the controller, hard-wired to the T7560A,B, to go into continuous unoccupied override. The T7560A,B displays the moon symbol.

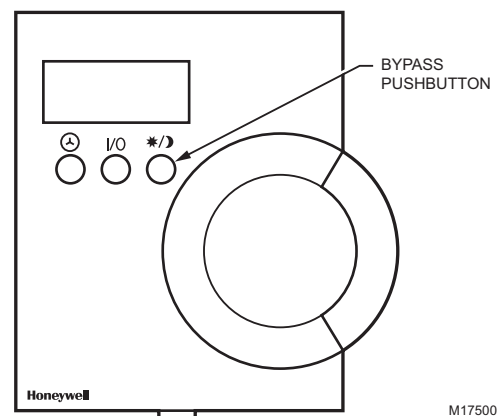


Fig. 44. T7560A,B Digital Wall Module Bypass pushbutton location.

APPENDICES

Appendix A: Using LONSPEC™/Care to Commission a W7750 Controller

NOTE: When commissioning a CVAHU W7750 Controller, the PC tool first checks that the actual hardware model (such as W7750A,B,C) is the same type which was selected from the Application Selection/Output tab. If the types do not match, the download does not occur and the user-entered values in the Application Selection screens all revert back to default values.

Sensor Calibration

The space temperature, the optional resistive and *voltage/current* (W7750B,C only) inputs can all be calibrated. The wall module setpoint potentiometer *can not* be calibrated.

Perform the sensor calibration by adding an offset value (either positive or negative) to the sensed value using LONSPEC™ or Care.

When calibrating voltage/current sensors on the (W7750B,C), the offset amount entered by the user is in volts, regardless of the inputs actual engineering units. See Appendix E for information on how to derive the proper voltage value to enter as an offset during calibration.

Setting the Pid Parameters

The W7750 is designed to control a wide variety of mechanical systems in many types of buildings. With this flexibility, it is necessary to verify the stability of the temperature control in each different type of application. Occasionally, the PID parameters require tuning to optimize comfort and smooth equipment operation. This applies to the W7750A,B,C Controllers.

CVAHU Controllers are configured by LONSPEC™ or Care with default values of PID parameters as shown in Appendix C Table 21. If different values for these parameters are desired, Table 13 lists some recommended values to use as a starting point. These recommended values are based on past experience with the applications and in most cases do not require further adjustment.

Table 13. Recommended Values For PID Parameters.

Equipment Configuration	Heat Prop. Gain	Heat Integ. Gain	Heat Deriv. Gain	Heat Control Band	Cool Prop. Gain	Cool Integ. Gain	Cool Deriv. Gain	Cool Control Band	Econ Control Band
Single Stage	2	3000	0	10	2	3000	0	10	10
Two Stages	3	2000	0	10	3	2000	0	10	10
Three Stages	4.5	1500	0	10	4.5	1500	0	10	10
Four Stages	6	1000	0	10	6	1000	0	10	10
Series 60 Modulating (Floating)	2	750	0	10	2	750	0	10	10
PWM Modulating	2	900	0	10	2	900	0	10	10

If the PID parameters require adjustment away from these values, *use caution* to ensure that equipment problems do not arise (see Important below). If any change to PID control parameters is made, the adjustments should be gradual. After each change, the system should be allowed to stabilize so the effects of the change can be accurately observed. Then further refinements can be made, as needed, until the system is operating as desired.

IMPORTANT

Making large or frequent changes to PID control parameters can cause equipment problems such as short cycling compressors (if stage minimum run times were disabled in User Addresses DisMinCITime or DisMinHtTime). Other problems that can occur include wide swings in space temperature and excessive overdriving of modulating outputs.

If adjustment of PID parameters is required, use the following. In the items that follow, the term, error, refers to the difference between the measured space temperature and the current actual space temperature setpoint.

- The **Proportional Gain** (also called Throttling Range) determines how much impact the error has on the output signal. Decreasing the Proportional Gain amplifies the effect of the error; that is, for a given error, a small Proportional Gain causes a higher output signal value.
- The **Integral Gain** (also called Integral Time) determines how much impact the error-over-time has on the output signal. Error-over-time has two components making up its value: the amount of time the error exists; and the size of the error. The higher the Integral Gain, the slower the control response. In other words, a decrease in Integral Gain causes a more rapid response in the output signal.
- The **Derivative Gain** (also called Derivative Time) determines how much impact the error rate has on the output signal. The error rate is how fast the error value is changing. It can also be the direction the space temperature is going, either toward or away from the setpoint, and its speed—quickly or slowly. A decrease in Derivative Gain causes a given error rate to have a larger effect on the output signal.
- The **Control Band** is used only for discharge temperature control of modulating outputs, which includes controlling the economizer dampers, and heating and cooling valves using Cascade Control. The Control Band dictates the

span through which the discharge temperature must travel to cause the output signal to go from fully closed to fully open. Also, 10 percent of the Control Band value is the size of the *deadband* around the setpoint where no actuator motion occurs. For example, if controlling a cooling valve with Cascade Control enabled and with the discharge temperature within 0.1 X DaTempCtrlBd of the discharge setpoint, there is no change in the current valve position. The smaller the Control Band, the more responsive the

control output. A larger Control Band causes more sluggish control. Be careful not to set the Control Band too low and cause large over or under shoots (hunting). This can happen if the space or discharge sensors or wiring are in noisy environments and the value reported to the controller is not stable (such that it bounces). The Control Band is used only in modulating control, and has no purpose when staged control is configured.

Appendix B: Sequences of Operation

This Appendix provides the control sequences of operation for the models of the Excel 10 W7750 CVAHU Controller. The W7750A,B,C Controllers can be configured to control a wide variety of possible equipment arrangements. Tables 14 and 15 (copied from Tables 3 and 4) summarize the available options. This Appendix provides a more detailed discussion of these options.

Common Operations

The Excel 10 W7750 Controller applications have many common operations that are applicable regardless of the type of heating, cooling, or economizer equipment configuration. These operations are available to the W7750A and the W7750B,C Versions of the CVAHU Controller, and the I/O and network configurations for them are summarized in Table 14.

Available input options are from the wall module and the hard-wired analog and digital inputs. Each application can have only a subset of these devices configured based on the number of physical I/O points available. However, some of the inputs are available over the LONWORKS Bus network.

NOTE: Each W7750 Controller *must* have a space temperature sensor input either wired directly to the controller, or shared from another LONWORKS Bus device, and must have a digital output configured for controlling the supply fan. In addition, if modulating economizer control is desired, a discharge air temperature sensor *must* be physically connected to the Excel 10 W7750 Controller. A discharge temperature signal *cannot* be brought into the controller through the LONWORKS Bus network.

Table 14. Common Configuration Options Summary For W7750A,B,C Controllers.

Option	Possible Configurations Common To All W7750 Models
Supply Fan	1. Mandatory Digital Output.
Type of Air Handler	1. Conventional. 2. Heat Pump.
Occupancy Sensor	1. None. 2. Connected: Contacts closed equals Occupied. 3. Network (Occ/Unocc signal received via the LONWORKS Bus network).
Window Sensor	1. None. 2. Physically Connected: Contacts closed equals window closed. 3. Network (Window Open/Closed signal received via the LONWORKS Bus).
Wall Module Option (The T7560A,B have an optional accessory for LONWORKS Bus access)	1. Local (direct wired to the controller). 2. Network (sensor value received via the LONWORKS Bus).
Wall Module Type All wall modules have a LONWORKS Bus access jack. (The T7560A,B requires an optional accessory.)	1. Sensor only. 2. Sensor and Setpoint adjust. 3. Sensor, Setpoint adjust and Bypass. 4. Sensor and Bypass.
Smoke Emergency Initiation	1. None. 2. Physically Connected: Contacts closed equals smoke detected. 3. Network (Emergency/Normal signal received via the LONWORKS Bus).

Table 15. Configuration Options Summary For W7750A,B,C Controllers.

Option	Possible Configurations for the W7750A Model	Possible Configurations for the W7750B,C Models
Type of Heating	1. One stage.	1. One stage.
	2. Two stages.	2. Two stages.
	3. Three stages.	3. Three stages.
	4. Four stages.	4. Four stages.
	5. None.	5. Series 60 Modulating electric valve, or pneumatic via transducer.
		6. Pulse Width Modulating electric valve, or pneumatic via transducer.
		7. None.
Type of Cooling	1. One stage.	1. One stage.
	2. Two stages.	2. Two stages.
	3. Three stages.	3. Three stages.
	4. Four stages.	4. Four stages.
	5. None.	5. Series 60 Modulating electric valve, or pneumatic via transducer.
		6. Pulse Width Modulating electric valve, or pneumatic via transducer.
		7. None.
Type of Economizer	1. Digital Output Enable/Disable signal for controlling an external economizer package.	1. Digital Output Enable/Disable signal for controlling an external economizer package.
	2. Series 60 Modulating electric damper motor, or pneumatic via transducer.	2. Series 60 Modulating electric damper motor, or pneumatic via transducer.
	3. None.	3. Pulse Width Modulating electric damper motor, or pneumatic via transducer.
		4. None.
IAQ Option	1. None.	1. None.
	2. Local IAQ Digital Input—directly wired to the controller. (Contacts closed means poor IAQ is detected.)	2. Local IAQ Digital Input—directly wired to the controller. (Contacts closed means poor IAQ is detected.)
	3. Network (IAQ Override signal received via the LONWORKS Bus).	3. Network (IAQ Override signal received via the LONWORKS Bus).
		4. Local CO ₂ Analog Input—directly wired to the controller. (The sensor must be a 0 to 10V device representing 0 to 2000 PPM CO ₂ .)
Coil Freeze Stat Option	1. None.	1. None.
	2. Local Coil Freeze Stat Digital Input—directly wired to the controller. (Contacts closed means that coil freeze condition is sensed.)	2. Local Coil Freeze Stat Digital Input—directly wired to the controller. (Contacts closed means that coil freeze condition is sensed.)
Filter Monitor Option	1. None.	1. None.
	2. Local Dirty Filter Digital Input—directly wired to the controller. (Contacts closed means that the filter is dirty.)	2. Local Dirty Filter Digital Input—directly wired to the controller. (Contacts closed means that the filter is dirty.)
		3. Local Analog Input for Differential Pressure across the Filter (directly wired to the controller). The sensor must be a 2 to 10V device representing 0 to 5 in. w.c. (1.25 kPa).

ROOM TEMPERATURE SENSOR (RmTemp)

This is the room space temperature sensor. This sensor is the T7770 or the T7560A,B Wall Module. When it is configured, it provides the temperature input for the W7750 temperature control loop. If it is not configured, it is required that a room temperature sensor value be transmitted from another

LONWORKS Bus device. If no valid room temperature value is available to the W7750 Controller, the temperature control algorithm in the controller is disabled, causing the heating, cooling, and economizer control outputs to be turned off. If the W7750 Controller is configured for Continuous Fan (rather

than Intermittent Fan (see Fan Operation in this Appendix), and the mode is Occupied when the RmTemp value becomes invalid, the fan continues to run.

REMOTE SETPOINT (RmtStptPot)

NOTE: Unocc heat and cool setpoints cannot be changed without the pc tool.

This is the Setpoint Potentiometer contained in the T7770 or the T7560A,B Wall Module. When configured, this occupant value is set to calculate the actual cooling or heating Occupied Setpoint. There are two options for how to calculate the actual setpoint to be used by the temperature control algorithm: (Offset) and (Absolute Middle). When SetPtKnob is set to Offset, the Wall Module setpoint knob represents a number from -9° to +9°F (-5° to +5°C) which is added to the software occupied setpoints for the heat and the cool modes (CoolOccSpt and HeatOccSpt). When SetPtKnob is set to Absolute Middle, the setpoint knob becomes the center of the Zero Energy Band (ZEB) between the cooling and heating occupied setpoints. The size of the ZEB is found by taking the difference between the software heating and cooling occupied setpoints; therefore, for Absolute Middle, the actual setpoints are found as follows:

$$\begin{aligned} \text{ActualCoolSpt} &= \text{RmtStptPot} + (\text{CoolOccSpt} - \text{HeatOccSpt}) / 2 \\ \text{ActualHeatSpt} &= \text{RmtStptPot} - (\text{CoolOccSpt} - \text{HeatOccSpt}) / 2 \end{aligned}$$

During Standby and Unoccupied times, the remote setpoint pot is not referenced, and the software setpoints for those modes are used instead.

SETPOINT LIMITS (LoSetptLim AND HiSetptLim)

Remote setpoint pot limits are provided by LoSetptLim and HiSetptLim. The occupied setpoints used in the control algorithms are limited by these parameters. When the setpoint knob is configured to be of type Absolute Middle, the lowest actual setpoint allowed is equal to LoSetptLim, and the highest actual setpoint allowed is equal to HiSetptLim. When the setpoint knob is configured to be an Offset type, the lowest actual setpoint allowed is equal to HeatOccSpt - LoSetptLim, and the highest allowed is equal to CoolOccSpt + HiSetptLim.

BYPASS MODE (StatusOvr AND StatusLed)

During Unoccupied periods, the facility occupant can request that Occupied temperature control setpoints be observed by depressing the Bypass pushbutton on the wall module. When activated, the controller remains in Bypass mode until:

1. Bypass Duration Setting has timed out (BypTime), or
2. User again presses the Wall Module pushbutton to switch off Bypass mode, or
3. Occupancy schedule (DestSchedOcc network input or TimeClckOcc digital input) switches the mode to Occupied.
4. User sets the DestManOcc network point to Not Assigned.

The LED on the T7770 Wall Module (Override LED) indicates the current bypass mode status (see the T7770C,D Wall Module Bypass Pushbutton and Override LED section). The LCD on the T7560 Digital Wall Module indicates the current bypass mode status (see the T7560A,B Digital Wall Module Bypass Pushbutton and LCD Occupancy Symbols section).

BypassTime

BypassTime is the time between the pressing of the override button at the wall module (or initiating OC_BYPASS via nviManOcc) and the return to the original occupancy state. When the bypass state has been activated, the bypass timer is set to BypassTime (default of 180 minutes).

OverrideType

OverrideType specifies the behavior of the override button on the wall module. There are three possible states that have the following meanings:

NONE disables the override button.

NORMAL causes the override button to set the OverRide state to OC_BYPASS for BypassTime (default 180 minutes), when the override button has been pressed for approximately 1 to 4 seconds, or to set the OverRide state to UNOCC when the button has been pressed for approximately 4 to 7 seconds. When the button is pressed longer than approximately 7 seconds, then the OverRide state is set to OC_NUL (no manual override is active).

BYPASS_ONLY causes the override button to set the OverRide state to OC_BYPASS for BypassTime (default 180 minutes), on the first press (1 to 7 seconds). On the next press, the OverRide state is set to OC_NUL (no manual over ride is active).

OverridePriority

OverridePriority configures the override arbitration between nviManOcc, nviBypass.state, and the wall module override button. There are two possible states which have the following meanings:

LAST specifies that the last command received from either the wall module or nviManOcc determines the effective override state.

NET specifies that when nviManOcc is not OC_NUL, then the effective occupancy is nviManOcc regardless of the wall module override state.

CYCLES PER HOUR (ubHeatCph AND ubCoolCph)


ubHeatCph specifies the mid-load number of on / off cycles per hour (default is 6), when the mode is HEAT. ubCoolCph specifies the mid-load number of on / off cycles per hour (default is 3), when the mode is COOL. This is to protect the mechanical equipment against short cycling causing excessive wear. In addition the cycle rate specifies the minimum on and off time according to Table 17.

T7770C,D OR T7560A,B WALL MODULE BYPASS PUSHBUTTON OPERATION

The Wall Module Bypass pushbutton is located on both the T7770C,D or the T7560A,B Wall Modules, see Fig. 43 and 44. The bypass pushbutton can change the controller into various occupancy modes, see Table 16.

Table 16. Bypass Pushbutton Operation.

If the pushbutton is held down for	But for not more than	The resulting mode is
Less than 1 second	—	No Override is active
1 second	4 seconds	Bypass (a timed Occupied Override)
4 seconds	7 seconds	Continuous Unoccupied Override

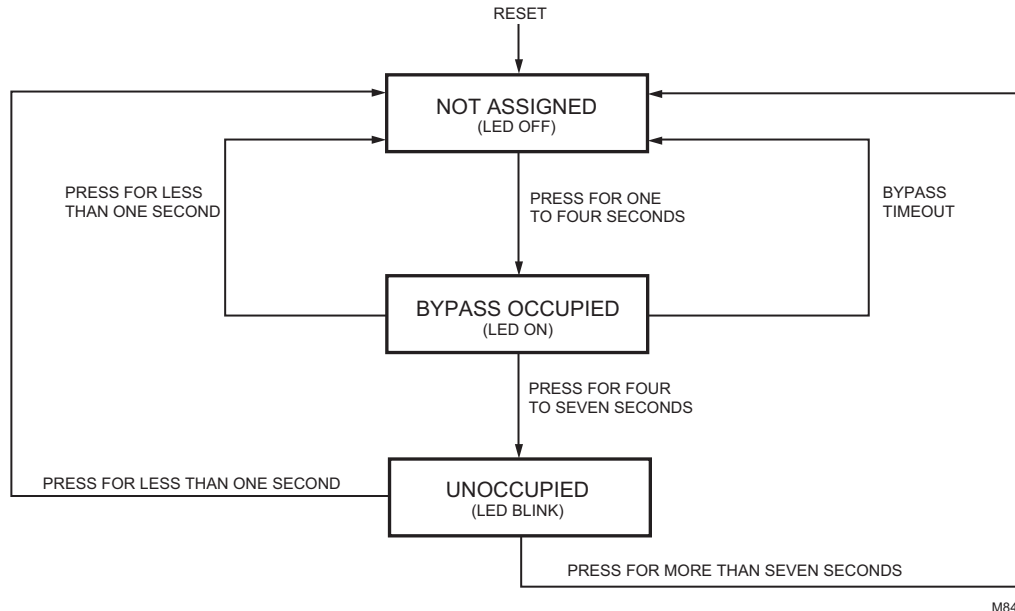

M8483A

NOTES: If the pushbutton is held down for longer than seven seconds, the controller reverts back to No Override and repeats the cycle above. See Fig. 45.

Continuous Occupied override mode can only be initiated remotely; that is, over the LONWORKS Bus network.

Fig. 45. LED and Bypass pushbutton operation.

STANDBY MODE (StatusOcySen)

The digital input for an occupancy sensor (usually a motion detector or possibly a time clock) provides the controller with a means to enter an energy-saving Standby mode whenever people are not in the room. Standby mode occurs when the scheduled occupancy is Occupied, and the occupancy sensor detects no people currently in the room (digital input contacts Closed means people are in the room, and contacts Open means the room is Unoccupied). When in Standby mode, the Excel 10 W7750 Controller uses the Standby Cooling Setpoint for cooling (CoolStbySpt), or the Standby Heating Setpoint for Heating (HeatStbySpt) as the Actual Space Temperature Setpoint. The occupancy sensor signal can also be a network input from another LONWORKS Bus device, so that no physical sensor is required at the receiving W7750 Controller.

IMPORTANT

When the W7750 Controller is in Standby mode, the economizer minimum position setting is not observed. This means the fresh air dampers will go fully closed if there is no call for cooling.

CONTINUOUS UNOCCUPIED MODE

This mode is entered when a wall module is configured with a Bypass pushbutton that was pressed for four to seven seconds causing the wall module LED/LCD to blink. This mode can also be entered via a network command (ManualOcc set to Unoccupied). If the controller is in this mode, it reverts to the Unoccupied setpoints for temperature control, and the economizer does not observe its minimum position setting. The controller remains in this mode indefinitely until the Bypass pushbutton is pressed to exit the mode or a network command is sent to clear the mode. A configuration parameter is available to disable wall-module initiation of Continuous Unoccupied mode (OvrType).

OCCUPANCY MODE AND MANUAL OVERRIDE ARBITRATION

The W7750 has multiple sources for occupancy schedule information and, therefore, it employs an arbitration scheme to determine the current actual mode. Time-of-day (TOD) schedule status comes from two sources, a configured digital input for OccTimeClock or the DestSchedOcc network input received from a central control. If the digital input source is configured, it has highest priority and determines the Occupancy mode. This digital input is either ON (shorted = occupied), OFF (open = unoccupied), or not active (not configured); otherwise, the status is determined by the DestSchedOcc input from the network source. The DestSchedOcc has three possible states, occupied, unoccupied or standby.

Manual Override Status can be derived from three sources and governed by two selectable arbitration schemes. The two schemes are:

- Network Wins or Last-in Wins, as set in OvrPriority.

The three sources of manual override status are:

- DestManOcc - Has possible states: Occupied, Unoccupied, Bypass, Standby and Not Assigned (not active). This input source has the highest priority in determining manual override status for a Network Wins arbitration scheme, and in the event there is more than one source change at a time in the Last-in Wins arbitration scheme. Here, bypass initiates a self-timed bypass of the control unit and expires upon completion of the defined timed period. The controller then treats the bypass status of this input as Not Assigned until the next change in status.

DestBypass - Has possible states: Bypass On, Bypass Off or Not Assigned (not active). This input places the controller in an *untimed* bypass state or turns off the bypass mode. This source is second in priority to DestManOcc under the same arbitration schemes mentioned above.

Override Button -The wall module Override pushbutton can command status of Bypass, Continuous Unoccupied and Not Assigned. This source has the lowest priority status in the above mentioned schemes. The above mention sources of override must be either Not Assigned or Off before the Override pushbutton affects the manual override status in the Network Wins scheme. All actions, in this case, taken from the Override pushbutton are locked out.

Bypass status is a controller-timed event whose duration is set in BypTime. Upon expiration of the timer, the status returns to Not Assigned. The status of this input can be overridden with the receipt of Not Assigned from DestManOcc. This, in effect, cancels a timed bypass or a continuous unoccupied mode.

The Override pushbutton can be configured as Normal (all of the above mentioned states are possible), Bypass Only (Bypass and Not Assigned only) or None (effectively Disabling the Override pushbutton).

TIME CLOCK (Occ_Time_Clock)

OccTimeClock is the state of the digital input configured and wired to a time clock. When the digital input is detected to be Closed (Occupied), the scheduled occupancy will be OC_OCCUPIED. If the detected state of the digital input is Open (Unoccupied), then the scheduled occupancy will be OC_UNOCCUPIED. If the Occ_Time_Clock is not configured, then either the DestSchedOcc network input received from a central control or the time clock that is broadcast from a Sched_Master configured W7750, controls the occupied mode.

SCHEDULE MASTER (Sched_Master)

Sched_Master is the state of a digital input that is configured and wired to the W7750. If the Sched_Master input is closed (input shorted), the node is the schedule master and the state of the locally connected time clock will be broadcast out over the LONWORKS Bus to the other W7750 controllers. If the Sched_Master input is open, then the node is not a schedule master and the local time clock will not be sent out over the LONWORKS Bus even if the time clock input is configured. However, the DestSchedOcc network input received from a central control has a higher priority than the local time clock, and therefore overrides the local time clock. The W7750 controllers automatically bind without the need for a configuration tool.

SETPOINT RAMPING

The W7750 Controller incorporates a ramping feature that gradually changes the space setpoints between occupancy modes. This feature is only operational if the network variable inputs DestSchedOcc, TodEventNext, and Time Until Next Change Of State (TUNCOS) are being used to change the W7750 Occupancy mode. The applicable Setpoints are OaTempMinHtRamp, OaTempMaxHtRamp, MinHtRamp and MaxHtRamp (for HEAT mode operation), and OaTempMinCIRamp, OaTempMaxCIRamp, MinCIRamp and MaxCIRamp (for the COOL mode operation). See Fig. 46 for a pictorial representation of how these setpoints interact.

During recovery operation, the setpoint changes at a rate in degrees per hour depending on the outdoor air temperature. If there is no outdoor air temperature sensor available, then MinHtRamp is used as the recovery rate.

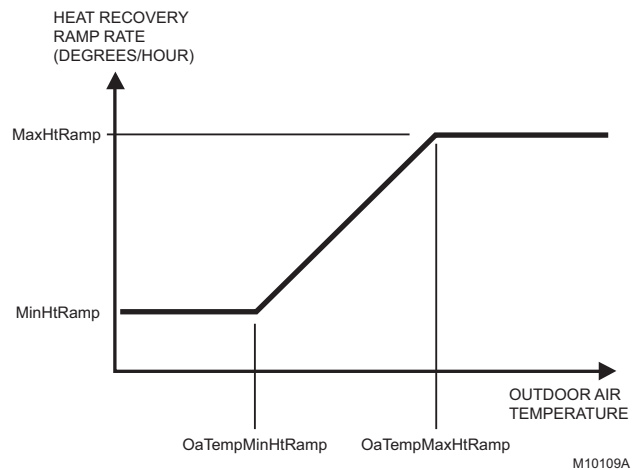


Fig. 46. Setpoint ramping parameters with ramp rate calculation.

NOTE: Recovery ramping applies between scheduled heating or cooling setpoint changes from UNOCCUPIED to STANDBY, UNOCCUPIED to OCCUPIED, and STANDBY to OCCUPIED. Scheduled setpoint changes from OCCUPIED to UNOCCUPIED or OCCUPIED to STANDBY do not use a ramped setpoint but instead use a step change in setpoint. Recovery ramps begin before the next scheduled occupancy time and are ramped from the setpoint for the existing scheduled occupancy state to the setpoint for the next occupancy state.

RECOVERY RAMPING FOR HEAT PUMP SYSTEMS

When the node is controlling heat pump equipment, during the recovery ramps, the heating setpoint is split into a heat pump setpoint (for compressors) and an auxiliary heat setpoint (for auxiliary heat stages). The heat pump setpoint is a step change at the recovery time prior to the OCCUPIED time. Recovery time is computed from the configured heat recovery ramp rate. The recovery time is calculated:
 Recovery time = (OCC setpoint - current setpoint)/ramp rate

See Fig. 47 for the various setpoints.

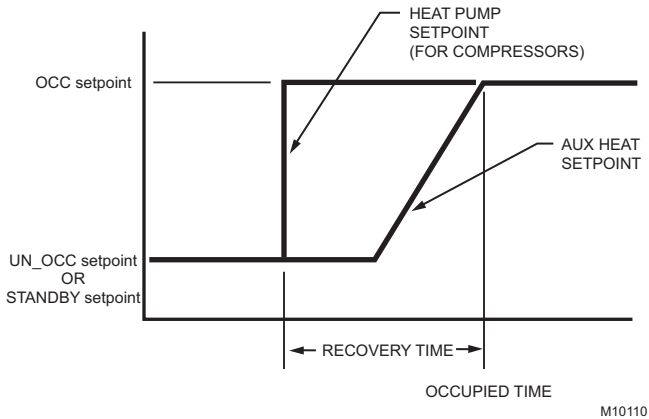


Fig. 47. Setpoint ramping parameters with setpoint calculation.

During the COOL recovery period, the setpoint changes at a rate in degrees per hour relative to the outdoor air temperature. If there is no outdoor air temperature sensor available, the MinCIRamp is used as the recovery rate.

See Fig. 48 for the various setpoints.

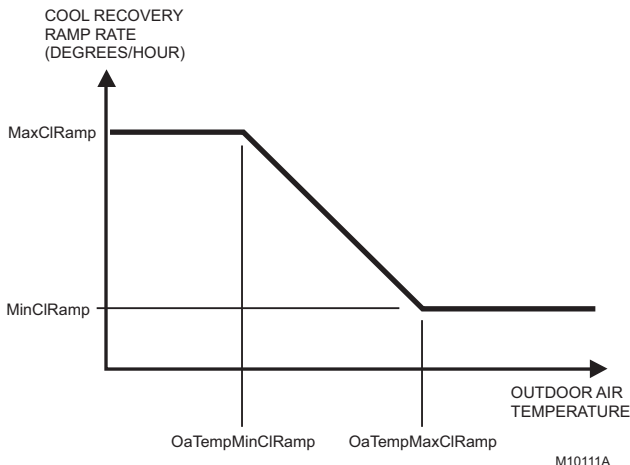


Fig. 48. Setpoint ramping parameters with ramp rate calculation.

NOTES: The setpoint used during the COOL recovery period is similar to the heat mode in Fig. 46, except the slope of the line reverses for cooling.

Recovery ramping applies between scheduled heating or cooling setpoint changes from UNOCCUPIED to STANDBY, UNOCCUPIED to OCCUPIED, and STANDBY to OCCUPIED. Scheduled setpoint changes from OCCUPIED to UNOCCUPIED or OCCUPIED to STANDBY do not use a ramped setpoint, but instead, use a step change in setpoint. Recovery ramps begin before the next scheduled occupancy time and are ramped from the setpoint for the existing scheduled occupancy state to the setpoint for the next occupancy state.

FAN OPERATION

The W7750 supply fan can be controlled in one of two different ways. In Continuous Fan mode, the fan runs whenever the controller is in Occupied mode. When in Standby or Unoccupied modes, the fan cycles on with a call for cooling (or heating if the FanOnHtMode parameter is set). In Intermittent Fan mode, the fan cycles on with a call for cooling (or heating if the FanOnHtMode parameter is set), and cycles off when the space temperature control is satisfied.

The fan control supports an optional (Proof of Air Flow) digital input, that allows monitoring of the supply fans status. If the fan is commanded on, the Proof of Air Flow digital input is checked up to three times to verify that the fan is running after an initial delay of FanOnDelay seconds (adjustable). If the fan fails to start the CVAHU must be reset by first cycling CVAHU power. If this does not work, set DestManMode to Manual and then back to Enable. After a reset the application restarts—all outputs switch off and auto control is enabled.

Also, the W7750 Controller provides fan-run-on operation that keeps the fan running for a short time after heating or cooling shuts off. The amount of time that the fan continues to run is set in FanRunOnHeat for heating mode and FanRunOnCool for cooling mode.

WINDOW SENSOR (StatusWndw)

The digital input for a window contact provides the algorithm with a means to disable its temperature control activities if someone has opened a window or door in the room. When a window is detected to be Open (digital input contacts Open equals window open), the normal temperature control is disabled, and the W7750 Controller enters the Freeze Protect mode. Freeze Protect mode sets the space setpoint to 46.4 °F (8°C) and brings on the fan and heat if the space temperature falls below this setpoint. Normal temperature control resumes on window closure. The Window sensor signal can also be a network input from another LONWORKS Bus device, so that no physical sensor is required at the receiving W7750 Controller.

SMOKE CONTROL

The Excel 10 W7750 Controller supports three smoke-related control strategies:

1. Emergency Shutdown (all outputs off).
2. Depressurize (fan on, outdoor air damper closed).
3. Pressurize (fan on, outdoor air damper open).

The controller is placed in one of these three control states whenever the W7750 mode becomes SMOKE_EMERGENCY, which can be initiated via a network command (DestEmergCmd) or from a local (physically connected) smoke detector digital input. When in SMOKE_EMERGENCY mode, the W7750 Controller uses the control strategy found in SmkCtlMode (one of the three listed above), and the normal temperature control function is disabled. If a W7750 local smoke detector trips, the SrcEmerg network variable (for other LONWORKS Bus devices to receive) is set to the Emergency state.

DEMAND LIMIT CONTROL (DLC)

When The LONWORKS Bus network receives a high-electrical-demand signal, the controller applies a DicBumpTemp amount to the current actual space temperature setpoint value. The setpoint is always adjusted in the energy-saving direction. This means that if the W7750 Controller is in Cooling mode, the DLC offset bumps the control point up, and when in Heating mode, bumps the control point down.

DIRTY FILTER MONITOR

The air filter in the air handler can be monitored by the W7750 and an alarm issued when the filter media needs replacement. The two methods of monitoring the filter are:

1. A differential pressure switch whose contacts are connected to a digital input on the W7750A or W7750B,C; and
2. A 2 to 10V differential pressure sensor wired to a current input on the W7750B,C. If the analog input sensor is used, its measured value 0 to 5 in. w.c. (0 to 1.25 kPa) is compared to a user-selectable setpoint (FiltrPressStPt—valid range: 0 to 5 in. w.c. (0 to 1.25 kPa)), and the Dirty Filter alarm is issued when the pressure drop across the filter exceeds the setpoint.

START-UP

START_UP_WAIT is the first mode after application restart or power-up. During START_UP_WAIT, the analog and digital inputs are being read for the first time, no control algorithms are active, and the physical outputs (fan and heat/cooling stages) are in the de-energized position. The node remains in

the START_UP_WAIT mode for a pseudo-random period (depending on neuron_id) between 12 and 22 seconds and then transitions to one of the operating modes, depending on the inputs that are read from the physical and network inputs. The pseudo random period prevents multiple controllers from simultaneously starting major electrical loads when power is restored to a building.

NOTES: After a controller download via LONSPEC™/Care, the delayed reset time is bypassed and the controller starts after a 40-second initialization.

Not all network inputs can be received during the START_UP_WAIT period because many network variables are updated at a slower rate; therefore some control decisions can be considered temporarily inappropriate.

Temperature Control Operations

See Fig. 49 for a diagram of a typical W7750 Unit.

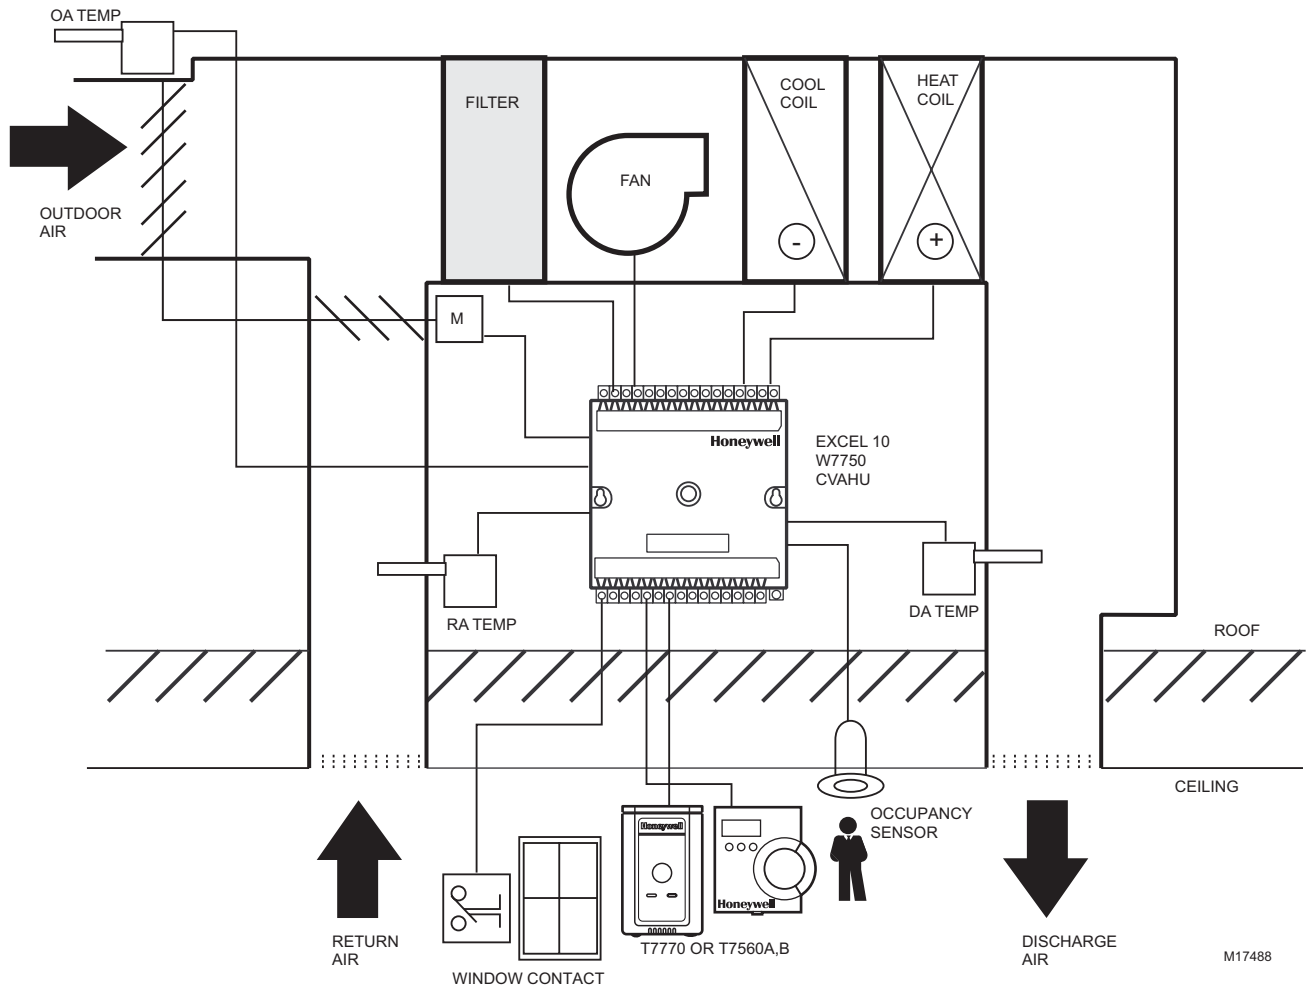


Fig. 49. Schematic diagram for a typical W7750B Unit.

STAGED COOLING CONTROL

The Excel 10 W7750 Controller supports up to four stages of D/X cooling. As space temperature rises above the current

Cooling Setpoint, the controllers mode of operation is switched to the COOL mode. When in the COOL mode, all heating outputs are driven closed or off (with the exception

that occurs during IAQ Override Operation, see above), and the staged cooling outputs are enabled for use. When in the COOL mode, the PID cooling control algorithm compares the current space temperature to the EffectiveCoolSetPt, and calculates a PID error signal. This error signal causes the cooling stage outputs to be cycled as required to drive the space temperature back to the setpoint. Fig. 50 illustrates the

relationship between PID error and staged output activity. As the error signal increases and the space temperature is getting farther away from setpoint, or is remaining above setpoint as time elapses, additional stages of cooling are energized until, if PID error reaches 100 percent, all configured stages are on.

NO. STAGES CONFIGURED \ PID ERROR	PID ERROR							
	0%	25%	33%	50%	66%	75%	100%	> 100%
ONE STAGE	CYCLING						ALL STAGES LOCKED ON	
TWO STAGES	STAGE 1 CYCLING			STAGE 1 LOCKED ON STAGE 2 CYCLING			ALL STAGES LOCKED ON	
THREE STAGES	STAGE 1 CYCLING		STAGE 1 LOCKED ON STAGE 2 CYCLING		STAGE 1,2 LOCKED ON STAGE 3 CYCLING		ALL STAGES LOCKED ON	
FOUR STAGES	STAGE 1 CYCLING	STAGE 1 LOCKED ON STAGE 2 CYCLING		STAGE 1,2 LOCKED ON STAGE 3 CYCLING		STAGE 1,2,3 LOCKED ON STAGE 4 CYCLING		ALL STAGES LOCKED ON

M10112

Fig. 50. Staged output control versus PID Error.

If economizer dampers are configured, and the outdoor air is suitable for free cooling, the economizer operates as the first stage of cooling. For example, if a controller was configured with two stages of mechanical cooling and an economizer, the application should be viewed in Fig. 50 as a *three-stage* system.

Setpoints for the PID gains allow for unit-by-unit adjustment of the control loop, if required; however, any change from the default values should be minimal.

The PID control algorithm used to control staged cooling is anticipator-driven, and is similar to the algorithm used in the T7300 commercial thermostat. All staging events are subject to a minimum interstage time delay, which is based on the cycles per hour user setting (CoolCycHr). The minimum interstage time delay ranges from 90 seconds (at 12 cycles per hour) to 8.5 minutes (at two cycles per hour), see Table 17. The user has the option to disable the minimum run timer (DisMinCITimer for cooling). If the minimum run timer is disabled, the interstage time delay is fixed at 20 seconds. The cycling rate is separately selectable for heating and cooling between 2 and 12 cycles per hour (cph).

Table 17. Interstage Minimum Times

Cycles/Hour Selection	Minimum On/Off time (Min.)
2	8.5
3	5.5
4	4.0
5	3.5
6	3.0
7	2.5
8	2.0
9	2.0
10	2.0
11	1.5
12	1.5

STAGED HEATING CONTROL

The Excel 10 W7750B,C Controller supports up to four stages of heating. As space temperature falls below the current Cooling Setpoint, the controller mode of operation is switched to the HEAT mode. When in the HEAT mode, all cooling outputs are driven closed or off, and the staged heating outputs are enabled for use. When in the HEAT mode, the PID cooling control algorithm compares the current space temperature to the EffectiveHeatSetPt, and calculates a PID error signal. This error signal causes the heating stage

outputs to be cycled, as required, to drive the space temperature back to the Setpoint. Fig. 50 illustrates the relationship between PID error and staged output activity.

As the error signal increases, the space temperature gets further away from the setpoint, or is remaining below the setpoint as time elapses, additional stages of heating are energized until, if PID error reaches 100 percent, all configured stages are on.

The PID control algorithm used to control staged heating is anticipator-driven, and is similar to the algorithm used in the T7300 commercial thermostat. All staging events are subject to a minimum interstage time delay, that is based on the cycles per hour user setting (HeatCycHr). The minimum interstage time delay ranges from 90 seconds (at 12 cycles per hour) to eight minutes (at two cycles per hour). See Table 17. The user has the option to disable the minimum run timer for heating (DisMinHrTimer). If the minimum run timer is disabled, the interstage time delay is fixed at 20 seconds. The cycling rate is separately selectable for heating and cooling between two and 12 cycles per hour (cph).

Setpoints for the PID gains allow for unit-by-unit adjustment of the control loop, if required; however, any change from the default values should be minimal.

CASCADE CONTROL OF MODULATING COOLING/HEATING

The Excel 10 W7750 Controller supports modulating cooling and heating valves. These valves can be controlled directly from the space temperature (like the staged control) or, if the CascCtrl flag is set, they are modulated to maintain the discharge air temperature at its setpoint. The discharge air setpoint is calculated based on the space temperature deviation from the space setpoint. This is commonly called cascade control. In the W7750 Controller, cascade control is available for use with PWM (W7750B,C only) and Series 60 modulating heating and cooling, but not for use with staged heating/cooling.

Setpoints for the PID gains and for the control band allow for unit-by-unit adjustment of the control loops, if required; however, any change from the default values should be minimal. Also, the W7750 Controller uses an adaptive algorithm (patent pending) to continuously assess the validity of the calculated discharge setpoint, and adjust it, as needed, to ensure precise, accurate control.

SERIES 60 MODULATING CONTROL

Series 60 Control is also commonly referred to as Floating Control. The Excel 10 W7750A,B,C Controllers can drive Series 60 type actuators (economizer only for W7750A) to control a modulating cooling valve, a heating valve, and economizer dampers. When floating control is used, the full-stroke motor drive time of the actuator must be entered into the configuration parameter CoolMtrSpd (for cooling), HeatMtrSpd (for heating), or EconMtrSpd (for the economizer dampers).

PULSE WIDTH MODULATING (PWM) CONTROL

The Excel 10 W7750B,C Controllers can drive a PWM-type actuator to control a modulating cooling valve, a heating valve, and economizer dampers. PWM control positions the actuator based on the length, in seconds, of the pulse from the digital output. The controller outputs a pulse whose length consists of two parts, a minimum and a maximum. The minimum pulse time represents the analog value of zero

percent (also indicates a signal presence) and the maximum pulse length that represents an analog value of 100 percent. If the analog value is greater than zero percent, an additional time is added to the minimum pulse time. The length of time added is directly proportional to the magnitude of the analog value. If PWM control is used, the configuration parameters for the PWM operation must be specified. These are PwmPeriod, PwmZeroScale, and PwmFullScale. These three parameters are shared by all configured PWM outputs; this means the heating, cooling, and economizer actuators must be configured to accept the same style of PWM signal.

Example: To find the pulse width of a valve actuator (for example stroke mid position - 50 percent) with the PwmZeroScale = 0.1 seconds, PwmFullScale = 25.5 seconds, and the PwmPeriod = 25.6 seconds. There are 256 increments available, so the number of increments required for 50 percent would be (0.5×256) or 128. The time for each increment for this industry standard pulse time is 0.1 seconds. The pulse width is the minimum time (0.1 second) + the number of increments (128 times the (0.1 second) plus 0.1) = 12.9 seconds. The W7750B,C Controllers would command the valve output on for 12.9 seconds for the PwmPeriod of 25.6 seconds to maintain the valve position at 50 percent.

OUTDOOR AIR LOCKOUT OF HEATING/COOLING

A mechanism is provided in the W7750 to disable the heating equipment if the outdoor air temperature rises above the OaTempHtLkOut setpoint. Similarly, the cooling equipment is disabled if the outdoor air temperature falls below the OaTempCilLkOut setpoint. The algorithm supplies a fixed 2°F (1.1°C) hysteresis with the lock-out control to prevent short cycling of the equipment.

ECONOMIZER DAMPER CONTROL

A mixed-air economizer damper package can be controlled to assist mechanical cooling in maintaining the discharge air at setpoint. Therefore, if modulating economizer damper control is desired, a discharge air temperature sensor is required. If the outdoor air is not currently suitable for cooling use (see the Economizer Enable/Disable Control section), the outdoor air damper is held at the adjustable minimum position (EconMinPos) for ventilation purposes.

Because the outdoor air can be used to supplement mechanical cooling, the economizer operates as if it were the first stage of cooling. So, if the outdoor air is suitable for cooling use, the mechanical cooling (either staged or modulating) is held off until the economizer has reached its fully open position. Then, if the discharge temperature continues to be above setpoint, the mechanical cooling is allowed to come on. If the outdoor air is *not* suitable for cooling use, the economizer is set to its minimum position, and mechanical cooling is allowed to come on immediately.

When the controller is in the Heat mode, the economizer is held at the minimum position setting (EconMinPos). The minimum position setting is only used during Occupied mode operation. When in Standby or Unoccupied modes, the outdoor air dampers are allowed to fully close if there is no call for cooling, or if the outside air is not suitable for cooling use.

INDOOR AIR QUALITY (IAQ) OVERRIDE

The Excel 10 W7750 Controller supports an IAQ override feature that upon detection of poor air quality in the space, allows the economizer dampers to be opened above the standard minimum position setting to a value set in

EconIAQPos. Two different methods of detecting poor air quality are supported. The first is by using an IAQ switch device connected to a digital input on the W7750 Controller, where a contact closure indicates poor air quality and initiates the IAQ override mode. The second, which is only available on the W7750B,C is through an analog input that connects to a CO₂ Sensor (0 to 10V), such as the C7232A,B or C7632A,B. The measured value of CO₂ from this sensor (0 to 2000 ppm) is compared to the setpoint IAQSetpt. When the CO₂ level is higher than the setpoint (800 PPM), the IAQ override is initiated. The IAQSetpt hysteresis is 50 PPM, IAQ override is deactivated at a CO₂ level less than 750 PPM.

When the W7750 Controller is in the COOL mode during an IAQ override, it is possible for the *heating* outputs to be activated. This can occur if the outdoor air temperature is cold enough to cause the discharge air temperature to drop below the DaTempLoLim setpoint when the dampers open to the EconIAQPos position, *and* the laqUseHeat flag is set. If this situation occurs, the heating is controlled to maintain the discharge air temperature at 1°F (0.65°C) above the DaTempLoLim setpoint.

FREEZE STAT

Upon receiving a contact closure, the W7750 control algorithm will close the outdoor air damper and open the hot water and chilled water valves (if available) to the full open position as a safety precaution. If *manual-reset* operation is desired, the Freeze Stat device must provide the physical pushbutton, which the operator presses, to reset the system after a *freeze* condition has occurred.

DISCHARGE AIR LOW LIMIT CONTROL

If the discharge air temperature falls below the adjustable discharge air low limit setpoint (DaTempLoLim), an alarm is issued, and the outdoor air damper is driven below the minimum position setting until the discharge temperature is up to the low limit. If necessary, the damper can go completely closed even during Occupied mode operation. As the discharge temperature warms up, the economizer modulates open until the minimum position setting is reached. At this point, the low limit alarm is cleared.

ECONOMIZER ENABLE/DISABLE CONTROL

The W7750 Controller has inputs to determine if the outdoor air is suitable to augment cooling. The economizer dampers can be enabled/disabled for using outdoor air as the first stage of cooling based on one of ten allowable strategies:

1. **Digital Input Enable/Disable**—contact closure enables economizer.
2. **Outdoor Temperature**—when the outdoor temperature is less than OaEconEnTemp, then the outdoor air is suitable to augment cooling.

3. **Outdoor Enthalpy, Type A**—when the outdoor enthalpy meets the W7212 type A requirements, the outdoor air is suitable to augment cooling. See Fig. 57 and 58.
 4. **Outdoor Enthalpy, Type B**—when the outdoor enthalpy meets the W7212 type B requirements, the outdoor air is suitable to augment cooling. See Fig. 57 and 58.
 5. **Outdoor Enthalpy, Type C**—when the outdoor enthalpy meets the W7212 type C requirements, the outdoor air is suitable to augment cooling. See Fig. 57 and 58.
 6. **Outdoor Enthalpy, Type D**—when the outdoor enthalpy meets the W7212 type D requirements, the outdoor air is suitable to augment cooling. See Fig. 57 and 58.
 7. **Differential Temperature**—the difference between outdoor temperature and return air temperature is compared to DiffEconEnTemp to determine whether outdoor air or return air is more suitable for use to augment mechanical cooling.
 8. **Single Calculated Enthalpy**—the calculated outdoor enthalpy in btu/lb is compared to the enthalpy setpoint (OaEnthEn) in btu/lb, and the outdoor temperature is compared to the outdoor temperature limit setpoint (OaEconEnTemp) for a high limit. The compared difference determines whether outdoor air is suitable for use to augment mechanical cooling.
 9. **Differential Enthalpy, Either Sensed or Calculated**—the difference between outdoor enthalpy and return air enthalpy determines whether outdoor air or return air is more suitable to augment mechanical cooling. When enthalpy sensors are configured, they are used for comparing enthalpy. If no enthalpy sensors are available, then enthalpy is calculated using outdoor and return air humidity and temperature sensors. The switching differential is fixed at 1.0 mA for enthalpy sensors, and 0.25 btu/lb for calculated enthalpy.
- NOTE: If no return temperature sensor is configured, space temperature is used to calculate return air enthalpy.
10. **Network Enabled**—the network input *DestEconEnable* controls the enabling and disabling of the economizer. When using the network input, select Econo Enable Type: *No Economizer* in E-Vision. The network input has priority over the other nine economizer control selections.

Appendix C: Complete List of Excel 10 W7750 Controller User Addresses

See Table 18 for W7750 Controller User Address table numbers and point types.

The *User Address Index* following Table 18 lists the User Addresses alphabetically and gives the page number where the Address is located in each Table Number/Point Type.

An alphabetical list of *Mappable User Addresses and Table Numbers* follows Table 18. Following this is an alphabetical list of *Failure Detect User Addresses and Table Numbers*.

Table 18. Excel 10 W7750 Controller User Address Point Types.

Table Number	Point Types
Table 20	Input/Output
Table 21	Control Parameters
Table 22	Energy Management Points
Table 23	Status Points
Table 24	Calibration Points
Table 25	Configuration Parameters
Table 26	LONMARK/Open System Points
Table 27	Direct Access and Special Manual Points
Table 28	Data Share Points

User Address Indexes

NOTE: Following tables arranged in alphabetical order, left to right, then top to bottom.

INPUT OUTPUT POINTS (SEE TABLE 20)

Address (Page)	Address (Page)	Address (Page)
CO2Sensr (71)	CORMode (67)	DaTempSensr (70)
EconEnSw (72)	FiltrPressSensr (71)	IaQOvrSw (72)
Model (72)	ModelSw (73)	MonitorSensr (71)
MonitorSw (73)	OaEnthSensr (71)	OaHumSensr (70)
OaTempSensr (70)	OccSensr (72)	OvrdSw (72)
RaEnthSensr (70)	RaHumSensr (70)	RaTempSensr (70)
RmTempSensr (70)	RmtStptPot (70)	StatusAirFlow (72)
StatusDI1 (72)	StatusDI2 (72)	StatusDI3 (72)
StatusDI4 (72)	StatusDO1 (71)	StatusDO2 (71)
StatusDO5 (71)	StatusDO3 (71)	StatusDO4 (71)
StatusDO6 (71)	StatusDO7 (71)	StatusDO8 (71)
SmokeMonSw (72)	TimeClkSw (72)	WindowSw (73)

CONTROL PARAMETERS (SEE TABLE 21)

Address (Page)	Address (Page)
BypTime (77)	DaTempCICtrlBd (77)
DaTempEcCtrlBd (77)	DaTempHiLim (74)
DaTempHtCtrlBd (77)	DaTempLoLim (74)
DiffEconEnTemp (76)	DlcBumpTemp (74)
EconIAQPos (76)	EconMinPos (76)
FiltrPressStPt (77)	GainCoolDer (77)
GainCoolInt (77)	GainCoolProp (77)
GainHeatDer (77)	GainHeatInt (77)
GainHeatProp (77)	IAQSetpt (76)
MaxCIRamp (75)	MinCIRamp (75)
MaxHtRamp (74)	MinHtRamp (74)
OaEconEnTemp (76)	OaEnthEn (76)
OaTempCILkOut (75)	OaTempHtLkOut (74)
OaTempMaxCIRp (75)	OaTempMinCIRp (76)
OaTempMaxHtRp (75)	OaTempMinHtRp (75)
PwmFullScale (76)	PwmPeriod (76)
PwmZeroScale (76)	StptKnobHiLim (77)
StptKnobLowLim (77)	

ENERGY MANAGEMENT POINTS (SEE TABLE 22)

Address (Page)	Address (Page)
DestBypass (78)	DestDlcShed (78)
DestFree1 (79)	DestFree2 (79)
DestTimeClk (80)	DestWSHPEnable (79)
DestSchedOcc (78)	SrcBypCt (78)
SrcBypass (78)	SrcTimeClk (80)
SrcTimeClkCt (80)	TodEventNext (78)
Tuncos (78)	

CALIBRATION POINTS (SEE TABLE 24)

STATUS POINTS (SEE TABLE 23)

Address (Page)	Address (Page)	Address (Page)
AlarmLog1 (83)	BypTimer (88)	CO2Sens (89)
CoolPos (90)	CoolStgsOn (86)	DaSetpt (89)
DaTemp (89)	DlcShed (86)	EconPos (90)
FilterPress (89)	Free1Stat (86)	Free2Stat (86)
HeatPos (90)	HeatStgsOn (86)	MonitorSens (90)
MonitorSw (87)	NetConfig (93)	OaEnth (89)
OaEnthCalc (85)	OaHum (89)	OaTemp (89)
OccStatOut (86)	RaEnth (89)	RaEnthCalc (85)
RaHum (89)	RaTemp (89)	RmTemp (88)
RmTempActSpt (88)	SaFan (86)	SaFanStatus (85)
ShutDown (87)	SrcEmerg (81)	SrcTimeClk (80)
StatFreezeStat (87)	StatusAlmTyp (81)	StatusEconEn (85)
StatusEconOut (86)	StatusError (90)	StatusFilter (87)
StatuslaqOvr (87)	StatusManOcc (85)	StatusMode (84)
StatusOcc (84)	StatusOcySen (85)	StatusOvrD (84)
StatusSched (84)	StatusSmoke (87)	StatusWndw (87)
TimeClickOcc (84)	WSHPEnable (88)	

CONFIGURATION PARAMETERS (SEE TABLE 25)

Address (Page)	Address (Page)
CascCntrl (96)	CoolCycHr (94)
CoolMtrSpd (95)	DisMinCITime (96)
DisMinHtTime (96)	EconMode (94)
EconMtrSpd (95)	FanFailTime (95)
FanMode (94)	FanOnHtMode (95)
FanRunOnCool (94)	FanRunOnHeat (94)
HeatCycHr (94)	HeatMtrSpd (95)
laqUseHeat (96)	OvrDPriority (97)
OvrDType (97)	RmTempCal (95)
SetPtKnob (97)	SmkCtlMode (94)
TempOffstCal1 (95)	TempOffstCal2 (95)
UseRaTempCtl (96)	UseWallModStpt (97)
VoltOffstCal1 (95)	VoltOffstCal2 (95)

LONMARK/OPEN SYSTEM POINTS (SEE TABLE 26)

Address (Page)	Address (Page)
CoolOccSpt (98)	CoolUnoccSpt (98)
CoolStbySpt (98)	DestEconEnable (104)
DestEmergCmd (101)	DestHvacMode (99)
DestManOcc (99)	DestOaHum (100)
DestOaTemp (100)	DestOccSensor (103)
DestRmTemp (100)	DestRmTempSpt (99)
DestSptOffset (99)	DestWndw (104)
HeatOccSpt (98)	HeatStbySpt (98)
HeatUnoccSpt (98)	SrcEconEnable (105)
SrcEconEnCt (105)	SrcOaHum (100)
SrcOaTemp (100)	SrcOccSensor (103)
SrcRmTemp (100)	SrcRmTempActSpt (100)
SrcUnitStatus (101)	SrcWndw (104)
SrcWndwCt (104)	

DIRECT ACCESS AND SPECIAL MANUAL POINTS (SEE TABLE 27)

Address (Page)	Address (Page)	Address (Page)
DestManMode (106)	TestAuxEcon (107)	TestAuxHt1 (107)
TestAuxHt2 (107)	TestAuxHt3 (107)	TestAuxHt4 (107)
TestEconPos (106)	TestFree1 (107)	TestFree2 (107)
TestHCPos (106)	TestHtCIMode (107)	TestHtCiStg1 (107)
TestHtCiStg2 (107)	TestHtCiStg3 (107)	TestHtCiStg4 (107)
TestMode (106)	TestOccStat (107)	TestSaFan (107)

DATA SHARE POINTS (SEE TABLE 28)

Address (Page)	Address (Page)	Address (Page)
DestlaqOvrD (108)	DestOaEnth (108)	SrcIaqOvr (108)
SrcIaqOvrCt (108)	SrcMonSw (108)	SrcMonSwCt (108)
SrcOaEnth (108)		

Mappable User Addresses and Table Number

User Address (Table)	User Address (Table)	User Address (Table)	User Address (Table)	User Address (Table)
BypTime (21)	BypTimer (23)	CascCntrl (25)	CO2Sen (23)	CoolCycHr (25)
CoolMtrSpd (25)	CoolOccSpt (26)	CoolPos (23)	CoolStbySpt (26)	CoolStgsOn (23)
CoolUnoccSpt (26)	DaSetpt (23)	DaTemp (23)	DaTempCICtrlBd (21)	DaTempEcCtrlBd (21)
DaTempHiLim (21)	DaTempHtCtrlBd (21)	DaTempLoLim (21)	DestDlcShed (22)	DestEmergCmd (26)
DestHvacMode (26)	DestManMode (27)	DestSchedOcc (22)	DiffEconEnTemp (21)	DisMinHtTime (25)
DisMinCITime (25)	DlcBumpTemp (21)	EconIAQPos (21)	EconMinPos (21)	EconMtrSpd (25)
EconPos (23)	EconMode (25)	FanFailTime (25)	FanMode (25)	FanOnHtMode (25)
FanRunOnCool (25)	FanRunOnHeat (25)	FilterPress (23)	FltrPressStPt (21)	Free1Stat (23)
Free2Stat (23)	GainCoolDer (21)	GainCoolInt (21)	GainCoolProp (21)	GainHeatDer (21)
GainHeatInt (21)	GainHeatProp (21)	HeatCycHr (25)	HeatMtrSpd (25)	HeatOccSpt (26)
HeatPos (23)	HeatStbySpt (26)	HeatStgsOn (23)	HeatUnoccSpt (26)	IAQSetpt (21)
laqUseHeat (25)	MaxCIRamp (21)	MinCIRamp (21)	MaxHtRamp (21)	MinHtRamp (21)
MonitorSens (23)	MonitorSw (23)	OaEconEnTemp (21)	OaEnth (23)	OaEnthCalc (23)
OaEnthEn (21)	OaHum (23)	OaTemp (23)	OaTempCILkOut (21)	OaTempHtLkOut (21)
OaTempMaxCIRp (21)	OaTempMinCIRp (21)	OaTempMaxHtRp (21)	OaTempMinHtRp (21)	OccStatOut (23)
OvrdPriority (25)	OvrdType (25)	PwmFullScale (21)	PwmPeriod (21)	PwmZeroScale (21)
RaEnth (23)	RaEnthCalc (23)	RaHum (23)	RaTemp (23)	RmTempActSpt (23)
RmTempCal (25)	RmtStptPot (20)	SaFan (23)	SaFanStatus (23)	SetPtKnob (25)
ShutDown (23)	SmkCtlMode (25)	StatFreezeStat (23)	StatusAlmTyp (23)	StatusEconEn (23)
StatusEconOut (23)	StatusFilter (23)	StatuslaqOvr (23)	StatusManOcc (23)	StatusMode (23)
StatusOcc (23)	StatusOcySen (23)	StatusOvrd (23)	StatusSched (23)	StatusSmoke (23)
StatusWndw (23)	StptKnobHiLim (21)	StptKnobLowLim (21)	TimeClckOcc (23)	UseRaTempCtl (25)
UseWallModStpt (25)	WSHPEnable (23)			

Failure Detect User Addresses and Table Number

Table 19 lists the applicable Engineering Units for the analog points found in the W7750.

User Address (Table)	User Address (Table)
DestBypass 22	DestDlcShed 22
DestEconEnable 26	DestFree1 22
DestFree2 22	DestHvacMode 26
DestlaqOvrd 28	DestOaEnth 28
DestOaHum 26	DestOaTemp 26
DestOccSensor 26	DestRmTemp 26
DestSchedOcc 22	DestSptOffset 26
DestTimeClk 22	DestWndw 26
DestWSHPEnable 22	

Table 19. Engineering Units For Analog Points.

Measured Item	English Units (Inch-Pound)		Standard International Units (SI)	
	Description	Abbreviation	Description	Abbreviation
Temperature	Degrees Fahrenheit	F	Degrees Celsius	C
Relative Temperature	Delta Degrees Fahrenheit	DDF	Degrees Kelvin	K
Relative Humidity	Percent	%	Percent	%
Air Flow	Cubic Feet per Minute	CFM	Meters Cubed per Hour	m3h
CO₂ Concentration	Parts Per Million	PPM	Parts Per Million	PPM
Enthalpy	British Thermal Units per Pound of Air	btu/lb	kiloJoules/kilogram	kJ/kg
Differential Pressure	Inches of Water Column	in. w.c.	kiloPascal	kPa

All of the NvName values that are stored in EEPROM memory have a prefix of *nci*.

NOTE: These parameters are stored in EEPROM and are limited to 10,000 *writes*. Do NOT use them as outputs from Control Strategies, Time Programs, or Switching Tables. If these points are changed more than 10,000 times, irreversible hardware failure results

Tables 20 through 28 provide point attributes as follows:

- Engineering Units— This field indicates the point valid range and displayed Engineering Unit. For digital points, the valid states and the corresponding enumerated values are shown.
- Default— The value or state of the point on controller start-up.
- LONSPEC™/Care (M) Monitor— These points are viewable within the Controller Monitoring on-line screen.
- (P) Parameter—These points refer to control parameters adjustable in the Application Selection dialog boxes.
- (S) Schematic—These points appear in Care monitor mode graphics.
- Shareable— These points can be set up for data sharing in Command Multiple Points, Read Multiple Points, or Refer Excel 10 Points as either a data source or a destination.
- Mappable— These points can be converted into a C-Bus point (XL5000) used by C-Bus devices. A mappable point has a one-to-one relationship with a C-Bus User Address.
- Direct Access— These points are accessible through the Subsystem Points mechanism in LONSPEC™/LONSTATION™ or XBS - XL5000.

- Hardware Config.— These are points that involve controller I/O configuration. Any change to Hardware Config. points causes the W7750 to perform an application reset; therefore, these points can only be modified off-line.
 - Manual Config.— These points are used to set the controller outputs when in manual mode. The W7750 is placed in manual mode through a menu selection in the LONSPEC™ or Care Controller Monitor screen.
 - Test— These points can be controlled in LONSPEC™ or Care test mode that is used for field checkout/ debugging.
 - Failure Detect Input Point— These points need an update periodically or a communication alarm is generated. The failure detect mechanism is only active when the NV is bound (bindings are configured using Refer Excel 10 points). The time between the updates is adjustable.
 - Non-Failure Detect Input Point— These points (which are NVs that are bound or unbound) do not check for an update periodically and do not generate an alarm.
- NOTES:
1. Mapped points can be viewed and changed, *if needed*, through LONSPEC™ or on the XI581, XI582 and XI584 C-Bus devices and on an XBS central (XL5000).
 2. All Excel 10 points, mappable and calibration, configuration and internal data sharing points, can be viewed and changed, *as allowed*, via Direct Access (DA) mode in the LONSPEC™/LONSTATION™ or XBS subsystem menu or via XI584.

Table 20. Input/Output Points.

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
CORMode	nciloSelect	CorOnMode	COR_ON_HEAT COR_ON_COOL	0 1	COR_ON_COOL	P			X				CorOnMode specifies the mode when the Change Over Relay (COR) is energized.	
	nciloSelect	ResistiveIn[0]	DISCHARGE_TEMP_PT3000 OUTDOOR_TEMP_PT3000 RETURN_TEMP_PT3000 DISCHARGE_TEMP_20KNNTC RETURN_TEMP_20KNNTC UNUSED_RA1	0 1 2 3 4 255	UNUSED_RA1				X	X			ResistiveIn[0] specifies which logical sensor is assigned to each physical analog input sensor channel according to the enumerated list that is shown in the Engineering Units/States column. ResistiveIn[0] is the only input available in the W7750A controller.	
	nciloSelect	ResistiveIn[1]	DISCHARGE_TEMP_PT3000 OUTDOOR_TEMP_PT3000 RETURN_TEMP_PT3000 DISCHARGE_TEMP_20KNNTC RETURN_TEMP_20KNNTC UNUSED_RA1	0 1 2 3 4 255	UNUSED_RA1				X	X			ResistiveIn[1] specifies which logical sensor is assigned to each physical analog input sensor channel according to the enumerated list that is shown in the Engineering Units/States column. ResistiveIn[0] is the only input available in the W7750A controller.	
	nciloSelect	VoltageIn[0]	RTN_HUM_C7600C RETURN_ENTHALPY OD_HUM_C7600C OUTDOOR_ENTHALPY FILTER_STATIC_PRESS_DIFF SPACE_CO2 MONITOR_SENSOR1 RTN_HUM_C7600B OD_HUM_C7600B UNUSED_VAI	0 1 2 3 4 5 6 7 8 255	UNUSED_VAI				X	X			VoltageIn[0] specifies which logical sensor is assigned to each physical analog input sensor channel according to the enumerated list that is shown in the Engineering Units/States column. (Voltage inputs are not available in the W7750A controller.)	
	nciloSelect	VoltageIn[1]	RTN_HUM_C7600C RETURN_ENTHALPY OD_HUM_C7600C OUTDOOR_ENTHALPY FILTER_STATIC_PRESS_DIFF SPACE_CO2 MONITOR_SENSOR1 RTN_HUM_C7600B OD_HUM_C7600B UNUSED_VAI	0 1 2 3 4 5 6 7 8 255	UNUSED_VAI				X	X			VoltageIn[1] specifies which logical sensor is assigned to each physical analog input sensor channel according to the enumerated list that is shown in the Engineering Units/States column. (Voltage inputs are not available in the W7750A controller.)	
	nciloSelect	DigitalIn[0]	OCC_SENSOR OCC_TIME_CLOCK PROOF_AIR_FLOW ECON_ENABLE IAQ_OVERRIDE SMOKE_MONITOR DIRTY_FILTER SHUT_DOWN WINDOW_OPEN MONITOR SCHED_MASTER FREEZESTAT UNUSED_DI	2 3 4 5 6 7 8 9 10 11 12 13 255	OCC_TIME_CLOCK_IN					X			DigitalIn[0] specifies which logical switch type is connected to the flexible digital input switch channel according to the enumerated list that is shown in the Engineering Units/States column. DigitalIn[0] and DigitalIn[1] are the only inputs available in the W7750A controller. The controller is configured at the factory with this user address configured to OCC_TIME_CLOCK_IN.	

Table 20. Input/Output Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	nciloSelect	DigitalIn[1]	OCC_SENSOR OCC_TIME_CLOCK PROOF_AIR_FLOW ECON_ENABLE IAQ_OVERRIDE SMOKE_MONITOR DIRTY_FILTER SHUT_DOWN WINDOW_OPEN MONITORS CHED_MASTER FREEZE_STAT_B&C_ONLY UNUSED_DI	2 3 4 5 6 7 8 9 10 11 12 13 255	SHCED_MASTER_IN				X				DigitalIn[1] specifies which logical switch type is connected to the flexible digital input switch channel according to the enumerated list that is shown in the Engineering Units/States column. DigitalIn[0] and DigitalIn[1] are the only inputs available in the W7750A controller. The controller is configured at the factory with this user address configured to SCHED_MASTER_IN.	
	nciloSelect	DigitalIn[2]	OCC_SENSOR OCC_TIME_CLOCK PROOF_AIR_FLOW ECON_ENABLE IAQ_OVERRIDE SMOKE_MONITOR DIRTY_FILTER SHUT_DOWN WINDOW_OPEN MONITOR SCHED_MASTER UNUSED_DI	2 3 4 5 6 7 8 9 10 11 12 255	UNUSED_DI				X				DigitalIn[2] specifies which logical switch type is connected to the flexible digital input switch channel according to the enumerated list that is shown in the Engineering Units/States column. DigitalIn[0] and DigitalIn[1] are the only inputs available in the W7750A controller.	

Table 20. Input/Output Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	nciloSelect	DigitalOut[0]	COOL_STAGE_1 COOL_STAGE_2 COOL_STAGE_3 COOL_STAGE_4 HEAT_STAGE_1 HEAT_STAGE_2 HEAT_STAGE_3 HEAT_STAGE_4 CHANGE_OVER_RELAY FAN_OUT AUX_ECON OCCUPANCY_STATUS ECON_OPEN ECON_CLOSE COOL_OPEN COOL_CLOSE HEAT_OPEN HEAT_CLOSE HEAT_COOL_STAGE_1 HEAT_COOL_STAGE_2 HEAT_COOL_STAGE_3 HEAT_COOL_STAGE_4 FREE1_DEHUMIDIFY FREE1 FREE2 FREE1_PULSE_ON FREE1_PULSE_OFF ECON_PWM HEAT_PWM COOL_PWM FREE1_REV_OUT FREE2_REV_OUT ECON_PWM_AO_REV_OUT HEAT_PWM_AO_REV_OUT COOL_PWM_AO_REV_OUT UNUSED	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 24 25 26 27 28 29 30 31 57 58 61 62 63 255	NETWORK DO(FREE1) (Value of State is 25)				X				DigitalOut[0] specifies which logical digital output function is assigned to the digital physical output according to the enumerated list that is shown in the Engineering Units/States column. The W7750 Controllers are configured at the factory with the enumerated value in the Default column. Only DigitalOut[0] through DigitalOut[5] are available in the W7750A model which can configure staged outputs. The W7750A Controller can drive Series 60 Floating Control to modulate cooling valves, heating valves and economizers. (No PWM outputs are allowed in the W7750A model.) The controller is configured at the factory with the enumerated value in the Default column. The eight outputs on the W7750B are all digital outputs. The eight outputs on the W7750C consist of five digital and three analog outputs.	
	nciloSelect	DigitalOut[1]	See DigitalOut[0] enumerated values	1-31 ,255	FAN_OUT (Value of State is 10)				X				See DigitalOut[0] for enumerated names. The W7750 Controllers are configured at the factory with the enumerated value in the Default column.	
	nciloSelect	DigitalOut[2]	See DigitalOut[0] enumerated values	1-31 ,255	COOL_STAGE_2 (Value of State is 2)				X				See DigitalOut[0] for enumerated names. The W7750 Controllers are configured at the factory with the enumerated value in the Default column.	
	nciloSelect	DigitalOut[3]	See DigitalOut[0] enumerated values	1-31 ,255	HEAT_STAGE_1 (Value of State is 1)				X				See DigitalOut[0] for enumerated names. The W7750 Controllers are configured at the factory with the enumerated value in the Default column.	
	nciloSelect	DigitalOut[4]	See DigitalOut[0] enumerated values	1-31 ,255	HEAT_STAGE_2 (Value of State is 3)				X				See DigitalOut[0] for enumerated names. The W7750 Controllers are configured at the factory with the enumerated value in the Default column.	
	nciloSelect	DigitalOut[5]	See DigitalOut[0] enumerated values	1-31 ,255	HEAT_STAGE_1 (Value of State is 5)				X				See DigitalOut[0] for enumerated names. The W7750 Controllers are configured at the factory with the enumerated value in the Default column.	
	nciloSelect	DigitalOut[6]	See DigitalOut[0] enumerated values	1-31 ,255	UNUSED (Value of State is 255)				X				See DigitalOut[0] for enumerated names. The W7750 Controllers are configured at the factory with the enumerated value in the Default column.	

Table 20. Input/Output Points. (Continued)

User Address	NvName	FieldName	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic
	nciloSelect	DigitalOut[7]	See DigitalOut[0] enumerated values	1-31 .255	UNUSED (Value of State is 255)				X				See DigitalOut[0] for enumerated names. The W7750 Controllers are configured at the factory with the enumerated value in the Default column.
	nciloSelect	HiPump	CONV HP	0 1	CONV	P		X	X				HiPump specifies the type of equipment being controlled. When HiPump is 0 (CONV), the node is controlling conventional gas or electric heat. When HiPump is 1 (HP), the node is controlling a heat pump.
	nciloSelect	FiftySixtyHz	SIXTYFIFTY	01	SIXTY	P		X	X				FiftySixtyHz specifies the frequency of the main power input for the controller. Correctly selecting the FiftySixtyHz decreases the noise picked up by analog switch wiring from the power mains. When FiftySixtyHz is 0 (SIXTY is the default), the mains frequency is sixty Hz and when FiftySixtyHz is 1 (FIFTY), the mains frequency is fifty Hz.
	nciloSelect	SpaceSensorType	T7770	0	T7770				X				SpaceSensorType specifies the type of space temperature sensor connected to the node. When SpaceSensorType is 0, a T7770 sensor is connected to the sensor terminals. No other options are currently valid.
RmStpPot	nvloO	siSetPointTempS7	Degrees F -9 to 85 Degrees C (-23 to 29)		SI_INVALID	M, S		X	X	X			SetPointTemp is the wall module setpoint temperature. When nciConfig.SetPointTemp is ABSOLUTE_COOL or ABSOLUTE_MIDDLE, the reported value is the absolute setpoint temperature. When nciConfig.SetPntKnob is OFFSET, the reported value is the offset (from the current active TempSetPts) temperature. If the input is not configured or has failed, the value is SI_INVALID.
RmTempSensr	nvloO	siSpaceTempS7	Degrees F 40 to 100 Degrees C (4 to 38)		SI_INVALID	M, S							SpaceTemp is the measured space temperature. If the sensor is not configured or has failed, the value is SI_INVALID.NOTE: The reported temperatures includes the offset correction provided by Config.ResistiveOffsetCal.
DaTempSensr	nvloO	siDischargeTempS7	Degrees F 30 to 122		SI_INVALID								DischargeTemp is the measured discharge air temperature. If the sensor is not configured or has failed, the value is SI_INVALID. Refer to the note on SpaceTemp.
RaTempSensr	nvloO	siReturnTempS7	Degrees F 30 to 122		SI_INVALID								ReturnTemp is the measured return air temperature. If the sensor is not configured or has failed, the value is SI_INVALID. Refer to the note on SpaceTemp.
RaHumSensr	nvloO	ReturnHumidity	Percentage 10 to 90		SI_INVALID								ReturnHumidity is the measured return air humidity. If the sensor is not configured or has failed, the value is UB_INVALID.NOTE: The reported temperatures includes the offset correction provided by Config.VoltageOffsetCal.
RaEnthSensr	nvloO	siReturnEnthalpyS7	mA 4 to 20		SI_INVALID								ReturnEnthalpy is the measured return air enthalpy. If the sensor is not configured or has failed, the value is SI_INVALID. Since the C7400 reports comfort due to enthalpy (btu/lb) in milliamps, enthalpy is also reported in milliamps. Refer to the NOTE on ReturnHumidity.
OaTempSensr	nvloO	siOutdoorTempS7	Degrees F -40 to 122 (-40 to 50)		SI_INVALID	M, S							OutdoorTemp is the measured outdoor air temperature. If the sensor is not configured or has failed, the value is SI_INVALID. Refer to the NOTE on ReturnHumidity.
OaHumSensr	nvloO	OutdoorHumidity	Percentage 10 to 90		SI_INVALID	M, S							OutdoorHumidity is the measured outdoor air humidity. If the sensor is not configured or has failed, the value is UB_INVALID. Refer to the NOTE on ReturnHumidity.

Table 20. Input/Output Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
OaEnthSensr	nvoIO	siOutdoorEnthalpyS7	mA 4 to 20		SI_INVALID	M, S							OutdoorEnthalpy is the measured outdoor air enthalpy. If the sensor is not configured or has failed, the value is SI_INVALID. Since the C7400 reports comfort due to enthalpy (btu/lb) in milliamps, enthalpy is also reported in milliamps. Refer to the NOTE on ReturnHumidity.	
FiltrPressSensr	nvoIO	siFilterPressureS10	in. w.c. (kPa) 0 to 5 (0 to 1.25)		SI_INVALID								FilterPressure is the measured differential pressure across the return air filter. If the sensor is not configured or has failed, the value is the SI_INVALID. Refer to the NOTE on ReturnHumidity.	
CO2Sensr	nvoIO	siSpaceCo2S0	PPM 150 to 2000		SI_INVALID								SpaceCo2 is the measured CO ₂ in the conditioned air space. If the sensor is not configured or has failed, the value is SI_INVALID. Refer to the NOTE on ReturnHumidity.	
MonitorSensr	nvoIO	siMonitorS10	volts 1 to 10		SI_INVALID								Monitor is the voltage applied at the monitor inputs terminals. If the sensor is not configured or has failed, the value is SI_INVALID. Refer to the NOTE on ReturnHumidity.	
StatusDO1	nvoIO	ubOut Byte Offset = 24 Bit Offset = 0(DigitalOut1)	FALSE TRUE	0 1	FALSE								DigitalOut1 is a byte with a bit for every physical digital output. On is a 1 (TRUE) and off is a 0 (FALSE).	
StatusDO2	nvoIO	ubOut Byte Offset = 24 Bit Offset = 1(DigitalOut2)	FALSE TRUE	0 1	FALSE								DigitalOut2 is a byte with a bit for every physical digital output. On is a 1 (TRUE) and off is a 0 (FALSE).	
StatusDO3	nvoIO	ubOut Byte Offset = 24 Bit Offset = 2(DigitalOut3)	FALSE TRUE	0 1	FALSE								DigitalOut3 is a byte with a bit for every physical digital output. On is a 1 (TRUE) and off is a 0 (FALSE).	
StatusDO4	nvoIO	ubOut Byte Offset = 24 Bit Offset = 3(DigitalOut4)	FALSE TRUE	0 1	FALSE								DigitalOut4 is a byte with a bit for every physical digital output. On is a 1 (TRUE) and off is a 0 (FALSE).	
StatusDO5	nvoIO	ubOut Byte Offset = 24 Bit Offset = 4(DigitalOut5)	FALSE TRUE	0 1	FALSE								DigitalOut5 is a byte with a bit for every physical digital output. On is a 1 (TRUE) and off is a 0 (FALSE).	
StatusDO6	nvoIO	ubOut Byte Offset = 24 Bit Offset = 5(DigitalOut6)	FALSE TRUE	0 1	FALSE								DigitalOut6 is a byte with a bit for every physical digital output. On is a 1 (TRUE) and off is a 0 (FALSE).	
StatusDO7	nvoIO	ubOut Byte Offset = 24 Bit Offset = 6(DigitalOut7)	FALSE TRUE	0 1	FALSE								DigitalOut7 is a byte with a bit for every physical digital output. On is a 1 (TRUE) and off is a 0 (FALSE).	
StatusDO8	nvoIO	ubOut Byte Offset = 24 Bit Offset = 7(DigitalOut8)	FALSE TRUE	0 1	FALSE								DigitalOut8 is a byte with a bit for every physical digital output. On is a 1 (TRUE) and off is a 0 (FALSE).	

Table 20. Input/Output Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic
StatusDI1	nvoIO	ubDigitalIn Byte Offset = 25 Bit Offset = 7(DigitalIn1)	FALSE TRUE	0 1	FALSE								DigitalIn1 is a byte with a bit for every physical digital input. If the input is shorted to ground, the bit is a zero or FALSE. If the input is open, the bit is one or TRUE.
StatusDI2	nvoIO	ubDigitalIn Byte Offset = 25 Bit Offset = 6(DigitalIn2)	FALSE TRUE	0 1	FALSE								DigitalIn2 is a byte with a bit for every physical digital input. If the input is shorted to ground, the bit is a zero or FALSE. If the input is open, the bit is one or TRUE.
StatusDI3	nvoIO	ubDigitalIn Byte Offset = 25 Bit Offset = 5(DigitalIn3)	FALSE TRUE	0 1	FALSE								DigitalIn3 is a byte with a bit for every physical digital input. If the input is shorted to ground, the bit is a zero or FALSE. If the input is open, the bit is one or TRUE.
StatusDI4	nvoIO	ubDigitalIn Byte Offset = 25 Bit Offset = 4(DigitalIn4)	FALSE TRUE	0 1	FALSE								DigitalIn4 is a byte with a bit for every physical digital input. If the input is shorted to ground, the bit is a zero or FALSE. If the input is open, the bit is one or TRUE.
Model	nvoIO	ubDigitalIn Byte Offset = 25 Bit Offset = 3 (ExtendedModelIn)	FALSE TRUE	0 1	FALSE				X				ExtendedModelIn is a byte with a bit for every physical digital input. If the input is shorted to ground, the bit is a zero or FALSE. If the input is open, the bit is one or TRUE.
OvrRdSw	nvoIO	OverRide	FALSE TRUE	0 1	FALSE								OverRide indicates the status of the wall module override pushbutton. It is 1 (TRUE) if the button is pressed, and is 0 (FALSE) if it isn't pressed.
OccSensr	nvoIO	OccupancySensor	FALSE TRUE	0 1	FALSE								OccupancySensor is the state of the digital input configured and wired to the local occupancy sensor. 1 means that occupancy is being sensed (input circuit shorted) and 0 means that no occupancy is being sensed (input circuit open).
TimeClkSw	nvoIO	OccTimeClock	FALSE TRUE	0 1	FALSE								OccTimeClock is the state of the digital input configured and wired to a time clock. 1 (input shorted) means that the scheduled occupancy is OC_OCCUPIED and 0 (input open circuited) means that the scheduled occupancy is OC_UNOCCUPIED.
StatusAirFlow	nvoIO	ProofAirFlow	FALSE TRUE	0 1	FALSE								ProofAirFlow is the state of the digital input configured and wired to the proof of air flow switch. 1 (input shorted) means that air flow is detected and 0 (input open circuited) means that air flow is not detected.
EconEnSw	nvoIO	EconEnableIn	FALSE TRUE	0 1	FALSE								EconEnableIn is the state of the digital input configured and wired to the outdoor air sensor that determines the suitability of outdoor air for free cooling. 1 (input shorted) means that the outdoor air is suitable for cooling, and 0 (input open) means that the outdoor air is not suitable for cooling.
laqOvrSw	nvoIO	laqOverRide	FALSE TRUE	0 1	FALSE								laqOverRide is the state of the digital input configured and wired to the indoor air quality sensor. 1 (input shorted) means that the indoor air quality is poor, and 0 (input open) means that the indoor air quality is acceptable. This input is used to cause the economizer to open to a predetermined position when poor indoor air quality is detected.
SmokeMonSw	nvoIO	SmokeMonitor	FALSE TRUE	0 1	FALSE								SmokeMonitor is the state of the digital input configured and wired to the indoor smoke sensor. 1 (input shorted) means that smoke is detected, and 0 (input open) means that no smoke is detected.

Table 20. Input/Output Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic
DirtyFilterSw	nvIO	DirtyFilter	FALSE TRUE	0 1	FALSE	M, S							DirtyFilter is the state of the digital input configured and wired to the dirty filter sensor. 1 (input shorted) means that filter is dirty, and 0 (input open) means that the filter is not dirty.
ShutDownSw	nvIO	ShutDown	FALSE TRUE	0 1	FALSE								ShutDown is the state of the digital input configured and wired to the shut down switch. 1 (input shorted) means that equipment should be shut down, and 0 (input open) means that the equipment should be running.
WindowSw	nvIO	WindowOpen	FALSE TRUE	0 1	FALSE	M, S							WindowOpen is the state of the digital input configured and wired to a window open sensor switch. 1 (input open circuit) means that the window is open, and 0 (input shorted) means that the window is closed.
MonitorSw	nvIO	MonSwitch	FALSE TRUE	0 1	FALSE								MonSwitch is the state of the digital input configured and wired to a general purpose monitor switch. 1 (input shorted) means that switch is closed, and 0 (input open) means that the switch is open.
ModelSw	nvIO	Model	FALSE TRUE	0 1	FALSE				X				Model indicates the Model of the node. One of the digital inputs is connected to a printed wiring board trace to let the embedded software know what kind of hardware is present. If Model is 1 (input held high), the hardware is the W7750B Model. If Model is 0 (input shorted to ground), the hardware is the W7750A Model.
	nvIO	SchedMaster	FALSE TRUE	0 1	FALSE	M			X				If ScheduleMaster is 1 (input shorted), the node is the schedule master and the locally connected time clock will be sent via TimeCk to other nodes on the network. If ScheduleMaster is 0, (input open), the node is not a schedule master and nvIO TimeCk will not be sent on the network even if the time clock input is configured. If the ScheduleMaster input is not configured by Select, TimeCk reports the state of the locally connected time clock.

Table 21. Control Parameters.

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
DaTempLoLim	nciAux1SetPt	siLowLimitDischAirTempS7	Degrees F 0 to 60 Degrees C (-1 to 16)		45	P		X	X				(M) Monitor, (P) Parameter, (S) Schematic	When the discharge air temperature falls below LowLimitDischAirTemp, the outdoor air dampers are closed to a position that corrects the low temperature problem. If mechanical cooling is active when the discharge air falls below LowLimitDischAirTemp, the mechanical cooling cycles off after the minimum run times are obeyed to allow the dampers to return open and provide free cooling.
DaTempHiLim	nciAux1SetPt	siMaxDisAirTempHeatS7	Degrees F 65 to 135 Degrees C (18 to 57)		100	P		X	X				(M) Monitor, (P) Parameter, (S) Schematic	When the mode is HEAT, and the CascadeControl is enabled, the discharge air temperature is controlled to a value not to exceed MaxDisAirTempHeat.
DlcBumpTemp	nciAux1SetPt	siDlcBumpTempS7	Degrees F 0 to +10 Degrees C (-18 to -12)		3	P		X	X				(M) Monitor, (P) Parameter, (S) Schematic	When DlcShed is not 0 then the setpoint is shifted by DlcBumpTemp in the energy saving direction. When DlcShed changes from 1 to 0, the setpoint shift ramps back to 0 over a 30 minute interval.
OaTempHLkOut	nciAux1SetPt	ubOdHtLockOutTempS0	Degrees F 0 to 90 Degrees C (-18 to 32)		70	P		X	X				(M) Monitor, (P) Parameter, (S) Schematic	When the outdoor air temperature is greater than OdHtLockOutTemp, the heating is disabled.
MaxHtRamp	nciAux1SetPt	ubMaxHtRampS0	Degrees F/Hr 0 to 20 Degrees C/Hr (0 to 11)		8	P		X	X				(M) Monitor, (P) Parameter, (S) Schematic	MaxHtRamp is the maximum heat recovery ramp rate in degrees F per hour. This value is used to control the adaptive recovery ramp rate during the HEAT recovery period. The setpoint is changed at a rate in degrees F per hour depending on the outdoor air temperature and the MinHtRamp, OdTempMaxHtRamp, and OaTempMinHtRamp parameters. If there is no outdoor air temperature sensor available, then ubMinHtRamp is used as the recovery rate. NOTE: Recovery ramping applies between scheduled heating or cooling setpoint changes from OC_UNOCCUPIED to OC_STANDBY, OC_UNOCCUPIED to OC_OCCUPIED, and OC_STANDBY to OC_OCCUPIED. Scheduled setpoint changes from OC_OCCUPIED to OC_UNOCCUPIED or OC_OCCUPIED to OC_STANDBY do not use a ramped setpoint but instead use a step change in setpoint. Recovery ramps begin before the next scheduled occupancy time and are ramped from the setpoint for the existing scheduled occupancy state to the setpoint for the next occupancy state.
MinHtRamp	nciAux1SetPt	ubMinHtRampS0	Degrees F/Hr 0 to 20 Degrees C/Hr (0 to 11)		3	P		X	X				(M) Monitor, (P) Parameter, (S) Schematic	MinHtRamp is the minimum heat recovery ramp rate in degrees F per hour. This value is used to control the adaptive recovery ramp rate during the HEAT recovery period. The setpoint is changed at a rate in degrees F per hour depending on the outdoor air temperature and the MaxHtRamp, OdTempMaxHtRamp, and OaTempMinHtRamp parameters. If there is no outdoor air temperature sensor available, then MinHtRamp is used as the recovery rate. Refer to the NOTE in the comments column for MaxHtRamp for the conditions that recovery ramping applies to.

Table 21. Control Parameters. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
OaTempMaxHrRp	nciAux1SetPt	ubOdTempMaxHrRampS0	Degrees F 0 to 100 Degrees C (-18 to 38)	40		P		X	X				OaTempMaxHrRamp is the maximum outdoor air temperature parameter that is used to calculate the heat recovery ramp rate during the HEAT recovery period. The setpoint is changed at a rate in degrees F per hour depending on the outdoor air temperature and the MaxHrRamp, MinHrRamp, and OdTempMinHrRamp parameters. If there is no outdoor air temperature sensor available, then MinHrRamp is used as the recovery rate. Refer to the NOTE in the comments column for MaxHrRamp for what conditions that recovery ramping applies to.	
OaTempMinHrRp	nciAux1SetPt	ubOdTempMinHrRampS0	Degrees F 0 to 100 Degrees C (-18 to 38)	0		P		X	X				OaTempMinHrRamp is the minimum outdoor air temperature parameter that is used to calculate the heat recovery ramp rate during the HEAT recovery period. The setpoint is changed at a rate in degrees F per hour depending on the outdoor air temperature and the MaxHrRamp, MinHrRamp, and OdTempMaxHrRamp parameters. If there is no outdoor air temperature sensor available, then MinHrRamp is used as the recovery rate. Refer to the NOTE in the comments column for MaxHrRamp for what conditions that recovery ramping applies to.	
OaTempCILKOut	nciAux1SetPt	ubOdCILLockOutTempS0	Degrees F 0 to 90	50		P		X	X				When the outdoor air temperature is less than OdCILLockOutTemp, the cooling is disabled.	
MaxCIRamp	nciAux1SetPt	ubMaxCIRampS0	Degrees F/Hr 0 to 20 Degrees C/Hr (0 to 11)	6		P		X	X				MaxCIRamp is the maximum cool recovery ramp rate in degrees F per hour. This value is used to control the adaptive recovery ramp rate during the COOL recovery period. The setpoint is changed at a rate in degrees F per hour depending on the outdoor air temperature and the MinCIRamp, OdTempMaxCIRamp, and OdTempMinCIRamp parameters. If there is no outdoor air temperature sensor available, then MinCIRamp is used as the recovery rate. Refer to the NOTE in the comments column for MaxHrRamp for the conditions that recovery ramping applies to.	
MinCIRamp	nciAux1SetPt	ubMinCIRampS0	Degrees F/Hr 0 to 20 Degrees C/Hr (0 to 11)	2		P		X	X				MinCIRamp is the minimum cool recovery ramp rate in degrees F per hour. This value is used to control the adaptive recovery ramp rate during the COOL recovery period. The setpoint is changed at a rate in degrees F per hour depending on the outdoor air temperature and the MaxCIRamp, OdTempMaxCIRamp, and OdTempMinCIRamp parameters. If there is no outdoor air temperature sensor available, then MinCIRamp is used as the recovery rate. Refer to the NOTE in the comments column for MaxHrRamp for the conditions that recovery ramping applies to.	
OaTempMaxCIRp	nciAux1SetPt	ubOdTempMaxCIRampS0	Degrees F 0 to 100 Degrees C (-18 to 38)	70		P		X	X				OaTempMaxCIRamp is the maximum outdoor air temperature parameter that is used to calculate the cool recovery ramp rate during the COOL recovery period. The setpoint is changed at a rate in degrees F per hour depending on the outdoor air temperature and the MaxCIRamp, MinCIRamp, and OdTempMinCIRamp parameters. If there is no outdoor air temperature sensor available, then MinCIRamp is used as the recovery rate. Refer to the NOTE in the comments column for MaxHrRamp for the conditions that recovery ramping applies to.	

Table 21. Control Parameters. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic
OaTempMinClRp	nciAux1SetPt	ubOdTempMinClRampS0	Degrees F 0 to 100 Degrees C (-18 to 38)		90	P		X	X				OaTempMinClRamp is the minimum outdoor air temperature parameter that is used to calculate the cool recovery ramp rate setpoint. This value is used to control the adaptive recovery ramp rate during the COOL recovery period. The setpoint is changed at a rate in degrees F per hour depending on the outdoor air temperature and the MaxClRamp, MinClRamp, and OdTempMaxClRamp parameters. If there is no outdoor air temperature sensor available, then MinClRamp is used as the recovery rate. Refer to the NOTE in the comments column for MaxHlRamp for the conditions that recovery ramping applies to.
OaEconEnTemp	nciAux1SetPt	ubOdEconEnableTempS0	Degrees F 0 to 90 Degrees C (-18 to 32)		70	P		X	X				If Config.EconEnable is OD_TEMP and the outdoor temperature is less than OdEconEnableTemp, then outdoor air is judged suitable to augment mechanical cooling. If Config.EconEnable is SINGLE_ENTH and outdoor temperature is less than ubOdEconEnableTemp (high limit), then outdoor air may be judged suitable to augment mechanical cooling depending on the relationship between calculated outdoor enthalpy and OdEnthalpyEnable.
DiffEconEnTemp	nciAux1SetPt	ubDiffEconEnableTempS0	Degrees C (-18 to 32)		4	P		X	X				If Config.EconEnable is DIFF_TEMP and return air temperature minus outdoor air temperature is greater than DiffEconEnableTemp, then outdoor air is judged suitable to augment mechanical cooling.
OaEnthEn	nciAux1SetPt	ubOdEnthalpyEnableS2	btu/lb 0 to 65		25	P		X	X				If Config.EconEnable is SINGLE_ENTH, and calculated outdoor enthalpy is less than OdEnthalpyEnable, and outdoor temperature is less than OdEconEnableTemp, then outdoor air is judged suitable to augment mechanical cooling.
EconMinPos	nciAux1SetPt	ubEconMinPosS0	Percentage 0 to 100		0	P		X	X				The minimum allowed position of the economizer damper for HEAT and COOL is EconMinPos.
EconIaQPos	nciAux1SetPt	ubEconIaQPosS0	Percentage 0 to 100		80	P		X	X				The control overrides the economizer damper to EconIaQPos when poor indoor air quality is detected.
IaQSetPt	nciAux1SetPt	siCO2IaQLimitS0	PPM 0 to 2000		800	P		X	X				When an analog CO ₂ sensor is configured and the sensed CO ₂ is greater than CO2IaQLimit, then poor indoor air quality is detected and Data1.OverRide is set to 1. When the sensed CO ₂ is less than CO2IaQLimit, then the indoor air quality is considered acceptable and Data1.IaQOverRide is set to 0. oData1.IaQOverRide is used to set the economizer damper to Aux1SetPt. EconIaQPos and to possibly turn on the heat according to the state of Config.IaQUseHeat.
PwmPeriod	nciAux1SetPt	siPwmPeriodS4			100	P		X	X				When pulse width modulation is used, the period of one pulse width modulation cycle is PwmPeriod seconds. The smallest resolution is 0.1 seconds.
PwmZeroScale	nciAux1SetPt	siPwm0pntS4	Seconds 0 to 2047		1	P		X	X				When pulse width modulation is used, the period of a pulse for zero percent output (damper or valve at open position) is Pwm0pntS4 seconds. The smallest resolution is 0.1 seconds.
PwmFullScale	nciAux1SetPt	siPwm100pntS4	Seconds 0 to 2047		99	P		X	X				When pulse width modulation is used, the period of a pulse for full scale output (damper or valve at open position) is Pwm100pnt seconds. The smallest resolution is 0.1 seconds.

Table 21. Control Parameters. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
ByptTime	nciAux2SetPt	uiBypassTime	minutes 0 to 1080		180	P	X	X	X				uiBypassTime is the time between the pressing of the override button at the wall module (or initiating OC_BYPASS via ManOcc) and the return to the original occupancy state. When the bypass state has been activated, the bypass timer is set to BypassTime.	
FltrPressSPt	nciAux2SetPt	ubFilterPressSPtS5	in. w.c. (kPa) 0 to 5 (0 to 1.25)		0.5	P	X	X	X				If a filter pressure sensor is configured by IoSelect and the filter pressure reported in Data1 FilterPressure exceeds FilterPressSPt, then a DIRTY_FILTER alarm is generated and Data1 DirtyFilter is set to 1.	
SptKnobLowLim	nciAux2SetPt	siLowSPtS7	Degrees F -9 to 90 Degrees C (-23 to 32)		55	P	X	X	X				LowSPt is the lowest value reported for the setpoint knob. Dependent on the configuration of the setpoint knob (see Config.SetPntKnob) this setting is either absolute [degree Fahrenheit (50 to 90)] in case of absolute setpoint knob configuration or relative [delta degree Fahrenheit (-9 to +9)] in case of relative setpoint knob configuration.	
SptKnobHiLim	nciAux2SetPt	siHighSPtS7	Degrees F -9 to 90 Degrees C (-23 to 32)		85	P	X	X	X				HighSPt is the highest value reported for the setpoint knob. Dependent on the configuration of the setpoint knob (see Config.SetPntKnob) this setting is either absolute [degree Fahrenheit (50 to 90)] in case of absolute setpoint knob configuration or relative [delta degree Fahrenheit (-9 to +9)] in case of relative setpoint knob configuration.	
GainCoolProp	nciAux2SetPt	ubKpCoolS2	Degrees C 2 to 30		5	P	X	X	X				This is the throttling range for the proportional portion of the PID loop gain for the cooling control loop.	
GainHeatProp	nciAux2SetPt	ubKpHeatS2	Degrees F 2 to 30		5	P	X	X	X				This is the throttling range for the proportional portion of the PID loop gain for the heating control loop.	
GainCoolInt	nciAux2SetPt	siKiCoolS0	Seconds 0 to 5000		2050	P	X	X	X				This is the integral portion of the PID loop gain for the cooling control loop.	
GainHeatInt	nciAux2SetPt	siKiHeatS0	Seconds 0 to 5000		2050	P	X	X	X				This is the integral portion of the PID loop gain for the heating control loop.	
GainCoolDer	nciAux2SetPt	siKdCoolS0	Seconds 0 to 9000		0	P	X	X	X				This is the derivative portion of the PID loop gain for the cooling control loop.	
GainHeatDer	nciAux2SetPt	siKdHeatS0	Seconds 0 to 9000		0	P	X	X	X				This is the derivative portion of the PID loop gain for the heating control loop.	
DaTempCCtrlBd	nciAux2SetPt	ubDisCbCoolS0	Degrees F 5 to 30		10	P	X	X	X				DisCbCool is the throttling range used for the cooling portion of the discharge air temperature cascade control loop.	
DaTempHCtrlBd	nciAux2SetPt	ubDisCbHeatS0	Degrees F 5 to 30		10	P	X	X	X				DisCbHeat is the throttling range used for the heating portion of the discharge air temperature cascade control loop.	
DaTempEccCtrlBd	nciAux2SetPt	ubDisCbEconS0	Degrees F 5 to 30		10	P	X	X	X				DisCbEcon is the throttling range used for the economizer control loop.	

Table 22. Energy Management Points.

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share Map	Direct Access	Hardware Config.	Manual Config.	Failure Detect	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic Comments
DestDicShed	nviDicShed		0 to 1		0	M	X	X		X	X	DicShed is an input from an energy management system. When DicShed is 0, the temperature control algorithm operates in a normal mode. When DicShed is non-zero, the setpoint is shifted by Aux1SetPt.DicBumpTemp in the energy saving direction.
DestSchedOcc	nviTodEvent	CurrentState	OC_OCCUPIED OC_UNOCCUPIED OC_BYPASS OC_STANDBY OC_NUL	0 1 2 3 255	OC_OCCUPIED	M	X	X		X	X	CurrentState indicates the current scheduled occupancy state to the node. CurrentState is used along with other occupancy inputs to calculate the effective occupancy of the node. The valid states and meaning are as follows: OC_OCCUPIED means the energy management system is specifying occupied. OC_UNOCCUPIED means the energy management system is specifying that the space is presently unoccupied. OC_BYPASS states that the energy management system is in bypass. OC_STANDBY states that the energy management system has the space presently is between occupied and unoccupied. OC_NUL states that no occupancy state has been specified.
TodEventNext	nviTodEvent	NextState	OC_OCCUPIED OC_UNOCCUPIED OC_BYPASS OC_STANDBY OC_NUL	0 1 2 3 255	OC_OCCUPIED	M		X		X		NextState indicates the next scheduled occupancy state to the node. This information is required by the Excel 10 to perform the optimum start strategy. The space expected effective occupancy will be NextState in uiTimeToNextState minutes. The valid states and meaning are the same as for CurrentState.
Tuncos	nviTodEvent	uiTimeToNextState	minutes 0 to 2880		0	M		X		X		TimeToNextState is the time in minutes until the next change of scheduled occupancy state.
	nviBypass	value	0 to 100		0							Bypass.value: The bypass state of one node may be shared with the bypass state of another node using nviBypass and nvoBypass. This allows a wall module at one node to be used to override the scheduled occupancy of another node. The node with Bypass bound normally does not have a wall module. See the Data1.EffectOcc and Data1.OverRide for more details. The valid states are as follows: if the state is SW_ON and the value is not zero then the node should bypass the time of day schedule (subject to occupancy arbitration logic). If the state is SW_NUL, the input is not available because it is not bound, the input is no longer being updated by the sender, or OC_BYPASS is no longer being called. This means that the same as SW_OFF. If the state is SW_OFF or other and the value is don't care, the node should not bypass the time of day schedule. If the state is SW_ON and the value is 0, then the node should not bypass the time of day schedule. If the node receives this combination of state and value, then state is set to SW_OFF.
DestBypass	nviBypass	state	SW_OFF SW_ON SW_NUL	0 1 255	SW_NUL	M	X	X		X	X	Refer to nviBypass.value.
SrcByPct	nvoBypass	value	0 to 100		0							nvoBypass.value.nvoBypass is the current occupancy state of the node for bypass schedule. The states have the following meanings: If the state is SW_OFF and the value is 0, then Data1.EffectOcc is not OC_BYPASS. If the state is SW_ON and the value is 100 percent, then Data1.EffectOcc is OC_BYPASS.
SrcBypass	nvoBypass	state	SW_OFF SW_ON SW_NUL	0 1 255	SW_NUL	M	X	X				Refer to nvoBypass.value.

Table 22. Energy Management Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Failure Detect	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	nviFree1	value	0 to 100	0	0									Free1.value network variable controls the spare or Free digital output for auxiliary functions. nviFree1 controls the FREE1_OUT, FREE1_OUT_PULSE_ON, and FREE1_OUT_PULSE_OFF outputs (only one of these DO selections per controller is allowed). The states have the following meaning: if the state is SW_OFF, the corresponding free logical output (and therefore the physical output, if configured) is off. If the state is SW_ON and the value is 0, then the corresponding free logical output (and therefore the physical output, if configured) is on. If the state is this combination of state and value, then state is set to SW_OFF. If the state is SW_ON and the value is not zero, then the corresponding free logical output (and therefore the physical output, if configured) is on. If the state is SW_NULL or other, then the network variable is not bound, the communications path from the sending node has failed, or the sending node has failed. The corresponding free logical output does not change if the network variable input fails.
DestFree1	nviFree1	state	SW_OFF SW_ON SW_NULL	0 1 255	SW_NULL	M	X		X		X	X		Refer to Free1.value.
	nviFree2	value	0 to 100	0	0									Free2.value behaves the same as Free 1 value.
DestFree2	nviFree2	state	SW_OFF SW_ON SW_NULL	0 1 255	SW_NULL	M	X		X		X	X		Refer to Free2.value.
	nviWSPHPEnable	value	0 to 100	0	0									WSPHPEnable.value is used to enable the compressor stages in heat pump applications. Typically nviWSPHPEnable is bound to a water flow sensor that detects heating/cooling water supplied to the heat pump. If there is no water flowing the compressor is disabled. If the state is SW_OFF, the compressor is disabled in heat pump applications. If the state is SW_ON and the value is 0, the compressor is disabled in heat pump applications. If the node receives this combination of state and value, then state is set to SW_OFF. If the state is SW_ON and the value is not zero, the compressor is enabled in heat pump applications. If the state is SW_NULL or other, the network variable is not bound and is ignored.
DestWSPHPEnable	nviWSPHPEnable	state	SW_OFF SW_ON SW_NULL	0 1 255	SW_NULL							X		Refer to WSPHPEnable.value.

Table 22. Energy Management Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Failure Detect	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	nvtTimeClk	value	0 to 100	0	0									nvtTimeClk.value:nvtTimeClk allows a time clock at one node to be shared with other nodes over the network. nvtTimeClk is ORed with the local time clock sensor and the results are placed in Data1.OccTimeClock. TimeClk is received from another node and may have the following values: if the state is SW_OFF, the space is scheduled to be unoccupied. If the state is SW_ON and the value is 0, the space is scheduled to be unoccupied. If the node receives this combination of state and value, then state is set to SW_OFF. If the state is SW_ON and the value is not zero, the space is scheduled to be occupied. If the state is SW_NUL or other and the value is don't care, the network variable is not bound and is ignored.
DestTimeClk	nvtTimeClk	state	SW_OFF SW_ON SW_NUL	0 1 255	SW_NUL							X		Refer to nvtTimeClk.value.
SrcTimeClkCt	nvoTimeClk	value	0 to 100	0	0									nvoTimeClk reports the current state of the physical time clock input. The output values have the following meanings: if the state is SW_OFF and the value is 0, the time clock input is configured and the input is open circuit. If SCHEDULE_MASTER_IN is configured, then the schedule master input must be shorted to ground to reach this state. If the state is SW_ON and the value is 100 present, the time clock input is configured and the input is a closed circuit. If SCHEDULE_MASTER_IN is configured, then the schedule master input must be shorted to ground to reach this state. If the state is SW_NUL and the value is 0, the time clock input is not configured by Select or the SCHEDULE_MASTER_IN physical input is configured and the input is open (nvoIO.ScheduleMaster = 0).
SrcTimeClk	nvoTimeClk	state	SW_OFF SW_ON SW_NUL	0 1 255	SW_NUL									Refer to nvoTimeClk.value.

Table 23. Status Points.

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	nroPgmVer	id[RTU1							R O M	A four byte ASCII string indicating the type of node (model).	
	nroPgmVer	major_ver		1	1							R O M	Software version.	
	nroPgmVer	minor_ver		0	0							R O M	Software version.	
	nroPgmVer	bug_ver		0	0							R O M	Software version.	
	nroPgmVer	node_type		1	1							R O M	The Node Type is a numeric identifier that is stored in EPROM that identifies the Excel 10 node type. Whenever a new software version or upgrade is issued, this is reflected in nroPgmVer which typically is read by a network management node to identify the node type. The contents of nroPgmVer contain compatible model type information and is fixed at the time when the node software is compiled.	
SrcEmerg	nvoEmerg		EMERG_NORMAL EMERG_PRESSURIZE EMERG_DEPRESSURIZE EMERG_PURGE EMERG_SHUTDOWN EMERG_NUL	0 1 2 3 4 255	EMERG_NORMAL	M	X	X	X				Emerg is an emergency output reflecting the state of the locally wired smoke detector. If Emerg is EMERG_NORMAL, then no smoke is being detected by the local sensor or that the smoke detector input is not configured. If Emerg is EMERG_PURGE, the locally wired smoke sensor is indicating a smoke condition. EMERG_PRESSURIZE, EMERG_DEPRESSURIZE, and EMERG_SHUTDOWN are not supported by Emerg. If Emerg is not configured then it is set to EMERG_NUL	
	nvoAlarm	subnet	1 to 255	0	0								subnet is the LonWorks subnet number (in domain entry 1 of the nodes domain table) to which the node is assigned.	
	nvoAlarm	node	0 to 127	0	0								node is the LonWorks node number (in domain entry 1 of the nodes domain table) assigned to the node.	
	nvoAlarm	type	0 to 255	0	0								type is the alarm type being issued. When an alarm condition is no longer TRUE, type is set to the sum of the alarm conditions numeric value and the RETURN_TO_NORMAL numeric value. The type also is recorded in AlarmLog. When a new alarm is detected, just the corresponding numeric value for the alarm is reported. Refer to Table 12 (Excel 10 Alarms) in the System Engineering Guide for all the error conditions that may be reported.	
StatusAlmTyp	nvoAlarmStatus	alarm_bit[0] Byte Offset = 0 Bit Offset = 0(InputNVFailAlrm)	FALSE TRUE	0 1	FALSE		X	X	X				alarm_bit[0]Byte Offset = 0Bit Offset = 0(InputNVFailAlrm)alarm_bit [n] contains a bit for every possible alarm condition. Each alarm type has a corresponding bit in alarm_bit[n] (Alarm.type: 1..24, without RETURN_TO_NORMAL).	
	nvoAlarmStatus	alarm_bit[0] Byte Offset = 0 Bit Offset = 1 (NodeDisableAlrm)	FALSE TRUE	0 1	FALSE								alarm_bit[0] Byte Offset = 0 Bit Offset = 1 (NodeDisableAlrm)	

Table 23. Status Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	nvoAlarmStatus	alarm_bit[0] Byte Offset = 0 Bit Offset = 2 (SensorFailAlrm)	FALSE TRUE	0 1	FALSE								alarm_bit[0] Byte Offset = 0 Bit Offset = 2 (SensorFailAlrm)	
	nvoAlarmStatus	alarm_bit[0] Byte Offset = 0 Bit Offset = 3 (FrostProtectAlrm)	FALSE TRUE	0 1	FALSE								alarm_bit[0] Byte Offset = 0 Bit Offset = 3 (FrostProtectAlrm)	
	nvoAlarmStatus	alarm_bit[0] Byte Offset = 0 Bit Offset = 4 (InvalidSetPAlrm)	FALSE TRUE	0 1	FALSE								alarm_bit[0] Byte Offset = 0 Bit Offset = 4 (InvalidSetPAlrm)	
	nvoAlarmStatus	alarm_bit[0] Byte Offset = 0 Bit Offset = 5 (LossAirFlowAlrm)	FALSE TRUE	0 1	FALSE								alarm_bit[0] Byte Offset = 0 Bit Offset = 5 (LossAirFlowAlrm)	
	nvoAlarmStatus	alarm_bit[0] Byte Offset = 0 Bit Offset = 6 (DirtyFilterAlrm)	FALSE TRUE	0 1	FALSE								alarm_bit[0] Byte Offset = 0 Bit Offset = 6 (DirtyFilterAlrm)	
	nvoAlarmStatus	alarm_bit[0] Byte Offset = 0 Bit Offset = 7 (SmokeAlrm)	FALSE TRUE	0 1	FALSE								alarm_bit[0] Byte Offset = 0 Bit Offset = 7 (SmokeAlrm)	
	nvoAlarmStatus	alarm_bit[1] Byte Offset = 1 Bit Offset = 0 (IaqOverRideAlrm)	FALSE TRUE	0 1	FALSE								alarm_bit[1] Byte Offset = 1 Bit Offset = 0 (IaqOverRideAlrm)	

Table 23. Status Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
AlarmLog1	nvoAlarmLog	type[0] 0 to 255 (AlarmTypeLog0) (AlarmTypeLog1) (AlarmTypeLog2) (AlarmTypeLog3) (AlarmTypeLog4)	NO_ALARM INPUT_NV_FAILURE NODE_DISABLED SENSOR_FAILURE FROST_PROTECTION INVALID_SET_POINT LOSS_OF_AIR_FLOW DIRTY_FILTER SMOKE_ALARM IAQ_OVERRIDE LOW_LIM_ECON_CLOSE rINPUT_NV_FAILURE rNODE_DISABLED rSENSOR_FAILURE rFROST_PROTECTION rINVALID_SET_POINT rLOSS_OF_AIR_FLOW rDIRTY_FILTER rSMOKE_ALARM rIAQ_OVERRIDE rLOW_LIM_ECON_CLOSE rALARM_NOTIFY_DISABLED	0 1 2 3 4 5 6 7 8 9 10 129 130 131 132 133 134 135 136 137 138 255	NO_ALARM				X				type[0] 0 to 255 (AlarmTypeLog0) (AlarmTypeLog1) (AlarmTypeLog2) (AlarmTypeLog3) (AlarmTypeLog4) A supervisory node may poll the AlarmLog output for a short alarm history. The last five alarm reports sent via nvoAlarm are reported via AlarmLog. When ALARM_NOTIFY_DISABLED is entered into the log, further alarms or return to normals are not entered into the log, until alarm reporting is again enabled. If Alarm is bound and not being acknowledged, the last alarm report entered into AlarmLog is the one that was not acknowledged. See Alarm and AlarmStatus for related subjects.type [n] specifies the alarm that was issued via Alarm. See Alarm for the alarm types used in AlarmLog. The newest alarm is reported in type[0] and the oldest is reported in type[4]. When a new entry is made to the log, the oldest entry is lost.	
	nvoData1 (nvoCtDataG1)	FieldNo	UPDATE_ALL_FIELDS MODE_FIELD EFFECT_OCC_FIELD OVERRIDE_FIELD SCHED_OCC_FIELD OCC_TIME_CLOCK_FIELD NET_MAN_OCC_FIELD SEN_OCC_FIELD ECON_ENABLE_FIELD PROOF_AIR_FLOW_FIELD CALC_OD_ENTHALPY_FIELD CALC_RA_ENTHALPY_FIELD HEAT_STAGES_ON_FIELD COOL_STAGES_ON_FIELD FREE1_OUT_FIELD FREE2_OUT_FIELD OCC_STATUS_OUT_FIELD FAN_ON_FIELD AUX_ECON_OUT_FIELD ECON_FLOAT_SYNCH_FIELD DLC_SHED_FIELD IAQ_OVERRIDE_FIELD SMOKE_MONITOR_FIELD WINDOW_OPEN_FIELD DIRTY_FILTER_FIELD SHUTDOWN_FIELD MON_SWITCH_FIELD WSHP_ENABLE_FIELD UPDATE_NO_FIELDS	0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 127	UPDATE_ALL_FIELDS								FieldNo: nvoData1 and nvoCtDataG1 are output network variables indicating the node status. The information contained in these network variables are typically used to display the node status on an operator terminal, used in a trend log, or used in a control process. The information contained in nvoCtDataG1 and nvoData1 are identical. nvoCtDataG1 uses the SGPUC mechanism to update the status or values. The fields in nvoData are updated when network variables are polled by the receiver. Then every six seconds the difference between the field in nvoData and nvoCtDataG1 is calculated. If the difference is significant the field is updated according to the SGPUC mechanism. FieldNo indicates which other data field in the SGPUC network variable has changed since the last time it was sent on the network according to the SGPUC mechanism. If FieldNo is UPDATE_ALL_FIELDS, then all fields have been updated. If FieldNo is UPDATE_NO_FIELDS, then no fields have been updated recently.	

Table 23. Status Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
StatusMode	nvoData1 (nvoChDataG1)	Mode	START_UP_WAIT HEAT COOL OFF_MODE DISABLED_MODE EMERG_HEAT SMOKE_EMERGENCY FREEZE_PROTECT MANUAL FACTORY_TEST FAN_ONLY	0 1 2 3 4 5 6 7 8 9 10	START_UP_WAIT	X		X					Mode: The result of the controller determining which mode of operation it currently is in. At each power-up, the controller remains in the Start-Up and Wait mode (a random time from 0 to 20 minutes that is based on the units network number). After that period, the mode changes to initialize actuators that will fully close the damper and valve actuators to insure full travel when under program control. The various other modes are due to normal operation as well as manual and network commands.	
StatusOcc	nvoData1 (nvoChDataG1)	EffectOcc	OC_OCCUPIED OC_UNOCCUPIED OC_BYPASS OC_STANDBY OC_NUL	0 1 2 3 255	OC_NUL	X		X					EffectOcc: Result of controller supervising the various Occupied controlling inputs and deciding which one to use. See StatusnOcy, DestSchedOcc, ManualOcc and StatusOvrd.	
StatusOvrd	nvoData1 (nvoChDataG1)	Override	OC_OCCUPIE DOC_UNOCCUPIED OC_BYPASS OC_STANDBY OC_NUL	0 1 2 3 255	OC_NUL	X		X					Override: is the effective manual override state arbitrated from NetManOcc, the wall module override button and the Bypass Timer.	
StatusSched	nvoData1 (nvoChDataG1)	SchedOcc	OC_OCCUPIED OC_UNOCCUPIED OC_BYPASS OC_STANDBY OC_NUL	0 1 2 3 255	OC_NUL	X		X					DestSchedOcc: DestSchedOcc is calculated from OccTimeClock and nviTodEvent.CurrentState using the following logic: If nviTodEvent.CurrentState is OC_OCCUPIED and OccTimeClock is ST_NUL, then DestSchedOcc is OC_OCCUPIED. If nviTodEvent.CurrentState is OC_UNOCCUPIED and OccTimeClock is ST_NUL, then DestSchedOcc is OC_UNOCCUPIED. If nviTodEvent.CurrentState is OC_STANDBY and OccTimeClock is ST_NUL, then DestSchedOcc is OC_STANDBY. If nviTodEvent.CurrentState is OC_STANDBY and OccTimeClock is ST_ON, then DestSchedOcc is ST_ON. If nviTodEvent.CurrentState is ST_OFF, then DestSchedOcc is OC_UNOCCUPIED. OC_OCCUPIED means the space is scheduled to be occupied. OC_UNOCCUPIED means the space is scheduled to be unoccupied. OC_STANDBY means the space is scheduled to be in a standby state somewhere between OC_OCCUPIED and OC_UNOCCUPIED.	
TimeClockOcc	nvoData1 (nvoChDataG1)	OccTimeClock	ST_OFF ST_LOW ST_MED ST_HIGH ST_ON ST_NUL	0 1 2 3 4 255	ST_NUL	X		X					OccTimeClock: OccTimeClock shows the state of the physical time clock input via nvoIO OccTimeClock ORed with nviTimeCk. Valid enumerated values are: ST_OFF means OC_UNOCCUPIED when either the time clock input is configured and nvoIO OccTimeClock is 0 and nviTimeCk is not SW_ON or nviTimeCk.state is SW_OFF and nvoIO OccTimeClock is not 1. ST_ON means OC_OCCUPIED when either the time clock input is configured and nvoIO OccTimeClock is 1 or nviTimeCk.state is SW_ON. ST_NUL means that the local time clock input is not configured by nvoIOSelect and nviTimeCk.state is SW_NUL. There is no time clock configured or bound to the node.	

Table 23. Status Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
StatusManOcc	nvoData1 (nvoChDataG1)	NetManOcc	OC_OCCUPIED OC_UNOCCUPIED OC_BYPASS OC_STANDBY OC_NUL	0 1 2 3 255	OC_NUL			X					NetManOcc: NetManOcc reports the network manual occupancy state from nviManOcc. The valid enumerated states are: OC_OCCUPIED indicates occupied OC_UNOCCUPIED indicates not occupied OC_BYPASS indicates that the space is bypass occupied for nciAux2SelPt.uilByPassTime seconds after nviManOcc is first set to OC_BYPASS OC_STANDBY indicates that the space is standby. OC_NUL means that no manual override is active.	
StatusOcySen	nvoData1 (nvoChDataG1)	SenOcc	OC_OCCUPIED OC_UNOCCUPIED OC_BYPASS OC_STANDBY OC_NUL	0 1 2 3 255	OC_NUL			X					SenOcc: SenOcc indicates the current state of the sensed occupancy and is calculated from nviSensorOcc and the local occupancy sensor via nvoO_OccupancySensor. The local sensor and nviSensorOcc are ORed together. If either the local sensor or nviSensorOcc shows occupancy, then SenOcc shows occupancy. The valid enumerated values are: OC_OCCUPIED means that occupancy is sensed by one or more sensors. OC_UNOCCUPIED means that no occupancy is sensed by any sensors. OC_NUL means no local sensor is configured and nviSensorOcc has failed to be received periodically (bound or not bound).	
StatusEconEn	nvoData1 (nvoChDataG1)	EconEnable	ST_OFF ST_LOW ST_MED ST_HIGH ST_ON ST_NUL	0 1 2 3 4 255	ST_NUL			X					EconEnable: EconEnable indicates the current suitability of outdoor air for use in cooling used by the control process EconEnable is periodically calculated either from the sensor(s) specified by nciConfig.EconEnable or from nviEcon. When nviEcon.state is not SW_NUL, then the local inputs are ignored and nviEcon.state is used instead. See nciConfig.EconEnable. The valid enumerated values are: ST_OFF means the outdoor air is not suitable to augment cooling. ST_ON means the outdoor air is suitable to augment cooling. ST_NUL means no local sensor is selected by nciConfig.EconEnable, or the selected local sensor has failed or has not been configured by nciO_Select, and that nviEcon.state is SW_NUL. The outdoor air is considered unsuitable for cooling.	
SaFanStatus	nvoData1 (nvoChDataG1)	ProofAirFlow	ST_OFF ST_LOW ST_MED ST_HIGH ST_ON ST_NUL	0 1 2 3 4 255	ST_NUL			X					ProofAirFlow: ProofAirFlow indicates the current state of the ProofAirFlow switch used by the control process and is read by the local sensor via nvoO_ProofAirFlow. The valid enumerated values are: ST_OFF means air flow is not detected. ST_ON means air flow is detected. ST_NUL means no air flow switch is configured.	
OaEnthCalc	nvoData1 (nvoChDataG1)	siCalcODEnthalpyS7	btu/lb 0 to 100		SI_INVALID			X					siCalcODEnthalpyS7: siCalcODEnthalpyS7 is the calculated outdoor air enthalpy in btu / lb calculated from the siOutdoorTempS7 and siOutdoorHumidityS1. siCalcODEnthalpyS7 is used to determine the suitability of outside air for cooling when nciConfig.EconEnable is SINGLE_ENTH and both outdoor temperature and humidity sensors are present. siCalcODEnthalpyS7 is compared to the enthalpy setpoint stored in nciAux1SetPts.subOdEnthalpyEnables2.	
RaEnthCalc	nvoData1 (nvoChDataG1)	siCalcRAEnthalpyS7	btu/lb 0 to 100		SI_INVALID			X					siCalcRAEnthalpyS7: siCalcRAEnthalpyS7 is the calculated return air enthalpy in btu / lb calculated from the siReturnTempS7 and siReturnHumidityS1. siCalcRAEnthalpyS7 is used to determine the suitability of outside air for cooling when nciConfig.EconEnable is DIFF_ENTH and both outdoor and return (or space) temperature sensors and humidity sensors are present. Sensors may be physically connected to the node or available over the network.	

Table 23. Status Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
HeatStgsOn	nvoData1 (nvoChIDataG1)	HeatStagesOn	0 to 4	0	0			X					HeatStagesOn: HeatStagesOn indicates how many heating stages are on. If the node is controlling a heat pump, HeatStagesOn indicates how many auxiliary heating stages are turned on.	
CoolStgsOn	nvoData1 (nvoChIDataG1)	CoolStagesOn	0 to 4	0	0			X					CoolStagesOn: CoolStagesOn indicates how many compressor stages are on. If the node is controlling a heat pump, compressor stages are turned on for both heating or cooling.	
Free1Stat	nvoData1 (nvoChIDataG1)	Free1Out	FALSE TRUE	0 1	FALSE			X					Free1Out: Free1Out indicates the state of FREE1_OUT digital output. 1 means on, and 0 means off.	
Free2Stat	nvoData1 (nvoChIDataG1)	Free2Out	FALSE TRUE	0 1	FALSE			X					Free2Out: Free2Out indicates the state of FREE2_OUT digital output. 1 means on, and 0 means off.	
OccStatOut	nvoData1 (nvoChIDataG1)	OccStatusOut	FALSE TRUE	0 1	FALSE			X					OccStatusOut: OccStatusOut indicates the state of the OCCUPANCY_STATUS_OUT digital output. 1 means on (not OC_UNOCCUPIED), and 0 means off (OC_UNOCCUPIED).	
SaFan	nvoData1 (nvoChIDataG1)	FanOn	FALSE TRUE	0 1	FALSE			X					FanOn: FanOn indicates the state of the FAN_OUT digital output. 1 means on, and 0 means off.	
StatusEconOut	nvoData1 (nvoChIDataG1)	AuxEconOut	FALSE TRUE	0 1	FALSE			X					AuxEconOut: AuxEconOut indicates the state of the AUX_ECON_OUT digital output. 1 means that the packaged economizer is enabled, and 0 means the economizer is disabled. A packaged economizer is always treated as the first stage of cooling when an economizer is configured by nclIoSelect.	
	nvoData1 (nvoChIDataG1)	EconFloatSynch	FALSE TRUE	0 1	FALSE								EconFloatSynch: EconFloatSynch indicates that the economizer damper motor is being synchronized with the reported economizer position by driving the damper for a period longer than it takes to fully close the damper. The reported economizer position is synchronized whenever an endpoint is reached (full open or full close), and when the elapsed time since the last synchronization is 24 hours.	
DlcShed	nvoData1 (nvoChIDataG1)	DlcShed	FALSE TRUE	0 1	FALSE								DlcShed: DlcShed indicates the state of nviDlcShed. When DlcShed is 1, demand limit control set by an energy management node is active. If the effective occupancy is OC_OCCUPIED or OC_STANDBY when demand limit control is active, then the setpoint is shifted by nclAux1/SetPt.slDlcBumpTempS7 in the energy saving direction. When DlcShed is 0, demand limit control is inactive. If nviDlcShed fails to be received periodically or nviDlcShed becomes 0, then the setpoint is ramped back to the original setpoint over a 30 minute interval.	

Table 23. Status Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic
StatusIaqOvr	nvoData1 (nvoChIDataG1)	IaqOverRide	FALSE TRUE	0 1	FALSE			X					IaqOverRide: When an economizer is configured, IaqOverRide indicates the current state of the indoor air quality, an is used by the control process to open the economizer damper to let in more outside air. 1 means poor indoor air quality, and 0 means indoor air quality is OK. When IaqOverRide is 1, the IAQ_OVERRIDE alarm is initiated. IaqOverRide indicates poor air quality if the analog sensor OR a digital sensor (local or via network) shows poor air quality. Specifically, if nvoData2.siSpaceCo2S0 is not SI_INVALID, and exceeds nciAux1SelPt.siCO2IaqLimitS0, then poor air quality is detected. Also if nviIaqOvr.state is SW_ON, then poor air quality is detected. Or if a local digital input is configured as IAQ_OVERRIDE_IN and nvoIaqOverRide is 1 then poor air quality is also detected. When poor air quality is detected, the economizer minimum position is set to nciAux1SelPts.ubEconIaqPosS0, instead of nciAux1SelPts.ubEconMinPosS0. When an economizer is not configured, IaqOverRide is 0.
StatusSmoke	nvoData1 (nvoChIDataG1)	SmokeMonitor	FALSE TRUE	0 1	FALSE			X					SmokeMonitor: SmokeMonitor indicates the current state of the SmokeMonitor input used by the control process and is read from another node via nviEmerg or the local sensor via nvoIO.SmokeMonitor. If either nviEmerg is not EMERG_NORMAL or nvoIO.SmokeMonitor is 1, then SmokeMonitor is 1 meaning that smoke is detected. Otherwise SmokeMonitor is 0, meaning smoke is not detected. When smoke monitor is 1, the algorithm controls as per the settings found in nciConfig.SmokeControl.
StatusWndow	nvoData1 (nvoChIDataG1)	WindowOpen	FALSE TRUE	0 1	FALSE			X					WindowOpen: WindowOpen indicates the current state of the window sensors and is calculated from nviWindow state and the local occupancy sensor via nvoIO.WindowOpen. The local sensor and nviWindow are ORed together. If either the local sensor or nviWindow shows that the window is open (nvoIO.WindowOpen = 1 or nviWindow.state = SW_ON), then WindowOpen shows that the window is open. 1 means that the window is open and 0 means that the window is closed. When the window is open, the controller mode is switched to FREEZE_PROTECT.
StatusFilter	nvoData1 (nvoChIDataG1)	DirtyFilter	FALSE TRUE	0 1	FALSE			X					DirtyFilter: DirtyFilter indicates the state of the air filter via the nvoIO.DirtyFilter digital input or the nvoData1.siFilterPressureS10 analog input. If nvoData1.siFilterPressureS10 exceeds nciAux2SetPt.ubFilterPressStpS5, a dirty filter is indicated. DirtyFilter is set to 1 when a dirty filter has been detected by either method for one minute. DirtyFilter is set to 0 when a dirty filter has not been detected by either method for one minute. When DirtyFilter is 1, a DIRTY_FILTER alarm is generated.
ShutDown	nvoData1 (nvoChIDataG1)	ShutDown	FALSE TRUE	0 1	FALSE			X					ShutDown: ShutDown indicates the state of the ShutDown input via nvoIO.ShutDown. 1 means a ShutDown is being commanded and 0 means normal operation.
StatFreezeStat	nvoData1 (nvoChIDataG1)	CoilFreezeStat	FALSE TRUE	0 1	FALSE	M		X	X				StatFreezeStat: StatFreezeStat gives the state of the cooling coil controlled by the CV/AHU. False (0) it is not freezing or True (1) it is freezing. NOTE: Only use this User Address when using E-Vision.
MonitorSw	nvoData1 (nvoChIDataG1)	MonSwitch	FALSE TRUE	0 1	FALSE			X					MonSwitch: MonSwitch is the state of the digital input wired to a general purpose monitor switch via nvoIO.MonSwitch. 1 means that the switch is closed and 0 means that the switch is open.

Table 23. Status Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
WShpEnable	nvoData1 (nvoCtIDataG1)	WShpEnable	FALSE TRUE	0 1	FALSE			X						WShpEnable: WShpEnable reports the state of the current state of nviWShpEnable. The states for nviWShpEnable are as follows: If nviWShpEnable.state is SW_OFF and the nviWShpEnable.value is 0, then WShpEnable is 0 (Disable Water Source Heat Pump). If nviWShpEnable.state is SW_ON and the nviWShpEnable.value is 0, then WShpEnable is 0 (Disable Water Source Heat Pump). If nviWShpEnable.state is SW_ON and the nviWShpEnable.value is not 0, then WShpEnable is 1 (Enable Water Source Heat Pump). If nviWShpEnable.state is SW_NUL and the nviWShpEnable.value is any value, then WShpEnable is 1 (Enable Water Source Heat Pump when nviWShpEnable is not bound to another node).
	nvoData2 (nvoCtIDataG2)	FieldNo	UPDATE_ALL_FIELDS BYPASS_TIMER_FIELD TEMP_CONTROL_PT_FIELD SPACE_TEMP_FIELD DISCHARGE_TEMP_FIELD RETURN_TEMP_FIELD RETURN_HUMIDITY_FIELD RETURN_ENTHALPY_FIELD OUTDOOR_TEMP_FIELD OUTDOOR_HUMIDITY_FIELD OUTDOOR_ENTHALPY_FIELD FILTER_PRESSURE_FIELD SPACE_CO2_FIELD MONITOR_VOLTS_FIELD COOL_POS_FIELD HEAT_POS_FIELD ECON_POS_FIELD UPDATE_NO_FIELDS		UPDATE_ALL_FIELDS									nvoData2: FieldNo: nvoData2 and nvoCtIDataG2 are output network variables indicating the node status. The information contained in these network variables are typically used to display the node status on an operator terminal, used in a trend log, or used in a control process. The information contained in nvoCtIDataG2 and nvoData2 are identical. nvoData2 is a polled network variable and must be polled by the receiver. nvoCtIDataG2 uses the SGPUC mechanism. FieldNo indicates which other data field in the SGPUC network variable has changed since the last time it was sent on the network according to the SGPUC mechanism.
BypTimer	nvoData2 (nvoCtIDataG2)	uiBypassTimer	minutes 0 to 2880		0			X						uiBypassTimer: The time left in the bypass timer is uiBypassTimer minutes. If uiBypassTimer is zero, then the bypass timer is not running. If uiBypassTimer is not zero, it is decremented every minute.
RmTempActSpt	nvoData2 (nvoCtIDataG2)	siTempControlPtS7	Degrees F 50 to 85 Degrees C (10 to 29)		SI_INVALID			X						siTempControlPtS7: The current temperature control point (such that, the current actual space temperature setpoint which the controller is presently trying to maintain in the conditioned space) is calculated from the various Setpoints, operating modes, network variable inputs, and optimum start-up parameters. The final result is stored in siTempControlPtS7.
RmTemp	nvoData2 (nvoCtIDataG2)	siSpaceTempS7	Degrees F 40 to 100 Degrees C (4 to 38)		SI_INVALID									siSpaceTempS7: siSpaceTempS7 is the space temperature used by the control process and is read from another node via nviSpaceTemp or a local sensor via nvoIOsiSpaceTempS7 or nvoIOsiReturnTempS7. If the network input is not SI_INVALID, then the network input has priority. The local sensor is selected by nciConfig.ControlUsesRtnAirTemp. When nciConfig.ControlUsesRtnAirTemp is 0, then the space temperature sensor is selected. When nciConfig.ControlUsesRtnAirTemp is 1, then the return temperature sensor is selected. If the network input and the selected local sensor has failed or are not configured, siSpaceTempS7 is SI_INVALID.

Table 23. Status Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
DaTemp	nvoData2 (nvoCtIDataG2)	siDischargeTempS7	Degrees F 30 to 180 Degrees C (-1 to 82)		SI_INVALID	X		X					siDischargeTempS7: siDischargeTempS7 is the discharge air temperature used by the control process and is read from the local sensor via nvoIO.siDischargeTempS7. If the sensor has failed or is not configured, siDischargeTempS7 is SI_INVALID.	
DaSetpt	nvoData2 (nvoCtIDataG2)	siDischargeSetPtS7	Degrees F 30 to 180 Degrees C (-1 to 82)		SI_INVALID	X		X					siDischargeSetPtS7: siDischargeSetPtS7 is the calculated desired discharge air temperature when cascade control is being used.	
RaTemp	nvoData2 (nvoCtIDataG2)	siReturnTempS7	Degrees F 30 to 122 Degrees C (-1 to 50)		SI_INVALID	X		X					siReturnTempS7: siReturnTempS7 is the return air temperature used by the control process read from the local sensor via nvoIO.siReturnTempS7. If the sensor has failed or is not configured, siReturnTempS7 is SI_INVALID.	
RaHum	nvoData2 (nvoCtIDataG2)	ubReturnHumidityS1	Percentage 10 to 90		UB_INVALID	X		X					ubReturnHumidityS1: ubReturnHumidityS1 is the return air humidity used by the control process and is read from the local sensor via nvoIO.ReturnHumidity. If the sensor has failed or is not configured, ubReturnHumidityS1 is UB_INVALID.	
RaEnth	nvoData2 (nvoCtIDataG2)	siReturnEnthalpyS7	mA 4 to 20		SI_INVALID	X		X					siReturnEnthalpyS7: siReturnEnthalpyS7 is the return air enthalpy used by the control process and is read from the local sensor via nvoIO.siReturnEnthalpyS7. If the sensor has failed or is not configured, siReturnEnthalpyS7 is SI_INVALID.	
OaTemp	nvoData2 (nvoCtIDataG2)	siOutdoorTempS7	Degrees F -40 to 122 Degrees C (-40 to 43)		SI_INVALID	X		X					siOutdoorTempS7: siOutdoorTempS7 is the outdoor air temperature used by the control process and is read from another node via nvoIO.Temp or the local sensor via nvoIO.siOutdoorTempS7. If the network input is not SI_INVALID, then the network input has priority. If both the network input and the local sensor have failed or are not configured, siOutdoorTempS7 is SI_INVALID.	
OaHum	nvoData2 (nvoCtIDataG2)	ubOutdoorHumidityS1	Percentage 10 to 90		UB_INVALID	X		X					ubOutdoorHumidityS1: ubOutdoorHumidityS1 is the outdoor air humidity used by the control process and is read from another node via nvoIO.Hum or the local sensor via nvoIO.OutdoorHumidity. If the network is not SI_INVALID, then the network input has priority. If both the network input and the local sensor have failed or are not configured, ubOutdoorHumidityS1 is UB_INVALID.	
OaEnth	nvoData2 (nvoCtIDataG2)	siOutdoorEnthalpyS7	mA 4 to 20		SI_INVALID	X		X					siOutdoorEnthalpyS7: siOutdoorEnthalpyS7 is the outdoor air enthalpy used by the control process and is read from another node via nvoIO.EnthS7 or the local sensor via nvoIO.siOutdoorEnthalpyS7. If the network input is not SI_INVALID, then the network input has priority. If both the network input and the local sensor have failed or are not configured, siOutdoorEnthalpyS7 is SI_INVALID.	
FilterPress	nvoData2 (nvoCtIDataG2)	siFilterPressureS10	in. w.c. (kPa) 0 to 5 (0 to 1.25)		SI_INVALID	X		X					siFilterPressureS10: siFilterPressureS10 is air pressure across the air filter used by the control process and is read from the local sensor via nvoIO.siFilterPressureS10. If the local sensor has failed or is not configured, siFilterPressureS10 is SI_INVALID.	
CO2Sens	nvoCtIDataG2	siSpaceCo2S0	PPM 150 to 2000		SI_INVALID	X		X					siSpaceCo2S0: siSpaceCo2S0 is the indoor air CO2 content used by the control process and read the local sensor via nvoIO.siSpaceCo2S0. If the local sensor has failed or is not configured, siSpaceCo2S0 is SI_INVALID.	

Table 23. Status Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
MonitorSens	nvoCidDataG2	siMonitor1S10	volts 1 to 10		SI_INVALID			X					siMonitor1S10: siMonitor1S10 is the voltage applied at the monitor input terminals. If the sensor is not configured or has failed, the value is SI_INVALID.	
CoolPos	nvoCidDataG2	sbCoolPosS0	Percentage 0 to 100		0			X					sbCoolPosS0: If the node is configured for modulating cool, sbCoolPosS0 shows the current position of the cooling modulating output.	
HeatPos	nvoCidDataG2	sbHeatPosS0	Percentage 0 to 100		0			X					sbHeatPosS0: If the node is configured for modulating heat, sbHeatPosS0 shows the current position of the heating modulating output.	
EconPos	nvoCidDataG2	sbEconPosS0	Percentage 0 to 100		0			X					sbEconPosS0: If the node is configured for modulating economizer, sbEconPosS0 shows the current position of the economizer modulating output.	
StatusError	nvoError	error_bit[0] Byte Offset = 0 Bit Offset = 0 (Space tempError)	FALSE TRUE	0 1	FALSE			X					For SpaceTempError, a value of 1 (TRUE) indicates that data was not available from the sensor and will result in a SENSOR_FAILURE alarm. A value of 0 (FALSE) indicates a normal condition. The heating and cooling control loops will be turned off if there is a space temp sensor failure. The fan will remain under normal control.	
	nvoError	error_bit[0] Byte Offset = 0 Bit Offset = 1 (SetPtError)	FALSE TRUE	0 1	FALSE								For SetPtError, see preceding. Upon a failure of the local setpoint, the control loop will use the default occupied setpoints to control space temperature.	
	nvoError	error_bit[0] Byte Offset = 0 Bit Offset = 2 (OdTempError)	FALSE TRUE	0 1	FALSE								For OdTempError, see preceding. All control functions associated with the failed sensor are disabled as if the sensor was not configured.	
	nvoError	error_bit[0] Byte Offset = 0 Bit Offset = 3 (OdHumError)	FALSE TRUE	0 1	FALSE								For OdHumError, see preceding. A value of 0 (FALSE) indicates a normal condition. All control functions associated with the failed sensor are disabled as if the sensor was not configured.	
	nvoError	error_bit[0] Byte Offset = 0 Bit Offset = 4 (OdEnthalpyError)	FALSE TRUE	0 1	FALSE								OdEnthalpyError: All control functions associated with the failed sensor are disabled as if the sensor was not configured.	
	nvoError	error_bit[0] Byte Offset = 0 Bit Offset = 5 (DischgTempError)	FALSE TRUE	0 1	FALSE								DischgTempError: All control functions associated with the failed sensor are disabled as if the sensor was not configured.	
	nvoError	error_bit[0] Byte Offset = 0 Bit Offset = 6 RtnTempError)	FALSE TRUE	0 1	FALSE								RtnTempError: All control functions associated with the failed sensor are disabled as if the sensor was not configured.	
	nvoError	error_bit[0] Byte Offset = 0 Bit Offset = 7 RtnHumError)	FALSE TRUE	0 1	FALSE								RtnHumError: All control functions associated with the failed sensor are disabled as if the sensor was not configured.	

Table 23. Status Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	nvoError	error_bit[1] Byte Offset = 1 Bit Offset = 0 (RtnEnthalpyError)	FALSE TRUE	0 1	FALSE								RtnEnthalpyError: All control functions associated with the failed sensor are disabled as if the sensor was not configured.	
	nvoError	error_bit[1] Byte Offset = 1 Bit Offset = 1 (MonitorSensorError)	FALSE TRUE	0 1	FALSE								MonitorSensorError: All control functions associated with the failed sensor are disabled as if the sensor was not configured.	
	nvoError	error_bit[1] Byte Offset = 1 Bit Offset = 2 (SpaceCO2Error)	FALSE TRUE	0 1	FALSE								SpaceCO2Error: All control functions associated with the failed sensor are disabled as if the sensor was not configured.	
	nvoError	error_bit[1] Byte Offset = 1 Bit Offset = 3 (FilterStaticPresError)	FALSE TRUE	0 1	FALSE								FilterStaticPresError: All control functions associated with the failed sensor are disabled as if the sensor was not configured.	
	nvoError	error_bit[1] Byte Offset = 1 Bit Offset = 4 (ADCalError)	FALSE TRUE	0 1	FALSE								ADCalError: All control functions associated with the failed sensor are disabled as if the sensor was not configured.	
	nvoError	error_bit[1] Byte Offset = 1 Bit Offset = 7 (nvAppModeError)	FALSE TRUE	0 1	FALSE								AppModeError: All control functions associated with the failed NV are disabled as if the NV was not configured.	
	nvoError	error_bit[2] Byte Offset = 2 Bit Offset = 0 (nvSetPOffsetError)	FALSE TRUE	0 1	FALSE								SetPOffsetError: All control functions associated with the failed NV are disabled as if the NV was not configured.	
	nvoError	error_bit[2] Byte Offset = 2 Bit Offset = 1 (nvSpaceTempError)	FALSE TRUE	0 1	FALSE								SpaceTempError: All control functions associated with the failed NV are disabled as if the NV was not configured.	
	nvoError	error_bit[2] Byte Offset = 2 Bit Offset = 2 (nvOdTempError)	FALSE TRUE	0 1	FALSE								OdTempError: All control functions associated with the failed NV are disabled as if the NV was not configured.	
	nvoError	error_bit[2] Byte Offset = 2 Bit Offset = 3 (nvOdHumError)	FALSE TRUE	0 1	FALSE								OdHumError: All control functions associated with the failed NV are disabled as if the NV was not configured.	
	nvoError	error_bit[2] Byte Offset = 2 Bit Offset = 4 (nvSensorOccError)	FALSE TRUE	0 1	FALSE								SensorOccError: All control functions associated with the failed NV are disabled as if the NV was not configured.	

Table 23. Status Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	nvoError	error_bit[2] Byte Offset = 2 Bit Offset = 5 (nvWindowError)	FALSE TRUE	0 1	FALSE									WindowError: All control functions associated with the failed NV are disabled as if the NV was not configured.
	nvoError	error_bit[2] Byte Offset = 2 Bit Offset = 6 (nvDlcShedError)	FALSE TRUE	0 1	FALSE									DlcShedError: All control functions associated with the failed NV are disabled as if the NV was not configured.
	nvoError	error_bit[2] Byte Offset = 2 Bit Offset = 7 (nvTodEventError)	FALSE TRUE	0 1	FALSE									TodEventError: All control functions associated with the failed NV are disabled as if the NV was not configured.
	nvoError	error_bit[3] Byte Offset = 3 Bit Offset = 0 (nvByPassError)	FALSE TRUE	0 1	FALSE									ByPassError: All control functions associated with the failed NV are disabled as if the NV was not configured.
	nvoError	error_bit[3] Byte Offset = 3 Bit Offset = 1 (nvOdEnthalpyError)	FALSE TRUE	0 1	FALSE									OdEnthalpyError: All control functions associated with the failed NV are disabled as if the NV was not configured.
	nvoError	error_bit[3] Byte Offset = 3 Bit Offset = 2 (nvEconError)	FALSE TRUE	0 1	FALSE									EconError: All control functions associated with the failed NV are disabled as if the NV was not configured.
	nvoError	error_bit[3] Byte Offset = 3 Bit Offset = 3 (nvIaqOverrideError)	FALSE TRUE	0 1	FALSE									IaqOverrideError: All control functions associated with the failed NV are disabled as if the NV was not configured.
	nvoError	error_bit[3] Byte Offset = 3 Bit Offset = 4 (nvFree1Error)	FALSE TRUE	0 1	FALSE									Free1Error: All control functions associated with the failed NV are disabled as if the NV was not configured.

Table 23. Status Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	nvoError	error_bit[3] Byte Offset = 3 Bit Offset = 5 (nvFree2Error)	FALSE TRUE	0 1	FALSE									FreeZEError: All control functions associated with the failed NV are disabled as if the NV was not configured.
	nvoError	error_bit[3] Byte Offset = 3 Bit Offset = 6 (nvTimeClockError)	FALSE TRUE	0 1	FALSE									TimeClockError: All control functions associated with the failed NV are disabled as if the NV was not configured.
	nvoError	error_bit[3] Byte Offset = 3 Bit Offset = 7 (nvWShpEnError)	FALSE TRUE	0 1	FALSE									WShpEnError: All control functions associated with the failed NV are disabled as if the NV was not configured.
NetConfig	nciNetConfig		CFG_LOCAL CFG_EXTERNAL CFG_NUL	0 1 255	CFG_LOCAL									All nodes that support self-installation provide a configuration variable to allow a network management tool to also install the node. nciNetConfig is only used by a network management tool and may have the following values: CFG_LOCAL - Node will use self installation functions to set its own network image. CFG_EXTERNAL - The nodes network image has been set by an external source.

Table 24. Calibration Points.

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	nvoRaw	K1Raw K2Raw A11Resistive A12Resistive A13Voltage A14Voltage RawSpaceTemp RawSetPoint	Counts 0 to 65535		0									raw_data contains the analog to digital converter counts measured from the analog input channel.

Table 25. Configuration Parameters.

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic NOTE: Physical I/O points that are configurable are in Table 20.	Comments
	nciDeviceName				ASCII Blanks								DeviceName is an 18 character field used to identify the node uniquely as one object at the site or project. The contents of the DeviceName is maintained by a management node. If DeviceName is all ASCII blanks, it is considered unconfigured.	
	nciAppVer	application_type	0 to 255		0								ApplicationType identifies the current application number of the Excel 10.	
	nciAppVer	version_no	0 to 255		0								VersionNumber identifies the version number of the Excel 10 application.	
	nciAppVer	time	Seconds		0								The time stamp of the last change to the Excel 10 application configuration. Time meets the ANSI C time stamp requirement specifying the number of seconds elapsed since midnight (0:00:00), January 1, 1970. It is represented in the Intel Format.	
FanMode	nciConfig	FanMode	AUTO_FAN CONTINUOUS_FAN	0 1	AUTO_FAN	P		X	X				FanMode specifies the operation of the fan. If the FanMode is 0 (AUTO_FAN), then the fan cycles on and off with demand for cooling and may cycle with heating if FanOnHeat is TRUE. If the FanMode is 1 (CONTINUOUS_FAN), then the fan runs continuously when the effective occupancy is OC_OCCUPIED or OC_BYPASS. The fan cycles on and off with demand for cooling and may cycle with heating if FanOnHeat is TRUE during the OC_UNOCCUPIED or OC_STANDBY modes.	
EcomMode	nciConfig	EcomEnable	DIGITAL_IN OD_TEMP OD_ENTH_A_TYPE OD_ENTH_B_TYPE OD_ENTH_C_TYPE OD_ENTH_D_TYPE DIFF_TEMP SINGLE_ENTH DIFF_ENTH ECON_NUL	0 1 2 3 4 5 6 7 8 255	ECON_NUL	P		X	X				EcomEnable specifies the method used to determine when outside air is suitable for use to augment cooling. The valid values are according to the enumerated list that is shown in the Engineering Units/States column.	
SmkCtlMode	nciConfig	SmokeControl	FAN_OFF_DAMPER_CLOSED FAN_ON_DAMPER_OPEN FAN_ON_DAMPER_CLOSED	0 1 2	FAN_OFF_DAMPER_CLOSED	P		X	X				SmokeControl specifies the operation of the economizer damper and the fan when the mode is SMOKE_EMERGENCY.	
HeatCycHr	nciConfig	ubHeatCph	2 to 12		6	P		X	X				HeatCph specifies the mid-load number of on/off cycles per hour when the mode is HEAT. In addition the cycle rate specifies the minimum on and off time. Refer to Table 17 Interstage Minimum Times of the System Engineering Guide for the actual values.	
CoolCycHr	nciConfig	ubCoolCph	2 to 12		3	P		X	X				CoolCph specifies the mid-load number of on/off cycles per hour when the mode is COOL. In addition the cycle rate specifies the minimum on and off time. Refer to Table 17 Interstage Minimum Times of the System Engineering Guide for the actual values.	
FanRunOnCool	nciConfig	ubFanRunonCoolS0	Seconds 0 to 120		0	P		X	X				FanRunonCool specifies how long the fan runs after all the cooling stages have turned off. The fan is turned off FanRunonCool seconds after all the cooling demand has turned off.	
FanRunOnHeat	nciConfig	ubFanRunonHeatS0	Seconds 0 to 120		0	P		X	X				FanRunonHeat specifies how long the fan runs after all the heating stages have turned off. The fan is turned off FanRunonHeat seconds after all the heating demand has turned off.	

Table 25. Configuration Parameters. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic NOTE: Physical I/O points that are configurable are in Table 20.
EconMtrSpd	nciConfig	ubEconMtrTimeS0	Seconds 20 to 240		90	P		X	X				EconMtrTime specifies how long it takes the economizer damper motor to travel from fully closed to fully open. This time is used to calculate the reported position of the damper and to determine the length of over drive time required to assure the damper is fully closed or open.
CoolMtrSpd	nciConfig	ubCoolMtrTimeS0	Seconds 20 to 240		90	P		X	X				CoolMtrTime specifies how long it takes the cooling damper or valve motor to travel from fully closed to fully open. This time is used to calculate the reported position of the cooling damper or valve and to determine the length of over drive time required to assure that it is fully closed or open.
HeatMtrSpd	nciConfig	ubHeatMtrTimeS0	Seconds 20 to 240		90	P		X	X				HeatMtrTime specifies how long it takes the heating damper or valve motor to travel from fully closed to fully open. This time is used to calculate the reported position of the heating damper or valve and to determine the length of over drive time required to assure that it is fully closed or open.
FanFailTime	nciConfig	ubFanFailTimeS0	Seconds 1 to 120		10	P		X	X				Each time FAN_OUT is energized, then the node waits for FanFailTime seconds to sample the ProofAirFlow input. If ProofAirFlow shows that the fan is not running for FanFailTime consecutive seconds, then the control is shut down for the minimum off time. Then the control (including the fan) is restarted and ProofAirFlow is again tested. If ProofAirFlow shows air flow, then the control continues to operate, but if ProofAirFlow fails to show air flow, then the control is again shut down for the minimum off time. After three unsuccessful restarts, a LOSS_OF_AIR_FLOW alarm is issued and the control stays in the DISABLED mode with the FAN_OUT off.
RmTempCal	nciConfig	siSpaceTempZeroCalS7	Degrees F -5 to 5 (-3 to 3)		0			X	X				SpaceTempZeroCal provides offset calibration for the space analog sensor input and is added to the sensed value. The range of SpaceTempZeroCal is between -5 and 5 degrees F.
TempOfstCal1	nciConfig	siResistiveOfstCalS7[0]	Degrees F -15 to 15 (-9 to 9)		0								ResistiveOfstCal[0] provides offset calibration for the resistive analog sensor input and is added to the sensed value. The range of ResistiveOfstCal[0] is between -15 and 15 degrees F.
TempOfstCal2	nciConfig	siResistiveOfstCalS7[1]	Degrees F -15 to 15 (-9 to 9)		0								ResistiveOfstCal[1] provides offset calibration for the resistive analog sensor input and is added to the sensed value. The range of ResistiveOfstCal[1] is between -15 and 15 degrees F.
VoltOfstCal1	nciConfig	siVoltageOfstCalS12[0]	volts -1 to 1		0								VoltageOfstCal[0] provides offset calibration for the voltage/current analog sensor input and is added to the sensed value. The current analog sensor is converted to a voltage by a 249 ohm resistor wired across the input terminals. The range of VoltageOfstCal[0] is between -1 and 1 volt. Voltage offsets are new in engineering units (not volts).
VoltOfstCal2	nciConfig	siVoltageOfstCalS12[1]	volts -1 to 1		0								VoltageOfstCal[1] provides offset calibration for the voltage/current analog sensor input and is added to the sensed value. The current analog sensor is converted to a voltage by a 249 ohm resistor wired across the input terminals. The range of VoltageOfstCal[1] is between -1 and 1 volt. Voltage offsets are new in engineering units (not volts).
FanOnHMI Mode	nciConfig	FanOnHeat	FALSE TRUE	0 1	TRUE	P		X	X				FanOnHeat specifies the operation of the fan during HEAT mode. If FanOnHeat is 1 (TRUE), then the fan is on when the mode is HEAT. If FanOnHeat is a 0 (FALSE) the fan is never turned on when the mode is HEAT, and typically a thermostatically controlled switch sensing heated air temperature turns on the fan.

Table 25. Configuration Parameters. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic NOTE: Physical //O points that are configurable are in Table 20.
DisMinHtTime	nciConfig	DisableHeatMinTime	FALSE TRUE	0 1	FALSE	P		X	X				If DisableHeatMinTime is 0 (FALSE), the heating stages are on or off for a minimum time determined by ubHeatCph (Refer to Table 17 Interstage Minimum Times of the System Engineering Guide). If DisableHeatMinTime is 1 (TRUE), the heating stages are on or off for a 30 second minimum time.
DisMinCtTime	nciConfig	DisableCoolMinTime	FALSE TRUE	0 1	FALSE	P		X	X				If DisableCoolMinTime is 0 (FALSE), the cooling stages are on or off for a minimum time determined by CoolCph (Refer to Table 17 Interstage Minimum Times of the System Engineering Guide). If DisableCoolMinTime is 1 (TRUE), the cooling stages are on or off for a 30 second minimum time.
CascCntrl	nciConfig	CascadeControl	FALSE TRUE	0 1	FALSE	P		X	X				When CascadeControl is 0 (FALSE), then the discharge air temperature is not directly controlled and heating and cooling equipment are modulated to maintain space temperature. When CascadeControl is 1 (TRUE), then the discharge air temperature is controlled by an additional control loop based on the error signal from the space temperature control loop. Cascade Control is applicable to modulating heating/cooling only (not staged).
UseRaTempCtl	nciConfig	ControlUsesRtnAirTemp	FALSE TRUE	0 1	FALSE	P		X	X				If ControlUsesRtnAirTemp is 0 (FALSE), then Data2.SpaceTemp is set equal either the space temperature sensor (IO.siSpaceTemp) or SpaceTemp depending on the value of SpaceTemp. When ControlUsesRtnAirTemp is 1 (TRUE) and SpaceTemp is SI_INVALID, then Data2.SpaceTemp is set equal to return air sensor (IO.ReturnTemp) and the control uses the return air sensor to control heating or cooling. When ControlUsesRtnAirTemp is 1 (TRUE) and SpaceTemp is not SI_INVALID, then Data2.siSpaceTemp is set equal to SpaceTemp and the control uses SpaceTemp to control heating or cooling.
laqUseHeat	nciConfig	laqUseHeat	FALSE TRUE	0 1	FALSE	P		X	X				When the effective occupancy is OC_OCCUPIED and laqUseHeat is 0 (FALSE), then no heating stages or modulating heating are turned when the discharge air temperature goes below the low limit. Energy has priority over ventilation. When the effective occupancy is OC_OCCUPIED and laqUseHeat is 1 (TRUE), then the heating stages or modulating heating are turned on to prevent the discharge air temperature from going below the discharge air temperature low limit. Ventilation has priority over energy cost.

Table 25. Configuration Parameters. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic NOTE: Physical I/O points that are configurable are in Table 20.
OverdPriority	nciConfig	OverridePriority	LAST NET	0 1	NET	P		X	X				OverridePriority configures the override arbitration between ManOcc, Bypass state, and the wall module override button. If OverridePriority is 0 (LAST), then the last command received from either the wall module or iManOcc determines the effective override state. If OverridePriority is 1 (NET), this specifies that when ManOcc is not OC_NULL, that the effective occupancy is ManOcc regardless of the wall module override state.
UseWallModSpt	nciConfig	UseWallModSpt	FALSE TRUE	0 1	TRUE	P		X	X				UseWallModSpt specifies the OC_OCCUPIED temperature setpoint source. If UseWallModSpt is 0 (FALSE), then the occupied TempSetPts are used when the effective occupancy is OC_OCCUPIED. If UseWallModSpt is 1 (TRUE), then the wall modules setpoint knob is used when the effective occupancy is OC_OCCUPIED. SetPt overrides all.
SetPtKnob	nciConfig	SetPtKnob	OFFSET ABSOLUTE_MIDDLE	0 1	ABSOLUTE_MIDDLE	P		X	X				SetPtKnob specifies the usage of the setpoint knob when UseWallModSpt is TRUE. When SetPtKnob is 0 (ABSOLUTE_MIDDLE), the setpoint knob directly determines the center point of between the OC_OCCUPIED cooling and heating setpoints. When SetPtKnob is 1 (OFFSET), the effective setpoint is calculated by adding the remote setpoint potentiometer value (center scale = 0) to the appropriate value of TempSetPts.
OverdType	nciConfig	OverrideType	NONE NORMAL BYPASS_ONLY	0 1 2	NORMAL	P		X	X				OverrideType specifies the behavior of the override button. If the OverrideType is 0 (NONE) then the override button is disabled. An OverrideType of 1 (NORMAL) causes the override button to set the Override state to OC_BYPASS for Aux2SetPt.BypassTime seconds when the override button has been pressed for approximately 1 to 4 seconds, or to set the Override state to UNOCC when the button has been pressed for approximately 4 to 7 seconds. When the button is pressed longer than approximately 7 seconds, then the Override state is set to OC_NULL. If the OverrideType is 2 (BYPASS_ONLY), the override button sets the Override state to OC_BYPASS for Aux2SetPt.BypassTime seconds on the first press. On the next press, the Override state is set to OC_NULL.

Table 26. LONMARK®/Open System Points.

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Failure Detect	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	ncNodeSendT (SNVT_time_sec)		Seconds		0								The maximum time between updates of network variable outputs from the node object.	
	ncRtuSendT (SNVT_time_sec)		Seconds		0								The SGPUC and SGPU time (heart beat time) between updates of network variable outputs. NOTE: RtuSendT should be set to 55 seconds by a management node to be compatible with a Honeywell system.	
	ncRtuRcvT (SNVT_time_sec)		Seconds		0								This is the failure detection time for network SGPUC and SGPU variables outputs. NOTE: RtuRcvT should be set to 300 seconds by a management node to be compatible with a Honeywell system.	
CoolOccSpt	ncTempSetPts (SNVT_temp_setpt)	occupied_cool	Degrees F 50 to 95 Degrees C (10 to 35)		23	P, M		X	X				The Cooling Occupied Setpoint is used if no wall module setpoint pot is configured as the standard Occupied Cooling Setpoint. Actual Cooling Setpoint can be affected by various control parameters (such as DicShred, Srrkmt tempSpt, etc.). Actual room temperature Setpoint is reflected in RmTempActSpt. Overridden by nviSetPt. Used to compute ZEB.	
CoolStbySpt	ncTempSetPts (SNVT_temp_setpt)	standby_cool	Degrees F 50 to 95 Degrees C (10 to 35)		25	P, M		X	X				When the controller is in the Standby mode (typically via an occupancy sensor), the base Cooling Setpoint is determined by the Cooling Standby Setpoint value. Also, when a wall module setpoint pot is configured, this value serves as the upper limit on the user adjustable remote setpoint pot (wall module).	
CoolUnoccSpt	ncTempSetPts (SNVT_temp_setpt)	unoccupied_cool	Degrees F 50 to 95 Degrees C (10 to 35)		28	P, M		X	X				When the controller is in the Unoccupied mode, the unit responds to a call for cooling based on the Cooling Unoccupied Setpoint.	
HeatOccSpt	ncTempSetPts (SNVT_temp_setpt)	occupied_heat	Degrees F 50 to 95 Degrees C (10 to 35)		21	P, M		X	X				When the controller is in the Occupied mode, if the space temperature drops below the Heating Occupied Setpoint, the unit switches to the Heating mode. This Setpoint is used only when there is no wall module setpoint pot configured. Overridden by nviSetPt. Used to compute ZEB.	
HeatStbySpt	ncTempSetPts (SNVT_temp_setpt)	standby_heat	Degrees F 50 to 95 Degrees C (10 to 35)		19	P, M		X	X				When the controller is in the Standby mode (typically via an occupancy sensor), the base Heating Setpoint is determined by the Heating Standby Setpoint value. Also, when a wall module setpoint pot is configured, this value serves as the lower limit on the user adjustable remote setpoint pot (wall module).	
HeatUnoccSpt	ncTempSetPts (SNVT_temp_setpt)	unoccupied_heat	Degrees F 50 to 95 Degrees C (10 to 35)		16	P, M		X	X				When the controller is in the Unoccupied mode, the unit responds to a call for heating based on the Heating Unoccupied Setpoint.	
	nviRequest (SNVT_obj_request)	object_id	0 to 65535		1								Request provides the mechanism to request a particular status report (via Status) for a particular object within this node. Object_id selects the object being referenced by nviRequest. The only valid value of object_id is 1 for the RTU object and all others are invalid.	

Table 26. LONMARK®/Open System Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Failure Detect	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	nvrRequest (SNVT_obj_request)	object_request	RQ_NORMAL RQ_DISABLED RQ_UPDATE_STATUS RQ_SELF_TEST RQ_UPDATE_ALARM RQ_REPORT_MASK RQ_OVERRIDE RQ_ENABLE RQ_RMV_OVERRIDE RQ_CLEAR_STATUS RQ_CLEAR_ALARM RQ_NUL	0 1 2 3 4 5 6 7 8 9 10 255	RQ_NORMAL								When object_request is RQ_NORMAL or RQ_UPDATE_STATUS then the status (via Status) will be reported for the object addressed by object_id. When object_request is RQ_REPORT_MASK then the status bits will be reported that are supported in nvrStatus by the object addressed by object_id. Bits that are supported by the object are set to one. All other object_request items are not supported at this time and will return an invalid_request (Status) in the object status.	
DestHvacMode	nvrAppMode (SNVT_hvac_mode)		HVAC_AUTO HVAC_HEAT HVAC_MRNG_WRMUP HVAC_COOL HVAC_NIGHT_PURGE HVAC_PRE_COOL HVAC_OFF HVAC_TEST HVAC_EMERG_HEAT HVAC_FAN_ONLY HVAC_NUL	0 1 2 3 4 5 6 7 8 9 255	HVAC_AUTO	M	X	X	X	X	X	X	AppMode is an input that coordinates the rooftop unit controller operation with other controllers. HVAC_NIGHT_PURGE HVAC_PRE_COOL HVAC_MRNG_WRMUP HVAC_NUL HVAC_TEST are not supported and will default to the HVAC_AUTO setting if received.	
DestManOcc	nvrManOcc (SNVT_occupancy)		OC_OCCUPIED OC_UNOCCUPIED OC_BYPASS OC_STANDBY OC_NUL	0 1 2 3 255	OC_NUL		X		X				ManOcc is an input from a network connected operator interface or other node that indicates the state of a manual occupancy control thus overriding the scheduled occupancy state. ManOcc is used along with other occupancy inputs to calculate the effective occupancy of the node. See the Data1.EffectOcc and Data1.NetManOcc for more details. The valid enumerated values have the following meanings: OC_OCCUPIED indicates occupied. OC_UNOCCUPIED indicates not occupied. OC_BYPASS indicates that the space is occupied for Aux2SetPt.BypassTime seconds after ManOcc is first set to OC_BYPASS. The timing is done by the bypass timer in this node. If ManOcc changes to another value the timer is stopped. OC_STANDBY indicates that the space is in standby mode. OC_NUL and all unspecified values means that no manual occupancy control is requested. When ManOcc changes from OC_OCCUPIED, OC_UNOCCUPIED, OC_BYPASS, or OC_STANDBY to OC_NUL, any bypass condition is canceled.	
DestRmTempSpt	nvrSetPoint (SNVT_temp_p)		Degrees F 50 to 95 Degrees C (10 to 35)		SI_INVALID		X		X		X	X	SetPoint is an input network variable used to determine the temperature control point of the node. If SetPoint is not SI_INVALID, then it is used to determine the control point of the node. If SetPoint is SI_INVALID, then other means are used to determine the control point. See Data2.TempControlPt for more information.	
DestSptOffset	nvrSetPtOffset (SNVT_temp_p)		Degrees F -18 to 18 Degrees C -10 to 10	0	0		X		X		X	X	SetPtOffset is input from an operator terminal or from an energy management system used to shift the effective temperature setpoint by adding SetPtOffset to the otherwise calculated setpoint. If the value is outside the allowed range of -10 to +10 degrees C (-18 to 18 degrees F), then the node uses the value of the nearest range limit.	

Table 26. LONMARK®/Open System Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Failure Detect	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic
SrcRmTempActSpt	nvoEffectSetPt (SNVT_temp_p)		Degrees F 50 to 95 Degrees C (10 to 35)		SI_INVALID		X		X				EffectSetPt is the current temperature control point (such that the current actual space temperature setpoint which the controller is presently trying to maintain in the conditioned space). See Data2.TempControlPt for more details. EffectSetPt is updated according to the SGPU mechanism where a significant change is plus or minus 0.07 degrees C (0.13 degrees F).
DestRmTemp	nviSpaceTemp (SNVT_temp_p)		Degrees F 14 to 122 Degrees C (-10 to 50)		SI_INVALID		X		X		X	X	SpaceTemp is the space temperature sensed by another node and is typically bound to SpaceTemp of another node having a space temperature sensor. If SpaceTemp has a value other than SI_INVALID it is used as the sensed space temperature by the node rather than using any local hard-wired sensor. If the value is outside the allowed range of -10 to 50 degrees C (-18 to 90 degrees F), then the node uses the value of the nearest range limit. When SpaceTemp is not bound to another node, SpaceTemp may be used to fix the sensed temperature. A management node may write a value other than SI_INVALID, causing the node to use SpaceTemp instead of the hard-wired sensor. An application restart or power failure causes the fixed sensor value to be forgotten and SpaceTemp to be returned to SI_INVALID.
SrcRmTemp	nvoSpaceTemp (SNVT_temp_p)		Degrees F 14 to 122 Degrees C (-10 to 50)		SI_INVALID		X		X				SpaceTemp is the sensed space temperature from the locally wired sensor. SpaceTemp is typically bound to SpaceTemp of another node which may not have its own space temperature sensor but control the same space. The reported space temperature includes the offset correction. Config.SpaceTempZeroCal. If the space temperature sensor is not connected or is shorted, or if SpaceTemp is bound to another node, then SpaceTemp is set to SI_INVALID.
DestOaTemp	nviOaTemp (SNVT_temp_p)		Degrees F -40 to 122 Degrees C (-40 to 50)		SI_INVALID	M	X		X		X	X	OaTemp allows one outside air temperature sensor at a node to be shared by many other nodes. When OaTemp is not SI_INVALID, then any local sensor is ignored by the local control algorithm and OaTemp is used instead. If the value is outside the allowed range of -40 to 50 degrees C (-72 to 90 degrees F), then the node uses the value of the nearest range limit.
SrcOaTemp	nvoOaTemp (SNVT_temp_p)		Degrees F -40 to 122 Degrees C (-40 to 50)		SI_INVALID	M	X		X				OaTemp allows the local outdoor temperature sensor to be shared with other nodes and is typically bound to OaTemp on other nodes. If the local sensor is configured by Select, OaTemp is periodically sent on the network. If the local sensor is not configured or currently showing an error, the value is SI_INVALID.
DestOaHum	nviOaHum (SNVT_lev_percent)		Percentage 10 to 90		SI_INVALID	M	X		X		X	X	OaHum allows one outdoor humidity sensor at a node to be shared by many other nodes. When nviOaHum is not SI_INVALID, then the local sensor is ignored by the local control algorithm and OaHum is used instead. If the value is outside the allowed range (10 to 90 percent), then the node uses the value of the nearest range limit.
SrcOaHum	nvoOaHum (SNVT_lev_percent)		Percentage 10 to 90		SI_INVALID	M	X		X				OaHum allows the local outdoor humidity sensor to be shared with other nodes and is typically bound to OaHum on other nodes. If the local sensor is configured by Select, OaHum is periodically sent on the network. If the local sensor is not configured or currently showing an error, the value is SI_INVALID.

Table 26. LONMARK®/Open System Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Failure Detect	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
DestEmergCmd	nviEmerg (SNVT_hvac_emerg)		EMERG_NORMAL EMERG_PRESSURIZE EMERG_DEPRESSURIZE EMERG_PURGE EMERG_SHUTDOWN EMERG_NUL	0 1 2 3 4 255	EMERG_NORMAL	M	X	X	X		X		Emerg is an emergency input from a device that determines the correct action during a given emergency (such as a fire). If Emerg is EMERG_NORMAL the fan and economizer damper are controlled by the heating and cooling control algorithm. If Emerg is EMERG_PRESSURIZE, then the fan is controlled on and the economizer damper is open. If Emerg is EMERG_DEPRESSURIZE, then the fan is controlled on and the economizer damper is closed. If Emerg is EMERG_PURGE, the fan and damper go to the state specified by ConfigSmokeControl. If Emerg is not configured then it is set to EMERG_NUL.	
SrcUnitStatus	nvoUnitStatus (SNVT_hvac_status)	mode	HVAC_AUTO HVAC_HEAT HVAC_WRMG_WRMUP HVAC_COOL HVAC_NIGHT_PURGE HVAC_PRE_COOL HVAC_OFF HVAC_TEST HVAC_EMERG_HEAT HVAC_FAN_ONLY HVAC_NUL	0 1 2 3 4 5 6 7 8 9 255	HVAC_NUL	M	X		X				Mode is set according to the Data1.mode. If Data1.mode is START_UP_WAIT, SMOKE_EMERGENCY, or FREEZE_PROTECT, mode is set to HVAC_NUL which indicates that the node is in a mode not supported by the SNVT_hvac_mode data type. If Data1.mode is HEAT, then mode is set to HVAC_HEAT which indicates that heating energy is being supplied to the controlled space. If Data1.mode is COOL, then mode is set to HVAC_COOL, which indicates that cooling energy is being supplied to the controlled space. If Data1.mode is OFF_MODE or DISABLED_MODE, then mode is set to HVAC_OFF which indicates that the node is not running its normal temperature control and the outputs are not turned off. If Data1.mode is EMERG_HEAT, mode is set to HVAC_EMERG_HEAT where, in a heat pump application, the compressor stages are disabled and only auxiliary heating stages are turned on. If Data1.mode is MANUAL or FACTORY_TEST, mode is set to HVAC_TEST which indicates that the node is in a manual or test mode. If Data1.mode is FAN_ONLY, mode is set to HVAC_FAN_ONLY which indicates that the fan is running but the space temperature control is turned off.	
	nvoUnitStatus (SNVT_hvac_status)	heat_output_primary	Percentage 0 to 100		0								heat_output_primary reports the current percentage of heating stages or modulating heat turned on. If the node is controlling a heat pump, heat_output_primary reports the current percentage of compressor stages turned on when the node is in the HVAC_HEAT mode.	
	nvoUnitStatus (SNVT_hvac_status)	heat_output_secondary	Percentage 0 to 100		0								If the node is controlling a heat pump, heat_output_secondary reports the current percentage of auxiliary heating stages turned on when the node is in the HVAC_HEAT or HVAC_EMERG_HEAT mode. If the node is not controlling a heat pump, heat_output_secondary is set to zero.	
	nvoUnitStatus (SNVT_hvac_status)	cool_output	Percentage 0 to 100		0								cool_output reports the current percentage of cooling stages or modulating heat turned on. If the node is controlling a heat pump, cool_output reports the current percentage of compressor stages turned on when the node is in the HVAC_COOL mode.	
	nvoUnitStatus (SNVT_hvac_status)	econ_output	Percentage 0 to 100		0								If there is a modulating economizer configured, econ_output reports the percentage that the economizer damper is opened. If no economizer is configured, econ_output reports 0.	
	nvoUnitStatus (SNVT_hvac_status)	fan_output	Percentage 0 to 100		0								When the fan is running, fan_output is 100 percent, and when the fan is not running, fan_output is 0 percent.	

Table 26. LONMARK®/Open System Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Failure Detect	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	nvoUnitStatus (SNVT_hvac_status)	in_alarm	FALSE TRUE ALARM_NOTIFY_DISABLED	0 1 255	FALSE								When there is an alarm reported by AlarmStatus, then in_alarm is set to 1 (TRUE), else in_alarm is set to 0 (FALSE). If alarms reporting is suppressed via ManualMode, then in_alarm is set to ALARM_NOTIFY_DISABLED.	
	nvinUse(unsigned long)		0 To 65535		0 to FFFF								InUse is used by a management node to indicate to all other management nodes that it is logged on to the Excel 10 node and that they should not try to interact with any of the Excel 10s network variables. Before the management node reads or writes any network variables, the management node checks nvinUse for a zero value meaning no other management nodes are already logged on and that a management node may log on to the node. Then the management node writes a number, 1 through 65534, to nvinUse and periodically writes the same value to indicate that the management node is still logged on. If there are no writes made to nvinUse for approximately 60 seconds, then the Excel 10 resets nvinUse to zero to automatically log off the management node. Before interacting with any network variables, the management node verifies that the nvinUse has not changed. The management node logs off by writing 0 to nvinUse. During power up, an application restart, or return to on-line from off-line, the Excel 10 sets InUse to 65535 to indicate to the management node that it has returned to on-line.	
	nvoStatus (SNVT_obj_request)	object_id	0 to 65535		0	M		X					object_id is set to the current value of nvrRequest.object_id	
	nvoStatus (SNVT_obj_request)	invalid_id	FALSE TRUE	0 1	FALSE								If Request.Object_id is not a valid object, invalid_id is set to 1 (TRUE) otherwise it is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	invalid_request	FALSE TRUE	0 1	FALSE								If Request.object_request is not a valid request for the object addressed, invalid_request is set to 1 (TRUE) otherwise it is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	disabled	FALSE TRUE	0 1	FALSE								The disabled field is not supported and is set to 0 (FALSE) unless Request.object_request is RQ_REPORT_MASK, then disabled and in_alarm are set to 1 (TRUE) to indicate that these functions are supported while all other fields are set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	out_of_limits	FALSE TRUE	0 1	FALSE								The out_of_limits field is not supported and is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	open_circuit	FALSE TRUE	0 1	FALSE								The open_circuit field is not supported and is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	out_of_service	FALSE TRUE	0 1	FALSE								The out_of_service field is not supported and is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	mechanical_fault	FALSE TRUE	0 1	FALSE								The mechanical_fault field is not supported and is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	feedback_failure	FALSE TRUE	0 1	FALSE								The feedback_failure field is not supported and is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	over_range	FALSE TRUE	0 1	FALSE								The over_range field is not supported and is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	under_range	FALSE TRUE	0 1	FALSE								The under_range field is not supported and is set to 0 (FALSE).	

Table 26. LONMARK®/Open System Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Failure Detect	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
	nvoStatus (SNVT_obj_request)	electrical_fault	FALSE TRUE	0 1	FALSE								The electrical_fault field is not supported and is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	unable_to_measure	FALSE TRUE	0 1	FALSE								The unable_to_measure field is not supported and is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	comm_failure	FALSE TRUE	0 1	FALSE								The comm_failure field is not supported and is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	fail_self_test	FALSE TRUE	0 1	FALSE								The fail_self_test field is not supported and is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	self_test_in_progress	FALSE TRUE	0 1	FALSE								The self_test_in_progress field is not supported and is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	locked_out	FALSE TRUE	0 1	FALSE								The locked_out field is not supported and is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	manual_control	FALSE TRUE	0 1	FALSE								The manual_control field is not supported and is set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	in_alarm	FALSE TRUE	0 1	FALSE								If there are currently any active alarms reported by SrcUnitStatus.in_alarm or SrcUnitStatus.in_alarm is set to ALARM_NOTIFY_DISABLED.in_alarm is set to 1 (TRUE), otherwise in_alarm is set to 0 (FALSE). When Request.object_request is RQ_REPORT_MASK, then disabled and in_alarm are set to 1 (TRUE) to indicate that these functions are supported while all other fields are set to 0 (FALSE).	
	nvoStatus (SNVT_obj_request)	in_override	FALSE TRUE	0 1	FALSE								The in_override field is not supported and is set to 0 (FALSE).	
DestOccSensor	nvsensorOcc (SNVT_occupancy)		OC.OCCUPIED OC.UNOCCUPIED OC.BYPASS OC.STANDBY OC.NUL	0 1 2 3 255	OC_NUL	M	X		X		X	X	nvsensorOcc allows an occupancy sensor at another node to be used as the occupancy sensor for this node and is typically bound to SensorOcc of another node. The nvsensorOcc input must show OC_UNOCCUPIED for 300 seconds before it is used by the controller for triggering UN_OCCUPIED together by binding them all to nvsensorOcc. If any one bound occupancy sensor shows occupancy, then SensorOcc shows occupancy for up to 300 seconds after the last sensor shows OC_OCCUPIED. The valid states have the following meanings: OC_OCCUPIED indicates occupied, OC_BYPASS, OC_STANDBY, and all unspecified values indicates the same as OC_OCCUPIED. OC_UNOCCUPIED or OC_NUL indicates not occupied.	
SrcOccSensor	nvoSensorOcc (SNVT_occupancy)		OC.OCCUPIED OC.UNOCCUPIED OC.BYPASS OC.STANDBY OC.NUL	0 1 2 3 255	OC_NUL	M	X		X				nvoSensorOcc is an output showing the current state of the hard wired occupancy sensor. The valid states are as follows: OC_OCCUPIED indicates that the space is occupied, OC_UNOCCUPIED indicates that the space is not occupied, OC_NUL means no output is available because it is not configured.	

Table 26. LONMARK®/Open System Points. (Continued)

User Address	NvName (SNVT_switch)	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Failure Detect	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic Comments
	nviWindow (SNVT_switch)	value	0 to 100	0 1 255	0								Window allows the window sensor from another node to be used as the window sensor and is typically bound to nvoWindow of another node. Window must show that the window is closed for 300 seconds before Window is used as window closed. This makes it possible for several window sensors to be ORed together by binding them all to nviWindow. If any one bound window sensor shows window open, then Window shows window open for up to 300 seconds after the last sensor shows window closed. If the state is SW_OFF or SW_NUL, then the result is Window Closed. If the state is SW_ON and the value is 0, then the result is Window Closed. If the node receives this combination of state and value, then state is set to SW_OFF. If the state is SW_ON and the value is not zero, then the result is Window Open. NOTE: nviWindow is called nviEnergyHoldOff in the LonMark compliance profile.
DestWndw	nviWindow (SNVT_switch)	state	SW_OFF SW_ON SW_NUL	0 1 255	SW_NUL	M	X		X		X	X	See the preceding.
SrcWndwCt	nvoWindow (SNVT_switch)	value	0 to 100		0								See the preceding. NOTE: nvoWindow is called nviEnergyHoldOff in the LonMark compliance profile.
SrcWndw	nvoWindow (SNVT_switch)	state	SW_OFF SW_ON SW_NUL	0 1 255	SW_NUL	M	X	X	X				Window allows the hard wired window sensor to be used by other nodes on the network. The valid states are as follows: if the state is SW_OFF and the value is 0 then the result is Window Closed. If the state is SW_ON and the value is 100 percent, the result is Window Open. If the state is SW_NUL and the value is 0, the result is Window Sensor Not Configured. NOTE: nvoWindow is called nviEnergyHoldOff in the LonMark compliance profile.
	nviEcon (SNVT_switch)	value	0 to 100		0								nviEcon allows one controller to determine the suitability of outdoor air for free cooling and share this with many other nodes. When Econ.state is not SW_NUL, then the local sensor selected by Config.EconEnable is ignored and Econ is used instead. The inputs states have the following meanings: if the state is SW_OFF or other and the value is don't care, then the outdoor air is not suitable for free cooling, if the state is SW_ON and the value is 0, then the outdoor air is not suitable for free cooling. If the node receives this combination of state and value, then state is set to SW_OFF. If the state is SW_ON and the value is not zero, then outdoor is suitable for free cooling. If the state is SW_NUL, then the network variable is not bound, the communications path from the sending node has failed, or the sending node has failed. Outdoor air is not suitable for free cooling.
DestEconEnable	nviEcon (SNVT_switch)	state	SW_OFF SW_ON SW_NUL	0 1 255	SW_NUL	M	X		X		X	X	For nviEcon.state, refer to nviEcon.value.

Table 26. LONMARK®/Open System Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Hardware Config.	Manual Config.	Failure Detect	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
SrcEconEnCt	nvoEcon (SNVT_switch)	value	0 to 100	0	0		X							nvoEcon allows one controller to determine the suitability of outdoor air for free cooling and share this with other nodes and is typically bound to Econ on other nodes. If the economizer function is configured by Config.EconEnable, Econ is periodically calculated from the local sensor specified by Config.EconEnable and is sent on the network. Econ does not affect Econ. The output has the following states: if the state is SW_OFF and the value is 0, then the outdoor air is not suitable for free cooling. If the state is SW_ON and the value is 100 percent, then the outdoor air is suitable for free cooling. If the state is SW_NUL and the value is 0, the corresponding economizer function is not enabled because Config.EconEnable is ECON_NUL, DIFF_TEMP, or DIFF_ENTH or because the selected sensor has failed.
SrcEconEnable	nvoEcon (SNVT_switch)	state	SW_OFF SW_ON SW_NUL	0 1 255	SW_NUL	M	X		X					For nvoEcon.state, refer to nvoEcon.value.

Table 27. Direct Access And Special Points.

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
DestManMode	nvManualMode		MODE_ENABLE MODE_DISABLE MODE_MANUAL SUPPRESS_ALARMS UNSUPPRESS_ALARMS	0 1 2 3 4	MODE_ENABLE		X	X	X			ManualMode is an input which is used to disable the Excel 10s control algorithms and to manually set the physical outputs. ManualMode remains unchanged until another mode has been commanded or an application restart has been performed. See the Data1 mode for more details. The valid enumerated values are: MODE_ENABLE enables the node so that the control algorithm determines the operating mode, and controls the physical outputs. MODE_ENABLE is the default state after power restore or application restart. If the mode was MANUAL and nvManualMode is set to MODE_ENABLE, the node then goes through application_restart MODE_DISABLE sets the node to the DISABLED_MODE. The alarm NODE_DISABLED is initiated, all control loops are disabled, and the physical outputs are turned off. The physical inputs, network variable inputs, and network variable outputs are still functioning when the node is in the DISABLED_MODE. MODE_MANUAL sets the node into the MANUAL mode. If MANUAL is selected, the controller enters Test Mode (manual override of outputs). The alarm NODE_DISABLED is initiated, all control loops are disabled, and the physical outputs are controlled manually as commanded by nvManValue. The nodes configuration variables and nvManValue are used to set valves, dampers, and / or digital output to the desired manual positions or state(s). The physical inputs, network variable inputs, and network variable outputs are still functioning when the node is in the MANUAL mode. SUPPRESS_ALARMS causes nvoAlarm.type to be set to ALARM_NOTIFY_DISABLED, and AlarmLog to no longer record alarms. If alarms are suppressed, UNSUPPRESS_ALARMS causes Alarm.type and AlarmLog to be returned to reporting alarms. See Alarm for more details. All unspecified values are the same as MODE_ENABLE.
TestMode	nvManValue	OutDrive	NORMAL_OP OUT_1_ON OUT_2_ON OUT_3_ON OUT_4_ON OUT_5_ON OUT_6_ON OUT_7_ON OUT_8_ON ALL_OUT_OFF ALL_OUT_ON DISABLE_OUT	0 1 2 3 4 5 6 7 8 9 10 11	NORMAL_OP							OutDrive ManValue is used for Factory Testing only.
TestHCPos	nvManValue	sbManHeatCoolPosS0	percentage -127 to 127		0					X		During MANUAL mode, ManHeatCoolPos sets the modulating position of the heating or cooling motor (if configured) to the specified position. If ManHeatCoolPos is less than 0 or greater than 100, the motor is overdriven for a period longer than the motor time to ensure that it is at the end of travel. The heat motor is driven when HeatCoolMode is 1 and the cool motor is driven when HeatCoolMode is 0. At the moment when the node transfers to MANUAL_MODE or HeatCoolMode is changed, ManHeatCoolPos is set the current motor position.
TestEconPos	nvManValue	sbManEconPosS0	Percentage -127 to 127		0					X		During MANUAL mode, ManEconPos sets the modulating position of the economizer motor (if configured) to the specified position. If ManEconPos is less than 0 or greater than 100, the motor is overdriven for a period longer than the motor time to ensure that it is at the end of travel. At the moment when the node transfers to MANUAL_MODE, ManEconPos is set the current motor position.

Table 27. Direct Access And Special Points. (Continued)

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Test	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	
											Comments	
TestHtCISig1	nviManValue	HeatCoolStage1	OFF ON	0 1	OFF				X	X	During MANUAL mode, HeatCoolStage1 parameters turn the corresponding heat, or cool stage to on (1) or off (0). When HeatCoolMode is 0, then cooling loads are controlled. When HeatCoolMode is 1 and the node is controlling conventional equipment, then heating loads are controlled. When HeatCoolMode is 1 and the node is controlling a heat pump, then cooling loads are controlled.	
TestHtCISig2	nviManValue	HeatCoolStage2	OFF ON	0 1	OFF				X	X	For HeatCoolStage2, refer to HeatCoolStage1.	
TestHtCISig3	nviManValue	HeatCoolStage3	OFF ON	0 1	OFF				X	X	For HeatCoolStage3, refer to HeatCoolStage1.	
TestHtCISig4	nviManValue	HeatCoolStage4	OFF ON	0 1	OFF				X	X	For HeatCoolStage4, refer to HeatCoolStage1.	
TestAuxH1	nviManValue	AuxHeatCoolStage1	OFF ON	0 1	OFF				X	X	AuxHeatCoolStage1—During MANUAL mode when the node is configured to control a heat pump and HeatCoolMode is 1, these parameters turn the corresponding auxiliary heat stage on (1) or off (0).	
TestAuxH2	nviManValue	AuxHeatCoolStage2	OFF ON	0 1	OFF				X	X	AuxHeatCoolStage2—During MANUAL mode when the node is configured to control a heat pump and HeatCoolMode is 1, these parameters turn the corresponding auxiliary heat stage on (1) or off (0).	
TestAuxH3	nviManValue	AuxHeatCoolStage3	OFF ON	0 1	OFF				X	X	AuxHeatCoolStage3—During MANUAL mode when the node is configured to control a heat pump and HeatCoolMode is 1, these parameters turn the corresponding auxiliary heat stage on (1) or off (0).	
TestAuxH4	nviManValue	AuxHeatCoolStage4	OFF ON	0 1	OFF				X	X	AuxHeatCoolStage4—During MANUAL mode when the node is configured to control a heat pump and HeatCoolMode is 1, these parameters turn the corresponding auxiliary heat stage on (1) or off (0).	
TestHtCMode	nviManValue	HeatCoolMode	OFF ON	0 1	OFF				X	X	During MANUAL mode, HeatCoolMode determines whether heating or cooling outputs are turned on or off manually. When HeatCoolMode is 0, then cooling loads are controlled. When HeatCoolMode is 1 and the node is controlling conventional equipment, then heating loads are controlled. When HeatCoolMode is 1 and the node is controlling a heat pump, then cooling loads are controlled by Heat / Cool stages and heating stages are controlled by auxiliary heat stages. The CHANGE_OVER_RELAY_OUT is affected by HeatCoolMode as configured in Select.	
TestSaFan	nviManValue	FanOut	OFF ON	0 1	OFF				X	X	During MANUAL mode, FanOut turns the fan on (1) or off (0).	
TestAuxEcon	nviManValue	AuxEconOut	OFF ON	0 1	OFF				X	X	During MANUAL mode, AuxEconOut turns the AUX_ECON_OUT on(1) or off(0).	
TestOccStat	nviManValue	OccStatusOut	OFF ON	0 1	OFF				X	X	During MANUAL mode, OccStatusOut turns the OCCUPANCY_STATUS_OUT to on(1 = not OC_UNOCCUPIED) or off (0).	
TestFree1	nviManValue	Free1Out	OFF ON	0 1	OFF				X	X	During MANUAL mode, Free1Out turns the FREE1_OUT on(1) or off(0).	
TestFree2	nviManValue	Free2Out	OFF ON	0 1	OFF				X	X	During MANUAL mode, Free2Out turns the FREE2_OUT on(1) or off(0).	

Table 28. Data Share Points.

User Address	NvName	Field Name	Engineering Units: English (Metric) or States plus Range	Digital State or Value of State	Default	E-Vision (M, P, S)	Share	Map	Direct Access	Manual Config.	Failure Detect	E-Vision Legend: (M) Monitor, (P) Parameter, (S) Schematic	Comments
DestOaEnth	nvOodEnthS7		mA 4 to 20		SI_INVALID		X			X	X		nvOodEnth allows one outdoor enthalpy sensor at a node to be shared by many other nodes. When nvOodEnth is not SI_INVALID then any local sensor is ignored by the local control algorithm and OodEnth is used instead. If the value is outside the allowed range (4 to 20 mA), then the node uses the value of the nearest range limit.
SrcOaEnth	nvoOodEnthS7		mA 4 to 20		SI_INVALID	M	X		X				nvoOodEnth allows the local outdoor enthalpy sensor to be shared with other nodes and is typically bound to OodEnth on other nodes. If the local sensor is configured by Select, nvOodEnth is periodically sent on the network. If the local sensor is not configured or currently showing an error, the value is SI_INVALID.
SrcMonSwCt	nvoMonSw	value	0 to 100		0		X						MonSw value allows the monitor switch to be shared with another node. MonSw is typically bound to an SBC to indicate a user defined alarm condition. The output values have the following meanings: If the state is SW_OFF and the value is 0, then the monitor switch is open. If the state is SW_ON and the value is 100 percent, then the monitor switch is closed. If the state is SW_NUL and the value is 0, then the monitor switch is not configured by Select.
SrcMonSw	nvoMonSw	state	SW_OFF SW_ON SW_NUL	0 1 255	SW_NUL	M			X				For MonSw.state, refer to MonSw.value.
		value	0 to 100		0								laqOvr allows an indoor air quality sensor to be shared by many other nodes. The states are follows: If the state is SW_OFF and the value is don't care, then the indoor air quality is acceptable. If the state is SW_ON and the value is 0, then the indoor air quality is acceptable. If the node receives this combination of state and value, then state is set to SW_OFF. If the state is SW_ON and the value is not zero, then the indoor air quality is not acceptable and additional outdoor air is needed to bring it back to acceptable. If the state is SW_NUL and the value is don't care, then the indoor air quality is acceptable. If the state is other, then the network variable is not bound, the communications path from the sending node has failed, or the sending node has failed. The indoor air quality is acceptable.
DestlaqOvr	nvilaqOvr	state	SW_OFF SW_ON SW_NUL	0 1 255	SW_NUL	M	X		X	X	X		For laqOvr.state, refer to laqOvr.value.
SrcIaqOvrCt	nvolaqOvr	value	0 to 100		0	X	X						laqOvr allows an indoor air quality sensor to be shared with other nodes and is typically bound to laqOvr on other nodes. If Data2.siSpaceCo2 is not SI_INVALID, and exceeds Aux1SetPtCO2laqlimit, then poor air quality is detected. In addition, if a local digital input is configured for IAQ_OVERRIDE_IN and IO.laqOverRide is 1 (TRUE) then poor air quality is also detected. The state has the following meanings: if the state is SW_OFF and the value is 0, then the indoor air quality is acceptable. If the state is SW_ON and the value is 100 percent, then the indoor air quality is not acceptable and additional outdoor air is needed to bring it back to an acceptable state. If the state is SW_NUL and the value is 0, then the economizer for this node has not been configured or there is no sensor (via IO.SpaceDo2 or IO.laqOverRide) configured or the only configured sensor (via IO.SpaceCo2) has failed.
SrcIaqOvr	nvolaqOvr	state	SW_OFF SW_ON SW_NUL	0 1 255	SW_NUL	M	X		X				For laqOvr.State, refer to laqOvr.value.

Appendix D: XL5000 Q7750A Excel 10 Zone Manager Point Estimating Guide

Memory size approximation shown below (all sizes in bytes):

When *memory size* is less than 110,000 bytes, the size is OK.

When *memory size* is between 110,000 and 128,000 bytes, the application may be too large. The user must expect to reduce the application complexity, reduce the number of attached Excel 10s or distribute the Excel 10s over more than one Zone Manager.

When *memory size* is greater than 128,000, the size is too large. The application size must be reduced as described above.

Approximate Memory Size Estimating Procedure.

1. Determine the number of points per controller required at the Central (for example, XBS).

NOTE: All remaining points that are not mapped can be accessed through the *Direct Access* feature.

2. Calculate the number of Excel 10 Zone Manager program points that are used in control logic and in the switching table.
3. Estimate the program complexity of the Zone Manager (one of three levels).
 - a. No time programs, control logic, or switching tables.
 - b. 10K of control logic (one time program, five switching tables, and five control loops).
 - c. 20K of control logic (multiple time programs, ten switching tables, and ten control loops).
 Use Fig. 51 to determine the number of Excel 10s that can be connected to the Zone Manager.
 NOTE: More than 60 Excel 10s requires a Router.
4. Repeat for each Q7750A Excel 10 Zone Manager in a project.

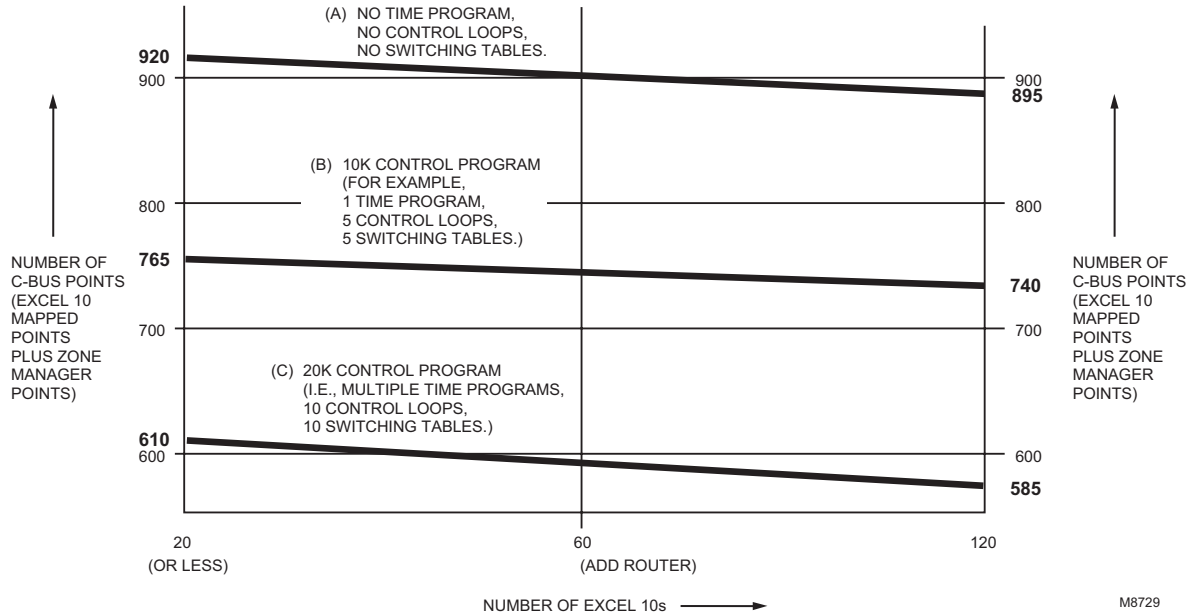


Fig. 51. Point capacity estimate for Zone Manager.

The exact equation for calculating memory size follows:

- Memory size = 21,780
- + 4096 (in case of a time program).
- + CARE Control Program.
- + 14 x time points x Excel 10 units.
- + 50 x Excel 10 units.
- + map complexity x Excel 10 units x mapped points.
- + 57 x C-Bus points.
- + 7488 x Excel 10 types.

Where:

Time points = number of switch points in time program per Excel 10.

- Excel 10 units = number of attached Excel 10s.
- C-Bus points = including mapped points and others; for example, remote points.
- Mapped points = number of mapped points per Excel 10, including One-to-Many and Many-to-One mechanism.
- Excel 10 types = number of different Excel 10 types (currently three)
- Map complexity=
 - 20 =using One-to-Many and not using points with read/write.
 - 30 = average.
 - 45 = many points with read/write ability.

Appendix E: Sensor Data for Calibration

Resistance Sensors

Sensor Type: C7100A, C7170A. (PT3000)

Sensor Use: Discharge air, Outdoor air.

Table 29 lists the points for sensor resistance versus temperature. Fig. 52 shows the graph of these points.

Table 29. PT3000 Sensor Resistance Versus Temperature.

°F	Resistance Ohms
-40	2916.08
-30	2964.68
-20	3013.28
-10	3061.88
0	3110.48
10	3159.08
20	3207.68
30	3256.28
40	3304.88
50	3353.48
60	3402.08
70	3450.68
80	3499.28
90	3547.88
100	3596.48
110	3645.08
120	3693.68

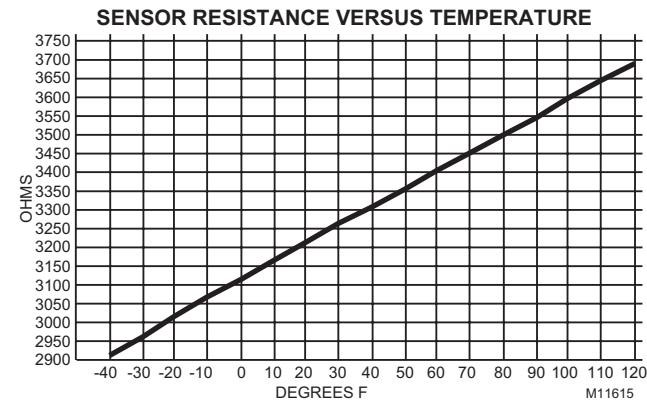


Fig. 52. PT3000 Sensor resistance versus temperature.

Sensor Type: C7041B,C,D,F,J,K (W7750B,C only).

Sensor Use: Return Air, Discharge Air Temperature (20K ohm).

Fig. 53 shows the graph of 20K ohm sensor resistance versus temperature.

Sensor Type: T7770A,B,C,D; T7560A,B and C7770A. (20K ohm)

Sensor Use: Space Temperature and Discharge/Return Air Temperature.

Fig. 53 shows the graph of sensor resistance versus temperature.

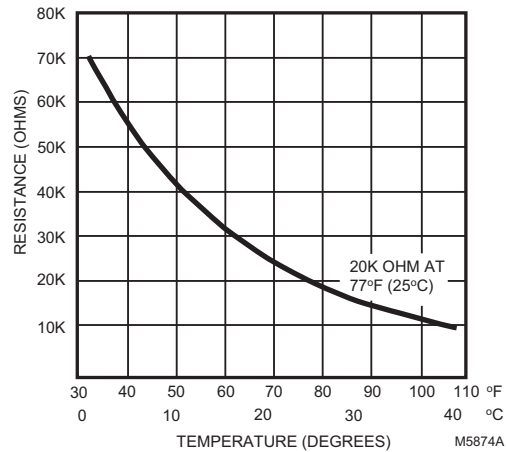


Fig. 53. 20K ohm sensor resistance versus temperature.

Sensor Type: T7770B,C 10K ohm linear setpoint potentiometer (Relative).

Sensor Use: Setpoint Offset Temperature.

Sensor Resistance versus Temperature Difference (above and below the setpoint):

Offset -9°F: 9574 ohms.
 Setpoint: 5500 ohms.
 Offset +9°F: 1426 ohms.

Sensor Type: T7770B,C 10K ohm setpoint potentiometer (Absolute).

Sensor Use: Direct Setpoint Temperature.

Sensor Resistance versus Temperature:

55°F (13°C): 9574 ohms.
 70°F (21°C): 5500 ohms.
 85°F (29°C): 1426 ohms.

Voltage/Current Sensors

Sensor Type: C7600B 2 to 10V.

Sensor Use: Humidity.

Table 30 lists the points for sensor voltage versus humidity. Fig. 54 shows the graph of these points.

Table 30. C7600B Sensor Voltage Versus Humidity.

Humidity Percentage	Sensor Voltage
10	2.67
15	3.08
20	3.48
25	3.88
30	4.28
35	4.68
40	5.08
45	5.48
50	5.88
55	6.28
60	6.69
65	7.09
70	7.49
75	7.89
80	8.29
85	8.69
90	9.09

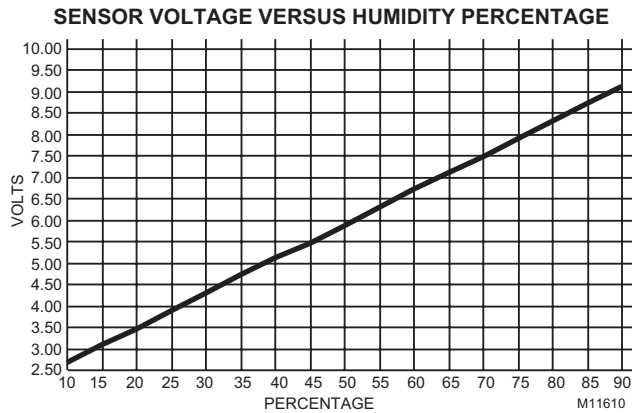


Fig. 54. C7600B Sensor voltage versus humidity.

Sensor Type: C7600C (4 to 20 mA).

Sensor Use: Humidity.

Table 31 lists the points for sensor voltage versus humidity. Fig. 55 shows the graph of these points.

Table 31. C7600C Sensor Current Versus Humidity.

Relative Humidity Percentage	Sensor Current
10	5.6
20	7.2
30	8.8
40	10.4
50	12.0
60	13.6
70	15.2
80	16.8
90	18.4

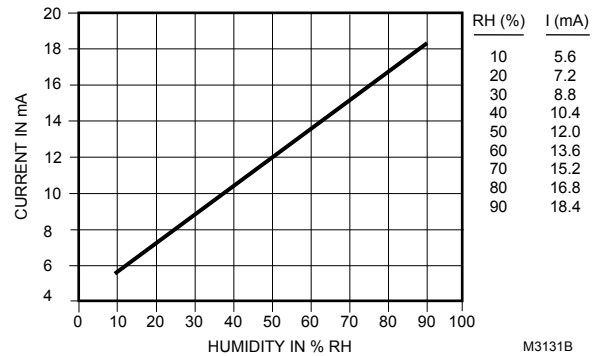


Fig. 55. C7600C output current versus humidity.

Sensor Type: C7400A.

Sensor Use: Enthalpy.

Table 32 lists the points for sensor current versus enthalpy (volts). Fig. 56 shows the graph of these points.

Table 32. C7400A Sensor Current Versus Enthalpy (volts).

Sensor Current (mA)	Enthalpy (Volts)
4	1
5	1.25
6	1.49
7	1.74
8	1.99
9	2.24
10	2.49
11	2.74
12	2.99
13	3.24
14	3.49
15	3.74
16	3.98
17	4.23
18	4.48
19	4.73
20	4.98

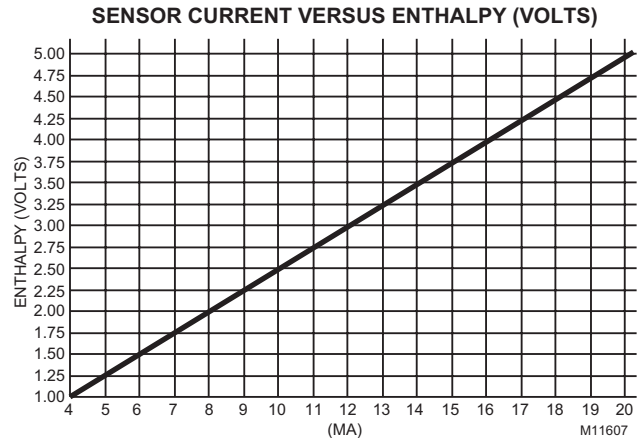


Fig. 56. C7400A Sensor current versus enthalpy (volts).

See Fig. 57 for partial psychrometric chart for a C7400A Solid State Enthalpy Sensor.

See Fig. 58 for a C7400A Solid State Enthalpy Sensor output current vs. relative humidity.

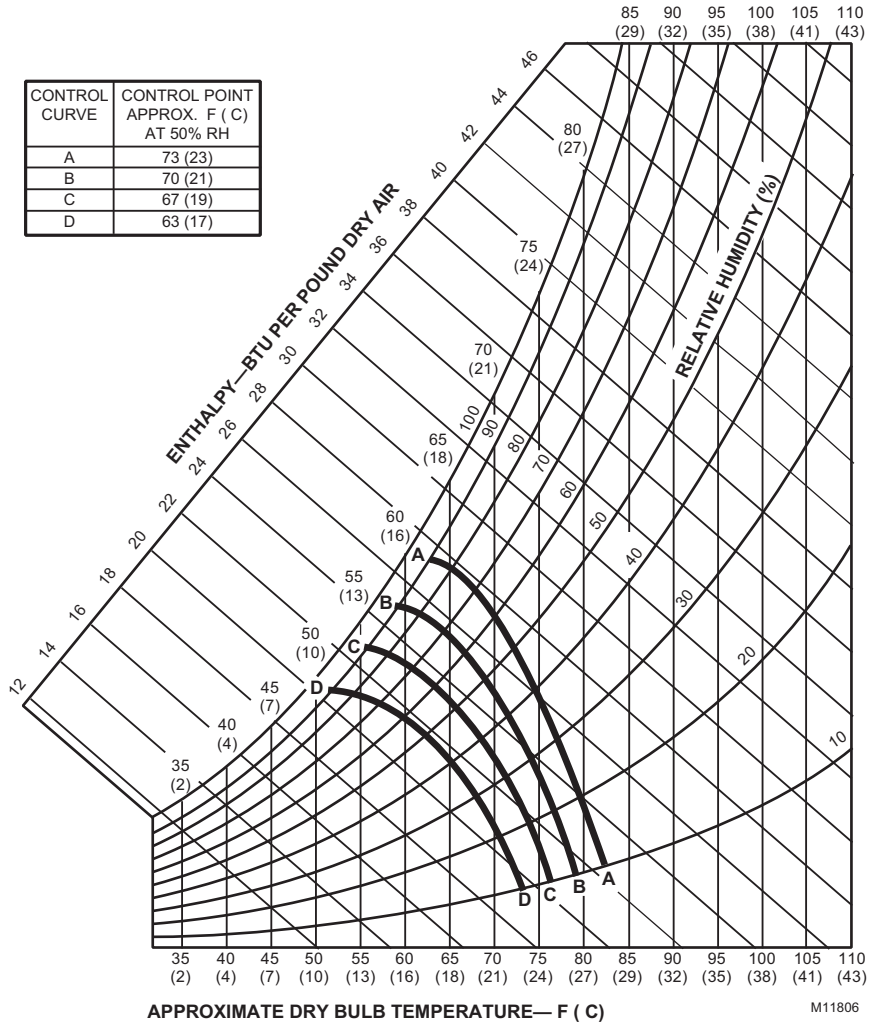


Fig. 57. Partial psychrometric chart for a C7400A Solid State Enthalpy Sensor.

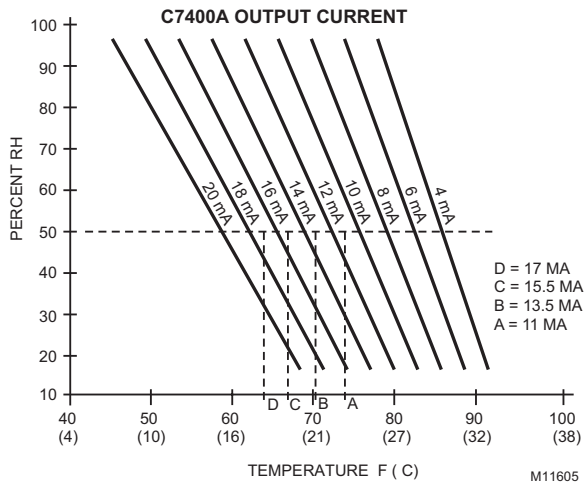


Fig. 58. C7400A Solid State Enthalpy Sensor output current versus relative humidity.

Sensor Type: C7232 or C7632.

Sensor Use: CO₂ concentration.

Table 33 lists the points for sensor voltage versus CO₂ concentration. Fig. 59 shows the graph of these points.

Table 33. C7232, C7632 Voltage Versus CO₂ Concentration.

CO ₂ Concentration PPM	Sensor Voltage
0	0.00
100	0.50
200	1.00
300	1.50
400	2.00
500	2.50
600	3.00
700	3.50
800	4.00
900	4.50
1000	5.00
1100	5.50
1200	6.00
1300	6.50
1400	7.00
1500	7.50
1600	8.00
1700	8.50
1800	9.00
1900	9.50
2000	10.00

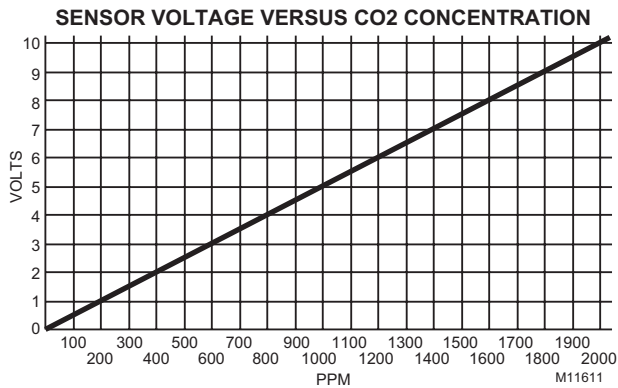


Fig. 59. C7232, C7632 voltage versus CO₂ concentration.

Sensor Type: P7640A,B (4-20 mA with 500 ohm resistor to convert to 2-10 Vdc).

Sensor Use: Sensor voltage (Vdc) /pressure (in. w.c.) 2 to 10 Vdc, 0 to 5 in. w.c. (1.25 kPa).

Table 34 lists the points for sensor voltage (Vdc) versus pressure (in. w.c.). Fig. 60 shows the graph of these points.

Table 34. P7640 Voltage (Vdc) Versus Pressure (in. w.c.).

Pressure in. w.c. (kPa)	Sensor Voltage (Vdc)
0.00 (0.00)	2.00
0.50 (0.13)	2.80
1.00 (0.25)	3.60
1.50 (0.37)	4.40
2.00 (0.5)	5.20
2.50 (0.62)	6.00
3.00 (0.75)	6.80
3.50 (0.87)	7.60
4.00 (1.00)	8.40
4.50 (1.12)	9.20
5.00 (1.25)	10.00

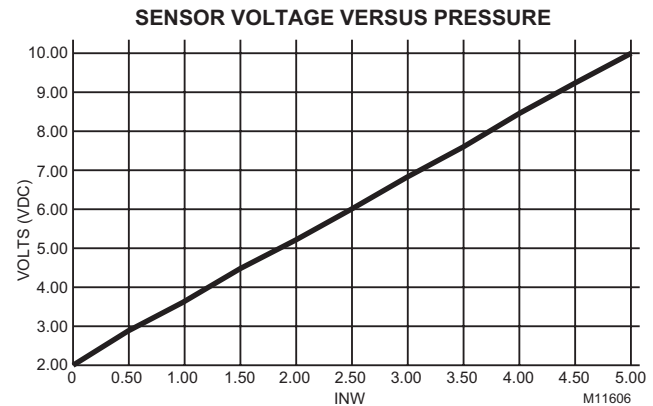


Fig. 60. P7640 voltage (Vdc) versus pressure (in. w.c.).

Sensor Type: Third party (2 to 10V).

Sensor Use: Monitor voltage.

LON[®], Neuron[®], and LONWORKS[®] are registered trademarks of Echelon[®] Corporation.

LONMARK[®] and LONMARK[®] logo are registered trademarks of the LONMARK Interoperability Association.

LonSpec[™] and LONSTATION[™] are trademarks of Echelon[®] Corporation.

By using this Honeywell literature, you agree that Honeywell will have no liability for any damages arising out of your use or modification to, the literature. You will defend and indemnify Honeywell, its affiliates and subsidiaries, from and against any liability, cost, or damages, including attorneys' fees, arising out of, or resulting from, any modification to the literature by you.

Automation and Control Solutions

Honeywell International Inc.
1985 Douglas Drive North
Golden Valley, MN 55422
customer.honeywell.com

Honeywell Limited-Honeywell Limitée
35 Dynamic Drive
Scarborough, Ontario M1V 4Z9

