 
 
 


***DATA TRANSLATION***

*UM-16866-V*

***DT3010 Series  
User's Manual***



**Eighteenth Edition**  
**May, 2010**

**Copyright © 2006 - 2010 by Data Translation, Inc.**  
All rights reserved.

Information furnished by Data Translation, Inc. is believed to be accurate and reliable; however, no responsibility is assumed by Data Translation, Inc. for its use; nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent rights of Data Translation, Inc.

Use, duplication, or disclosure by the United States Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer software clause at 48 C.F.R, 252.227-7013, or in subparagraph (c)(2) of the Commercial Computer Software - Registered Rights clause at 48 C.F.R., 52-227-19 as applicable. Data Translation, Inc., 100 Locke Drive, Marlboro, MA 01752.

Data Translation, Inc.  
100 Locke Drive  
Marlboro, MA 01752-1192  
(508) 481-3700  
www.datatranslation.com  
Fax: (508) 481-8620  
E-mail: info@datx.com

Data Translation® is a registered trademark of Data Translation, Inc. DT-Open Layers™, DT-Open Layers for .NET Class Library™, DataAcq SDK™, Data Acquisition OMNI CD™, LV-Link™, and DTx-EZ™ are trademarks of Data Translation, Inc.

All other brand and product names are trademarks or registered trademarks of their respective companies.

## Radio and Television Interference

This equipment has been tested and found to comply with CISPR EN55022 Class A and EN61000-6-1 requirements and also with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Changes or modifications to this equipment not expressly approved by Data Translation could void your authority to operate the equipment under Part 15 of the FCC Rules.

---

**Note:** This product was verified to meet FCC requirements under test conditions that included use of shielded cables and connectors between system components. It is important that you use shielded cables and connectors to reduce the possibility of causing interference to radio, television, and other electronic devices.

---

## Canadian Department of Communications Statement

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le Ministère des Communications du Canada.



---

# Table of Contents

<b>About this Manual</b> .....	<b>11</b>
Intended Audience.....	11
How this Manual is Organized .....	11
Conventions Used in this Manual .....	12
Related Information.....	12
Where To Get Help.....	13
<b>Chapter 1: Overview</b> .....	<b>15</b>
Features .....	16
Supported Software .....	18
Accessories .....	19
Getting Started Procedure.....	21
<b>Part 1: Getting Started</b> .....	<b>23</b>
<b>Chapter 2: Installing the Board and Loading the Device Driver</b> .....	<b>25</b>
Unpacking .....	27
Setting up the Computer.....	28
Setting up Expansion Slots .....	29
Removing the Board for Handling .....	30
Attaching the EP324 Cable (DT3010-268 Board Only) .....	31
Inserting the DT3010 Series Board into the Computer .....	32
Loading the Device Driver .....	34
Windows XP.....	34
Windows Vista.....	34
Windows 7 .....	35
<b>Chapter 3: Attaching and Configuring a Screw Terminal Panel</b> .....	<b>37</b>
Attaching a Screw Terminal Panel.....	39
Attaching the DT740 Screw Terminal Panel .....	39
Attaching the STP268 Screw Terminal Panel .....	39
Attaching the STP268-EC Screw Terminal Panel .....	40
Attaching to the DT3010-268 or DT3010/32-268 Board .....	42
Attaching a 5B Series Backplane .....	42
Attaching a 7B Series Backplane .....	43
Attaching a PB16H Opto-22 Backplane .....	43
Configuring a Screw Terminal Panel.....	44
Configuring the DT740 Screw Terminal Panel .....	44
Configuring Jumper W1 - Common Ground Sense .....	44
Configuring Resistors R1 to R16 - Bias Return .....	45

Configuring Resistors R17 to R32 - Current Shunt .....	45
Configuring the STP268 Screw Terminal Panel .....	45
Configuring Jumper W1 - Common Ground Sense .....	46
Configuring Resistors R1 to R16 - Bias Return .....	46
Configuring Resistors R17 to R32 - Current Shunt .....	47
Configuring the STP268-EC Screw Terminal Panel .....	47
<b>Chapter 4: Wiring Signals .....</b>	<b>49</b>
Preparing to Wire to a Screw Terminal Panel .....	51
Wiring Recommendations .....	51
Using 5B or 7B Series Signal Conditioning Modules .....	51
Screw Terminal Assignments .....	53
DT740 Screw Terminal Assignments .....	53
STP268 Screw Terminal Assignments .....	56
STP268-EC Screw Terminal Assignments .....	59
Connecting Analog Input Signals .....	63
Connecting Single-Ended Voltage Inputs .....	63
Connecting Pseudo-Differential Voltage Inputs .....	65
Connecting Differential Voltage Inputs .....	66
Connecting Current Loop Inputs .....	70
Connecting Analog Output Signals .....	72
Connecting Digital I/O Signals .....	74
Connecting Counter/Timer Signals .....	77
Connecting Event Counting Signals .....	77
Connecting Frequency Measurement Signals .....	83
Connecting Pulse Output Signals .....	85
<b>Chapter 5: Verifying the Operation of a DT3010 Series Board .....</b>	<b>91</b>
Running the Quick DataAcq Application .....	93
Testing Single-Value Analog Input .....	94
Testing Single-Value Analog Output .....	95
Testing Continuous Analog Input .....	96
Testing Single-Value Digital Input .....	97
Testing Single-Value Digital Output .....	98
Testing Frequency Measurement .....	99
Testing Pulse Output .....	100
<b>Part 2: Using Your Board .....</b>	<b>101</b>
<b>Chapter 6: Principles of Operation .....</b>	<b>103</b>
Analog Input Features .....	105
Analog Input Resolution .....	105
Analog Input Channels .....	105

Specifying a Single Channel .....	105
Specifying One or More Channels .....	106
Specifying Digital Input Lines in the Analog Input Channel List .....	106
Performing Dynamic Digital Output Operations .....	106
Input Ranges and Gains .....	107
A/D Sample Clock Sources .....	108
Internal A/D Sample Clock .....	109
External A/D Sample Clock .....	109
Analog Input Conversion Modes .....	110
Continuously-Paced Scan Mode .....	110
Triggered Scan Mode .....	111
Software-Retriggered Scan Mode .....	111
Externally-Retriggered Scan Mode .....	112
Triggers .....	113
Trigger Sources .....	113
Software Trigger .....	113
External Digital (TTL) Trigger .....	114
Analog Threshold Trigger .....	114
Trigger Acquisition Modes .....	115
Post-Trigger Acquisition .....	115
Pre-Trigger Acquisition .....	116
About-Trigger Acquisition .....	118
Data Format and Transfer .....	119
Error Conditions .....	120
Analog Output Features .....	122
Analog Output Resolution .....	122
Analog Output Channels .....	122
Specifying a Single Channel .....	122
Specifying One or More Channels .....	123
Output Ranges and Gains .....	123
D/A Output Clock Sources .....	123
Internal D/A Output Clock .....	123
External D/A Output Clock .....	124
Trigger Sources .....	124
Software Trigger .....	124
External Digital (TTL) Trigger .....	124
Analog Threshold Trigger .....	125
Analog Output Conversion Modes .....	125
Continuously-Paced Analog Output .....	126
Waveform Generation .....	127
Data Format and Transfer .....	127
Error Conditions .....	128

Digital I/O Features .....	129
Digital I/O Lines .....	129
Digital I/O Resolution .....	129
Digital I/O Operation Modes .....	129
Counter/Timer Features .....	131
Units .....	131
C/T Clock Sources .....	131
Internal C/T Clock .....	132
External C/T Clock .....	132
Internally Cascaded Clock .....	132
Gate Types .....	133
Pulse Output Types and Duty Cycles .....	134
Counter/Timer Operation Modes .....	135
Event Counting .....	135
Frequency Measurement .....	137
Rate Generation .....	139
One-Shot .....	141
Repetitive One-Shot .....	143
Synchronizing A/D and D/A Subsystems .....	144
Synchronizing the Triggers .....	144
Synchronizing the Clocks .....	145
<b>Chapter 7: Supported Device Driver Capabilities .....</b>	<b>147</b>
Data Flow and Operation Options .....	149
Buffering .....	150
Triggered Scan Mode .....	150
Data Encoding .....	151
Channels .....	151
Gain .....	152
Ranges .....	152
Resolution .....	152
Thermocouple and RTD Support .....	153
IEPE Support .....	153
Triggers .....	154
Clocks .....	155
Counter/Timers .....	156
<b>Chapter 8: Calibration .....</b>	<b>159</b>
Calibrating the Analog Input Subsystem .....	161
Choosing a Calibration Reference .....	161
Configuring for the Internal Reference .....	161
Configuring for an External Reference .....	162



Using the DT3010 Calibration Utility .....	163
Using the Auto-Calibration Procedure .....	163
Using the Manual Calibration Procedure .....	164
Calibrating the PGH Zero Setting .....	165
Using the DT3016 Calibration Utility .....	166
Using the Auto-Calibration Procedure .....	166
Calibrating the PGH Zero Setting .....	168
Calibrating the Analog Output Subsystem .....	169
Choosing a Calibration Meter .....	169
Configuring for the Internal ADC .....	169
Configuring for an External Meter .....	170
Using the DT3010 Calibration Utility.....	171
Using the DT3016 Calibration Utility.....	173
<b>Chapter 9: Troubleshooting .....</b>	<b>175</b>
General Checklist .....	176
Technical Support .....	178
If Your Board Needs Factory Service .....	179
<b>Appendix A: Specifications .....</b>	<b>181</b>
Analog Input Specifications .....	182
Analog Output Specifications.....	185
Digital I/O Specifications .....	187
Counter/Timer Specifications .....	188
Power, Physical, and Environmental Specifications .....	189
Connector Specifications.....	190
Regulatory Specifications .....	191
<b>Appendix B: Connector Pin Assignments .....</b>	<b>193</b>
Connector J1 on the DT3010, DT3010/32, and DT3016 Boards.....	194
Connector J2 on the DT3010, DT3010/32, and DT3016 Boards.....	196
Connector J1 on the DT3010-268 and DT3010/32-268 Board.....	198
Connector J2 on the DT3010-268 and DT3010/32-268 Board.....	200
Connector J1 on the DT740 .....	202
Connector J2 on the DT740 .....	203
Screw Terminal Assignments for the STP268.....	205
Screw Terminal Assignments for the STP268-EC .....	208

<b>Appendix C: Using Your Own Screw Terminal Panel</b> .....	<b>213</b>
Analog Inputs .....	215
Single-Ended Inputs .....	215
Pseudo-Differential Inputs.....	215
Differential Inputs.....	216
Analog Outputs .....	217
Digital Inputs and Counter/Timer Inputs .....	218
Digital Outputs.....	219
Cabling Information .....	220
<b>Index</b> .....	<b>221</b>

# About this Manual

This manual describes how to set up and install the following components:

- DT3010 Series software
- DT3010 Series board
- DT3010 Series Device Driver
- DT740, STP268, or STP268-EC screw terminal panel

It describes how to wire signals to the board and how to verify the board's operation using the Quick DataAcq application.

This manual also describes the features of the DT3010, DT3010-268, DT3010/32, DT3010/32-268, and DT3016 boards (collectively referred to as the DT3010 Series), the capabilities of the DT3010 Series Device Driver, and how to program the DT3010 Series boards using the DT-Open Layers for .NET Class Library™ software. Troubleshooting and calibration information is also provided.

---

**Note:** For information on checking system requirements, installing the software, and viewing the documentation, refer to the README file on the OMNI CD.

For more information on the class library, refer to the *DT-Open Layers for .NET Class Library User's Manual*. If you are using the DataAcq SDK or a software application to program your device, refer to the documentation for that software for more information.

---

## Intended Audience

This document is intended for engineers, scientists, technicians, or others responsible for using and/or programming the DT3010 Series boards for data acquisition operations in Microsoft® Windows® XP, Windows Vista®, or Windows 7. It is assumed that you have some familiarity with data acquisition principles, and that you understand your application.

## How this Manual is Organized

This manual is organized as follows:

- [Chapter 1, "Overview,"](#) describes the major features of the board, as well as the supported software and accessories for the board, and provides an overview of the getting started procedure.
- [Chapter 2, "Installing the Board and Loading the Device Driver,"](#) describes how to install the DT3010 Series board and load the DT3010 Series Device Driver.
- [Chapter 3, "Attaching and Configuring a Screw Terminal Panel,"](#) describes how to attach the DT740, STP268, or STP268-EC screw terminal panel to a DT3010 Series board and how to configure the screw terminal panel for use with a DT3010 Series board.

- [Chapter 4, “Wiring Signals,”](#) describes how to wire signals to a DT3010 Series board using the DT740, STP268, or STP268-EC.
- [Chapter 5, “Verifying the Operation of a DT3010 Series Board,”](#) describes how to verify the operation of a DT3010 Series board with the Quick DataAcq application
- [Chapter 6, “Principles of Operation,”](#) describes all of the board’s features and how to use them in your application.
- [Chapter 7, “Supported Device Driver Capabilities,”](#) lists the data acquisition subsystems and the associated features accessible using the DT3010 Series Device Driver.
- [Chapter 8, “Calibration,”](#) describes how to calibrate the analog I/O circuitry of the board.
- [Chapter 9, “Troubleshooting,”](#) provides information that you can use to resolve problems with the board and the device driver, should they occur.
- [Appendix A, “Specifications,”](#) lists the specifications of the board.
- [Appendix B, “Connector Pin Assignments,”](#) shows the pin assignments for the connectors on the board and for the DT740, STP268, and STP268-EC screw terminal panels.
- [Appendix C, “Using Your Own Screw Terminal Panel,”](#) describes additional considerations to keep in mind when designing your own screw terminal panel for use with a DT3010 Series board.
- An index completes this manual.

## Conventions Used in this Manual

The following conventions are used in this manual:

- Notes provide useful information or information that requires special emphasis, cautions provide information to help you avoid losing data or damaging your equipment, and warnings provide information to help you avoid catastrophic damage to yourself or your equipment.
- Items that you select or type are shown in **bold**.

## Related Information

Refer to the following documents for more information on using the DT3010 Series board:

- *Measure Foundry Manual* (UM-19298) and online help. These documents describe how to use Measure Foundry™ to build drag-and-drop test and measurement applications for Data Translation® data acquisition devices.
- *DT-Open Layers for .NET User’s Manual* (UM-22161). For programmers who are developing their own application programs using Visual C# or Visual Basic .NET, this manual describes how to use the DT-Open Layers for .NET Class Library to access the capabilities of Data Translation data acquisition devices.
- *DataAcq SDK User’s Manual* (UM-18326). For programmers who are developing their own application programs using the Microsoft C compiler, this manual describes how to use the DT-Open Layers DataAcq SDK™ to access the capabilities of Data Translation data acquisition boards. This manual is provided on the Data Acquisition OMNI CD.

- *DTx-EZ Getting Started Manual* (UM-15428). This manual, available from Data Translation, describes how to use the ActiveX controls provided in DTx-EZ™ to access the capabilities of Data Translation data acquisition boards in Microsoft® Visual Basic™ or Visual C++.
- *LV-Link Online Help*. This help file describes how to use LV-Link™ with the LabVIEW™ graphical programming language to access the capabilities of Data Translation data acquisition devices.
- *PCI Specification: PCI Local Bus Specification*, PCI Special Interest Group, Portland, OR. (Revision 2.1, June 1, 1995).
- Microsoft Windows XP, Windows Vista, or Windows 7 documentation.

## Where To Get Help

Should you run into problems installing or using a DT3010 Series board, our Technical Support Department is available to provide prompt, technical assistance. Refer to [Chapter 9](#) starting on [page 175](#) for more information. If you are outside the U.S. or Canada, call your local distributor, whose number is listed on our web site ([www.datatranslation.com](http://www.datatranslation.com)).





# ***Overview***

Features .....	16
Supported Software .....	18
Accessories .....	19
Getting Started Procedure.....	21

## Features

The DT3010 Series consists of the following high-speed, multifunction board types for the PCI bus: DT3010, DT3010-268, DT3010/32, DT3010/32-268, and DT3016. These board types differ in analog I/O resolution, output FIFO (first-in, first-out buffer) size, throughput, and connectors as shown in [Table 1](#).

**Table 1: Differences Among DT3010 Series Boards**

Board	Analog I/O Resolution	Output FIFO	A/D Throughput <sup>a</sup>	D/A Throughput <sup>b</sup>	Connectors
DT3010	12 bits	4K	1.25 MSamples/s	200 kSamples/s	one 50-pin, one 68-pin
DT3010-268	12 bits	4K	1.25 MSamples/s	200 kSamples/s	two 68-pin
DT3010/32	12 bits	32K	1.25 MSamples/s	200 kSamples/s	one 50-pin, one 68-pin
DT3010/32-268	12 bits	32K	1.25 MSamples/s	200 kSamples/s	two 68-pin
DT3016	16 bits	4K	250 kSamples/s	100 kSamples/s	one 50-pin, one 68-pin

a. This throughput is for a single analog input channel.

b. This throughput is for full-scale ranges.

All DT3010 Series boards share the following major features:

Analog Inputs	32 single-ended or 16 differential
Analog Outputs	2, $\pm 10$ V output range
Digital I/O Lines	16
Counter/Timers	4

- Programmable bipolar ( $\pm 10$  V) and unipolar (0 to 10 V) input ranges with gains of 1, 2, 4, and 8
- Continuously-paced and triggered scan capability
- A 1024-location channel list that supports sampling analog input channels at the same or different gains in sequential or random order
- Up to 256 scans per trigger for a total of 262,144 samples per trigger
- PCI bus mastering for data transfers
- Pre-, post-, and about-trigger acquisition modes to acquire data relative to an external event using computer memory
- Internal and external clock sources; one external clock input for the analog input subsystem and one external clock input for the analog output subsystem
- Analog threshold triggering using either an external analog input or one of the analog input channels; a separate DAC sets the trigger level (8-bit resolution, fixed hysteresis)



- Digital TTL triggering; one external hardware TTL input for the analog input subsystem and one external hardware TTL input for the analog output subsystem
- Simultaneous analog input and analog output operations running at full speed
- Software calibration of the analog input and output subsystems
- Two 8-bit digital ports programmable as inputs or outputs on a per-port basis; digital inputs can be included as part of the analog input channel list to correlate the timing of analog and digital events; digital outputs can drive external solid-state relays
- Two dynamic, high-speed digital output lines; useful for synchronizing and controlling external equipment, these dynamic digital output lines are programmable as part of the analog input subsystem using the DataAcq SDK
- Programmable gate types
- Programmable pulse output polarities (output types) and duty cycles
- A/D Sample Clock Output and A/D Trigger Output signals, useful for synchronizing and controlling external equipment

For a discussion of these features in detail, refer to [Chapter 6](#) starting on [page 103](#).

## Supported Software

The following software is available for use with the DT3010 Series boards and on the Data Acquisition OMNI CD:

- **DT3010 Series Device Driver** – The device driver is installed automatically when you install the software from the Data Acquisition OMNI CD. You need the device driver to use the DT3010 Series board with any of the supported software packages or utilities
- **The Quick DataAcq application** – This application provides a quick way to get a DT3010 Series board up and running. Using the Quick DataAcq application, you can verify the features of the board, display data on the screen, and save data to disk.
- **The quickDAQ application** – An evaluation version of this .NET application is included on the Data Acquisition OMNI CD. quickDAQ lets you acquire analog data from all devices supported by DT-Open Layers for .NET software at high speed, plot it during acquisition, analyze it, and/or save it to disk for later analysis.
- **DT3010 and DT3016 Calibration Utilities** – The DT3010 Calibration Utility allows you to calibrate the analog input and analog output subsystems of the DT3010, DT3010-268, DT3010/32, and DT3010/32-268 boards. The DT3016 Calibration Utility allows you to calibrate the analog input and analog output subsystems of the DT3016 boards. Refer to [Chapter 8](#) starting on [page 159](#) for more information on these utilities.
- **Measure Foundry** – An evaluation version of this software is included on the Data Acquisition OMNI CD. Measure Foundry is drag-and-drop test and measurement application builder designed to give you top performance with ease-of-use development. Order the full development version of this software package to develop your own application using real hardware.
- **DT-Open Layers for .NET Class Library** – Use this class library if you want to use Visual C# or Visual Basic for .NET to develop your own application software for a DT3010 Series board using Visual Studio 2003 or Visual Studio 2005; the class library complies with the DT-Open Layers standard.
- **DataAcq SDK** – Use the Data Acq SDK if you want to use Visual Studio 6.0 and Microsoft C or C++ to develop your own application software for a DT3010 Series board using Windows XP, Windows Vista, or Windows 7; the DataAcq SDK complies with the DT-Open Layers standard.
- **DTx-EZ** – DTx-EZ provides ActiveX controls, which allow you to access the capabilities of the DT3010 Series boards using Microsoft Visual Basic or Visual C++; DTx-EZ complies with the DT-Open Layers standard.
- **DAQ Adaptor for MATLAB** – Data Translation's DAQ Adaptor provides an interface between the MATLAB Data Acquisition (DAQ) subsystem from The MathWorks and Data Translation's DT-Open Layers architecture.
- **LV-Link** – An evaluation version of this software is included on the Data Acquisition OMNI CD. Use LV-Link if you want to use the LabVIEW graphical programming language to access the capabilities of the DT3010 Series boards.

Refer to the Data Translation web site ([www.datatranslation.com](http://www.datatranslation.com)) for more information on the appropriate software package for your application.

## Accessories

The following optional accessories are available for DT3010 Series boards:

- **DT740 screw terminal panel** – Screw terminal panel with two connectors to accommodate the analog I/O, digital I/O, and counter/timer signals provided by the DT3010, DT3010/32, and DT3016 boards.
- **EP307 cable** – A 1-meter, twisted-pair, shielded cable that connects the 50-pin analog I/O connector (J1) on the DT3010, DT3010/32, and DT3016 boards to the J1 connector on the DT740 screw terminal panel.
- **EP308 cable** – A 1-meter, twisted-pair, shielded cable that connects the 68-pin digital I/O connector (J2) on the DT3010, DT3010/32, and DT3016 boards to the J2 connector on the DT740 screw terminal panel.
- **STP268 screw terminal panel** – Screw terminal panel with one 68-pin connector to access the signals provided by one of the connectors on the DT3010-268 or DT3010/32-268 board. If you want to access all of the functionality of the DT3010-268 or DT3010/32-268 at the same time, you need two STP268 screw terminal panels.
- **STP268-EC screw terminal panel** – Screw terminal panel with two 26-pin connectors for attaching to 5B or 7B Series signal conditioning backplanes, one 50-pin connector for attaching to the Opto-22 PB16H backplane, and one 68-pin connector for attaching to the DT3010-268 or DT3010/32-268 board.
- **EP324 cable** – A 1 1/2-inch ribbon cable that connects to the 68-pin digital I/O connector (J2) on the DT3010-268 or DT3010/32-268 board; the other end of this cable provides a 68-pin connector and face plate for connection to an EP325 cable. This cable is shipped with each DT3010-268 or DT3010/32-268 board.
- **EP325 cable** – A, 6-foot, SCSI-3 cable that connects the STP268 or STP268-EC screw terminal panel to connector J1 on the DT3010-268 board.
- **5B01 or 5B08 backplane and 5B Series modules** – The 5B01 is a 16-channel backplane; the 5B08 is an 8-channel backplane. Both backplanes accept 5B modules for signal conditioning applications, including measuring thermocouples, RTDs, voltage input, current input, strain gage input, and frequency input.

To use the 5B series backplanes and modules with the STP268-EC, you need the following additional accessories available from Data Translation:

- **AC1315 cable** – A 2-foot cable with a 26-pin connector on each end that connects a 5B Series signal conditioning backplane to connector J2 on the STP268-EC screw terminal panel.
- **PWR-977 power supply** – A 5 V, 3 A power supply for powering the 5B Series backplanes.
- **7BP16-1, 7BP08-1, or 7BP04-1 backplane and 7B Series modules** – The 7BP16-1 is a 16-channel backplane, the 7BP08-1 is an 8-channel backplane, and the 7BP04-1 is a 4-channel backplane. All three backplanes accept 7B modules for signal conditioning applications, including measuring thermocouples, RTDs, voltage input, current input, strain gage input, and frequency input.


To use the 7B series backplanes and modules with the STP268-EC, you need the following additional accessories available from Data Translation:

- **AC1315** – A 2-foot, 26-pin female to 26-pin female cable that connects a 7B Series backplane to the AC1393 cable.
- **AC1393** – A 6-inch, 26-pin male to 25-pin female adapter cable that connects a 7B Series backplane to the AC1315 cable; the AC1315 cable then connects to a STP268-EC screw terminal panel.
- **HES14-21 power supply** – A linear ac/dc power supply that provides +24 Vdc for powering 7B Series backplanes.
- **Opto-22 PB16H** – The PB16H is a digital backplane that connects to the STP268-EC screw terminal panel to access the digital I/O signals.

You need the 2.4-meter, 50-pin EP035 ribbon cable to connect the PB16H backplane to the STP268-EC screw terminal panel.

# Getting Started Procedure

The flow diagram shown in [Figure 1](#) illustrates the steps needed to get started using a DT3010 Series board. This diagram is repeated in each getting started chapter; the shaded area in the diagram shows you where you are in the getting started procedure.

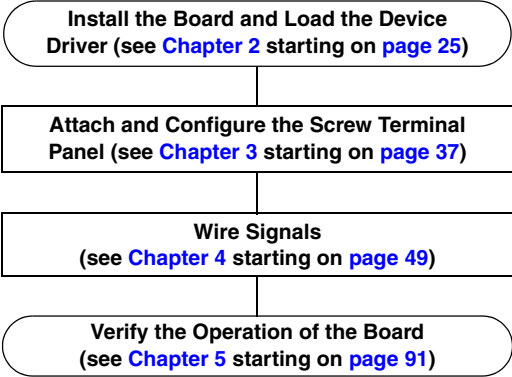

**Figure 1: Getting Started Flow Diagram**



# ***Part 1: Getting Started***








## ***Installing the Board and Loading the Device Driver***

Unpacking .....	27
Unpacking .....	27
Setting up Expansion Slots .....	29
Removing the Board for Handling .....	30
Attaching the EP324 Cable (DT3010-268 Board Only) .....	31
Inserting the DT3010 Series Board into the Computer .....	32
Loading the Device Driver .....	34

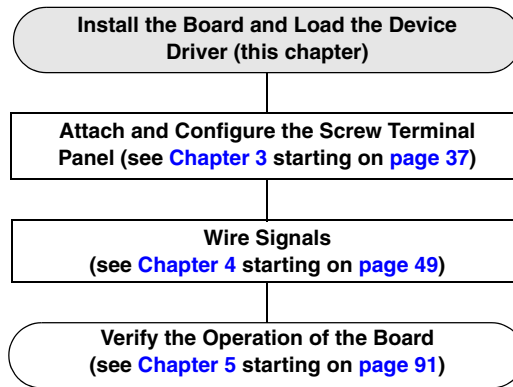

---

**Note:** All DT3010 Series boards are factory-calibrated and require no further adjustment prior to installation. If you are using the DT3010 Series board and decide later to recalibrate it, refer to [Chapter 8](#) for instructions.

---

## Unpacking

Open the shipping box and remove the wrapped DT3010 Series board.

**CAUTION:**

**Keep the board in its protective antistatic bag until you are ready to install it; this minimizes the likelihood of electrostatic damage.**

Verify that the following items are present:

- DT3010 Series data acquisition board
- Data Acquisition OMNI CD

If an item is missing or damaged, contact Data Translation. If you are in the United States, call the Customer Service Department at (508) 481-3700, ext. 1323. An application engineer will guide you through the appropriate steps for replacing missing or damaged items. If you are located outside the United States, call your local distributor, listed on Data Translation's web site ([www.datatranslation.com](http://www.datatranslation.com)).

## Setting up the Computer

**CAUTION:**

To prevent electrostatic damage that can occur when handling electronic equipment, use a ground strap or similar device when performing this installation procedure.

To set up the computer, do the following:

1. Install the software from the Data Acquisition OMNI CD or Data Translation web site.

---

**Note:** If you are using Windows 7, you **must** install the device driver before installing the board in the computer.

---

2. Turn off the computer.
3. Turn off all peripherals (printer, modem, monitor, and so on) connected to the computer.
4. Unplug the computer and all peripherals.
5. Remove the cover from you computer. Refer to your computer's user's manual for instructions.

## Setting up Expansion Slots

Once you have set up the computer, set up the expansion slots as follows:

1. Select a 32-bit or 64-bit PCI expansion slot.

PCI slots are shorter than ISA or EISA slots and are usually white or ivory. Commonly, three PCI slots (one of which may be a shared ISA/PCI slot) are available. If an ISA board exists in the shared slot, you cannot use the slot for a PCI board; if a PCI board exists in the shared slot, you cannot use the slot for an ISA board.

---

**Note:** If you are using a DT3010-268 board with an STP268 screw terminal panel, the expansion slot to the left of the slot you just selected must be available for the EP324 cable and faceplate (it can be either a PCI or ISA slot). Refer to [page 32](#) for more information.

---

2. Remove the cover plates from the selected expansion slots. Retain the screws that held them in place; you will use them later to install the board.

## ***Removing the Board for Handling***


To remove the board for handling, follow these steps:

1. Discharge any static electricity by holding the wrapped board in one hand while placing your other hand firmly on a metal portion of the computer chassis.
2. Carefully remove the antistatic packing material from the board. (It is recommended that you save the original packing material in the unlikely event that your board requires servicing in the future.)
3. Hold the board by its edges and do not touch any of the components on the board.

## Attaching the EP324 Cable (DT3010-268 Board Only)

If you are using a DT3010-268 board and want to access the dynamic digital outputs, digital I/O port B, or counter/timers 2 and 3 of the board, you need to use the STP268 screw terminal panel and the EP324 cable that is shipped with the board.

Attach the end of the EP324 that does not have the face plate to connector J2 on the DT3010-268 board, as shown in [Figure 2](#).

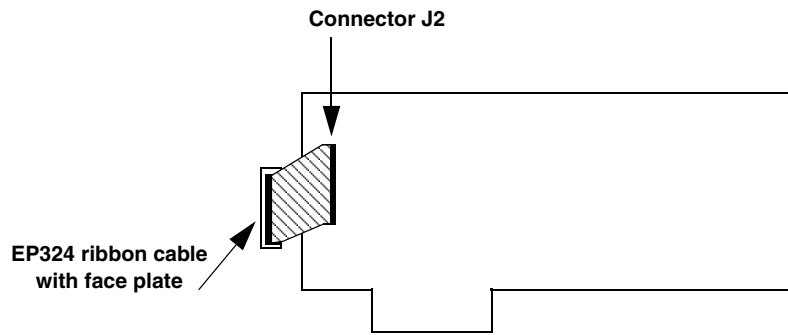


**Figure 2: Attaching the EP324 Cable to the DT3010-268 Board**

Refer to [page 39](#) for information on attaching the STP268 screw terminal panel.


## Inserting the DT3010 Series Board into the Computer

Once you have set up the expansion slots and connected the EP324 cable to the board (if needed), do the following to insert the DT3010 Series board into the computer:

1. Position the board so that the cable connectors are facing the rear of the computer. [Figure 3](#) shows an example of inserting a DT3010, DT3010/32, DT3010/32-268, and DT3016 board. [Figure 4](#) shows an example of inserting a DT3010-268 board.

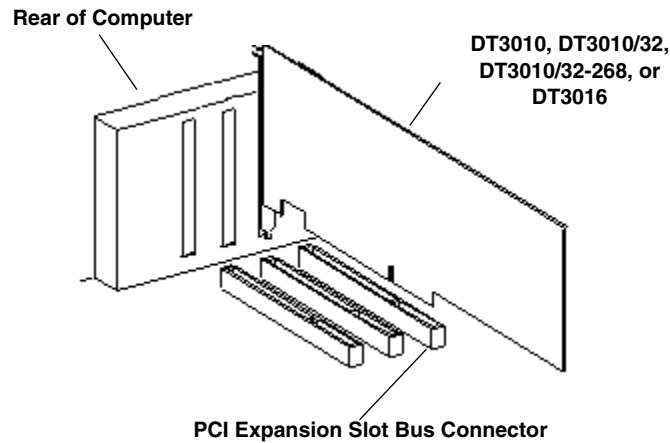

**Figure 3: Inserting the DT3010 Series Board in the Computer**

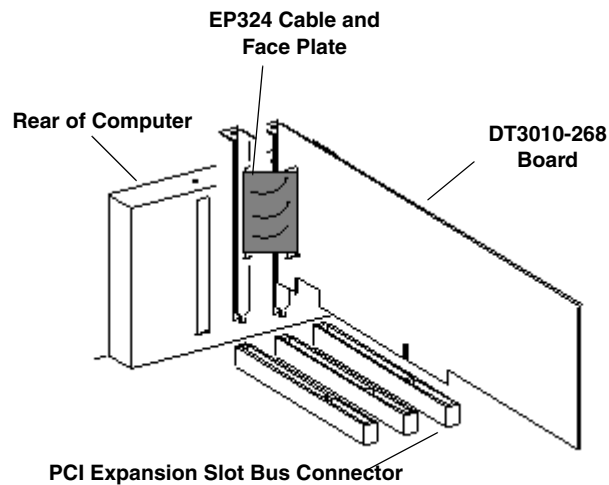

**Figure 4: Inserting the DT3010-268 Board in the Computer**

2. Carefully lower the board into the PCI expansion slot using the card guide to properly align the board in the slot.



3. When the bottom of the board contacts the bus connector, gently press down on the board until it clicks into place.

**CAUTION:**

**Do not force the board into place. Moving the board from side to side during installation may damage the bus connector. If you encounter resistance when inserting the board, remove the board and try again.**

4. Secure the board in place at the rear panel of the system unit using the screw removed from the slot cover.
5. If you are installing a DT3010-268 board, secure the face plate of the EP324 cable into the appropriate slot.
6. Reinstall the cover of the computer. Refer to your computer's user's manual for instructions.
7. Power up the computer, and follow the steps in the next section.

## Loading the Device Driver

To load the DT3010 Series device driver in:

- Windows XP, follow the steps on [page 34](#).
- Windows Vista, follow the steps on [page 34](#).
- Windows 7, follow the steps on [page 35](#).

### Windows XP

Once you have installed the DT3010 Series driver from the Data Acquisition OMNI CD, installed a DT3010 Series board, and powered up the host computer, the New Hardware Found dialog box appears. Do the following to load the device driver in Windows XP:

1. Click **Next**.
2. Click **Search for a suitable driver for my device (recommended)**.
3. Click **Specify a location**, and click **Next**.
4. Browse to Windows\Inf\DT3010.Inf, and then click **Open**.
5. Click **OK**.
6. Click **Next**.  
*The files are copied.*
7. Click **Finish**.
8. Open the Control Panel.
9. Double-click the **Open Layers Control Panel** icon.
10. Select the DT3010 Series board to configure, and then click **Advanced**.  
*By default, the prompt "Handles Overloaded Bus?" is checked.*
11. If you are using an Optiplex computer or experience timing problems with your DT3010 Series board, uncheck this box.
12. When you are finished, click **Close**.

Once you have finished loading the device driver, perform the steps in [Chapter 3](#) to attach and configure the screw terminal panel and/or signal conditioning backplane.

### Windows Vista

Once you have installed the DT3010 Series driver from the Data Acquisition OMNI CD, installed a DT3010 Series board, and powered up the host computer, the New Hardware Found dialog box appears. Do the following to load the device driver in Windows Vista:

1. Click **Locate and install driver software (recommended)**.  
*The popup message "Windows needs your permission to continue" appears.*
2. Click **Continue**.  
*The Windows Security dialog box appears.*

3. Click **Install this driver software anyway**.  
*The driver files are installed.*
4. Open the Control Panel.
5. Double-click the **Open Layers Control Panel** icon.
6. Select the DT3010 Series board to configure, and then click **Advanced**.  
*By default, the prompt "Handles Overloaded Bus?" is checked.*
7. If you are using an Optiplex computer or experience timing problems with your DT3010 Series board, uncheck this box.
8. When you are finished, click **Close**.

Once you have finished loading the device driver, perform the steps in [Chapter 3](#) to attach and configure the screw terminal panel and/or signal conditioning backplane.

## Windows 7

Once you have installed the software from the Data Acquisition OMNI CD, installed a DT3010 Series board, and powered up the host computer, the hardware is found automatically. Perform the following steps to configure the device driver:

1. Open the Control Panel.
2. Double-click the **Open Layers Control Panel** icon.
3. Select the DT3010 Series board to configure, and then click **Advanced**.  
*By default, the prompt "Handles Overloaded Bus?" is checked.*
4. If you are using an Optiplex computer or experience timing problems with your DT3010 Series board, uncheck this box.
5. When you are finished, click **Close**.


Once you have finished loading the device driver, perform the steps in [Chapter 3](#) to attach and configure the screw terminal panel and/or signal conditioning backplane.





## ***Attaching and Configuring a Screw Terminal Panel***

<a href="#">Attaching a Screw Terminal Panel.....</a>	<a href="#">39</a>
<a href="#">Configuring a Screw Terminal Panel.....</a>	<a href="#">44</a>

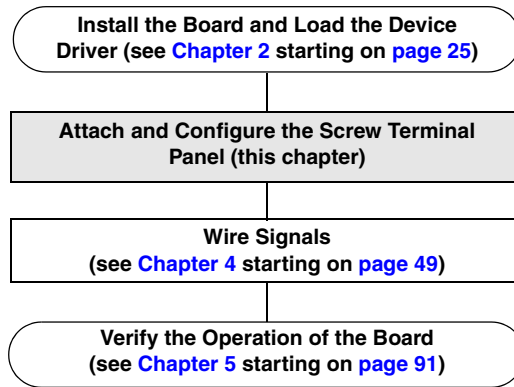

## Attaching a Screw Terminal Panel

If you are using the DT3010, DT3010/32, or DT3016 board, you first need to attach the DT740 screw terminal panel to the board before you can wire signals.

If you are using the DT3010-268 or DT3010/32-268 board, you first need to attach the STP268 or STP268-EC screw terminal panel to the board before you can wire signals.

This section describes how to attach the DT740, STP268, or STP268-EC screw terminal panels to the appropriate DT3010 Series board.

### Attaching the DT740 Screw Terminal Panel

The DT740 screw terminal panel is provided for DT3010, DT3010/32, and DT3016 boards.

Connector J1 on the screw terminal panel brings out all of the analog signals from connector J1 on the board; cable EP307 connects connector J1 on the screw terminal panel to the DT3010, DT3010/32, or DT3016 board. Connector J2 on the screw terminal panel brings out all of the digital and counter/timer signals from connector J2 on the board; cable EP308 connects connector J2 on the screw terminal panel to the DT3010, DT3010/32, or DT3016 board.

Figure 5 illustrates how to attach the DT740 screw terminal panel to the DT3010, DT3010/32, DT3016, or DT3016 board.

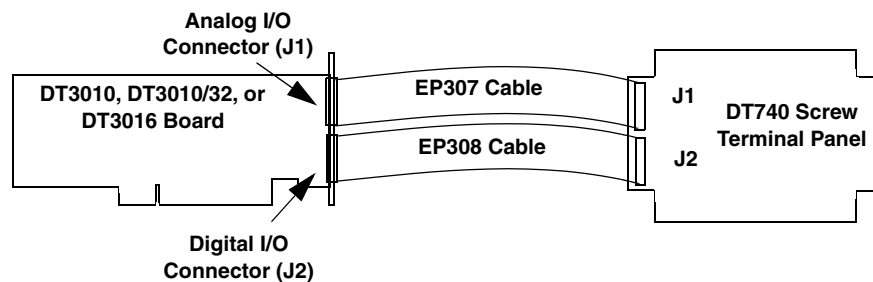



Figure 5: Attaching the DT740 Screw Terminal Panel to the DT3010, DT3010/32, or DT3016 Board

### Attaching the STP268 Screw Terminal Panel

The STP268 screw terminal panel is provided for accessing the signals of the DT3010-268 or DT3010/32-268 board. If you are using both connector J1 on the DT3010-268 or DT3010/32-268 board, which allows access to most of the functionality of the board, and connector J2 on the DT3010-268 or DT3010/32-268 board, which allows access to the dynamic digital outputs, digital I/O port B, and counter/timers 2 and 3 of the board, you need two STP268 screw terminal panels.

The EP325 cable, which is provided as an option for the STP268 screw terminal panel, attaches the STP268 to either connector J1 or to the free end of cable EP324, which is attached to connector J2 (refer to [Chapter 2](#) for more information on attaching the EP324 cable to connector J2).

[Figure 6](#) illustrates how to attach STP268 screw terminal panels to the DT3010-268 or DT3010/32-268 board.

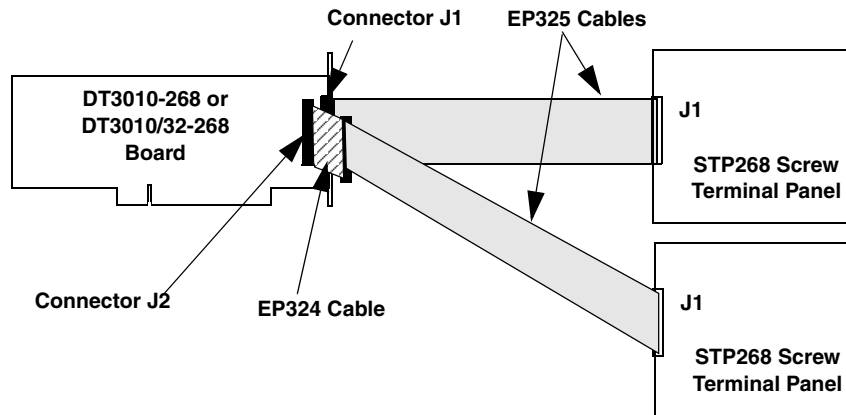

**Figure 6: Attaching STP268 Screw Terminal Panels to the DT3010-268 or DT3010/32-268 Board**


## Attaching the STP268-EC Screw Terminal Panel

Only the STP268-EC screw terminal panel supports Analog Devices 5B Series backplanes, 7B Series backplanes, and the AC1324 screw terminal panel, as well as the Opto-22 PB16H digital I/O backplane. The STP268-EC provides the following four connectors:

- Connector J1 –Attaches to the 68-pin connector of the DT3010-268.
- Connector J2 –Supports the PB16H digital I/O backplane. The PB16H supports eight digital I/O lines.
- Connectors J3 and J4 –Supports 5B and 7B Series backplanes or an AC1324 screw terminal panel for analog input connections.

[Figure 7](#) shows the location of these connectors on the STP268-EC screw terminal panel.



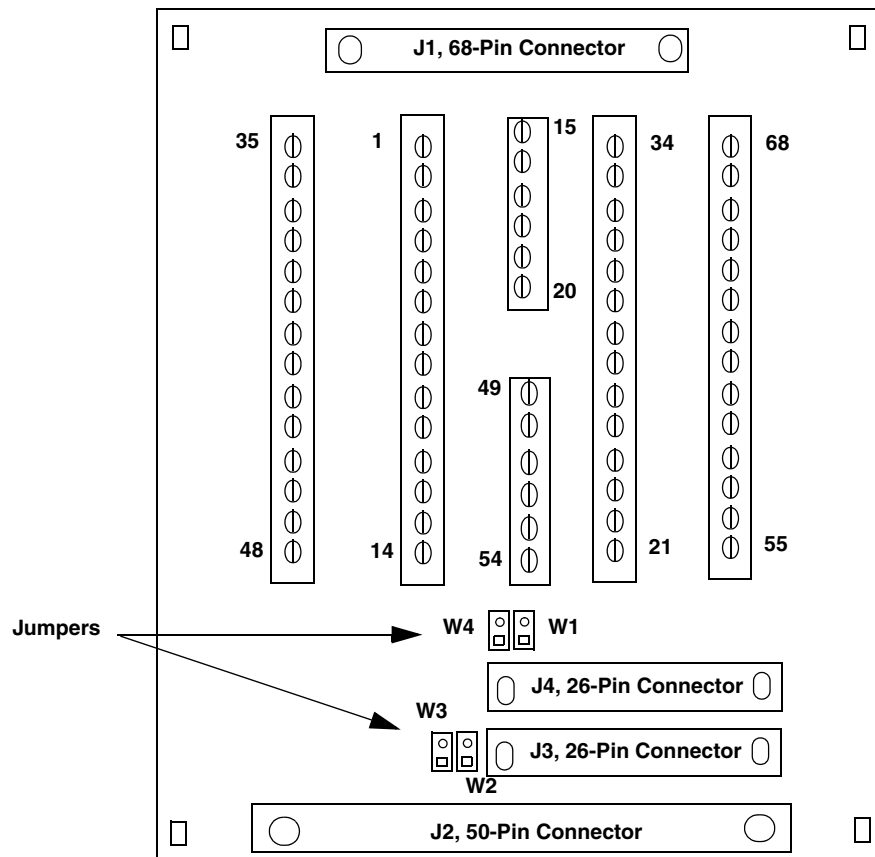

**Figure 7: STP268-EC Screw Terminal Panel**

Specific 5B and 7B Series backplanes that are supported include the following:

- 5B01 – a 16-channel backplane for 5B Series signal conditioning modules
- 5B08 – an 8-channel backplane for 5B Series signal conditioning modules
- 7BP16-1 – a 16-channel backplane for 7B Series signal conditioning modules
- 7BP08-1 – an 8-channel backplane for 7B Series signal conditioning modules
- 7BP04-1 – a 4-channel backplane for 7B Series signal conditioning modules

This section describes how to connect the STP268-EC screw terminal panel to the DT3010-268 board, and how to connect a 5B or 7B Series backplane, and/or a PB16H Opto-22 backplane to the STP268-EC screw terminal panel.

## Attaching to the DT3010-268 or DT3010/32-268 Board

The EP325 cable, which is available as an accessory to the STP268-EC screw terminal panel, attaches connector J1 on the STP268-EC to connector J1 on the DT3010-268 or DT3010/32-268 board.

Figure 8 illustrates how to attach an STP268-EC screw terminal panel to the DT3010-268 or DT3010/32-268 board.

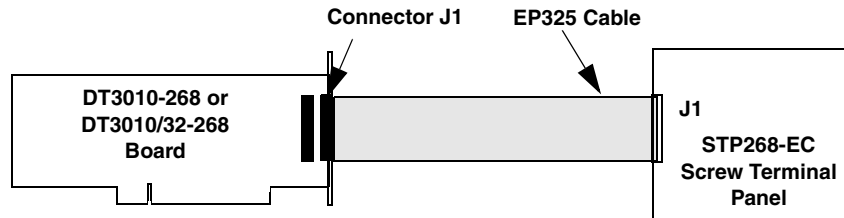


Figure 8: Attaching an STP268-EC Screw Terminal Panel to the DT3010-268 or DT3010/32-268 Board

## Attaching a 5B Series Backplane

To connect a 5B Series signal conditioning backplane to the STP268-EC screw terminal panel, refer to Figure 9 while completing the steps that follow:


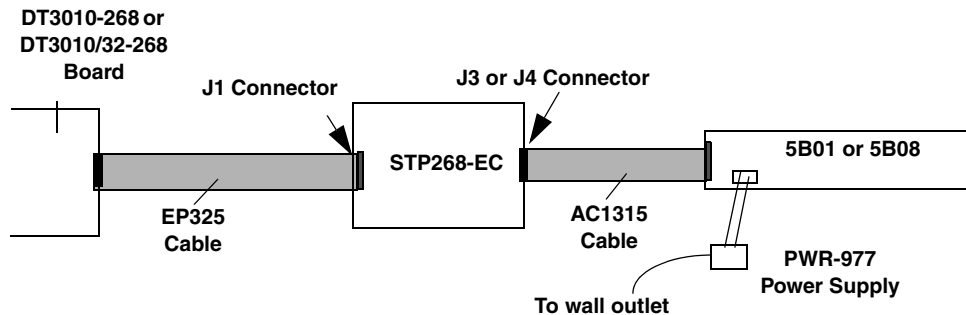


Figure 9: Connecting the 5B Series Backplane to the STP268-EC Screw Terminal Panel

1. Plug one end of an AC1315 cable into the J3 or J4 connector of the STP268-EC screw terminal panel.
2. Plug the other end of the AC1315 cable into the 26-pin connector on the 5B Series backplane.
3. Connect power supply PWR-977 to the +5 V and power ground screw terminals on the 5B Series backplane and to the wall outlet.

## Attaching a 7B Series Backplane

To connect a 7B Series signal conditioning backplane to the STP268-EC screw terminal panel, refer to [Figure 10](#) while completing the steps that follow:

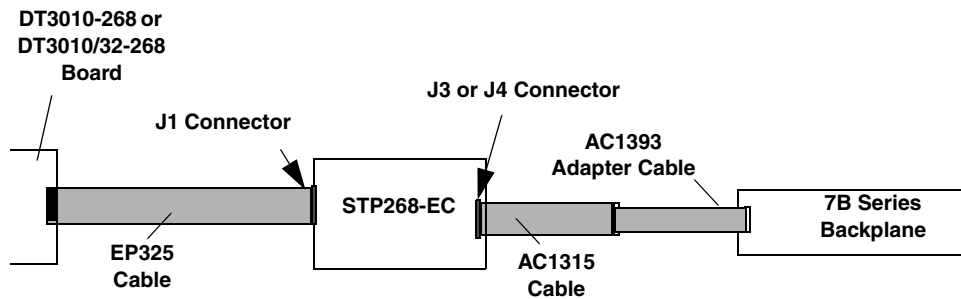


**Figure 10: Connecting the 7B Series Backplane to the STP268-EC Screw Terminal Panel**

1. Plug one end of an AC1315 cable into the J3 or J4 connector of the STP268-EC screw terminal panel.
2. Plug the other end of the AC1315 cable into the 26-pin connector of the AC1393 adapter cable; then, attach the 25-pin connector of the AC1393 adapter cable to the 7B Series backplane.
3. Connect power supply HES14-21 to the V+A and COM screw terminals on the 7B Series backplane and to the wall outlet.

## Attaching a PB16H Opto-22 Backplane

To connect a PB16H Opto-22 backplane to an STP268-EC screw terminal panel, do the following:

1. Plug one end of an EP035 cable into the J2 connector of the STP268-EC screw terminal panel.
2. Plug the other end of the EP035 cable into the 50-pin connector on the PB16H Opto-22 backplane, as shown in [Figure 11](#).

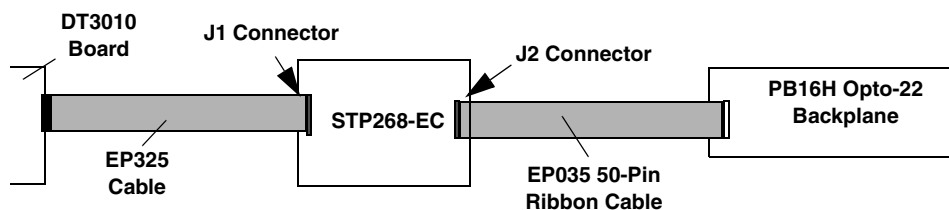

**Figure 11: Connecting the PB16H Opto-22 Backplane to the STP268-EC Screw Terminal Panel**

## Configuring a Screw Terminal Panel

This section describes how to locate and configure the jumpers and resistors on the DT740 or STP268 screw terminal panel for use with a DT3010 Series board.

### Configuring the DT740 Screw Terminal Panel

Figure 12 shows the layout of the DT740 screw terminal panel, and shows the location of the jumper and resistors.

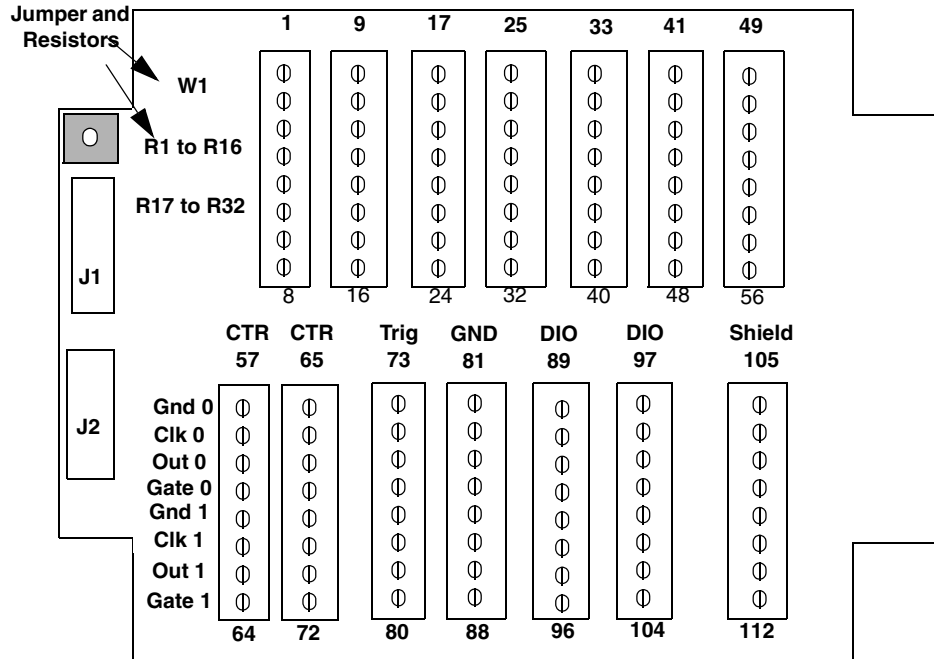


Figure 12: Layout of the DT740 Screw Terminal Panel

### Configuring Jumper W1 - Common Ground Sense

When shipped from the factory, jumper W1 connects the low side of the input amplifier (Amp Low) on the DT3010, DT3010/32, DT3010/32-268, or DT3016 board to analog ground.

When using pseudo-differential analog inputs, remove jumper W1 and connect Amp Low to a remote common-mode voltage to reject offset voltages common to all 32 input channels. Refer to [page 65](#) for an example of using jumper W1.

### **Configuring Resistors R1 to R16 - Bias Return**

Resistor locations R1 to R16 connect the low side of analog input channels to analog ground. These resistor locations are typically used when connecting differential inputs to analog input channels 0 to 15, where R1 corresponds to analog input channel 0, and R16 corresponds to analog input channel 15.

The high side of the corresponding analog input channels returns the source input impedance through the bias return resistors to the low side of the channels, and then to analog ground. Typical resistor values are 1 k $\Omega$  to 100 k $\Omega$  depending on the application. Refer to [page 66](#) for an example of using bias return resistors.


### **Configuring Resistors R17 to R32 - Current Shunt**

Resistor locations R17 to R32 are typically used to convert current to voltage on channels 0 to 15, where R17 corresponds to analog input channel 0, and R32 corresponds to analog input channel 15.

These resistor locations connect the high side to the low side of the corresponding channels, thereby acting as shunts. If, for example, you add a 250  $\Omega$  resistor to location R17, and connect a 4 to 20 mA current loop input to channel 0, the input range is converted to 1 to 5 V. Note that, depending on your application, you may need to use resistors R1 to R16 with resistors R17 to R32 for proper operation. Refer to [page 70](#) for an example of using current shunt resistors.

## **Configuring the STP268 Screw Terminal Panel**

[Figure 13](#) shows the layout of the STP268 screw terminal panel, including the location of jumper W1 and the resistors.

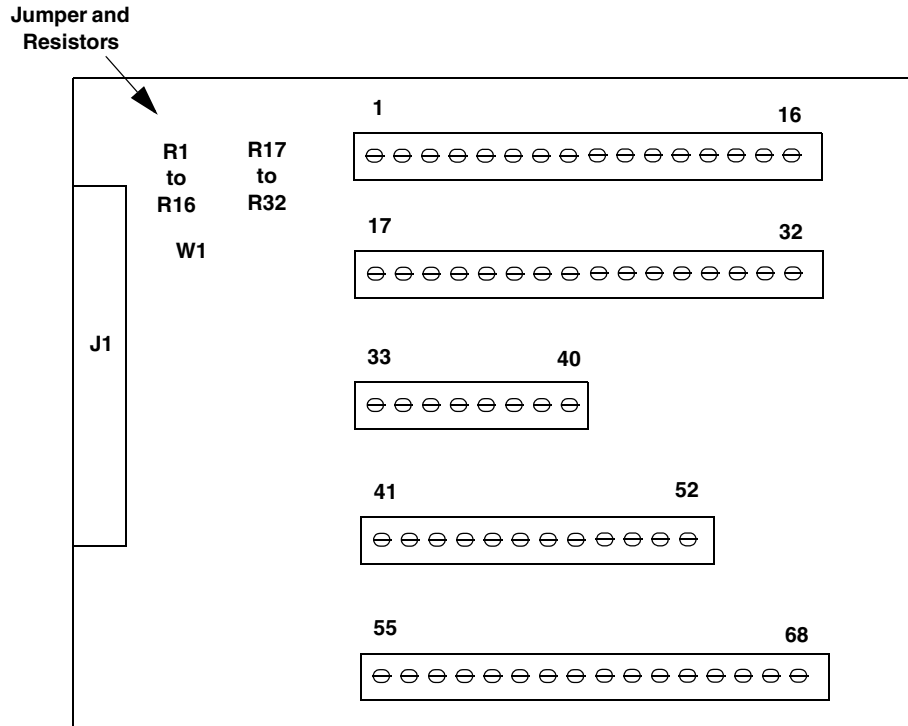

**Figure 13: Layout of the STP268 Screw Terminal Panel**

### ***Configuring Jumper W1 - Common Ground Sense***

When shipped from the factory, jumper W1 connects the low side of the input amplifier (Amp Low) on the DT3010-268 or DT3010/32-268 board to analog ground.

When using pseudo-differential analog inputs, remove jumper W1 and connect Amp Low to a remote common-mode voltage to reject offset voltages common to all 32 input channels. Refer to [page 65](#) for an example of using jumper W1.

### ***Configuring Resistors R1 to R16 - Bias Return***

Resistor locations R1 to R16 connect the low side of analog input channels to analog ground. These resistor locations are typically used when connecting differential inputs to analog input channels 0 to 15, where R1 corresponds to analog input channel 0, and R16 corresponds to analog input channel 15.

The high side of the corresponding analog input channels returns the source input impedance through the bias return resistors to the low side of the channels, and then to analog ground. Typical resistor values are 1 k $\Omega$  to 100 k $\Omega$  depending on the application. Refer to [page 66](#) for an example of using bias return resistors.

## Configuring Resistors R17 to R32 - Current Shunt

Resistor locations R17 to R32 are typically used to convert current to voltage on channels 0 to 15, where R17 corresponds to analog input channel 0, and R32 corresponds to analog input channel 15.

These resistor locations connect the high side to the low side of the corresponding channels, thereby acting as shunts. If, for example, you add a 250  $\Omega$  resistor to location R17, and connect a 4 to 20 mA current loop input to channel 0, the input range is converted to 1 to 5 V. Note that, depending on your application, you may need to use resistors R1 to R16 with resistors R17 to R32 for proper operation. Refer to [page 70](#) for an example of using current shunt resistors.

## Configuring the STP268-EC Screw Terminal Panel

This section describes how to configure an STP268-EC screw terminal panel for use with analog output modules on the 5B01 and 7BP16-1 signal conditioning backplanes.

---

**Note:** You cannot use analog output modules on the 5B08, 7BP04-1, or 7BP08-1 backplane.

---

By default, the 5B01 and 7BP16-1 backplanes map to single-ended analog input channels 0 to 15. However, you can use channels 14 and 15 on the 5B01 or 7BP16-1 backplane as analog output channels 0 and 1.

You can determine how channels 14 and 15 are used on the 5B01 and 7BP16-1 backplanes using jumpers on the STP268-EC screw terminal panel.

To use channels 14 and 15 on the 5B01 or 7BP16 backplane as analog inputs, remove jumpers W1 through W4 on the STP268-EC screw terminal panel.

To use channel 14 on the 5B01 or 7BP16 backplane as analog output channel 0, install jumper W1 (DAC0 Ground) and W2 (DAC0) on the STP268-EC screw terminal panel.

To use channel 15 on the 5B01 or 7BP16 backplane as analog output channel 1, install jumpers W3 (DAC1) and W4 (DAC1 Ground) on the STP268-EC screw terminal panel.

Refer to [Figure 13 on page 46](#) for the location of jumpers W1 through W4.

For example, assume that you are using a 5B01 with the DT3010-268 and that you want to use analog output channels 0 and 1. In this case, ensure that you wire DAC0 signals to channel 14 and DAC1 signals to channel 15 on the 5B01 backplane. Then, install jumpers W1 through W4 on the STP268-EC screw terminal panel.








## ***Wiring Signals***

Preparing to Wire to a Screw Terminal Panel.....	51
Screw Terminal Assignments .....	53
Connecting Analog Input Signals .....	63
Connecting Analog Output Signals.....	72
Connecting Digital I/O Signals .....	74
Connecting Counter/Timer Signals .....	77

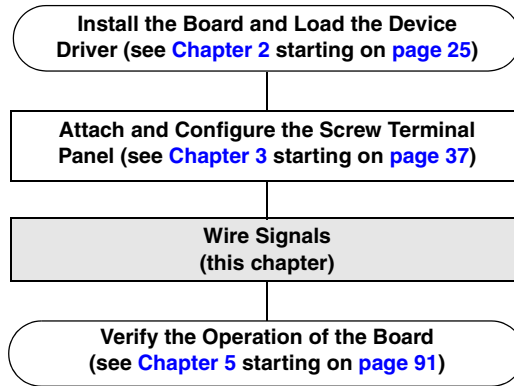

## Preparing to Wire to a Screw Terminal Panel

This section describes wiring recommendations when connecting signals to a DT3010 board and screw terminal panel.

### Wiring Recommendations

- Follow standard ESD procedures when wiring signals to the board.
- Use individually shielded twisted-pair wire (size 14 to 26 AWG) when using a DT3010 Series board in highly noisy electrical environments.
- Separate power and signal lines by using physically different wiring paths or conduits.
- To avoid noise, do not locate the screw terminal panel and cabling next to sources that produce high electro-magnetic fields, such as large electric motors, power lines, solenoids, and electric arcs, unless the signals are enclosed in a mumetal shield.
- On the DT740 screw terminal panel, we recommend that you connect the shields as follows:
  - Connect the analog shield to screw terminals TB35 and TB36, and to TB51 through TB56.
  - Connect the digital shield to screw terminals TB105 and TB108.
  - Connect the analog and digital shields to one end only.
- When first installing the board, we recommend that you do the following:
  - Wire a function generator or a known voltage source to analog input channel 0 (use the differential configuration).
  - Wire an oscilloscope or voltage meter to analog output channel 0.
  - Wire a digital input to digital I/O Port A.
  - Wire a external clock or scope to counter/timer channel 0.
  - If you have not done so already, install the DT3010 Series software.
  - Run the Quick DataAcq application (described in [Chapter 5](#) starting on [page 91](#)) to verify that the board is operating properly.
  - Once you have determined that the board is operating properly, wire the signals according to your application's requirements.

### Using 5B or 7B Series Signal Conditioning Modules

When using a DT3010-268 or DT3010/32-268 with an STP268-EC screw terminal panel and a 5B or 7B Series signal conditioning backplane and modules, keep the following considerations in mind:

- The 7BP04-1 backplane maps to single-ended analog input channels 0 to 3.
- The 5B08 and 7BP08-1 backplanes map to single-ended analog input channels 0 to 7.

- By default, the 5B01 and 7BP16-1 backplanes map to single-ended analog input channels 0 to 15. However, you can use channels 14 and 15 on the 5B01 or 7BP16-1 backplane as analog output channels 0 and 1 by configuring jumpers on the STP268-EC. Refer to [Chapter 3](#) starting on [page 37](#) for more information on configuring these jumpers.
- Install jumper W3 on the 5B Series backplane to connect Amp Low to Analog Ground on the backplane.
- 5B and 7B Series thermocouple modules provide their own CJC and return a voltage that already compensates for CJC. Therefore, when using 5B or 7B Series modules, you do not have to compensate for offsets.
- The output of many 5B modules is  $\pm 5$  V. The output of many 7B modules is 0 to 10 V. Ensure that you select an input range that matches the output of the 5B or 7B modules that you are using. For example, if you are using 5B modules that have an output of  $\pm 5$  V, use a bipolar input range and a gain of 2 on the DT9800-EC Series function module.
- Connect all unused inputs to analog common. Reading an open channel can cause settling problems on the next valid channel.

Refer to the data sheets and user's manuals for the 5B and 7B Series for detailed information on using the backplanes and modules, including how to configure jumpers on the backplane, install modules, wire signals to the modules, and connect power to the backplanes.

---

## Screw Terminal Assignments

This section describes the screw terminal assignments for the DT740, STP268, and STP268-EC screw terminal panels.

### DT740 Screw Terminal Assignments

Screw terminals TB1 to TB56 on the DT740 screw terminal panel correspond to the analog I/O channels from the DT3010, DT3010/32, and DT3016 boards. Screw terminals TB57 to TB112 on the DT740 screw terminal panel correspond to the digital I/O signals from the DT3010, DT3010/32, and DT3016 boards.

Screw terminals TB37 (+15 V) and TB39 (-15 V) on the DT740 screw terminal panel are available for low-current signal conditioning applications. The supply on the DT3010, DT3010/32, and DT3016 boards is current-limited through a 10  $\Omega$  resistor and is specified for a maximum load current of  $\pm 3$  mA.

Screw terminal TB49 (+5.0 V reference) on the DT740 screw terminal panel is also current-limited through a 10  $\Omega$  resistor and is provided for applications that require a reference less than 1 mA.

Screw terminal TB112 (+5 V output) on the DT740 screw terminal panel is current-limited through a series 10  $\Omega$  resistor and supports loads up to 100 mA. Note that you must take the drop (current [I] multiplied by resistance [R]) across the series 10  $\Omega$  resistor (1 V at 100 mA) into consideration.

To provide maximum signal integrity, screw terminals TB35, TB36, and TB51 to TB56 on the DT740 screw terminal panel have been reserved for external shield connections from the J1 connector. Screw terminals TB105 and TB108 on the DT740 screw terminal panel have been reserved for external shield connections from the J2 connector. In addition, multiple ground connections have been allocated for all the digital and clock signals for proper shielding and current capacity.

---

**Note:** If you are connecting a high-speed clock to the DT740, it is recommended that you connect the return to the adjacent ground screw terminal.

---

[Table 2](#) lists the screw terminal assignments for connector J1 on the DT740 screw terminal panel; [Table 3](#) lists the screw terminal assignments for connector J2 on the DT740 screw terminal panel.

**Table 2: Screw Terminal Assignments for Connector J1  
on the DT740 Screw Terminal Panel**

TB	J1 Pin	Signal Description	TB	J1 Pin	Signal Description
1	25	Analog Input 00	2	50	Analog Input 08/00 Return
3	24	Analog Input 01	4	49	Analog Input 09/01 Return
5	23	Analog Input 02	6	48	Analog Input 10/02 Return
7	22	Analog Input 03	8	47	Analog Input 11/03 Return
9	21	Analog Input 04	10	46	Analog Input 12/04 Return
11	20	Analog Input 05	12	45	Analog Input 13/05 Return
13	19	Analog Input 06	14	44	Analog Input 14/06 Return
15	18	Analog Input 07	16	43	Analog Input 15/07 Return
17	17	Analog Input 16/08	18	42	Analog Input 24/08 Return
19	16	Analog Input 17/09	20	41	Analog Input 25/09 Return
21	15	Analog Input 18/10	22	40	Analog Input 26/10 Return
23	14	Analog Input 19/11	24	39	Analog Input 27/11 Return
25	13	Analog Input 20/12	26	38	Analog Input 28/12 Return
27	12	Analog Input 21/13	28	37	Analog Input 29/13 Return
29	11	Analog Input 22/14	30	36	Analog Input 30/14 Return
31	10	Analog Input 23/15	32	35	Analog Input 31/15 Return
33	9	Amp Low	34	34	Analog Ground
35	8	Analog Shield Ground	36	33	Analog Shield Ground
37	7	+15 V Output	38	32	Power Ground
39	6	-15 V Output	40	31	Reserved
41	5	Analog Output 0+	42	30	Analog Output 0 Return
43	4	Analog Output 1+	44	29	Analog Output 1 Return
45	3	Reserved	46	28	Reserved
47	2	Reserved	48	27	Reserved
49	1	+5 V Reference Out	50	26	Analog Ground
51	-	Analog Shield Ground	52	-	Analog Shield Ground
53	-	Analog Shield Ground	54	-	Analog Shield Ground
55	-	Analog Shield Ground	56	-	Analog Shield Ground

**Table 3: Screw Terminal Assignments for Connector J2  
on the DT740 Screw Terminal Panel**

TB	J2 Pin	Signal Description	TB	J2 Pin	Signal Description
57	51, 52	Digital Ground	58	17	User Clock Input 0
59	16	User Counter Output 0	60	50	External Gate 0
61	49	Digital Ground	62	15	User Clock Input 1
63	14	User Counter Output 1	64	48	External Gate 1
65	47	Digital Ground	66	13	User Clock Input 2
67	12	User Counter Output 2	68	46	External Gate 2
69	45	Digital Ground	70	11	User Clock Input 3
71	10	User Counter Output 3	72	44	External Gate 3
73	43	Digital Ground	74	9	External D/A Sample Clock In
75	8	External D/A TTL Trigger	76	7	External A/D Sample Clock In
77	6	External A/D TTL Trigger	78	5	A/D Trigger Out
79	4	A/D Sample Clock Out	80	3	Reserved
81	23, 28, 42	Digital Ground	82	39, 41, 57, 62	Digital Ground
83	18, 38, 40, 63, 64	Digital Ground	84	65	Reserved
85	31	Reserved	86	37	Reserved
87	30	Dynamic Digital Output 0	88	29	Dynamic Digital Output 1
89	27	Digital I/O Bank A 0	90	26	Digital I/O Bank A 1
91	25	Digital I/O Bank A 2	92	24	Digital I/O Bank A 3
93	61	Digital I/O Bank A 4	94	60	Digital I/O Bank A 5
95	59	Digital I/O Bank A 6	96	58	Digital I/O Bank A 7
97	22	Digital I/O Bank B 0	98	21	Digital I/O Bank B 1
99	20	Digital I/O Bank B 2	100	19	Digital I/O Bank B 3
101	56	Digital I/O Bank B 4	102	55	Digital I/O Bank B 5
103	54	Digital I/O Bank B 6	104	53	Digital I/O Bank B 7
105	33	Digital Shield Ground	106	68	Analog Ground
107	34	Analog Trigger	108	67	Digital Shield Ground
109	32	Reserved	110	66	Reserved
111	35, 36	Digital Ground	112	1, 2	+5 V Out

## STP268 Screw Terminal Assignments

Screw terminals on the STP268 screw terminal panel are available for low-current signal conditioning applications. The supply on the DT3010-268 and DT3010/32-268 boards is current-limited through a 10  $\Omega$  resistor and is specified for a maximum load current of  $\pm 3$  mA.

The +5.0 V reference on the STP268 screw terminal panel is also current-limited through a 10  $\Omega$  resistor and is provided for applications that require a reference less than 1 mA.

The +5 V output signal on the STP268 screw terminal panel is current-limited through a series 10  $\Omega$  resistor and supports loads up to 100 mA. Note that you must take the drop (current [I] multiplied by resistance [R]) across the series 10  $\Omega$  resistor (1 V at 100 mA) into consideration.

---

**Note:** If you are connecting a high-speed clock to the STP268, we recommend that you connect the return to the adjacent ground screw terminal.

---

[Table 4](#) lists the screw terminal assignments on the STP268 screw terminal panel for connector J1 of the DT3010-268 and DT3010/32-268 boards; [Table 5](#) lists the screw terminal assignments on the STP268 screw terminal panel for connector J2 of the DT3010-268 and DT3010/32-268 boards.

**Table 4: Screw Terminal Assignments for Connector J1 on the STP268**

TB	J1 Pin	Signal Description	TB	J1 Pin	Signal Description
1	34	Analog Input 00	2	68	Analog Input 08/ Analog Input 00 Return
3	33	Analog Input 01	4	67	Analog Input 09/ Analog Input 01 Return
5	32	Analog Input 02	6	66	Analog In 10/ Analog Input 02 Return
7	31	Analog Input 03	8	65	Analog In 11/ Analog Input 03 Return
9	30	Analog Input 04	10	64	Analog In 12/ Analog Input 04 Return
11	29	Analog Input 05	12	63	Analog In 13/ Analog Input 05 Return
13	28	Analog Input 06	14	62	Analog In 14/ Analog Input 06 Return
15	27	Analog Input 07	16	61	Analog In 15/ Analog Input 07 Return
17	26	Analog Input 16	18	60	Analog In 24/ Analog Input 16 Return



Table 4: Screw Terminal Assignments for Connector J1 on the STP268 (cont.)

TB	J1 Pin	Signal Description	TB	J1 Pin	Signal Description
19	25	Analog In 17	20	59	Analog In 25/ Analog Input 17 Return
21	24	Analog In 18	22	58	Analog In 26/ Analog Input 18 Return
23	23	Analog In 19	24	57	Analog In 27/ Analog Input 19 Return
25	22	Analog In 20	26	56	Analog In 28/ Analog Input 20 Return
27	21	Analog In 21	28	55	Analog In 29/ Analog Input 21 Return
29	20	Analog In 22	30	54	Analog In 30/ Analog Input 22 Return
31	19	Analog In 23	32	53	Analog In 31/ Analog Input 23 Return
33	18	Amp Low	34	49	Analog Ground
35	11	+15 V Output	36	45	Power Ground
37	12	-15 V Output	38	46	A/D Trigger Output
39	15	Analog Trigger	40	52	Analog Ground
41	17	Analog Output 0+	42	51	Analog Output Ground
43	16	Analog Output 1+	44	50	+5 Volts_Ref Output
45	10	External D/A TTL Trigger	46	44	External D/A Clock Input
47	47	A/D Sample Clock Output	48	13	External A/D Sample Clock Input
49	14	External A/D TTL Trigger	50	48	External A/D Trigger and Clock Enable
51	35	Digital Ground	52	1	+5 V Output
53	39	Digital Ground	54	5	User Clock Input 0
55	3	User Counter Output 0	56	37	External Gate 0
57	4	Digital Ground	58	38	User Clock Input 1
59	2	User Counter Output 1	60	36	External Gate 1
61	9	Digital I/O Bank A0	62	8	Digital I/O Bank A1
63	7	Digital I/O Bank A2	64	6	Digital I/O Bank A3
65	43	Digital I/O Bank A4	66	42	Digital I/O Bank A5
67	41	Digital I/O Bank A6	68	40	Digital I/O Bank A7

**Table 5: Screw Terminal Assignments for Connector J2 on the STP268**

TB	J2 Pin	Signal Description	TB	J2 Pin	Signal Description
1	–	Reserved	2	–	Reserved
3	–	Reserved	4	–	Reserved
5	–	Reserved	6	–	Reserved
7	–	Reserved	8	–	Reserved
9	–	Reserved	10	–	Reserved
11	–	Reserved	12	–	Reserved
13	–	Reserved	14	–	Reserved
15	–	Reserved	16	–	Reserved
17	–	Reserved	18	–	Reserved
19	–	Reserved	20	–	Reserved
21	–	Reserved	22	–	Reserved
23	–	Reserved	24	–	Reserved
25	–	Reserved	26	–	Reserved
27	–	Reserved	28	–	Reserved
29	–	Reserved	30	–	Reserved
31	–	Reserved	32	–	Reserved
33	–	Reserved	34	–	Reserved
35	–	Reserved	36	–	Reserved
37	–	Reserved	38	–	Reserved
39	–	Reserved	40	–	Reserved
41	–	Reserved	42	–	Reserved
43	–	Reserved	44	–	Reserved
45	–	Reserved	46	–	Reserved
47	–	Reserved	48	13	Dynamic Digital Output 0
49	14	Dynamic Digital Output 1	50	4, 35, 39	Digital Ground
51	4, 35, 39	Digital Ground	52	1	+5 V Output
53	4, 35, 39	Digital Ground	54	5	User Clock Input 2
55	3	User Counter Output 2	56	37	External Gate 2

**Table 5: Screw Terminal Assignments for Connector J2 on the STP268 (cont.)**

TB	J2 Pin	Signal Description	TB	J2 Pin	Signal Description
57	4, 35, 39	Digital Ground	58	38	User Clock Input 3
59	2	User Counter Output 3	60	36	External Gate 3
61	9	Digital I/O Bank B0	62	8	Digital I/O Bank B1
63	7	Digital I/O Bank B2	64	6	Digital I/O Bank B3
65	43	Digital I/O Bank B4	66	42	Digital I/O Bank B5
67	41	Digital I/O Bank B6	68	40	Digital I/O Bank B7

## STP268-EC Screw Terminal Assignments

The STP268-EC screw terminal provides connector J1 for attaching to the DT3010-268 or DT3010/32-268 board, connector J2 for attaching to an Opto-22 backplane, and connectors J3 and J4 for attaching to 5B and/or 7B backplanes.

[Table 6](#) lists the screw terminal assignments for connector J1 on the STP268-EC screw terminal panel.

**Table 6: Screw Terminal Assignments for Connector J1 on the STP268-EC**

TB	J1 Pin	Signal Description	TB	J1 Pin	Signal Description
1	1	+5 V Output	2	2	User Counter Output 1
3	3	User Counter Output 0	4	4	Digital Ground
5	5	User Clock Input 0	6	6	Digital I/O Bank A3
7	7	Digital I/O Bank A2	8	8	Digital I/O Bank A1
9	9	Digital I/O Bank A0	10	10	External D/A TTL Trigger
11	11	+15 V Output	12	12	-15 V Output
13	13	External A/D Sample Input	14	14	External A/D TTL Trigger
15	15	Analog Trigger	16	16	Analog Output 1+
17	17	Analog Output 0+	18	18	Amp Low
19	19	Analog Input 23	20	20	Analog Input 22
21	21	Analog Input 21	22	22	Analog Input 20
23	23	Analog Input 19	24	24	Analog Input 18
25	25	Analog Input 17	26	26	Analog Input 16
27	27	Analog Input 07	28	28	Analog Input 06
29	29	Analog Input 05	30	30	Analog Input 04

**Table 6: Screw Terminal Assignments for Connector J1 on the STP268-EC (cont.)**

TB	J1 Pin	Signal Description	TB	J1 Pin	Signal Description
31	31	Analog Input 03	32	32	Analog Input 02
33	33	Analog Input 01	34	34	Analog Input 00
35	35	Digital Ground	36	36	External Gate 1
37	37	External Gate 0	38	38	User Clock Input 1
39	39	Digital Ground	40	40	Digital I/O Bank A7
41	41	Digital I/O Bank A6	42	42	Digital I/O Bank A5
43	43	Digital I/O Bank A4	44	44	External D/A Clock Input
45	45	Power Ground	46	46	A/D Trigger Output
47	47	A/D Sample Clock Output	48	48	External A/D Trigger and Clock Enable
49	49	Analog Ground	50	50	+5 V Ref_Out
51	51	Analog Output Ground	52	52	Analog Ground
53	53	Analog Input 31/ Analog Input 23 Return	54	54	Analog Input 30/ Analog Input 22 Return
55	55	Analog Input 29/ Analog Input 21 Return	56	56	Analog Input 28/ Analog Input 20 Return
57	57	Analog Input 27/ Analog Input 19 Return	58	58	Analog Input 26/ Analog Input 18 Return
59	59	Analog Input 25/ Analog Input 17 Return	60	60	Analog Input 24/ Analog Input 16 Return
61	61	Analog Input 15/ Analog Input 07 Return	62	62	Analog Input 14/ Analog Input 06 Return
63	63	Analog Input 13/ Analog Input 05 Return	64	64	Analog Input 12/ Analog Input 04 Return
65	65	Analog Input 11/ Analog Input 03 Return	66	66	Analog Input 10/ Analog Input 02 Return
67	67	Analog Input 09/ Analog Input 01 Return	68	68	Analog Input 08/ Analog Input 00 Return

Table 7 lists the screw terminal assignments for connector J2 on the STP268-EC screw terminal panel.

**Table 7: Screw Terminal Assignments for Connector J2 on the STP268-EC**

TB	J2 Pin	Signal Description	TB	J2 Pin	Signal Description
6	41	Digital I/O 3	7	43	Digital I/O 2
8	45	Digital I/O 1	9	47	Digital I/O 0
40	33	Digital I/O 7	41	35	Digital I/O 6
42	37	Digital I/O 5	43	39	Digital I/O 4

Table 8 lists the screw terminal assignments for connector J3 on the STP268-EC screw terminal panel.

**Table 8: Screw Terminal Assignments for Connector J3 on the STP268-EC**

TB	J3 Pin	Signal Description	TB	J3 Pin	Signal Description
16	22	DAC1_OUT <sup>a</sup>	17	20	DAC0_OUT <sup>b</sup>
18	25	Amp Low	–	26	Not Connected
27	23	Analog Input 07	28	19	Analog Input 06
29	17	Analog Input 05	30	13	Analog Input 04
31	11	Analog Input 03	32	7	Analog Input 02
33	5	Analog Input 01	34	1	Analog Input 00
51	21, 24	Analog Ground <sup>c</sup>	52	3, 6, 9, 12, 15, 18, 21, 24	Analog Ground
61	22	Analog Input 15 <sup>d</sup> Analog Input 07 Return	62	20	Analog Input 14 <sup>e</sup> / Analog Input 06 Return
63	16	Analog Input 13/ Analog Input 05 Return	64	14	Analog Input 12/ Analog Input 04 Return
65	10	Analog Input 11/ Analog Input 03 Return	66	8	Analog Input 10/ Analog Input 02 Return
67	4	Analog Input 09/ Analog Input 01 Return	68	2	Analog Input 08/ Analog Input 00 Return

- a. Jumper W3 must be installed on the STP268-EC. If this jumper is not installed, this signal is not available through this connector.
- b. Jumper W2 must be installed on the STP268-EC. If this jumper is not installed, this signal is not available through this connector.
- c. Jumper W1 must be installed on the STP268-EC for DAC0 Ground; jumper W4 must be installed on the STP268-EC for DAC1 Ground. If these jumpers are not installed, this signal is not available through this connector.
- d. If jumper W3 is installed on the STP268-EC, this signal is not available through this connector.
- e. If jumper W2 is installed on the STP268-EC, this signal is not available through this connector.

Table 9 lists the screw terminal assignments for connector J4 on the STP268-EC screw terminal panel.

**Table 9: Screw Terminal Assignments for Connector J4 on the STP268-EC**

TB	J4 Pin	Signal Description	TB	J4 Pin	Signal Description
19	23	Analog Input 23	20	19	Analog Input 22
21	17	Analog Input 21	22	13	Analog Input 20
23	11	Analog Input 19	24	7	Analog Input 18
25	5	Analog Input 17	26	1	Analog Input 16
52	3, 6, 9, 12, 15, 18, 21, 24	Analog Ground	53	22	Analog Input 31 Analog Input 23 Return
54	20	Analog Input 30 Analog Input 22 Return	55	16	Analog Input 29 Analog Input 21 Return
56	14	Analog Input 28 Analog Input 20 Return	57	10	Analog Input 27 Analog Input 19 Return
58	8	Analog Input 26 Analog Input 18 Return	59	4	Analog Input 25 Analog Input 17 Return
60	2	Analog Input 24 Analog Input 16 Return	–	25	Not Connected
–	26	Not Connected			

## Connecting Analog Input Signals

The DT740, STP268, and STP268-EC screw terminal panels support both voltage and current loop inputs. You can connect analog input voltage signals to the screw terminal panels in the following configurations:

- **Single-ended** – Choose this configuration when you want to measure high-level signals, noise is not significant, the source of the input is close to the screw terminal panel, and all the input signals are referred to the same common ground. When you choose the single-ended configuration, all 32 analog input channels are available.
- **Pseudo-Differential** – Choose this configuration when noise or common-mode voltage (the difference between the ground potentials of the signal source and the ground of the screw terminal panel or between the grounds of other signals) exists and the differential configuration is not suitable for your application. This option provides less noise rejection than the differential configuration; however, all 32 analog input channels are available.
- **Differential** – Choose this configuration when you want to measure low-level signals (less than 1 V), you are using an A/D converter with high resolution (greater than 12 bits), noise is a significant part of the signal, or common-mode voltage exists. When you choose the differential configuration, 16 analog input channels are available.

---


**Note:** We recommend that you connect all unused analog input channels to analog ground.

---

This section describes how to connect single-ended, pseudo-differential, and differential voltage inputs, as well as current loop inputs to the screw terminal panels.

### Connecting Single-Ended Voltage Inputs


Figure 14 shows how to connect single-ended voltage inputs to the DT740 or STP268 screw terminal panel.

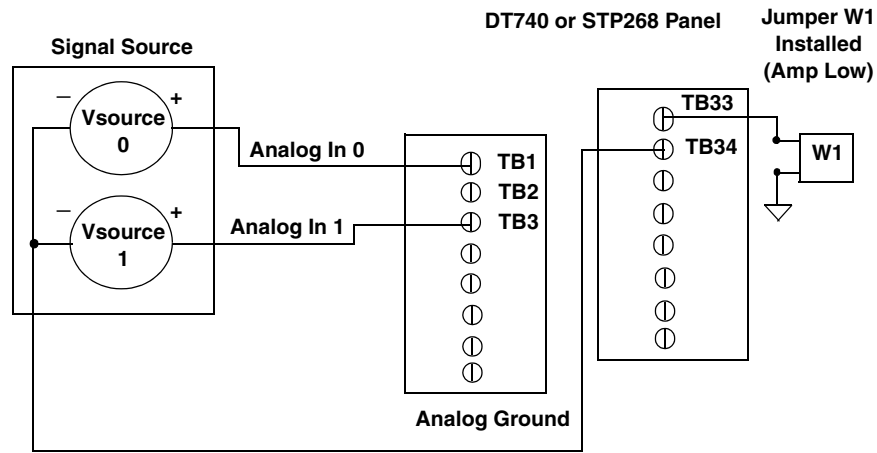

Note that the signals shown for the STP268 screw terminal panel correspond to connector J1.

**Figure 14: Connecting Single-Ended Voltage Inputs to the DT740 or STP268 (Shown for Channels 0 and 1)**

Figure 15 shows how to connect single-ended voltage inputs to the STP268-EC screw terminal panel.

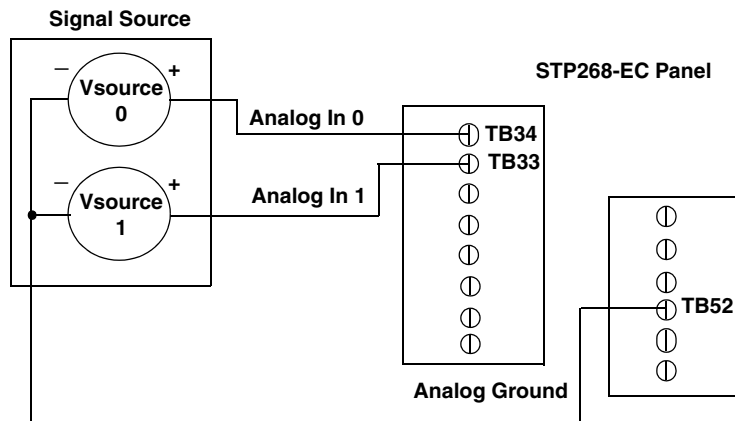


**Figure 15: Connecting Single-Ended Voltage Inputs to the STP268-EC (Shown for Channels 0 and 1)**



## Connecting Pseudo-Differential Voltage Inputs


Figure 16 shows how to connect pseudo-differential voltage inputs to the DT740 or STP268 screw terminal panel.

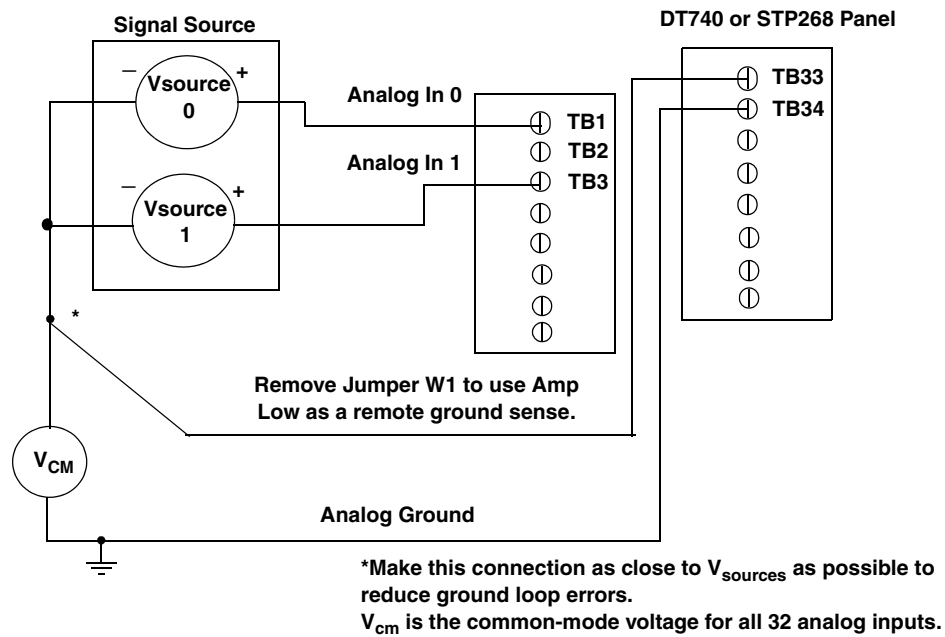

Note that the signals shown for the STP268 screw terminal panel correspond to connector J1.

**Figure 16: Connecting Pseudo-Differential Voltage Inputs to the DT740 or STP268 (Shown for Channels 0 and 1)**

Figure 17 shows how to connect pseudo-differential voltage inputs to the STP268-EC screw terminal panel.

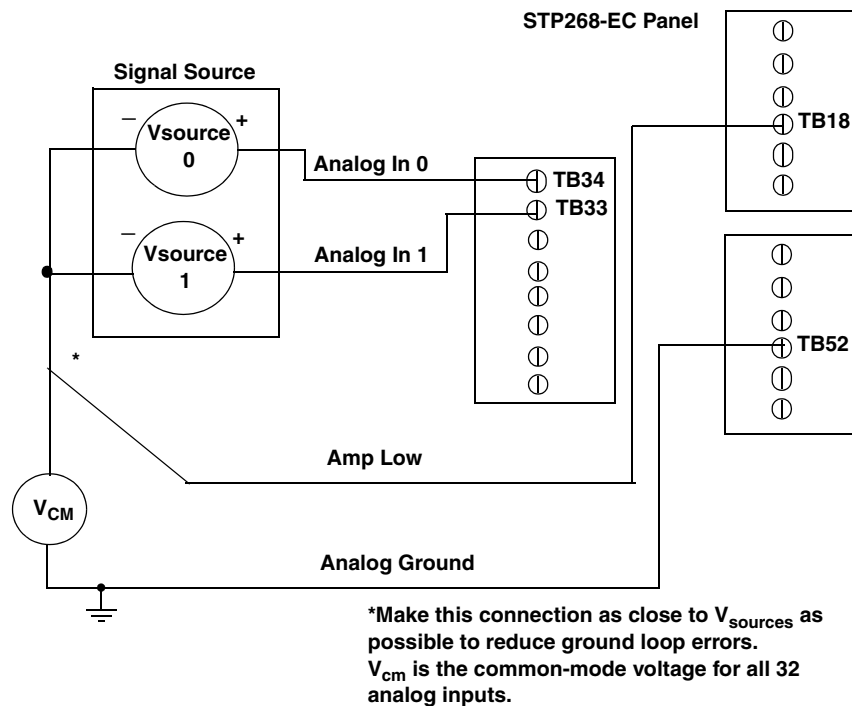

**Figure 17: Connecting Pseudo-Differential Voltage Inputs to the STP268-EC (Shown for Channels 0 and 1)**


## Connecting Differential Voltage Inputs

Figure 18A illustrates how to connect a floating signal source to the DT740 or STP268 screw terminal panel using differential inputs. (A floating signal source is a voltage source that has no connection with earth ground.) For floating signal sources, you need to provide a bias return path by adding resistors R1 to R16 for channels 0 to 15, respectively.

If the input signal is +10 V, then the common-mode voltage could be 1 V. Theoretically, the resistor value ( $R_b$ ) should be 1 V divided by the input bias current (20 nA) or 50 m $\Omega$ . However, when you add noise from external sources to the high impedance, a resistor value of 100  $\Omega$  to 100 k $\Omega$  is more practical.


In Figure 18B, the signal source itself provides the bias return path; therefore, you do not need to use bias return resistors.  $R_s$  is the signal source resistance while  $R_v$  is the resistance required to balance the bridge. Note that the negative side of the bridge supply must be returned to analog ground.

Figure 19 illustrates how to connect a floating signal source to the STP268-EC screw terminal panel.

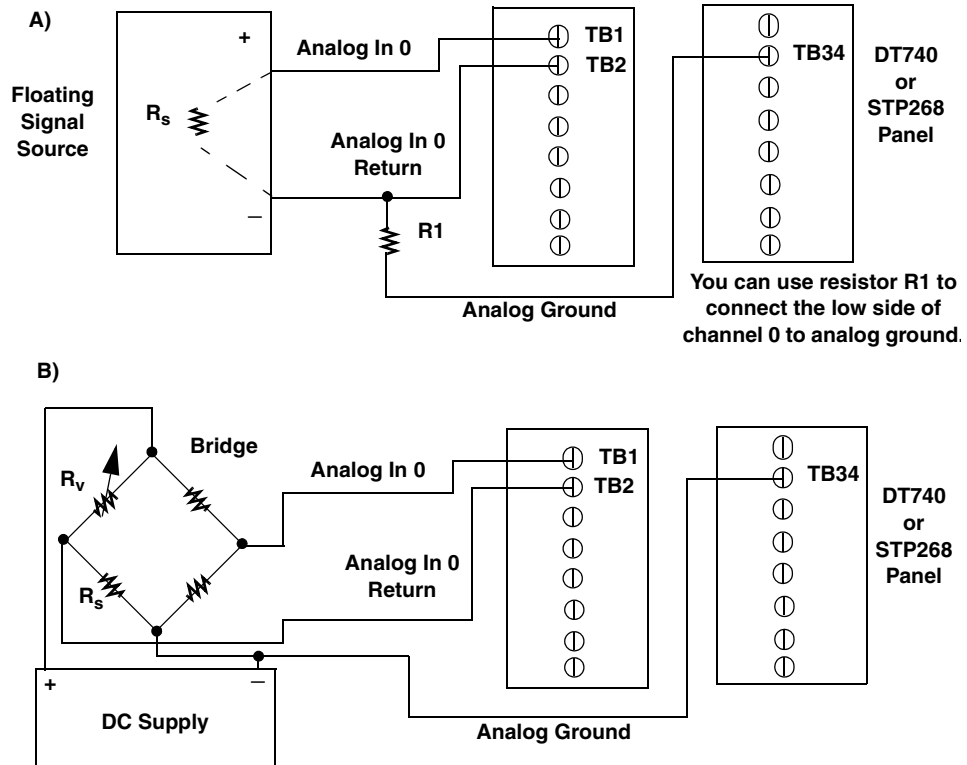

Note that the signals shown for the STP268 screw terminal panel correspond to connector J1.


Figure 18: Connecting Differential Voltage Inputs to the DT740 or STP268 (Shown for Channel 0)

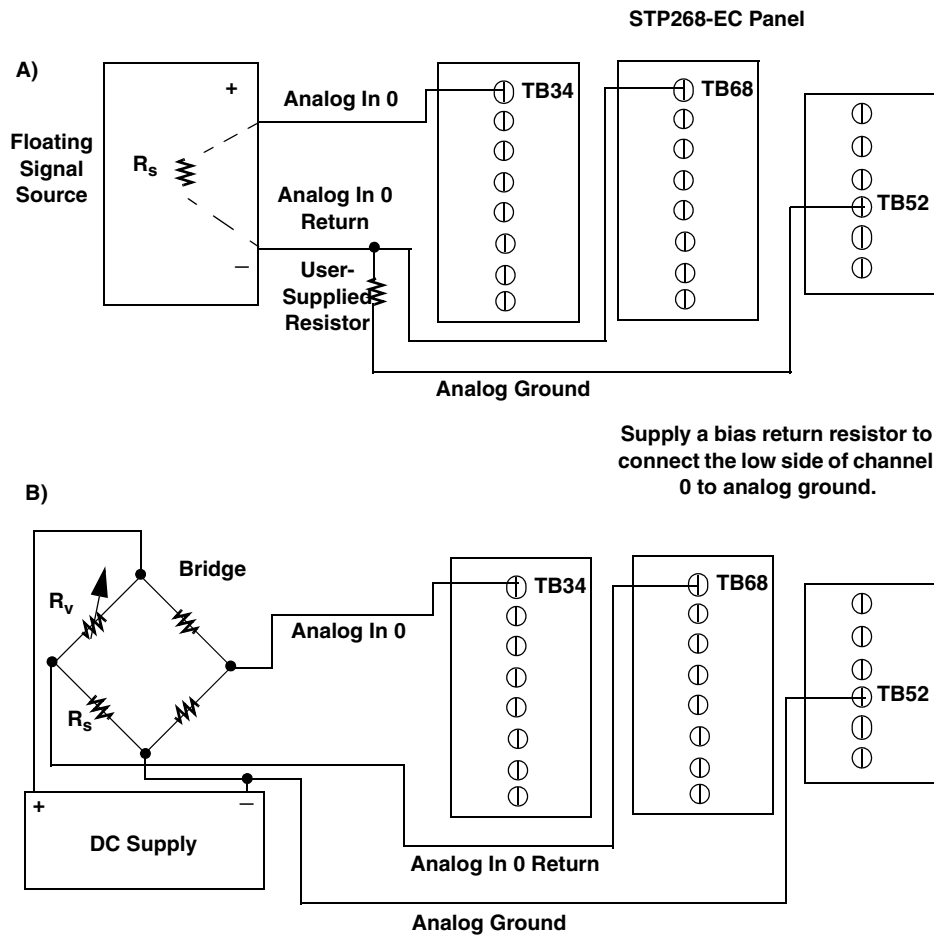

**Figure 19: Connecting Differential Voltage Inputs to the STP268-EC (Shown for Channel 0)**

Note that since they measure the difference between the signals at the high (+) and low (-) inputs, differential connections usually cancel any common-mode voltages, leaving only the signal. However, if you are using a grounded signal source and ground loop problems arise, connect the differential signals to the DT740 or STP268 screw terminal panel as shown in [Figure 20](#), or to the STP268-EC as shown in [Figure 21](#).


Make sure that the low side of the signal (-) is connected to ground at the signal source, not at the screw terminal panel, and do not tie the two grounds together.

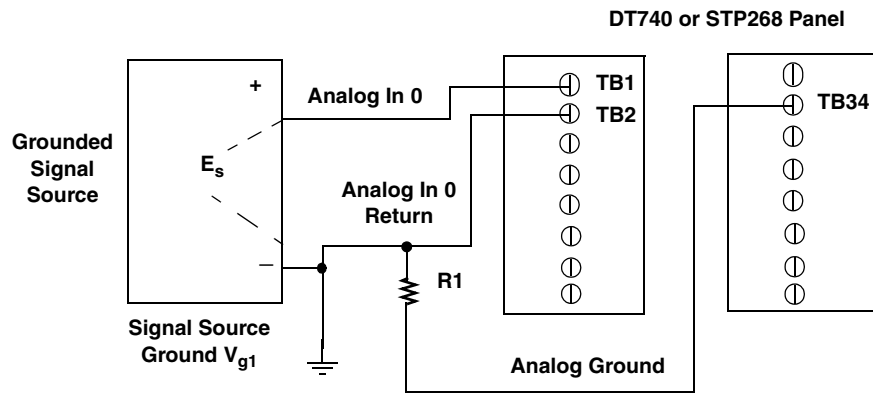

Resistor R1 should be installed for bias return in case the external ground is floating.

Note that the signals shown for the STP268 screw terminal panel correspond to connector J1.

**Figure 20: Connecting Differential Voltage Inputs from a Grounded Signal Source to the DT740 or STP268 (Shown for Channel 0)**

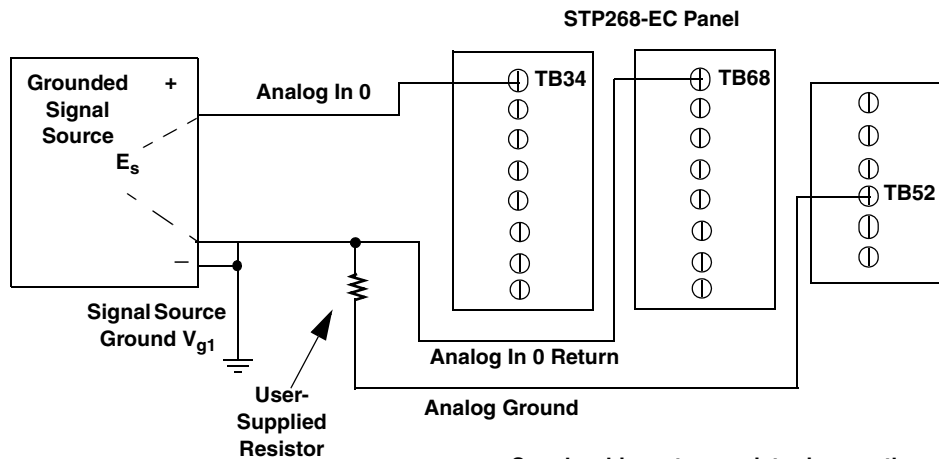


Supply a bias return resistor in case the external ground is floating.

**Figure 21: Connecting Differential Voltage Inputs from a Grounded Signal Source to the STP268-EC (Shown for Channel 0)**


## Connecting Current Loop Inputs

Figure 22 shows how to connect a current loop input to the DT740 screw terminal panel, Figure 23 shows how to connect a current loop input to the STP268 screw terminal panel, and Figure 24 shows how to connect a current loop input to the STP268-EC screw terminal panel.

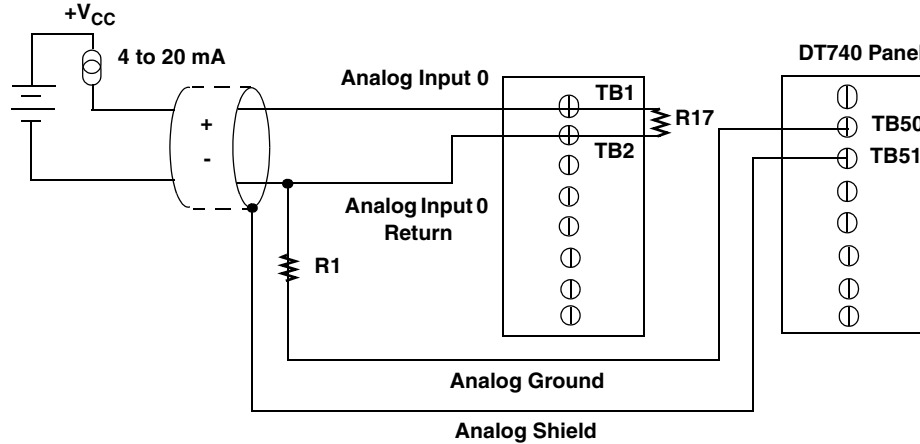

Use current shunt resistor R17 to convert current to voltage;  $250\ \Omega$  for 4 to 20 mA = 1 to 5 V. The common side of the external loop supply must either connect to analog ground or, if needed, to a bias return resistor (R1 in this case).


Figure 22: Connecting Current Inputs to the DT740 (Shown for Channel 0)

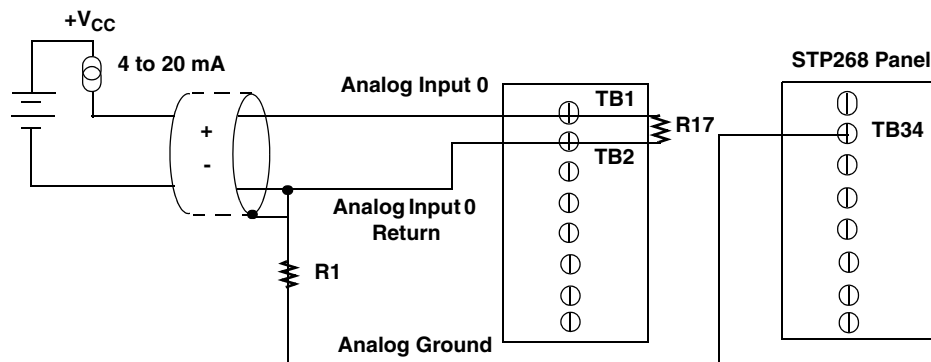

Use current shunt resistor R17 to convert current to voltage;  $250\ \Omega$  for 4 to 20 mA = 1 to 5 V. The common side of the external loop supply must either connect to analog ground or, if needed, to a bias return resistor (R1 in this case).

Note that the signals shown for the STP268 screw terminal panel correspond to connector J1.

Figure 23: Connecting Current Inputs to the STP268 (Shown for Channel 0)

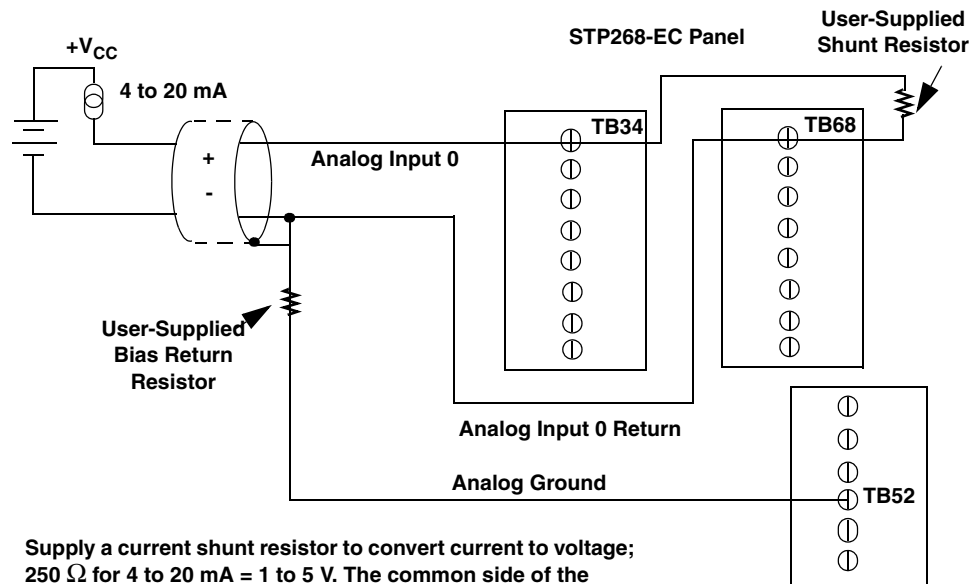

Supply a current shunt resistor to convert current to voltage;  $250\ \Omega$  for 4 to 20 mA = 1 to 5 V. The common side of the external loop supply must either connect to analog ground or, if needed, to a bias return resistor.

Figure 24: Connecting Current Inputs to the STP268-EC (Shown for Channel 0)

## Connecting Analog Output Signals

Figure 25 shows how to connect analog output voltage signals to the DT740 screw terminal panel, Figure 26 shows how to connect analog output voltage signals to the STP268 screw terminal panel, and Figure 27 shows how to connect analog output voltage signals to the STP268-EC screw terminal panel.


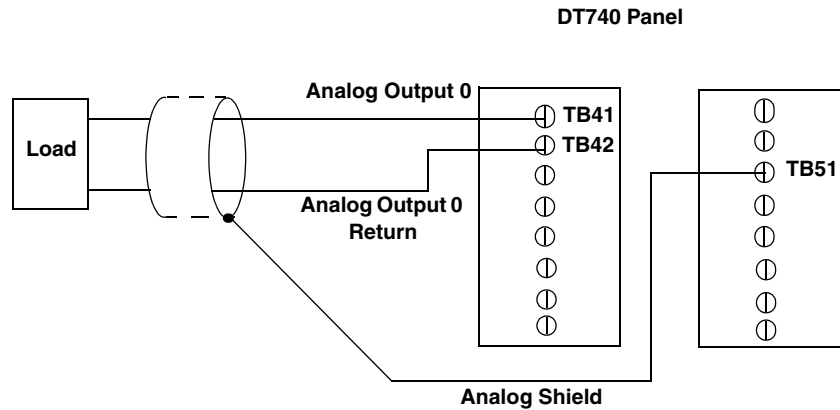


Figure 25: Connecting Analog Output Voltages to the DT740 (Shown for Channel 0)

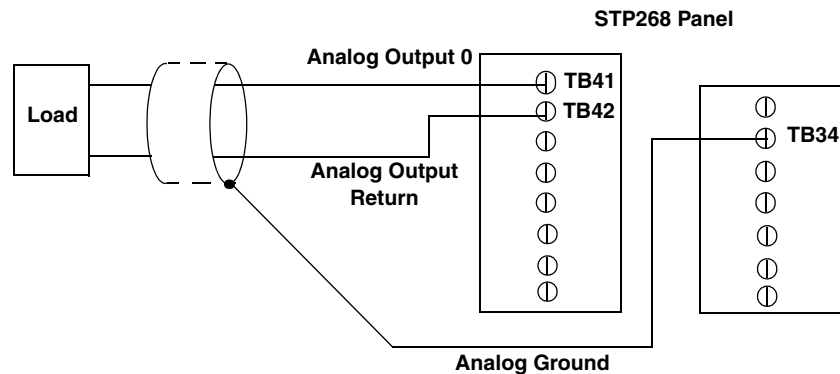

Note that the signals shown for the STP268 screw terminal panel correspond to connector J1.

Figure 26: Connecting Analog Output Voltages to the STP268 (Shown for Channel 0)



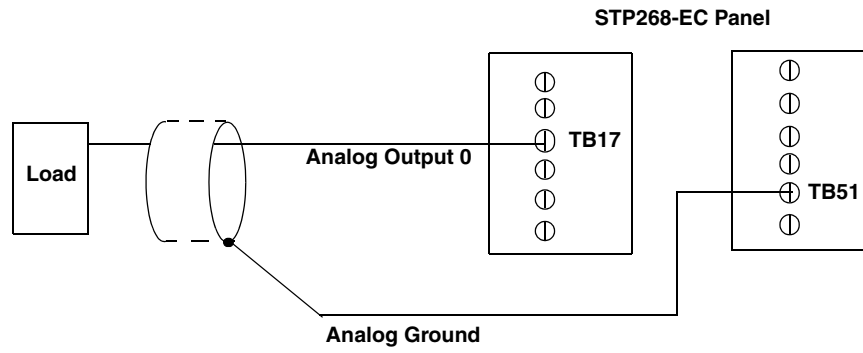


Figure 27: Connecting Analog Output Voltages to the STP268-EC (Shown for Channel 0)

## Connecting Digital I/O Signals

Figure 28 shows how to connect digital input signals to the DT740 screw terminal panel, Figure 29 shows how to connect digital input signals to the STP268 screw terminal panel, and Figure 30 shows how to connect digital input signals to the STP268-EC screw terminal panel.

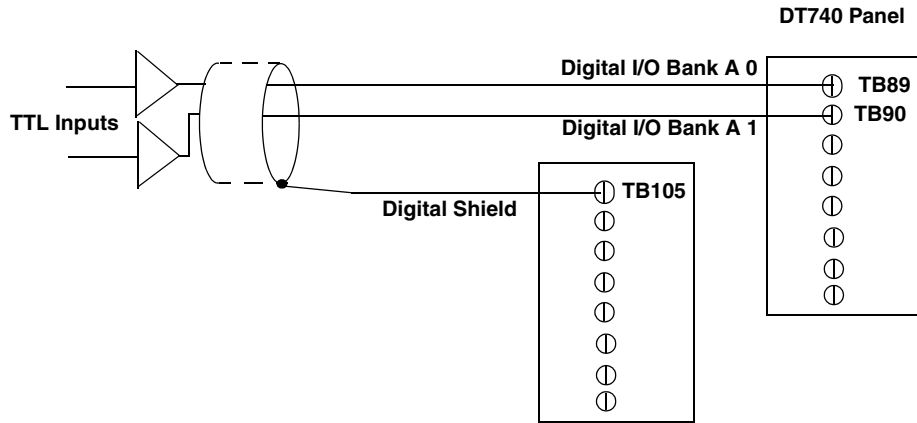


Figure 28: Connecting Digital Inputs to the DT740 (Shown for Lines 0 and 1, Bank A)

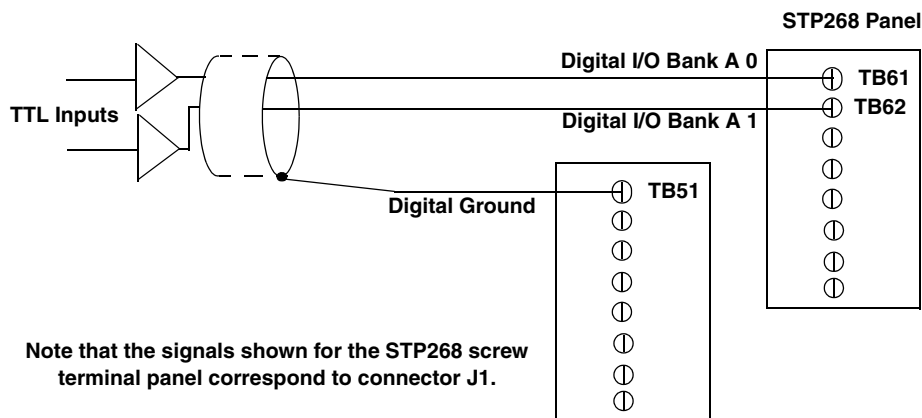


Figure 29: Connecting Digital Inputs to the STP268 (Shown for Lines 0 and 1, Bank A)

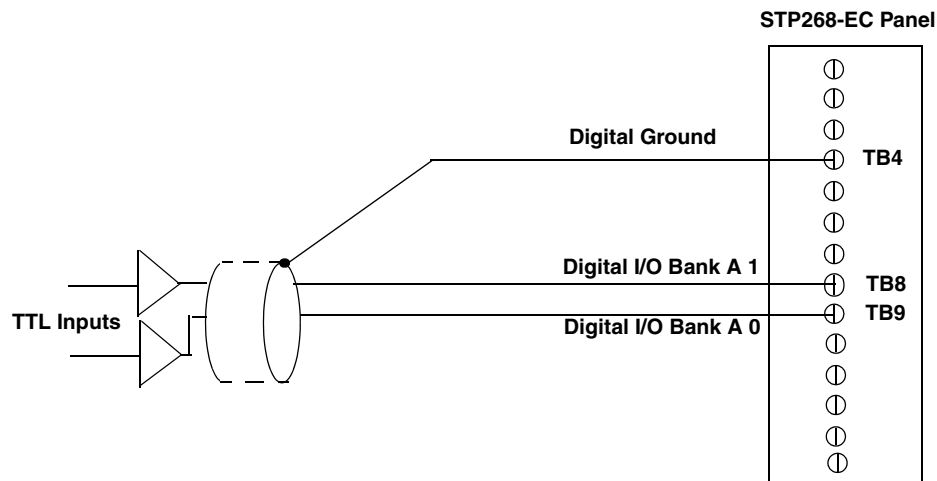


Figure 30: Connecting Digital Inputs to the STP268-EC (Shown for Lines 0 and 1, Bank A)

Figure 31 shows how to connect a digital output signal to the DT740 screw terminal panel, Figure 32 shows how to connect a digital output signal to the STP268 screw terminal panel, and Figure 33 shows how to connect a digital output signal to the STP268-EC screw terminal panel.

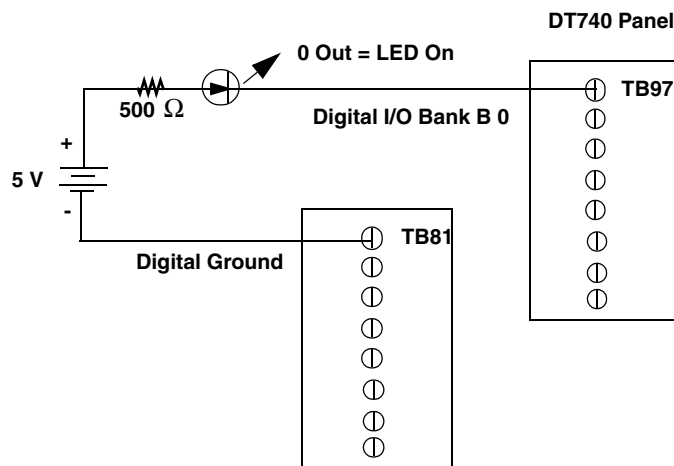


Figure 31: Connecting Digital Outputs to the DT740 (Shown for Line 0, Bank B)

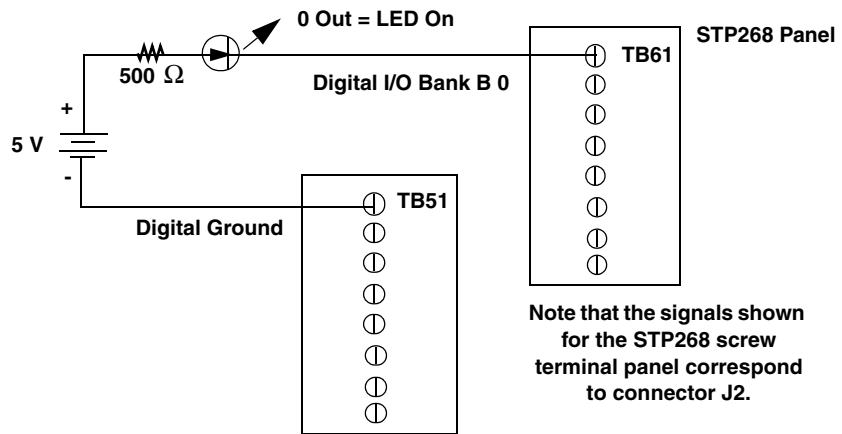


Figure 32: Connecting Digital Outputs to the STP268 (Shown for Line 0, Bank B)

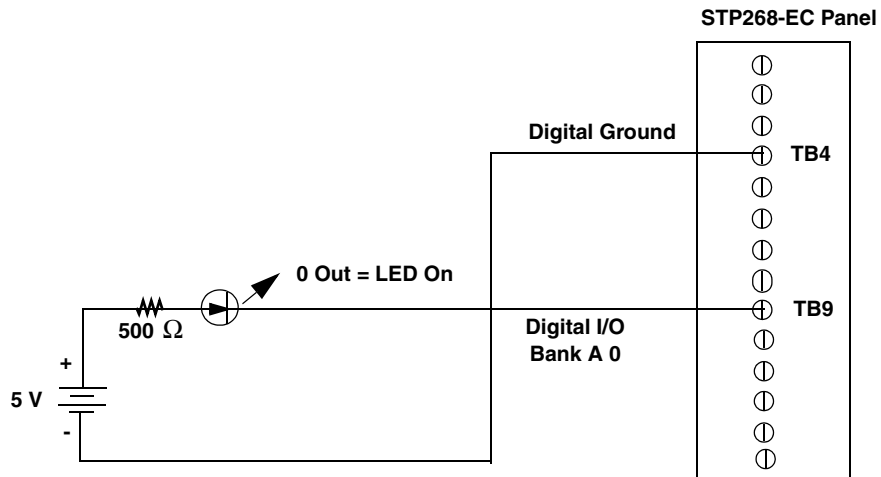


Figure 33: Connecting Digital Outputs to the STP268-EC (Shown for Line 0, Bank A)

## Connecting Counter/Timer Signals


The DT3010 Series boards with the DT740, STP268, or STP268-EC screw terminal panel provide counter/timers that you can use for the following operations:

- Event counting
- Frequency measurement
- Pulse output (rate generation, one-shot, and repetitive one-shot)


This section describes how to connect counter/timer signals to perform these operations. Refer to [Chapter 6](#) starting on [page 103](#) for more information on using the counter/timers.

### Connecting Event Counting Signals


[Figure 34](#), [Figure 35](#), and [Figure 36](#) show examples of connecting event counting signals to the DT740 screw terminal panel.

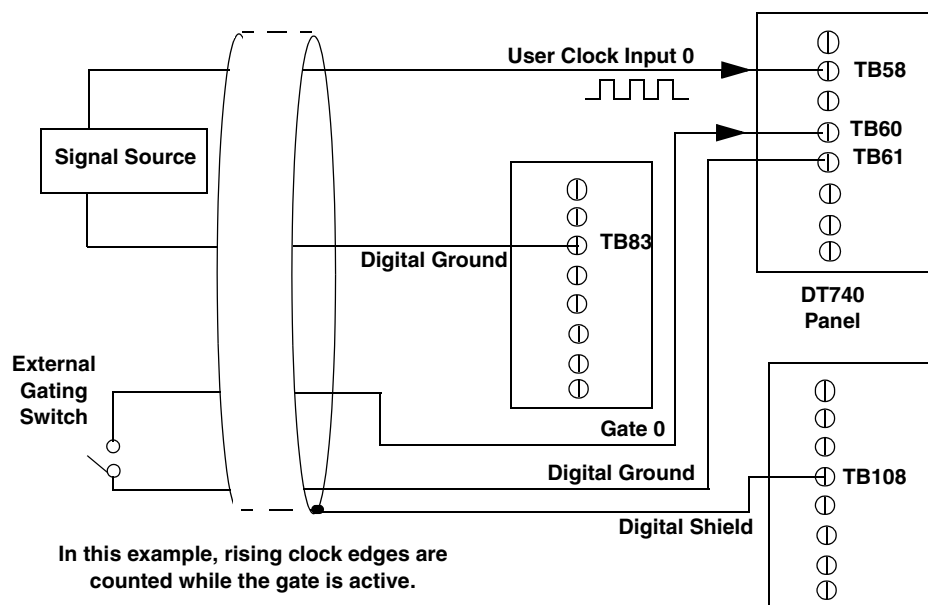

**Figure 34: Connecting Event Counting Applications to the DT740 (Shown for Clock Input 0 and an External Gate 0)**

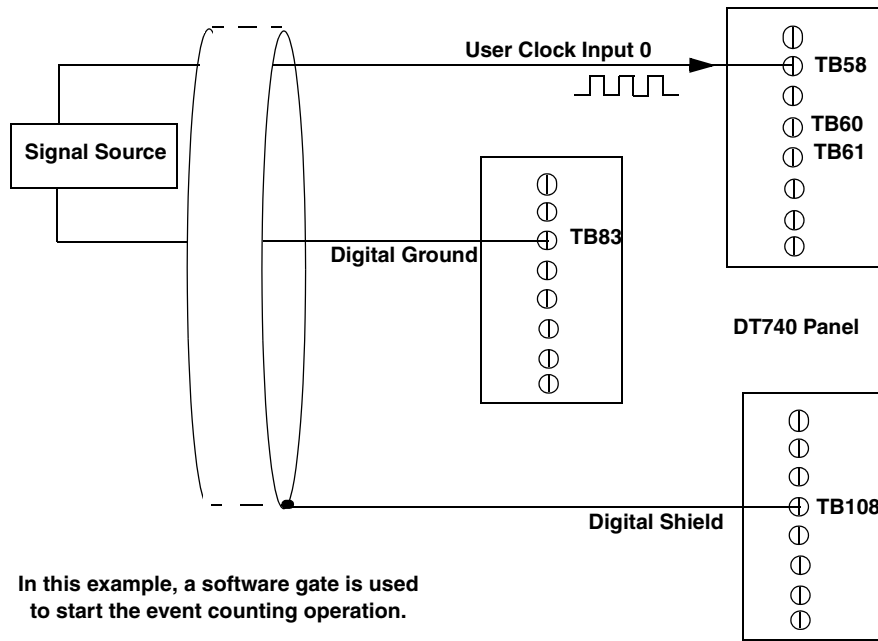


**Figure 35: Connecting Event Counting Applications to the DT740  
(Shown for Clock Input 0 without an External Gate)**

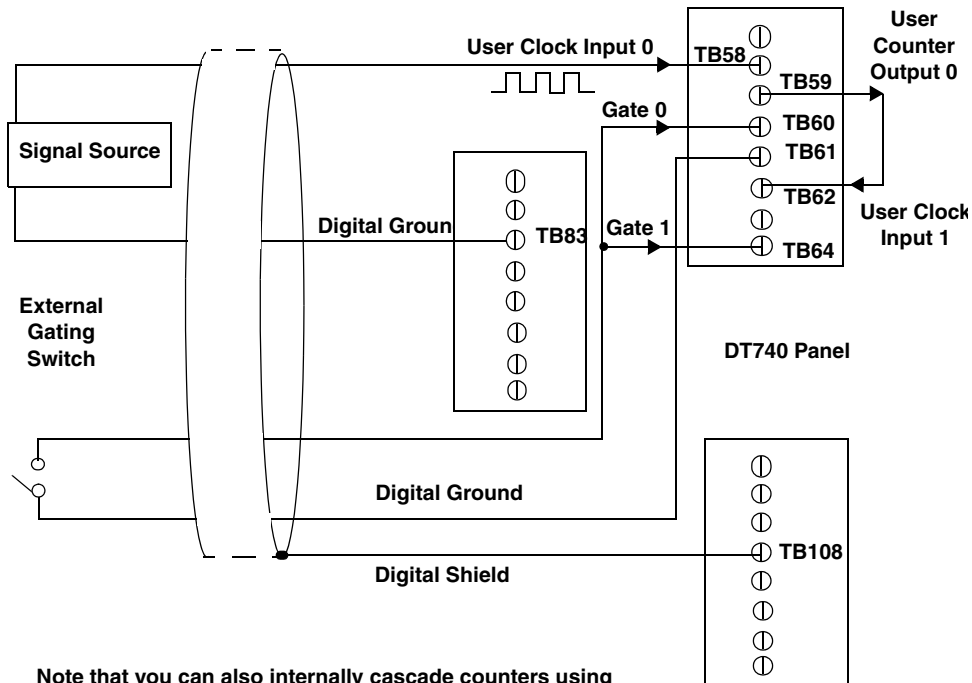


Note that you can also internally cascade counters using software; if you internally cascade the counters, you do not have to make the external cascading connections. Note also that this example shows the use of an external gate; however, this connection is not required.

**Figure 36: Cascading Counters on a DT740 Screw Terminal Panel (Shown for Event Counting Using Counters 0 and 1 and External Gate 0)**

Figure 37, Figure 38, and Figure 39 show examples of connecting event counting signals to the STP268 screw terminal panel.

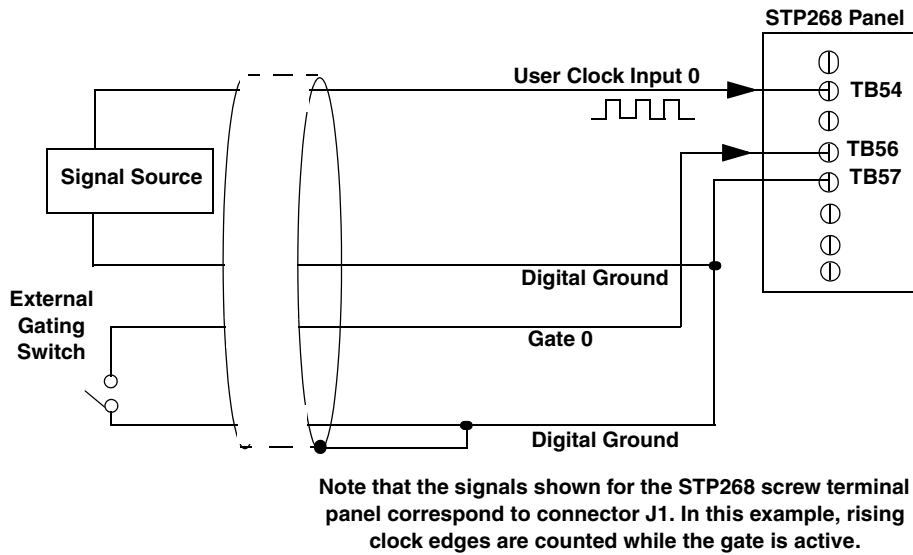


**Figure 37: Connecting Event Counting Applications to the STP268 (Shown for Clock Input 0 and External Gate 0)**

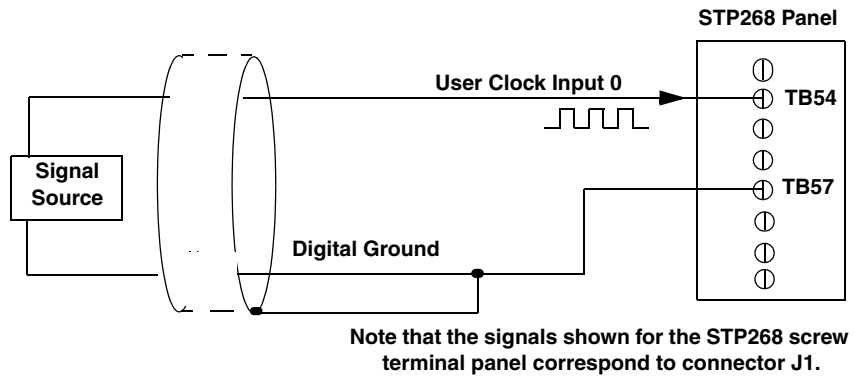

**Figure 38: Connecting Event Counting Applications to the STP268 (Shown for Clock Input 0 without an External Gate)**



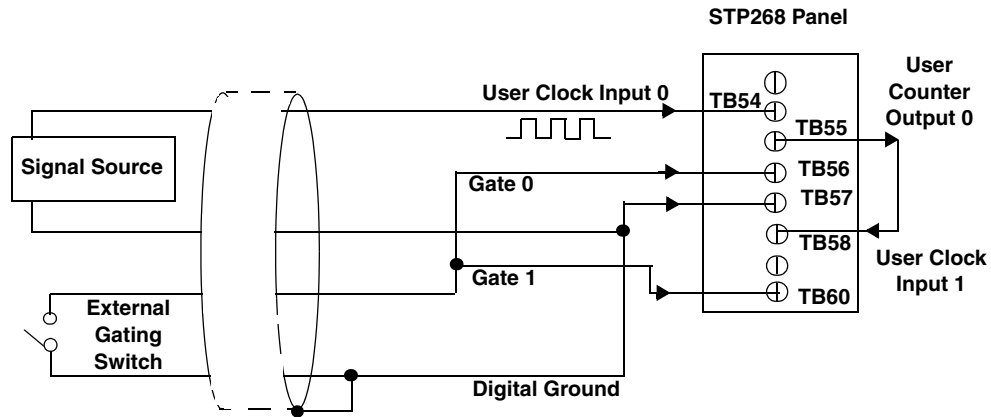


Note that the signals shown for the STP268 screw terminal panel correspond to connector J1.

Note that you can internally cascade counters using software; if you internally cascade the counters, you do not have to make the external cascading connections. Note also that this example shows the use of an external gate; however, this connection is not required.


**Figure 39: Cascading Counters on an STP268 Screw Terminal Panel (Shown for Event Counting Using Counters 0 and 1 and External Gate 0)**

Figure 40, Figure 41, and Figure 42 show examples of connecting event counting signals to the STP268-EC screw terminal panel.

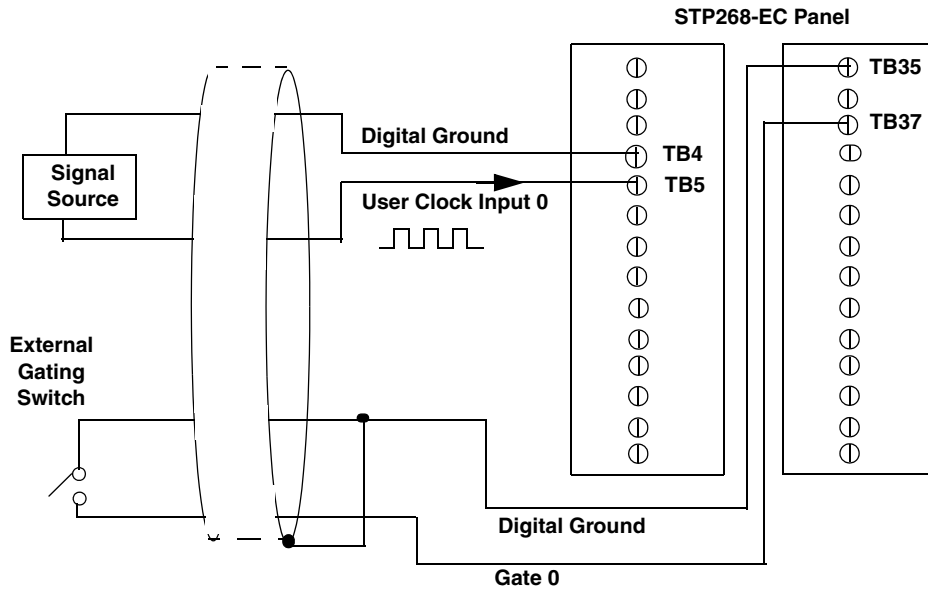


In this example, rising clock edges are counted while the gate is active.

**Figure 40: Connecting Event Counting Applications to the STP268-EC (Shown for Clock Input 0 and External Gate 0)**

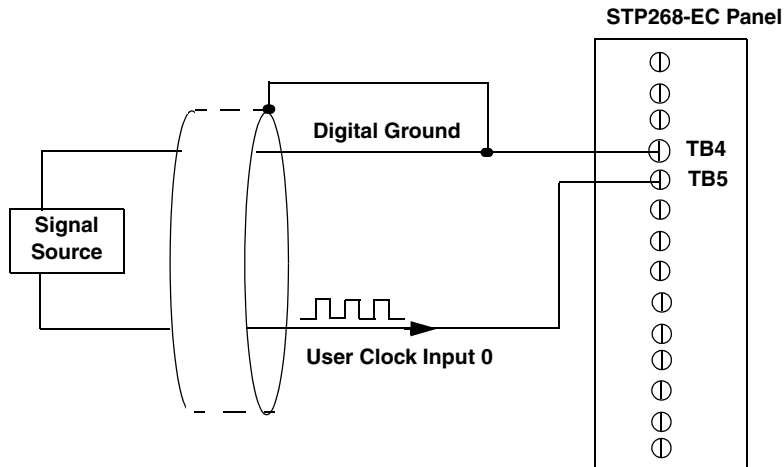

**Figure 41: Connecting Event Counting Applications to the STP268-EC (Shown for Clock Input 0 without an External Gate)**

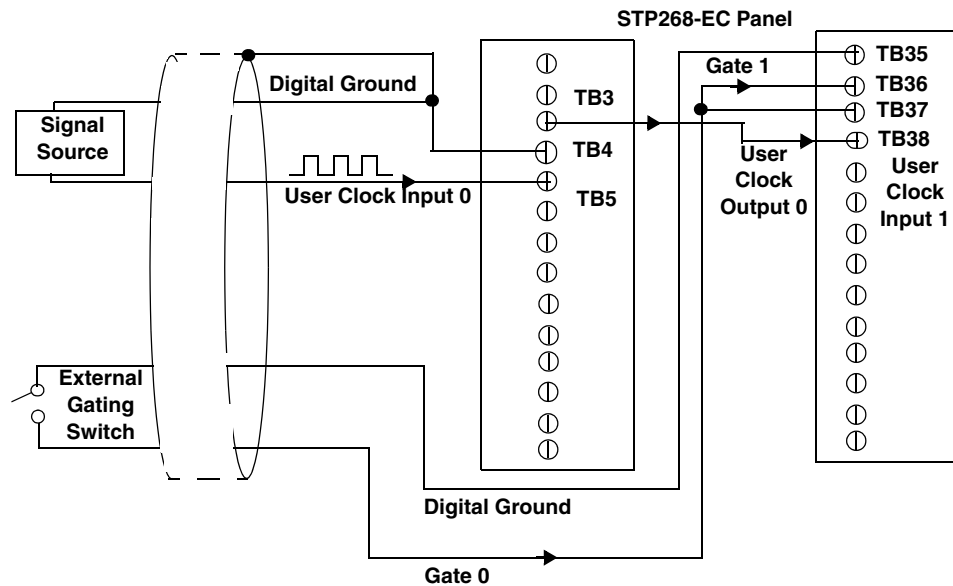

Note that you can internally cascade counters using software; if you internally cascade the counters, you do not have to make the external cascading connections. Note also that this example shows the use of an external gate; however, this connection is not required.


**Figure 42: Cascading Counters on an STP268-EC Screw Terminal Panel (Shown for Event Counting Using Counters 0 and 1 and External Gate 0)**

## Connecting Frequency Measurement Signals


You can connect a frequency measurement application to a DT740 or STP268 screw terminal panel in two ways.

The first configuration uses the same wiring as an event counting application that does not use an external gate signal (see [Figure 35](#) on [page 78](#) for the DT740, [Figure 38](#) on [page 80](#) for the STP268, or [Figure 41](#) on [page 82](#) for the STP268-EC). The software uses the Windows timer to specify the duration of the frequency measurement. In this configuration, the frequency of the clock input is the number of counts divided by the duration of the Windows timer.

If you need more accuracy than the Windows timer provides, you can connect a pulse of a known duration (such as a one-shot output of another user counter) to the external gate input. In this configuration, the frequency of the clock input is the number of counts divided by the period of the external gate input. For an example of this configuration, refer to [Figure 43](#) for the DT740, [Figure 44](#) for the STP268, or [Figure 45](#) for the STP268-EC.

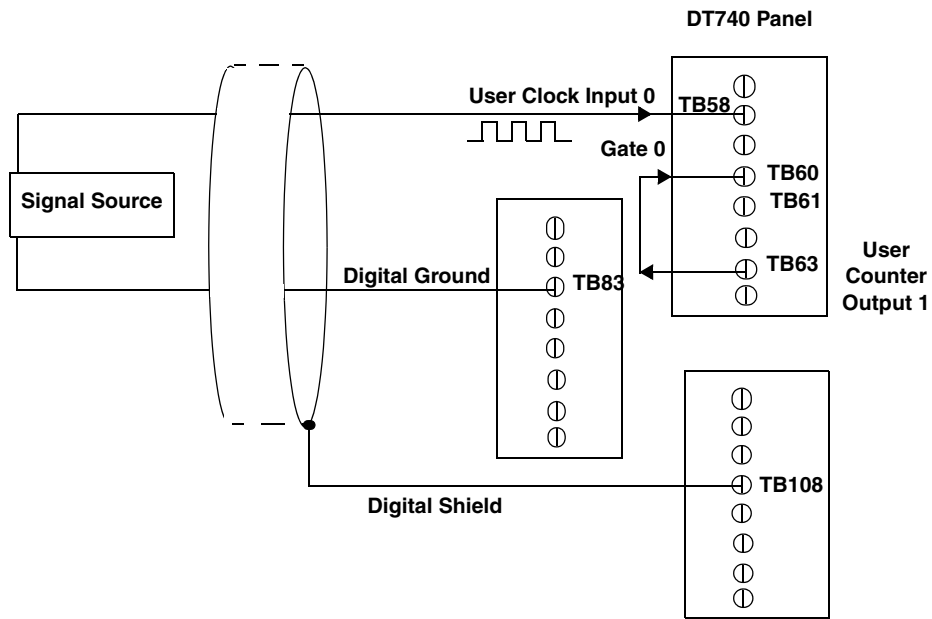

**Figure 43: Connecting Frequency Measurement Applications to the DT740 Screw Terminal Panel (Shown for Clock Input 0 and External Gate 0)**

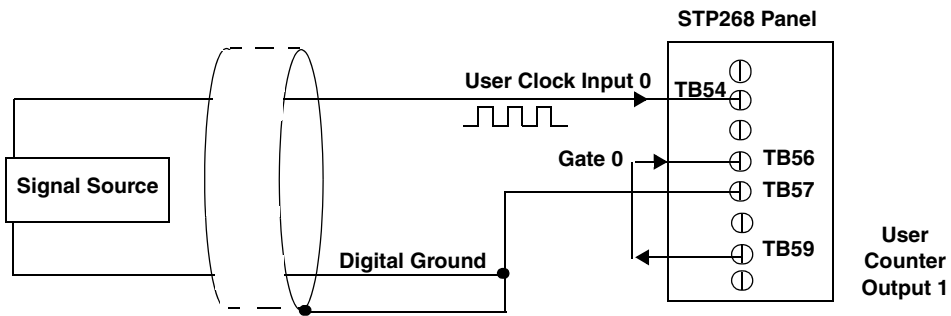

Note that the signals shown for the STP268 screw terminal panel correspond to connector J1.

**Figure 44: Connecting Frequency Measurement Applications to the STP268 Screw Terminal Panel (Shown for Clock Input 0 and External Gate 0)**

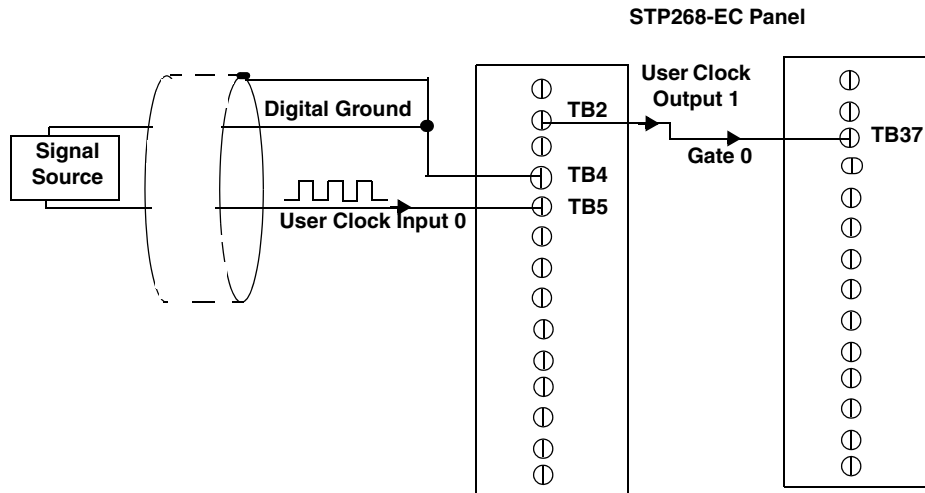


Figure 45: Connecting Frequency Measurement Applications to the STP268-EC Screw Terminal Panel (Shown for Clock Input 0 and External Gate 0)

## Connecting Pulse Output Signals

Figure 46, Figure 47, and Figure 48 show examples of connecting pulse output applications to the DT740 screw terminal panel. Other combinations of signals can be used.



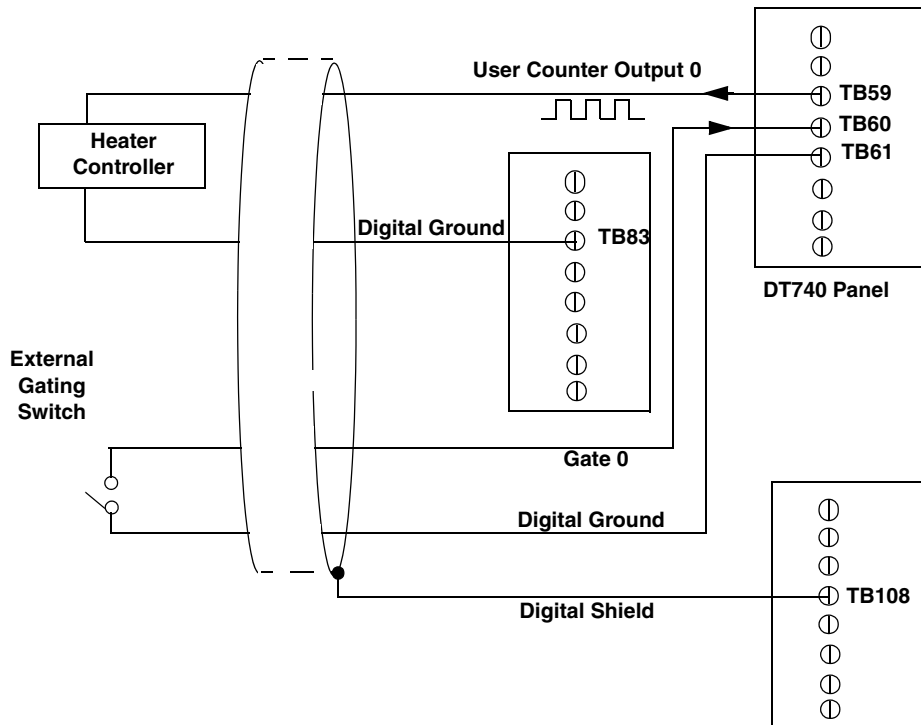


Figure 46: Connecting Pulse Output Applications to the DT740 Screw Terminal Panel (Shown for Counter Output 0 and Gate 0)

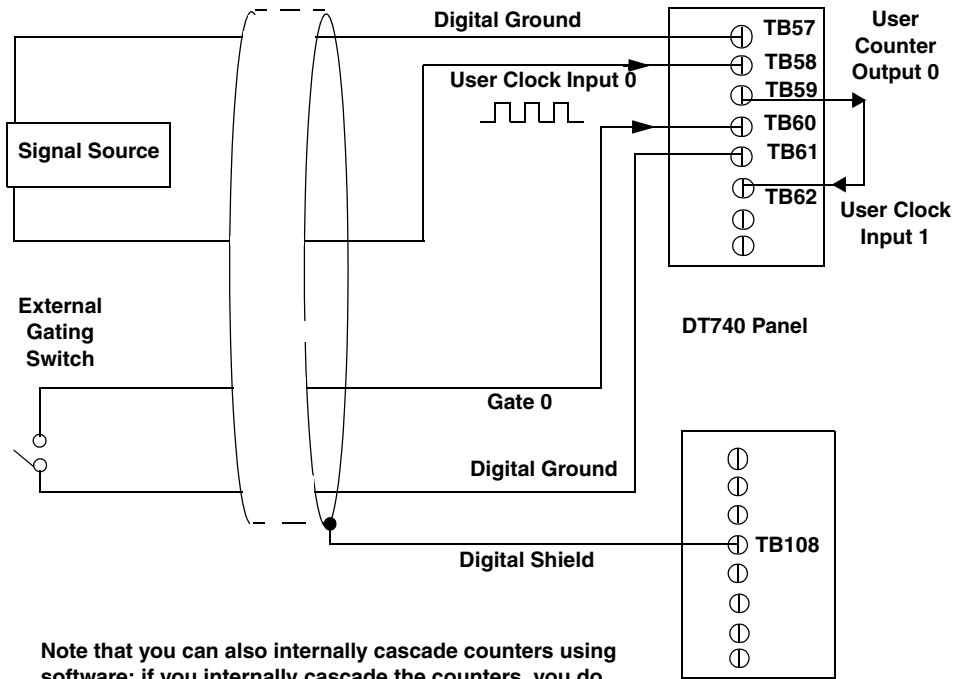


Note that you can also internally cascade counters using software; if you internally cascade the counters, you do not have to make the external cascading connections. In this example, counter 1 gate is logic high.

**Figure 47: Cascading Counters to the DT740**  
(Shown for Rate Generation Using Counters 0 and 1 and External Gate 0)

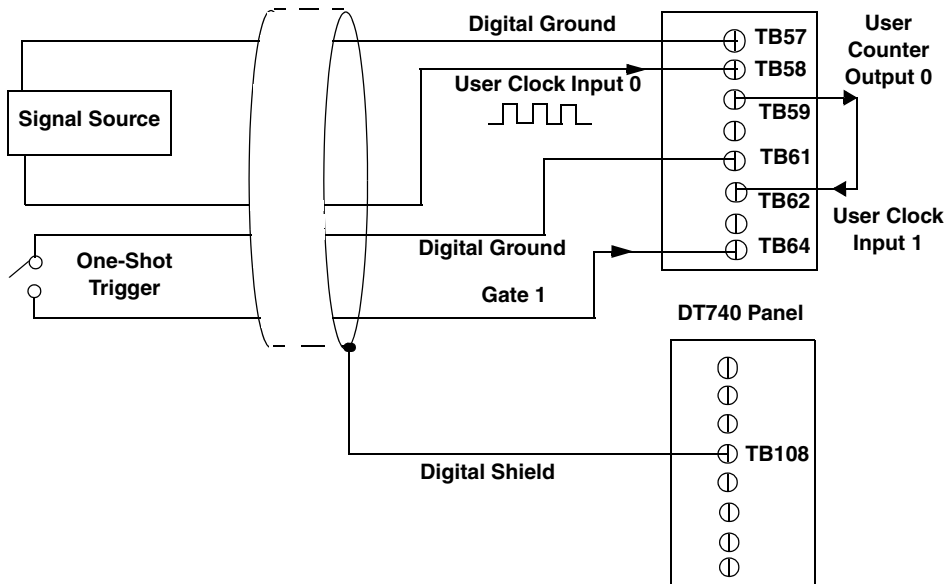


**Figure 48: Cascading Counters for the DT740**  
(Shown for One-Shot Using Counters 0 and 1 and External Gate 1)

Figure 49, Figure 50, and Figure 51 show examples of connecting pulse output applications to the STP268 screw terminal panel. Other combinations of signals can be used.

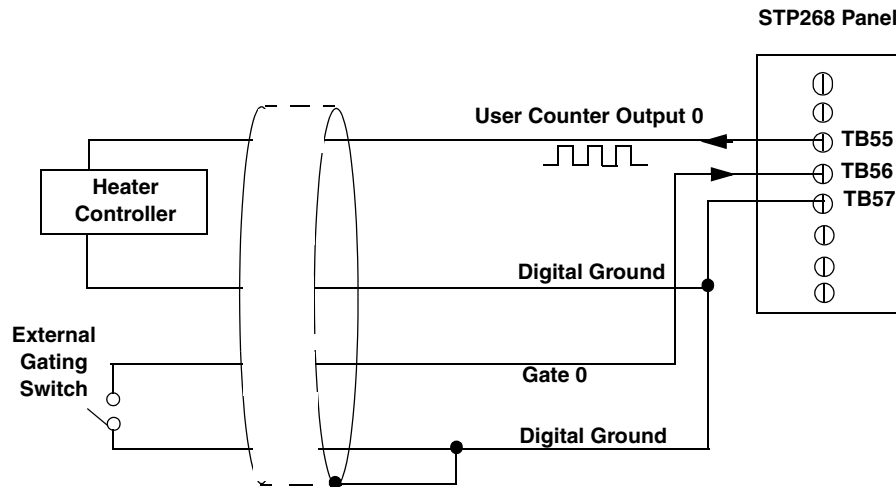

Note that the signals shown for the STP268 screw terminal panel correspond to connector J1.


**Figure 49: Connecting Pulse Output Applications to the STP268 Screw Terminal Panel (Shown for Counter Output 0 and Gate 0)**

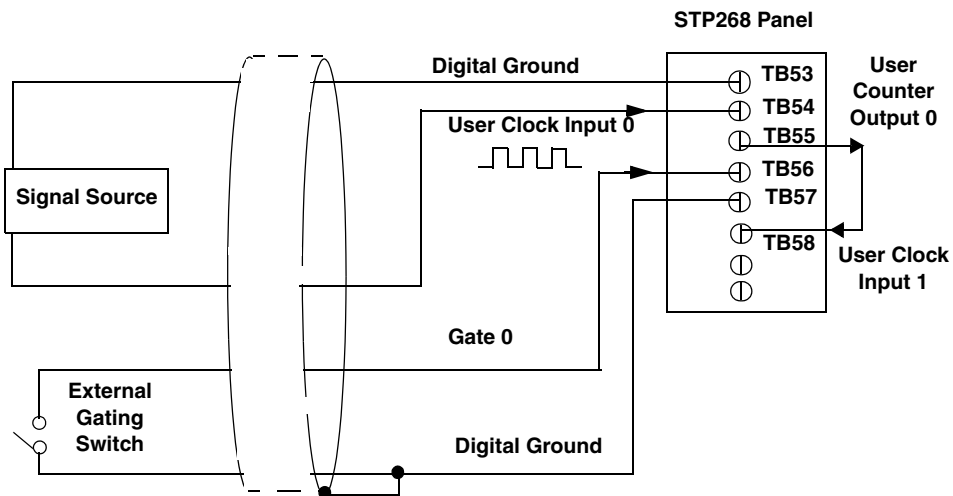

Note that the signals shown for the STP268 screw terminal panel correspond to connector J1.

Note also that you can internally cascade counters using software; if you internally cascade the counters, you do not have to make the external cascading connections. In this example, counter 1 gate is logic high.


**Figure 50: Cascading Counters to the STP268 (Shown for Rate Generation Using Counters 0 and 1 and External Gate 0)**

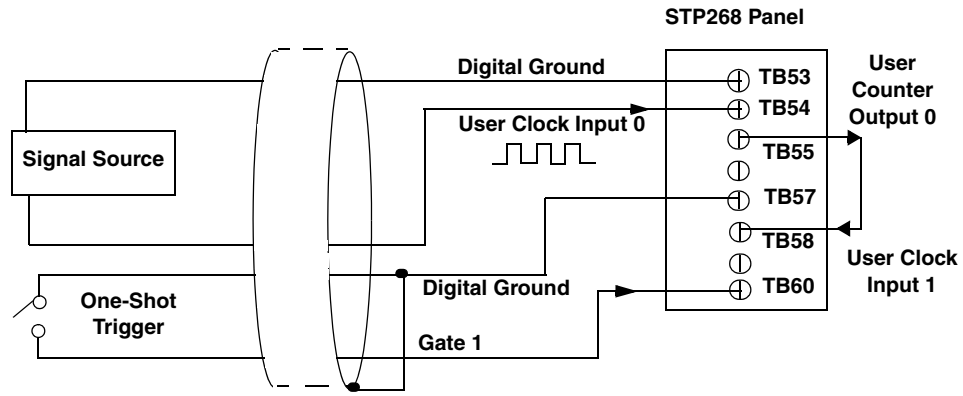

Note that the signals shown for the STP268 screw terminal panel correspond to connector J1.


**Figure 51: Cascading Counters for the STP268 (Shown for One-Shot Using Counters 0 and 1 and External Gate 1)**

Figure 52, Figure 53, and Figure 54 show examples of connecting pulse output applications to the STP268-EC screw terminal panel. Other combinations of signals can be used.

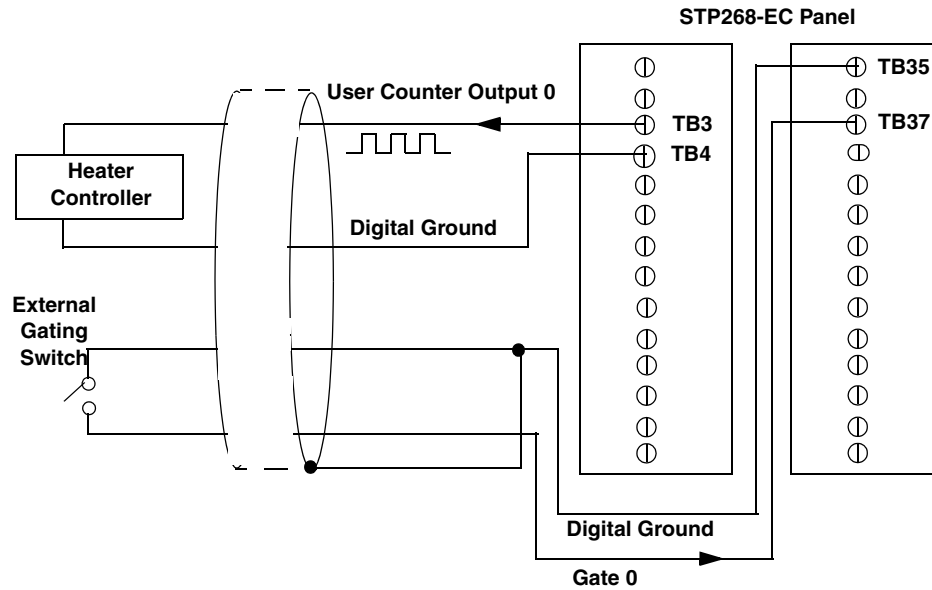


**Figure 52: Connecting Pulse Output Applications to the STP268-EC Screw Terminal Panel (Shown for Counter Output 0 and Gate 0)**



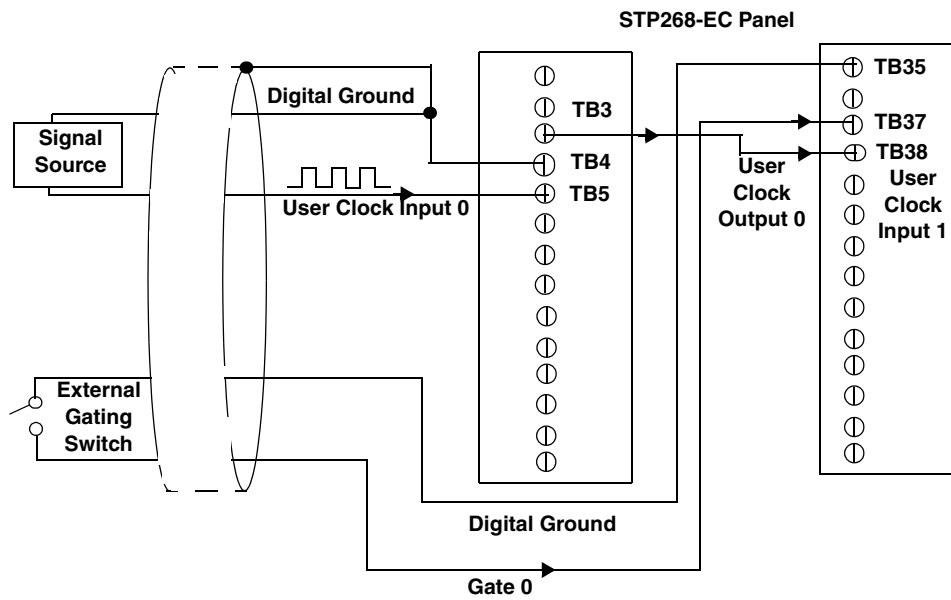

**Figure 53: Cascading Counters to the STP268-EC**  
 (Shown for Rate Generation Using Counters 0 and 1 and External Gate 0)

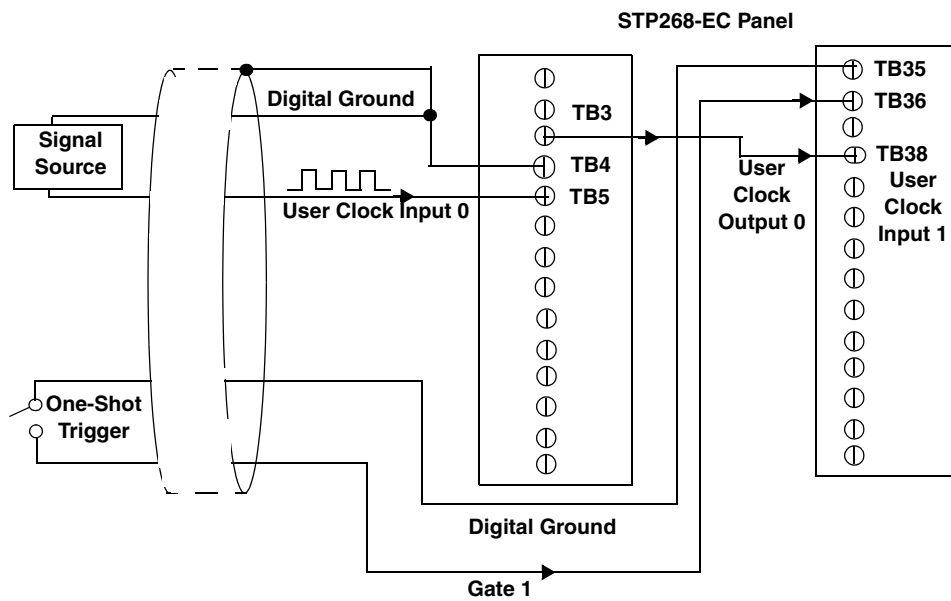


**Figure 54: Cascading Counters for the STP268-EC**  
 (Shown for One-Shot Using Counters 0 and 1 and External Gate 1)





## ***Verifying the Operation of a DT3010 Series Board***

Running the Quick DataAcq Application.....	93
Testing Single-Value Analog Input .....	94
Testing Single-Value Analog Output.....	95
Testing Continuous Analog Input.....	96
Testing Single-Value Digital Input.....	97
Testing Single-Value Digital Output .....	98
Testing Frequency Measurement.....	99
Testing Pulse Output .....	100

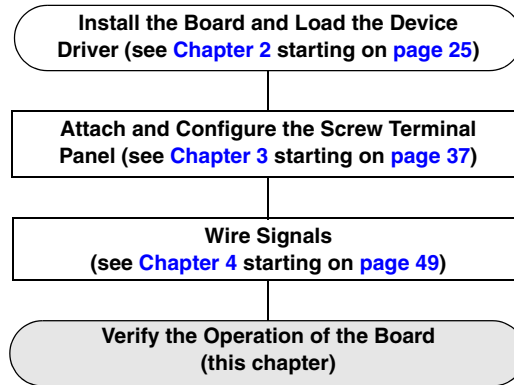

You can verify the operation of a DT3010 Series board using the Quick DataAcq application. Quick DataAcq allows you to do the following:

- Acquire data from a single analog input channel or digital input port
- Acquire data continuously from one or more analog input channels using an oscilloscope, strip chart, or Fast Fourier Transform (FFT) view
- Measure the frequency of events
- Output data from a single analog output channel or digital output port
- Output pulses either continuously or as a one-shot
- Save the input data to disk

This chapter describes how to install and run the Quick DataAcq application.

## Running the Quick DataAcq Application

The Quick DataAcq application is installed automatically when you install the driver software.

To run the Quick DataAcq application, do the following:

1. If you have not already done so, power up your computer and any attached peripherals.
2. Click **Start** from the Task Bar.
3. Browse to **Programs | Data Translation, Inc | DT-Open Layers for Win32 | QuickDataAcq**.  
*The main menu appears.*

---

**Note:** The Quick DataAcq application allows you to verify basic operations on the board; however, it may not support all of the board's features.

For information on each of the features provided, use the online help for the Quick DataAcq application by pressing F1 from any view or selecting the **Help** menu. If the system has trouble finding the help file, navigate to C:\Program Files\Data Translation\Win32\dtdataacq.hlp, where C: is the letter of your hard disk drive.

---

## Testing Single-Value Analog Input

To verify that the board can read a single analog input value, do the following:

1. Connect a voltage source, such as a function generator, to analog input channel 0 (differential mode) on the DT3010 Series board. Refer to [page 66](#) for an example of how to connect a differential analog input.
2. In the Quick DataAcq application, choose **Single Analog Input** from the **Acquisition** menu.
3. Select the appropriate DT3010 Series board from the Board list box.
4. In the Channel list box, select analog input channel 0.
5. In the Range list box, select the range for the channel.  
*The default is  $\pm 10$  V.*
6. Select **Differential**.
7. Click **Get** to acquire a single value from analog input channel 0.  
*The application displays the value on the screen in both text and graphical form.*

## Testing Single-Value Analog Output

To verify that the board can output a single analog output value, do the following:

1. Connect an oscilloscope or voltmeter to DAC0 on the board. Refer to [page 72](#) for an example of how to connect analog output signals.
2. In the Quick DataAcq application, choose **Single Analog Output** from the **Control** menu.
3. Select the appropriate DT3010 Series board from the Board list box.
4. In the Channel list box, select analog output channel 0.
5. In the Range list box, select the output range of DAC0.  
*The default is  $\pm 10$  V.*
6. Enter an output value, or use the slider to select a value to output from DAC0.
7. Click **Send** to output a single value from DAC0.  
*The application displays the output value on the screen in both text and graphical form.*

## Testing Continuous Analog Input

To verify that the board can perform a continuous analog input operation, do the following:

1. Connect known voltage sources, such as the outputs of a function generator, to analog input channels 0 and 1 on the DT3010 Series board (using the differential configuration). Refer to [page 66](#) for an example of how to connect a differential analog input.
2. In the Quick DataAcq application, choose **Scope** from the **Acquisition** menu.
3. Select the appropriate DT3010 Series board from the Board list box.
4. In the Sec/Div list box, select the number of seconds per division (.1 to .00001) for the display.
5. In the Channels list box, select analog input channel 1, and then click **Add** to add the channel to the channel list.  
*Channel 0 is automatically added to the channel list.*
6. Click **Config** from the Toolbar.
7. From the Config menu, select **ChannelType**, and then select **Differential**.
8. From the Config menu, select **Range**, and then select **Bipolar** or **Unipolar** depending on the configuration of your board.  
*The default is Bipolar.*
9. From the Scope view, double-click the input range of the channel to change the input range of the board ( $\pm 10$  V,  $\pm 5$  V,  $\pm 2.5$  V,  $\pm 1.25$  V for bipolar ranges or 0 to 10 V, 0 to 5 V, 0 to 2.5 V or 0 to 1.25 V for unipolar ranges).  
*The default is  $\pm 10$  V. Note that the display changes to reflect the selected range for all the analog input channels on the board.*
10. In the Trigger box, select **Auto** to acquire data continuously from the specified channels or **Manual** to acquire a burst of data from the specified channels.
11. Click **Start** from the Toolbar to start the continuous analog input operation.  
*The application displays the values acquired from each channel in a unique color on the oscilloscope view.*
12. Click **Stop** from the Toolbar to stop the operation.



## Testing Single-Value Digital Input

To verify that the board can read a single digital input value, do the following:

1. Connect a digital input to digital input line 0 of port A on the DT3010 Series board. Refer to [page 74](#) for an example of how to connect a digital input.
2. In the Quick DataAcq application, choose **Digital Input** from the **Acquisition** menu.
3. Select the appropriate DT3010 Series board from the Board list box.
4. Select digital input port A by clicking **Port A**.
5. Click **Get**.

*The application displays the value of each digital input line in port A on the screen in both text and graphical form.*

## Testing Single-Value Digital Output

To verify that the board can output a single digital output value, do the following:

1. Connect a digital output to digital output line 0 of port B on the DT3010 Series board. Refer to [page 74](#) for an example of how to connect a digital output.
2. In the Quick DataAcq application, choose **Digital Output** from the **Control** menu.
3. Select the appropriate DT3010 Series board from the Board list box.
4. Select digital output port B by clicking **Port B**.
5. Click the appropriate bits to select the digital output lines to write to. If the bit is selected, a high-level signal is output to the digital output line; if the bit is not selected, a low-level signal is output to the digital output line. Optionally, you can enter an output value in the Hex text box.
6. Click **Send**.  
*The application displays the value of each digital output line of digital port B on the screen in both text and graphical form.*

## Testing Frequency Measurement

To verify that the board can perform a frequency measurement operation, do the following:

1. Wire an external clock source to counter/timer 0 on the DT3010 Series board. Refer to [page 83](#) for an example of how to connect a an external clock for a frequency measurement operation.

---

**Note:** The Quick DataAcq application works only with counter/timer 0.

---

2. In the Quick DataAcq application, choose **Frequency Counter** from the **Acquisition** menu.
3. Select the appropriate DT3010 Series board from the Board list box.
4. In the Count Duration text box, enter the number of seconds during which events will be counted.
5. Click **Start** to start the frequency measurement operation.  
*The operation automatically stops after the number of seconds you specified has elapsed, and the application displays the frequency on the screen.*

If you want to stop the frequency measurement operation when it is in progress, click **Stop**.

## Testing Pulse Output

To verify that the board can perform a pulse output operation, do the following:

1. Connect a scope to counter/timer 0 on the DT3010 Series board. Refer to [page 85](#) for an example of how to connect a scope (a pulse output) to counter/timer 0.

---

**Note:** The Quick DataAcq application works only with counter/timer 0.

---

2. In the Quick DataAcq application, choose **Pulse Generator** from the **Control** menu.
3. Select the appropriate DT3010 Series board from the Board list box.
4. Select either **Continuous** to output a continuous pulse stream or **One Shot** to output one pulse.
5. Select either **Low-to-high** to output a rising-edge pulse (the high portion of the total pulse output period is the active portion of the signal) or **High-to-low** to output a falling-edge pulse (the low portion of the total pulse output period is the active portion of the signal).
6. Enter a percentage or use the slider to select a percentage for the pulse width. The pulse width determines the duty cycle of the pulse.
7. Click **Start** to generate the pulse(s).  
*The application displays the results both in text and graphical form.*
8. Click **Stop** to stop a continuous pulse output operation. One-shot pulse output operations stop automatically.

## ***Part 2: Using Your Board***






## ***Principles of Operation***

Analog Input Features .....	105
Analog Output Features .....	122
Digital I/O Features .....	129
Counter/Timer Features .....	131
Synchronizing A/D and D/A Subsystems .....	144

This chapter describes the analog input, analog output, digital I/O, counter/timer, and synchronous features of the DT3010 Series boards. To frame the discussions, refer to the block diagram shown in Figure 55. Note that bold entries indicate signals you can access.

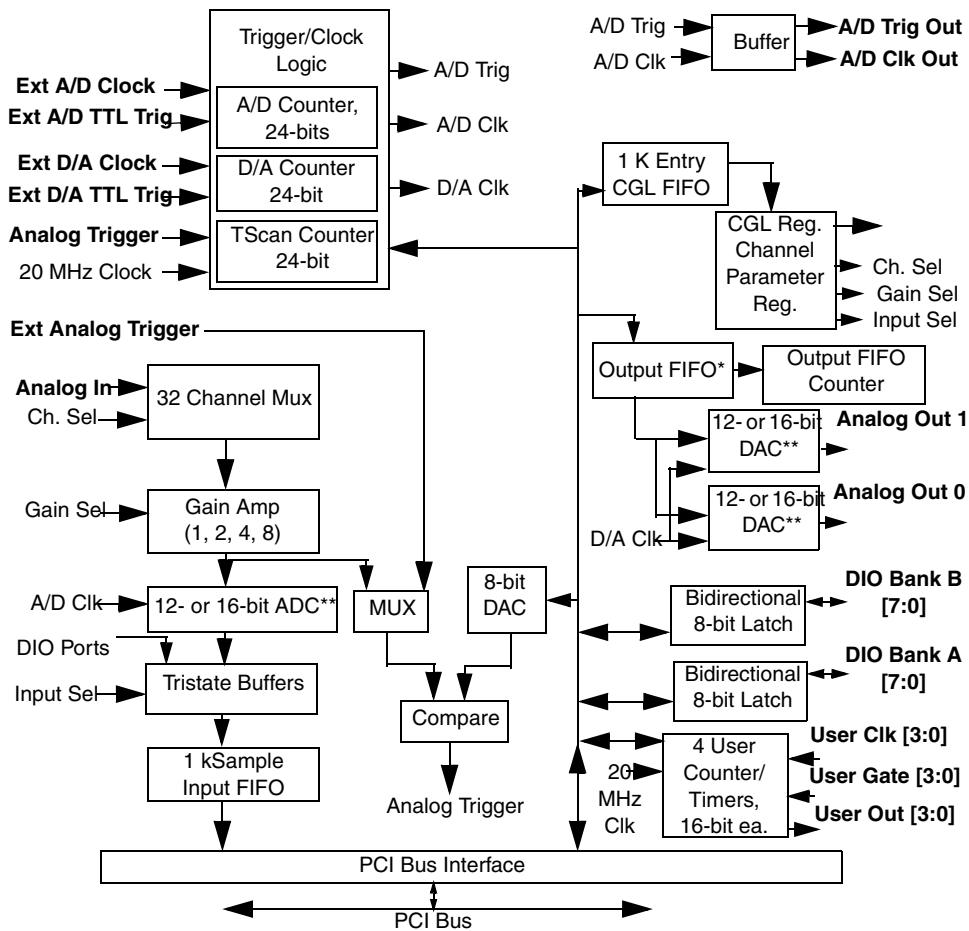

\*The DT3010, DT3010-268, and DT3016 have a 4 kSample output FIFO; the DT3010/32 and DT3010/32-268 have a 32 kSample output FIFO.\*\*Only the DT3016 has a 16-bit ADC and 16-bit DACs.

Figure 55: Block Diagram of the DT3010 Series Boards



## Analog Input Features

This section describes the features of the analog input (A/D) subsystem, including the following:

- Analog input resolution
- Analog input channels
- Input ranges and gains
- A/D sample clock sources
- Analog input conversion modes
- Trigger sources and trigger acquisition modes
- Data formats and transfer
- Error conditions

### Analog Input Resolution

DT3010, DT3010-268, DT3010/32, and DT3010/32-268 boards have a fixed analog input resolution of 12 bits. The DT3016 board has a fixed resolution of 16 bits. The analog input resolution cannot be changed in software.

### Analog Input Channels

DT3010 Series boards support 32 single-ended or pseudo-differential analog input channels, or 16 differential analog input channels. Refer to [Chapter 4](#) starting on [page 49](#) for a description of how to wire these signals. Use software to specify the channel type.

---

**Note:** For pseudo-differential inputs, specify single-ended in software; in this case, how you wire these signals determines the configuration.

---

DT3010 Series boards can acquire data from a single analog input channel or from a group of analog input channels. Channels are numbered 0 to 31 for single-ended and pseudo-differential inputs, and 0 to 15 for differential inputs. The following subsections describe how to specify the channels.

#### ***Specifying a Single Channel***

The simplest way to acquire data from a single channel is to specify the channel for a single-value analog input operation using software; refer to [page 110](#) for more information on single-value operations.

## Specifying One or More Channels

DT3010 Series boards can read data from one or more analog input channels using an analog input channel list. You can group the channels in the list sequentially (either starting with 0 or with any other analog input channel), or randomly. You can also specify a single channel or the same channel more than once in the list.

Using software, specify the channels in the order you want to sample them. The analog input channel list corresponds to the channel List FIFO on the board. You can enter up to 1,024 entries. The channels are read in order (using continuously-paced scan mode or triggered scan mode) from the first entry to the last entry in the channel list. The board can read the channels in the channel list up to 256 times per trigger (for a total of 262,144 samples per trigger) using triggered scan mode. Refer to [page 110](#) for more information on the supported conversion modes.

---

**Note:** If you select an analog input channel as the analog threshold trigger source, the channel used for this trigger source must be the first channel specified in the analog input channel list; refer to [page 114](#) for more information on this trigger source.

---

If you wish, you can also use software to inhibit data collection from channels in the channel list. This feature is useful if you want to discard acquired values from specific entries in the channel list. You can enable or disable inhibition for each entry in the analog input channel list. If enabled, the value is discarded after the channel is read; if disabled, the value is not discarded after the channel is read.

### Specifying Digital Input Lines in the Analog Input Channel List

In addition to the analog input channels, you can read the 16 digital I/O lines (Bank A 0 to 7 and Bank B 0 to 7) of the DT3010 Series boards using the analog input channel list. This feature is particularly useful when you want to correlate the timing of analog and digital events.

To read these 16 digital I/O lines, specify channel 32 in the analog input channel list. You can enter channel 32 anywhere in the list and can enter it more than once, if desired.

This channel is treated like any other channel in the analog input channel list; therefore, all the clocking, triggering, and conversion modes supported for analog input channels are supported for these digital I/O lines, if you specify them in this manner.

### Performing Dynamic Digital Output Operations

---

**Note:** This feature is supported in the DataAcq SDK. It is not supported in the DT-Open Layers for .NET Class Library.

---


Using software, you can enable a synchronous dynamic digital output operation for the A/D subsystem. This feature is particularly useful for synchronizing and controlling external equipment.

Two dynamic digital output lines are provided: 0 and 1. These lines are set to a value of 0 on power up; a reset does not affect the values of the dynamic digital output lines. Note that these lines are provided in addition to the other 16 digital I/O lines; see [page 129](#) for more information on the digital I/O features.

Using software, specify the values to write to the dynamic digital output lines using the analog input channel list. As each entry in the analog input channel list is read, the corresponding value you specified is output to the dynamic digital output lines.

For DT3010 Series boards, you can specify the following values for the dynamic digital output lines: 0 (00 in binary format), 1 (01 in binary format), 2 (10 in binary format), or 3 (11 in binary format), where a value of 1 means that the line goes high and a value of 0 means that the line goes low. Each bit in binary format corresponds to the value to write to the dynamic digital output line. For example, a value of 1 (01 in binary format) means that a value of 1 is output to dynamic digital output line 0 and value of 0 is output to dynamic output line 1. Similarly, a value of 2 (10 in binary format) means that a value of 0 is output to dynamic digital output line 0 and value of 1 is output to dynamic output line 1.

For example, assume that the analog input channel list contains channels 5, 6, 7, 8; that dynamic digital output operations are enabled; and that the values to write to the dynamic digital output lines are 2, 0, 1, 3. [Figure 56](#) shows this configuration.

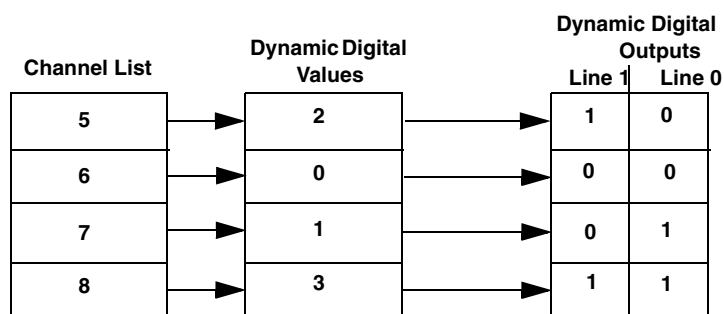

**Figure 56: An Example Using Dynamic Digital Outputs**

As analog input channel 5 is read, 1 is output to dynamic digital output line 1, and 0 is output to dynamic output line 0 (since 2 in binary format is 10). As analog input channel 6 is read, 0 is output to both dynamic digital output lines. As analog input channel 7 is read, 0 is output to dynamic digital output line 1, and 1 is output to dynamic output line 0 (since 1 in binary format is 01). As analog input channel 8 is read, 1 is written to both dynamic digital output lines.

## Input Ranges and Gains

Each channel on the DT3010 Series board can measure unipolar and bipolar analog input signals. A unipolar signal is always positive (0 to 10 V on DT3010 Series boards), while a bipolar signal extends between the negative and positive peak values ( $\pm 10$  V on DT3010 Series boards).

Through software, specify the range as 0 to 10 V for unipolar signals or -10 V to +10 V for bipolar signals. Note that the range applies to the entire analog input subsystem, not to a specific channel.

DT3010 Series boards also provide gains 1, 2, 4, and 8, which are programmable per channel. [Table 10](#) lists the effective ranges supported by DT3010 Series boards using these gains.

**Table 10: Gains and Effective Ranges**

Gain	Unipolar Analog Input Range	Bipolar Analog Input Range
1	0 to 10 V	$\pm 10$ V
2	0 to 5 V	$\pm 5$ V
4	0 to 2.5 V	$\pm 2.5$ V
8	0 to 1.25 V	$\pm 1.25$ V

For each channel, choose the gain that has the smallest effective range that includes the signal you want to measure. For example, if the range of your analog input signal is  $\pm 1.5$  V, specify a range of -10 V to +10 V for the board and use a gain of 4 for the channel; the effective input range for this channel is then  $\pm 2.5$  V, which provides the best sampling accuracy for that channel.

The simplest way to specify gain for a single channel is to specify the gain for a single-value analog input operation using software; refer to [page 110](#) for more information on single-value operations.

If you are using an analog input channel list, you can use software to specify the gain for each analog input channel entry in the analog input channel list.

---

**Note:** For analog input channel 32 (the 16 digital I/O channels) in the channel list, specify a gain of 1.

---

## A/D Sample Clock Sources

DT3010 Series boards provide two clock sources for pacing analog input operations in continuous mode:

- An internal A/D sample clock that uses the 24-bit A/D Counter on the board
- An external A/D sample clock that you can connect to the screw terminal panel

The A/D sample clock paces the acquisition of each channel in the channel list; this clock is also called the A/D pacer clock.

---

**Note:** If you enter digital I/O channel 32 in the channel list, the A/D sample clock (internal or external) also paces the acquisition of the 16 digital input lines.

---

The following subsections describe the internal and external A/D sample clocks in more detail.

### ***Internal A/D Sample Clock***

The internal A/D sample clock uses a 20 MHz time base. Conversions start on the falling edge of the counter output; the output pulse is active low.

Using software, specify the clock source as internal and the clock frequency at which to pace the operation. The minimum frequency supported is 1.2 Hz (1.2 Samples/s). For the DT3010, DT3010-268, DT3010/32, and DT3010/32-268 boards, the maximum frequency supported is 1.25 MHz (1.25 MSamples/s). For the DT3016 board, the maximum frequency supported is 250 kHz (250 kSamples/s).

According to sampling theory (Nyquist Theorem), specify a frequency that is at least twice as fast as the input's highest frequency component. For example, to accurately sample a 20 kHz signal, specify a sampling frequency of at least 40 kHz. Doing so avoids an error condition called *aliasing*, in which high frequency input components erroneously appear as lower frequencies after sampling.

---

**Note:** You can access the output signal from the A/D sample clock using screw terminal 79 on the DT740 screw terminal panel, or screw terminal 47 on the STP268 screw terminal panel (attached to connector J1) or STP268-EC screw terminal panel.

---

### ***External A/D Sample Clock***

The external A/D sample clock is useful when you want to pace acquisitions at rates not available with the internal A/D sample clock or when you want to pace at uneven intervals.

Connect an external A/D sample clock to screw terminal 76 on the DT740 screw terminal panel, screw terminal 48 on the STP268 screw terminal panel (attached to connector J1), or screw terminal 13 on the STP268-EC screw terminal panel. Conversions start on the falling edge of the external A/D sample clock input signal.

Using software, specify the clock source as external. For DT3010 Series boards, the clock frequency is always equal to the frequency of the external A/D sample clock input signal that you connect to the board through the screw terminal panel.

**Note:** The DT3010-268 board only provides an External A/D Trigger and Clock Enable signal. This signal is pulled high on the DT3010-268 board by a 22 k $\Omega$  resistor. You can use this signal to enable or disable the external digital trigger and the external A/D sample clock.

A high signal enables both the external digital trigger and the external A/D sample clock, while a low signal disables both the external digital trigger and the external A/D sample clock.

---

## Analog Input Conversion Modes

DT3010 Series boards support the following conversion modes:

- **Single-value operations** are the simplest to use but offer the least flexibility and efficiency. Use software to specify the range, gain, and analog input channel (among other parameters); acquire the data from that channel; and convert the result. The data is returned immediately. For a single-value operation, you cannot specify a clock source, trigger source, trigger acquisition mode, scan mode, or buffer.

Single-value operations stop automatically when finished; you cannot stop a single-value operation.

- **Scan mode** takes full advantage of the capabilities of the DT3010 Series boards. In a scan, you can specify a channel list, clock source, trigger source, trigger acquisition mode, scan mode, and buffer. Two scan modes are supported: continuously-paced scan mode and triggered scan mode (often called burst mode). These modes are described in the following subsections.

Using software, you can stop a scan mode operation by performing either an orderly stop or an abrupt stop. In an orderly stop, the board finishes acquiring the specified number of samples, stops all subsequent acquisition, and transfers the acquired data to host memory; all subsequent triggers or retriggers are ignored. In an abrupt stop, the board stops acquiring samples immediately; the acquired data is not transferred to host memory, but all subsequent triggers or retriggers are ignored.

### ***Continuously-Paced Scan Mode***

Use continuously-paced scan mode if you want to accurately control the period between conversions of individual channels in a scan.

When it detects an initial trigger, the board cycles through the channel list, acquiring and converting the value for each entry in the channel list; this process is defined as the scan. The board then wraps to the start of the channel list and repeats the process continuously until either the allocated buffers are filled or you stop the operation. Refer to [page 119](#) for more information on buffers.

The conversion rate is determined by the frequency of the A/D sample clock; refer to [page 108](#) for more information on the A/D sample clock. The sample rate, which is the rate at which a single entry in the channel list is sampled, is determined by the frequency of the A/D sample clock divided by the number of entries in the channel list.

To select continuously-paced scan mode, use software to specify the dataflow as Continuous, ContinuousPreTrigger, or Continuous PrePostTrigger; refer to [page 115](#) for more information about these trigger acquisition modes.

The initial trigger source depends on the trigger acquisition mode selected; refer to [page 113](#) for more information on the supported trigger acquisition modes and trigger sources.

---

**Note:** An A/D Trigger Out signal is provided for your use. This signal is high when the A/D subsystem is waiting for a trigger and low when a trigger occurs. In continuously-paced scan mode, this signal goes low when the trigger occurs and stays low until you stop the operation.

---

## Triggered Scan Mode

DT3010 Series boards support two triggered scan modes: software-retriggered and externally-retriggered. These modes are described in the following subsections.

### Software-Retriggered Scan Mode

Use software-retriggered scan mode if you want to accurately control both the period between conversions of individual channels in a scan and the period between each scan. This mode is useful when synchronizing or controlling external equipment, or when acquiring a buffer of data on each trigger or retrigger. Using this mode, you can acquire up to 262,144 samples per trigger (256 times per trigger x 1024-location channel list).

When it detects an initial trigger, the board scans the channel list a specified number of times (up to 256), then waits for an software retrigger to occur. When the board detects an software retrigger, the board scans the channel list the specified number of times, then waits for another software retrigger to occur. The process repeats continuously until either the allocated buffers are filled or you stop the operation; refer to [page 119](#) for more information on buffers.

The sample rate is determined by the frequency of the A/D sample clock divided by the number of entries in the channel list; refer to [page 108](#) for more information on the A/D sample clock. The conversion rate of each scan is determined by the frequency of the Triggered Scan Counter, a 24-bit counter with a 20 MHz clock located on the board.

Using software, specify the retrigger frequency. The minimum retrigger frequency is 1.2 Hz. For DT3010, DT3010-268, DT3010/32, and DT3010/32-268 boards, the maximum retrigger frequency is 357.14 kHz (357.14 kSamples/s); for DT3016 boards, the maximum retrigger frequency is 166.67 kHz (166.666 kSamples/s).

Specify the *retrigger frequency* as follows:

$$\text{Min. Retrigger Period} = \frac{\# \text{ of CGL entries} \times \# \text{ of CGLs per trigger} + 2 \mu\text{s}}{\text{A/D sample clock frequency}}$$

$$\text{Max. Retrigger Frequency} = \frac{1}{\text{Min. Retrigger Period}}$$

For example, if you are using 512 channels in the channel list, scanning the channel list 256 times every trigger or retrigger, and using an A/D sample clock with a frequency of 1 MHz, set the maximum retrigger frequency to 7.62 Hz, since

$$7.62 \text{ Hz} = \frac{1}{\frac{(512 * 256) + 2 \mu\text{s}}{1 \text{ MHz}}}$$

To select software-retriggered scan mode, use software to specify the following parameters:

- The dataflow as Continuous, ContinuousPreTrigger, or ContinuousPrePostTrigger,
- Triggered scan mode usage as enabled.
- The retrigger source as Software.
- The number of times to scan per trigger or retrigger (also called the multiscan count).
- The frequency of the Triggered Scan Counter.

The initial trigger source depends on the trigger acquisition mode selected; refer to [page 113](#) for more information on the supported trigger acquisition modes and trigger sources.

---

**Note:** An A/D Trigger Out signal is provided for your use. This signal is high when the A/D subsystem is waiting for a trigger and low when a trigger occurs. In software-retriggered scan mode, this signal stays low until the desired number of samples have been acquired, then goes high until the software retrigger is generated.

---

### Externally-Retriggered Scan Mode

Use externally-retriggered scan mode if you want to accurately control the period between conversions of individual channels and retrigger the scan based on an external event. Like software-retriggered scan mode, this mode allows you to acquire 262,144 samples per trigger (256 times per trigger x 1024-location channel list).

---

**Note:** Use externally-retriggered scan mode with continuous post-trigger acquisitions only; refer to [page 115](#) for more information on post-trigger acquisitions.

---

When it detects an initial trigger (post-trigger source only), the board scans the channel list up to 256 times, then waits for an external retrigger to occur. Specify any supported post-trigger source as the initial trigger. For the retrigger, specify either an external digital (TTL) trigger.

When the retrigger occurs, the board scans the channel list the specified number of times, then waits for another external retrigger to occur. The process repeats continuously until either the allocated buffers are filled or you stop the operation; refer to [page 119](#) for more information on buffers.



The conversion rate of each channel is determined by the frequency of the A/D sample clock; refer to [page 108](#) for more information on the A/D sample clock. The conversion rate of each scan is determined by the period between external retriggers; therefore, it cannot be accurately controlled. The board ignores external triggers that occur while it is acquiring data. Only external retrigger events that occur when the board is waiting for a retrigger are detected and acted on.

To select externally-retriggered scan mode, use software to specify the following parameters:

- The dataflow as Continuous.
- Triggered scan mode as enabled.
- The retrigger source as an external digital (TTL) trigger.
- The number of times to scan per trigger or retrigger (also called the multiscan count).

---

**Notes:** If you are using an external trigger source as the initial trigger and want to retrigger externally, specify the same trigger source as the retrigger. For example, if you are using an external digital (TTL) trigger as the initial trigger, specify the external digital (TTL) trigger as the retrigger.

An A/D Trigger Out signal is provided for your use. This signal is high when the A/D subsystem is waiting for a trigger and low when a trigger occurs. In externally-retriggered scan mode, this signal stays goes low when the trigger occurs and stays low until the desired number of samples have been acquired, then goes high until the external retrigger is generated.

---

## Triggers

A trigger is an event that occurs based on a specified set of conditions. DT3010 Series boards support a number of trigger sources and trigger acquisition modes, described in the following subsections.

### ***Trigger Sources***

DT3010 Series boards support the following trigger sources:

- Software trigger
- External digital (TTL) trigger
- Analog threshold trigger

This subsection describes these trigger sources in more detail.

#### **Software Trigger**

A software trigger event occurs when you start the analog input operation (the computer issues a write to the board to begin conversions). Specify the software trigger source in software.

## External Digital (TTL) Trigger

For analog input operations, an external digital trigger event occurs when the DT3010 Series board detects either a rising or falling edge on the External A/D TTL Trigger input signal connected to screw terminal 77 on the DT740 screw terminal panel, screw terminal 49 on the STP268 screw terminal panel (attached to connector J1), or screw terminal 14 on the STP268-EC screw terminal panel. The trigger signal is TTL-compatible.

Using software, specify the trigger source as an external, positive digital (TTL) trigger for a rising-edge digital trigger (OL\_TRG\_EXTERN for DataAcq SDK users) or an external, negative digital (TTL) trigger for a falling-edge digital trigger (OL\_TRG\_EXTRA for DataAcq SDK users).

---

**Note:** The DT3010-268 board provides an External A/D Trigger and Clock Enable signal. You can use this signal to enable or disable the external digital trigger and the external A/D sample clock. The External A/D Trigger and Clock Enable signal is pulled high on the DT3010-268 by a 22 k $\Omega$  resistor.

A high signal enables both the external digital trigger and the external A/D sample clock, while a low signal disables both the external digital trigger and the external A/D sample clock.

---

## Analog Threshold Trigger

For analog input operations, an analog trigger event occurs when the DT3010 Series detects a transition from above a threshold level to below a threshold level (falling edge), or a transition from below a threshold level to above a threshold level (rising edge). The following analog threshold trigger sources are available:

- **External Analog Trigger input signal** – This trigger source is supported by the DataAcq SDK; it is not supported by the DT-Open Layers Class Library.

Connect an external analog trigger signal to screw terminal 107 on the DT740 screw terminal panel, screw terminal 39 on the STP268 screw terminal panel (attached to connector J1), or screw terminal 15 on the STP268-EC screw terminal panel.

Using software, specify the trigger source as either a rising-edge (OL\_TRG\_EXTRA+1 for DataAcq SDK users) or falling-edge analog threshold trigger (OL\_TRG\_EXTRA+2 for DataAcq SDK users).

- **One of the analog input channels** after gain is applied (also called the output of the programmable gain amplifier (PGA)). Using software, specify the trigger source as either a positive threshold trigger or negative threshold trigger.

Using software, specify the analog input channel used as the analog threshold trigger as the first channel in the channel list; refer to [page 106](#) for more information.

On DT3010 Series boards, the threshold level is set using a dedicated 8-bit DAC (the second D/A subsystem). The hysteresis is fixed at 50 mV. Using software, program the threshold level by writing a voltage value to this DAC; this value can range from -10 V to +10 V.

---

**Note:** If you are using an analog threshold trigger to trigger both the A/D and the D/A subsystems, ensure that you use the same analog trigger type for both subsystems (either external or one of the analog input channels). The polarity of the triggers, however, can be different.

---

## Trigger Acquisition Modes

DT3010 Series boards can acquire data in post-trigger mode, pre-trigger mode, or about-trigger mode. These trigger acquisition modes are described in more detail in the following subsections.

### Post-Trigger Acquisition

Use post-trigger acquisition mode when you want to acquire data when a post-trigger or retrigger, if using triggered scan mode, occurs.

Using software, specify the following parameters:


- The dataflow as Continuous.
- The trigger source to start the post-trigger acquisition (the post-trigger source) as any of the supported trigger sources.

Refer to [page 110](#) for more information on the supported conversion modes; refer to [page 113](#) for information on the supported trigger sources.

Post-trigger acquisition starts when the board detects the post-trigger event and stops when the specified number of post-trigger samples has been acquired or when you stop the operation.


If you are using triggered scan mode, the board continues to acquire post-trigger data using the specified retrigger source to clock the operation. Refer to [page 111](#) for more information on triggered scan mode.

[Figure 57](#) illustrates continuous post-trigger mode using a channel list with three entries: channel 0, channel 1, and channel 2. Triggered scan mode is disabled. In this example, post-trigger analog input data is acquired on each clock pulse of the A/D sample clock. The board wraps to the beginning of the channel list and repeats continuously (continuously-paced scan mode).

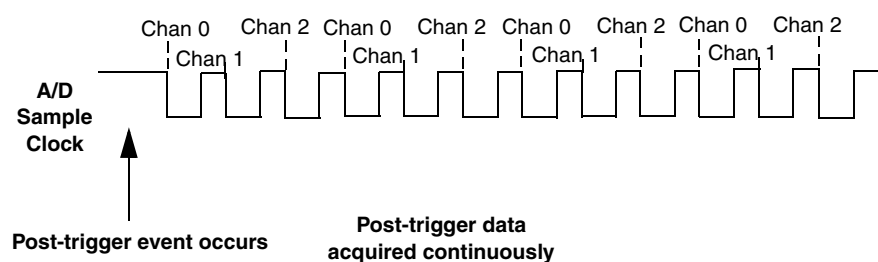

**Figure 57: Continuous Post-Trigger Mode without Triggered Scan**

Figure 58 illustrates the same example using triggered scan mode (either a software or external retrigger source). The multiscan count is 2 indicating that the channel list will be scanned twice per trigger or retrigger. In this example, post-trigger analog input data is acquired on each clock pulse of the A/D sample clock until the channel list has been scanned twice; then, the board waits for the retrigger event. When the retrigger event occurs, the board scans the channel list twice more, acquiring data on each pulse of the A/D sample clock. The process repeats continuously with every specified retrigger event.

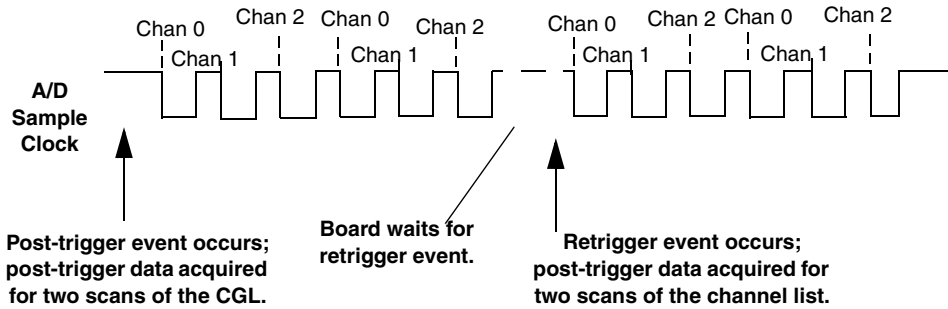

**Figure 58: Continuous Post-Trigger Mode with Triggered Scan**

### Pre-Trigger Acquisition

Use pre-trigger acquisition mode when you want to acquire data before a specific external event occurs.

Using software, specify the following parameters:

- The dataflow as ContinuousPreTrigger.
- The pre-trigger source as Software.
- The post-trigger source as the external digital (TTL) trigger or the external analog threshold trigger.
- If you are using triggered scan mode, the retrigger source as the software retrigger.

Refer to [page 110](#) for more information on the supported conversion modes; refer to [page 113](#) for information on the supported trigger sources.

---


**Note:** When using pre-trigger acquisition, you cannot use an external retrigger in triggered scan mode; refer to [page 111](#) for more information on triggered scan mode.

---

Pre-trigger acquisition starts when you start the operation and stops when the board detects the selected post-trigger source, indicating that the first post-trigger sample was acquired (this sample is ignored).


If you are using software-retriggered scan mode and the post-trigger event has not occurred, the board continues to acquire pre-trigger data using the Triggered Scan Counter to clock the operation. When the post-trigger event occurs, the operation stops. Refer to [page 111](#) for more information on software-retriggered scan mode.

[Figure 59](#) illustrates continuous pre-trigger mode using a channel list of three entries: channel 0, channel 1, and channel 2. In this example, pre-trigger analog input data is acquired on each clock pulse of the A/D sample clock. The board wraps to the beginning of the channel list and the acquisition repeats continuously until the post-trigger event occurs. When the post-trigger event occurs, acquisition stops.

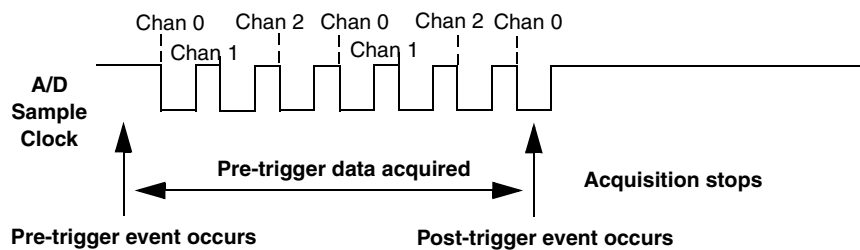

**Figure 59: Continuous Pre-Trigger Mode**

[Figure 60](#) illustrates the same example using software-retriggered triggered scan mode. The multiscan count is 2 indicating that the channel list will be scanned twice per trigger or retrigger. In this example, pre-trigger analog input data is acquired on each clock pulse of the A/D sample clock until the channel list has been scanned twice; then, the board waits for the software retrigger event. When the software retrigger occurs, the process repeats. The process stops when the post-trigger event occurs.

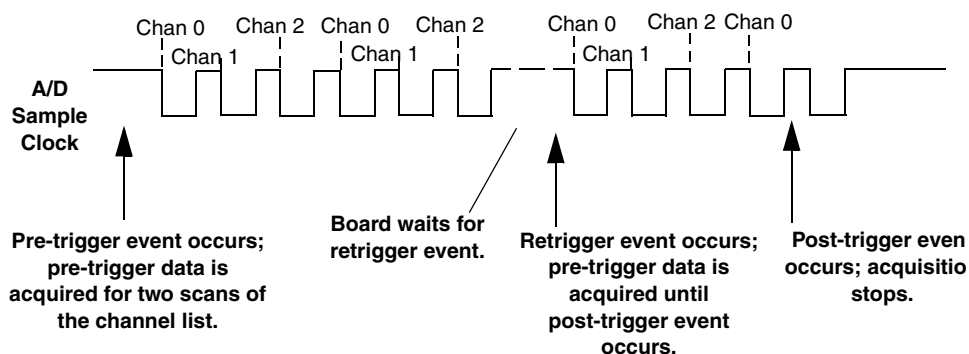

**Figure 60: Continuous Pre-Trigger Mode with Triggered Scan**

## About-Trigger Acquisition

Use about-trigger acquisition mode when you want to acquire data both before and after a specific external event occurs. This operation is equivalent to doing both a pre-trigger and a post-trigger acquisition.

Using software, specify the following parameters:

- The dataflow as ContinuousPrePostTrigger.
- The pre-trigger source as Software.
- The post-trigger source as the external digital (TTL) trigger or the external analog threshold trigger.
- If you are using triggered scan mode, the retrigger source as Software.

Refer to [page 110](#) for more information on the supported conversion modes; refer to [page 113](#) for information on the supported trigger sources.

---

**Note:** When using about-trigger acquisition, you cannot use an external retrigger in triggered scan mode; refer to [page 111](#) for more information on triggered scan mode.


---

The about-trigger acquisition starts when you start the operation. When the board detects the selected post-trigger event, the board stops acquiring pre-trigger data and starts acquiring post-trigger data.

If you are using software-retriggered scan mode and the post-trigger event has not occurred, the board continues to acquire pre-trigger data using the Triggered Scan Counter to clock the operation. If, however, the post-trigger event has occurred, the board continues to acquire post-trigger data using the Triggered Scan Counter to clock the operation.


The about-trigger operation stops when the specified number of post-trigger samples has been acquired or when you stop the operation. Refer to [page 111](#) for more information on software-retriggered scan mode.

[Figure 61](#) illustrates continuous about-trigger mode using a channel list of two entries: channel 0 and channel 1. In this example, pre-trigger analog input data is acquired on each clock pulse of the A/D sample clock, scanning the channel list continuously, until the post-trigger event occurs. When the post-trigger event occurs, post-trigger analog input data is acquired continuously on each clock pulse of the A/D sample clock.

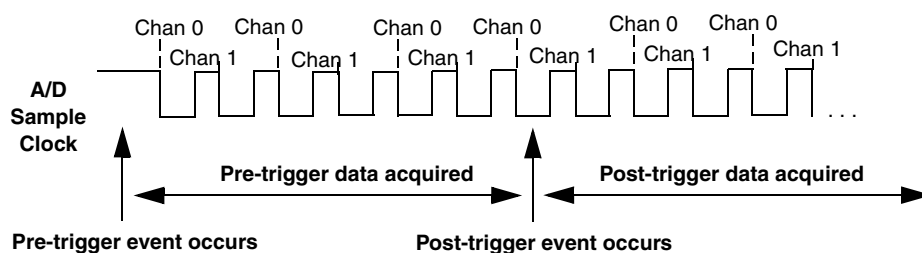

**Figure 61: Continuous About-Trigger Mode**

Figure 62 illustrates the same example using software-retriggered triggered scan mode. The multiscan count is 2 indicating that the channel list will be scanned twice per trigger or retrigger. In this example, pre-trigger analog input data is acquired on each clock pulse of the A/D sample clock for two scans; then, the board waits for the software retrigger event. When the software retrigger occurs, the board begins acquiring pre-trigger data until the post-trigger event occurs. Then, the board finishes scanning the channel list the specified number of times, but acquires the data as post-trigger samples. On all subsequent software retriggers, post-trigger data is acquired.

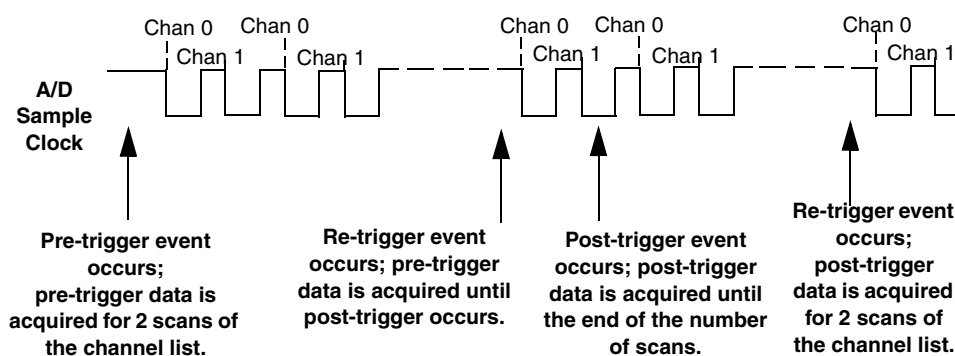

**Figure 62: Continuous About-Trigger Mode with Triggered Scan**

## Data Format and Transfer

To represent unipolar signals, DT3010 Series boards use straight binary data encoding, such as 000 (for 12-bit boards) or 0000 (for 16-bit boards) to represent 0 V, and FFFh (for 12-bit boards) or FFFFh (for 16-bit boards) to represent full-scale. To represent bipolar signals, DT3010 Series boards use offset binary data encoding, such as 000 (for 12-bit boards) or 0000 (for 16-bit boards) to represent negative full-scale, and FFFh (for 12-bit boards) or FFFFh (for 16-bit boards) to represent positive full-scale. Use software to specify the data encoding as binary.

The ADC outputs FFFh (for 12-bit boards) or FFFFh (for 16-bit boards) for above-range signals, and 000 (for 12-bit boards) or 0000 (for 16-bit boards) for below-range signals.

The board packs two input samples (an even and an odd sample) into each transfer to the host computer. Samples corresponding to entries 0, 2, 4, and so on, in the channel list are considered even samples; samples corresponding to entries 1, 3, 5, and so on, in the channel list are considered odd samples.

Using flags internally, the board determines whether the acquired samples are pre-trigger or post-trigger samples. These flags are not transferred to the host computer. The host computer can read the register on the board to determine where the post-trigger data starts. Note that the host computer cannot read data directly from the board; the data must be transferred to the host computer.

Using PCI bus mastering, the board transfers the analog input data to a 256 KB circular buffer, which is dedicated to the hardware, in the host computer. The board treats this buffer as two consecutive 128 KB blocks of memory.

---

**Note:** When you stop an analog input operation, a final block of 32 samples is transferred even if less data is required. The host software ignores the extra samples.

---

The DT3010 Series Device Driver accesses the hardware circular buffer to fill user buffers that you allocate in software. It is recommended that you allocate a minimum of two buffers for analog input operations and add them to the subsystem queue using software. Data is written to the queued input buffers continuously; when no more empty buffers are available on the queue, the operation stops. The data is gap-free.

## Error Conditions

DT3010 Series boards can report the following analog input error conditions to the host computer:

- **A/D Over Sample** – Indicates that the A/D sample clock rate is too fast. This error is reported if a new A/D sample clock pulse occurs while the ADC is busy performing a conversion from the previous A/D sample clock pulse. The host computer can clear this error. To avoid this error, use a slower sampling rate.
- **Input FIFO Overflow** – Indicates that the analog input data is not being transferred fast enough from the Input FIFO across the PCI bus to the host computer. This error is reported when the Input FIFO becomes full; the board cannot get access to the PCI bus fast enough. The host computer can clear this error, but the error will continue to be generated if the Input FIFO is still full. To avoid this error, close other applications that may be running while you are acquiring data. If this has no effect, try using a computer with a faster processor or reduce the sampling rate.
- **Host Block Overflow** – Indicates that the host computer is not handling data from the board fast enough. This error is reported if the board completes the transfer of a block of input data to the circular buffer in the host computer before the host computer has finished reading the last block of data. The host computer can clear this error. If you encounter this error, try allocating more buffers or larger buffers.



If any of these error conditions occurs, the board stops acquiring and transferring data to the host computer.

---

**Note:** DT-Open Layers reports any of these errors as an overrun message.

---

## Analog Output Features

Two analog output (D/A) subsystems are provided on DT3010 Series boards. The first D/A subsystem contains the majority of analog output features. The second is dedicated to threshold triggering only (refer to [page 125](#) for more information on analog threshold triggering).

This section describes the following features of the first D/A subsystem:

- Analog output resolution
- Analog output channels
- Output ranges and gains
- Output filters
- D/A output clock sources
- Trigger sources
- Analog output conversion modes
- Data formats and transfer
- Error conditions

### Analog Output Resolution

DT3010, DT3010-268, DT3010/32, and DT3010/32-268 boards have a fixed analog output resolution of 12 bits. The DT3016 board has a fixed analog output resolution of 16 bits. The analog output resolution cannot be changed in software.

### Analog Output Channels

DT3010 Series boards support two differential analog output channels (DAC0 and DAC1). Use software to specify the channel type. Refer to [Chapter 4](#) starting on [page 49](#) for information on how to wire analog output signals to the board using the screw terminal panel.

Within each DAC, the digital data is double buffered to prevent spurious outputs, then output as an analog signal. Both DACs power up to a value of  $0\text{ V} \pm 10\text{ mV}$ . Note that resetting the board does not clear the values in the DACs.

DT3010 Series boards can output data from a single analog output channel or from two analog output channels. The following subsections describe how to specify the channels.

#### ***Specifying a Single Channel***

The simplest way to output data to a single analog output channel is to specify the channel for a single-value analog output operation using software; refer to [page 125](#) for more information on single-value operations.

You can also specify a single analog output channel using an analog output channel list, described in the next section.

## Specifying One or More Channels

You can specify one or two analog output channels in the analog output channel list, either starting with DAC 0 or with DAC 1.

Values are output simultaneously to the entries in the channel list.

## Output Ranges and Gains

Each DAC on the DT3010 Series board can output bipolar analog output signals in the range of  $\pm 10$  V.

Through software, specify the range for the entire analog output subsystem as -10 V to +10 V, and the gain for each DAC as 1.

If you are using a single-value operation, specify a gain of 1; refer to [page 125](#) for more information on single-value operations.

If you are using an analog output channel list, the subsystem defaults to a gain of 1 for each channel; therefore, you do not have to specify the gain.

## D/A Output Clock Sources

DT3010 Series boards provide two clock sources for pacing the output of each channel in the analog output channel list:

- An internal D/A output clock that uses the 24-bit D/A Counter on the board.
- An external D/A output clock that you can connect to the screw terminal panel.

The following subsections describe the internal and external D/A output clocks in more detail.

### Internal D/A Output Clock

The internal D/A output clock uses a 20 MHz time base. Conversions start on the falling edge of the counter output; the output pulse is active low.

Through software, specify the clock source as internal and the clock frequency at which to pace the analog output operation.

The minimum frequency supported is 1.2 Hz (1.2 Samples/s). For DT3010, DT3010-268, DT3010/32, and DT3010/32-268 boards, the maximum frequency supported is 500 kHz (500 kSamples/s) with 100 mV steps or 200 kHz (200 kSamples/s) with full-scale steps. For DT3016 boards, the maximum frequency supported is 200 kHz (200 kSamples/s) with 100 mV steps or 100 kHz (100 kSamples/s) with full-scale steps. See [page 125](#) for more information on these conversion modes.

## **External D/A Output Clock**

The external D/A output clock is useful when you want to pace analog output operations at rates not available with the internal D/A output clock, if you want to pace at uneven intervals, or if you want to start pacing when an external event occurs.

Connect an external D/A output clock to screw terminal 74 on the DT740 screw terminal panel, screw terminal 46 on the STP268 screw terminal panel (attached to connector J1), or screw terminal 44 on the STP268-EC screw terminal panel. Conversions start on the falling edge of the external D/A output clock signal.

Using software, specify the clock source as external. For DT3010 Series boards, the clock frequency is always equal to the frequency of the external D/A output clock input signal that you connect to the board through the screw terminal panel.

## **Trigger Sources**

A trigger is an event that occurs based on a specified set of conditions. DT3010 Series boards support the following trigger sources for analog output operations:

- Software trigger
- External digital (TTL) trigger
- Analog threshold trigger

This subsection describes these trigger sources in more detail.

### **Software Trigger**

A software trigger event occurs when you start the analog output operation (the computer issues a write to the board to begin conversions). Specify the software trigger source in software.

### **External Digital (TTL) Trigger**

For analog output operations, an external digital trigger event occurs when the DT3010 Series board detects either a rising or falling edge on the External D/A TTL Trigger input signal connected to screw terminal 75 on the DT740 screw terminal panel, screw terminal 45 on the STP268 screw terminal panel (attached to connector J1), or screw terminal 10 on the STP268-EC screw terminal panel. The trigger signal is TTL-compatible.

Using software, specify the trigger source as either an external, positive digital (TTL) trigger for a rising-edge digital trigger (OL\_TRG\_EXTERN for DataAcq SDK users) or an external, negative digital (TTL) trigger for a falling-edge digital trigger (OL\_TRG\_EXTRA for DataAcq SDK users).

## Analog Threshold Trigger

For analog output operations, an analog trigger event occurs when the DT3010 Series board detects a transition from above a threshold level to below a threshold level (falling edge), or a transition from below a threshold level to above a threshold level (rising edge). The following analog threshold trigger sources are available:

- **External Analog Trigger input signal** – This trigger source is supported by the DataAcq SDK; it is not supported by the DT-Open Layers Class Library.

Connect an external analog signal to screw terminal 107 on the DT740 screw terminal panel, screw terminal 39 on the STP268 screw terminal panel (attached to connector J1), or screw terminal 15 on the STP268-EC screw terminal panel. Using software, specify the trigger source as either a rising-edge (OL\_TRG\_EXTRA+1 for DataAcq SDK users) or falling-edge analog threshold trigger (OL\_TRG\_EXTRA+2 for DataAcq SDK users).

- **One of the analog input channels** after gain is applied. Using software, specify the trigger source as either a positive threshold trigger or a negative threshold trigger.

Using software, specify the analog input channel used as the analog threshold trigger as the first channel in the analog input channel list; refer to [page 106](#) for more information.

On DT3010 Series boards, the threshold level is set using a dedicated 8-bit DAC (the second D/A subsystem); the hysteresis is fixed at 50 mV. Using software, program the threshold level by writing a voltage value to the DAC of the second analog output subsystem; this value can range from -10 V to +10 V.

---

**Note:** If you are using an analog threshold trigger to trigger both the A/D and the D/A subsystems, ensure that you use the same analog trigger type for both subsystems (either external or one of the analog input channels). The polarity of the triggers, however, can be different.

---

## Analog Output Conversion Modes

DT3010 Series boards support the following conversion modes:

- **Single-value operations** are the simplest to use but offer the least flexibility and efficiency. Use software to specify the range, gain, and analog output channel (among other parameters), and output the data from that channel. For a single-value operation, you cannot specify a clock source, trigger source, or buffer. Single-value operations stop automatically when finished; you cannot stop a single-value operation.
- **Continuous analog output operations** take full advantage of the capabilities of the DT3010 Series boards. In this mode, you can specify an analog input channel list, clock source, trigger source, buffer, and buffer wrap mode. Two continuous analog output operations are supported: continuously-paced and waveform generation mode. These modes are described in the following subsections.

To stop a continuously-paced analog output operation, you can stop sending data to the board, letting the board stop when it runs out of data, or you can perform either an orderly stop or an abrupt stop using software. In an orderly stop, the board finishes outputting the specified number of samples, then stops; all subsequent triggers are ignored. In an abrupt stop, the board stops outputting samples immediately; all subsequent triggers are ignored.

## ***Continuously-Paced Analog Output***

Use continuously-paced analog output mode if you want to accurately control the period between conversions of individual analog output channels in the analog output channel list.

The host computer transfers digital values to write to the DACs from allocated circular buffers in computer memory to the output FIFO on the board. DT3010, DT3010-268, and DT3016 boards have a 4 kSample output FIFO; DT3010/32 and DT3010/32-268 boards have a 32 kSample output FIFO for demanding analog output operations. Use software to allocate the number of buffers and to specify the values. It is recommended that you allocate a minimum of two buffers.

When it detects a trigger, the board outputs the values in the output FIFO to the DACs at the same time. Even samples (0, 2, 4, and so on) are written to entry 0 in the channel list; odd samples (1, 3, 5, and so on) are written to entry 1 in the channel list. The operation repeats continuously until no more buffers are on the subsystem queue or you stop the operation. Refer to [page 127](#) for more information on buffers.

Ensure that the host computer transfers data to the output FIFO fast enough so that the output FIFO does not empty completely; otherwise, an output FIFO underrun error results. Note that the output FIFO counter increments each time the host loads a value into the output FIFO and decrements each time the DAC reads a value from the output FIFO; the counter is reset to 0 when the output FIFO is reset. To avoid the output FIFO underrun error in continuously-paced mode, the host computer can read the output FIFO counter to determine how many samples remain in the output FIFO, and transfer more data before the output FIFO empties.

The conversion rate is determined by the frequency of the D/A output clock. For DT3010, DT3010-268, DT3010/32, and DT3010/32-268 boards, the maximum throughput rate in this mode is 500 kHz (500 kSamples/s) in 100 mV steps or 200 kHz (200 kSamples/s) in full-scale steps. For DT3016 boards, the maximum throughput rate in this mode is 200 kHz (200 kSamples/s) in 100 mV steps or 100 kHz (100 kSamples/s) in full-scale steps. Note that rate is system-dependent. Refer to [page 123](#) for more information on the D/A output clock.

To select continuously-paced analog output mode, use software to specify the following parameters:

- Set the dataflow as Continuous.
- Set WrapSingleBuffer to False to use multiple buffers. A minimum of two buffers is recommended.
- Set the trigger source as any of the supported trigger sources. Refer to [page 124](#) for more information on the supported trigger sources.

## Waveform Generation

Use waveform generation mode if you want to output waveforms repetitively.

Before this process can begin, the host computer must transfer the entire waveform pattern to output to the DACs from a single buffer allocated in computer memory into the output FIFO on the board. Use software to allocate a single buffer and to specify the waveform pattern.

For the DT3010, DT3010-268, and DT3016 boards, if you are using a single DAC, the waveform pattern can range from 2 to 4,096 samples; if you are using two DACs, the waveform pattern can range from 2 to 2,048 samples. For the DT3010/32 and DT3010/32-268 boards, if you are using a single DAC, the waveform pattern can range from 2 to 32,768 samples; if you are using two DACs, the waveform pattern can range from 2 to 16,384 samples. Specify both DACs in the analog output channel list.

When it detects a trigger, the board cycles through the analog output channel list, converting and outputting the specified waveform for the specified DACs. When the output FIFO empties, the board issues a retransmit pulse to the output FIFO. This allows the board to output the same pattern continuously to the DACs without having to reload the output FIFOs. The buffer wrap mode must be single in this mode; refer to [page 127](#) for more information on buffers.

The conversion rate is determined by the frequency of the D/A output clock. For DT3010, DT3010-268, DT3010/32, and DT3010/32-268 boards, the maximum throughput rate in this mode is 500 kHz (500 kSamples/s) in 100 mV steps or 200 kHz (200 kSamples/s) in full-scale steps. For DT3016 boards, the maximum throughput rate in this mode is 200 kHz (200 kSamples/s) in 100 mV steps or 100 kHz (100 kSamples/s) in full-scale steps. Refer to [page 123](#) for more information on the D/A output clock.

To select waveform generation mode, use software to specify the following parameters:

- Set the dataflow to Continuous.
- Set WrapSingleBuffer to True to use a single buffer.
- Set the trigger source to any of the supported trigger sources. Refer to [page 124](#) for more information on the supported trigger sources.

## Data Format and Transfer

Data from the host computer must use offset binary data encoding for analog output signals, such as 000 (for 12-bit boards) or 0000 (for 16-bit boards) to represent -10 V, and FFFh (for 12-bit boards) or FFFFh (for 16-bit boards) to represent +10 V. Using software, specify the data encoding as binary.

The host computer transfers data as 32-bit words from one or more allocated circular buffers in computer memory to the output FIFO on the board. DT3010 Series boards act as PCI slaves to the host computer when performing analog output operations.

The host computer must pack two output samples (an even and an odd sample) into each transfer to the DT3010 Series board. The even sample is written to the output FIFO first, followed by the odd sample. If the analog output channel list contains two DACs, the even samples (0, 2, 4, and so on) are written to channel entry 0 in the analog output channel list; the odd samples (1, 3, 5, and so on) are written to channel entry 1 in the analog output channel list. If the analog output channel list contains one DAC, all the samples are written to the DAC, alternating between even and odd samples.

Note that for continuously-paced analog output operations, the data from the circular buffers in host computer memory can wrap multiple times. Data is output from each of the buffers on the queue; when no more buffers are on the queue, the operation stops.

In waveform generation mode, the data from a single circular buffer is written once to the output FIFO on the board (wrap mode is single); the board then continuously outputs the data. That is, once all the data in the buffer is written to the output FIFO on the board, the host computer is finished transferring data; the board recycles the data in the output FIFO without using the bandwidth of the PCI bus or host processor, and the process repeats continuously until you stop the operation.

## Error Conditions

DT3010 Series boards can report an output FIFO underflow error to the host computer. This error indicates that the analog output data was not being transferred fast enough across the PCI bus from the host computer to the output FIFO on the board.

If the D/A output clock occurs while the output FIFO is empty, an error is not reported since the most likely cause is that the host computer has no more data to output; in this case, the last value received from the host computer is output by the specified DACs continuously until the board is powered down or new data becomes available. If, however, the host does an additional write to the output FIFO (after the D/A output clock occurred while the output FIFO was empty), the data is written to the DACs and the output FIFO Underflow error is reported. This error has no effect on board operation; the host computer can clear this error.

To avoid this error, ensure that the host computer provides data to the output FIFO faster than the DACs are converting the data. You can read the value of the output FIFO counter to determine how many samples are in the output FIFO.

If this error condition occurs, the host computer stops transferring data to the board and the board continues to output the last data transferred to it by the host computer.



## Digital I/O Features

This section describes the following features of the digital I/O subsystem:

- Digital I/O lines
- Digital I/O resolution
- Digital I/O operation modes

### Digital I/O Lines

DT3010 Series boards support 16 digital I/O lines through the digital input (DIN) and output (DOUT) subsystems; both subsystems use the same digital I/O lines. These lines are divided into two banks of eight: Bank A, lines 0 to 7; and Bank B, lines 0 to 7. You can use each bank as either an input port or an output port; all eight lines within a bank have the same configuration. For example, if you use Bank A as an input port (port 0), lines 0 to 7 of Bank A are configured as inputs. Likewise, if you use Bank B as an output port (port 1), lines 0 to 7 of Bank B are configured as outputs.

Specify the digital I/O line to read or write in a single-value digital I/O operation; refer to [page 129](#) for more information on single-value operations.

A digital line is high if its value is 1; a digital line is low if its value is 0.

On power up or reset, no digital data is output from the board.

### Digital I/O Resolution

Using software, specify the number of banks to read by specifying the resolution as 8 (for eight lines) or 16 (for 16 lines). If you specify a resolution of 8, two digital I/O subsystems are available. Element 0 (the first subsystem) corresponds to the Bank A, lines 0 to 7. Element 1 (the second subsystem) corresponds to Bank B, lines 0 to 7. If you specify a resolution of 16, one subsystem is available.

---

**Note:** When the resolution is 16, digital I/O lines 0 to 7 of Bank B are represented as bits 8 to 15 of the digital value.

---

### Digital I/O Operation Modes

DT3010 Series boards support the following digital I/O operation modes:

- **Single-value operations** are the simplest to use but offer the least flexibility and efficiency. Use software to specify the digital I/O line, and a gain of 1 (the gain is ignored). Data is then read from or written to the digital I/O line. For a single-value operation, you cannot specify a clock or trigger source.

Single-value operations stop automatically when finished; you cannot stop a single-value operation.

- **Continuous digital input** takes full advantage of the capabilities of the DT3010 Series boards. In this mode, you enter all 16 digital input lines as channel 32 of the analog input channel list using software. This mode is programmed through the A/D subsystem. Using this mode, you can specify a clock source, scan mode, trigger source, trigger acquisition mode, and buffer for the digital input operation. Refer to [page 106](#) for more information on specifying digital input lines for a continuous digital input operation.
- **Dynamic digital output** (supported by the DataAcq SDK only) is useful for synchronizing and controlling external equipment and allows you to output data to two dynamic digital output lines each time an analog input value is acquired. This mode is programmed through the A/D subsystem; refer to [page 106](#) for more information.

## Counter/Timer Features


The counter/timer circuitry on the board provides the clocking circuitry used by the A/D and D/A subsystems as well as several user counter/timer features. This section describes the following user counter/timer features:

- Units
- C/T clock sources
- Gate types
- Pulse types and duty cycles
- Counter/timer operation modes

### Units

DT3010 Series boards support four user 16-bit counter/timer units (called counters); counters are numbered 0, 1, 2, and 3.

Each counter accepts a clock input signal and gate input signal and outputs a clock output signal (also called a pulse output signal), as shown in [Figure 63](#).

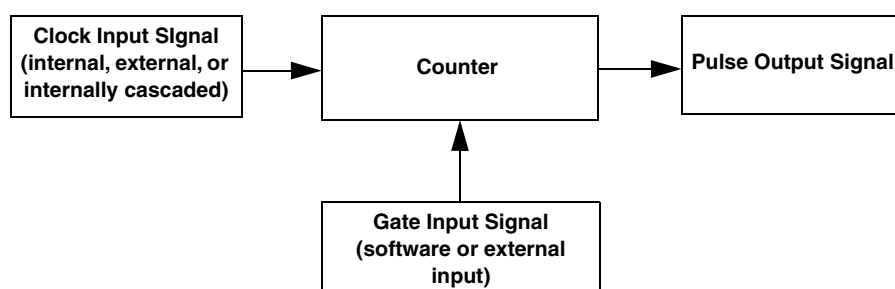

**Figure 63: Counter/Timer Channel**

Each counter corresponds to a counter/timer (C/T) subsystem. To specify the counter to use in software, specify the appropriate C/T subsystem. For example, counter 0 corresponds to C/T subsystem element 0; counter 3 corresponds to C/T subsystem element 3.

### C/T Clock Sources

The following clock sources are available for the user counters:

- Internal C/T clock
- External C/T clock
- Internally cascaded clock

Refer to the following subsections for more information on these clock sources.

## Internal C/T Clock

The internal C/T clock uses a 20 MHz time base. Counter/timer operations start on the rising edge of the clock input signal.

Through software, specify the clock source as internal and the frequency at which to pace the counter/timer operation (this is the frequency of the clock output signal). The maximum frequency that you can specify for the clock output signal is 10 MHz. The minimum frequency that you can specify for the clock output signal is 305.18 Hz.

## External C/T Clock

The external C/T clock is useful when you want to pace counter/timer operations at rates not available with the internal C/T clock or if you want to pace at uneven intervals. The rising edge of the external C/T clock input signal is the active edge.

Using software, specify the clock source as external and the clock divider used to determine the frequency at which to pace the operation (this is the frequency of the clock output signal). The minimum clock divider that you can specify is 2.0; the maximum clock divider that you can specify is 65,536. For example, if you supply an external C/T clock with a frequency of 5 MHz and specify a clock divider of 5, the resulting frequency of the external C/T clock output signal is 1 MHz. The resulting frequency of the external C/T clock output signal must not exceed 2.5 MHz.

Connect the external C/T clock to the board through the DT740, STP268, or STP268-EC screw terminal panel. [Table 11](#) lists the screw terminals that correspond to the external C/T clock signals of each counter/timer.

**Table 11: External C/T Clock Input Signals**

Counter/Timer	Screw Terminal on the DT740	Screw Terminal on the STP268	Screw Terminal on STP268-EC
0	TB58	TB54 <sup>a</sup>	TB5
1	TB62	TB58 <sup>a</sup>	TB38
2	TB66	TB54 <sup>b</sup>	— <sup>c</sup>
3	TB70	TB58 <sup>b</sup>	— <sup>c</sup>

a. STP268 must be attached to connector J1.

b. STP268 must be attached to connector J2.

c. To access counter/timers 2 or 3, connect an STP268 screw terminal panel to connector J2 on the DT3010-268 board.

## Internally Cascaded Clock

You can also internally route the clock output signal from one user counter to the clock input signal of the next user counter to internally cascade the counters. In this way, you can create a 32-bit counter without externally connecting two counters together. DT3010 Series boards support software cascading on counters 0 and 1, 1 and 2, and 2 and 3.

Specify internal cascade mode in software. The rising edge of the clock input signal is active.

Through software, specify the clock source as internal and the frequency at which to pace the counter/timer operation (this is the frequency of the clock output signal). The maximum frequency that you can specify for the clock output signal is 10 MHz. For a 32-bit cascaded counter, the minimum frequency that you can specify for the clock output signal is 0.00465 Hz, which corresponds to a rate of once every 215 seconds.

---

**Note:** In software, specify the clock input and gate input for the first counter in the cascaded pair. For example, if counters 1 and 2 are cascaded, specify the clock input and gate input for counter 1.

---

## Gate Types

The active edge or level of the gate input to the counter enables counter/timer operations. The operation starts when the clock input signal is received. DT3010 Series boards provide the following gate input types:

- **None** – A software command enables any specified counter/timer operation immediately after execution. This gate type is useful for all counter/timer modes.
- **Logic-low level external gate input** – Enables a counter/timer operation when the external gate signal is low, and disables the counter/timer operation when the external gate signal is high. Note that this gate type is used only for event counting, frequency measurement, and rate generation; refer to [page 135](#) for more information on these modes.
- **Logic-high level external gate input** – Enables a counter/timer operation when the external gate signal is high, and disables a counter/timer operation when the external gate signal is low. Note that this gate type is used only for event counting, frequency measurement, and rate generation; refer to [page 135](#) for more information on these modes.
- **Falling-edge external gate input** – Enables a counter/timer operation on the transition from the high level to the low level (falling edge). In software, this is called a low-edge gate type. Note that this gate type is used only for one-shot and repetitive one-shot mode; refer to [page 143](#) for information on these modes.
- **Rising-edge external gate input** – Enables a counter/timer operation on the transition from the low level to the high level (rising edge). In software, this is called a high-edge gate type. Note that this gate type is used only for one-shot and repetitive one-shot mode; refer to [page 143](#) for information on these modes.

Specify that gate type in software.

[Table 12](#) lists the screw terminals that correspond to the gate input signals of each counter/timer.

**Table 12: Gate Input Signals**

Counter/Timer	Screw Terminal on the DT740	Screw Terminal on the STP268	Screw Terminal on STP268-EC
0	TB60	TB56 <sup>a</sup>	TB37
1	TB64	TB60 <sup>a</sup>	TB36
2	TB68	TB56 <sup>b</sup>	– <sup>c</sup>
3	TB72	TB60 <sup>b</sup>	–

a. STP268 must be attached to connector J1.

b. STP268 must be attached to connector J2.

c. To access counter/timers 2 or 3, connect an STP268 screw terminal panel to connector J2 on the DT3010-268 board.

## Pulse Output Types and Duty Cycles

The DT3010 Series boards can output pulses from each counter/timer. [Table 13](#) lists the screw terminals that correspond to the pulse output signals of each counter/timer.

**Table 13: Pulse Output Signals**

Counter/Timer	Screw Terminal on the DT740	Screw Terminal on the STP268	Screw Terminal on STP268-EC
0	TB59	TB55 <sup>a</sup>	TB3
1	TB63	TB59 <sup>a</sup>	TB2
2	TB67	TB55 <sup>b</sup>	– <sup>c</sup>
3	TB71	TB59 <sup>b</sup>	– <sup>c</sup>

a. STP268 must be attached to connector J1.

b. STP268 must be attached to connector J2.

c. To access counter/timers 2 or 3, connect an STP268 screw terminal panel to connector J2 on the DT3010-268 board.

DT3010 Series boards support the following pulse output types on the clock output signal:

- **High-to-low transitions** – The low portion of the total pulse output period is the active portion of the counter/timer clock output signal.
- **Low-to-high transitions** – The high portion of the total pulse output period is the active portion of the counter/timer pulse output signal.

You specify the pulse output type in software.

The duty cycle (or pulse width) indicates the percentage of the total pulse output period that is active. A duty cycle of 50, then, indicates that half of the total pulse is low and half of the total pulse output is high. You specify the duty cycle in software.

Figure 64 illustrates a low-to-high pulse with a duty cycle of approximately 30%.

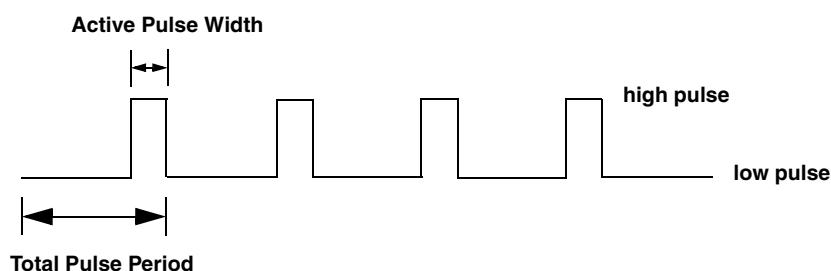


Figure 64: Example of a Low-to-High Pulse Output Type

## Counter/Timer Operation Modes

DT3010 Series boards support the following counter/timer operation modes:

- Event counting
- Frequency measurement
- Rate generation
- One-shot
- Repetitive one-shot

The following subsections describe these modes in more detail.

### Event Counting


Use event counting mode to count events from the counter's associated clock input source.

If you are using one counter, you can count a maximum of 65,536 events before the counter rolls over to 0 and starts counting again. If you are using a cascaded 32-bit counter, you can count a maximum of 4,294,967,296 events before the counter rolls over to 0 and starts counting again.

In event counting mode, use an external C/T clock source; refer to [page 132](#) for more information on the external C/T clock source.


Using software, specify the counter/timer mode as event counting (count), the C/T clock source as external, and the gate type that enables the operation. Refer to [page 134](#) for information on gates.

Ensure that the signals are wired appropriately. [Figure 65](#) shows one example of connecting an event counting application. This example uses the DT740 screw terminal panel and user counter 0; rising clock edges are counted while the gate is active.

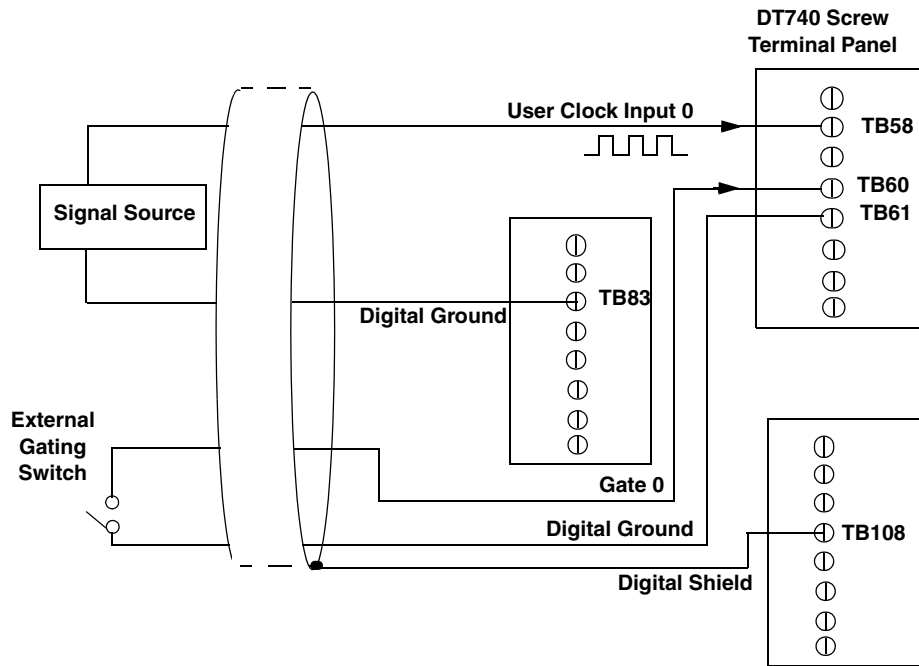

**Figure 65: Connecting Event Counting Signals (Shown for Clock Input 0 and External Gate 0)**

Figure 66 shows an example of an event counting operation. In this example, the gate type is low level.

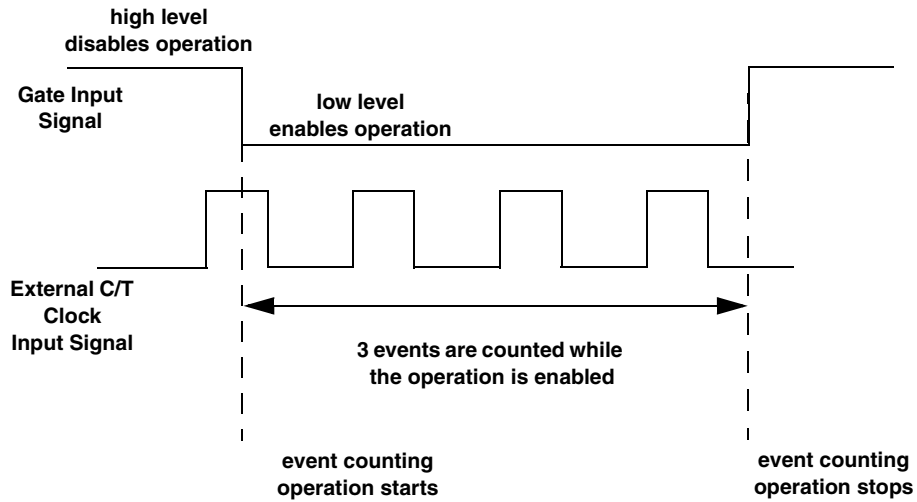


**Figure 66: Example of Event Counting**



## Frequency Measurement

Use frequency measurement mode to measure the frequency of the signal from counter's associated clock input source over a specified duration. In this mode, use an external C/T clock source; refer to [page 131](#) for more information on the external C/T clock source.

One way to perform a frequency measurement is to use the same wiring as an event counting application that does not use an external gate signal, as shown in [Figure 67](#).

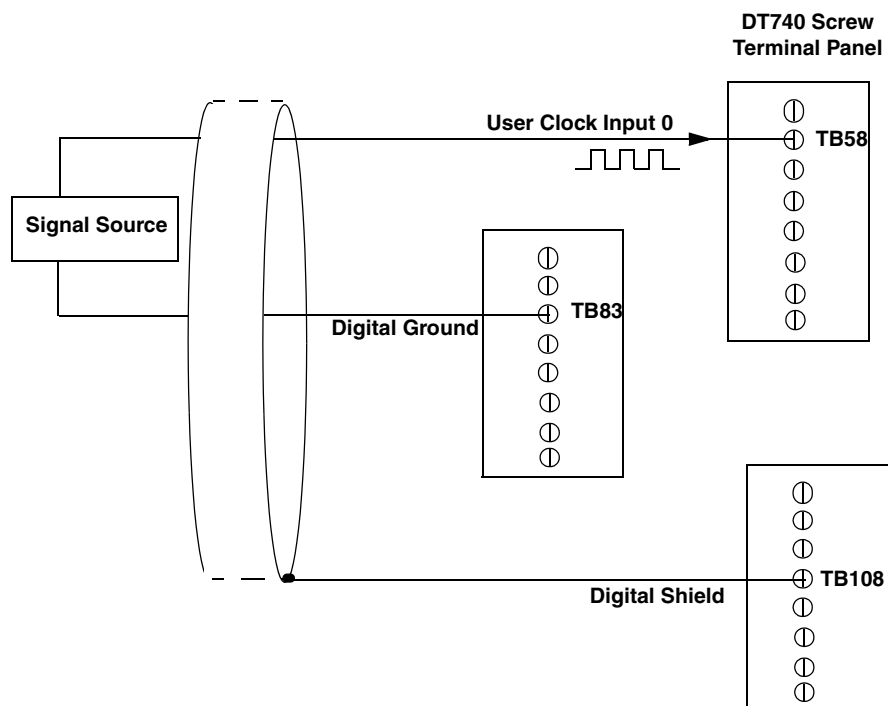


**Figure 67: Connecting Frequency Measurement Signals without an External Gate Input (Shown for Clock Input 0)**

In this configuration, use software to specify the counter/timer mode as frequency measurement or event counting, and the duration of the Windows timer over which to measure the frequency. (The Windows timer uses a resolution of 1 ms.) In this configuration, frequency is determined using the following equation:

$$\text{Frequency Measurement} = \frac{\text{Number of Events}}{\text{Duration of the Windows Timer}}$$

If you need more accuracy than the Windows timer provides, you can connect a pulse of a known duration (such as a one-shot output of another user counter) to the external gate input, as shown in [Figure 68](#).

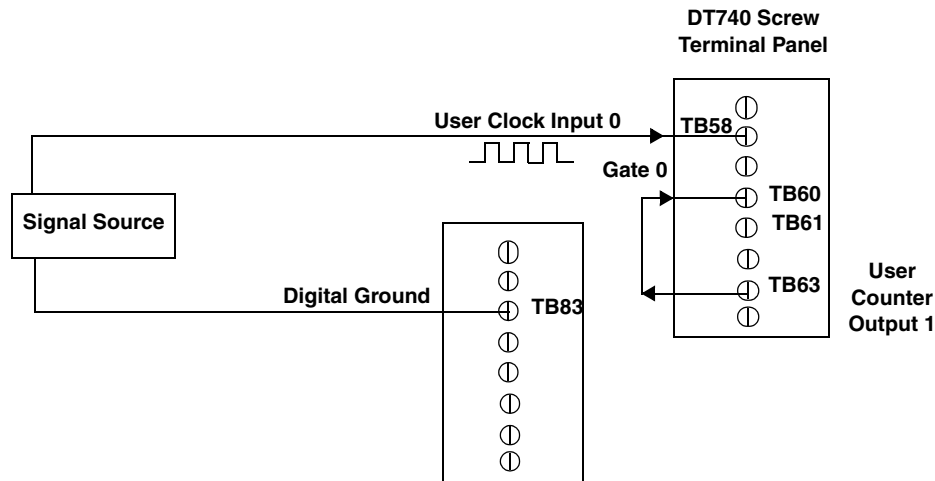

**Figure 68: Connecting Frequency Measurement Signals  
(Shown for Clock Input 0 and External Gate 0)**

In this configuration, use software to set up the counter/timers as follows:


1. Set up one of the counter/timers for one-shot mode, specifying the clock source, clock frequency, gate type, and type of output pulse (high or low).
2. Set up the counter/timer that will measure the frequency for event counting mode, specifying the clock source to count, and the gate type (this should match the pulse output type of the counter/timer set up for one-shot mode).
3. Start both counters (events are not counted until the active period of the one-shot pulse is generated).
4. Read the number of events counted. (Allow enough time to ensure that the active period of the one-shot occurred and that events have been counted.)
5. Determine the measurement period using the following equation:

$$\text{Measurement period} = \frac{1}{\text{Clock Frequency}} * \text{Active Pulse Width}$$

6. Determine the frequency of the clock input signal using the following equation:

$$\text{Frequency Measurement} = \frac{\text{Number of Events}}{\text{Measurement Period}}$$

Figure 69 shows an example of a frequency measurement operation. In this example, three events are counted during a duration of 300 ms. The frequency, then, is 10 Hz, since  $10 \text{ Hz} = 3 / (.3 \text{ s})$ .

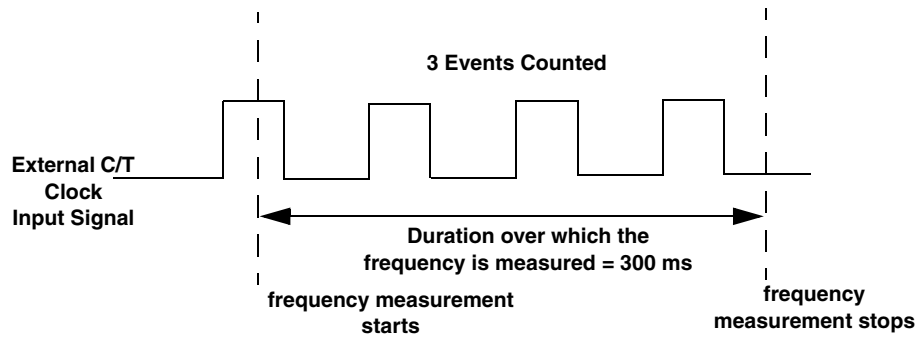

**Figure 69: Example of Frequency Measurement**

### **Rate Generation**


Use rate generation mode to generate a continuous pulse output signal from the counter; this mode is sometimes referred to as continuous pulse output or pulse train output. You can use this pulse output signal as an external clock to pace other operations, such as analog input, analog output, or other counter/timer operations.

While the pulse output operation is enabled, the counter outputs a pulse of the specified type and frequency continuously. As soon as the operation is disabled, rate generation stops.

The period of the output pulse is determined by the clock input signal and the external clock divider. If you are using one counter (not cascaded), you can output pulses using a maximum frequency of 10 MHz (this is the frequency of the clock output signal). In rate generation mode, either the internal or external C/T clock input source is appropriate depending on your application; refer to [page 131](#) for more information on the C/T clock source.


Using software, specify the counter/timer mode as rate generation (rate), the C/T clock source as either internal or external, the polarity of the output pulses (high-to-low transitions or low-to-high transitions), the duty cycle of the output pulses, and the gate type that enables the operation. Refer to [page 134](#) for more information on pulse output signals and to [page 133](#) for more information on gate types.

Ensure that the signals are wired appropriately. [Figure 70](#) shows one example of connecting a pulse output operation. This example uses the DT740 screw terminal panel, user counter 0, and a software gate type.

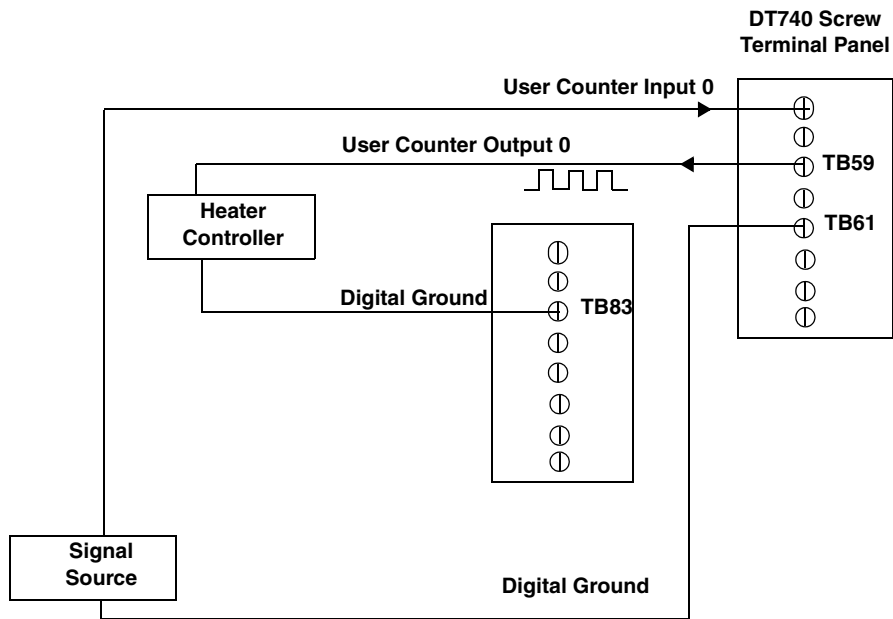


**Figure 70: Connecting Rate Generation Signals  
(Shown for Counter Output 0; a Software Gate is Used)**

Figure 71 shows an example of an enabled rate generation operation using an external C/T clock source with an input frequency of 4 kHz, a clock divider of 4, a low-to-high pulse type, and a duty cycle of 75%. (The gate type does not matter for this example.) A 1 kHz square wave is the generated output. Figure 72 shows the same example using a duty cycle of 25%.

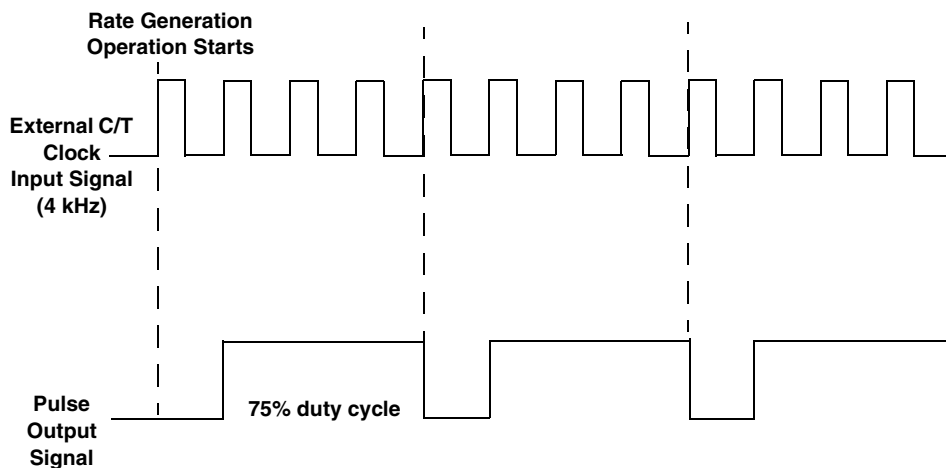

**Figure 71: Example of Rate Generation Mode with a 75% Duty Cycle**

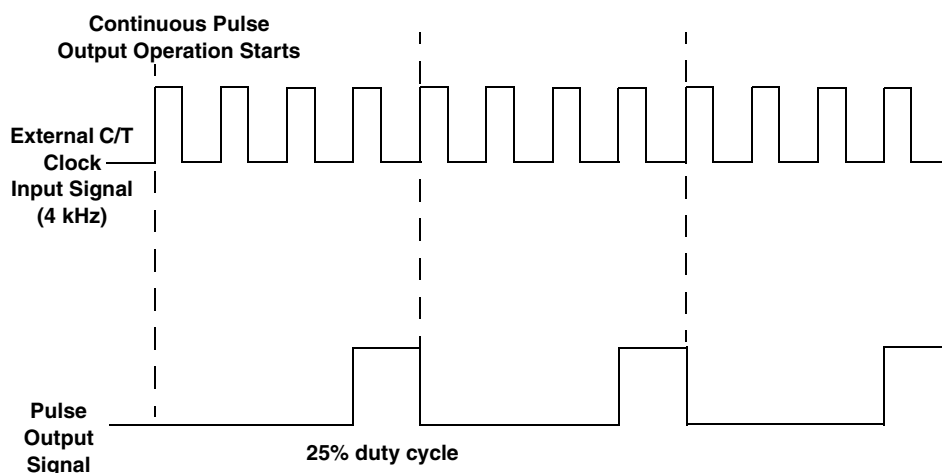

**Figure 72: Example of Rate Generation Mode with a 25% Duty Cycle**

## One-Shot

Use one-shot mode to generate a single pulse output signal from the counter when the operation is triggered (determined by the gate input signal). You can use this pulse output signal as an external digital (TTL) trigger to start other operations, such as analog input or analog output operations.

When the one-shot operation is triggered, a single pulse is output; then, the one-shot operation stops. All subsequent clock input signals and gate input signals are ignored.

The period of the output pulse is determined by the clock input signal. In one-shot mode, the internal C/T clock source is more useful than an external C/T clock source; refer to [page 131](#) for more information on the internal C/T clock source.

Using software, specify the counter/timer mode as one-shot, the clock source as internal, the polarity of the output pulse (high-to-low transition or low-to-high transition), and the gate type to trigger the operation. Refer to [page 134](#) for more information on pulse output types and to [page 133](#) for more information on gate types.

---

**Note:** In the case of a one-shot operation, the pulse width is set to 100% automatically.

---

Ensure that the signals are wired appropriately. [Figure 73](#) shows one example of connecting a pulse output operation. This example uses the DT740 screw terminal panel and user counter 0.

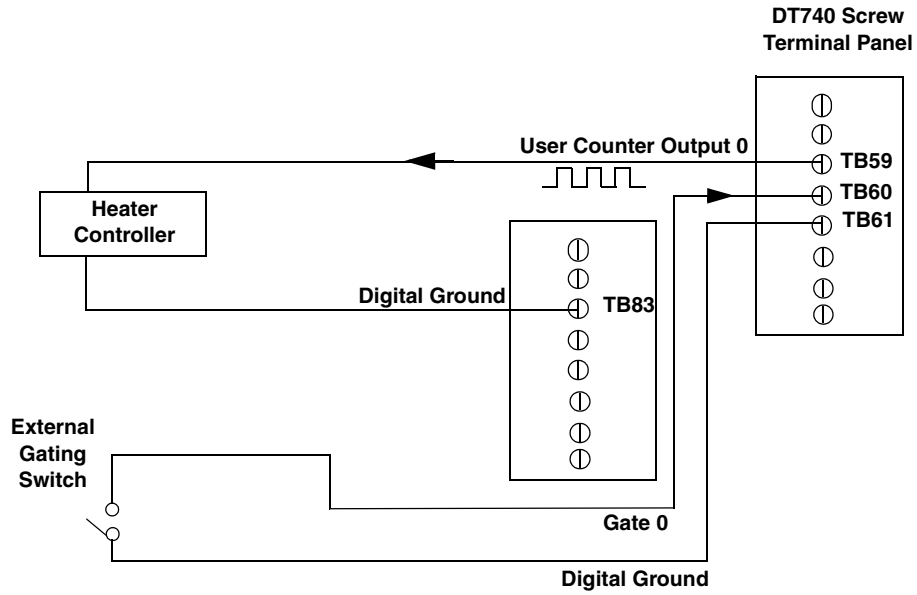


Figure 73: Connecting One-Shot Signals (Shown for Counter Output 0 and Gate 0)

Figure 74 shows an example of a one-shot operation using an external gate input (rising edge), a clock output frequency of 1 kHz (pulse period of 1 ms), and a low-to-high pulse type.

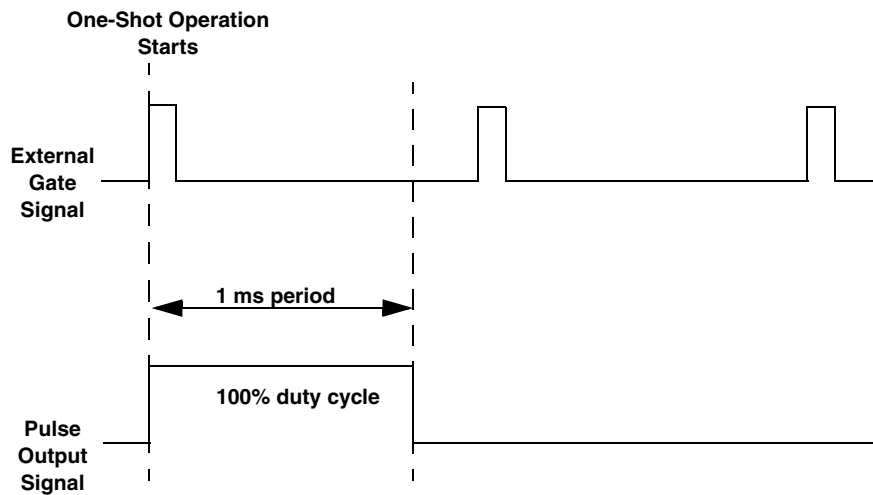


Figure 74: Example of One-Shot Mode

## Repetitive One-Shot

Use repetitive one-shot mode to generate a pulse output signal each time the board detects a trigger (determined by the gate input signal). You can use this mode to clean up a poor clock input signal by changing its pulse width, then outputting it.

In repetitive one-shot mode, the internal C/T clock source is more useful than an external C/T clock source; refer to [page 131](#) for more information on the internal C/T clock source.

Use software to specify the counter/timer mode as repetitive one-shot, the polarity of the output pulses (high-to-low transitions or low-to-high transitions), the C/T clock source, and the gate type to trigger the operation. Refer to [page 134](#) for more information on pulse output types and to [page 133](#) for more information on gates.

---


**Note:** In the case of a repetitive one-shot operation, the pulse width is set to 100% automatically.

Triggers that occur while the pulse is being output are not detected by the board.

---

When the one-shot operation is triggered (determined by the gate input signal), a pulse is output. When the board detects the next trigger, another pulse is output. This operation continues until you stop the operation.

[Figure 75](#) shows an example of a repetitive one-shot operation using the DT740 screw terminal panel, an external gate (rising edge), a clock output frequency of 1 kHz (one pulse every 1 ms), and a low-to-high pulse type.

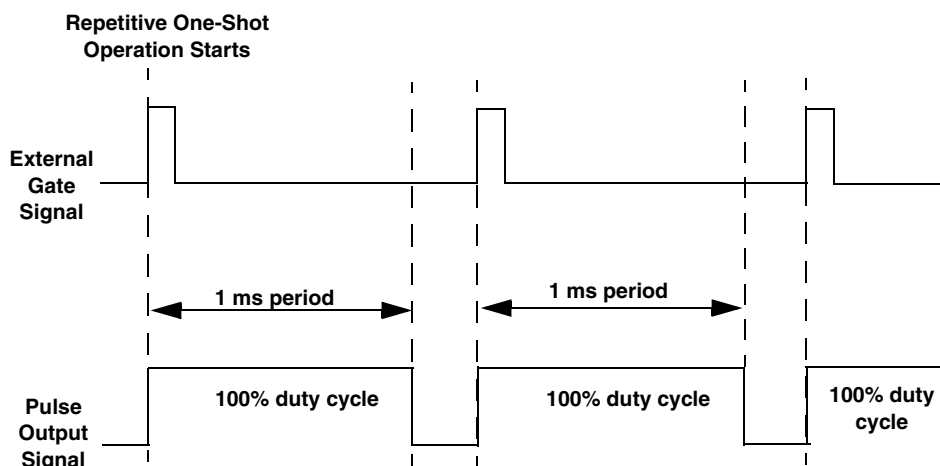

**Figure 75: Example of Repetitive One-Shot Mode**

## Synchronizing A/D and D/A Subsystems

You can synchronize the operation of the A/D and D/A subsystems providing that they are not performing single-value operations. Refer to [page 110](#) and [page 125](#) for more information on single-value operations.

You can synchronize the A/D and D/A subsystems in two ways: by synchronizing the triggers and by synchronizing the clocks. This section describes these two methods.

### Synchronizing the Triggers

You can synchronize the triggers of the A/D and D/A subsystems as follows:

- **Software trigger** – Using software, specify the trigger source for the A/D and D/A subsystems as the software trigger. Then, using software, allocate a simultaneous start list, put the A/D and D/A subsystems on the simultaneous start list, prestart the subsystems, and start the subsystems. When started, both subsystems are triggered simultaneously.
- **External digital (TTL) trigger** – Using software, specify the trigger source for the A/D and D/A subsystems as the external digital (TTL) trigger. Then, wire an external digital TTL trigger to both the A/D subsystem and the D/A subsystem. Using software, allocate a simultaneous start list, put the A/D and D/A subsystems on the simultaneous start list, prestart the subsystems, then start the subsystems. When started, both subsystems are triggered simultaneously when the external digital event occurs.
- **External Analog threshold trigger** – This option is supported only when using the DataAcq SDK; it is not supported using the DT-Open Layers for .NET Class Library.

Using software, specify the trigger source for the A/D and D/A subsystems as the external analog threshold trigger. Then, wire an external analog threshold trigger to the screw terminal panel. Using software, allocate a simultaneous start list, put the A/D and D/A subsystems on the simultaneous start list, prestart the subsystems, then start the subsystems. When started, both subsystems are triggered simultaneously when the external analog event occurs.

- **One of the analog input channels** – Using software, specify the trigger source for the A/D and D/A subsystems as one of the analog input channels. Then, wire an external analog threshold trigger to one of the 32 or 16 analog input channels (depending on the channel type specified). Using software, allocate a simultaneous start list, put the A/D and D/A subsystems on the simultaneous start list, prestart the subsystems, then start the subsystems. When started, both subsystems are triggered simultaneously when the external analog event occurs on the specified analog input channel.



## Synchronizing the Clocks

You can synchronize the clocks of the A/D and D/A subsystems as follows:

- **Internal Sample Clocks** – Using software, specify the clock source as the internal A/D sample clock for the A/D subsystem and the internal D/A output clock for the D/A subsystem. Specify the same frequency for both internal clock sources. Then, specify the trigger source for the A/D and D/A subsystems as the software trigger. When started, both subsystems are triggered and clocked simultaneously.
- **External Sample Clocks** – Using software, specify the clock source as the external A/D sample clock for the A/D subsystem and as the external D/A output clock for the D/A subsystem. Then, wire an external sample clock to both the A/D subsystem and the D/A subsystem. Then, specify a synchronous trigger source for the A/D and D/A subsystems (refer to [page 144](#)). When started, both subsystems are triggered and clocked simultaneously.





## ***Supported Device Driver Capabilities***

Data Flow and Operation Options.....	149
Buffering .....	150
Triggered Scan Mode .....	150
Gain .....	152
Channels .....	151
Ranges .....	152
Resolution .....	152
Thermocouple and RTD Support.....	153
IEPE Support.....	153
Triggers .....	154
Clocks.....	155
Counter/Timers .....	156

The DT3010 Series Device Driver provides support for the analog input (A/D), analog output (D/A), digital input (DIN), digital output (DOUT), and counter/timer (C/T) subsystems. For information on how to configure the device driver, refer to [page 34](#).

**Table 14: DT3010 Series Subsystems**

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Total Subsystems on Board	1	2 <sup>a</sup>	2 <sup>b</sup>	2 <sup>b</sup>	4	0

- a. The second D/A subsystem has limited capabilities and is used for threshold triggering only. It has an output range of  $\pm 10$  V.
- b. DIN and DOUT subsystems use the same DIO lines.

The tables in this chapter summarize the features available for use with the DT-Open Layers for .NET Class Library and the DT3010 Series boards. The DT-Open Layers for .NET Class Library provides properties that return support information for specified subsystem capabilities.

The first row in each table lists the subsystem types. The first column in each table lists all possible subsystem capabilities. A description of each capability is followed by the property used to describe that capability in the DT-Open Layers for .NET Class Library.

---

**Note:** Blank fields represent unsupported options.

---

For more information, refer to the description of these properties in the DT-Open Layers for .NET Class Library online help or *DT-Open Layers for .NET Class Library User's Manual*.

## Data Flow and Operation Options

Table 15: DT3010 Series Data Flow and Operation Options

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Single-Value Operation Support <b>SupportsSingleValue</b>	Yes	Yes	Yes	Yes		
Simultaneous Single-Value Output Operations <b>SupportsSetSingleValues</b>						
Continuous Operation Support <b>SupportsContinuous</b>	Yes	Yes	Yes <sup>a</sup>		Yes	
Continuous Operation until Trigger <b>SupportsContinuousPreTrigger</b>	Yes					
Continuous Operation before & after Trigger <b>SupportsContinuousPrePostTrigger</b>	Yes					
Waveform Operations Using FIFO Only <b>SupportsWaveformModeOnly</b>						
Simultaneous Start List Support <b>SupportsSimultaneousStart</b>	Yes	Yes				
Supports Programmable Synchronization Modes <b>SupportsSynchronization</b>						
Synchronization Modes <b>SynchronizationMode</b>						
Interrupt Support <b>SupportsInterruptOnChange</b>						
Output FIFO Size <b>FifoSize</b>		4 kSample or 32 kSample <sup>b</sup>				
Auto-Calibrate Support <b>SupportsAutoCalibrate</b>						

- a. All 16 bits of the DIO lines are assigned to A/D input channel 32. While the DIN subsystem itself is incapable of continuous operation, continuous DIN operation can be performed by specifying channel 32 in the channel-gain list of the A/D subsystem and starting the A/D subsystem.
- b. DT3010, DT3010-268, and DT3016 boards have a 4 kSample output FIFO; DT3010/32 and DT3010/32-268 boards have a 32 kSample output FIFO.

## Buffering

**Table 16: DT3010 Series Buffering Options**

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Buffer Support <b>SupportsBuffering</b>	Yes	Yes				
Single Buffer Wrap Mode Support <b>SupportsWrapSingle</b>		Yes				
Inprocess Buffer Flush Support <b>SupportsInProcessFlush</b>	Yes <sup>a</sup>					

- a. The data from the DT3010 board is transferred to the host in 64 byte segments; therefore, the number of valid samples that can be moved is always a multiple of 64. If the application moves data from the buffer before the module has transferred 64 samples to the host, the resulting buffer will contain 0 samples. Your application program must deal with these situations when flushing an inprocess buffer.

## Triggered Scan Mode

**Table 17: DT3010 Series Triggered Scan Mode Options**

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Triggered Scan Support <b>SupportsTriggeredScan</b>	Yes					
Maximum Number of CGL Scans per Trigger <b>MaxMultiScanCount</b>	256 <sup>a</sup>	0	0	0	0	0
Maximum Retrigger Frequency <b>MaxRetriggerFreq</b>	357.14 kHz, 166.67 kHz, or 250 kHz <sup>b</sup>	0	0	0	0	0
Minimum Retrigger Frequency <b>MinRetriggerFreq</b>	1.2 Hz <sup>c</sup>	0	0	0	0	0

- a. The channel list depth of 1024 entries in conjunction with a multiscan count of 256 provides an effective channel list depth of up to 256K entries.
- b. For DT3016 boards, the maximum retrigger frequency is 166.666 kHz. For DT3010, DT3010-268, DT3010/32, DT3010/32-268 boards, the maximum retrigger frequency is 357.14 kHz. The maximum retrigger frequency is based on the number of samples per trigger as follows:  
 Min. Retrigger =  $\frac{\text{\# of CGL entries} \times \text{\# of CGLs per trigger} + 2 \mu\text{s}}{\text{A/D sample clock frequency}}$   
 Max. Retrigger =  $\frac{1}{\text{Min. Retrigger Period}}$   
 Frequency
- c. The value of 1.2 Hz assumes the minimum number of samples is 1.

## Data Encoding

Table 18: DT3010 Series Data Encoding Options

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Binary Encoding Support <b>SupportsBinaryEncoding</b>	Yes	Yes	Yes	Yes	Yes	
Twos Complement Support <b>SupportsTwosCompEncoding</b>						
Returns Floating-Point Values <b>ReturnsFloats</b>						

## Channels

Table 19: DT3010 Series Channel Options

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Number of Channels <b>NumberOfChannels</b>	33 <sup>a</sup>	2	1	1	0	0
SE Support <b>SupportsSingleEnded</b>	Yes					
SE Channels <b>MaxSingleEndedChannels</b>	32	0	0	0	0	0
DI Support <b>SupportsDifferential</b>	Yes	Yes	Yes	Yes		
DI Channels <b>MaxDifferentialChannels</b>	16	2	1	1	0	0
Maximum Channel-Gain List Depth <b>CGLDepth</b>	1024	2	1 <sup>b</sup>	1 <sup>a</sup>	0	0
Simultaneous Sample-and-Hold Support <b>SupportsSimultaneousSampleHold</b>						
Channel-List Inhibit <b>SupportsChannelListInhibit</b>	Yes					

- a. Channels 0 to 31 are provided for analog input; channel 32 reads all 16 bits from the DIN subsystem.
- b. All 16 bits of the DIO lines are assigned to A/D input channel 32. While the DIN subsystem itself is incapable of continuous operation, continuous DIN operation can be performed by specifying channel 32 in the channel-gain list of the A/D subsystem and starting the A/D subsystem.

## Gain

**Table 20: DT3010 Series Gain Options**

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Programmable Gain Support <b>SupportsProgrammableGain</b>	Yes					
Number of Gains <b>NumberOfSupportedGains</b>	4	1	1	1	0	0
Gains Available <b>SupportedGains</b>	1, 2, 4, 8	1	1	1		

## Ranges

**Table 21: DT3010 Series Range Options**

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Number of Voltage Ranges <b>NumberOfRanges</b>	2	1	0	0	0	0
Available Ranges <b>SupportedVoltageRanges</b>	$\pm 10$ V, 0 to 10 V	$\pm 10$ V				
Current Output Support <b>SupportsCurrentOutput</b>						

## Resolution

**Table 22: DT3010 Series Resolution Options**

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Software Programmable Resolution <b>SupportsSoftwareResolution</b>			Yes	Yes		
Number of Resolutions <b>NumberOfResolutions</b>	1 <sup>a</sup>	1 <sup>a</sup>	2 <sup>b</sup>	2 <sup>b</sup>	1	0
Available Resolutions <b>SupportedResolutions</b>	12 or 16 <sup>a</sup>	12 or 16 <sup>a</sup>	8, 16 <sup>b</sup>	8, 16 <sup>b</sup>	16 <sup>c</sup>	

- For the DT3010, DT3010-268, DT3010/32, DT3010/32-268 boards, the resolution is 12 bits; for the DT3016 board, the resolution is 16 bits.
- When configured for 16 bits of resolution, element 0 uses DIO bits 15 to 0 (Banks A and B). When configured for 8 bits of resolution, element 0 uses bits 7 to 0 (Bank A), and element 1 uses bits 15 to 8 (Bank B).
- You can also internally route the clock output signal from one user counter to the clock input signal of the next user counter to internally cascade the counters. In this way, you can create a 32-bit counter without externally connecting two counters together.



## Thermocouple and RTD Support

**Table 23: DT3010 Series Thermocouple and RTD Support Options**

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Thermocouple Support <b>SupportsThernocouple</b>						
RTD Support <b>SupportsRTD</b>						
Resistance Support <b>ReturnsOhms</b>						
Voltage Converted to Temperature in Hardware <b>SupportsTemperatureDataInStream</b>						
Supported Thermocouple Types <b>ThermocoupleType</b>						
Supported RTD Types <b>RTDType</b>						
Supports CJC Source Internally in Hardware <b>SupportsCjcSourceInternal</b>						
Supports CJC Channel <b>SupportsCjcSourceChannel</b>						
Available CJC Channels <b>CjcChannel</b>						
Supports Interleaved CJC Values in Data Stream <b>SupportsInterleavedCjcTemperaturesInStream</b>						
Supports Programmable Filters <b>SupportsTemperatureFilters</b>						
Programmable Filter Types <b>TemperatureFilterType</b>						

## IEPE Support

**Table 24: DT3010 Series IEPE Support Options**

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Software Programmable AC Coupling <b>SupportsACCoupling</b>						
Software Programmable DC Coupling <b>SupportsDCCoupling</b>						
Software Programmable External Excitation Current Source <b>SupportsExternalExcitationCurrent Src</b>						
Software Programmable Internal Excitation Current Source <b>SupportsInternalExcitationCurrentSrc</b>						
Available Excitation Current Source Values <b>SupportedExcitationCurrentValues</b>						

# Triggers

**Table 25: DT3010 Series Trigger Options**

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Software Trigger Support <b>SupportsSoftwareTrigger</b>	Yes	Yes			Yes	
External Positive TTL Trigger Support <b>SupportsPosExternalTTLTrigger</b>	Yes	Yes			Yes	
External Negative TTL Trigger Support <b>SupportsNegExternalTTLTrigger</b>	Yes <sup>a</sup>	Yes <sup>a</sup>				
External Positive TTL Trigger Support for Single-Value Operations <b>SupportsSvPosExternalTTLTrigger</b>						
External Negative TTL Trigger Support for Single-Value Operations <b>SupportsSvNegExternalTTLTrigger</b>						
Positive Threshold Trigger Support <b>SupportsPosThresholdTrigger</b>	Yes <sup>b</sup>	Yes <sup>b</sup>				
Negative Threshold Trigger Support <b>SupportsNegThresholdTrigger</b>	Yes <sup>b</sup>	Yes <sup>b</sup>				
Digital Event Trigger Support <b>SupportsDigitalEventTrigger</b>						

- a. For SDK users, specify `OL_TRG_EXTRA` for the `olDataSetTrigger` function.
- b. Threshold triggers are supported for post-trigger acquisition only.  
If you are using an analog threshold trigger for both A/D and D/A subsystems, both triggers must be of the same type (that is, either both must be from an analog input channel or external analog threshold). However, the polarities of the two triggers can be different. See [page 113](#) for more information.

# Clocks

**Table 26: DT3010 Series Clock Options**

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Internal Clock Support <b>SupportsInternalClock</b>	Yes	Yes			Yes	
External Clock Support <b>SupportsExternalClock</b>	Yes	Yes			Yes	
Simultaneous Input/Output on a Single Clock Signal <b>SupportsSimultaneousClocking</b>						
Base Clock Frequency <b>BaseClockFrequency</b>	20 MHz	20 MHz	0	0	20 MHz	0
Maximum Clock Divider <b>MaxExtClockDivider</b>	1.0	1.0	1.0	1.0	65536	0
Minimum Clock Divider <b>MinExtClockDivider</b>	1.0	1.0	1.0	1.0	2.0	0
Maximum Frequency <b>MaxFrequency</b>	1.25 MHz, 250 kHz, or 500 kHz <sup>a</sup>	500 kHz, 200 kHz, or 100 kHz <sup>b</sup>	0	0	10 MHz <sup>c</sup>	0
Minimum Frequency <b>MinFrequency</b>	1.2 Hz	1.2 Hz	0	0	0.005 Hz <sup>d</sup>	0

- a. For DT3010, DT3010-268, DT3010/32, DT3010/32-268 boards, the maximum A/D throughput is 1.25 MSamples/s. For the DT3016, the maximum throughput is 250 kSamples/s.
- b. Three conditions are possible:
- 200 kHz per DAC (for the DT3010, DT3010-268, DT3010/32, and DT3010/32-268) or 100 kHz per DAC (for the DT3016) with full-scale steps in continuously-paced or waveform generation mode.
  - 500 kHz per DAC (for the DT3010, DT3010-268, DT3010/32, and DT3010/32-268) or 200 kHz per DAC (for the DT3016) with 100 mV steps in waveform generation mode.
  - 500 kHz per DAC (for the DT3010, DT3010-268, DT3010/32, and DT3010/32-268) or 200 kHz per DAC (for the DT3016) with 100 mV steps in continuously-paced mode (system-dependent).
- c. If using cascaded timers, this value is 5 MHz.
- d. Any two adjacent counter/timers, such as (1,2) or (2,3) or (3,4), can be cascaded in software. If not using cascaded timers, this value is approximately 305.18 Hz.

# Counter/Timers

**Table 27: DT3010 Series Counter/Timer Options**

DT3010 Series	A/D	D/A	DIN	DOUT	C/T	QUAD
Cascading Support <b>SupportsCascading</b>					Yes	
Event Count Mode Support <b>SupportsCount</b>					Yes	
Generate Rate Mode Support <b>SupportsRateGenerate</b>					Yes	
One-Shot Mode Support <b>SupportsOneShot</b>					Yes	
Repetitive One-Shot Mode Support <b>SupportsOneShotRepeat</b>					Yes	
Up/Down Counting Mode Support <b>SupportsUpDown</b>						
Edge-to-Edge Measurement Mode Support <b>SupportsMeasure</b>						
Continuous Edge-to-Edge Measurement Mode Support <b>SupportsContinuousMeasure</b>						
High to Low Output Pulse Support <b>SupportsHighToLowPulse</b>					Yes	
Low to High Output Pulse Support <b>SupportsLowToHighPulse</b>					Yes	
Variable Pulse Width Support <b>SupportsVariablePulseWidth</b>					Yes <sup>a</sup>	
None (internal) Gate Type Support <b>SupportsGateNone</b>					Yes	
High Level Gate Type Support <b>SupportsGateHighLevel</b>					Yes <sup>b</sup>	
Low Level Gate Type Support <b>SupportsGateLowLevel</b>					Yes <sup>b</sup>	
High Edge Gate Type Support <b>SupportsGateHighEdge</b>					Yes <sup>b</sup>	
Low Edge Gate Type Support <b>SupportsGateLowEdge</b>					Yes <sup>b</sup>	
Level Change Gate Type Support <b>SupportsGateLevel</b>						
Clock-Falling Edge Type <b>SupportsClockFalling</b>						
Clock-Rising Edge Type <b>SupportsClockRising</b>						
Gate-Falling Edge Type <b>SupportsGateFalling</b>						

**Table 27: DT3010 Series Counter/Timer Options (cont.)**

<b>DT3010 Series</b>	<b>A/D</b>	<b>D/A</b>	<b>DIN</b>	<b>DOUT</b>	<b>C/T</b>	<b>QUAD</b>
Gate-Rising Edge Type <b>SupportsGateRising</b>						
Interrupt-Driven Operations <b>SupportsInterrupt</b>						

- a. For one-shot and repetitive one-shot operations, the pulse width is set automatically to 100%.
- b. High-edge and low-edge are supported for one-shot and repetitive one-shot modes. High-level and low-level are supported for event counting and rate generation modes.





# ***Calibration***

Calibrating the Analog Input Subsystem .....	161
Calibrating the Analog Output Subsystem .....	169

The DT3010 Series boards are calibrated at the factory and should not require calibration for initial use. We recommend that you check and, if necessary, readjust the calibration of the analog input and analog output circuitry on the DT3010 Series boards every six months.

The DT3010 Calibration Utility is provided for calibrating the DT3010, DT3010-268, DT3010/32, and DT3010/32-268 boards. The DT3016 Calibration Utility is provided for calibrating the DT3016 board.

---

**Note:** Ensure that you installed the DT3010 Series Device Driver prior to using the DT3010 or DT3016 Calibration Utility. Refer to [Chapter 2](#) starting on [page 25](#) for more information on loading the device driver.

---

This chapter describes how to calibrate the analog input and output subsystems of DT3010 Series boards using the DT3010 and DT3016 calibration utilities.



## Calibrating the Analog Input Subsystem

This section describes how to configure the DT740, STP268, or STP268-EC screw terminal panel for an internal or external reference, and how to use the DT3010 and DT3016 calibration utilities to calibrate the analog input subsystem of the board.

### Choosing a Calibration Reference

To calibrate the analog input circuitry, you can use either of the following references:

- The internal +5 V reference on the DT3010 Series board.

Using the +5 V reference on the board allows you to calibrate the analog input circuitry quickly without using external equipment; the accuracy of the calibration is approximately 0.05%.

- An external +9.3750 V reference (precision voltage source).

Using an external +9.3750 V reference provides an accuracy of approximately  $\pm 1$  LSB.

This section describes how to configure for an internal or external reference. If you are using STP268, it must be attached to connector J1 in all the steps below.

### Configuring for the Internal Reference

To calibrate the analog input circuitry using the internal +5 V reference, do the following:

1. Connect Analog In 0 to +5 V Reference Out.

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Input 0	TB1	TB1	TB34
+5 V Reference	TB49	TB44	TB50

2. Connect Analog In 0 Return to Analog Ground.

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Input 0 Return	TB2	TB2	TB68
Analog Ground	TB34	TB34	TB52

3. Connect Analog In 1 to Analog In 1 Return and Analog Ground.

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Input 1	TB2	TB2	TB33
Analog Input 1 Return	TB4	TB4	TB67
Analog Ground	TB34	TB34	TB52

For the DT3010, DT3010-268, DT3010/32, or DT3010/32-268 board, follow the instructions on [page 163](#). For the DT3016 board, follow the instructions on [page 166](#).

### **Configuring for an External Reference**

To calibrate the analog input circuitry using an external +9.3750 V reference, do the following:

1. Connect Analog In 0 to the positive side of the precision voltage source.

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Input 0	TB1	TB1	TB34

2. Connect Analog In 0 Return to the negative side of the precision voltage source.

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Input 0 Return	TB2	TB2	TB68

3. Connect Analog In 0 Return to Analog Ground.

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Input 0 Return	TB2	TB2	TB68
Analog Ground	TB34	TB34	TB52

4. Connect Analog In 1 and Analog In 1 Return to Analog Ground.

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Input 1	TB3	TB1	TB33
Analog Input 1 Return	TB4	TB4	TB67
Analog Ground	TB34	TB34	TB52

For the DT3010, DT3010-268, DT3010/32, or DT3010/32-268 board, follow the instructions on [page 163](#). For the DT3016 and DT3016 boards, follow the instructions on [page 166](#).

## Using the DT3010 Calibration Utility

---

**Note:** After switching the power on, allow 15 minutes for the board to warm up before calibrating the analog I/O subsystems.

---

1. Click **Start** from the Task Bar.
2. Browse to **Programs | Data Translation, Inc | Calibration | DT3010 Calibration Utility**.  
*The main menu appears.*

Once the DT3010 Calibration Utility is running and you have connected the required calibration signals to the DT740, STP268, or STP268-EC screw terminal panel, you can calibrate the analog input circuitry of the DT3010, DT3010-268, DT3010/32, or DT3010/32-268 board either automatically or manually; auto-calibration is the easiest to use and is the recommended calibration method.

This section describes these calibration methods.

### ***Using the Auto-Calibration Procedure***

Auto-calibration is the easiest to use and is the recommended calibration method.

---

**Note:** If you want to manually calibrate the bipolar and unipolar ranges instead of auto-calibrating them, refer to [“Using the Manual Calibration Procedure” on page 164](#).

---

To calibrate the analog input subsystem, do the following:

1. From the main menu of the DT3010 Calibration Utility, click **Configure**, and then **Board**.

2. Select the name of the DT3010, DT3010-268, DT3010/32, or DT3010/32-268 board to configure from the combo box, and then click **OK**.
3. From the main menu of the DT3010 Calibration Utility, click **Calibrate**, and then **A/D**.
4. In the Reference Source box, select the reference that you are using (**Internal** or **External**; Internal is the default).
5. In the Auto Calibration box, click **Go**.  
*The bipolar (zero and full-scale) and unipolar (zero and full-scale) ranges are automatically calibrated, and the calibration values are displayed. The bipolar readings should be within 0.0049 V; the unipolar readings should be within 0.0024 V.*
6. Click **OK**.
7. In the Range box, select **PGH Zero**.
8. If the displayed value is not 0.0000 V (within 0.0049 V), continue with [“Calibrating the PGH Zero Setting,”](#) on page 165; otherwise, click **Quit** when you are finished calibrating the analog input circuitry.

Once you have finished this procedure, continue with [“Calibrating the Analog Output Subsystem”](#) on page 169.

---

**Note:** If you are not satisfied with the analog input calibration, you can load the factory default settings stored in the EEPROM by clicking **Restore** in the Factory Settings box.

---

### ***Using the Manual Calibration Procedure***

If you want to manually calibrate the analog input circuitry instead of auto-calibrating it, do the following:

1. From the main menu of the DT3010 Calibration Utility, click **Configure**, and then **Board**.
2. Select the name of the DT3010, DT3010-268, DT3010/32, or DT3010/32-268 board to configure from the combo box, and then click **OK**.
3. From the main menu of the DT3010 Calibration Utility, click **Calibrate**.
4. Click **A/D**.
5. In the Reference Source box, select the reference that you are using (**Internal** or **External**; Internal is the default).
6. In the Range box, select **Bipolar**, and then **Zero**.
7. Click the increment or decrement arrows in the Manual Adjustment box until the display reads 0.0000 V (within 0.0049 V).
8. In the Range box, select **Bipolar**, and then **+FS** (for full-scale).
9. Click the increment or decrement arrows in the Manual Adjustment box until the display reads 5 V with the internal reference or +9.3750 V with the external reference (within 0.0049 V).
10. In the Range box, select **Unipolar**, and then **Zero**.

11. Click the increment or decrement arrows in the Manual Adjustment box until the display reads just above 0 V, then use the decrement arrow until the first value of 0 V is displayed (within 0.0024 V).
12. In the Range box, select **Unipolar**, and then **+FS** (for full-scale).
13. Click the increment or decrement arrows in the Manual Adjustment box until the display reads 5 V with the internal reference or +9.3750 V with the external reference (within 0.0024 V).
14. In the Range box, select **PGH Zero**.
15. If the displayed value is not 0.0000 V (within 0.0049 V), perform the procedure in the next; otherwise, click **Quit** when you are finished calibrating the analog input circuitry.

Once you have finished this procedure, continue with “[Calibrating the Analog Output Subsystem](#)” on page 169.

---


**Note:** If you are not satisfied with the analog input calibration, you can load the factory default settings stored in the EEPROM by clicking **Restore** in the Factory Settings box.

---

### Calibrating the PGH Zero Setting

PGH Zero is a factory-calibrated setting and, generally, should not need adjustment. However, if you select **PGH Zero** in the Range box and a value other than 0.0000 V is displayed, do the following to calibrate this setting:

1. In the Range box, select **PGH Zero**.
2. Physically adjust potentiometer R2 (labelled PGZ) on the DT3010/32 or DT3010/32-268 board until the display reads 0.0000 V (within 0.0049 V for the DT3010, DT3010/32, and DT3010/32-268). [Figure 76](#) shows the location of this potentiometer.

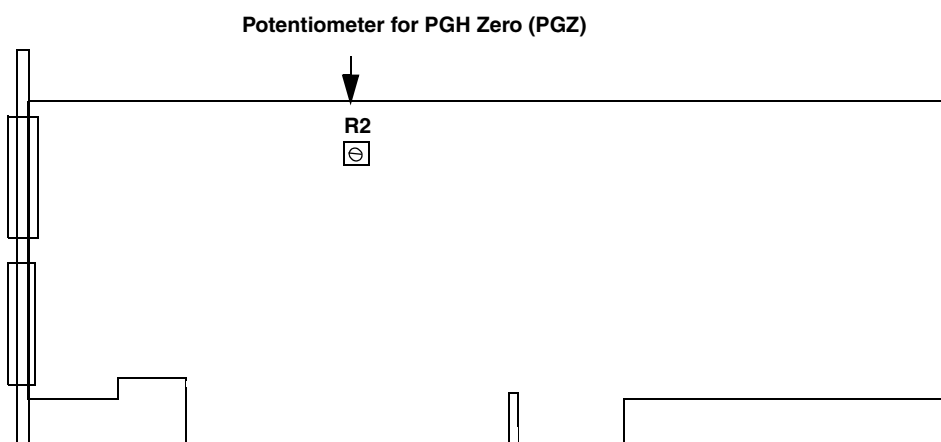

**Figure 76: Location of Potentiometer R2 on the DT3010, DT3010-268, DT3010/32, and DT3010/32-268 Boards**

---

**Note:** If you have a version of the board without the -PBF (lead-free) designator, this potentiometer is labelled R4.

---

3. Click **Quit** when you are finished.

Once you have finished this procedure, continue with [“Calibrating the Analog Output Subsystem” on page 169.](#)

## Using the DT3016 Calibration Utility

---

**Note:** After switching the power on, allow 15 minutes for the board to warm up before calibrating the analog I/O subsystems.

---

To start the DT3016 Calibration Utility, do the following:

1. Click **Start** from the Task Bar.
2. Browse to **Programs | Data Translation, Inc | Calibration | DT3016 Calibration Utility**.  
*The main menu appears.*

Once the DT3016 Calibration Utility is running and you have connected the required calibration signals to the DT740 screw terminal panel, you can calibrate the analog input circuitry of the DT3016 board either automatically or manually; auto-calibration is the easiest to use and is the recommended calibration method.

This section describes these calibration methods.

### ***Using the Auto-Calibration Procedure***

Auto-calibration is the easiest to use and is the recommended calibration method.

---

**Note:** If you want to manually calibrate the bipolar and unipolar ranges instead of auto-calibrating them, refer to [“Using the Manual Calibration Procedure” on page 167.](#)

---

To calibrate the analog input subsystem, do the following:

1. From the main menu of the DT3016 Calibration Utility, click **Configure**, and then **Board**.
2. Select the name of the DT3016 board to configure from the combo box, and then click **OK**.
3. From the main menu of the DT3016 Calibration Utility, click **Calibrate**, and then **A/D**.
4. In the Reference Source box, select the reference that you are using (**Internal** or **External**; Internal is the default).

5. In the Auto Calibration box, click **Go**.  
*The bipolar (zero and full-scale) and unipolar (zero and full-scale) ranges are automatically calibrated, and the calibration values are displayed. The bipolar readings should be within 0.001 V; the unipolar readings should be within 0.0005 V.*
6. Click **OK**.
7. In the Range box, select **PGH Zero**.
8. If the displayed value is not 0.0000 V (within 0.001 V), continue with [“Calibrating the PGH Zero Setting” on page 168](#); otherwise, click **Quit** when you are finished calibrating the analog input circuitry.

Once you have finished this procedure, continue with [“Calibrating the Analog Output Subsystem” on page 169](#).

---

**Note:** If you are not satisfied with the analog input calibration, you can load the factory default settings stored in the EEPROM by clicking **Restore** in the Factory Settings box.

---

### **Using the Manual Calibration Procedure**

If you want to manually calibrate the analog input circuitry instead of auto-calibrating it, do the following:

1. From the main menu of the DT3016 Calibration Utility, click **Configure**, and then **Board**.
2. Select the name of the DT3016 board to configure from the combo box, and then click **OK**.
3. From the main menu of the DT3016 Calibration Utility, click **Calibrate**.
4. Click **A/D**.
5. In the Reference Source box, select the reference that you are using (**Internal** or **External**; Internal is the default).
6. In the Range box, select **Bipolar**, and then **Zero**.
7. Click the increment or decrement arrows in the Manual Adjustment box until the display reads 0.0000 V (within 0.001 V).
8. In the Range box, select **Bipolar**, and then **+FS** (for full-scale).
9. Click the increment or decrement arrows in the Manual Adjustment box until the display reads 5 V with the internal reference or +9.3750 V with the external reference (within 0.001 V).
10. In the Range box, select **Unipolar**, and then **+FS** (for full-scale).
11. Click the increment or decrement arrows in the Manual Adjustment box until the display reads 5 V with the internal reference or +9.3750 V with the external reference (within 0.0005 V).
12. In the Range box, select **Unipolar**, and then **Zero**.
13. Click the increment or decrement arrows in the Manual Adjustment box until the display reads just above 0 V, then use the decrement arrow until the first value of 0 V is displayed (within 0.0005 V).

14. In the Range box, select **PGH Zero**.
15. If the displayed value is not 0.0000 V (within 0.001 V), perform the procedure in the next section; otherwise, click **Quit** when you are finished calibrating the analog input circuitry.

Once you have finished this procedure, continue with [“Calibrating the Analog Output Subsystem” on page 169](#).

---


**Note:** If you are not satisfied with the analog input calibration, you can load the factory default settings stored in the EEPROM by clicking **Restore** in the Factory Settings box.

---

### **Calibrating the PGH Zero Setting**

PGH Zero is a factory-calibrated setting and, generally, should not need adjustment. However, if you select **PGH Zero** in the Range box and a value other than 0.0000 V is displayed, do the following to calibrate this setting:

1. In the Range box, select **PGH Zero**.
2. Physically adjust potentiometer R2 (labelled PGZ) on the DT3016 board until the display reads 0.0000 V (0.001 V). [Figure 77](#) shows the location of this potentiometer.

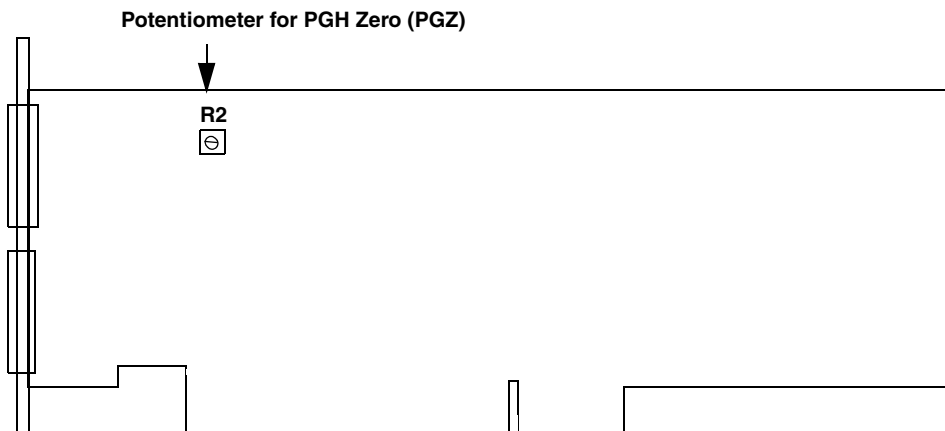

**Figure 77: Location of Potentiometer R2 on the DT3016 Board**

3. Click **Quit** when you are finished.

Once you have finished this procedure, continue with the next section.



## Calibrating the Analog Output Subsystem

This section describes how to configure the DT740, STP268, or STP268-EC screw terminal panel for an internal or external meter, and how to use the DT3010 and DT3016 calibration utilities to calibrate the analog output subsystems of the board.

### Choosing a Calibration Meter

To calibrate the analog output circuitry, you can use either of the following meters:

- The internal A/D converter (ADC) on the DT3010 Series board.

Using the board's ADC as an input to the analog output circuitry allows you to calibrate the analog output circuitry quickly without using external equipment.

- An external precision meter.

The following sections describe how to configure for calibration using either of the supported meters. If you are using STP268, it must be attached to connector J1 in all the steps below.

### Configuring for the Internal ADC

To calibrate DAC0 using the internal ADC, do the following:

1. Connect Analog Out 0+ (TB41) to Analog In 2 (TB5).

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Output 0+	TB41	TB41	TB17
Analog Input 2	TB5	TB5	TB32

2. Connect Analog Out Return to Analog In 2 Return.

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Output Return	TB42	TB42	TB51
Analog Input 2 Return	TB6	TB6	TB66

To calibrate DAC1 using the internal ADC, do the following:

1. Connect Analog Out 1+ to Analog In 3.

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Output 1+	TB43	TB43	TB16
Analog Input 3	TB7	TB7	TB31

2. Connect Analog Out Return to Analog In 3 Return.

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Output 1+ Return	TB44	TB42	TB51
Analog Input 3 Return	TB8	TB8	TB65

For the DT3010, DT3010-268, DT3010/32, DT3010/32-268 board, follow the instructions on [page 171](#). For the DT3016 board, follow the instructions on [page 173](#).

### **Configuring for an External Meter**

To calibrate DAC0 using an external voltage meter, do the following:

1. Connect Analog Out 0+ to the positive side of the precision voltage meter.

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Output 0+	TB41	TB41	TB17

2. Connect Analog Out 0 Return to the negative side of the precision voltage meter.

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Output 0 Return	TB42	TB42	TB51

To calibrate DAC1 using an external voltage meter, do the following:

1. Connect Analog Out 1+ to the positive side of the precision voltage meter.

Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Output 1+	TB43	TB43	TB16

2. Connect Analog Out 1 Return (TB44) to the negative side of the precision voltage meter.


Signal	DT740 Screw Terminal	STP268 Screw Terminal on J1	STP268-EC Screw Terminal
Analog Output 1+ Return	TB44	TB42	TB51

For the DT3010, DT3010-268, DT3010/32, or DT3010/32-268 board, follow the instructions on [page 171](#). For the DT3016 board, follow the instructions on [page 173](#).

## Using the DT3010 Calibration Utility

Once the DT3010 Calibration Utility is running and you have connected the required calibration signals to the DT740, STP268, or STP268-EC screw terminal panel, do the following to calibrate the analog output subsystem on the DT3010, DT3010-268, DT3010/32, or DT3010/32-268 board:

1. From the main menu of the DT3010 Calibration Utility, click **Configure**, and then **Board**.
2. Select the name of the DT3010, DT3010-268, DT3010/32, DT3010/32-268 board to configure from the combo box, and then click **OK**.
3. From the main menu of the DT3010 Calibration Utility, click **Calibrate**, and then **D/A**.
4. In the Meter Selection box, select the meter that you are using (**Internal** or **External**; Internal is the default).
5. In the Mode box, select **Calibrate**.
6. In the D/A box, select **DAC 0**.
7. In the Voltages box, select **-9.3750**.
8. Physically adjust potentiometer R15 (labelled 0Z) on the DT3010, DT3010-268, DT3010/32, or DT3010/32-268 board until the display reads -9.3750 V (within 0.001 V). [Figure 78](#) shows the location of this potentiometer.

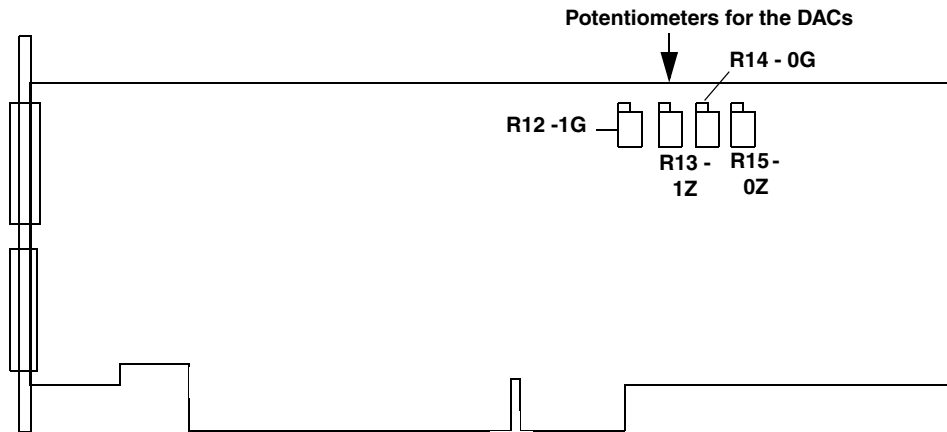

**Figure 78: Location of Potentiometers R12 to R15 on the DT3010, DT3010-268, DT3010/32, and DT3010/32-268**

9. In the Voltages box, select **+9.3750**.
10. Physically adjust potentiometer R14 (labelled 0G) on the DT3010, DT3010-268, DT3010/32, or DT3010/32-268 board until the display reads +9.3750 V (within 0.001 V). [Figure 78](#) shows the location of this potentiometer.
11. In the D/A box, select **DAC 1**.
12. In the Voltages box, select **-9.3750**.
13. Physically adjust potentiometer R13 (labelled 1Z) on the DT3010, DT3010-268, DT3010/32, or DT3010/32-268 board until the display reads -9.3750 V (within 0.001 V). [Figure 78](#) shows the location of this potentiometer.
14. In the Voltages box, select **-9.3750**.
15. Physically adjust potentiometer R12 (labelled 1G) on the DT3010, DT3010-268, DT3010/32, or DT3010/32-268 board until the display reads +9.3750 V (within 0.001 V). [Figure 78](#) shows the location of this potentiometer.

---

**Note:** If you want to check the values for intermediate ranges, select **Display Values** in the Mode box and select any of the available ranges; the range is then displayed. *You cannot calibrate intermediate ranges.*

---


16. Click **Quit** when you are finished calibrating the analog output circuitry.

Once you have finished this procedure, the analog output circuitry is calibrated. To close the DT3010 Calibration Utility, click the close box in the upper, right corner of the window.

## Using the DT3016 Calibration Utility

Once the DT3016 Calibration Utility is running and you have connected the required calibration signals to the DT740 screw terminal panel, do the following to calibrate the analog output subsystem on the DT3016 board:

1. From the main menu of the DT3016 Calibration Utility, click **Configure**, and then **Board**.
2. Select the name of the DT3016 board to configure from the combo box, and then click **OK**.
3. From the main menu of the DT3016 Calibration Utility, click **Calibrate**, and then **D/A**.
4. In the Meter Selection box, select the meter that you are using (**Internal** or **External**; Internal is the default).
5. In the Mode box, select **Calibrate**.
6. In the D/A box, select **DAC 0**.
7. In the Voltages box, select **-9.3750**.
8. Physically adjust potentiometer R15 (labelled 0Z) on the DT3016 board until the display reads -9.3750 V (within 0.001 V). [Figure 79](#) shows the location of this potentiometer.

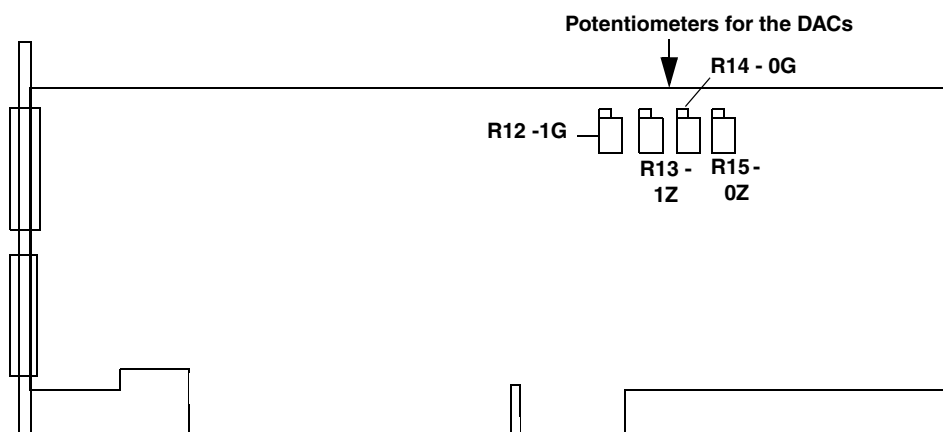

**Figure 79: Location of Potentiometers R12 to R15 on the DT3016 Board**

9. In the Voltages box, select **+9.3750**.
10. Physically adjust potentiometer R14 (labelled 0G) on the DT3016 board until the display reads +9.3750 V (within 0.001 V). [Figure 79](#) shows the location of this potentiometer.
11. In the D/A box, select **DAC 1**.
12. In the Voltages box, select **-9.3750**.
13. Physically adjust potentiometer R13 (labelled 1Z) on the DT3016 board until the display reads -9.3750 V (within 0.001 V). [Figure 79](#) shows the location of this potentiometer.
14. In the Voltages box, select **+9.3750**.
15. Physically adjust potentiometer R12 (labelled 1G) on the DT3016 board until the display reads +9.3750 V (within 0.001 V). [Figure 79](#) shows the location of this potentiometer.

---

**Note:** If you want to check the values for intermediate ranges, select **Display Values** in the Mode box and select any of the available ranges; the range is then displayed. *You cannot calibrate intermediate ranges.*

---

16. Click **Quit** when you are finished calibrating the analog output circuitry.

Once you have finished this procedure, the analog output circuitry is calibrated. To close the DT3016 Calibration Utility, click the close box in the upper, right corner of the window.



## ***Troubleshooting***

General Checklist .....	176
Technical Support .....	178
If Your Board Needs Factory Service.....	179

## General Checklist

Should you experience problems using the DT3010 Series board, follow these steps:

1. Read all the documentation provided for your product. Make sure that you have added any “Read This First” information to your manual and that you have used this information.
2. Check the OMNI CD for any README files and ensure that you have used the latest installation and configuration information available.
3. Check that your system meets the requirements stated in the README file on the OMNI CD.
4. Check that you have installed your hardware properly using the instructions in [Chapter 2](#).
5. Check that you have installed and configured the device driver properly using the instructions in [Chapter 2](#).
6. Search the DT Knowledgebase in the Support section of the Data Translation web site (at [www.datatranslation.com](http://www.datatranslation.com)) for an answer to your problem.

If you still experience problems, try using the information in [Table 28](#) to isolate and solve the problem. If you cannot identify the problem, refer to [page 178](#).

**Table 28: Troubleshooting Problems**

Symptom	Possible Cause	Possible Solution
Board does not respond.	The board configuration is incorrect.	Check the configuration of your device driver to ensure that the board name and type are correct.
	The board is incorrectly aligned in a PCI expansion slot.	Check that the slot in which your DT3010 Series board is located is a PCI slot and that the board is correctly seated in the slot.
	The board is damaged.	Contact Data Translation for technical support; refer to <a href="#">page 178</a> .
Intermittent operation.	Loose connections or vibrations exist.	Check your wiring and tighten any loose connections or cushion vibration sources.
	The board is overheating.	Check environmental and ambient temperature; consult the board's specifications on <a href="#">page 189</a> of this manual and the documentation provided by your computer manufacturer for more information.
	Electrical noise exists.	Check your wiring and either provide better shielding or reroute unshielded wiring.
Data appears to be invalid.	An open connection exists.	Check your wiring and fix any open connections.
	A transducer is not connected to the channel being read.	Check the transducer connections.
	The board is set up for differential inputs while the transducers are wired as single-ended inputs or vice versa.	Check your wiring and ensure that what you specify in software matches your hardware configuration.



**Table 28: Troubleshooting Problems (cont.)**

Symptom	Possible Cause	Possible Solution
Computer does not boot.	Board is not seated properly.	Check that the slot in which your DT3010 Series board is located is a PCI slot, that the board is correctly seated in the slot, and that the board is secured in the slot with a screw.
	The power supply of the computer is too small to handle all the system resources.	Check the power requirements of your system resources and, if needed, get a larger power supply; consult the board's specifications on <a href="#">page 189</a> of this manual.
System lockup.	Board is not seated properly.	Check that the slot in which your DT3010 Series board is located is a PCI slot, that the board is correctly seated in the slot, and that the board is secured in the slot with a screw.

## ***Technical Support***

If you have difficulty using a DT3010 Series board, Data Translation's Technical Support Department is available to provide technical assistance.

To request technical support, go to our web site at <http://www.datatranslation.com> and click on the Support link.

When requesting technical support, be prepared to provide the following information:

- Your product serial number
- The hardware/software product you need help on
- The version of the OMNI CD you are using
- Your contract number, if applicable

If you are located outside the USA, contact your local distributor; see our web site ([www.datatranslation.com](http://www.datatranslation.com)) for the name and telephone number of your nearest distributor.

## ***If Your Board Needs Factory Service***

If your board must be returned to Data Translation, do the following:

1. Record the board's serial number, and then contact the Customer Service Department at (508) 481-3700, ext. 1323 (if you are in the USA) and obtain a Return Material Authorization (RMA).

If you are located outside the USA, call your local distributor for authorization and shipping instructions; see our web site ([www.datatranslation.com](http://www.datatranslation.com)) for the name and telephone number of your nearest distributor. All return shipments to Data Translation must be marked with the correct RMA number to ensure proper processing.

2. Using the original packing materials, if available, package the module as follows:
  - Wrap the board in an electrically conductive plastic material. Handle with ground protection. A static discharge can destroy components on the module.
  - Place in a secure shipping container.
3. Return the board to the following address, making sure the RMA number is visible on the outside of the box.

Customer Service Dept.  
Data Translation, Inc.  
100 Locke Drive  
Marlboro, MA 01752-1192





# ***Specifications***

Analog Input Specifications .....	182
Analog Output Specifications .....	185
Digital I/O Specifications .....	187
Counter/Timer Specifications .....	188
Power, Physical, and Environmental Specifications .....	189
Connector Specifications .....	190
Regulatory Specifications .....	191

## Analog Input Specifications

Table 29 lists the specifications for the A/D subsystem on the DT3010 Series boards.

**Table 29: A/D Subsystem Specifications**

Feature	DT3010, DT3010-268, DT3010/32, and DT3010/32-268 Specifications	DT3016 Specifications
Number of analog input channels Single-ended/ pseudo-differential: Differential:		32 16
Number of gains	4 (1, 2, 4, 8)	
Resolution	12 bits	16 bits
Data encoding Bipolar: Unipolar:	Offset binary Binary	
System accuracy (full-scale) Gain = 1: Gain = 2: Gain = 4: Gain = 8:	0.03% 0.04% 0.05% 0.05%	0.01% 0.02% 0.02% 0.03%
Nonlinearity (integral)	±1.0 LSB	±2.0 LSB
Differential linearity	±0.75 LSB (no missing codes)	
Range Bipolar: Unipolar:	±10 V 0 to 10 V	
Drift Zero: Gain:	±30 μV + (+15 μV * Gain)/°C ±30 ppm/°C	±20 μV + (+10 μV * Gain)/°C ±25 ppm/°C
Input impedance <sup>a</sup> Off: On (Differential): On (Single-ended):	100 MΩ, 10 pF 100 MΩ, 100 pF 100 MΩ, 200 pF	
Input bias current	±20 nA	
Common mode voltage	±11 V maximum (operational)	
Maximum input voltage	±20 V maximum (protection)	
A/D converter noise	0.3 LSB rms	0.5 LSB rms
Amplifier input noise	15.0 μV rms + (20 μV rms * gain) 20.0 pA rms (current)	
Channel-to-channel offset	±40.0 μV	±30.0 μV
Channel acquisition time	1 μs to 0.05%	4 μs to 0.01%

Table 29: A/D Subsystem Specifications (cont.)

Feature	DT3010, DT3010-268, DT3010/32, and DT3010/32-268 Specifications	DT3016 Specifications
A/D conversion time	0.8 $\mu$ s	4.0 $\mu$ s
Effective number of bits @ 1 kHz sine wave, 2 channels:	11.7 bits typical (1 MS/s aggregate rate)	14.4 bits typical (at 150 kS/s aggregate rate)
10 kHz sine wave, 2 channels:	11.6 bits typical (1 MS/s aggregate rate)	14.2 bits typical (at 150 kS/s aggregate rate)
sine wave, 2 channels:	11.5 bits typical (1 MS/s aggregate rate with sine wave of 40 kHz)	13.5 bits typical (at 150 kS/s aggregate rate with sine wave of 20 kHz)
Total Harmonic Distortion @ 1 kHz input	-71 dB typical (at 1.25 MS/s rate)	-82 dB typical (at 250 kS/s rate)
Channel crosstalk	-80 dB @ 1 kHz	
Data throughput Single channel:	1.25 MSamples/s, 0.03% accuracy	250 kSamples/s, 0.01% accuracy
Multiple channel (scan):	1.0 MSamples/s, 0.05% accuracy; 750 kSamples/s, 0.03% accuracy	200 kSamples/s, 0.03% accuracy; 150 kSamples/s, 0.01% accuracy
External A/D sample clock <sup>b</sup> Input type:	Schmitt trigger, falling-edge sensitive	Schmitt trigger, falling-edge sensitive
Input load:	1 HCT14 (TTL)	1 HCT14 (TTL)
High-level input voltage:	2.0 V minimum	2.0 V minimum
Low-level input voltage:	0.8 V maximum	0.8 V maximum
Hysteresis:	0.4 V (minimum); 1.5 V (maximum)	0.4 V (minimum); 1.5 V (maximum)
High-level input current:	1.5 V (maximum)	1.0 $\mu$ A
Low-level input current:	1.0 $\mu$ A	-1.0 $\mu$ A
Minimum pulse width:	-1.0 $\mu$ A	100 ns (high); 150 ns (low)
Maximum frequency:	100 ns (high); 150 ns (low)	200 kHz
Termination:	1.25 MHz 22 k $\Omega$ resistor pullup to 5 V for the DT3010-268; for all other boards, 33 $\Omega$ series resistor	33 $\Omega$ series resistor
External A/D digital (TTL) trigger <sup>b</sup> Input type:	Schmitt trigger, falling-edge sensitive	
Input load:	1 HCT14 (TTL)	
High-level input voltage:	2.0 V minimum	
Low-level input voltage:	0.8 V maximum	
Hysteresis:	0.4 V (minimum); 1.5 V (maximum)	
High-level input current:	1.0 $\mu$ A	
Low-level input current:	-1.0 $\mu$ A	
Minimum pulse width:	100 ns (high); 100 ns (low)	
Termination:	22 k $\Omega$ resistor pullup to 5 V for the DT3010-268; for all other boards, 33 $\Omega$ series resistor	

Table 29: A/D Subsystem Specifications (cont.)

Feature	DT3010, DT3010-268, DT3010/32, and DT3010/32-268 Specifications	DT3016 Specifications
External analog trigger Input type: Threshold voltage: Threshold range: Threshold resolution: Hysteresis: Input impedance: Maximum input voltage: Minimum pulse width:	Threshold sensitive Programmable -10 V to +10 V (includes TTL) 8 bits/78 mV per LSB 50 mV typical 12 k $\Omega$ /20 pF typical $\pm$ 20 V 100 ns (high); 100 ns (low)	
A/D sample clock output signal Output driver: Output driver high voltage:  Output driver low voltage:  Termination:	TTL 2.0 V minimum (IOH = -15 mA); 2.4 V minimum (IOH = -3 mA) 0.5 V maximum (IOL = 24 mA); 0.4 V maximum (IOL = 12 mA) 22 $\Omega$ series resistor for the DT3010-268; for all other boards, 33 $\Omega$ series resistor	
A/D trigger output signal Output driver: Output driver high voltage:  Output driver low voltage:  Termination:	TTL 2.0 V minimum (IOH = -15 mA); 2.4 V minimum (IOH = -3 mA) 0.5 V maximum (IOL = 24 mA); 0.4 V maximum (IOL = 12 mA) 22 $\Omega$ series resistor for the DT3010-268; for all other boards, 33 $\Omega$ series resistor	
Dynamic Digital Output Channels Number of channels: Output driver: Output driver high voltage:  Output driver low voltage:  Termination:	2 TTL 2.0 V minimum (IOH = -15 mA); 2.4 V minimum (IOH = -3 mA) 0.5 V maximum (IOL = 24 mA); 0.4 V maximum (IOL = 12 mA) 22 $\Omega$ series resistor for the DT3010-268; for all other boards, 33 $\Omega$ series resistor	

- a. The input capacitance is isolated with a 330  $\Omega$  resistor to prevent typical amplifiers from oscillating with capacitive loading.
- b. The DT3010-268 board provides an External A/D Trigger and Clock Enable signal. This signal is pulled high on the DT3010-268 board by a 22 k $\Omega$  resistor. A high signal enables both the external digital trigger and the external A/D sample clock, while a low signal disables both the external digital trigger and the external A/D sample clock.



## Analog Output Specifications

Table 30 lists the specifications for the D/A subsystem on the DT3010 Series boards.

**Table 30: D/A Subsystem Specifications**

Feature	DT3010, DT3010/32, and DT3010/32-268 Specifications	DT3016 Specifications
Number of analog output channels	2 (voltage output)	
Resolution	12 bits	16 bits
Data encoding (input)	Offset binary	
Nonlinearity (integral)	$\pm 1.0$ LSB	$\pm 4.0$ LSB
Differential linearity	$\pm 0.75$ LSB (monotonic to 15 bits)	
Output range	$\pm 10$ V (bipolar)	
Error Zero: Gain:	Adjustable to 0 Adjustable to 0	
Throughput Full scale:	200 kSamples/s maximum per channel	100 kSamples/s maximum per channel
100 mV Step, continuously paced:	500 kSamples/s maximum per channel (system-dependent)	200 kSamples/s maximum per channel
100 mV Step, waveform mode:	500 kSamples/s maximum per channel	200 kSamples/s maximum per channel
Current output	$\pm 5$ mA maximum load	
Output impedance	0.1 $\Omega$ maximum	
Capacitive drive capability	0.004 $\mu$ F (no oscillators)	
Protection	Short circuit to Analog Common	
Power-on voltage	0 V $\pm 10$ mV maximum	
Settling time to 0.01% of FSR	5 $\mu$ s, 20 V step; 2.0 $\mu$ s, 100 mV step	10 $\mu$ s, 20 V step; 5.0 $\mu$ s, 100 mV step
Slew rate	10 V/ $\mu$ s	5 V/ $\mu$ s

Table 30: D/A Subsystem Specifications (cont.)

Feature	DT3010, DT3010/32, and DT3010/32-268 Specifications	DT3016 Specifications
External D/A sample clock Input type:  Input load: High-level input voltage: Low-level input voltage: Hysteresis:  High-level input current: Low-level input current: Minimum pulse width: Maximum frequency: Termination:	Schmitt trigger, falling-edge sensitive 1 HCT14 (TTL) 2.0 V minimum 0.8 V maximum 0.4 V (minimum); 1.5 V (maximum)  1.0 $\mu$ A -1.0 $\mu$ A 200 ns (high); 150 ns (low) 500 kHz 22 k $\Omega$ resistor pullup to 5 V for the DT3010-268; for all other boards, 33 $\Omega$ series resistor	Schmitt trigger, falling-edge sensitive 1 HCT14 (TTL) 2.0 V minimum 0.8 V maximum 0.4 V (minimum); 1.5 V (maximum)  1.0 $\mu$ A -1.0 $\mu$ A 200 ns (high); 150 ns (low) 200 kHz 33 $\Omega$ series resistor
External D/A digital (TTL) trigger Input type: Input load: High-level input voltage: Low-level input voltage: Hysteresis: High-level input current: Low-level input current: Minimum pulse width: Termination:	Schmitt trigger, edge sensitive 1 HCT14 (TTL) 2.0 V minimum 0.8 V maximum 0.4 V (minimum); 1.5 V (maximum)  1.0 $\mu$ A -1.0 $\mu$ A 100 ns (high); 100 ns (low) 22 k $\Omega$ resistor pullup to 5 V for the DT3010-268; for all other boards, 33 $\Omega$ series resistor	

## Digital I/O Specifications

Table 31 lists the specifications for the DIN/DOUT subsystems on the DT3010 Series boards.

**Table 31: DIN/DOUT Subsystem Specifications**

Feature	DT3010, DT3010/32, and DT3016 Specifications	DT3010/32-268 Specifications
Number of lines	16 (bidirectional)	
Number of ports	2 (8 bits each)	
Termination	47 k $\Omega$ resistor pullup to +3.3 V; 33 $\Omega$ series resistor	22 k $\Omega$ resistor pullup to +5 V; 22 $\Omega$ series resistor
Inputs Input type: Input load: High-level input voltage: Low-level input voltage: High-level input current: Low-level input current:	Level sensitive 1 TTL, 1 TTL 2.0 V minimum 0.8 V maximum 20 $\mu$ A -0.2 mA	
Outputs Output driver: Output driver high voltage: Output driver low voltage:	TTL 2.0 V minimum (IOH = -15 mA); 2.4 V minimum (IOH = -3 mA) 0.5 V maximum (IOL = 24 mA); 0.4 V maximum (IOL = 12 mA)	

## Counter/Timer Specifications

Table 32 lists the specifications for the C/T subsystems on the DT3010 Series boards.

**Table 32: C/T Subsystem Specifications**

Feature	Specifications
Number of counter/timers	4
Clock Inputs Input type: Input load: High-level input voltage: Low-level input voltage: Hysteresis: High-level input current: Low-level input current: Minimum pulse width: Maximum frequency: Termination:	Schmitt trigger, rising-edge sensitive 1 HCT14 (TTL) 2.0 V minimum 0.8 V maximum 0.4 V (minimum); 1.5 V (maximum) 1.0 $\mu$ A -1.0 $\mu$ A 100 ns (high); 100 ns (low) 5.0 MHz 22 k $\Omega$ resistor pullup to +5 V for the DT3010-268; for all other boards, 33 $\Omega$ series resistor
Gate Inputs Input type: Input load: High-level input voltage: Low-level input voltage: Hysteresis: High-level input current: Low-level input current: Minimum pulse width: Maximum frequency: Termination:	Schmitt trigger, level sensitive 1 HCT14 (TTL) 2.0 V minimum 0.8 V maximum 0.4 V (minimum); 1.5 V (maximum) 1.0 $\mu$ A -1.0 $\mu$ A 100 ns (high); 100 ns (low) 5.0 MHz 22 k $\Omega$ resistor pullup to +5 V for the DT3010-268; for all other boards, 33 $\Omega$ series resistor
Counter Outputs Output driver: Output driver high voltage: Output driver low voltage: Termination:	TTL 2.0 V minimum (IOH = -15 mA); 2.4 V minimum (IOH = -3 mA) 0.5 V maximum (IOL = 24 mA); 0.4 V maximum (IOL = 12 mA) 22 $\Omega$ series resistor for the DT3010-268; for all other boards, 33 $\Omega$ series resistor

## Power, Physical, and Environmental Specifications

Table 33 lists the power, physical, and environmental specifications for the DT3010 Series boards.

**Table 33: Power, Physical, and Environmental Specifications**

Feature	Specifications
Power +5 V ( $\pm 0.25$ V) -5 V +12 V -12 V $\pm 15$ V Output (J1, pins 6 and 7)	1.5 A nominal not used 0.12 A nominal 0.1 A nominal $\pm 10$ mA nominal
Physical Dimensions: Weight:	8.5 inches (length) by 4.2 inches (width) 5.95 ounces (170 grams)
Environmental Operating temperature range: Storage temperature range: Relative humidity:	0° C to 70° C -25° C to 85° C To 95%, noncondensing

## Connector Specifications

Table 34 lists the connector specifications for the DT3010, DT3010/32, DT3010/32-268, and DT3016 boards and corresponding cables.

**Table 34: Connector Specifications for the DT3010, DT3010/32, DT3010/32-268, and DT3016**

Feature	Specifications
50-Pin Connector Plug for cable: Cable shell kit: Cable wire: Receptacle for board: Latching posts:	AMP/Tyco 5787131-1 AMP/Tyco 787133-1 AMP/Tyco 57506-1 AMP/Tyco 6658751-1 AMP/Tyco 787003-3 (bag of 200)
68-Pin Connector Plug for cable: Cable shell kit: Cable wire: Receptacle for board: Latching posts:	AMP/Tyco 5787131-3 AMP/Tyco 787229-1 AMP/Tyco 57508-1 Molex 71430-0101 AMP/Tyco 787003-3 (bag of 200)
EP307	Amp/Tyco 1-636326-1
EP308	Amp/Tyco 1-636327-1

Table 35 lists the connector specifications for the DT3010-268 board and corresponding cables.

**Table 35: Connector Specifications for the DT3010-268 Board**

Feature	Specifications
68-Pin Connector Receptacles for EP324:  2 Screwlocks for EP324: 6 foot DB68 male to DB68 male (EP325): Receptacle for board: 2 Screwlocks for board: Header for board:	Ribbon: AMP/Tyco 3-111196-4 D-Sub: AMP/Tyco 5-749877-7 AMP/Tyco 750644-1 AMP/Tyco 621885-2 AMP/Tyco 5787170-7 AMP/Tyco 750644-1 AMP/Tyco 6-104068-8
EP307	Amp/Tyco 1-636326-1
EP308	Amp/Tyco 1-636327-1

## Regulatory Specifications

Table 36 lists the regulatory specifications for the DT3010 Series boards.

**Table 36: Regulatory Specifications**

Feature	Specifications
Emissions (EMI)	FCC Part 15, EN55022:1994 + A1:1995 + A2:1997 VCCI, AS/NZS 3548 Class A
Immunity	EN61000-6-1:2001
RoHS (EU Directive 2002/95/EG)	Compliant (as of July 1st, 2006)







## ***Connector Pin Assignments***

Connector J1 on the DT3010, DT3010/32, and DT3016 Boards.....	194
Connector J2 on the DT3010, DT3010/32, and DT3016 Boards.....	196
Connector J1 on the DT3010-268 and DT3010/32-268 Board.....	198
Connector J2 on the DT3010-268 and DT3010/32-268 Board.....	200
Connector J1 on the DT740.....	202
Connector J2 on the DT740.....	203
Screw Terminal Assignments for the STP268.....	205
Screw Terminal Assignments for the STP268-EC.....	208

## Connector J1 on the DT3010, DT3010/32, and DT3016 Boards

Table 37 lists the pin assignments of connector J1 on the DT3010, DT3010/32, and DT3016 boards.

**Table 37: Connector J1 Pin Assignments on the DT3010, DT3010/32, and DT3016 Boards**

Pin	Signal Description	Pin	Signal Description
1	+5 V Ref_Out	2	Reserved
3	Reserved	4	Analog Output 1+
5	Analog Output 0+	6	-15 V output
7	+15 V output	8	Shield Ground
9	Amp Low	10	Analog Input 23/15
11	Analog Input 22/14	12	Analog Input 21/13
13	Analog Input 20/12	14	Analog Input 19/11
15	Analog Input 18/10	16	Analog Input 17/09
17	Analog Input 16/08	18	Analog Input 07
19	Analog Input 06	20	Analog Input 05
21	Analog Input 04	22	Analog Input 03
23	Analog Input 02	24	Analog Input 01
25	Analog Input 00	26	Analog Ground
27	Reserved	28	Reserved
29	Analog Output 1 Return	30	Analog Output 0 Return
31	Reserved	32	Power Ground
33	Shield Ground	34	Analog Ground
35	Analog Input 31/ Analog Input 15 Return	36	Analog Input 30/ Analog Input 14 Return
37	Analog Input 29/ Analog Input 13 Return	38	Analog Input 28/ Analog Input 12 Return
39	Analog Input 27/ Analog Input 11 Return	40	Analog Input 26/ Analog Input 10 Return
41	Analog Input 25/ Analog Input 09 Return	42	Analog Input 24/ Analog Input 08 Return
43	Analog Input 15/ Analog Input 07 Return	44	Analog Input 14/ Analog Input 06 Return

**Table 37: Connector J1 Pin Assignments on the DT3010, DT3010/32, and DT3016 Boards (cont.)**

Pin	Signal Description	Pin	Signal Description
45	Analog Input 13/ Analog Input 05 Return	46	Analog Input 12/ Analog Input 04 Return
47	Analog Input 11/ Analog Input 03 Return	48	Analog Input 10/ Analog Input 02 Return
49	Analog Input 09/ Analog Input 01 Return	50	Analog Input 08/ Analog Input 00 Return

## Connector J2 on the DT3010, DT3010/32, and DT3016 Boards

Table 38 lists the pin assignments of connector J2 on the DT3010, DT3010/32, and DT3016 boards.

**Table 38: Connector J2 Pin Assignments on the DT3010, DT3010/32, and DT3016 Boards**

Pin	Signal Description	Pin	Signal Description
1	+ 5 V Output	2	+ 5 V Output
3	Reserved	4	A/D Sample Clock Output
5	A/D Trigger Output	6	External A/D TTL Trigger
7	External A/D Sample Clock Input	8	External D/A TTL Trigger
9	External D/A Clock Input	10	User Counter Output 3
11	User Clock Input 3	12	User Counter Output 2
13	User Clock Input 2	14	User Counter Output 1
15	User Clock Input 1	16	User Counter Output 0
17	User Clock Input 0	18	Digital Ground
19	Digital I/O Bank B 3	20	Digital I/O Bank B 2
21	Digital I/O Bank B 1	22	Digital I/O Bank B 0
23	Digital Ground	24	Digital I/O Bank A 3
25	Digital I/O Bank A 2	26	Digital I/O Bank A 1
27	Digital I/O Bank A 0	28	Digital Ground
29	Dynamic Digital Output 1	30	Dynamic Digital Output 0
31	Reserved	32	Reserved
33	Shield Ground	34	Analog Trigger
35	Digital Ground	36	Digital Ground
37	Reserved	38	Digital Ground
39	Digital Ground	40	Digital Ground
41	Digital Ground	42	Digital Ground
43	Digital Ground	44	External Gate 3
45	Digital Ground	46	External Gate 2
47	Digital Ground	48	External Gate 1
49	Digital Ground	50	External Gate 0
51	Digital Ground	52	Digital Ground
53	Digital I/O Bank B 7	54	Digital I/O Bank B 6

**Table 38: Connector J2 Pin Assignments on the DT3010, DT3010/32, and DT3016 Boards (cont.)**

Pin	Signal Description	Pin	Signal Description
55	Digital I/O Bank B 5	56	Digital I/O Bank B 4
57	Digital Ground	58	Digital I/O Bank A 7
59	Digital I/O Bank A 6	60	Digital I/O Bank A 5
61	Digital I/O Bank A 4	62	Digital Ground
63	Digital Ground	64	Digital Ground
65	Reserved	66	Reserved
67	Shield Ground	68	Analog Trigger Return

## Connector J1 on the DT3010-268 and DT3010/32-268 Board

Table 39 lists the pin assignments of connector J1 on the DT3010-268 and DT3010/32-268 board.

**Table 39: Connector J1 Pin Assignments on the DT3010-268 and DT3010/32-268 Board**

Pin	Signal Description	Pin	Signal Description
1	+5 V Output	2	User Counter Output 1
3	User Counter Output 0	4	Digital Ground
5	User Clock Input 0	6	Digital I/O Bank A3
7	Digital I/O Bank A2	8	Digital I/O Bank A1
9	Digital I/O Bank A0	10	External D/A TTL Trigger
11	+15 V Output	12	-15 V Output
13	External A/D Sample Input	14	External A/D TTL Trigger
15	Analog Trigger	16	Analog Output 1+
17	Analog Output 0+	18	Amp Low
19	Analog Input 23/ Analog Input 15 Return	20	Analog Input 22/ Analog Input 14 Return
21	Analog Input 21/ Analog Input 13 Return	22	Analog Input 20/ Analog Input 12 Return
23	Analog Input 19/ Analog Input 11 Return	24	Analog Input 18/ Analog Input 10 Return
25	Analog Input 17/ Analog Input 09 Return	26	Analog Input 16/ Analog Input 08 Return
27	Analog Input 07	28	Analog Input 06
29	Analog Input 05	30	Analog Input 04
31	Analog Input 03	32	Analog Input 02
33	Analog Input 01	34	Analog Input 00
35	Digital Ground	36	External Gate 1
37	External Gate 0	38	User Clock Input 1
39	Digital Ground	40	Digital I/O Bank A7
41	Digital I/O Bank A6	42	Digital I/O Bank A5
43	Digital I/O Bank A4	44	External D/A Clock Input
45	Power Ground	46	A/D Trigger Output
47	A/D Sample Clock Output	48	External A/D Trigger and Clock Enable
49	Analog Ground	50	+5 V Ref_Out

**Table 39: Connector J1 Pin Assignments on the DT3010-268 and DT3010/32-268 Board (cont.)**

Pin	Signal Description	Pin	Signal Description
51	Analog Output 0 Ground	52	Analog Ground
53	Analog Input 31/ Analog Input 23 Return	54	Analog Input 30/ Analog Input 22 Return
55	Analog Input 29/ Analog Input 21 Return	56	Analog Input 28/ Analog Input 20 Return
57	Analog Input 27/ Analog Input 19 Return	58	Analog Input 26/ Analog Input 18 Return
59	Analog Input 25/ Analog Input 17 Return	60	Analog Input 24/ Analog Input 16 Return
61	Analog Input 15/ Analog Input 07 Return	62	Analog Input 14/ Analog Input 06 Return
63	Analog Input 13/ Analog Input 05 Return	64	Analog Input 12/ Analog Input 04 Return
65	Analog Input 11/ Analog Input 03 Return	66	Analog Input 10/ Analog Input 02 Return
67	Analog Input 09/ Analog Input 01 Return	68	Analog Input 08/ Analog Input 00 Return

## Connector J2 on the DT3010-268 and DT3010/32-268 Board

Table 40 lists the pin assignments of connector J2 on the DT3010-268 and DT3010/32-268 board.

**Table 40: Connector J2 Pin Assignments on the DT3010-268 and DT3010/32-268 Board**

Pin	Signal Description	Pin	Signal Description
1	+5 V Output	2	User Counter Output 3
3	User Counter Output 2	4	Digital Ground
5	User Clock Input 2	6	Digital I/O Bank B3
7	Digital I/O Bank B2	8	Digital I/O Bank B1
9	Digital I/O Bank B0	10	Reserved
11	Reserved	12	Reserved
13	Dynamic Digital Output 0	14	Dynamic Digital Output 1
15	Reserved	16	Reserved
17	Reserved	18	Reserved
19	Reserved	20	Reserved
21	Reserved	22	Reserved
23	Reserved	24	Reserved
25	Reserved	26	Reserved
27	Reserved	28	Reserved
29	Reserved	30	Reserved
31	Reserved	32	Reserved
33	Reserved	34	Reserved
35	Digital Ground	36	External Gate 3
37	External Gate 2	38	User Clock Input 3
39	Digital Ground	40	Digital I/O Bank B7
41	Digital I/O Bank B6	42	Digital I/O Bank B5
43	Digital I/O Bank B4	44	Reserved
45	Reserved	46	Reserved
47	Reserved	48	Digital Ground
49	Reserved	50	Reserved
51	Reserved	52	Reserved
53	Reserved	54	Reserved



**Table 40: Connector J2 Pin Assignments on the DT3010-268 and DT3010/32-268 Board (cont.)**

Pin	Signal Description	Pin	Signal Description
55	Reserved	56	Reserved
57	Reserved	58	Reserved
59	Reserved	60	Reserved
61	Reserved	62	Reserved
63	Reserved	64	Reserved
65	Reserved	66	Reserved
67	Reserved	68	Reserved

## Connector J1 on the DT740

Table 41 lists the screw terminal assignments for connector J1 on the DT740 screw terminal panel.

**Table 41: Pin Assignments for Connector J1 on the DT740**

TB	J1 Pin	Signal Description	TB	J1 Pin	Signal Description
1	25	Analog Input 00	2	50	Analog Input 08/00 Return
3	24	Analog Input 01	4	49	Analog Input 09/01 Return
5	23	Analog Input 02	6	48	Analog Input 10/02 Return
7	22	Analog Input 03	8	47	Analog Input 11/03 Return
9	21	Analog Input 04	10	46	Analog Input 12/04 Return
11	20	Analog Input 05	12	45	Analog Input 13/05 Return
13	19	Analog Input 06	14	44	Analog Input 14/06 Return
15	18	Analog Input 07	16	43	Analog Input 15/07 Return
17	17	Analog Input 16/08	18	42	Analog Input 24/08 Return
19	16	Analog Input 17/09	20	41	Analog Input 25/09 Return
21	15	Analog Input 18/10	22	40	Analog Input 26/10 Return
23	14	Analog Input 19/11	24	39	Analog Input 27/11 Return
25	13	Analog Input 20/12	26	38	Analog Input 28/12 Return
27	12	Analog Input 21/13	28	37	Analog Input 29/13 Return
29	11	Analog Input 22/14	30	36	Analog Input 30/14 Return
31	10	Analog Input 23/15	32	35	Analog Input 31/15 Return
33	9	Amp Low	34	34	Analog Ground
35	8	Analog Shield Ground	36	33	Analog Shield Ground
37	7	+15 V Output	38	32	Power Ground
39	6	-15 V Output	40	31	Reserved
41	5	Analog Output 0+	42	30	Analog Output 0 Return
43	4	Analog Output 1+	44	29	Analog Output 1 Return
45	3	Reserved	46	28	Reserved
47	2	Reserved	48	27	Reserved
49	1	+5 V Reference Out	50	26	Analog Ground
51	-	Analog Shield Ground	52	-	Analog Shield Ground
53	-	Analog Shield Ground	54	-	Analog Shield Ground
55	-	Analog Shield Ground	56	-	Analog Shield Ground

## Connector J2 on the DT740

Table 42 lists the screw terminal assignments for connector J2 on the DT740 screw terminal panel.

**Table 42: Screw Terminal Assignments for Connector J2 on the DT740 Screw Terminal Panel**

TB	J2 Pin	Signal Description	TB	J2 Pin	Signal Description
57	51, 52	Digital Ground	58	17	User Clock Input 0
59	16	User Counter Output 0	60	50	External Gate 0
61	49	Digital Ground	62	15	User Clock Input 1
63	14	User Counter Output 1	64	48	External Gate 1
65	47	Digital Ground	66	13	User Clock Input 2
67	12	User Counter Output 2	68	46	External Gate 2
69	45	Digital Ground	70	11	User Clock Input 3
71	10	User Counter Output 3	72	44	External Gate 3
73	43	Digital Ground	74	9	External D/A Sample Clock In
75	8	External D/A TTL Trigger	76	7	External A/D Sample Clock In
77	6	External A/D TTL Trigger	78	5	A/D Trigger Out
79	4	A/D Sample Clock Out	80	3	Reserved
81	23, 28, 42	Digital Ground	82	39, 41, 57, 62	Digital Ground
83	18, 38, 40, 63, 64	Digital Ground	84	65	Reserved
85	31	Reserved	86	37	Reserved
87	30	Dynamic Digital Output 0	88	29	Dynamic Digital Output 1
89	27	Digital I/O Bank A 0	90	26	Digital I/O Bank A 1
91	25	Digital I/O Bank A 2	92	24	Digital I/O Bank A 3
93	61	Digital I/O Bank A 4	94	60	Digital I/O Bank A 5
95	59	Digital I/O Bank A 6	96	58	Digital I/O Bank A 7
97	22	Digital I/O Bank B 0	98	21	Digital I/O Bank B 1
99	20	Digital I/O Bank B 2	100	19	Digital I/O Bank B 3
101	56	Digital I/O Bank B 4	102	55	Digital I/O Bank B 5
103	54	Digital I/O Bank B 6	104	53	Digital I/O Bank B 7

**Table 42: Screw Terminal Assignments for Connector J2 on the DT740 Screw Terminal Panel (cont.)**

TB	J2 Pin	Signal Description	TB	J2 Pin	Signal Description
105	33	Digital Shield Ground	106	68	Analog Ground
107	34	Analog Trigger	108	67	Digital Shield Ground
109	32	Reserved	110	66	Reserved
111	35, 36	Digital Ground	112	1, 2	+5 V Out

## Screw Terminal Assignments for the STP268

Table 43 lists the screw terminal assignments for the STP268 screw terminal panel attached to connector J1 on the DT3010-286.

**Table 43: Screw Terminal Assignments for the STP268 Attached to Connector J1**

TB	J1 Pin	Signal Description	TB	J1 Pin	Signal Description
1	34	Analog Input 00	2	68	Analog Input 08/ Analog Input 00 Return
3	33	Analog Input 01	4	67	Analog Input 09/ Analog Input 01 Return
5	32	Analog Input 02	6	66	Analog Input 10/ Analog Input 02 Return
7	31	Analog Input 03	8	65	Analog Input 11/ Analog Input 03 Return
9	30	Analog Input 04	10	64	Analog Input 12/ Analog Input 04 Return
11	29	Analog Input 05	12	63	Analog Input 13/ Analog Input 05 Return
13	28	Analog Input 06	14	62	Analog Input 14/ Analog Input 06 Return
15	27	Analog Input 07	16	61	Analog Input 15/ Analog Input 07 Return
17	26	Analog Input 16	18	60	Analog Input 24/ Analog Input 16 Return
19	25	Analog Input 17	20	59	Analog Input 25/ Analog Input 17 Return
21	24	Analog Input 18	22	58	Analog Input 26/ Analog Input 18 Return
23	23	Analog Input 19	24	57	Analog Input 27/ Analog Input 19 Return
25	22	Analog Input 20	26	56	Analog Input 28/ Analog Input 20 Return
27	21	Analog Input 21	28	55	Analog Input 29/ Analog Input 21 Return
29	20	Analog Input 22	30	54	Analog Input 30/ Analog Input 22 Return
31	19	Analog Input 23	32	53	Analog Input 31/ Analog Input 23 Return
33	18	Amp Low	34	49	Analog Ground
35	11	+15 V Output	36	45	Power Ground
37	12	-15 V Output	38	46	A/D Trigger Output

**Table 43: Screw Terminal Assignments for the STP268 Attached to Connector J1 (cont.)**

TB	J1 Pin	Signal Description	TB	J1 Pin	Signal Description
39	15	Analog Trigger	40	52	Analog Ground
41	17	Analog Output 0+	42	51	Analog Output Ground
43	16	Analog Output 1+	44	50	+5 Volts_Ref Output
45	10	External D/A TTL Trigger	46	44	External D/A Clock Input
47	47	A/D Sample Clock Output	48	13	External A/D Sample Clock Input
49	14	External A/D TTL Trigger	50	48	External A/D Trigger and Clock Enable
51	35	Digital Ground	52	1	+5 V Output
53	39	Digital Ground	54	5	User Clock Input 0
55	3	User Counter Output 0	56	37	External Gate 0
57	4	Digital Ground	58	38	User Clock Input 1
59	2	User Counter Output 1	60	36	External Gate 1
61	9	Digital I/O Bank A0	62	8	Digital I/O Bank A1
63	7	Digital I/O Bank A2	64	6	Digital I/O Bank A3
65	43	Digital I/O Bank A4	66	42	Digital I/O Bank A5
67	41	Digital I/O Bank A6	68	40	Digital I/O Bank A7

Table 44 lists the screw terminal assignments for connector J2 on the STP268 screw terminal panel.

**Table 44: Screw Terminal Assignments for the STP268 Attached to Connector J2**

TB	J2 Pin	Signal Description	TB	J2 Pin	Signal Description
1	–	Reserved	2	–	Reserved
3	–	Reserved	4	–	Reserved
5	–	Reserved	6	–	Reserved
7	–	Reserved	8	–	Reserved
9	–	Reserved	10	–	Reserved
11	–	Reserved	12	–	Reserved
13	–	Reserved	14	–	Reserved
15	–	Reserved	16	–	Reserved
17	–	Reserved	18	–	Reserved

**Table 44: Screw Terminal Assignments for the STP268 Attached to Connector J2 (cont.)**

TB	J2 Pin	Signal Description	TB	J2 Pin	Signal Description
19	–	Reserved	20	–	Reserved
21	–	Reserved	22	–	Reserved
23	–	Reserved	24	–	Reserved
25	–	Reserved	26	–	Reserved
27	–	Reserved	28	–	Reserved
29	–	Reserved	30	–	Reserved
31	–	Reserved	32	–	Reserved
33	–	Reserved	34	–	Reserved
35	–	Reserved	36	–	Reserved
37	–	Reserved	38	–	Reserved
39	–	Reserved	40	–	Reserved
41	–	Reserved	42	–	Reserved
43	–	Reserved	44	–	Reserved
45	–	Reserved	46	–	Reserved
47	–	Reserved	48	13	Dynamic Digital Output 0
49	14	Dynamic Digital Output 1	50	4, 35, 39	Digital Ground
51	4, 35, 39	Digital Ground	52	1	+5 V Output
53	4, 35, 39	Digital Ground	54	5	User Clock Input 2
55	3	User Counter Output 2	56	37	External Gate 2
57	4, 35, 39	Digital Ground	58	38	User Clock Input 3
59	2	User Counter Output 3	60	36	External Gate 3
61	9	Digital I/O Bank B0	62	8	Digital I/O Bank B1
63	7	Digital I/O Bank B2	64	6	Digital I/O Bank B3
65	43	Digital I/O Bank B4	66	42	Digital I/O Bank B5
67	41	Digital I/O Bank B6	68	40	Digital I/O Bank B7

## Screw Terminal Assignments for the STP268-EC

Table 45 lists the screw terminal assignments for connector J1 on the STP268-EC screw terminal panel.

**Table 45: Screw Terminal Assignments for Connector J1 on the STP268-EC**

TB	J1 Pin	Signal Description	TB	J1 Pin	Signal Description
1	1	+5 V Output	2	2	User Counter Output 1
3	3	User Counter Output 0	4	4	Digital Ground
5	5	User Clock Input 0	6	6	Digital I/O Bank A3
7	7	Digital I/O Bank A2	8	8	Digital I/O Bank A1
9	9	Digital I/O Bank A0	10	10	External D/A TTL Trigger
11	11	+15 V Output	12	12	-15 V Output
13	13	External A/D Sample Input	14	14	External A/D TTL Trigger
15	15	Analog Trigger	16	16	Analog Output 1+
17	17	Analog Output 0+	18	18	Amp Low
19	19	Analog Input 23	20	20	Analog Input 22
21	21	Analog Input 21	22	22	Analog Input 20/
23	23	Analog Input 19	24	24	Analog Input 18
25	25	Analog Input 17	26	26	Analog Input 16
27	27	Analog Input 07	28	28	Analog Input 06
29	29	Analog Input 05	30	30	Analog Input 04
31	31	Analog Input 03	32	32	Analog Input 02
33	33	Analog Input 01	34	34	Analog Input 00
35	35	Digital Ground	36	36	External Gate 1
37	37	External Gate 0	38	38	User Clock Input 1
39	39	Digital Ground	40	40	Digital I/O Bank A7
41	41	Digital I/O Bank A6	42	42	Digital I/O Bank A5
43	43	Digital I/O Bank A4	44	44	External D/A Clock Input
45	45	Power Ground	46	46	A/D Trigger Output
47	47	A/D Sample Clock Output	48	48	External A/D Trigger and Clock Enable
49	49	Analog Ground	50	50	+5 V Ref_Out
51	51	Analog Output Ground	52	52	Analog Ground
53	53	Analog Input 31/ Analog Input 23 Return	54	54	Analog Input 30/ Analog Input 22 Return



**Table 45: Screw Terminal Assignments for Connector J1 on the STP268-EC (cont.)**

TB	J1 Pin	Signal Description	TB	J1 Pin	Signal Description
55	55	Analog Input 29/ Analog Input 21 Return	56	56	Analog Input 28/ Analog Input 20 Return
57	57	Analog Input 27/ Analog Input 19 Return	58	58	Analog Input 26/ Analog Input 18 Return
59	59	Analog Input 25/ Analog Input 17 Return	60	60	Analog Input 24/ Analog Input 16 Return
61	61	Analog Input 15/ Analog Input 07 Return	62	62	Analog Input 14/ Analog Input 06 Return
63	63	Analog Input 13/ Analog Input 05 Return	64	64	Analog Input 12/ Analog Input 04 Return
65	65	Analog Input 11/ Analog Input 03 Return	66	66	Analog Input 10/ Analog Input 02 Return
67	67	Analog Input 09/ Analog Input 01 Return	68	68	Analog Input 08/ Analog Input 00 Return

Table 46 lists the screw terminal assignments for connector J2 on the STP268-EC screw terminal panel.

**Table 46: Screw Terminal Assignments for Connector J2 on the STP268-EC**

TB	J2 Pin	Signal Description	TB	J2 Pin	Signal Description
6	41	Digital I/O 3	7	43	Digital I/O 2
8	45	Digital I/O 1	9	47	Digital I/O 0
40	33	Digital I/O 7	41	35	Digital I/O 6
42	37	Digital I/O 5	43	39	Digital I/O 4

Table 47 lists the screw terminal assignments for connector J3 on the STP268-EC screw terminal panel.

**Table 47: Screw Terminal Assignments for Connector J3 on the STP268-EC**

TB	J3 Pin	Signal Description	TB	J3 Pin	Signal Description
16	22	DAC1_OUT <sup>a</sup>	17	20	DAC0_OUT <sup>b</sup>
18	25	Amp Low	–	26	Not Connected
27	23	Analog Input 07	28	19	Analog Input 06
29	17	Analog Input 05	30	13	Analog Input 04
31	11	Analog Input 03	32	7	Analog Input 02
33	5	Analog Input 01	34	1	Analog Input 00

**Table 47: Screw Terminal Assignments for Connector J3 on the STP268-EC (cont.)**

TB	J3 Pin	Signal Description	TB	J3 Pin	Signal Description
51	21, 24	Analog Ground <sup>c</sup>	52	3, 6, 9, 12, 15, 18, 21, 24	Analog Ground
61	22	Analog Input 15 <sup>d</sup> Analog Input 07 Return	62	20	Analog Input 14 <sup>e</sup> / Analog Input 06 Return
63	16	Analog Input 13/ Analog Input 05 Return	64	14	Analog Input 12/ Analog Input 04 Return
65	10	Analog Input 11/ Analog Input 03 Return	66	8	Analog Input 10/ Analog Input 02 Return
67	4	Analog Input 09/ Analog Input 01 Return	68	2	Analog Input 08/ Analog Input 00 Return

- a. Jumper W3 must be installed on the STP268-EC. If this jumper is not installed, this signal is not available through this connector.
- b. Jumper W2 must be installed on the STP268-EC. If this jumper is not installed, this signal is not available through this connector.
- c. Jumper W1 must be installed on the STP268-EC for DAC0 Ground; jumper W4 must be installed on the STP268-EC for DAC1 Ground. If these jumpers are not installed, this signal is not available through this connector.
- d. If jumper W3 is installed on the STP268-EC, this signal is not available through this connector.
- e. If jumper W2 is installed on the STP268-EC, this signal is not available through this connector.

Table 48 lists the screw terminal assignments for connector J4 on the STP268-EC screw terminal panel.

**Table 48: Screw Terminal Assignments for Connector J4 on the STP268-EC**

TB	J4 Pin	Signal Description	TB	J4 Pin	Signal Description
19	23	Analog Input 23	20	19	Analog Input 22
21	17	Analog Input 21	22	13	Analog Input 20
23	11	Analog Input 19	24	7	Analog Input 18
25	5	Analog Input 17	26	1	Analog Input 16
52	3, 6, 9, 12, 15, 18, 21, 24	Analog Ground	53	22	Analog Input 31 Analog Input 23 Return
54	20	Analog Input 30 Analog Input 22 Return	55	16	Analog Input 29 Analog Input 21 Return
56	14	Analog Input 28 Analog Input 20 Return	57	10	Analog Input 27 Analog Input 19 Return

**Table 48: Screw Terminal Assignments for Connector J4 on the STP268-EC (cont.)**

TB	J4 Pin	Signal Description	TB	J4 Pin	Signal Description
58	8	Analog Input 26 Analog Input 18 Return	59	4	Analog Input 25 Analog Input 17 Return
60	2	Analog Input 24 Analog Input 16 Return	–	25	Not Connected
–	26	Not Connected			





## ***Using Your Own Screw Terminal Panel***

Analog Inputs .....	215
Analog Outputs .....	217
Digital Inputs and Counter/Timer Inputs .....	218
Digital Outputs .....	219
Cabling Information .....	220

Data acquisition boards can perform only as well as the input connections and signal integrity you provide. If you choose not to use the DT740, STP268, or STP268-EC screw terminal panel, considerations must be given as to how the signals interact in the real world as well as how they interact with each other.

This appendix describes additional considerations to keep in mind when designing your own screw terminal panel for use with a DT3010 Series board.

## Analog Inputs

Typical data acquisition boards have three different types of analog input configurations that you can use:

- Single-ended
- Pseudo-differential
- Differential

### Single-Ended Inputs

With single-ended inputs, you have the maximum number of inputs but have the worst-case noise immunity without external signal conditioning.

The major problem with this configuration is that you need a common ground between the external inputs and the data acquisition board. Even with conditioning, consideration must be given to the cable length and how the cable is routed. If the cable is over 3 feet, you must consider the ringing and cross-talk in the cable. A typical cable has 30 pF per foot of capacitance. If the source impedance is 1,000  $\Omega$  and the cable is 3 feet, then the cross talk based on the source impedance is  $1,000 \Omega \times (30 \text{ pF} \times 3 \text{ ft}) = 90 \text{ ns}$ .

This seems negligible, but when you consider that it requires nine time constants to settle within 0.01%, the cross-talk becomes almost 10% of the time required to settle when switching channels at 100 kHz.

Coupling must also be considered when adjacent channels have high-speed signals, especially if these signals are TTL-type with high-speed edges.

### Pseudo-Differential Inputs

Pseudo-differential inputs allow one common-mode voltage for all single-ended inputs. With this type of connection, the low side of the instrumentation amplifier is used to sense an external common-mode voltage. For example, if you have a signal-conditioning rack, the AMP LOW signal connects to the analog common of the external rack.

The pseudo-differential configuration allows you to use the maximum number of input channels, while placing an impedance between the external ground and the data acquisition ground or analog common. Even if it is 100  $\Omega$ , this impedance provides the bias return currents for the inputs and causes only 10 mA of current to flow with a ground potential difference of 1 V. (The input bias current is typically in milliamperes.) This is usually manageable by the common-mode range of the instrumentation amplifier and analog ground system. Consider the problems with 1  $\Omega$  of impedance between 1 V of potential difference. The resulting 1 A of current causes many problems in the analog signal integrity.

If it is provided and not used, ensure that you connect AMP LOW to the analog common of the data acquisition board or to ground when running in single-ended mode.

## Differential Inputs

Differential inputs offer the maximum noise rejection at the expense of half your total channel count. For the best results, shielded twisted pairs are a must. The shield must connect at one end so that ground currents do not travel over the shield. In low-level voltage applications, differential inputs reduce problems not only due to electrostatic and magnetic noise, but due to cross-talk and thermal errors.

One problem to consider with differential inputs is the bias current error. The differential impedance is usually hundreds of megaohms. With a very small bias current multiplied by this high input impedance, the voltage produced is out of the common-mode input range of the instrumentation amplifier.

An external resistor must be provided to return this bias current to the analog common of the data acquisition board. This resistor is typically in the order of 1 k $\Omega$  to 100 k $\Omega$  from the input low side to analog common. Alternatively, the external common can be returned through a 10  $\Omega$  to 100 k $\Omega$  resistor to analog common (it cannot be 0  $\Omega$  due to ground currents).



## **Analog Outputs**

Most data acquisition boards have a minimum of two analog output channels, with a resolution of 12 to 16 bits (even though the accuracy may be less).

On all Data Translation boards, we ensure that the analog outputs do not break into a high frequency oscillation with high capacitance loads that may be experienced with long cables. Typically, the analog outputs drive 1,000 pF without degradation and bandwidth-limit with higher capacitive loads.

The grounds of most boards are optimized for analog inputs at the expense of some logic or high-frequency noise on the analog outputs. This is because the analog and digital grounds of the board are connected at the ADC's input.

The analog outputs are brought out as a high and a low signal, but the low side is the analog ground at the DAC's output buffer. To remove the high-frequency noise and smooth the glitch energy on the analog outputs, you can install a 15 kHz RC filter on the output, a 100  $\Omega$  resistor in series with the output, and a 0.1  $\mu$ F capacitor between the output side of the 100  $\Omega$  resistor and output low.

## ***Digital Inputs and Counter/Timer Inputs***

TTL-type inputs must have current limiting so that circuitry is not damaged when power is removed. On all Data Translation PCI boards, current limiting is used to prevent damage in this fault condition.

On high-speed clock inputs, a ground that is located in the connector next to the clock must be connected as a twisted pair with the high-speed clock input.

## ***Digital Outputs***

If you are using the high drive capability of any of the PCI boards, ensure that the load is returned to the digital ground provided in the connector next to the outputs.

If just eight of the digital outputs are switching 16 mA per output, then 128 mA of current flows. To minimize problems with ringing, loading, and EMI, a 33  $\Omega$  resistor (22 series  $\Omega$  resistor on the DT3010-268 board only) is used in series with all digital outputs. You must consider this resistor if you are matching cable impedance to the far end.

## ***Cabling Information***

If you are building your own screw terminal panel and/or cable, refer to [Appendix A](#) for connector specifications.

## Numerics

- 5B01 backplane 19
  - attaching 42
  - considerations when connecting signals 51
- 5B08 backplane 19
  - attaching 42
  - considerations when connecting signals 51
- 7BP04-1 backplane 19
  - attaching 43
  - considerations when connecting signals 51
- 7BP08-1 backplane 19
  - attaching 43
  - considerations when connecting signals 51
- 7BP16-1 backplane 19
  - attaching 43
  - considerations when connecting signals 51

## A

- A/D Over Sample error 120
- A/D sample clock 108
  - external 109
  - internal 109
- A/D subsystem 105
  - specifications 182
- A/D Trigger Out signal 111, 112, 113
- about-trigger acquisition mode 118, 149
- abrupt stop
  - analog input 110
  - analog output 126
- AC1315 cable 19, 20, 42, 43
- AC1393 adapter cable 43
- AC1393 cable 20
- accessories 19
- acquisition modes
  - about-trigger 118
  - post-trigger 115
  - pre-trigger 116
- aliasing 109
- analog input channel configuration
  - differential 63
  - pseudo-differential 63
  - single-ended 63
- analog input features 105
  - A/D sample clock 108
  - calibrating 161
  - channel list 106
  - channels 105
  - continuous operations 110
  - conversion modes 110
  - data format 119
  - error conditions 120
  - gains 107
  - input ranges 107
  - resolution 105
  - single-value operations 110
  - specifications 182
  - trigger acquisition modes 115
  - trigger sources 113
- analog output features 122
  - calibrating 169
  - channel list 123
  - channels 122
  - continuous operations 125
  - conversion modes 125
  - D/A output clock 123
  - data format and transfer 127
  - error conditions 128
  - gains 123
  - output ranges 123
  - resolution 122
  - single-value operations 125
  - specifications 185
  - trigger sources 124
- analog threshold trigger 114, 125, 144
  - analog input channel 114, 125, 144
  - external 114, 125
- application wiring
  - connecting analog outputs 72
  - connecting counter/timer signals 77
  - connecting current loop analog inputs 70
  - connecting differential analog inputs 66
  - connecting digital I/O signals 74
  - connecting event counting signals 77, 83
  - connecting externally cascaded counter/timers 86, 88, 89
  - connecting pseudo-differential analog inputs 65
  - connecting pulse output signals 85
  - connecting single-ended analog inputs 63
- attaching backplanes 40
- attaching the DT740 39
- attaching the STP268 39
- attaching the STP268-EC 40

**B**

- banks (digital I/O) 129
- base clock frequency 155
- BaseClockFrequency 155
- bias return resistors
  - DT740 45
  - STP268 46
- binary data encoding 151
- bipolar signals 107
- block diagram 104
- buffers 126, 127, 150
  - inprocess flush 150
  - single wrap mode 150
- bus mastering, PCI 120
- bus slave, PCI 127

**C**

- C/C++ programs 18
- C/T clock sources 131
  - cascaded C/T clock 132
  - external C/T clock 132
  - internal C/T clock 132
- C/T subsystem 131
  - specifications 188
- cables
  - AC1315 19, 20, 42, 43
  - AC1393 20
  - AC1393 adapter 43
  - EP035 20, 43
  - EP307 19
  - EP308 19
  - EP324 19
  - EP325 19
- cabling information 220
- calibrating the board 18
  - analog input subsystem 161
  - analog output subsystem 169
  - running the utility 163, 166
- cascading counters 132, 156
  - externally 86, 88, 89
- CGLDepth 151
- channel list
  - analog input 106
  - analog output 123
- channel type
  - differential 105, 151
  - pseudo-differential 105
  - single-ended 105, 151
- channel-gain list 106
  - depth 151
- Channel-Gain List FIFO 106
- channel-list inhibit 151
- channels
  - analog input 105
  - analog output 122
  - counter/timer 131
  - digital I/O 129
  - number of 151
- circular buffer 126, 127
- CJC, on 5B Series modules 52
- clock sources
  - external A/D sample clock 109
  - external C/T clock 132
  - external D/A output clock 124
  - internal A/D sample clock 109
  - internal C/T clock 132
  - internal D/A output clock 123
  - internal retrigger clock 111
  - internally cascaded C/T clock 132
- clocks
  - base frequency 155
  - external 155
  - internal 155
  - maximum external clock divider 155
  - maximum throughput 155
  - minimum external clock divider 155
  - minimum throughput 155
- common ground sense
  - DT740 44
  - STP268 46
- configuring the DT740 screw terminal panel 44
- configuring the STP268 screw terminal panel 45
- configuring the STP268-EC screw terminal panel 47
- connecting signals
  - analog outputs 72
  - counter/timer signals 77
  - current loop analog inputs 70
  - differential analog inputs 66
  - digital I/O signals 74
  - event counting signals 77, 83
  - externally cascaded counter/timers 86, 88, 89
  - pseudo-differential analog inputs 65
  - pulse output signals 85
  - single-ended analog inputs 63
- connector J1 pin assignments
  - DT3010 Series boards 194, 198, 200
  - DT740 screw terminal panel 54, 202
  - STP268 screw terminal panel 56, 205
  - STP268-EC screw terminal panel 59, 208
- connector J2 pin assignments
  - DT3010 Series boards 196

- DT740 screw terminal panel 55, 203
- STP268 screw terminal panel 58, 206
- STP268-EC screw terminal panel 61, 209
- connector J3 pin assignments, STP268-EC screw terminal panel 61, 209
- connector J4 pin assignments, STP268-EC screw terminal panel 62, 210
- connector specifications 190
- continuous analog input
  - about-trigger 149
  - continuously-paced scan mode 110
  - externally-retriggered scan mode 112
  - post-trigger 149
  - pre-trigger 149
  - software-retriggered scan mode 111
- continuous analog output 149
  - continuously-paced analog output 126
  - waveform generation mode 127
- continuous counter/timer 149
- continuous digital input 149
- continuous operations
  - about-trigger analog input 118
  - counter/timer 139
  - post-trigger analog input 115
  - pre-trigger analog input 116
- conversion modes 110
  - continuous analog output 125
  - continuously-paced scan mode 110
  - dynamic digital output 130
  - externally-retriggered scan mode 112
  - single-value analog input 110
  - single-value analog output 125
  - software-retriggered scan mode 111
- conversion rate 110, 111, 113
- counter/timer 131
  - C/T clock sources 131
  - cascading 156
  - cascading internally 132
  - channels 151
  - clock sources 155
  - duty cycle 134
  - event counting 156
  - gate types 133
  - high-edge gate type 156
  - high-level gate type 156
  - high-to-low output pulse 156
  - internal gate type 156
  - low-edge gate type 156
  - low-level gate type 156
  - low-to-high output pulse 156
  - one-shot mode 156

- operation modes 135
- pulse output types 134
- rate generation mode 156
- repetitive one-shot mode 156
- specifications 188
- units 131
- variable pulse width 156
- when using your own screw terminal panel 218
- counting events 135
- current loop inputs 70
- current shunt resistors
  - DT740 45
  - STP268 47
- customer service 179

## D

- D/A output clocks
  - external 124
  - internal 123
- D/A subsystem 122
  - specifications 185
- DAQ Adaptor for MATLAB 18
- data encoding 151
  - analog input 119
  - analog output 127
- data flow modes
  - continuous about-trigger 149
  - continuous C/T 149
  - continuous digital input 149
  - continuous post-trigger 149
  - continuous pre-trigger 149
  - single-value 149
- data format
  - analog input 119
  - analog output 127
- data transfer
  - analog input 119
  - analog output 127
- DataAcq SDK 18
- description of the functional subsystems
  - A/D 105
  - C/T 131
  - D/A 122
  - DIN and DOUT 129
- device driver 18
- differential channels 151
- differential inputs 63
- digital event trigger 154
- digital I/O features 129
  - lines 106, 129

- operation modes 129
- resolution 129
- specifications 187
- when using your own screw terminal panel 218, 219
- digital trigger
  - analog input 114
  - analog output 124
- DIN subsystem 129
  - specifications 187
- DOUT subsystem 129
  - specifications 187
- DT3010 Series Device Driver 18
- DT740 19
  - attaching 39
  - configuring 44
  - jumper W1 44
  - layout 44
  - resistors R1 to R16 45
  - resistors R17 to R32 45
- DT-Open Layers for .NET Class Library 18
- DTx-EZ 18
- duty cycle 134
- dynamic digital output 106, 130

## E

- edge gate type
  - high 133
  - low 133
- encoding data
  - analog input 119
  - analog output 127
- environmental specifications 189
- EP035 20
- EP035 cable 43
- EP307 cable 19
- EP308 cable 19
- EP324 cable 19
- EP325 cable 19
- errors, hardware
  - analog input 120
  - analog output 128
- event counting 77, 83, 135, 156
- expansion slot selection 29
- external analog trigger 114, 125
- external clock 155
  - A/D sample 109
  - C/T 132
  - D/A output 124

- external clock divider
  - maximum 155
  - minimum 155
- external digital trigger
  - analog input 114
  - analog output 124
- external negative digital trigger 154
- external positive digital trigger 154
- externally-retriggered scan mode 112

## F

- factory service 179
- falling-edge gate 133
- features 16
  - analog input 105
  - analog output 122
  - counter/timer 131
  - digital I/O 129
- formatting data
  - analog input 119
  - analog output 127
- frequency
  - base clock 155
  - external A/D sample clock 109
  - external C/T clock 132
  - internal A/D clock 155
  - internal A/D sample clock 109, 155
  - internal C/T clock 132, 155
  - internal D/A output clock 123
  - internal retrigger clock 111, 150
- frequency measurement 77, 83, 137

## G

- gain
  - actual available 152
  - analog input 107
  - analog output 123
  - number of 152
  - programmable 152
- gate type 133
  - falling edge 133
  - high-edge 156
  - high-level 156
  - internal 156
  - logic-high level 133
  - logic-low level 133
  - low-edge 156
  - low-level 156
  - none (software) 133



rising edge [133](#)  
 generating continuous pulses [139](#)

## H

help, online [93](#)  
 HES14-21 power supply [20](#)  
 high-edge gate type [133](#), [156](#)  
 high-level gate type [156](#)  
 high-to-low pulse output [134](#)  
 Host Block Overflow error [120](#)  
 hysteresis [114](#), [125](#)

## I

inhibiting data from channels [106](#)  
 inprocess buffers [150](#)  
 input configuration  
   differential analog [63](#)  
   pseudo-differential analog [63](#)  
   single-ended analog [63](#)  
 Input FIFO Overflow error [120](#)  
 input ranges [107](#)  
 inserting the board [32](#)  
 internal clock [155](#)  
   A/D sample [109](#)  
   C/T [132](#)  
   cascaded C/T [132](#)  
   D/A output [123](#)  
 internal gate type [156](#)  
 internal retrigger clock [111](#)

## J

J1 connector pin assignments  
   DT3010 Series boards [194](#), [198](#), [200](#)  
   DT740 screw terminal panel [54](#), [202](#)  
   STP268 screw terminal panel [56](#), [205](#)  
   STP268-EC screw terminal panel [59](#), [208](#)  
 J2 connector pin assignments  
   DT3010 Series boards [196](#)  
   DT740 screw terminal panel [55](#), [203](#)  
   STP268 screw terminal panel [58](#), [206](#)  
   STP268-EC screw terminal panel [61](#), [209](#)  
 J3 connector pin assignments, STP268-EC screw  
   terminal panel [61](#), [209](#)  
 J4 connector pin assignments, STP268-EC screw  
   terminal panel [62](#), [210](#)  
 jumper W1  
   DT740 [44](#)  
   STP268 [46](#)

  STP268-EC [47](#)  
 jumper W2, STP268-EC [47](#)  
 jumper W3  
   5B Series backplanes [52](#)  
   STP268-EC [47](#)  
 jumper W4, STP268-EC [47](#)

## L

LabVIEW [18](#)  
 layout  
   DT740 [44](#)  
   STP268 [45](#), [46](#)  
   STP268-EC [41](#)  
 level gate type  
   high [133](#)  
   low [133](#)  
 lines, digital I/O [106](#), [129](#)  
 loading the device driver  
   Windows 7 [35](#)  
   Windows Vista [34](#)  
   Windows XP [34](#)  
 logic-high level gate type [133](#)  
 logic-low level gate type [133](#)  
 low-edge gate type [133](#), [156](#)  
 low-level gate type [156](#)  
 low-to-high pulse output [134](#)  
 LV-Link [18](#)

## M

MaxDifferentialChannels [151](#)  
 MaxExtClockDivider [155](#)  
 MaxFrequency [155](#)  
 MaxMultiScanCount [150](#)  
 MaxRetriggerFreq [150](#)  
 MaxSingleEndedChannels [151](#)  
 Measure Foundry [18](#)  
 measuring frequency [137](#)  
 MinExtClockDivider [155](#)  
 MinFrequency [155](#)  
 MinRetriggerFreq [150](#)

## N

negative threshold trigger [154](#)  
 number of  
   differential channels [151](#)  
   gains [152](#)  
   I/O channels [151](#)  
   resolutions [152](#)

- scans per trigger [150](#)
- single-ended channels [151](#)
- voltage ranges [152](#)
- NumberOfChannels [151](#)
- NumberOfRanges [152](#)
- NumberOfResolutions [152](#)
- NumberOfSupportedGains [152](#)
- Nyquist Theorem [109](#)

## O

- one-shot mode [141](#)
- one-shot pulse output [156](#)
- online help [93](#)
- operation modes
  - continuous digital input [130](#)
  - continuously-paced scan mode [110](#)
  - event counting [135](#)
  - externally-retriggered scan mode [112](#)
  - frequency measurement [137](#)
  - one-shot pulse output [141](#)
  - rate generation [139](#)
  - repetitive one-shot pulse output [143](#)
  - single-value analog input [110](#)
  - single-value analog output [125](#)
  - single-value digital I/O [129](#)
  - software-retriggered scan mode [111](#)
  - waveform generation [127](#)
- Opto-22 backplane [40](#)
  - attaching [43](#)
  - PB16H [20](#)
- orderly stop
  - analog input [110](#)
  - analog output [126](#)
- output clock sources
  - external D/A output clock [124](#)
  - internal D/A output clock [123](#)
- output FIFO [16](#), [126](#), [127](#)
- output FIFO counter [126](#)
- output FIFO underflow error [128](#)
- output pulses [156](#)
- output ranges [123](#)
- outputting pulses
  - continuously [139](#)
  - one-shot [141](#)
  - repetitive one-shot [143](#)

## P

- PB16H Opto-22 backplane [20](#), [40](#)
  - attaching [43](#)

- PCI bus master [120](#)
- PCI bus slave [127](#)
- physical specifications [189](#)
- pin assignments
  - DT3010 Series J1 connector [194](#), [198](#), [200](#)
  - DT3010 Series J2 connector [196](#)
  - DT740 screw terminal panel J1 connector [54](#), [202](#)
  - DT740 screw terminal panel J2 connector [55](#), [203](#)
  - STP268 screw terminal panel J1 connector [56](#), [205](#)
  - STP268 screw terminal panel J2 connector [58](#), [206](#)
  - STP268-EC screw terminal panel J1 connector [59](#), [208](#)
  - STP268-EC screw terminal panel J2 connector [61](#), [209](#)
  - STP268-EC screw terminal panel J3 connector [61](#), [209](#)
  - STP268-EC screw terminal panel J4 connector [62](#), [210](#)
- ports [129](#)
- positive threshold trigger [154](#)
- post-trigger acquisition mode [115](#), [149](#)
- power specifications [189](#)
- power supply
  - HES14-21 [20](#)
  - PWR-977 [19](#)
- pre-trigger acquisition mode [116](#), [149](#)
- pseudo-differential inputs [63](#)
- pulse output
  - duty cycle [134](#)
  - one-shot [141](#)
  - rate generation [139](#)
  - repetitive one-shot [143](#)
  - types [134](#)
- pulse train output [139](#)
- pulse width [134](#)
- PWR-977 power supply [19](#)

## Q

- Quick DataAcq [18](#)
  - continuous analog input operations [96](#)
  - frequency measurement operations [99](#)
  - pulse output operations [100](#)
  - running [93](#)
  - single-value analog input operations [94](#)
  - single-value analog output operations [95](#)
  - single-value digital input operations [97](#)
  - single-value digital output operations [98](#)
- quickDAQ [18](#)

**R**

ranges  
 analog input 107  
 analog output 123  
 number of 152

rate generation 156

removing the board 30

repetitive one-shot mode 143

repetitive one-shot pulse output 156

resistors  
 R1 to R16 45, 46  
 R17 to R32 45, 47

resolution  
 analog input 105  
 analog output 122  
 available 152  
 digital I/O 129  
 number of 152  
 programmable 152

retrigger 112

retrigger clock 111  
 frequency 111, 150

retriggered scan mode  
 externally 112  
 software 111

returning boards to the factory 179

rising-edge gate 133

RMA 179

running the Quick DataAcq application 93

**S**

sample clock  
 external A/D 109  
 internal A/D 109

sample rate 110

scan mode  
 externally retriggered 112  
 software-retriggered 111

screw terminal panel 19

SDK 18

selecting expansion slots 29

setting up the computer 27

signal conditioning backplanes  
 7BP04-1 19  
 7BP08-1 19

simultaneous start list 149

single buffer wrap mode 150

single-ended channels 151  
 number of 151

single-ended inputs 63

single-value operations 149  
 analog input 110  
 analog output 125  
 digital I/O 129

slot selection 29

software packages 18

software supported 18

software trigger 154  
 analog input 113  
 analog output 124

software-triggered scan mode 111

specifications 181  
 analog input 182  
 analog output 185  
 connector 190  
 counter/timer 188  
 digital I/O 187  
 environmental 189  
 physical 189  
 power 189  
 regulatory 191

specifying a single channel  
 analog input 105  
 analog output 122  
 digital I/O 129

specifying one or more channels  
 analog input 106  
 analog output 123  
 digital I/O 106

stopping an operation  
 analog input 110  
 analog output 126

STP268 19, 46  
 attaching 39  
 configuring 45  
 jumper W1 46  
 layout 46  
 resistors R1 to R16 46  
 resistors R17 to R32 47

STP268-EC 19  
 attaching 40  
 configuring 47  
 jumpers W1 through W4 47  
 layout 41

subsystem descriptions  
 A/D 105  
 C/T 131  
 D/A 122  
 DIN and DOUT 129

SupportedGains 152

SupportedResolutions 152

- SupportedVoltageRanges 152
- SupportsBinaryEncoding 151
- SupportsBuffering 150
- SupportsCascading 156
- SupportsChannelListInhibit 151
- SupportsContinuous 149
- SupportsContinuousPrePostTrigger 149
- SupportsContinuousPreTrigger 149
- SupportsCount 156
- SupportsDifferential 151
- SupportsDigitalEventTrigger 154
- SupportsExternalClock 155
- SupportsGateHighEdge 156
- SupportsGateHighLevel 156
- SupportsGateLowEdge 156
- SupportsGateLowLevel 156
- SupportsGateNone 156
- SupportsHighToLowPulse 156
- SupportsInProgressFlush 150
- SupportsInternalClock 155
- SupportsLowToHighPulse 156
- SupportsNegExternalTTLTrigger 154
- SupportsNegThresholdTrigger 154
- SupportsOneShot 156
- SupportsOneShotRepeat 156
- SupportsPosExternalTTLTrigger 154
- SupportsPosThresholdTrigger 154
- SupportsProgrammableGain 152
- SupportsRateGenerate 156
- SupportsSimultaneousStart 149
- SupportsSingleEnded 151
- SupportsSingleValue 149
- SupportsSoftwareResolution 152
- SupportsSoftwareTrigger 154
- SupportsTriggeredScan 150
- SupportsVariablePulseWidth 156
- SupportsWrapSingle 150

## T

- technical support 178
- threshold level 114, 125
- threshold trigger
  - analog input channel 114, 125, 144
  - external 114, 125
  - negative 154
  - positive 154
- throughput
  - maximum 155
  - minimum 155

- transferring data
  - analog input 119
  - analog output 126, 127
- trigger acquisition modes
  - about-trigger 118
  - post-trigger 115
  - pre-trigger 116
- trigger sources
  - analog input channel 114, 125, 144
  - analog threshold trigger 114, 125
  - external digital (TTL) trigger 114, 124
  - software trigger 113, 124
- triggered scan 111, 150
  - number of scans per trigger 150
  - retrigger frequency 150
- Triggered Scan Counter 111
- triggers
  - external negative digital 154
  - external positive digital 154
  - negative analog threshold 154
  - positive analog threshold 154
  - software 154
- troubleshooting
  - procedure 176
  - technical support 178
  - troubleshooting table 176
- TTL trigger
  - analog input 114
  - analog output 124

## U

- unipolar signals 107
- units, counter/timer 131
- unpacking 27
- using your own screw terminal panel 213

## V

- variable pulse width 156
- Visual Basic for .NET programs 18
- Visual Basic programs 18
- Visual C# programs 18
- Visual C++ programs 18
- voltage ranges 152
  - number of 152

## W

- W1 jumper
  - DT740 [44](#)
  - STP268 [46](#)
  - STP268-EC [47](#)
- W2 jumper, STP268-EC [47](#)
- W3 jumper
  - 5B Series backplanes [52](#)
  - STP268-EC [47](#)
- W4 jumper, STP268-EC [47](#)
- waveform generation mode [127](#)
- waveform pattern [127](#)
- Windows 7, loading the device driver [35](#)
- Windows Vista, loading the device driver [34](#)
- Windows XP, loading the device driver [34](#)
- wiring recommendations, when using your own
  - screw terminal panel [213](#)
- wiring signals
  - analog outputs [72](#)
  - counter/timer signals [77](#)
  - current loop analog inputs [70](#)
  - differential analog inputs [66](#)
  - digital I/O signals [74](#)
  - event counting signals [77](#), [83](#)
  - externally cascaded counter/timers [86](#), [88](#), [89](#)
  - pseudo-differential analog inputs [65](#)
  - pulse output signals [85](#)
  - single-ended analog inputs [63](#)
- writing programs in
  - C/C++ [18](#)
  - Visual Basic [18](#)
  - Visual Basic .NET [18](#)
  - Visual C# [18](#)
  - Visual C++ [18](#)

