

# WIRELESS LED TAILGATE SPEAKER

PRT3027 | USER MANUAL







no to seithist pest dualities of our rolaroid Color Spectrum logos let you assuring. The Polaroid Classic Border antly recognizable, instantly

standard of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product. PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives, As responsible




- Consult the dealer or an experienced radio/TV technician for help.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase the separation between the equipment and receiver
  - Reorient or relocate the receiving antenna.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the PCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency, energy and, it not installed and used in accordance with the instructions, may cause harmful interference to radio. It communications, However, there is no guarantee that interference and not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by thin graph and the common of the following measures:

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.



# IN THE BOX

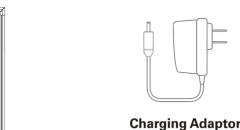

Wireless LED Tailgate Speaker



Cable

# USING THE SPEAKER

# **Power ON and OFF**

- Turn the speaker on by sliding the [ON/OFF] switch to the ON position.
- Turn the speaker off by sliding the [ON/OFF] switch to the OFF position

Adjust the volume by turning the Master volume control knob.

- Turn the master volume control knob to the left to increase the
- Turn the master volume control knob to the right to decrease the

To enjoy music wirelessly on your speaker, make sure that the speaker is properly paired to your Bluetooth-enabled device. If you are pairing the speaker for the first time, go to the "Pairing the Speaker" section of this

Use the controls on your Bluetooth-paired device to play and pause music or to skip tracks.

## CHARGING THE SPEAKER

LOCATION OF CONTROLS

(Top - Control Panel)

- 1. [\*∰-] Button
- 2. LED Indicator 3. [POWER] Switch
- 4. DC 9V Power Jack
- 5. AUX-In Jack
- 6. Microphone 1 Input Jack
- 7. Microphone 2 Input Jack
- 8. Microphone Vol Knob
- 9. Microphone Echo Knob
- 10. Volume Knob

## USING THE SPEAKER (cont'd)

**NOTE**: Microphone not included.

**Using the Mic Inputs** 

To use a microphone, plug the 1/8" connector of the wired microphone cable into either the MIC 1 or MIC 2 input jacks.

**NOTE**: Music will continue to play while using the microphones.

# Adjusting Mic Volume

• Turn the Mic Volume knob to the left to decrease microphone volume and turn to the right to increase microphone volume.

# **Adjusting Mic Echo**

• Turn the Mic Echo knob to the left to decrease microphone echo and turn to the right to increase microphone echo.


# USING AS A WIRED SPEAKER

To use the speaker as a wired device, attach the 3.5mm AUX cable to the AUX-in jack and attach the other end to the headphone jack on your media-playing device.

To charge the speaker, attach the charging adaptor to the DC 9V power

jack. Plug the adaptor into a working wall outlet. The LED indicator will

turn solid RED while charging and turn off when finished.

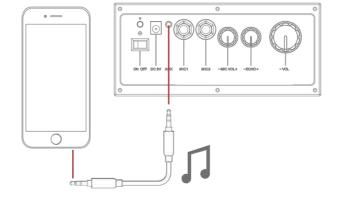

onnecting the audio cable will override Bluetooth mode if

PAIRING THE SPEAKER


- 1. Slide the [POWER] switch to the ON position. A tone will be heard indicating that the speaker is pairing mode. The LED indicator will quickly flash BLUE.
- device to search for other Bluetooth-enabled devices nearby (for detailed instructions for pairing your Bluetooth-enabled device, consult your device's user documentation).



Press to change **LED Light Modes** 

**Using the Light Modes** 

 Press the [☆] button to toggle through the light modes.



# PAIRING THE SPEAKER (cont'd)

3. Locate the speaker's model number (PBT3027) from the list of discovered devices and press it to complete the pairing process.


**NOTE**: If prompted for a password, enter **0000** (four zeros). This step may be necessary for older Bluetooth-enabled mobile devices.





# PAIRING THE SPEAKER (cont'd)

4. Another tone is heard, indicating that your mobile device has successfully paired with the speaker. The LED indicator will slowly flash

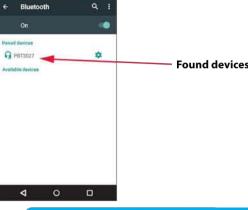



## WARRANTY

This product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty"). In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange

TO OBTAIN WARRANTY SERVICE:

Call the Customer Support number located below, or go to our website portal to receive an SRO number.

Prepay all shipping costs to the authorized service center, and remember to insure your return

package.
Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to

The shipping address of the authorized service center is

c/o Southern Telecom

400 Kennedy Drive


DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER







# 2. Open the Bluetooth settings menu on your mobile device. Set your

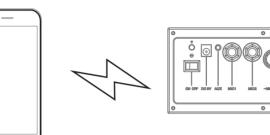

LED LIGHT MODES

This speaker has 8 LED light modes. In order for this feature to function, long

press the LED mode button. Continue to press the button to select a desired light

# TROUBLESHOOTING

- Make sure your Bluetooth device supports A2DP profile.
- 2. Turn up the volume on your Bluetooth device.
- 3. You may have to unpair the speaker, then re-pair to your device.



- 1. Make sure the speaker is turned ON before beginning the pairing process. 2. Keep the speaker and Bluetooth-enabled device within 3 feet of each
- other during the pairing process.
- 3. Check that YOUR device's Bluetooth feature is turned ON. 4. Try repeating the pairing process; see "Pairing the Speaker."
- 5. Make sure the speaker is charged.



- 1. Make sure the speaker is turned ON before beginning the pairing process.
- 2. Keep the speaker and your mobile device within 3 feet of each other during the pairing process.
- 3. Check that the speaker is charged.



Provide proof of the date of purchase within the package (Dated bill of sale).

· Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the

Customer Service Dept. 36

Sayreville, NJ 08872

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL.





