



Basic Manual

Qua tab QZ10

Contents

Getting Ready

Basic Operation

Safety Precautions

Appendix

Preface

 
Thank you for buying the "Qua tab QZ10" (simply called the "product" or "main unit" from here on). Before using the product, be sure to read the "Basic Manual" (this manual) to ensure correct use.

List of Packaged Items

Before your start using the product, make sure that you have all the following packaged with the product.



Main unit



● Tablet stand (sample)



● Kyocera TV Antenna Cable 04 (O4KYHSA)

* Kyocera TV Antenna Cable 04 (O4KYHSA) is not water/dust resistant.

- 取扱説明書 (Basic Manual) (Japanese)
- 設定ガイド (Setting Guide) (Japanese)

The following items are not included in the package.

- | | |
|-------------------|----------------------|
| ·AC adapter | ·microSD memory card |
| ·microUSB cable | ·Earphones |
| ·USB Type-C cable | |



- Purchase a specified charger (sold separately).
- The battery is built into the product.
- Illustrations in this manual are only for reference. They may look different from the actual product.

Operating Instructions

■ "Setting Guide" "Basic Manual" (This Manual)

Handles only basic operations for main features.

■ "Online Manual" (Japanese)

For detailed descriptions on various functions, refer to the "Online Manual" (Japanese) available on the au homepage:

<https://www.au.com/online-manual/kyt33/>

You can check the "Online Manual" (Japanese) on the product to confirm operational procedures.

Home screen → [au Supports] → [取扱説明書 (Online Manual)]



■ "取扱説明書 詳細版 (Full Instruction Manual)" (Japanese)

For detailed descriptions on various functions, refer to the "取扱説明書 詳細版 (Full Instruction Manual)" (Japanese) available on the au homepage:

 
<https://www.au.com/support/service/mobile/guide/manual/>



Regarding Notations Used in This Document

Note on Button Illustrations

In this manual, buttons are simplified as shown below.

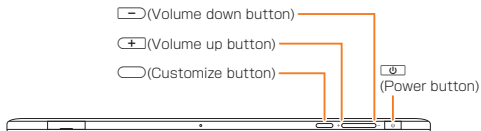

Navigation bar

Description of Operations for Selecting Item/Icon/Button etc.

Notations used for operation procedures in this manual are as follows.

Description	Explanation
Home screen → [Chrome] → [:]	Tap "Chrome" at the bottom of the home screen. Tap [:]
In sleep mode, [Power] (Power button)	In sleep mode, press [Power] (Power button).


- Tapping is to select a button or icon displayed on the screen by lightly tapping it with your finger.

■ Notes on Illustrations/Screenshots


In this manual, screenshots and operations for the product with au Nano IC Card 04 LE attached are described.

Screen illustrations shown in this manual may look different from the actual screens. Note that part of the screen etc. may be omitted.

 Some icons etc.
are omitted in
this manual.

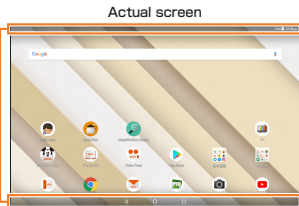

Notations used in this manual

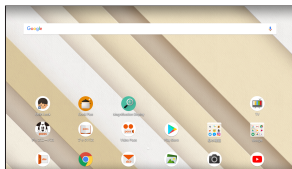 

memo

- ◎ In this manual, the operations with horizontally oriented screens are provided as examples. With vertically oriented screens, descriptions for menu item/icon/on-screen button may be different. Also, for screens not supporting horizontally oriented screens, it may appear in only vertically oriented screens.
- ◎ Menu items, layers and icons described in this manual may be different according to functions being used and conditions.
- ◎ In this manual, screenshots for body color "Off White" are provided as examples.
- ◎ In this manual, "au Nano IC Card 04 LE" is abbreviated as "au IC card".
- ◎ In this manual, "microSD™ memory card (commercially available)", "microSDHC™ memory card (commercially available)" and "microSDXC™ memory card (commercially available)" are abbreviated as "microSD memory card (commercially available)" or "microSD".
- ◎ All of the indicated amounts exclude tax unless otherwise specified.
- ◎ Company names and product names referred to in this manual are trademarks or registered trademarks of the respective companies. The TM, ® marks may be omitted in this manual.


Contents

Preface.....	1
List of Packaged Items.....	1
Operating Instructions.....	2
Regarding Notations Used in This Document....	3
Contents	5
Getting Ready	6
Names and Functions of Parts	6
Using Tablet Stand (Sample)	7
au IC Card	9
Internal Shared Storage	13
Using microSD Memory Card.....	13
Charging	16
Turning the Power On/Off	20
Start Screen	21
Basic Operations	22
Using the Home Screen	22
Activating the Apps	27
Switching the Home App	27
Using Standard Home	28
Monitoring the Product's Status.....	28
Using Info Clock	31
Setting Do Not Disturb Feature	32
Setting Airplane Mode.....	33

Displaying Menu	33
Setting Home Screen.....	33
Charging Mobile Devices	34
Safety Precautions	35
When Using the Product	35
Safety Precautions (Observe Strictly)	37
Material List	48
Handling Precautions	49
Notes on Waterproof/Dustproof Properties....	57
Notes on Using Bluetooth® / Wireless LAN (Wi-Fi®) Function	63
Security Code/PIN Code.....	66
Notes on Data Communication Charges	67
Notes on Applications	68
Setting the App Permissions	68
Tablet Etiquette	69
Appendix	70
Updating Software.....	70
Troubleshooting.....	71
After-Sales Service	72
SIM Unlock.....	77
Related Accessories.....	78
Main Specifications	78
Specific Absorption Rate (SAR) of Data Communication Terminals	80
Export Administration Regulations	81
Intellectual Property Rights.....	82

Getting Ready

 Names and Functions of Parts

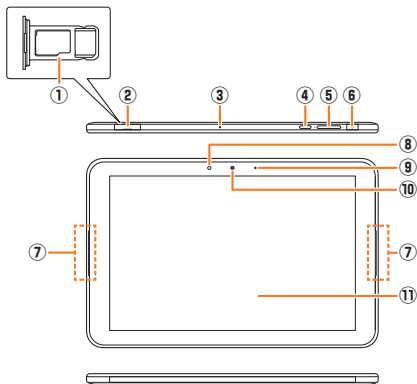

- ① microSD memory card / au IC card tray
- ② Card slot cover
- ③ Microphone
- ④  **Customize button**

Press to launch the specified app. "Child Lock" is set by default when you purchased this product. Press and hold this button for about one second, a setting screen for customize button is displayed. Then, you can specify an app to be launched.

- ⑤  **Volume up / down button**
- ⑥  **Power button**

Press to adjust volume.

Press to power ON/OFF, activate/deactivate sleep mode, etc.

- ⑦ **Front stereo speaker**
- ⑧ **Light sensor**

Outputs notification sounds, alarms, etc.

 
Detects the ambient light level to adjust the display brightness.

- ⑨ **Notification (charging) light**
- ⑩ **In camera (lens)**

Lights red while charging.

Flashes according to notification settings.

- ⑪ **Display (touch panel)**

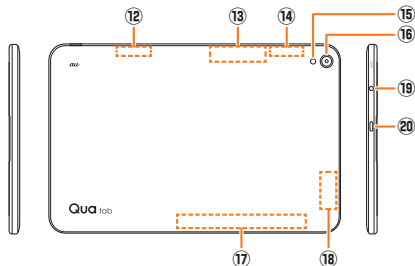

■ How to open the card slot cover



Insert a fingernail a small way into one of the corners marked ○ and pull open the cover.

Be careful not to insert your fingernail all the way. Doing so may damage the rubber seal under the cover.

- 12 Built-in Bluetooth® / Wi-Fi® antenna*
- 13 Built-in main antenna*
- 14 Built-in GPS antenna*
- 15 Shooting / Simple light
- 16 Out camera (lens)
- 17 Built-in TV antenna*
- 18 Built-in sub antenna*

- 19 Earphone microphone terminal
Used for connecting earphones (commercially available) or other accessories.

- 20 External connection terminal
Used for connecting a Type-C Common AC Adapter O1 (sold separately), etc.

* The antenna is built into the product. Covering the antenna with your hand might affect communication quality.



memo

 
- ◎ The exterior case of the product is not removable. Removing the exterior case with force may cause damage or malfunction.
- ◎ The battery is built into the product and it is not removable. To force stop and reboot the product, refer to "Forcing the Product to Shut Down and Restart" (▶P.20).

Using Tablet Stand (Sample)

Using the tablet stand (sample) is described as below.

1 Open the tablet stand (sample)

2 Set the product along the groove of the tablet stand (sample)

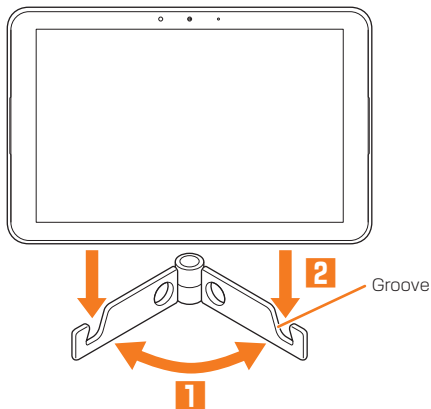


memo

- ◎ The product with a cover attached, etc. cannot be used. When using the product, take off a cover.
- ◎ Note that the tablet stand (sample) may fall if you place this product vertically, or narrow the angle opening the tablet stand.
- ◎ Home screen → [基本機能 (Basic Function)] → [Settings] → [Rollbahn Flap case] → set [Backlight auto extension] to [ON], the backlight time of the screen is extended automatically when the product is standing.
 - The backlight time of the screen is not extended automatically on the home screen and start screen.
 - The backlight time of the screen may not be extended depending on the surroundings.
- ◎ When setting the product on the tablet stand (sample), adjust the position so that the product is at the center of the tablet stand (sample).

Kyocera TV Antenna Cable 04

When watching TV, use the supplied Kyocera TV Antenna Cable 04 (04KYHSA).

 When listening to audio with earphones (commercially available), connect earphones (commercially available) to the Kyocera TV Antenna Cable 04 (04KYHSA). When outputting sound from a speaker, connect only the Kyocera TV Antenna Cable 04 (04KYHSA).

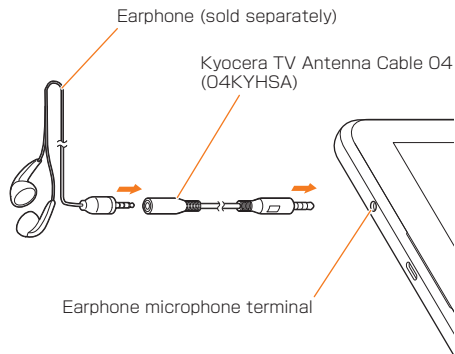

au IC Card

The product is compatible with au Nano IC Card 04 LE.

au Nano IC Card 04 LE

(Back)

(Front)



IC (metal) part



memo

- ◎ Note that mishandling the au IC card might cause malfunction or damage, be careful not to do the followings.
 - Do not touch the IC (metal) part of the au IC card.
 - Check the correct insert direction.
 - Do not forcefully attach/remove the card.
- ◎ If the au IC card is not attached correctly or the au IC card has any abnormality, the error message is displayed.
- ◎ Do not lose the removed au IC card.
- ◎ Do not insert your au IC card with an conversion adapter attached. Doing so may cause malfunction.

When au IC Card is Not Inserted

If the au IC card is not inserted, the following operations are unavailable. And "a" appears on the status bar.

- Sending/receiving SMS
- Initial settings and sending/receiving emails of au-mail
- PIN code setting
- Checking your phone number and email address of the product

Besides the items above, necessary functions such as your phone number are also unavailable.

Attaching/Removing au IC Card

 
Cautions on Attaching/Removing

- Attach/remove the au IC card after turning off the product.

Attaching au IC Card


- 1 Hook a nail on the groove to pull out the card slot cover, and take out the microSD memory card/au IC card tray**

Pull out the tray slowly straight into the direction of the arrow below.

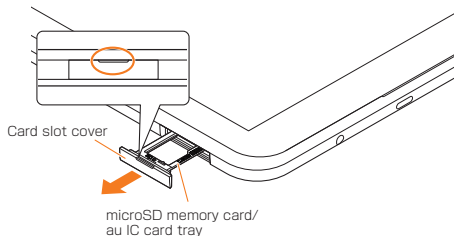

2 Attach the au IC card to the microSD memory card/au IC card tray

 
- Be aware that the direction of the au IC card is correct. Check the notch position, and attach the card with the IC (metal) part/terminal side facing down. Attaching the card in wrong direction might cause the au IC card falling, and malfunction or damage of the product.
- Attach the au IC card firmly so as not to float from the microSD memory card/au IC card tray.
- To avoid getting the tab part of the microSD memory card/au IC card tray being damaged, slide the au IC card to the direction of the arrow below and attach it.

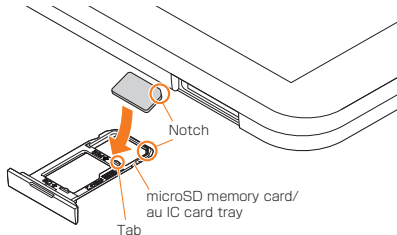


3 Insert the microSD memory card/au IC card tray to the main unit

Insert the tray slowly straight into the direction of the arrow below.

 Be aware that the direction of the tray is correct.

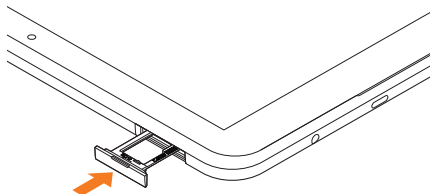

 4 Press firmly the position of ○ illustrated below, and confirm that the card slot cover fits into the main unit

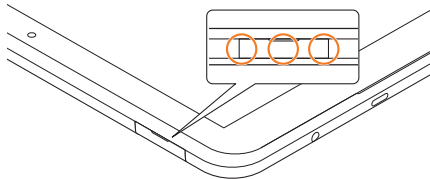


■ Removing au IC Card

- For details on attaching/removing microSD memory card/au IC card tray, refer to "Attaching au IC Card" (▶P.10).

1 Hook a nail on the groove to pull out the card slot cover, and take out the microSD memory card/au IC card tray

 
2 Take out the au IC card from the microSD memory card/au IC card tray

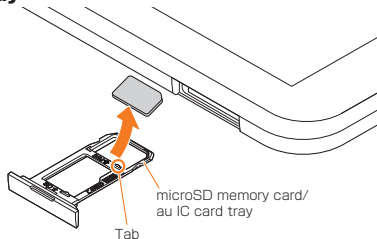


3 Insert the microSD memory card/au IC card tray to the main unit

Insert the tray slowly straight into the direction of the arrow below.

 Be aware that the direction of the tray is correct.

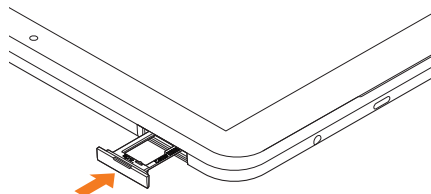

 4 Press firmly the position of ○ illustrated below, and confirm that the card slot cover fits into the main unit

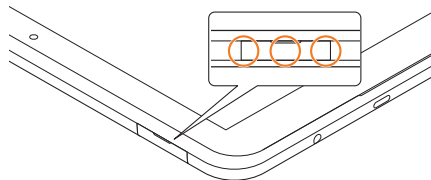

Internal Shared Storage

The product can save data to the main unit memory and microSD memory card.

The main unit memory	Save data that apps and each app use and media files such as images captured by screenshot.
microSD memory card	Save media files, etc.



memo

- © Data may be saved to the main unit memory depending on some apps even if a menu or message is displayed.

Using microSD Memory Card

Attaching/Removing microSD Memory Card

■ Attaching microSD Memory Card


- For details on attaching/removing microSD memory card/au IC card tray, refer to "Attaching au IC Card" (▶ P.10).

1 Hook a nail on the groove to pull out the card slot cover, and take out the microSD memory card/au IC card tray

2 Attach the microSD memory card to the microSD memory card/au IC card tray


- Be aware that the direction of the microSD memory card is correct. Attaching the card in wrong direction might cause the microSD memory card falling, and malfunction or damage of the product.
- Attach the microSD memory card firmly so as not to float from the microSD memory card/au IC card tray.

 - To avoid getting the tab part of the microSD memory card/au IC card tray being damaged, slide the microSD memory card to the direction of the arrow below and attach it.

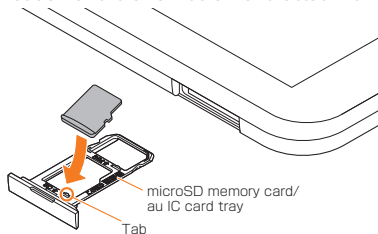


3 Insert the microSD memory card/au IC card tray to the main unit

 Insert the tray slowly straight into the direction of the arrow below.
Be aware that the direction of the tray is correct.

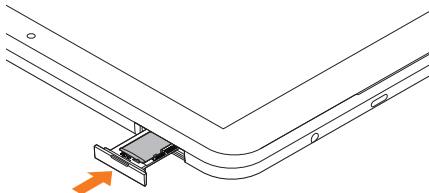

 - ### 4 Press firmly the position of ○ illustrated below, and confirm that the card slot cover fits into the main unit

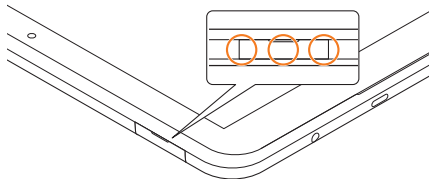

memo

 
- ◎ The microSD memory card has a back and front side/top and bottom orientation. Trying to insert the card forcefully may cause confinement or damage.

Removing microSD Memory Card

- For details on attaching/removing microSD memory card/au IC card tray, refer to "Attaching au IC Card" (▶P.10).

1 Hook a nail on the groove to pull out the card slot cover, and take out the microSD memory card/au IC card tray


2 Take out the microSD memory card from the microSD memory card/au IC card tray

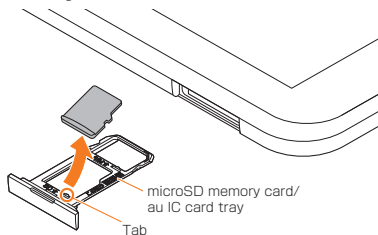


3 Insert the microSD memory card/au IC card tray to the main unit

Insert the tray slowly straight into the direction of the arrow below.

 Be aware that the direction of the tray is correct.

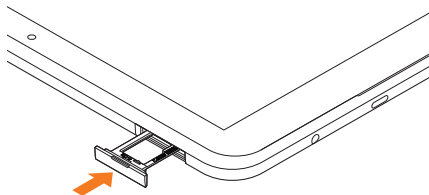

 4 Press firmly the position of ○ illustrated below, and confirm that the card slot cover fits into the main unit

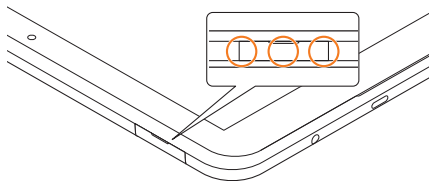

 memo

- ⦿ Do not touch the terminal part of microSD memory card.
- ⦿ Do not pull out the microSD memory card forcefully. Doing so might cause a fault or loss of data.
- ⦿ After using the product for a long time, the removed microSD memory card may become warm. This is not a malfunction.

Charging

The internal battery is not fully charged at the time of purchase. Charge the battery before using the product. When the red light turns into green, the charging will be completed.

This product supports quick charging by Qualcomm® Quick Charge™3.0 Technology.

 memo

- ⦿ The product may become warm while charging or during other operations, this is not abnormal.
- ⦿ Charging the product while using the camera function, the charging time may take longer than usual.
- ⦿ Doing various operations with the specified charger (sold separately) connected, the battery life may get short due to the short time charging/discharging.
- ⦿ When temperature of environment or the product is extremely high or low, charging may be stopped. Charge the battery at room temperature as much as possible.
- ⦿ Make sure the connection is correct if the charging light of the product blinks in red. If the charging light continues to blink, immediately stop charging, and contact an au shop or Repair and Delivery Service Center.



- ◎ Right after "100%  " is displayed while charging, the charging light may not turn to green, but the light will turn to green soon and the charging will be completed.
- ◎ Keep a metal accessory or conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the connection terminal and prevent them from getting inside.
- ◎ A notification on the Battery care mode is displayed when keeping the battery fully-charged remains for long hours.

Charging with the Specified AC Adapter

How to charge the product using Type-C Common AC Adapter 01 (sold separately) is described here. For information on the specified AC adapter (sold separately), see "Related Accessories" (▶P.78).

 
- 1 Connect the power plug of Type-C Common AC Adapter 01 (sold separately) to an outlet (100V - 240V AC)**



Type-C Common AC Adapter 01
(sold separately)

2 Insert the USB Type-C plug of Type-C Common AC Adapter 01 (sold separately) to straight into the external connection terminal

Make sure that the charging light turns into red. When the battery power turns on, "100" appears on the status bar. When charging is complete, the charging light turns into green.

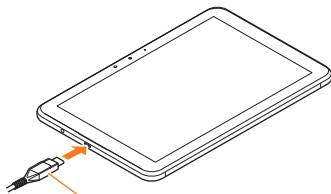

Type-C Common AC Adapter 01
(sold separately)

3 When charging is complete, pull out the USB Type-C plug of Type-C Common AC Adapter 01 (sold separately) straight from the external connection terminal

4 Unplug the power plug of Type-C Common AC Adapter 01 (sold separately) from the outlet



memo

- ◎ Note that applying unnecessary force with an external device connected to the external connection terminal may cause damage.
- ◎ When the battery is charged in the case that the batteries run out, charging light may not turn to green soon, but charging is started.

Charging with PC

 
How to charge the product connecting to USB port that supports PC charging with USB Type-C cable (commercially available) is described here.

1 Connect the USB Type-C cable (commercially available) to the USB port of PC when the PC is completely activated

2 Insert the USB Type-C plug of USB Type-C cable (commercially available) to straight into the external connection terminal

Make sure that the charging light turns into red. When charging is complete, the charging light turns into green.

- When a screen such as new hardware search appears on PC, select "Cancel".

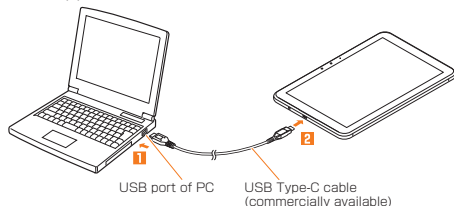

3 When charging is complete, remove the USB Type-C cable (commercially available) from the external connection terminal and PC



memo

- ◎ When the battery is charged in the case that the batteries run out, charging light may not turn to green soon, but charging is started.
- ◎ The charging time may take longer than charging with a specified AC adapter. And the charging time also varies depending on your PC.

Turning the Power On/Off

Turning the Power On

- 1 Press and hold  (Power button) until the notification light turns on

The start screen appears (▶P. 21).

- For the first time you turn on the product, the initial setting, "au初期設定 (au Initial Setting)" activates. Set them as required. For details, refer to "Initial Settings" in the packaged "Setting Guide".



memo

- When logos are being displayed on the screen, do not touch the screen because the initial setting of the touch panel activates. Doing so may prevent the touch panel from working properly.
- Press  (Power button) when the screen is on or turn the screen off with no operation for a certain period, the product enters sleep mode.

Turning the Power Off

- 1 Press and hold  (Power button) for at least 1 second
- 2 [Power off]

Forcing the Product to Shut Down and Restart

You can force the product to power off and reboot when the screen does not respond, or the power cannot be turned off.

- 1 Press and hold  (Power button) and  (Volume up button) for at least 11 seconds



memo

- If you turn off the product forcibly and restart, an unsaved data will be lost. Do not perform except when the product does not respond.

Start Screen

The start screen is displayed when you turn the product on or cancel the sleep mode.

 
Switching to the Home Screen from the Start Screen

You can switch to the home screen with the following operations when the start screen appears.

1 Swipe/flick

The home screen appears (► P. 22). Or, the previous screen which the product turns to sleep mode appears.

- Swipe/flick [✉] / [G] / [P] / [C] displayed at the bottom of the screen to activate au-mail / browser / Photos/Movies / Camera.

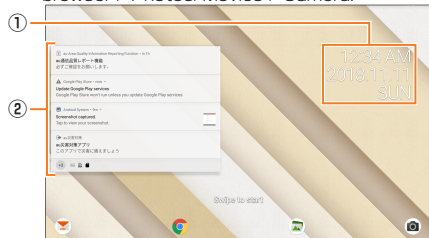

《Start Screen》

① Clock display

② Notifications

- Double-tap a notification to activate notified app.

Sleep Mode

Press [P] (Power button) while the backlight is turned on or perform no operation for a certain period, the screen goes off temporarily and the product enters sleep mode. Doing the following operation, cancel the sleep mode.

1 In sleep mode, press [P] (Power button)

- Double-tap a screen to deactivate sleep mode.



memo

 
- ◎ To change the time to enter sleep mode, home screen → [基本機能 (Basic Function)] → [Settings] → [Display] → [Sleep], and select the time.
- ◎ When you press [P] (Power button) to display the screen in sleep mode, do not touch the screen. Doing so may prevent the touch panel from working properly.

Basic Operations

Using the Home Screen

When you purchase the product, home app on the home screen is set to "au Basic Home" with frequently used apps with a tablet. Also, home app can be switched (▶P. 27).

The home screen consists of multiple screens. Slide/flick right or left to switch the screen.

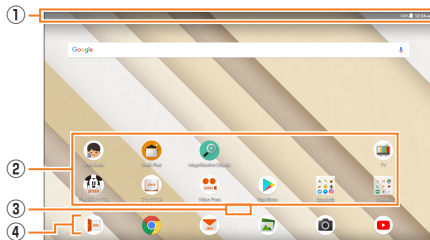

《Home Screen (au Basic Home)》

- ① Status bar
- ② Shortcuts/Folders*
- ③ Indicator
- ④ Quick launch area

* When you tap a folder, multiple apps are displayed. If some apps are not displayed, slide/flick up and down in a folder.

* In some apps, long-touching an icon will appear a shortcut list that you go directly to a specific screen of the app.



memo

◎ In this manual, the operations on the home screen of "au Basic Home" is provided as examples.

Main Apps/Folders on the Home Screen

Frequently used apps are displayed on the home screen. Other apps are organized in each folder such as "基本機能 (Basic Function)", "Google", "au Supports", "au Services", "Others Apps".

Select an app/folder to use by sliding/flicking the home screen right to left.

Icon name
Child Lock Set to use only one app to prevent a child from launching other apps mistakenly. In addition, set the utilization time to prevent excessive use for many hours.
Cook Plus This app allows you search recipes while cooking, and use the apps such as the timer, YouTube, music playing app, etc. on the multi-window while browsing the recipe.

Icon name
Magnification Display Increase the size of text and icons at once for easy viewing.
TV Switch over between Fullseg/1 seg to according to the reception condition of the broadcast wave.
ディズニーパス (Disney pass) "Disney pass" is a monthly subscription service for Disney fans, providing Disney official contents such as "Kisekai", wallpapers, movies and membership benefits exclusively provided for the subscribers. You can also enjoy our original designed Smart Phone cases with free trial access to Disney pass.
ブックパス (Book Pass) Enjoy many e-books such as magazines, comics and novels.
Video Pass Enjoy popular movies, dramas and animations.
Play Store Search for and install apps.
サービスTOP (Service TOP)  This App provides daily news, coupon and special information for au users.
Chrome  View Web pages.
au-mail  This is a service to send/receive mails using (@ezweb.ne.jp) address.

Icon name
Photos/Movies  Display a list of internal storage/images to play in microSD memory card/movies. And manage data as an album.
Camera  Capture still images/movies.
YouTube  Play movies and search for movies by keyword input.
auスマートパス (au Smart Pass) au Smart Pass Premium and au Smart Pass is one of the most wonderful app which provides you an enjoyable, safe and practical Tablet Life.
au Disaster Measures This is an application in which you can use Disaster Message Board, Emergency Rapid Mail (Earthquake Early Warning and Disaster and Evacuation Information and Tsunami Warning and Emergency Warning), and Disaster Voice Messaging Service.
My au You can check your daily usage, points and monthly billing of au services with this application. You can also change your rate plan, apply for optional services and so on.
Facebook Facebook is a free app by registration of real names to keep up with your friends - to see what they're up to, share updates, photos, and videos, and chat and have group conversations.

Icon name
基本機能 (Basic Function)
Settings Set and manage various functions from the setting menu.
Weather Check weather information for the current location and city that you set.
Contacts Register and use a phone number and mail address.
SMS This is an app to exchange messages by au phone number.
File Commander View, copy/move data.
Sound Recorder Use Sound Recorder.
Twitter Twitter is a free app that lets you connect with people, express yourself, and discover more about all the things you love.
Messenger* Messenger is a free app to instantly reach the people in your life with messages (text and voice), group and video chats, calls. Can also send photo, videos, and stickers.

Icon name
Instagram* Instagram is an app that lets you easily connect with your family, friends and people around the world through sharing photos and videos.
Google
Google Search within the product and Web pages by keyword.
Gmail This is a mail service provided by Google.
Maps Display your current location, and search for other locations and routes.
Drive View/edit files saved to Google Drive.
Play Music Play music and play lists.
Play Movies & TV Rent movies at Google Play and watch saved movies.
Hangouts This is Google instant messaging service to chat to members.

Icon name	
	Photos Display/edit captured images and movies, and back up to Google+™.
	Voice Search Just talk to the product and you can use Google Search.
	Clock Use the alarm, world clock, timer and stopwatch functions.
	Calendar Use Calendar.
	Calculator Use Calculator.
au Supports	
	Data Storage App You can back up various data in your tablet to cloud storage or SD card. You can also migrate your data between your tablets with this app.
	au Wi-Fi Connect It is an application to conveniently assist connection to au's publicly available wireless LAN service, "au Wi-Fi SPOT" and au's indoor Wi-Fi router, "Wi-Fi HOME SPOT".

Icon name	
	あんしんフィルター for au (AnshinFilter for au) This is an application which limits the access to the inappropriate applications and web pages so that your child can use a device safely.
	故障紛失サポート (Repair and Delivery Service) This app provides total support for customers whose tablets are troubled. (in Japanese only)
	取扱説明書 (Online Manual) Check the detailed usage of the product.
au Services	
	au Market You can install Android-based applications offered with au Smart Pass service.
	auシェアリンク (au Share Link) This is an app to use Smartphone and tablet conveniently. You can display the notification such as incoming call to Smartphone or E-mail on the tablet, and operate the Smartphone on the screen of the tablet.

Icon name	
	au Gallery This application shows image, video, music, and other files. In addition, images and movies are synchronized between au devices. With Qua station, you can store your own data files and browse them.
	ニュースパス (News Pass) News curation app.
	au WALLET "au WALLET App" is useful for the user of au. When you use it, you can do the following things. • au WALLET points you have • information of "au Easy Payment" In addition, when you use au WALLET Prepaid card and Credit card, you can do the following things. • benefits of au WALLET cards [au WALLET Prepaid card] • charging the card • checking its inquiry [au WALLET Credit card] • checking billing statements • purchase history, and so on
	Player (LISMO) Music Player makes Uta Pass APP more powerful and useful.

Icon name	
	au WALLET Market au WALLET Market is a service that allows you to buy "uncompromising products" via e-commerce and au shops. It also helps you become a better shopper by easily finding fine products through internet and shops.
	Wowma! for au On Wowma Mobile App, you can enjoy the online shopping and find more than 28 million of products from apparel, electronics, housewares, furniture and grocery & gourmet food.
Others Apps	
	Downloads Manage downloaded data.
	SATCH This App can read QR codes and barcodes. And you can playback CG, Animations etc, when you hold up to the object. Please enjoy along the guidance of campaign pages that are displayed in this app.
	OfficeSuite View files such as Word, Excel.
	使い方ガイド (Usage Guide) Use the "Usage Guide" on the Web site.

* Downloading/installing is required to use.



- ◎ Using the function from each app may incur communication charges depending on the function.
- ◎ Icon names are subject to change without notice.
- ◎ In addition to the applications listed in the table, applications which you used or contracted before model change may be displayed.

Activating the Apps

Some functions activated by tapping app icons may incur communication charges.

1 Home screen → Tap an app/folder to activate

- If you tap a folder, tap an app to activate from the app list in the folder.

Switching the Home App

Switch the home apps of the product.

1 Home screen → [基本機能 (Basic Function)] → [Settings] → [Change home]

The Change home screen appears.

2	au Basic Home	▶ P.22 "Using the Home Screen"
	Standard Home	▶ P.28 "Using Standard Home"

 
3 [OK]

Using Standard Home

This is a home app displayed in standard layout for apps and widgets. It is recommended for those who are familiar with the tablet operations.

1 Change home screen → [Standard Home] → [OK]

The Standard Home screen appears. Slide/flick right or left to switch the screen.

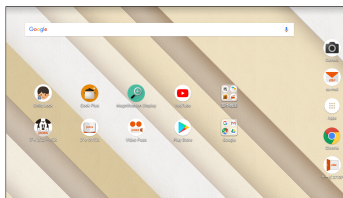

- © To restore the home screen from the Standard Home to the home screen (au Basic Home), from the Standard Home screen → [基本機能 (Basic Function)] → [Settings] → [Change home] → [au Basic Home] → [OK].

Monitoring the Product's Status

Viewing Icons

Notification icons for new mail, running operations, etc. are displayed on the left of the status bar, and status icons for product status are displayed on the right.

Main Notification Icon

Icon	Description
	New e-mail message (SMS)
	New e-mail message (au-mail)
	New e-mail message (Gmail)
	Emergency rapid mail
	Low battery condition
	Snooze alarm or alarm ended without canceling
	Notification of calendar
	Music (Player (LISMO))
	Internal memory low
	File receiving request from other Bluetooth® device
	Send/upload data
	Receive/download data
	Installed completely

Icon	Description
	Notification of updating installed apps
	Software update
	USB tethering
	Wi-Fi® tethering
	Bluetooth® tethering
	Wi-Fi® tethering and Bluetooth® tethering, Wi-Fi® tethering and USB tethering, or Bluetooth® tethering and USB tethering are in use at the same time
	Screenshot completed
	microSD memory card is mounted
	Watching TV in the background

■ Main Status Icon

Icon	Description
	Time
	Battery level 100%/ empty/ charging Battery care mode is set
	Signal strength/Signal condition (LTE/WiMAX 2+) level 4/ out of range/ in communication LTE/WiMAX 2+ available*

Icon	Description
	Airplane mode is set
	SIM card uninserted
	Wi-Fi® signal strength level 4/ level 0
	VPN connection
	Alarm setting
	Vibration is set
	Do not disturb feature status Total silence/ Alarms only/ Priority only
	Bluetooth® function in use standby/ connected
	GPS in use
	Date saver set

* The 2 networks, "LTE" and "WiMAX 2+", are available in Japan. In any case of the screen display is "4G". The Company determines the network less congested to connect due to busy network conditions.

 
Notification Panel

In the notification panel, you can check notifications and activate apps. Also, ON/OFF setting icons appear and the frequently used functions can be set immediately.

1 Slide down the status bar

The notification panel is displayed.

While it is displayed, slide down it again or tap "▼" / "▲" to toggle hidden notifications on/off.

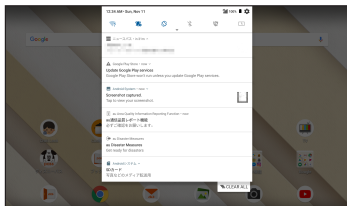


memo

- ◎ Slide down the status bar with two fingers to display all items.
- ◎ To slide up the notification panel, the notification panel can be disabled.
- ◎ To delete notifications, flick the notifications left/right to delete. Tap "CLEAR ALL" in the bottom right corner of the screen to delete all the notifications. Some notifications cannot be deleted.

Using Info Clock

Info Clock screen appears when starting charging, or entering sleep mode in charging. Flick left/right to check information such as clock, calendar, weather, etc.

 - License Agreement appears when you launch for the first time.

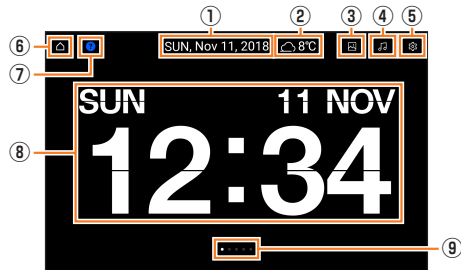

- ① Date
- ② Weather and Temperature
- ③ Slide show
- ④ Play music
- ⑤ Settings
- ⑥ Cancel button

Tap here to close the Info Clock screen.

⑦ Help button

Once tapping to display the help, the help button will no longer be displayed.

⑧ Date and Time

Tap here to launch "Clock" app.

⑨ Page dot indicator

* Displayed items vary depending on screens.



memo

- ◎ Press (Power button) on the Info Clock screen to enter sleep mode.
- ◎ Tap an icon on the notification panel (►P.30) to launch the Info Clock.

Setting Info Clock

1 Info Clock screen →

2	Charger	Set to start when the charging cable is inserted and charging is started.
	Screen turn off	Set to start when the screen turns off in charging.
	Schedule	Set the day and time to start and end.
	Display the contents on the screen	Set to show/hide the contents.
	Adaptive brightness	Set to adjust brightness level automatically.
	Help	Introduction of Info Clock functions.

Setting Schedule to Launch

Set a schedule to launch the Info Clock.

1 Info Clock screen → → [Schedule]

2 [Weather] / [Calendar] / [Clock]

3 Set the required items

You can set Schedule name, Days, Start time, End time, and Start screen.

4 [OK]

Setting Do Not Disturb Feature

Set the Do not disturb feature to on so as not to disturb others around you in public places.

1 Slide down the status bar

2

A setting screen for the Do not disturb feature is displayed. Follow the on-screen instructions.

Setting Airplane Mode

When Airplane mode is set to ON, wireless functions are disabled (data communication, wireless LAN (Wi-Fi®) Bluetooth®).

1 Press and hold (Power button) for at least 1 second → [Airplane mode]

When Airplane mode is set to ON, "✈" appears in the status bar.

- Alternatively, from the home screen → [基本機能 (Basic Function)] → [Settings] → [More] → Turn the Airplane mode to "ON" to set the Airplane mode.

Displaying Menu

There are two types of methods to display a menu screen; by tapping "☰", "☶" or "☷" and by long-touching entry field or item.

Setting Home Screen

Set various displays of the home screen.

1 Home screen → long-touch an empty space

The setting screen of the home screen appears.

2	WALLPAPERS	Change wallpapers on the home screen.
	WIDGETS	Add widgets on the home screen.
	SETTINGS	Set the scroll settings of wallpaper, etc.

3 Set the required items

* Displayed items vary depending on the terminal status.

Charging Mobile Devices

Connect the product to your smartphone via USB to use the product as a spared battery when the smartphone battery is getting low. It can also charge smartphones of your family, friends, etc.

1 Connect the USB Type-C cable (commercially available) to a terminal to be charged, and insert it to straight into the external connection terminal of the product

2 [OK]

3 Slide down the status bar

4 [USB charging this device] → [Charge the connected device]



memo

- ◎ When the external connection terminal of the terminal to be charged is Type-C, use Kyocera Type-C power supply cable O1 (O1KYHAA) (sold separately).
- ◎ Be sure to charge the product before using this function. When battery is getting low, you may not charge the terminal.
- ◎ When you charge with a long cable, or charge via a hub or conversion connector, you may not charge the terminal.
- ◎ It is not guaranteed that all devices can be charged.

Safety Precautions

When Using the Product

- Before you start using the product, make sure to read the "Safety Precautions" in this manual to ensure correct use.
 - Before you assume that the product is malfunctioning, perform "トラブル診断 (Trouble check)". (Displayed language is Japanese only.)
Home screen → [au Supports] → [故障紛失サポート (Repair and Delivery Service)] → [トラブル診断 (Trouble check)] (Displayed language is Japanese only) or, check for possible remedies in the following site "トラブル診断 (Trouble check)" (Japanese) of au homepage:
<https://www.au.com/trouble-check/>
 - Use this data communication terminal so that you can hold the product at least 1.5 cm away from your body and also do not contain metal parts between the product and your body.
- Communication is not possible even inside the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication may not be possible in poor reception areas. Communication may be interrupted if you move into poor reception areas during communications.
 - Since this product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated (though the LTE/WiMAX 2+ system has highly secure confidential communication features).
 - Since the product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.
 - The IMEI information of the product is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of the product.
 - If you are using the product overseas, check the relevant laws and regulations of the country/region you visit beforehand.

- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional or mistaken operation by the customer, or use under other unusual conditions outside the responsibility of the Company.
 - The Company is not liable for any incidental damages (change/disappearance of described content, loss of business income, disruption of business, etc.) arising from use or inability to use the product.
 - The Company is not liable for any damages arising from failure to observe the described content of this manual.
 - The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
 - Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.
 - It is recommended you keep a copy of important data in your PC's hard disk, etc. Whatever the cause of the defect or malfunction may be, the Company assumes no responsibility for alteration or loss of saved data.
- Contents saved in the product, such as contacts, mails and favorites, might be altered or lost by an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that the Company assumes no responsibility for any damages or lost profits resulting from altered or lost contents.
 - Note that content data (both charged or free content) saved on the product cannot be returned to the customer when the product is replaced for repair of a fault, for example.
 - The product uses liquid crystal for its display. The main display response speed may become slow when the ambient temperature is low, which is due to the characteristics of liquid crystal and is not a malfunction. The main display response speed will return to normal at room temperature.
 - Although the display used on the product is made using high-precision technology, some pixels (dots) might be lit or out at all times. This is not a malfunction.
 - You are recommended to store copies of individual data such as photos/movies you took and music in your PC by sending each file as mail attachment, etc. Note, however, that you may not be able to make copies of some copyrighted data even by the above-mentioned means.

- Do not discard the product together with regular trash. Please cooperate in the collection of the product when the product is no longer needed to protect the environment and effectively use resources. The product (including optional parts) is collected at au shops and other places.

* "The Company" as appears in this manual refers to the following companies:
 Sold by: KDDI CORPORATION·OKINAWA CELLULAR TELEPHONE COMPANY
 Manufactured by: KYOCERA Corporation



- Reproduction of the content of this manual in part or in whole is prohibited.
- The content of this manual is subject to change without notice.
- Some functions may not be available due to OS specification changes, or service changes/end, etc.
- Every effort has been made in the preparation of this manual. Should you notice any unclear points, omissions, etc., feel free to contact us.

Safety Precautions (Observe Strictly)

- Before using the product, thoroughly read this "Safety Precautions" for proper use.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

 DANGER	This sign denotes that "death or serious injury" ^{*1} may directly result from improper use [*] .
 WARNING	This sign denotes that "death or serious injury" ^{*1} may result from improper use [*] .
 CAUTION	This sign denotes that "minor injury" ^{*2} or damage to property ^{*3} may result from improper use [*] .

*1 Serious injury: This refers to loss of sight, injury, burns (high- and low temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or long term hospital attendance as an outpatient.

- *2 Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.
- *3 Physical damage: This refers to extended damage to buildings, furniture, livestock, or pets.

■ Explanation of Graphic Symbols Used in This Manual

	Indicates an action that is not allowed.		Indicates that handling with wet hands is not allowed.
	Indicates that disassembly is not allowed.		Indicates an action based on instructions that must be done.
	Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed.		Indicates that the power plug must be disconnected from the power outlet.

■ Precautions Common to the Main Unit, Internal Battery, Tablet Stand (Sample), Charger, au IC Card, Kyocera TV Antenna Cable 04, Peripheral Devices

DANGER

-  Do not use, store or leave the product in hot places (e.g. by the fire, near a heater, under a kotatsu or futon, in direct sunlight, in a car in the hot sun).
Doing so may cause fire, burns, injuries, or electric shock.
-  Do not put the product into or near a heating cooking device such as a microwave oven or IH cooker, or high-pressure container such as a pressure cooker.
Doing so may cause fire, burns, injuries, or electric shock.
-  Do not put sand, dirt, or mud on the product or put it on them directly. Do not touch the product with hands to which sand or others adhere.
Doing so may cause fire, burns, injuries, or electric shock.
For details on water/dust resistance, refer to the following.
► P.57 "Notes on Waterproof/Dustproof Properties"



Do not charge when the product is wet with water (drinking water, perspiration, seawater, urine of pet animals, etc.).

Doing so may cause fire, burns, injuries, or electric shock.

For details on water resistance, refer to the following.

►P.57 "Notes on Waterproof/Dustproof Properties"



Do not subject the product to strong pressure or break the product. Especially when bringing the product putting in a bag, etc., do not let the product hit against surroundings or being put between the objects.

Doing so may cause fire, burns, or injury due to built-in battery damage.

* Examples to avoid

- Putting the product in a bag and catching them in a door or a door of car
- Stepping on the product on a soft object such as a sofa, bed, or bedding, or on a floor



Do not disassemble or modify in that manner.

Doing so may cause fire, burns, injuries, or electric shock.



Do not let the product get wet with water (drinking water, perspiration, seawater, urine of pet animals, etc.).

Doing so may cause fire, burns, injuries, or electric shock.

For details on water resistance, refer to the following.

►P.57 "Notes on Waterproof/Dustproof Properties"



Do not put water (drinking water, perspiration, seawater, urine of pet animals, etc.) into the charging terminal or the external connection terminal.

Doing so may cause fire, burns, injuries, or electric shock.

For details on water resistance, refer to the following.

►P.57 "Notes on Waterproof/Dustproof Properties"



Use the optional products specified by au.

Not doing so may cause fire, burns, injuries, or electric shock.



WARNING



Do not drop, trample, or throw the product or give a strong force or vibration to it.

Doing so may cause fire, burns, injuries, or electric shock.



Do not allow conductive materials (metal pieces, pencil lead, etc.) to come in contact with the charging terminal or the external connection terminal, and do not allow dust to get inside.

Doing so may cause fire, burns, injuries, or electric shock.



Do not cover or wrap the product with bedding, etc. while using or charging the product.
Doing so may cause fire or burns.



If charging is not completed after the specified charging time, stop charging.
Overcharging may cause fire, burns, or injuries.



Make sure to turn off the product or stop charging before you get close to places like a gas station where a flammable gas or dust can be generated.
Using the product in places where a flammable gas can be generated may cause an explosion or fire.



Perform the following operations while using, charging, or keeping the product if there are odors, noise, smoke, overheating, discoloring, deformation, or other abnormalities.

- Remove the power plug from the wall outlet.
- Turn the product off.

Not doing the above operations may cause fire, burns, injuries, or electric shock.



CAUTION



Do not use the damaged product.
Doing so may cause fire, burns, or injuries.



Do not leave the product on unstable or sloping surfaces. Be careful especially when the product is set to vibrate (vibration).
The product may fall and cause injuries.



Do not use or store the product in humid or dusty places, or places that get hot.
Doing so may cause fire, burns, or electric shock.
For details on water/dust resistance, refer to the following.
► P.57 "Notes on Waterproof/Dustproof Properties"



When children use the product, do not let them use incorrectly without instruction by an adult for proper use.
Doing so may cause injuries.



Do not store the product within the reach of small children.
Doing so may cause accidental swallowing, injuries, or electric shock.



Be careful when using the product continuously for a long time or charging as it gets hot. Also, avoid touching the product for a long time by falling asleep unintentionally.

The product or specified charger (sold separately) may become hot when using for a long time such as applications, data communication, watching TV/videos, or while charging. Depending on your physical predisposition and physical condition, contacting with a high temperature part may cause skin redness, itching, rash, or low-temperature burns.

■ Main Unit



DANGER



Do not throw the product into fire or apply heat.

Doing so may cause fire, burns, or injuries.



Do not apply excessive force such as sticking a nail into the product, hitting it with a hammer, or stepping on it.

Doing so may cause fire, burns, or injuries.



If the substance inside the main unit comes into contact with your eyes or mouth, immediately rinse the area with clean water, and then see a doctor right away.

Not doing so may cause loss of sight or poor physical condition due to the influence of the substance, etc. inside the main unit.



WARNING



Do not lighten or flash the lighting part of the light close to person's eye. Be especially careful to keep a sufficient distance from small children.

Not doing so may cause vision disturbance. Also, it may cause an accident such as injuries due to dizziness or shocks.



Do not lighten or flash the light to point at the eyes of someone driving a car etc.

Doing so may interfere with driving and cause an accident.



Do not watch a repeatedly flickering screen for a long time.

Doing so may cause muscle spasms or loss of consciousness, etc.



Do not allow water or other liquids (drinking water, perspiration, seawater, urine of pet animals, etc.), metal pieces, flammable material or foreign object into the au IC card/microSD card slot on the product.

Do not mistake the place and direction of the au IC card or the microSD memory card.

Doing so may cause fire, burns, injuries, or electric shock.



Do not expose the camera lens to direct sunlight for an extended period.

Doing so may cause fire, burns, or injuries by the light-collecting mechanism of the lens.



Turn off the product or set it to Airplane mode before going aboard an airplane.

Since using the product on airplanes is restricted, follow the instructions given by the respective airlines.

The product's signals may adversely affect on-board electronic equipment.

If you commit a prohibited act while using the product on an airplane, you might be punished by law.



Follow the instructions given by the respective medical institution regarding the use of the product in a hospital.

Turn off the product in areas where the use of the product is prohibited.

The product's signals may affect electronic equipment and electronic medical equipment.



If you have a weak heart, be careful when setting the vibration and notification volume.

Sudden vibration and notification sound surprise you, it may cause harmful effect on heart.



To use electronic medical equipment, check with electronic medical equipment manufacturer or vendor to determine how devices are affected by radio waves before using.

Not doing so may cause harmful effect on electronic medical equipment, etc.



Turn the product off near high-precision electronic control equipment or electronic equipment using low-power signals.

Not doing so may cause the equipment to fail or malfunction.

* Examples of electronic equipment to avoid
A hearing aid, an implanted pacemaker, an implanted cardioverter-defibrillator, other electronic medical equipment, or other automatic control devices, etc. To use an implanted pacemaker, an implanted cardioverter-defibrillator, or other electronic medical equipment, check with electronic medical equipment manufacturer or vendor to determine how devices are affected by radio waves before using.



When the display or camera lens is accidentally broken, be careful of broken glass or exposed internal parts of the product.

Not doing so may cause burns, injuries, or electric shock with damaged parts or exposed parts.



If the internal battery leaks or gives off a strange smell, immediately remove the product from the vicinity of open flames.

Not doing so may cause leaking fluid to ignite or explode.



Be careful not to let your pet bite the product.

May cause internal battery to ignite, burst, heat, or leak, and may cause fire, burns, or injuries.



CAUTION



Do not swing the product around by holding the antenna connected to Kyocera TV antenna cable 04.

Doing so may cause injuries or other accidents.



If the display breaks and the fluid etc. leaks out from inside, do not let the fluid contact with the skin on your face or hands or clothes.

Doing so may cause eye or skin problems. If the substance inside the display comes into contact with your eyes or mouth, immediately rinse the area with clean water. If the fluid etc. enters your eyes or mouth, immediately see a doctor after rinsing.



Do not discard the old product together with regular trash.

Doing so may cause fire, burns, or injuries. Also, may cause environmental disruption. Bring them to a sales outlet such as au shop. If your local municipality has a battery recycling program, dispose of them as provided for.



If fluid etc. leaks out from the internal battery, do not let the fluid contact with the skin on your face or hands, or clothes etc.

Doing so may cause eye or skin problems. If the substance inside the display comes into contact with your eyes or mouth, immediately rinse the area with clean water. If the fluid etc. enters your eyes or mouth, immediately see a doctor after rinsing.



To use the product in car, check with automobile manufacturer or dealer to determine how vehicle devices are affected by radio waves before using.

In rare cases, using the product in some vehicle models can cause the vehicles electronic equipment to malfunction. In that case, stop using the product immediately.



If you develop skin problems, stop using the product immediately, and see a doctor.

Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition.

For material of each part ▶P.48 "Material List"



Make sure that there is no adhered metal pieces (cutter blade, staples, etc.) as the speaker part of this product generates magnetism.

Not doing so may cause injuries with adhered metal pieces.



Use the product in a well-lighted area and put some distance between you and the display when watching the display.

Using the product in dark places or near eyes may affect your vision.



Disconnect Kyocera TV antenna cable 04 when not watching TV.

When using data communication function using the product with the Kyocera TV antenna cable 04 attached, it may hit user, people around user, or surrounding objects, and may cause injuries or other accidents.

Charger



WARNING



Do not use if the cord of the specified charger (sold separately) is damaged.

Doing so may cause fire, burns, or electric shock.



Do not use the specified charger (sold separately) in a humid place such as a bathroom.

Doing so may cause fire, burns, or electric shock.



Do not touch the specified charger (sold separately) if you hear thunder.

Doing so may cause electric shock.



Do not short the charging terminal while it is connected to an outlet. Do not allow any part of your body such as your hands or fingers to come into contact with the charging terminal.

Doing so may cause fire, burns, or electric shock.



Do not place heavy objects on the cord of the specified charger (sold separately), or do not pull the cord with excessive force.

Doing so may cause fire, burns, or electric shock.



When you plug/unplug the specified charger (sold separately) into/from the outlet, do not contact metal objects with the jack.

Doing so may cause fire, burns, or electric shock.



Do not connect a transformer for overseas travel (travel converter) to the specified charger (sold separately).

Doing so may cause ignition, overheating, or electric shock.



Do not apply excessive force on the connection part with the specified charger (sold separately) connected to the product.

Doing so may cause fire, burns, injuries, or electric shock.



Do not touch the cord, charging terminal or power plug of the specified charger (sold separately) with wet hands.

Doing so may cause fire, burns, or electric shock.



Use the product at the specified power supply voltage.

When charging the product overseas, use the specified charger (sold separately) for global use.

Incorrect power supply voltage may cause fire, burns, or electric shock.

AC adapter: 100 V AC (Connect to an AC outlet for internal household use)

AC adapter for global use: 100 V AC to 240 V AC (Connect to an AC outlet for internal household use)



Wipe off dust on the power plug.

Not doing so may cause fire, burns, or electric shock.



Fully plug the specified charger (sold separately) into the outlet.

Not doing so may cause fire, burns, or electric shock.



When you disconnect the power plug from an outlet, do not pull the cord of the specified charger (sold separately) with excessive force. Instead, grasp the adapter to disconnect.

Pulling the cord of the specified charger (sold separately) may damage the cord and cause fires, burns, electric shock, etc.



When plugging/unplugging the specified charger (sold separately) into/from the product, do not pull the cord with excessive force. Instead, plug/unplug it straightly toward the jack to connect.

Not doing so may cause fire, burns, injuries, or electric shock.



Stop using the product immediately if you notice deformation of the charging terminal. Also, stop using the product after recovering the original form of the terminal.

Short-circuiting of the charging terminal may cause fire, burns, injuries, or electric shock.



When the specified charger (sold separately) is not used for a long time, disconnect the power plug of the specified charger (sold separately) from the outlet.

Not doing so may cause fire, burns, or electric shock.



Immediately remove the power plug from the outlet if water or other fluids (drinking water, perspiration, seawater, urine of pet animals, etc.) get on the adapter.

Not doing so may cause fire, burns, or electric shock.



Always remove the power plug from an outlet when cleaning the equipment.

Not doing so may cause fire, burns, or electric shock.



CAUTION



Do not touch the specified charger (sold separately) for a long time when connected to an outlet.

Doing so may cause burns.

■ au IC Card



CAUTION



Be careful of the cut surface when handling an au IC card as it may damage a part of your body such as fingers, etc.

The cut surface may be sharp, and it may cause injuries.

■ Kyocera TV Antenna Cable 04

WARNING



Kyocera TV antenna cable 04 is not water resistant. Do not pour liquids on it such as water. Also, do not use it in a place where it gets splashed directly with water, pet urine, etc., and in a humid place such as a bathroom. Do not use it with wet hands.

Doing so may cause overheating, fire, electric shock, short-circuiting of the electronic circuit, or malfunction by corrosion.

CAUTION



If you develop skin problems, stop using the product immediately, and see a doctor. Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition.

For material of each part ►P.48 "Material List"

■ Tablet Stand (Sample)

CAUTION



When setting the product on the tablet stand (sample), adjust the position so that the product is at the center of the tablet stand (sample).

Setting the product with leaned to either side of left or right may cause the product falling, injuries, etc.



When opening and closing the tablet stand (sample), be aware not to get a part of body such as a finger caught.

Not doing so may cause injuries.



If you develop skin problems, stop using the product immediately, and see a doctor. Itching, rashes, eczema, etc. sometimes occurs depending on your physical constitution and condition.

For material of each part ►P.48 "Material List"



Do not use the tablet stand (sample) in a bathroom.

The main unit falls into a bathtub, which may cause injuries or malfunction.

■ Use near Medical Instruments and inside Medical Facilities

WARNING



Wearers of medical equipment such as implanted pacemakers or defibrillators must carry and use the product at least 15 cm away from the implanted device.

Radio waves may affect the performance of electronic medical equipment.



When using electronic medical devices as home medical treatment other than an implanted pacemaker and an implanted cardioverter defibrillator outside medical facilities, check individually with the manufacturer of the electronic medical equipment regarding the influence of radio waves.

Radio waves may affect the performance of electronic medical equipment.



Make sure that the product will not emit any signals (turn off power, put it in Airplane mode, etc.) if within 15 cm of those around you, such as where crowded and you cannot move freely.

Since there may be people with an implanted pacemaker or an implanted cardioverter-defibrillator nearby. Radio waves may affect the performance of electronic medical equipment.



When using the product in medical facilities, be sure to observe the regulations of the facility.

Radio waves may affect the performance of electronic medical equipment.

Material List

■ Qua tab QZ10 main unit

Part	Material	Surface Treatment
Exterior case	PC resin (glass fiber included)	UV cured acrylic coating
Exterior panel (side), card slot cover, power button, volume up/down button, customize button, camera ring	PC resin	UV cured acrylic coating
Display (screen)	Chemically strengthened glass	Antifouling
Camera lens	PMMA resin	Hard coat
Earphone terminal	PA resin	-
Shooting/simple light	PMMA resin	-

■ Tablet stand (sample)

Part	Material	Surface Treatment
Exterior	TPE (Elastomer), PC + ABS resin	-
Rubber foot	Urethane foam	-

■ Kyocera TV antenna cable 04 (04KYHSA)

Part	Material	Surface Treatment
Plug	Copper alloy	Gold plating treatment (ground Ni plating)
Cord	TPO	-

Handling Precautions

These precautions are provided to prevent product faults and to ensure that performance can be fully demonstrated. Thoroughly read these precautions to ensure correct use.

■ Precautions Common to the Main Unit, Internal Battery, Charger, Tablet Stand (Sample), au IC Card, Kyocera TV Antenna Cable 04, Peripheral Devices

- Do not apply excessive force to the product during use. Be sure not to put the product into a tightly packed bag or place a heavy object on the product in a bag. Doing so might damage the display or internal circuit board resulting in a malfunction. Keeping an external connection device connected to the external connection terminal or earphone microphone terminal might damage the connector resulting in a malfunction. Such damage and malfunction are not covered by the warranty, even if there is no external damage.

- To ensure the waterproof property (equivalent to IPX5 and IPX8) or the dustproof property (IP5X) of the product, use the product with the card slot cover tightly closed.
Note that the waterproof/dustproof property is not guaranteed in every usage condition. Do not allow water to get inside the product, or splash water on a specified charger (sold separately) or optional accessories. Do not open/close the card slot cover in the rain or with any water on the surface of the product. Doing so may cause water intrusion resulting in internal corrosion.
Malfunctions determined to be caused by such water intrusion are not covered by the warranty.
- Do not use the product in extremely hot, cold or humid places.
(Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 85%.)
 - Charger
 - Peripheral devices
- Do not use the product in extremely hot, cold or humid places.
(Use within an ambient temperature range of 5°C to 35°C and humidity range of 35% to 90%. Temporary use at 36°C to 40°C is allowed.)
 - Main unit
 - au IC card (attached to the main unit)
- Do not use in places subject to lots of dust or vibration. Doing so may cause malfunction.

- Clean the external connection terminal and earphone microphone terminal with dry cotton swabs, etc. every now and then. Soiling may result in a poor connection. Do not exert a strong force to clean the external connection terminal or earphone microphone terminal to prevent deformation.
- Clean the product with a soft dry cloth (such as the type used for eyeglasses). Forcefully rubbing with a dry cloth may scratch the display. The display may be stained if splash or smear is left attached to the surface. Wiping the product using alcohol, thinner, benzene, detergent, etc. might erase the printing on the outer cover or cause malfunction.
- Use as far away as possible from land-line phones, TVs and radios. Use nearby might affect them.
- The product may become warm while charging or during other operations, depending on the situation, but this is not abnormal.
- Do not place near corrosive chemicals or in places where corrosive gas is generated. Doing so may cause malfunction.
- Do not use outside when you can hear thunder
Doing so might risk lightning strikes and electric shock.
- Be sure to use only the specified peripheral devices.
Use of other peripheral devices might cause malfunction.

- Do not put the product in a cooking apparatus such as microwave oven or a pressure vessel. Doing so may cause malfunction.
- The customer is not allowed to disassemble, modify or repair the product. Doing so may cause malfunction. Modification of the product is in violation of the Radio Law and Telecommunications Business Law.
- Do not allow conductive foreign objects (metal fragments, pencil leads, etc.) to come into contact with or get inside the connection terminal, earphone microphone terminal, etc. to avoid the connection terminal, earphone microphone terminal, etc. from short-circuit. Doing so may cause malfunction.
- In the event that the product gets wet while charging, immediately disconnect the power plug of the specified charger (sold separately).
- Do not use the product while driving a car or motorbike, riding a bicycle or walking. Use of a tablet while driving a car or motorbike is prohibited by law. Use of a tablet while riding a bicycle may be punishable by some regulations.
- Using or charging the product in a bag or while it is covered with bedding might cause malfunction.
- When using a specified charger (sold separately) or external device, insert/remove the connector straight to/from the terminal. Make sure the orientation of the connector. Unless it is correct, it may cause a fault.

- Do not expose the camera lens to direct sunlight for an extended period. Doing so may cause malfunction.
- Do not store the product in places subject to direct sunlight (e.g. in a car), places that get hot, places that get extremely cold, and in humid or dusty places. Doing so may cause malfunction.
- Do not leave the product on unstable or sloping surfaces. Be careful especially when the product is charging or set to vibrate. The product may fall and cause malfunction.
- For charging the product, do not exceed the rating of an outlet or wiring device by standard connection etc.
- Do not swing the product around by holding Kyocera TV antenna cable 04. Doing so may cause damage.

■ Main Unit

- The battery is built into the product and it is not user replaceable. For information on battery replacement, contact an au shop or Customer Service Center.
- Do not forcefully press, tap or intentionally subject the display to strong impact. Doing so might cause scratching or damage.
- Do not forcefully press your fingernails, sharp objects, or hard objects against buttons or display surface. Doing so may cause scratching or damage.

- The touch panel is designed to be lightly touched by fingers. Avoid pressing forcefully or using sharp objects (fingernail, ballpoint pen, pin, etc.). The touch panel might not respond to the following types of operation. These may also result in malfunction.
 - with fingernails
 - with gloved fingers
 - with another object placed on the operation area
 - with a protective film or sticker adhered
 - under water
- Never use the modified product. Use of a modified device violates the Radio Law and Telecommunications Business Law. The product has acquired such certification as conformity with technical regulations for a specified radio station based on the Radio Law and conformity with technical regulations for a terminal device based on the Telecommunications Business Law, and the "Technical Conformity Mark ㊞" can be confirmed internally in the product.
Home screen → [基本機能 (Basic Function)] → [Settings] → [About tablet] → [Compliance information]
If the modification is made to the internal components, the certifications of conformity with technical regulations will become invalid. Never use the product without these certifications valid. Doing so violates the Radio Law and Telecommunications Business Law.

- Take care not to place magnetized items such as magnetic cards, speakers and TV sets near the product as it might cause malfunction. Putting strong magnetism close to the product might cause false operation.
- Do not bring magnetized cards such as cash cards, credit cards and prepaid cards closer to the product. Doing so may result in loss of recorded information.
- When you put the product in your bag, etc., take care so that the display does not come in contact with metal objects or other hard objects. Not doing so may cause scratching or damage. Contacting metal or other hard parts with the display may cause scratching or damage.
- When suddenly brought into a warm place from a cold place, or when in a humid location, or when used where temperature suddenly changes (e.g. near the air discharge port of an air conditioner), water droplets (i.e. condensation) sometimes are formed inside the product. Note that when used under conditions such as this, humidity might cause corrosion or a fault.
- Camera lens or inside of the display may mist over (dew formation) because of usage environment such as temperature or humidity. This is not malfunctioning or abnormal.

- Environment for easily generating dew formation on the camera lens or inside of the display
In the following cases, such as large temperature change or high humidity, camera lens or inside of the display mist over because of usage environment.

- Bring the product from a high temperature land into a low temperature water
- Bring the product from a cold place into a warm place such as an indoor
- Open/close the card slot cover in a high humidity environment

- How to reduce condensation

Do not use the product in places that get hot and humid, and sandy or dusty places. Leave the product with the card slot cover opened for a while until the condensation is cleared when the ambient temperature is held constant.

- While writing/reading data to/from a microSD memory card, do not subject the product to vibration or impact, or turn off the power. Doing so may cause data loss or malfunction.
- Do not cover the sensor with your finger or put a sticker on it. May hinder the sensor from detecting the ambient light level and functioning correctly.
- Keep the card slot cover closed when using the product. Using the product with the cover opened can allow dust, liquid, etc. to enter and may cause malfunction.

- Do not allow liquids, metal objects, or other foreign objects to get inside of the au IC card or microSD memory card slot. Doing so may cause malfunction.

- Do not give strong impact on the product such as dropping, throwing, stomping. Doing so may cause malfunction.

- Do not place the product directly on sand at a beach, etc. If sand or other small particles get inside the mouthpiece or speaker, etc., it may cause the volume to drop or malfunction.

■ Touch Panel

- Any soiling on the display surface may cause false operation. Wipe the display with a soft, dry cloth.
- Putting stickers or sheets (e.g. commercially available protective films, peep prevention sheets) on the display might cause incorrect operation of the touch panel.
- When carrying the product in your bag, etc., take care not to put the touch panel close to metals or other conductive materials, as it might cause false operation of the touch panel.

■ Internal Battery



Li-ion 00

(The internal battery of the product is a lithium-ion battery.)

The internal battery is not fully charged at the time of purchase. Charge the battery before using the product. Also charge the battery after long periods of disuse before using the product.

- Use in very hot or cold environments, for example, when left in an automobile with the windows closed in summer, will cause the battery capacity to drop and shorten the available battery usage time. This will also shorten the internal battery's service life. Try to use the internal battery as much as possible at room temperature.
- After the internal battery is charged, battery power decreases bit by bit even if the product is not used. The internal battery may be discharged if the product is not used for a long time. We recommend charging the battery before use.

- The internal battery is a consumable accessory. If the performance of an internal battery does not recover (e.g. the usable time after each charge has become extremely short), the internal battery is at the end of service life, so stop using the product. Since the battery is built into the product, au shops keep your product and replace the battery for a fee. Please note that you may not be able to use the product for a certain period. Please understand. Note that the length of service life varies depending on the usage condition, etc.

- The internal battery may swell up as it approaches the end of its battery life. This is due to the properties of lithium-ion batteries, and is not a problem in terms of safety.

■ Charger

- Do not wrap the cord of the specified charger (sold separately) around the adapter unit. Do not forcibly bend the specified charger's (sold separately) plug or the connection between the connector and power cord. Do not place heavy objects on the cord of the specified charger (sold separately) or USB connection cable, or do not pull the cord with excessive force. Doing so may cause malfunction.
- When unplugging the power plug of the specified charger (sold separately) from the power outlet, hold and pull the power plug. If you pull the cable, it might be damaged.

■ au IC Card

- Do not forcibly remove or insert the au IC card. Be careful not to exert excessive force when inserting the card into your au terminal.
- You are responsible for any damage caused by inserting your au IC card into some other IC card reader/writer, etc.
- Do not put stickers, etc. on the au IC card.
- Do not insert the au IC card with a conversion adapter attached. It may cause malfunction.
- Do not damage the card (use in a hot place, throw into fire, contact the metal part with foreign object, give an impact, bend, apply a load, moisten, etc.). Doing so may cause data loss or malfunction.

■ Kyocera TV Antenna Cable O4

- Be aware that trash is not adhered to the plug of Kyocera TV antenna cable O4. Not doing so may cause malfunction.
- Plug/unplug the plug of Kyocera TV antenna cable O4 straightly toward the earphone microphone terminal of the main unit. Not doing so may cause malfunction.

■ Tablet Stand (Sample)

- Tablet stand (sample) is not water resistant. Do not pour liquids on it such as water. Also, do not use it in a place where it gets splashed directly with water, pet urine, etc., and in a humid place such as a bathroom. Do not use it with wet hands. Doing so may cause malfunction.
- Note that the tablet stand (sample) may fall if you place this product vertically, or narrow the angle opening the tablet stand.

■ Camera

- When photographing important occasions, take a trial shot and check the shot image to make sure it is correctly shot.
- Do not shoot in areas where shooting is prohibited.

■ Copyrights and Rights of Portrait of Portrait

- You are not allowed to copy, distribute, publish, modify or edit the data you shot, recorded or downloaded using the product without consent of the copyright holder, except for personal use, under the copyright law.
In addition, do not use or modify portraits or names of other individuals without their consent, as it may infringe on rights of portrait.
Note that shooting and recording might be restricted at some live performances, shows and exhibitions even for personal use.

- Be careful about the copyright and portrait right when posting photos you shot, etc. on Internet homepages.

■ Backup Content on the Product

- Please back up important content registered to the product or downloaded to the product from an outside source. Content recorded to memory on the product sometimes disappears or is altered by unexpected factors, such as static electricity or a fault, repair, mishandling, etc.

■ FCC Certification Information

- The product is certified by Federal Communications Commission (FCC).
The product's FCC ID is JOYFA85.
You can view this certification in the following way.
How to confirm:
Home screen → [基本機能 (Basic Function)] → [Settings] → [About tablet] → [Compliance information]

Notes on Waterproof/Dustproof Properties

The product has a waterproof property equivalent to IPX5^{*1} and IPX8^{*2}, as well as a dustproof property equivalent to IP5X^{*3} on the condition that the card slot cover is completely attached (by Company test methods).

Before using the product, thoroughly read "Important precautions before use" to ensure correct use. Failure to follow the contents described in these sections may cause the intrusion of water, sand or other foreign material, resulting in overheating, ignition, electric shock, injury or a fault.

- *1 IPX5 equivalent means that the product will maintain its operability as a communication terminal even if it is sprayed with water from a 6.3 mm diameter nozzle at a distance of about 3 meters for more than 3 minutes at a rate of about 12.5 liters per minute from any direction.
- *2 IPX8 equivalent means that the product will maintain its operability as a communication terminal with no water getting inside the main unit even if it is gently submerged in a tank of still tap water at room temperature to a depth of 1.5 meter for about 30 minutes.
- *3 IP5X means that the product will have and safely maintain functionality as a communication terminal after being removed from a test device filled with particles up to 75 um in diameter and agitated for 8 hours. (This does not mean that the product completely prevents the intrusion of particles.)

Operation of the product in every possible condition during actual use is not guaranteed. Malfunctions determined to be caused by mishandling by the customer are not covered by the warranty.

Important Items to Remember before Use

- Close firmly the card slot cover of the product. Water resistance is effective when completely sealed.
- Never open or close the card slot cover if your hand or the product is wet.
- Do not let the product submerged into or get wet with the liquids (seawater, water from a swimming pool, hot water of hot spring, water containing soap, detergent, bath powder, alcohol, soft drink, seasoning, etc.) other than tap water. Also, do not use it in a place where it gets wet with pet urine. If the product gets splashed, immediately rinse it off with tap water.
- Do not place the product directly on sand at a beach, etc. Sand or other small particles might get inside the speaker or microphone, causing the volume to drop. If sand gets inside the product, it might cause overheating or a fault.
- Do not use the product underwater.
- Do not use or leave the product in a humid place such as a bathroom or kitchen for an extended period of time.
- Moisture may still remain after draining. While this will not affect use, you should not leave the product next to items you do not want to get wet. Product may wet clothing, inside of carry bag, etc.

- Drain any water in the speaker or microphone, that may be affecting audibility.
- Product is not designed to resist water pressure. Avoid exposing to high water pressure or submersing in water for a long period.
- Do not wash the product in a washing machine or ultrasonic bath.
- Do not immerse the product into a bathtub. Product is not designed to be heat resistant.
- The rapid changes of temperature may cause condensation, resulting in malfunction. Wait until the product reaches room temperature before you bring the product from a cold place into a warm bathroom.
- The product does not float on water.

● Using in a bathroom

The product has been tested waterproof performance of IPX5/8. Also, it has been tested that the product does not cause malfunction when hot water with temperature of up to 43°C is splashed by our measurement.

- When using, make sure to attach the card slot cover completely.
- Do not use the product in a bathroom for many hours. The product is not damp-proof.

Use in an environment with a bathroom temperature of 40 °C or below and humidity of 99 % or below, and limit to use continuously within 1 hour. Make sure to drain and dry it after use. (►P.61). Continuous operation of all functions is not guaranteed.

 
- Do not immerse the product into hot water of a bathtub. Do not immerse the product into hot spring, or hot water containing bath powder etc. If such hot water gets on the product, or shampoo and soap sticks to it, immediately rinse it with tap water.
- The rapid changes of temperature may cause contraction of the packing, resulting in seepage. Wait until the product reaches ordinary temperature before bringing it to a bathroom.
- After using the product, rinse it with tap water, wipe with a dry soft cloth, and remove it from a bathroom.
- Some functions may not be available depending on the radio wave conditions of a bathroom.

● Card slot cover

- Close firmly the card slot cover of the product, and make sure the cover is completely closed. Any minute particles becoming lodged between contact surfaces (a single hair, etc.), no matter how small, can cause seepage.
- Do not wear gloves while opening/closing the card slot cover of the product. Any minute particles becoming lodged between contact surfaces (a single hair, etc.), no matter how small, can cause seepage. Before closing the cover, wipe any water, soiling, etc. with a dry, clean cloth, no matter how small.
- Any deterioration or damage with the card slot cover will affect water resistance.

How to close the card slot cover

① After stowing the cover, press on the cover with the flat part of your finger. ② Rub your finger over the cover in the direction of arrow to ensure that the cover is not partially open.

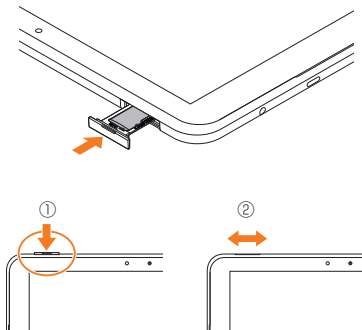

● If any liquid other than plain water gets on the product

- If anything other than water (seawater, washing detergent, alcohol, etc.) gets on the product, immediately rinse with water.
- Wash with slightly weak running water (less than 6 liters/minute) with tap water (5°C to 35°C) at a position about 10 cm away from the faucet or shower.
- If the product gets soiled, wash by hand without using a brush, etc., holding the product so that the card slot cover does not open.

● After the product gets wet

- After becoming wet, drain water and wipe the product with a dry, clean cloth.
- In cold regions, any water on the product may freeze. Using the product with frozen water may cause malfunction. Do not leave water drop on the product.

● Rubber seal

- The rubber seal around the card slot cover is important in maintaining water resistance. Do not scratch or remove it.
- Be careful not to pinch the rubber seals when closing the card slot cover. Trying to close the cover with a seal pinched can scratch the seal and affect water resistance. Any minute particles becoming lodged between contact surfaces (a single hair, etc.), no matter how small, can cause seepage.

- Any liquid other than water (alcohol, etc.) on the product can affect product durability.
- Do not insert pointed objects in the card slot cover. Doing so may damage/deform the product or scratch the seal, allowing water seepage.
- Parts used for maintaining water resistance should be replaced every 2 years regardless of their appearance. Contact your nearest au shop for replacement.

● Heat resistance

- Do not submerge the product in hot water or get it wet with hot water. Do not use the product in saunas or expose it to hot air from hair dryer, etc. Product is not designed to be heat resistant.

● Shock

- The product is not resistant to shock. Do not drop the product or subject it to shock. Also, do not jab the speaker with any sharp object. Doing so might damage or deform the main unit causing water leak.

Precautions on Charging

Optional accessories are not water/dust resistant. Note the following before and after charging.

- Never charge the battery if the product is wet.
- Make sure the product is not wet. To charge the product after it has gotten wet, drain water well and wipe with a dry, clean cloth before inserting the USB Type-C plug into the external connection terminal.
- Be sure to check water drops or foreign objects does not get inside the external connection terminal before use.
- Do not touch the specified charger (sold separately) with wet hands. Doing so may cause electric shock.
- Do not expose the specified charging equipment (sold separately) to water. Do not use it near water, such as in a bathroom, shower room, kitchen, or washroom. Doing so may cause fire, burns, electric shock, or a fault. Do not bring it into a bathroom, etc. even when you are not charging with them. Doing so may cause fire, burns, electric shock, or a fault.

How to Drain Water

If you use the product after it gets wet, drain the speaker and microphone.

Water remaining in those parts might wet your clothes or bag, or the sound might become hard to hear.

Follow the steps below to drain water.

 
1 Wipe water thoroughly on the surface of the product with a clean dry lint-free cloth



2 Shake the product

- ① Hold the product firmly and shake it in the direction of arrows until water does not come out.

- * When shaking the product, stay alert to your surroundings.
- * Be careful not to have the product pop out, and hold it firmly to drain water.

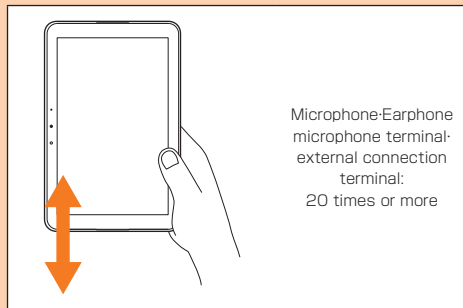


- ② Wipe drained water.

- * The speaker, microphone, external connection terminal, earphone microphone terminal, volume buttons, and customize button are particularly hard to drain water from. With those parts facing down, press them against the cloth to wipe off any water.

- ③ Place the product on a dry towel or cloth, then leave it at room temperature for a while.

 - 3** Press the product gently against a clean dry lint-free cloth, and wipe off water remained in the gaps such as in the speaker, microphone, external connection terminal, earphone microphone terminal, volume buttons, customize button, etc.

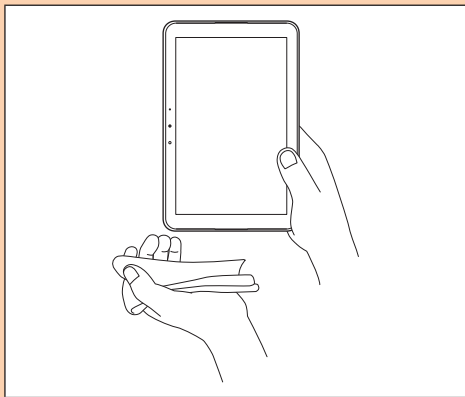

- 4** Leave the product for 1 hour or more at room temperature to dry after removing drained water thoroughly

Even after you take these procedures, water may remain on the product. Do not place the product near things that you do not want to wet. Also, take care not to wet your clothes, bag, etc.

Notes on Using Bluetooth® / Wireless LAN (Wi-Fi®) Function

- The Bluetooth® function of the product conforms to domestic standards of Japan, FCC standards, and has been certified.
 - Use of the Bluetooth® function is limited in some countries or regions. If you use the product overseas, check the relevant laws and regulations of the country/region you visit.
 - The wireless LAN (Wi-Fi®) function of the product conforms to domestic standards of Japan, FCC standards, and has been certified.
 - Use of the Wireless LAN (Wi-Fi®) function is limited in some countries or regions. If you use the product overseas, check the relevant laws and regulations of the country/region you visit.
 - The 2.4 GHz band used by wireless LAN (Wi-Fi®) and Bluetooth® devices is operated by various other devices. For this reason, the communication speed and connectable range may be decreased, or disconnection may occur, due to interference from other devices.
 - Do not use this product in places where electromagnetic waves are generated or near electric products, AV and OA equipment, or other magnetized devices.
- Subjecting this product to magnetic or electrical noise might increase noise and prevent it from performing communications. (This product is particularly susceptible to noise when it is used near a microwave oven.)
 - Using this product near a TV, radio or similar appliance might cause reception interference and disrupt TV images.
 - Searching might not be successful if there are multiple wireless LAN (Wi-Fi®) access points near to the product or the same channel is being used.
 - Since using the product on airplanes is restricted, follow the instructions given by the respective airlines.
 - The communication speed and connectable range vary depending on the distance between communication devices, obstacles and the devices used.

Cautions on Using 2.4 GHz Band

The frequencies used by the Bluetooth® and/or Wireless LAN (Wi-Fi®) function of the product are in the 2.4 GHz band. In this frequency band, other similar wireless stations, in-plant wireless stations for mobile unit identification that require a license for use, such as factory production lines, specific small power wireless stations that do not require licenses, amateur wireless stations (collectively called "other wireless stations" from here on) are operated in addition to home electrical appliances such as microwave ovens, devices for industrial, scientific and medical devices.

1. Before using the product, make sure that "other wireless stations" are not in operation nearby.
2. In the event that instances of radio wave interference have occurred between the product and "other wireless stations", immediately either relocate the product or stop operation of the device (stop emission of radio waves).
3. If unsure or require assistance, contact an au shop or Customer Service Center.



memo

- ◎ Connections between the product and all other Bluetooth® and wireless LAN (Wi-Fi®) devices have not been confirmed. Therefore, connections with all Bluetooth® and wireless LAN (Wi-Fi®) devices are not guaranteed.
- ◎ This product supports security features for wireless communications that are compliant with the Bluetooth® and wireless LAN (Wi-Fi®) standard specifications, but the security may not be sufficient depending on the usage environment and configuration. Be careful when making data communication using Bluetooth® or wireless LAN function (Wi-Fi®).
- ◎ Wireless LAN (Wi-Fi®) has the advantage that it can be freely connected anywhere within the radio wave range, as it uses radio waves for exchanging information. However, not making security settings allows the risk of malicious use by third parties. While at the customer's discretion and responsibility, it is recommended that you make security settings before using the product.
- ◎ The Company assumes no responsibility for leakage of data or information that may occur during Bluetooth® /wireless LAN (Wi-Fi®) communication.



- ◎ Since Bluetooth® and wireless LAN (Wi-Fi®) functions use the same frequency band, using the both functions at the same may cause radio wave interference resulting in decreased communication speed or disconnection from the network. If connection fails, stop using either of the Bluetooth® and wireless LAN (Wi-Fi®) functions.

Bluetooth® and wireless LAN (Wi-Fi®) functions of the product use frequencies in the 2.4 GHz band.

• **Bluetooth® function: 2.4FH1/XX1**



This product uses the 2.4 GHz band. FH-SS is used as the modulation scheme. The interference distance is about 10 m or less.

• **Wireless LAN (Wi-Fi®) function: 2.4DS4/OF4**



This product uses the 2.4 GHz band. DS-SS and OFDM are used as the modulation schemes. The interference distance is about 40 m or less. This means that all bandwidths are used, and that band of mobile unit identification devices can be avoided.

Available channels vary depending on countries. For use in an airplane, check with the airline company in advance.

Cautions on Using 5GHz Band

The frequencies used by the Wireless LAN (Wi-Fi®) function of this product are in the 5 GHz band. Outdoor use of 5.2 GHz band and 5.3 GHz band is prohibited under the Radio Law.

The used channels of the product are as follows.

- W52 (5.2 GHz band / 36, 38, 40, 42, 44, 46, 48 ch)
- W53 (5.3 GHz band / 52, 54, 56, 58, 60, 62, 64 ch)
- W56 (5.6 GHz band / 100, 102, 104, 106, 108, 110, 112, 116, 118, 120, 122, 124, 126, 128, 132, 134, 136, 140 ch)

IEEE802.11b/g/n

IEEE802.11a/n/ac

J52 W52 W53 W56

Security Code/PIN Code

The product has various security codes that you can use.

Security Code

The available security codes are as follows. Do not forget the various security codes that are set as they are necessary for various operations and contracts.

Make sure to change the initial value to your own code before use.

● Security code

Example of usage	To do various inquiries, applications, and modifications on the au homepage
Initial value	A four digit number chosen by the customer and noted on the application form

● Security settings on the start screen

Example of usage	To configure/cancel security settings
Initial value	The value for the initial setting when you purchased the product

PIN Code

PIN Code

To prevent unauthorized use of the au IC card by a third party, you can set the product to require PIN code entry every time the power is turned on. You also need to enter PIN code when setting whether PIN code entry is required.

If PIN code is incorrectly entered three times consecutively, the PIN code will be locked. You can unlock the PIN code using PUK code.

- At the time of purchase, the PIN code is "1234", and entry is not required. You can change the PIN code to any 4- to 8-digit number and the product to require entry if necessary.
- To use the product with a PIN code required, be sure to change the PIN code to your own number you have chosen.

PUK Code

In case PIN code is locked, you can unlock it by entering PUK code.

- PUK code is an 8-digit number given at the time of purchase, which is printed on the back side of the plastic card on which your au IC card is attached.
- After entering PUK code, you need to set a new PIN code.

- If PUK code is incorrectly entered ten times consecutively, contact an au shop, PiPi or Customer Service Center.
- PIN code is not reset by "Factory data reset".

<Please print this section and use>

[Password entry field]	
Google account ID	Security (start screen) Lock: Lock No.
@gmail.com	
Google account password	Security (start screen) Lock: Password
au ID account ID	Security (start screen) Lock: Pattern
	
au ID account password	
Facebook account ID	
Facebook account password	

* Strictly manage your account and password to prevent a third party from obtaining them.

Notes on Data Communication Charges

- Since constant Internet connection is possible with the product, data communication may be performed automatically by some applications, resulting in high data communication charges. Therefore, subscription to a data flat-rate service/ data communication charge discount service is recommended.
- To browse homepages, download applications, communicate using applications, send/receive mails and configure various settings with the product, connection to the Internet is required, to which data communication charge applies.
 - * Data communication charge does not apply to wireless LAN (Wi-Fi®) connection.

Notes on Applications

- Be sure to check the security of the application, then install it at your own risk. Some applications might cause virus infection, damage various data, and send out your location information, usage history or personal information stored in the product via the Internet.
- The Company assumes no responsibility for any problems that might be caused by applications you have installed. In such case, you may be charged a repair fee even during the warranty period.
- The Company assumes no responsibility for any disadvantage brought to you or any third party by applications you have installed.
- Some applications require that a microSD memory card be inserted.
- Some applications prohibit the product from entering sleep mode while they are active, or rapidly drain the battery while running in the background.
- Operation procedures and screen appearances of the applications preinstalled in the product and those installed by you are subject to change without notice as a result of version upgrade. Note that there may be differences with descriptions in this manual.

Setting the App Permissions

The first time you launch an app/function that accesses the functions or information of the product, a confirmation screen for requesting access permission appears.

If the confirmation screen appears, confirm the content and tap "DENY"/"ALLOW".

Example: When Photos/Movies is activated

1 Home screen → 

2 Apps permission confirmation screen → [DENY] / [ALLOW]

Tap "ALLOW", allow the use of function normally. When you use multiple function, follow the same operations for each function.



memo

- ◎ If you do not permit, app/function may not be activated or use of function may be limited.
- ◎ To change the app permissions, home screen → [基本機能 (Basic Function)] → [Settings] → [Apps] → tap the app that you want to change the settings → [Permissions] → select [] / [] of the permission to be changed.



- For some apps/functions, an explanation screen for the permission appears. The confirmation screen may also appear multiple times, or the display may differ. Confirm the displayed content and follow the onscreen instructions.
- In this manual, description of confirmation screens may be omitted.

Tablet Etiquette

■ Use of Tablets is Not Allowed in the Following Places!

- Do not listen to music, watch videos or TV while driving a car or motorbike, or riding a bicycle. Use of tablets while driving a car or motorbike is prohibited by law. (Use of tablets while riding a bicycle may also be punishable by law.) In addition, stay alert to the traffic around you even when walking. Surrounding sounds might not be heard clearly, and gazing at the screen may distract your attention causing a traffic accident. Be especially careful at railroad crossings, station platforms and pedestrian crossings.
- Since using the product on airplanes is restricted, follow the instructions given by the respective airlines.

■ Be Considerate of People around You

- To prevent notification sound from bothering other people, power off or use Do not disturb feature at a movie theater, theater, museum, library, etc.
- In a city area, use in a place where you do not bother people walking.
- It is extremely dangerous to walk while looking at the screen of the tablet. Do not operate the tablet while waking or by stopping suddenly.
- Move to a place where you do not disturb others while you are in shinkansen, a hotel lobby, etc.
- Be careful of sound leakage from earphones in trains or other places with many people around you.
- Ask permission if you take photos with the tablet camera.
- When using the camera, follow common rules of etiquette regarding camera use.
- There may be a person with a cardiac pacemaker nearby at a place filled with people such as in a crowded train. Turn on "Airplane mode" or turn the tablet off in such places.
- When a medical institution has laid down designated areas where use of the product is prohibited or is not allowed to be brought in, abide by the instructions of that medical institution.

Appendix

Updating Software

You can update the product to the most recent software for optimal performance and to get the latest enhancements.

There are several methods to update the software.

- Use this product to download and update the software.
- Use Wi-Fi® functions of this product to download and update the software.

■ Notes on Software Update

- You are charged for data communication when connecting to the Internet from the product using data communication. Especially for OS update, large data communication occurs. You are recommended to use Wi-Fi®.
- When software update is necessary, you will be informed on au homepage, etc. For details, contact an au shop or Customer Service Center (call toll-free 157 from au cell phones). In addition, users of the product will receive a notice from au, when software update is necessary to improve the functionality of the product.

- It is recommended to back up your data before updating software.
- For details, refer to the support information on the Kyocera homepage.
- If software update has failed or stopped, perform the same procedure again.
- If the software update fails, it may become impossible to operate the product. If this happens, bring it to an au shop or PiPit (not accepted by some shops).
- Software update may not be available overseas.
- Any operations are not available during software update. Alarm does not work, either.

Downloading Software into the Product to Update

Downloading updated software via the Internet directly from the product is available.

1 Home screen → [基本機能 (Basic Function)] → [Settings] → [About tablet] → [Software update]

From here on, follow the on-screen instructions.



memo

- ◎ Note that depending on the terms of your subscription contract, communication charges may be incurred for the product to automatically search for available networks.
- ◎ After a software/OS update, the product cannot revert to the previous version software.

Troubleshooting

Before you assume that the product is malfunctioning, confirm the following contents and perform "トラブル診断 (Trouble check)" in "故障紛失サポート (Repair and Delivery Service)" app.
Home screen → [au Supports] → [故障紛失サポート (Repair and Delivery Service)] → [トラブル診断 (Trouble check)] (Displayed language is Japanese only)

Trouble	Detail	Page
Cannot turn on power	Is the internal battery charged?	P.16
	Is  (Power button) pressed and held until the notification light turns on?	P.20
Cannot charge the product	Is the specified charger (sold separately) correctly used for charging?	P.17
	Is the product at a high or low temperature? The product may stop charging depending on a temperature.	P.16
	Is the specified accessory (adapter etc.) used for charging?	P.17
Cannot operate/The screen does not respond/ Cannot turn off the power	Press and hold  (Power button) and  (Volume up button) at the same time for at least 11 seconds.	P.20
The power is turned off automatically	Is the internal battery adequately charged?	P.16
The power is turned off while the wake-up logo is displayed	Is the internal battery adequately charged?	P.16

Trouble	Detail	Page
[Signal icon] (out of service area) appears	Is the product within the service area or where signal is good enough?	P.29
	Is the built-in antenna covered with finger, etc.?	P.7
	Is a card inserted other than the au IC card?	P.9
Cannot operate button/touch panel	Is the power turned on?	P.20
	Turn off the power and then turn it on again.	P.20
[Battery icon] appears	Is the au IC card inserted?	P.10
A message indicating that charging is necessary is displayed	The battery is almost empty.	P.16
The battery can only be used a short time	Is the battery adequately charged? • Charge until the red charging light turns green.	P.16
	Does the internal battery have adequate service life remaining?	P.54
	Is the product left in the place for a long period where [Signal icon] (out of service area) appears?	P.29
	Is the Battery care mode set?	—
	Stop using/disabling unused apps or functions.	—

Trouble	Detail	Page
Display is dark	Is the temperature of the product or battery high? The display may become dark depending on the temperature of the product.	—

If you cannot find the solution to your problem in the above items, refer to the au Customer Support site "トラブル診断 (Trouble check)" on the website shown below. (Displayed language is Japanese only.)

<https://www.au.com/trouble-check/>

After-Sales Service

■ When Asking for Repair

For repair, contact Repair and Delivery Service Center.

During the warranty period	Repairs will be done based on the terms of services of the free-of-charge repair warranty.
Outside the warranty period	We shall repair the product for a charge as requested by the customer if repair renders it usable.

* The warranty period is one year from the day when you purchase the product.

- ◎ Before handing the product for repair, make a backup of the contents of memory since they may disappear during repair. Note that the Company shall not be liable for any damages and loss of income should the contents of memory be altered or lost.
- ◎ Recycled parts that meet the Company's quality standards are sometimes used for repair.
- ◎ au terminals collected by Replacement cell phone delivery service which you used before are recycled to terminals for replacement after repairs. Also parts replaced by au after-sales service are collected and recycled by the Company. They are not returned to customers.
- ◎ For the products that are processed, modified, analyzed (including altering the software, analyzing (including rooting), reverse-engineering, decompiling, or disassembling), or repaired by repair offices other than the company specified, they are not covered by the warranty or repair may be refused.
- ◎ The battery built into the product is not covered by the free-of-charge repair warranty except for events arising from defects in battery materials and manufacturing.
- ◎ Accessories, such as Kyocera TV antenna cable O4, tablet stand (sample) etc. are not covered by the free-of-charge repair warranty.

■ Performance Parts for Repair

The Company retains performance parts for repair of the product main unit and its peripherals for 4 years after discontinuation of production. Performance parts for repair refers to parts required for maintaining the functions of the product.

■ Terms of Services of Free-of-Charge Repair Warranty

1. When you apply for repair, inform us of your serial number (IMEI number). You can check the main unit or the sticker attached on the packaging box for the serial number (IMEI number).
2. Repairs will be done based on the terms of services of the free-of-charge repair warranty when the product is used correctly based on the instruction manual and the product is malfunctioning.
3. Repairs will be charged in the following cases even during the warranty period. (Also, the product cannot be repaired in some cases.)
 - ① When the product is not used correctly based on the instruction manual.
 - ② When the product is malfunctioning or damaged due to modification and repair.
 - ③ When the product is repaired by repair offices other than the company specified.
 - ④ When the product is

malfunctioning or damaged due to a handling fault or accident. Or when there are some traces that the product is damaged by falling, water or humidity. ⑤ When the product is malfunctioning or damaged due to earthquakes, storms, floods or other natural disasters, as well as fires, salt, abnormal voltage, etc.

4. Repairs may be refused depending on the damage condition of devices.
5. Note that the company shall not be liable for any damages and loss arising from the product malfunction.
6. The Company assumes no responsibility for any accidents when the product is connected with an unspecified device.
7. On-site repair is not available.
8. This warranty is valid only in Japan.

* The warranty guarantees that free-of-charge repairs will be done based on the terms of period and conditions indicated above. Therefore, the warranty does not limit your legal rights against persons in charge of the warranty and other operators.

■ Repair and Delivery Service

An after-sales service membership program on a monthly basis called "Repair and Delivery Service" (monthly fee: 380 yen, tax excluded) is available for using your au terminal for a long time without worries. This service expands coverage for many troubles including malfunction, theft and loss. For details of this service, check on the au homepage or contact Repair and Delivery Service Center.



memo

- ◎ You can apply for membership only at the time of purchasing your au terminal.
- ◎ Once you cancel the membership, you cannot reapply for it until you purchase an au terminal next time.
- ◎ Note that when changing the model or purchasing an extra terminal, this service only covers the most recently purchased au terminal.
- ◎ When an au terminal is handed over to you or someone else, the Repair and Delivery Service membership is also handed over to the successor of the terminal.
- ◎ When you get a new au terminal by changing the model, purchasing an extra terminal, etc., the "Repair and Delivery Service" membership for the old au terminal is automatically canceled.
- ◎ Service contents are subject to change without notice.

■ au IC Card

The au IC card is lent to you by au. In case of loss or damage, the card will be replaced at your expense. When malfunction is suspected, or in case of theft or loss, contact an au shop or PiPit.

■ au After-Sales Service Information

Service contents			Repair and Delivery Service	
			Member	Non-member
Replacement cell phone delivery service	Spontaneous failure	1st year	Free	N/A
		2nd year and later	Refer to the table of the service charge in "Replacement cell phone delivery service" (Member) service charge.	
	Partial damage, water soak, irreparable damage, theft and loss			

Service contents			Repair and Delivery Service	
			Member	Non-member
Holding over and repair	Spontaneous failure	1st year	Free	Free
		2nd year and later	Free of charge (three-year warranty)	Actual cost
	Partial damage		Customer charge Upper limit 5,000 yen	
	Water soak and irreparable damage		Customer charge 10,000 yen	
	Theft and loss		N/A	N/A (By model replacement)

Charge amounts are all tax excluded

■ "Replacement Cell Phone Delivery Service" (Member) Service Charge

Applicable condition	1st	2nd
Normal	5,000 yen/ Long Benefit* ¹ 3,000 yen	8,000 yen/ Long Benefit* ¹ 6,000 yen
Applied both "WEB割引" (Discount for web app)* ² /"代用機なし割引" (Discount for nonuse of substitute)* ³	4,000 yen/ Long Benefit* ¹ 2,000 yen	7,000 yen/ Long Benefit* ¹ 5,000 yen
Applied only "代用機なし割引" (Discount for nonuse of substitute)* ³	4,500 yen/ Long Benefit* ¹ 2,500 yen	7,500 yen/ Long Benefit* ¹ 5,500 yen

Charge amounts are all tax excluded

*¹ Customers in 3rd year (25 months) of subscription or all subscription lines in a family discount plan to which the customer belongs are eligible. Customers using a data communication device or tablet are eligible if they are subscribing to a set discount plan (WIN Single Set Discount Service or Smartphone Set Discount) and the subscription for the line covered under the set discount is in its 3rd year.

*² WEB割引 (Discount for web app): If you apply "交換用携帯電話機お届けサービス (Replacement mobile phone delivery service)" from the au homepage, 500 yen will be discounted from service charge.
"代用機なし割引" (Discount for nonuse of substitute) is applied automatically as the substitution is not available for "WEB割引 (Discount for web app)".

*³ 代用機なし割引 (Discount for nonuse of substitute): If you do not use the substitution when using "交換用携帯電話機お届けサービス" (Replacement mobile phone delivery service), 500 yen will be discounted from service charge.
For details, refer to au homepage.

Online Replacement Service (available 24 hours a day)
(Japanese)

* From the PCs and smartphones only

<https://www.au.com/support/service/mobile/trouble/repair/application/>

Replacement cell phone delivery service

◎ If you have a problem with your au terminal, call us to have a replacement one (of the same model and color*) delivered to your specified address. Please return your old faulty au terminal within 14 days after the terminal for replacement is delivered to you.

* If a same-model/-color terminal cannot be provided, a terminal for replacement will be provided in a model and color that we specify.

◎ You can use this service up to twice within one year starting from the day when you first use this service. If you have not used this service over the past one year at the time of your application for this service, the application will be regarded as your first time. If you have, the application will be regarded as your second time.

* For details, refer to au homepage.

Holding over and repair

◎ Damages and malfunctions intentionally caused by the customer as well as those due to modification (e.g. disassembly, change of parts, painting, etc.) by the customer are not covered by this service.

◎ You cannot receive a refund for replacement of the outer casing due to stains, scratches, paint removal, etc. on the outer casing.

SIM Unlock

This product can be SIM-unlocked. SIM-unlocking the product allows other-carrier SIM cards to be used with it.

- Requests can be made for SIM-unlocking on the au homepage or at an au shop.
- When using non-au SIM card, some services, functions, etc. may be unavailable. The Company is not liable for any operations.
- To set up your tablet after unlocking SIM lock, from the home page, [基本機能 (Basic Function)] → [Settings] → [About tablet] → [SIM card status] → [SIM STATUS UPDATE].
- For details, refer to au homepage. (Japanese)
<https://www.au.com/support/service/mobile/procedure/simcard/>

Related Accessories

- **Kyocera TV Antenna Cable 04 (04KYHSA)**
- **TypeC Common AC Adapter 01 (0601PQA) (sold separately)***
Common AC Adapter 05 (0501PWA) (sold separately)*
Common AC Adapter 03 (0301PQA) (sold separately)*
Common AC Adapter 03 Navy (0301PBA) (sold separately)*
Common AC Adapter 03 Green (0301PGA) (sold separately)*
Common AC Adapter 03 Pink (0301PPA) (sold separately)*
Common AC Adapter 03 Blue (0301PLA) (sold separately)*
- **Kyocera Type-C Power Supply Cable 01 (01KYHAA) (sold separately)**
- **MicroB-TypeC Conversion Adapter (0601PHA) (sold separately)**

* MicroB-TypeC Conversion Adapter (sold separately) is required for use.



memo

© Accessories can be purchased from au online shop (Japanese).
<http://onlineshop.au.com>

Main Specifications

■ Main Unit

Display	Approx. 10.1 inches, approx. 16.77 million colors, Transparent TFT 1,920 × 1,200 dots (WUXGA)	
Weight	Approx. 503 g	
Dimensions (W × H × D)	Approx. 259 × 168 × 8.6 mm	
Internal memory* ¹	ROM: Approx. 32 GB RAM: Approx. 3 GB	
Continuous standby time	Approx. 1,310 hours	
Continuous tethering time	Approx. 2,000 minutes	
Maximum number of Wi-Fi tethering connection devices	10 devices	
Charging times (estimate)	TypeC Common AC Adapter 01 (sold separately)	Approx. 250 minutes
Camera image pixel	CMOS	
Effective out-camera pixels	Approx. 13 million pixels	

Effective in-camera pixels		Approx. 5 million pixels
Wireless LAN (Wi-Fi®) function		IEEE802.11a/b/g/n/ac compatible
Bluetooth® function	Compatible version	Bluetooth® standards Ver.4.2 compatible *2
	Output	Bluetooth® standards Class 1
	Communication range*3	Within 10 m with no obstacles in the range
	Supported Bluetooth profile*4	GATT (Generic Attribute Profile) SPP (Serial Port Profile) A2DP (Advanced Audio Distribution Profile) AVRCP (Audio/Video Remote Control Profile) OPP (Object Push Profile) PBAP (Phone Book Access Profile) HID (Human Interface Device Profile) HSP (Headset Profile) PAN (Personal Area Networking Profile) PAN-NAP (Personal Area Networking-Network Access Point) PAN USER (Personal Area Networking-User) HOGP (HID over GATT Profile)

Bluetooth® function	Supported Bluetooth profile*4	SCMS-T Bluetooth SSP MAP (Message Access Profile)
	Frequency bands	2.4 GHz band
Continuous 1seg watching time		Approx. 12 hours 20 minutes
Continuous Fullseg watching time		Approx. 11 hours 40 minutes

*1 Since the storage is shared by data and apps, storage space may be reduced depending on the usage of apps.

*2 It is confirmed that the product and all Bluetooth® devices are compliant with Bluetooth® standards designated by Bluetooth SIG, and they are authenticated. However, procedures may differ or data transfer may not be possible depending on the device's characteristics or specifications.

*3 It changes according to objects obstructing devices and signal reception.

*4 Specifications provided in Bluetooth® standards for making communication between Bluetooth®-compatible devices in accordance with their intended use.

■ Kyocera TV Antenna Cable 04 (04KYHSA)

Length	Approx. 136.4 mm
Weight	Approx. 5 g



memo

- ◎ The continuous standby time may drop to less than half depending on the battery charging status, usage environment such as temperature, reception condition at the location where the product is used, and the function settings.

Specific Absorption Rate (SAR) of Data Communication Terminals

This model Qua tab QZ10 complies with Japanese technical regulations for exposure to radio waves and international guidelines on radio wave protection.

This data communication terminal has been designed in observance of the Japanese technical regulations regarding exposure to radio waves^(*) and limits to exposure to radio waves recommended by equivalent international guidelines. These international guidelines were set out by the International Commission on Non-ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition.

The Japanese technical regulations and international guidelines define the limits using a unit of measurement known as the Specific Absorption Rate (SAR), which represents the average amount of radio frequency energy absorbed by the human body. The SAR limit for

this data communication terminal is 2.0 W/kg. The highest SAR value for this data communication terminal when it is operated in normal usage described in this manual is 0.74 W/kg^(**). There may be slight differences in SAR levels among individual products, but they all satisfy the limit. The actual SAR of this data communication terminal while communicating on the terminal can be well below that indicated above. This is due to automatic changes in the power level of the data communication terminal to ensure it only outputs the minimum power required to communicate with a base station. Therefore in general, the closer you are to a base station, the lower the power output of the data communication terminal is.

While the data communication terminal is communicating, be sure to hold the product at least 1.5 cm away from your body and do not contain metal parts between the product and your body. Under these conditions, this data communication terminal satisfies Japanese technical regulations and international guidelines for radio wave protection.

The World Health Organization has stated that "a large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as

being caused by mobile phone use".
If you would like to know more detailed information,
please refer to the WHO website.

[http://www.who.int/docstore/peh-emf/
publications/facts_press/fact_english.htm](http://www.who.int/docstore/peh-emf/publications/facts_press/fact_english.htm)

*1 Technical regulations are defined by the Ministerial Ordinance
Related to Radio Law (Article 14-2 of Radio Equipment
Regulations).

*2 This includes the wireless function that can be used
simultaneously.

Please refer to the websites listed below if you
would like to know more detailed information
regarding SAR.

- Ministry of Internal Affairs and Communications
website
[http://www.tele.soumu.go.jp/e/sys/ele/index.
htm](http://www.tele.soumu.go.jp/e/sys/ele/index.htm)
- Association of Radio Industries and Businesses
website (Japanese)
[http://www.arib-emf.org/O1denpa/
denpa02-02.html](http://www.arib-emf.org/O1denpa/denpa02-02.html)
- au homepage
<https://www.au.com/english/>

For the following content, refer to the online
manual, and the "取扱説明書 詳細版 (Full Instruction
Manual)" (Japanese) available on the au homepage.

- FCC Notice
- OpenSSL License

From your PC:

[https://www.au.com/support/service/mobile/
guide/manual/](https://www.au.com/support/service/mobile/guide/manual/)

Export Administration Regulations

This product and its accessories may be subject to
the Japan Export Administration Regulations ("Foreign
Exchange and Foreign Trade Law" and its related
laws). In addition, U.S. Re-export Regulations (Export
Administration Regulations and the related laws
and regulations) may apply to this product and its
accessories. To export and re-export this product and
its accessories take the required measures on your
responsibility and at your expenses. For details on the
procedures, contact the Ministry of Economy, Trade
and Industry, the U.S. Department of Commerce.

Intellectual Property Rights

Trademarks

Company names and product names referred to in this manual are trademarks or registered trademarks of the respective companies.



Google and Google logo, Android and Android logo, Google Play and Google Play logo, Play Music and Play Music logo, Play Movies & TV and Play Movies & TV logo, Gmail and Gmail logo, Google Maps and Google Maps logo, Google Drive and Google Drive logo, Google Maps Navigation and Google Maps Navigation logo, Google Chrome and Google Chrome logo, Google Voice Search and Google Voice Search logo, YouTube and YouTube logo are trademarks or registered trademarks of Google, LLC.

Microsoft®, Windows® and Windows® 7/Windows® 8.1/Windows® 10 are registered trademarks of Microsoft Corporation in the U.S.A. and other countries. The official name for Microsoft® Windows® is Microsoft® Windows® Operating System.

Microsoft®, Microsoft® Excel®, Microsoft® PowerPoint®, Windows Media®, and Exchange® are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.

Microsoft® Word, Microsoft® Office are product names of Microsoft Corporation in the United States.

QR code is a registered trademark of DENSO WAVE INCORPORATED.

microSD, microSDHC and microSDXC logos are trademarks of SD-3C, LLC.

Bluetooth® and logo are registered trademarks owned by the Bluetooth SIG, Inc., and KYOCERA Corporation is licensed to use those trademarks.

WiMAX is a trademark of WiMAX Forum.

Wi-Fi®, WPA®, Wi-Fi CERTIFIED logo, Wi-Fi Protected Setup logo, Wi-Fi Direct®, and Miracast® are registered trademarks of Wi-Fi Alliance.

Wi-Fi CERTIFIED™ and Wi-Fi Protected Setup are trademarks of Wi-Fi Alliance.

Facebook and Facebook logo are trademarks or registered trademarks of Facebook, Inc.

Twitter and Twitter logo are trademarks of Twitter, Inc., and are used under license.

Instagram is a trademark of Instagram, LLC in the U.S. and other countries .

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

- (1) ACCESS, the ACCESS logo, and NetFront are registered trademarks or trademarks of ACCESS CO., LTD. in the United States, Japan and/or other countries.
- (2) This software is based in part on the work of the Independent JPEG Group.

"PhotoSolid" of Morpho, Inc. is adopted for the function to avoid blurring still images. "PhotoSolid" is a registered trademark of Morpho, Inc.

"MovieSolid" of Morpho, Inc. is adopted for the function to avoid blurring videos. "MovieSolid" is a registered trademark of Morpho, Inc.

"Morpho Rapid Effect" of Morpho, Inc. is adopted for the image effect technology. "Morpho Rapid Effect" is a trademark of Morpho, Inc.

"Morpho HDR" is adopted for HDR (High Dynamic Range) technology. "Morpho HDR" is a trademark of Morpho, Inc.

This product uses font types of LIM Corporation, Ltd.

"Rollbahn" is a registered trademark of Delfonics, Inc.

Qualcomm Quick Charge is a product of Qualcomm Technologies, Inc. Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries.

USB Type-C™ is a trademark of USB Implementers Forum.

All other company names and product names in this manual are trademarks or registered trademarks of respective companies.

License

Users of the product are authorized to use software installed into the product described in this instruction manual. Pay attention to the following points when using the software.

- (a) The software installed on this product or part of it may not be altered, delivered, modified, analyzed, reverse-engineered, derived, and any such actions are prohibited.
- (b) Illegally importing the software or a part of it is prohibited.
- (c) This Software is provided without implied warranties of merchantability, fitness for a particular purpose and noninfringement of third party rights.

Note that the existing license agreement takes priority for usage of GNU General Public License (GPL), GNU Library/Lesser General Public License (LGPL) included in software, software based on other open source software license and software that KYOCERA Corporation is licensed.

For information on the Open source software, refer to "Open Source Software" as follows;

Open Source Software

Note that the existing license agreement takes priority for usage of GNU General Public License (GPL), GNU Library/Lesser General Public License (LGPL) included in software, software based on other open source software license and software that KYOCERA Corporation is licensed. The exact terms of GPL, LGPL and some other licenses are reproduced in "About tablet" in this product. For details, refer to KYOCERA homepage.

This product includes software copyrighted by KYOCERA Corporation and licensed software.

Copyright of the software designed and developed complying with the open source software standard belongs to KYOCERA Corporation or the third parties, distribution, reproduction, transformation and transmission over public lines without consent of KYOCERA Corporation are prohibited, unless you are authorized or permitted by Copyright Law.

■ Recording Diagnosis and Usage Condition Data

KYOCERA Corporation asks for users' cooperation in order to improve the quality of products and services. KYOCERA Corporation records and saves data of failure diagnosis and the usage conditions (application usage by users, log related to error, detail information of application usage by users (specified functions, usage frequency, memory/battery status)) in the product in order to track and cope with diagnosis events such as unexpected shutdown or system error for the purpose of improvement of quality and services. Those information may be collected upon repair request by user after obtaining the user agreement.

For inquiries, call:

Customer Service Center

For general, charge, operations (toll free)

Business hours 9:00 to 20:00 (7 days a week)

From fixed-line phones:  0077-7-111 | From au cell phones:
157 area code not required

Pressing "zero" will connect you to an operator,
after calling "157" on your au cellphone.

In case above numbers are not available (for free),

 0120-977-033 (except Okinawa)
 0120-977-699 (Okinawa)

For service canceling procedure
in case of loss or theft (toll free)

Business hours 24-hour (7 days a week)

From fixed-line phones:  0077-7-113 | From au cell phones:
113 area code not required

In case above numbers are not available (for free),

 0120-925-314

Repair and Delivery Service Center

For loss, theft or damage (toll free)

Business hours 9:00 to 20:00 (7 days a week)

From fixed-line phones/au cell phones,

 0120-925-919



**キケン！
水ぬれ充電**

濡れた状態での充電は、
異常な発熱・焼損などの原因となり
大変危険です。



モバイル・リサイクル・ネットワーク
携帯電話・PHSのリサイクルに協力。

Cell phone and PHS operators collect and recycle unused
telephones, batteries and battery chargers at stores
bearing the  logo regardless of brand and manufacturer
to protect the environment and reuse valuable resources.

March 2018, 1st Edition

Sales: KDDI CORPORATION • OKINAWA CELLULAR TELEPHONE COMPANY

Manufactured by: KYOCERA Corporation