

J.BURROWS

• • • • •

ASSEMBLY INSTRUCTIONS

TYPHOON PRO GAMING HIGH BACK CHAIR

JBRAPTBK / JBRAPTBL / JBRAPTRD



Weight capacity: 130kgs

This design and instruction booklet is subject to copyright.
www.officeworks.com.au

1 CTN

For spare parts or hardware call (03) 9310 3011 or email hardware@kyvas.com.au

Important

 
Estimated Assembly Time: 20min

Assembly Video

- To view an assembly video, go to <https://www.officeworks.com.au/>
- Search the product by item code or name:



- Click on the icon to watch the video.

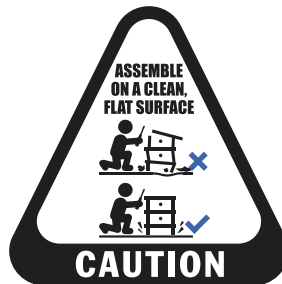

(03) 9310 3011

NOTE

- Please check you have all hardware before assembly.
- If you are missing any hardware, please contact Kyvas on (03) 9310 3011 or email hardware@kyvas.com.au
- Please ensure you have the name of the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

Do not tighten screws before all screws are in the right place.

- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.


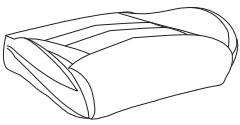
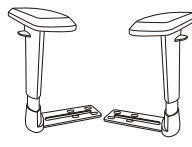
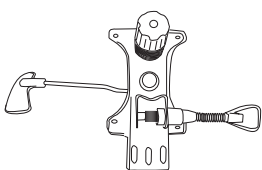
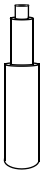
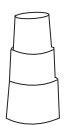
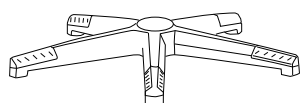
 
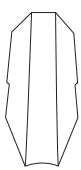
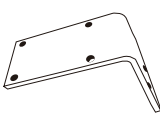


WARNING

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.
- Failure to follow these warnings could result in serious injury.






DANGER

- CHILDREN MUST BE SUPERVISED.


PART LIST

<p>A</p>  <p>x1</p>	<p>B</p>  <p>x1</p>	<p>C</p>  <p>x2</p>	<p>D</p>  <p>x1</p>
<p>E</p>  <p>x1</p>	<p>F</p>  <p>x1</p>	<p>G</p>  <p>x1</p>	<p>H</p>  <p>x5</p>
<p>I</p>  <p>x1</p>	<p>J</p>  <p>x1</p>	<p>K</p>  <p>x1</p>	<p>L</p>  <p>x1</p>

HARDWARE LIST


<p>M</p> <p>φ 6x20mm</p>  <p>x 4</p>	<p>N</p> <p>φ 6x25mm</p>  <p>x 8</p>	<p>O</p> <p>φ 8x30mm</p>  <p>x 4</p>	<p>P</p> <p>φ 8x20mm</p>  <p>x 3</p>	<p>Q</p> <p>M6</p>  <p>x 1</p>
--	--	--	---	--

 Step 1

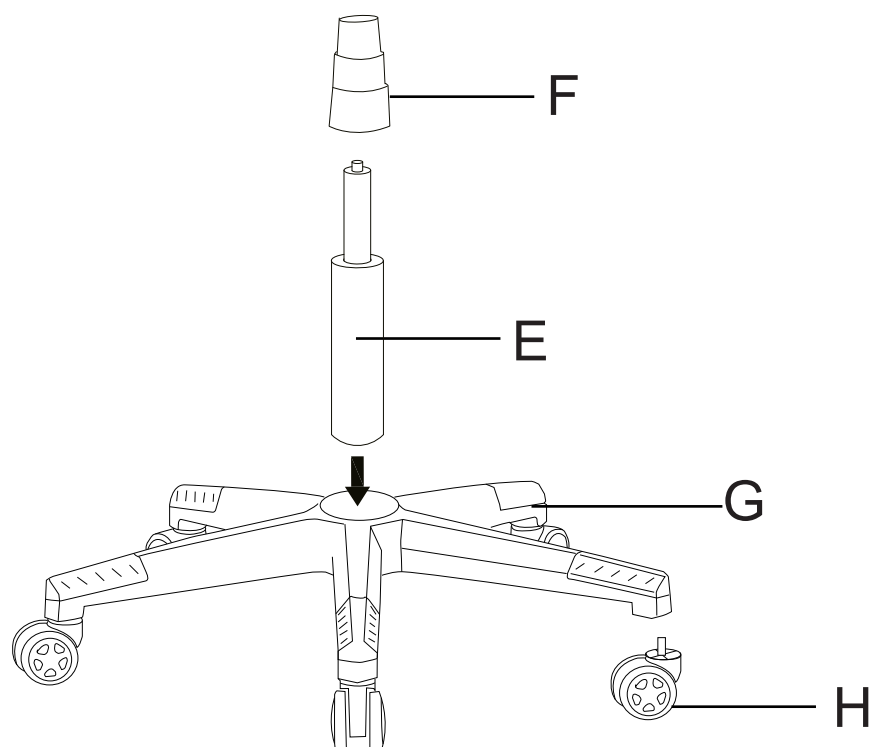



Note: Turn the Star Base (G) upside down. Push the Castors (H) into holes at the end of each leg. Turn the Star Base (G) upright and insert Gas Lift (E) into the center hole of Star Base (G). Place cover (F) over the Gas Lift (E).

 Step 2

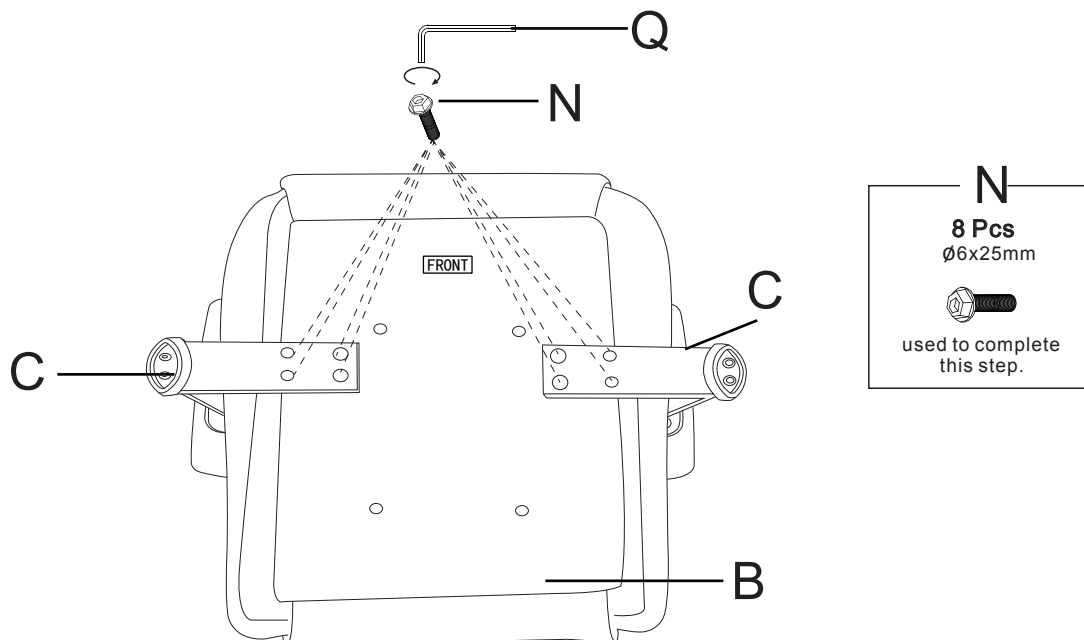



Note: Attach Armrests (C) to the Seat Cushion (B) using 8 x Screws (N) with Allen Key (Q). Tighten the screws with Allen Key (Q).

  Step 3

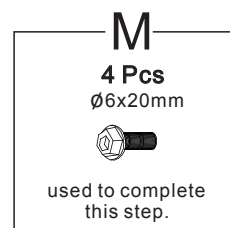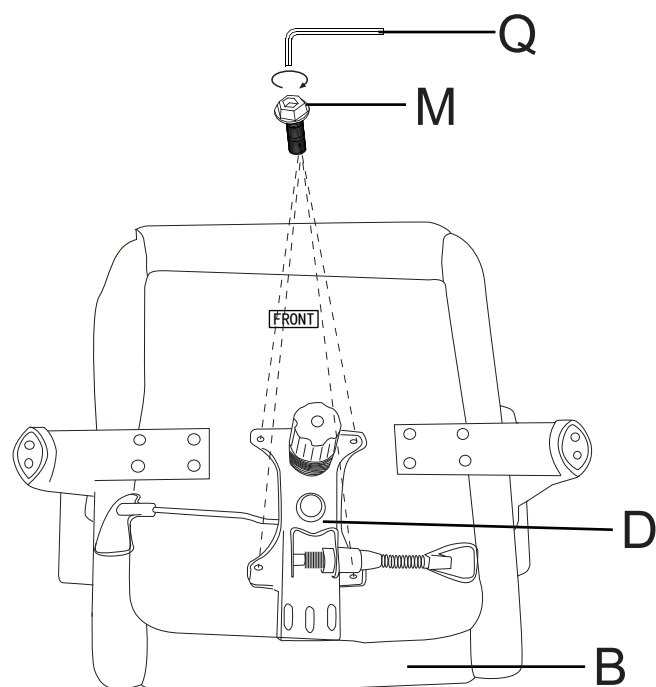


Note: Align the Seat Plate (D) so the FRONT of the Seat Plate matches the FRONT label on the bottom of the Seat Cushion (B). Tighten the screws with Allen Key (Q).

  Step 4

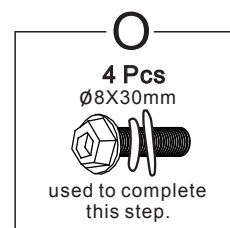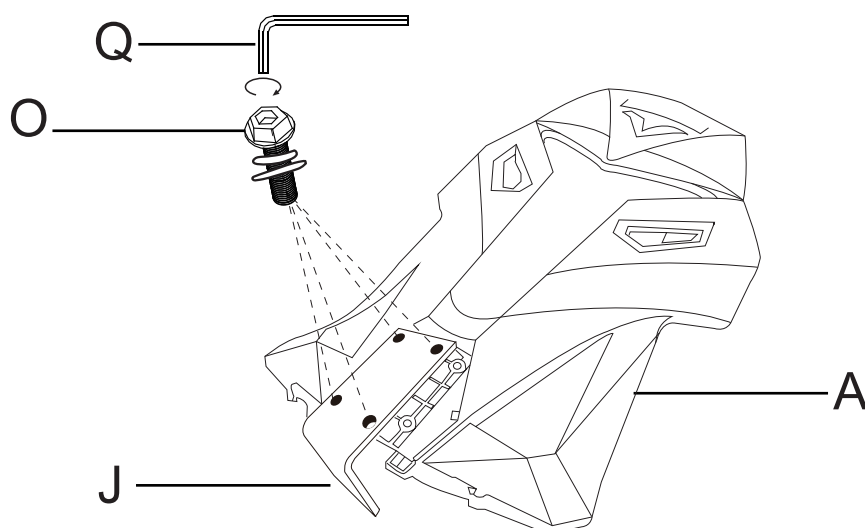


Note: Attach BackBar (J) to the Back (A) using 4x Screw(O) with Allen Key (Q). Tighten the screws.

 Step 5

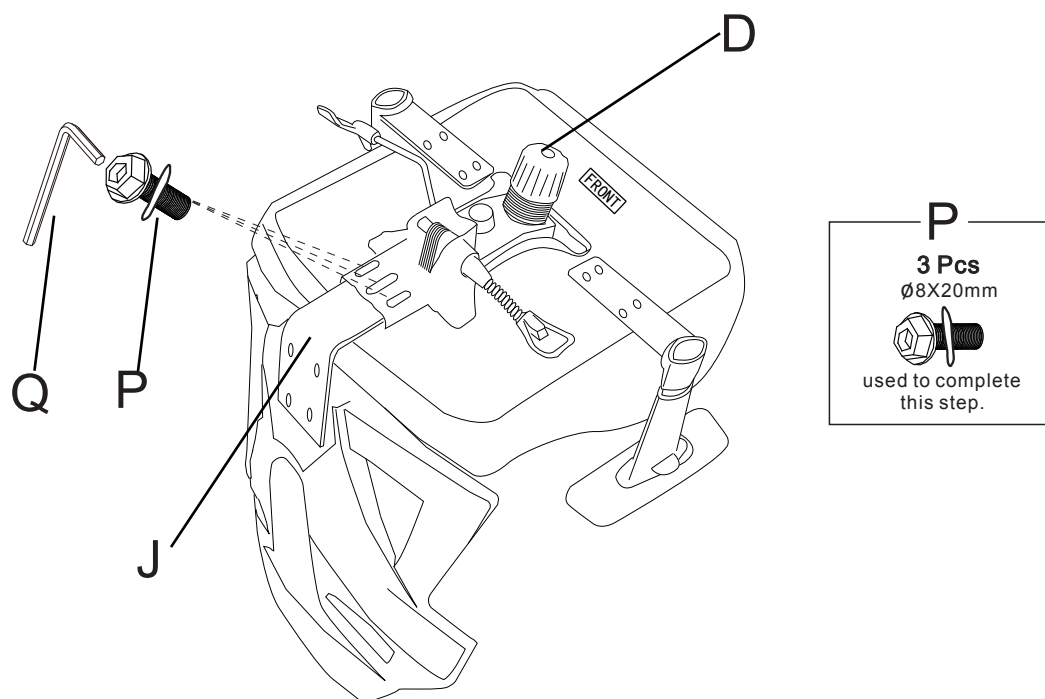


Note: Attach Back Bar (J) to the mechanism (D) on the assembled Seat Cushion (B) using 3x Screw (P) with Allen Key (Q). Tighten the screws.

 Step 6

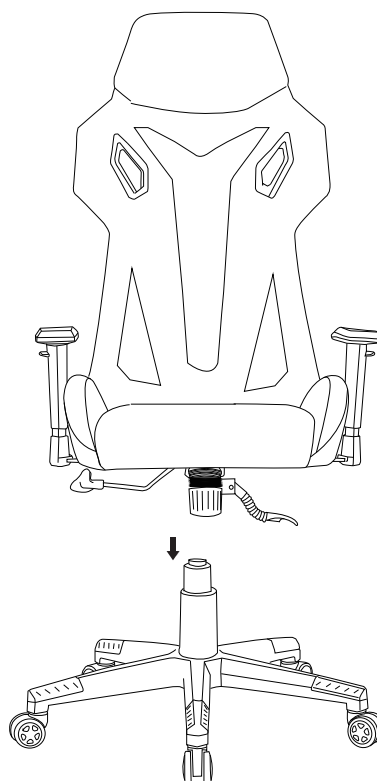


Note: Place assembled seat on the Gas Lift (E). Push down firmly until connection is secure.

 Step 7

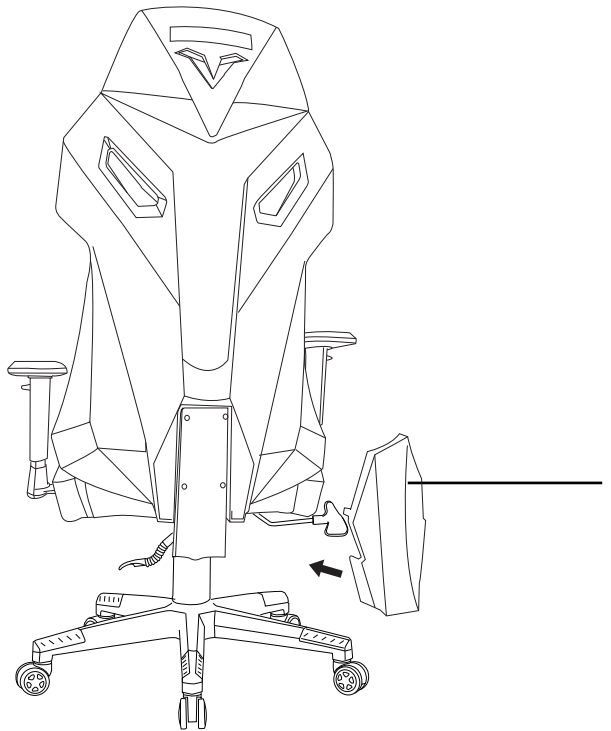


Note: Fasten the decorative buckle (I) by pushing until connect is secure.

 
Step 8

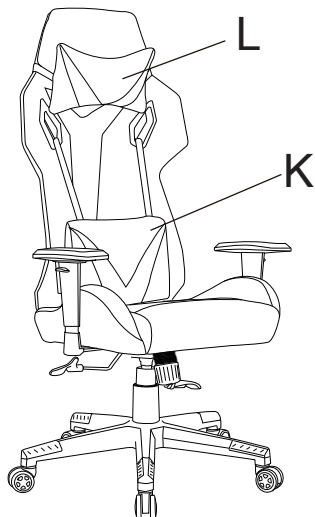

Attach lumbar cushion

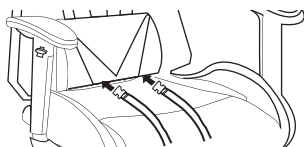 


 Lead the elastic through the aperture as shown

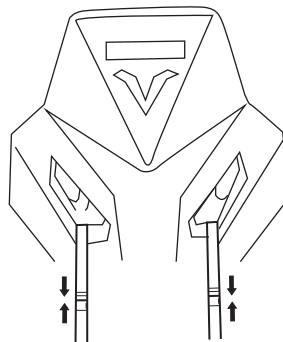


Attach belt clips together

 Attach headrest cushion

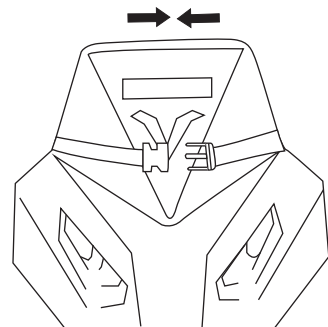


Put headrest cushion on the backrest

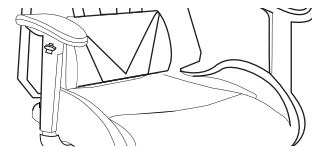 

Adjust cushion as desired

 Step 9

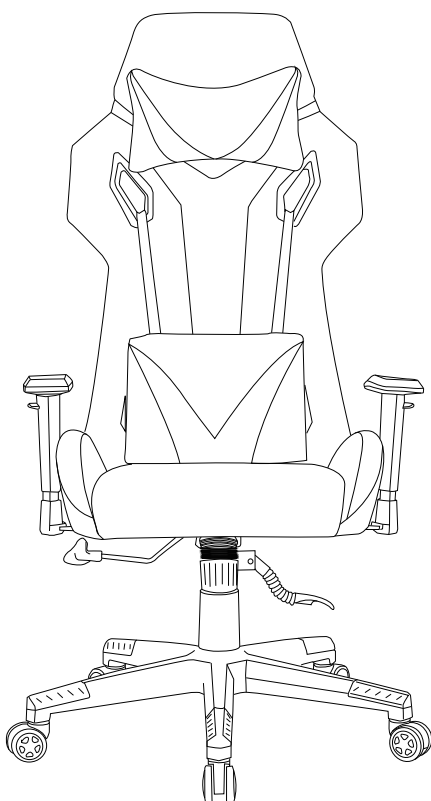

Your Typhoon Pro High Back Gaming Chair is now complete and ready for use.
IMPORTANT NOTE: Periodically check and re-tighten screws.

 
Care Instructions

- Spot clean mesh/fabric with upholstery shampoo or dry cleaning powder only.
- Do not saturate mesh/fabric. Apply proprietary cleaning products strictly according to instructions. Wipe dry immediately with an absorbent dry cloth.
- Treat spills on PU material immediately with an absorbent cloth by blotting the spill.
- Do not use detergents, solvents or abrasive cleaners.
- Keep away and protect from direct sunlight and heat.
- Avoid contact with skin, in particular during high temperatures and humidity.
- Clean, check and tighten all parts regularly.
- Vacuum regularly.

Thank you for your purchase. Please retain your receipt to validate warranty.
If you would like to know more about our furniture products, please visit www.officeworks.com.au

Typhoon Pro High Back Gaming Chair

Functionality

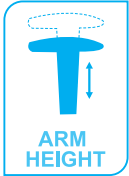

* **Arm Height Adjust**

- Push the button while moving the arm up or down.
- Release button at desired height.



* **Chair Height Adjustment**

- To increase chair height pull lever upward while lifting body weight slightly off the seat.
- Release lever at desired height.

- To lower chair height sit fully into the chair and pull lever upward.
- Release lever at desired height.

Your feet should be resting flat on the floor.



* **Chair Tilt**

- Sitting in the chair pull lever up. Move your body to a comfortable position. Lock the position by pushing the lever down.

 
* **Adjustable Tilt Tension Control**

- Turn continuously to adjust how quickly chair tilts back & forth.

Note: if adjusting while sitting in chair:

Turn knob left to tighten tension

Turn knob right to loosen tension

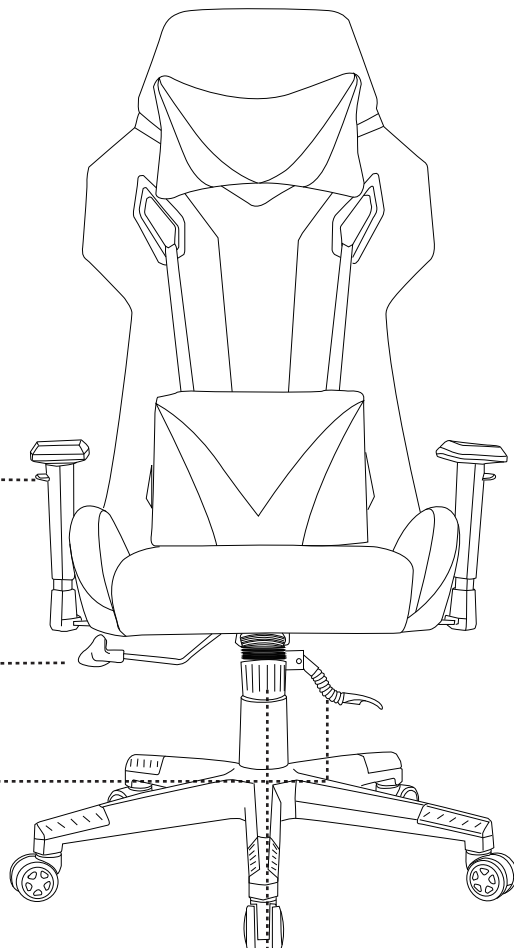

Warranty 3 years

Product Warranty –valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product (such as cleaning products);
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or
- if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Thank you for your purchase. Please retain your receipt to validate warranty.

If you would like to know more about our furniture products, please visit www.officeworks.com.au