

Brigii M1

Handheld Vacuum Cleaner User Guide



Before using the product, please read this user guide carefully, and follow the instructions strictly. If you have any questions, please feel free to send an email to our support team, we will try our best to solve your problems as soon as possible. After reading, please keep it properly for future reference.



Important safety instructions

To avoid safety accidents or machine failure, basic safety precautions should always be followed when using your Brigii handheld vacuum cleaner, including the following;

1. Do not allow to be used as a toy. Pay more attention when children use or approach it. Please look after the children and make sure they will not use this product as a toy. Children are prohibited from using, cleaning and maintaining the machine without monitoring.
2. This appliance is not intended for use by infirm persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge (including young children), unless they have been given supervision or instruction by a responsible person concerning use of the appliance to ensure that they can use it safely.
3. Keep hair, loose clothing, fingers, and all parts of the body away from air inlet, brush bar or moving parts. Do not point the hose, wand or tools at your eyes or ears or put them in your mouth.
4. Do not put the objects in the machine air intake. Never use the machine when the air intake is clogged; remove dust, cotton, hair, or other items that may reduce airflow.
5. The filter should be cleaned at least once per month and should be cleaned up in time when there is visible dust on the filter.
6. Turn off the vacuum cleaner before removing or installing the filter and other components. Do not turn on the machine during charging.
7. Before use, please check whether the filter was installed correctly or damaged. The machine must be working with installed properly filters. And the filters must be kept dry after daily cleaning ensure so that the machine can operate.
8. Avoid raining or close to high temperature objects. Keep away from damp and direct sunlight.
9. Do not wash or immerse the product in water or other liquid. Never handle the product especially the charging port with wet hands.
10. Check the cleaning area before using machine, do not use to pick up the objects larger than the suction pipe so as not to cloggy of the air inlet. Do not pick up anything that is sharp, burning or smoking, such as glass, nails, cigarettes, matches, hot ashes. Do not use to pick up any liquid or large number of powders (lime, flour, etc.)


11. Besides professionals, the others do not open it for repairing or modifying internal wiring.
12. This appliance includes a rechargeable lithium-ion battery pack. Do not expose the battery pack or appliance to fire or excessive temperature (above 130°C), as it may catch fire and explode.
13. Do not use a damaged or modified battery pack, as it may catch fire and/or explode.
14. Usage and storage of the appliance should be within the ambient temperature range of 0-40°C. The vacuum cleaner cannot be charged when the ambient temperature is above 40°C.
15. The charging speed may become slower in environments with temperatures below 10°C, which is a common phenomenon. Do not leave battery in charger over 24 hours.
16. Follow all the charging instructions and do not charge the battery pack out of the temperature range specified in the instructions, otherwise, it may damage the battery and increase the risk of fire.
17. Do not attempt to disassemble the battery pack.
18. Leaks from battery cells can occur under extreme conditions. If any liquid gets on the skin, wash quickly with soap and water. If any liquid gets into the eyes, do not rub eyes, immediately flush them with clean water continuously for a minimum of 15 minutes. Seek medical attention immediately.



This symbol on the device or its packaging indicates:

Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

Product diagram

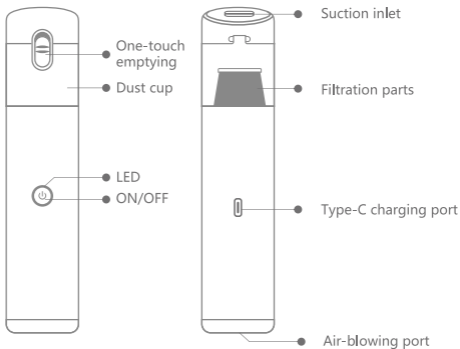

Blow/suction nozzle



Storage bag



Type-C Cable



2 in 1 suction nozzle



Hand pump tool



Hose nozzle



Hose



Combination crevice

Product specifications

Product name	Handheld Vacuum Cleaner	Charging current	2000mA
Model number	M1	Net weight	485g
Charging voltage	DC 5V	Max power	65W
Lithium battery	2000mAh x3	Size	57x57x260mm

Troubleshooting

Turn off the power button before troubleshooting

Conditions	Reasons	Solutions
Abnormal Noise when using	Incorrect filters installed and foreign objects sucked	Turn off the power , took out of objects, installing filter correctly
Suction decreased	Blockage of suction inlet or filter	Clean the air inlet and filter
	The dust cup is full	Clean the dust cup
	Low power	Charging
No power	No press on power	Long press 2s
	Out of power	Charging
	Blockage caused thermal cut-out	Cleaning dust cup and filter
	Surrounding temperature below -7.5°C	Please make sure that the ambient temperature at the range of -7.5°C-50°C

Brigii

No Mess is Big

www.brigii.com