

Owner's Manual



Fan

Model SF-1414




SUNPENTOWN INTERNATIONAL INC.

INTRODUCTION

Thank you very much for your purchasing the SUNPENTOWN Fan. Please read the instructions carefully and keep for future reference.

STRUCTURE

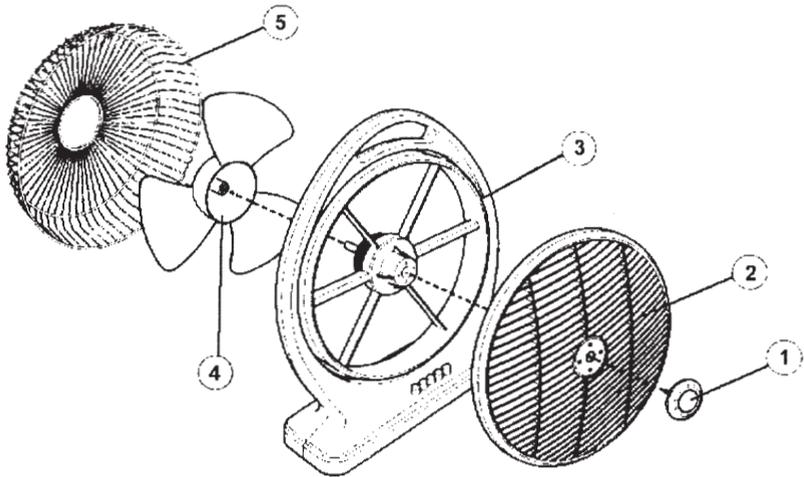

- 1. Louver cap
- 3. Main body
- 5. Grille

- 2. Louver
- 4. Fan blade

SETUP

Your Fan was thoroughly inspected and tested at the factory prior to packaging. Visually inspect it upon removal from its packaging. Return the unit if it shows any signs of damage or mishandling.

WARNING: To avoid fire or shock hazard, the Fan should ONLY be plugged into a polarized 120 Volt AC outlet.

IMPORTANT SAFETY INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

WARNING: To reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.

Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

User Servicing Instructions:

- a) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) Slide open fuse access cover on top of attachment plug towards blades.
- c) Remove fuse carefully.
- d) Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse.
- e) Slide closed the fuse access cover on top of attachment plug.

Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

Please read all instructions before using this product. Save these instructions for easy reference. When using electrical appliances, basic precautions should always be followed to reduce breakage, risk of fire, electric shock and injury to persons including the following:

- Do not use the fan outdoors.
- Never use the fan unless it is fully assembled.
- Do not use the fan under the following conditions: 1) High temperature of over 104F. 2) High humidity. 3) Steam filled room.
- Do not push finger or any object through the louver or grille and do not touch the fan blade during use; especially be aware children and infants around during use.
- Take care that curtains or other objects are not sucked into the fan during operation.
- Do not spray the fan with insecticide, which will damage the surface of the fan.
- Unplug from wall outlet before servicing.

OPERATION

The control buttons are marked as follows:

0 = OFF

1 = Low fan speed

2 = Medium fan speed

3 = High fan speed

 = Louver rotation

CLEANING THE UNIT

1. Turn Fan OFF and unplug from power outlet.
2. Turn the Louver cap counter-clockwise. You will now be able to remove the cap.
3. Remove the four (4) screws that secure the louver.
4. Remove the three (3) screws that secure the grille.
5. Clean unit with a moistened soft cloth only. DO NOT pour or splash water on the unit or use any abrasive cleaners. Clean all external surfaces, especially the louver, grille and fan blade.
6. Reassemble the fan completely. **Never use the fan unless it is fully assembled.**

TECHNICAL SPECIFICATIONS

Length	7.9 inch
Width	18.5 inch
Height	22.1 inch
Weight	9.3 lb
Input voltage	120 volts AC, 60Hz

CUSTOMER ASSISTANCE LINE

If you experience a problem, please see the warranty for information. Please DO NOT attempt to repair this unit yourself. Doing so will void your warranty and could cause damage to the fan or personal injury to yourself. If you have any questions concerning this appliance, please call:

1-800-330-0388

YOUR GUARANTEE

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.
14625 Clark Ave, City of Industry, CA 91745
Tel: 1-800-330-0388
service@sunpentown.com
www.sunpentown.com

使用手冊

SPT[®]

14"箱扇

型號：SF-1414




 尚朋堂股份有限公司

簡介

謝謝您選用尚朋堂電扇。使用前請詳閱本說明書，閱畢後將之妥善的保存以便日後參閱。

構造說明

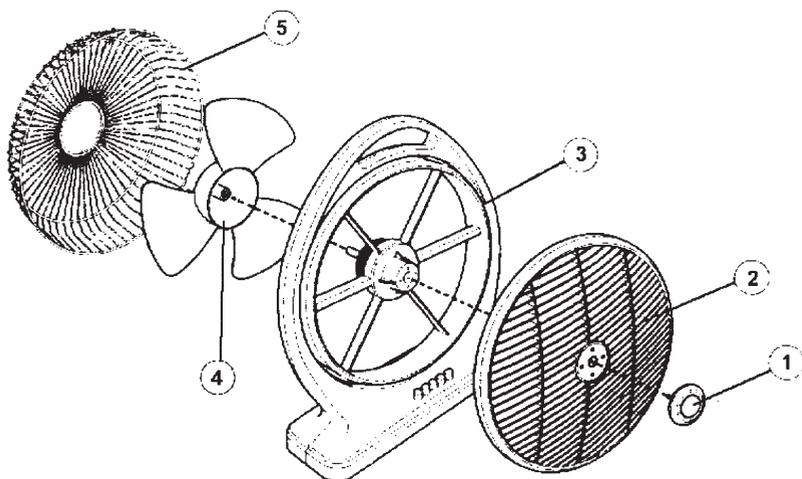

- | | |
|--------|-------|
| 1. 轉盤蓋 | 2. 轉盤 |
| 3. 本體 | 4. 扇葉 |
| 5. 後網 | |

測試

您的電扇在出廠前均經過嚴格的品質管制及測試。若有任何運轉或操作不良的狀況，請立即退回修理。

注意：為避免危險，本電扇只可使用於 AC 120 V 之插座。

重要安全指示

使用前請詳閱本說明書，閱畢後將之妥善的保存以便日後參閱。為避免損壞機體、造成火災、觸電或傷及人員。請依循下列之重要安全指示使用本電扇：

- 請勿在室外使用。
- 在所有零件未完全安裝時，請勿使用。
- 請勿使用於下列環境： 1)溫度高於 104F 2)高溼度的環境 3)蒸氣充滿室內
- 請勿在易燃的氣體或蒸氣附近使用。
- 運轉時，請勿將手指或異物伸入轉盤或後網內，勿碰觸扇葉，尤其需特別防範兒童發生此類危險。
- 請勿讓異物經由出風口或入風口進入機體。
- 請勿噴灑殺蟲劑於機體表面上，否則將破壞機體表面。

操作

本電扇的基本操作如下

0 = 關

1 = 低速

2 = 中速

3 = 高速

☸ = 轉盤旋轉

清潔保養

1. 關掉電源並將插頭拔離插座。
2. 將轉盤蓋逆時針方向旋轉，取下轉盤蓋。
3. 將轉盤中央的四支螺絲鬆開，取下轉盤。
4. 將固定後網的三支螺絲鬆開，取下後網。
5. 以一柔軟濕布擦拭機體。切勿將水直接沖於機體上或使用具侵蝕性的清潔劑。仔細清潔機體表面，特別是轉盤、後網及扇葉。
6. 清潔過後，裝上所有的零件，並繼續使用。未完全裝配完畢之前，請勿使用本電扇。

規格尺寸

機身長度的	7.9 inch
機身寬度的	18.5 inch
機身高度的	22.1 inch
重量的	9.3 lb
適用電壓的	120 volts AC, 60Hz

顧客服務電話

若產品損壞，請與服務人員聯絡，由專人為您維修。請勿嘗試自行維修，否則易造成產品的進一步損壞，甚至對人體造成傷害。

若對本產品有任何疑問，顧客服務電話為：

1-800-330-0388

