



Fujifilm Instax 100 Disassembly

This guide will show you how to take apart the Fujifilm Instax 100's shell in order to expose all of the important components.

Written By: Sample Text



INTRODUCTION

Before attempting repairs, please take note of certain risks of receiving shock from the camera's flash capacitor. Also make sure to ground yourself before operating on the camera's motherboard or you might discharge static to crucial components.

TOOLS:

- [Mako Driver Kit - 64 Precision Bits](#) (1)
-

Step 1 — Fujifilm Instax 100 Disassembly



- First, push on the recessed part of the battery cover while sliding it away from the camera to remove it. Then, remove all the batteries from the camera.

Step 2





- i Make sure to remove the batteries if you plan to store the camera or if you don't use it anymore. Otherwise your battery compartment will end up looking like mine.
- Undo the 2 small Phillips screws at the top of the battery compartment.
- Next, undo the 2 medium sized Phillips screws recessed into the compartment, that are circled in yellow in the photo.

Step 3



- Undo the 2 long Phillips screws located on the handles that hold the strap.
- Next, undo the 2 short Phillips screws on the bottom of the camera. These are all the screws you will have to remove in order to pull the case apart.

Step 4

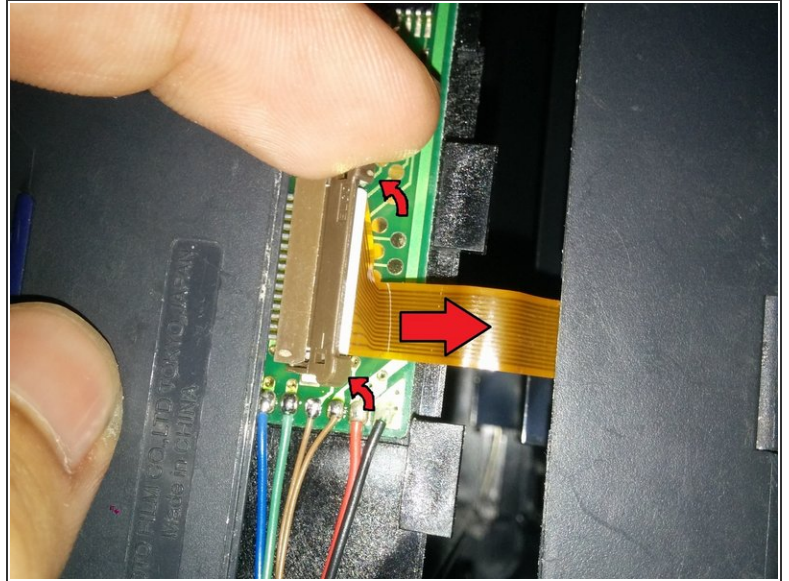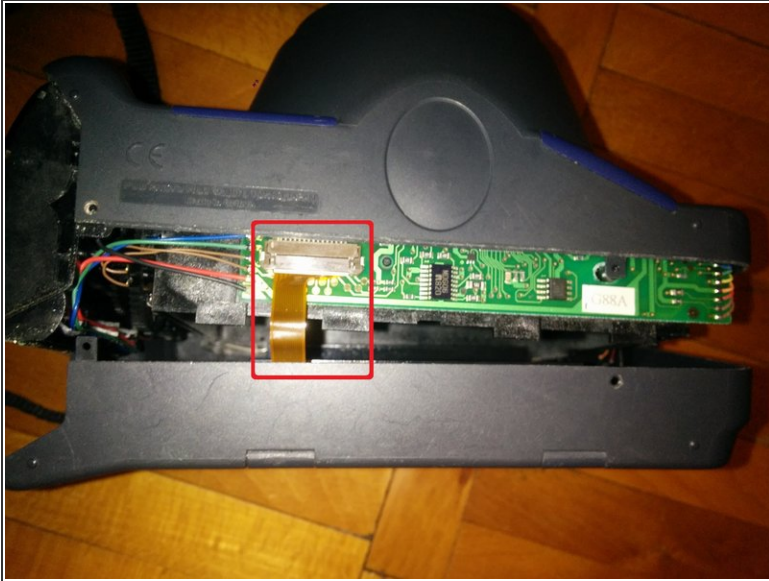

- Start pulling the 2 halves of the case apart very slowly, while facing the bottom of the camera.
- ⚠ Watch out for the fragile ribbon cable! Do not try to pull the 2 halves completely apart until you disconnect it.
- Using both hands, pull the connector tab up gently while pulling the ribbon away slowly, so that you don't damage it, as shown in the second photo.

