




Getting started:

- Make sure to have enough space to unpack your turntable.
- Always unpack and setup in a clean enviroment.
- Important for warranty: Do not throw packaging away.
- Setup is demonstrated with T1 Phono SB.

T1 Setup Guide

Please read before unpacking.

1 Unpack all items from accessory bag.

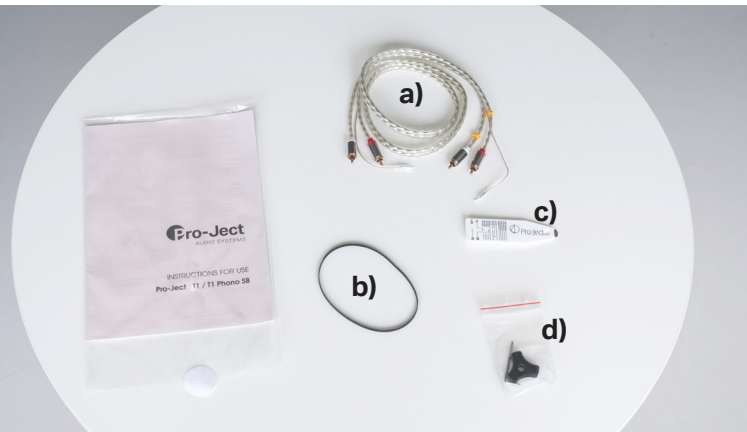

- a) Connect it E (RCA cable)
Detachable cable only included with T1 Phono SB & T1 BT
 b) Drive belt
 c) Stylus pressure gauge
 d) Adapter for 7" singles

2 Remove dust cover carton from the box.



3 Lift the wrapped turntable out of the box.



4 Remove the protection covering.




5 Unpack the power supply.



6 Unpack the platter.




7 Put the drive belt on the pulley & sub-platter.

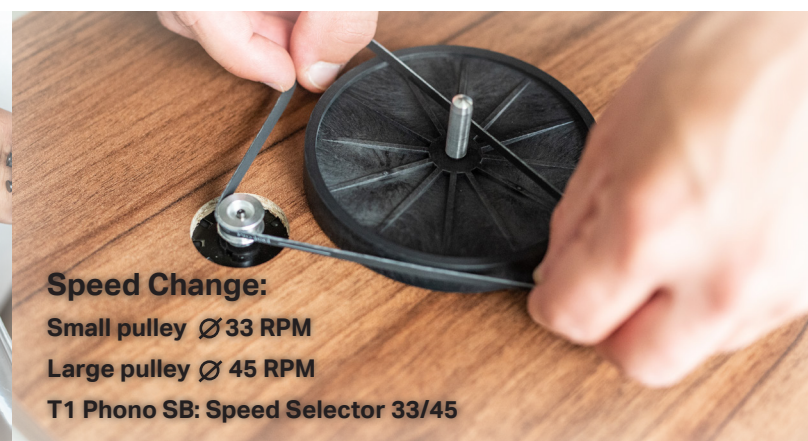

8 Put the platter on the turntable.



9 Put the felt mat on the platter.

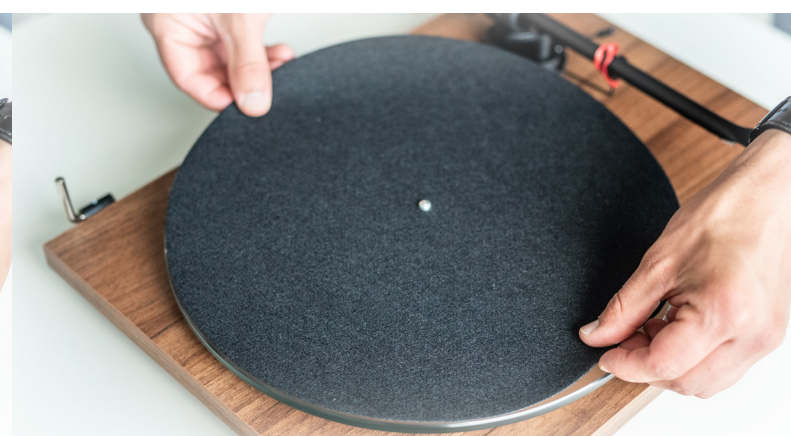

10 Remove tonearm twist tie.





11 Connect to your hifi-system and enjoy your music!




T1

Connect to any amp with integrated phono amplifier or use an external phono preamp.
 Pre-mounted Connect it E (RCA cable) included.
 Possible set: Pro-Ject Speaker Box 5 (bookshelf speaker) and Pro-Ject MaiA S2 (stereo integrated amplifier).

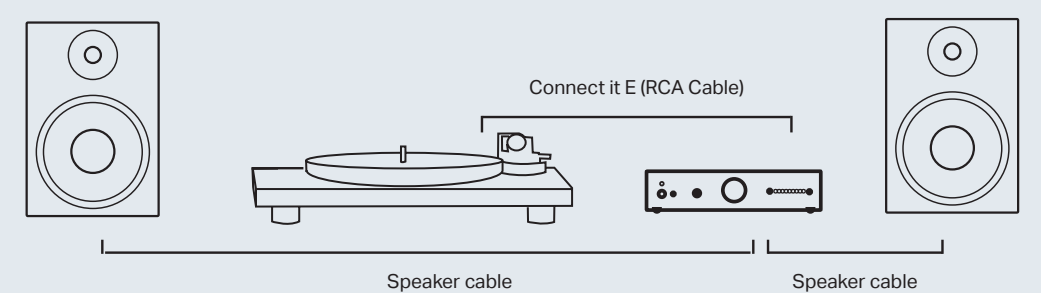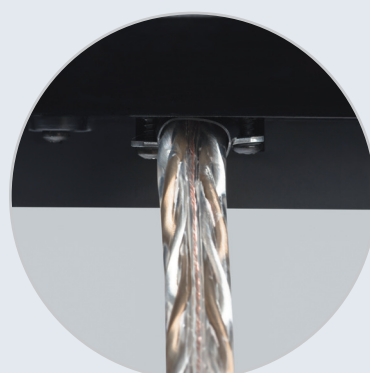

T1 Phono SB

Select **Line Out** to connect to an amplifier without a phono stage. Select **Phono Out** if you have an amplifier with a phono stage.
 Possible set: Pro-Ject Speaker Box 5 (bookshelf speaker) and Pro-Ject Stereo Box S2 (smallest audiophile integrated amp).

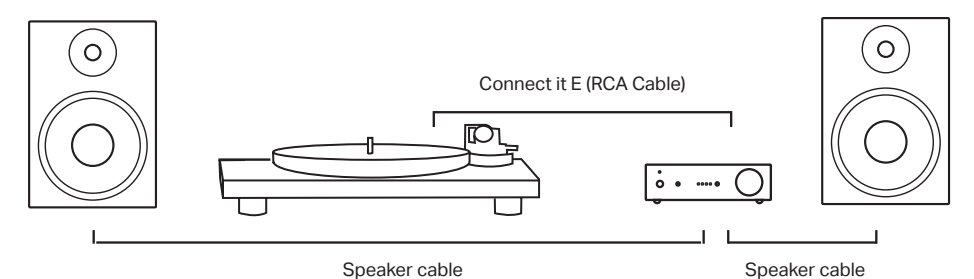

T1 BT

Select **Line Out** to connect to an amplifier without a phono stage. Select **Phono Out** if you have an amplifier with a phono stage. Enjoy the warmth of vinyl with the comfort of wireless technology.

Possible set: Pro-Ject Speaker Box 5 (bookshelf speaker) and Pro-Ject Stereo Box S2 (smallest audiophile integrated amp).

