

XRU300

VIZIO

**QUICK  
START  
GUIDE**

UNIVERSAL  
REMOTE

## Table of Contents

Regulatory Cautions .....	2
Button Descriptions .....	3
Initial Setup.....	5
Battery Insertion .....	5
Precautionary tips for the battery .....	5
Battery Saver .....	5
Code Saver .....	5
Code Setup.....	6
Setup for TV or other devices.....	6
Using the smart search function.....	7
Smart Learning.....	7
Troubleshooting.....	9
Warranty.....	11
Code List .....	13

Congratulations on your purchase of VIZIO Universal Remote Control. With this Universal Remote, juggling multiple remote controls is a thing of the past! Your new remote controls up to 8 devices, including the most popular brands of TV, Blu-Ray, DVD, DVR, Cable, and more.

Note: Some functions from your original remote may not be controlled by this remote. Use the original remote, if available, to control such functions. Sometimes buttons other than described in these instructions may actually perform the function. For example, the CHAN and VOL buttons might be used to navigate through menu choices. We recommend you experiment with the remote to identify if such situations pertain to your equipment.

Your new remote is easy to use, easy to program, and it gives you total control—at the touch of your fingertips!

# Regulatory Cautions

## FCC Caution

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** Modifications to this product will void the user's authority to operate this equipment.

## Canadian Notice

This Class B digital apparatus complies with limits for radio noise emissions specified in ICES-003 of the Department of Communications. This device complies with RSS-210 of Industry and Science Canada Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

# Button Description



**INPUT** – This button allows the user to cycle through the available source inputs.

**POWER** – Press this button to turn the component on or off.

**TV, STB, DVD, AUDIO, DVR, HD, CD, AUX** – Device buttons. Used to program a set of commands to control a single device.

**L1, L2, L3, L4** - Miscellaneous programmable keys.

**Transport keys** – Play, Stop, Pause, Record, Fast Forward, and Rewind.

**INFO** – Display additional info of the programming.

**LEARN** – Press and hold to start learning commands.

**LIST** – Press this button to display listing.

**EXIT** – Press this button to exit from the on-screen menu.

**MENU** – Display the on-screen menu.

**OK** – Use this button for the on-screen menu. Press it to confirm or choose a highlighted menu selection.

**Up, Down, Left, Right** – These buttons are used to navigate the on-screen menu.

**BACK** – Press this button to return to previous the on-screen menu.

**GUIDE** – This button displays program guide information.

**Colored keys** – Use with your STB, DVR, etc., if available.

**V Button** – This button starts VIZIO Internet Apps or other component's multimedia function, if available

**Volume Up/Down** – This button turns the volume up or down.

**MUTE** – This button turns the sound on and off.

**Channel Up/Down** – These buttons change the channels up or down.

**LAST** – This button recalls the previously viewed channel.

**NUMBER BUTTON PAD** – Use these buttons to select a channel.

**WIDE** – This button switch between display mode.


**(DASH)** – Use to select digital sub-channels. For example, channel 28-2 would be selected by the button sequence 2, 8, DASH, 2.

# Initial Setup

**Insert the battery to the battery compartment to activate the remote control.**

## Battery replacement

Insert two AA batteries into the remote control. Make sure that you match the (+) and (-) symbols on the battery with the (+) and (-) symbols inside the battery compartment. Re-attach the battery cover.

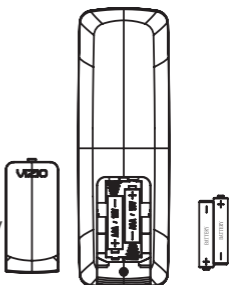

## Precautionary Tips for Inserting the Battery

- Only use AA batteries
- Inserting the battery incorrectly may result in cracking or leakage that may pose a fire risk or lead to personal injury.
- Dispose of the battery in accordance with local laws and regulations.
- Keep the battery away from children and pets.

## Battery Saver

Your remote automatically turns off if the buttons are depressed more than 30 seconds.

## Code Saver

You will have up to 10 minutes to change the battery in your remote without losing codes you have programmed. However, to avoid losing your codes, do not press any buttons until battery is installed in the remote.

# Setup

## Programming for TV, STB, DVD, AUDIO, DVR, HD, CD and AUX

**Note: TV mode can be programmed for TV codes ONLY. STB and DVD mode can be programmed to control ANY kind of device listed in the code list. The remote is pre-programmed to operate VIZIO TVs under TV mode and VIZIO Blu-Ray Players under DVD mode.**

1. Manually turn on your TV (or device you want to control).
2. Press the TV (or device) button and hold for 5 seconds until the LED flashes twice. LED will remain lit.
3. Find the programming code for your TV (or device) in the code list and enter it using the Number Buttons. The LED flashes once after entering each digit. If the code is accepted, the LED flashes twice after the last digit is and then turns off.

If the code is invalid, the LED will have a long blink and then turns off. Please repeat Steps 2 and 3 with the next code listed for the component and manufacturer.

4. Point the remote control at the TV (or device) and press the POWER button. The TV (or device) should turn off.

Note:

- If your TV (or device) does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, see “Using the smart search function, page 7.”
- Sometimes a code listed will only include limited functions. Try other codes that may include more functionality.

## Setup, cont.

### Using the Smart Search Function

If you cannot find the manufacturer in the component list or the program code does not work, you can use the remote control to search for the correct device code.

To search for a device code:

1. Manually turn on the device.
2. Press and hold the matching device button (TV, STB, DVD, etc) for 5 seconds until the LED flashes twice. The LED will remain lit.
3. Press **9 9 1** using the **Number Buttons**. The LED flashes twice after the last digit is entered and LED will remain lit.
4. Point the remote control at the device, then press the **POWER** button. The code search begins. The LED flashes every 3 seconds during the search. Move your finger to the **OK** button.
5. When the device turns off, press the **OK** button within three seconds to save the code. If the device does not respond correctly, repeat the search procedure to find another code.

### Resetting the Remote to Factory Settings:

1. Press and hold the **V button** for 5 seconds until the LED flashes twice. LED will remain lit.
2. Press **9 1 9 1 9** using the **Number Buttons**. The LED flashes twice after the last digit is entered and then turns off. The remote is now reset to factory settings.

### Smart Learning

Please note:

- Your VIZIO Universal Remote can store a total of 130 commands.
- Not all commands from all remotes can be programmed.
- Commands cannot be assigned to the 8 device buttons (TV, STB, DVD, etc).
- You can re-program a button by following the steps below.



## Using the Smart Learning Mode

1. Press the device button that you wish to program (TV, STB, DVD, etc). Then press and hold the **LEARN** button for 5 seconds. The LED will light up. **This indicates the Universal Remote is in learning mode.**
2. Align the transmitter of the original remote control with the front window of the Universal Remote (For best results, the remotes should be about 5cm apart pointing to each other). **The VIZIO Universal Remote can only learn commands from one remote at a time. For example, you cannot teach commands from both a TV remote and a DVD remote.**
3. Press the button on the Universal Remote that you wish to program. When the LED flashes, it is ready to receive the command.
4. Press and hold a button on the original remote until the LED light on the Universal Remote flashes three times. The LED will then remain lit. This indicates that it has learned the code. (If LED only flashes twice and then stops, the Universal Remote's memory is full, and you must delete some learned commands.)
5. Repeat steps 3-4 until all the desired buttons have been learned by the Universal Remote.
6. When finished, press the **LEARN** button to complete the code learning. The LED light will turn off. **The Universal Remote will automatically exit learning mode if it is inactive for 20 seconds or longer.**

## Clearing a Device Button

1. To clear a device button (TV, STB, DVD, etc) of all learned commands, press and hold the device button for 5 seconds. The LED will light up.
2. Press **9 9 9 1**. The LED blinks twice to indicate the device button is cleared of all commands.

# Maintenance & Troubleshooting

## VIZIO Remote Control Precautions

- The remote control should be kept dry and away from heat sources. Avoid humidity.
- If the Component responds erratically to the remote control or does not respond at all, check the battery. If the battery is low or exhausted, replace it with a fresh battery.
- When not using the remote control for a long period of time, remove the battery.
- Do not take the battery apart, heat it, or throw it into a fire.
- Do not subject the remote control to undue physical stress, such as striking or dropping it.

## Cleaning the Remote Control

1. Use a soft cloth for cleaning.
2. If the remote control is seriously contaminated, use a soft cloth moistened with diluted neutral cleaner to clean the display. Wring water out of the cloth before cleaning to prevent water from penetrating into the housing.

## Troubleshooting

1. Remote control does not work with my TV:
  - Point the remote control directly at the remote sensor on your TV.
  - Remove any obstacles between the remote control and the remote sensor.
  - Replace old batteries with new batteries.
  - Press the TV button on the top of the remote to return to the TV mode.

2. The remote control is not working with my devices.

- Move closer to the device.
- Point the remote control directly at the remote sensor on your device.
- Remove any obstacles between the remote control and the remote sensor.
- Replace old batteries with new batteries.
- Make sure you have pressed the correct device button at the top of the remote.

3. The remote control does not work with my device after programming it.

- Set the remote control code correctly. If the code that is listed first for your device does not work, try all the codes for your device in the order in which they are listed in the supplied Code List.

## **Telephone & Technical Support**

Products are often returned due to a technical problem rather than a defective product that may result in unnecessary shipping charges billed to you. Our trained support personnel can often resolve the problem over the phone. For more information on warranty service or repair, after the warranty period, please contact our Support Department at the number below. Customer support and quality service are integral parts of VIZIO's commitment to service excellence.

For technical assistance contact our VIZIO Technical Support Department via email or phone.  
Email: [techsupport@vizio.com](mailto:techsupport@vizio.com) (877) 698-4946  
Fax: (949) 585-9563 Hours of operation: Monday - Friday: 6 am to 9 pm Saturday – Sunday: 8 am to 4 pm Please have your VIZIO model number, and date of purchase available before you call VIZIO.

VIZIO  
39 Tesla  
Irvine, CA 92618, USA  
Web: [www.vizio.com](http://www.vizio.com)

# ONE YEAR LIMITED WARRANTY

Covers units purchased as “new” in United States and Puerto Rico Only.

VIZIO provides a warranty to the original purchaser of a new Product against defects in materials and workmanship for a period of one year of non-commercial usage and ninety (90) days of commercial use. If a Product covered by this warranty is determined to be defective within the warranty period, VIZIO will either repair or replace the unit at its sole option and discretion. To obtain warranty service, contact VIZIO Technical Support via email: [TechSupport@VIZIO.com](mailto:TechSupport@VIZIO.com) or via phone at 877 MY VIZIO (877.698.4946) from 6:00AM to 9:00PM Monday through Friday and 8:00AM to 4:00PM Saturday and Sunday, Pacific Time, or visit [www.VIZIO.com](http://www.VIZIO.com). PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING A UNIT TO A VIZIO SERVICE CENTER. Proof of purchase in the form of a purchase receipt or copy thereof is required to show that the Product is within the warranty period.

## **Parts and Labor**

There will be no charge for parts or labor during the warranty period. Replacement parts and units may be new or recertified at VIZIO’s option and sole discretion. Replacement parts and units are warranted for the remaining portion of the original warranty or for ninety (90) days from warranty service or replacement, whichever is greater.

## **Type of Service**

Defective Products must be sent to a VIZIO service center to obtain warranty service. VIZIO is not responsible for transportation costs to the service center, but VIZIO will cover return shipping to the customer. PRE-AUTHORIZATION IS REQUIRED BEFORE SENDING ANY UNIT IN FOR WARRANTY SERVICE. All Product returns to VIZIO’s service center must utilize either the original blister pack and shipping material or packaging that affords an equal degree of protection. VIZIO Technical Support will provide instructions for packing and shipping the covered Product to the VIZIO service center.

## Limitations and Exclusions

VIZIO's one-year limited warranty only covers defects in materials and workmanship. This warranty does not cover, for example: cosmetic damage, normal wear and tear, improper operation, improper voltage supply, signal issues, damage from shipping, acts of God, any type of customer misuse, modification or adjustments, as well as installation and set-up issues or any repairs attempted by anyone other than by a VIZIO authorized service center. Products with unreadable or removed serial numbers or requiring routine maintenance are not covered. This one year limited warranty does not cover Products sold "AS IS", "FACTORY RECERTIFIED", or by a non-authorized reseller. THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. VIZIO'S TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING VIZIO'S NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE DEVICE. VIZIO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, LOSS OF INFORMATION OR DATA, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE. CHECK [www.VIZIO.com](http://www.VIZIO.com) FOR THE MOST CURRENT VERSION.

THE TRADEMARKS SHOWN HEREIN ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS; IMAGES USED ARE FOR ILLUSTRATION PURPOSES ONLY. VIZIO, THE V LOGO AND WHERE VISION MEETS VALUE AND OTHER VIZIO TRADEMARKS ARE THE INTELLECTUAL PROPERTY OF VIZIO INC. PRODUCT SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE. © 2010 VIZIO INC. ALL RIGHTS RESERVED.

# Code List

## TV (including LCD, LED and Plasma)

ABEX	0185
ACER	1163
ACME	0016
ADA	0006
ADC	0001
ADMIRAL	0010 0135 0020 0226
ADVENT	1171 0116 0167 0176 0922
ADVENTURA	0174
AIKO	0058
AIWA	0195 0196 0227 0269
AKAI	0105 0002 0077 1137 1138 0254 1105 1113 1139
ALLERON	0051
AMARK	0020
AMTRON	0053
ANAM NATIONAL	0053 0003 0025 0042 0193
AOC	0004 0005 0009 1009 0014 0156 0175 0187
APEX	0214 0216 0215 1132 0401
ARCHER	0020
ASPECT	0059
AUDIOVOX	1164 1165 0053 1019 1117
AXION	0177
BANG & OLUFSEN	0190
BELCOR	0004
BELL & HOWELL	0031 0049 0000 0001
BENQ	0081 0083 0101 1150
BLUESKY	1155 0144
BRANFORD	0053
BROKSONIC	0147 0135 0310 0394 0932
BROKWOOD	0004
CANDLE	0004 0009 0174 0008
CAPEHART	0175
CCE	1153
CELEBRITY	0002
CELERA	0214
CENTRIOS	0169
CENTURION	0009
CETRONIC	0042
CHANGHONG	0214 0401
CINERAL	0058 0144
CITIZEN	0004 0009 0053 0105 0109 0189 0135 0001 0008 0042 0058
CLAIRTONE	0014
CLASSIC	0214 0401 0042
CLP	0144
CLP CLASSIC	0084 0094 0064
COBY	1091 1124
COLOR VOICE	0010
COLORTYME	0004 0009 0010
CONCERTO	0004 0009
CONCIERGE	0121
CONTEC	0053 0012 0014 0042
CORNEA	0050
CRAIG	0053 0042
CROSLEY	0062
CROWN	0053 0042
CTX	0020

## TV (including LCD, LED and Plasma), cont.

CTX	0020
CURTIS MATHES	0031 0105 0130 0004 0009 0000 0049 0109 0358 0001 0015
CXC	0053 0042
CYBERVISION	0144
DAEWOO	0130 0004 0009 0100 0005 0138 0043 0140 0039 0444 0080 0042 0058 0017 0010 0126 0018 0127 0019
DAYTRON	0004 0009
DELL	0209 0028 0132
DIAMOND VISION	0210 0948 0092 0896
DIGIMATE	1017
DIGISTAR	1019 0165 0118 0116 0167 0132 1020 1151 1152
DIMENSIA	0031 0000
DISNEY	0158 0135
DUKANE	0059 0072
DUMONT	0121 0004
DURABRAND	0189 0135 0153 0217 0157 1135 0133
DYNASTY	0042
DYNEX	1171 0135 1181
ELECTROBAND	0002 0014
ELECTROHOME	0004 0009 0254 0003 0022
ELEKTRA	0001
ELEMENT	1173 1025
ELITE VIDEO	0197
EMERSON	1172 0004 0009 0044 0135 0049 0051 0189 0053 0147 0039 0130 0210 0227 0233 0254 0265 0266 0310 0325 0456 0040 0041 0042 0021 0023 0024 0179 0045 0025 0027 0030 0032 0034 0035 0037
ENVISION	1179 0004 0009 0074 1009
ESA	0189
FISHER	0049 0110 0268 0180 0012
FLUID	1025 1026 1027
FUJITSU	1178 0197 0051 1006
FUNAI	0051 0189 0053 0227 0456 0069 0042
FUTURETEC	0053 0042
GATEWAY	0046
GE	0031 0107 0164 0004 0009 0044 0054 0000 0342 0003 0125 0015 0022 0052 0087
GIBRALTER	0121 0004
GOLDSTAR	0004 0009 0005 0227 0338 0012 0057 0080 0156
GPX	0944
GRADIENTE	1013 0004 0153 1160 1159
GRUNDY	0051 0053
GUESTVISION	0201
GVISION	1005
HAIER	0081 0216 0217 0157 1147 0935
HALLMARK	0004 0009
HARVARD	0053
HAUPPAUGE	1198
HEWLETT PACKARD	1015 1004
HISENSE	1176 0073 0182 0216 1016
HITACHI	0088 0059 0142 0060 0072 0004 0009 0091 1002 0001 0012 0061 0137 0139 0141 0179 0227
HYUNDAI	1134
ILO	0198 1070 1024 1023 0146 0189 1139 1113
IMA	0053
IN FOCUS	0000

## TV (including LCD, LED and Plasma), cont.

INFINITY	0062 0288
INITIAL	1070 0146 1085 1109
INSIGNIA	1181 1180 1175 1171 0103 0189 0217 0135 0133 0116 0167 1148 0456 0029 0905 1406 1407 1408
INTEGRA	0181
INTEQ	0121
JANEIL	0174
JBL	0062
JC PENNEY	0031 0004 0005 0009 0105 0107 0109 0054 0000 0087 0008 0012 0015 0022 0030 0052
JCB	0002
JENSEN	0004 0009 0133
JVC	0060 0026 0197 0069 0160 0247 0923 0012 0065 0067 0141
KAWASAKI	0945
SAWASHO	0004 0009 0002
KAYPANI	0175
KEC	0042 0053
KENWOOD	0004 0009
KLH	0214
KLOSS NOVABEAM	0068 0174
KOGI	1005
KONKA	0053 0011 0016 0047 0066 0103 0412 0413 0029
KTV	0053 0014 0021 0042 0070
KURAZAI	0001
LASONIC	0210 0948
LEGEND	0116
LG	0134 0004 0050 0009 0005 0155 0132 0227 0338 0012 0057 0080 0156
LIQUIDVIDEO	0177 0168
LODGENET	1170 0031 0202 0000 0001
LOEWE	0211 0062
LOGIK	0031 0000 0001
LUCE	0055
LUXMAN	0004 0009
LXI	0031 0004 0009 0049 0062 0107 0109 0000 0227 0015
MAGNASONIC	0051
MAGNAVOX	1174 0062 0004 0009 0183 1133 0226 0288 0456 0008 0068 0075 0141
MAJESTIC	0031 0000 0001
MARANTZ	0062 0181 0004 0009
MAXENT	0046
MEDION	0213 0198 0158
MEGATRON	0004 0009 0059
MEI	0014
MEMOREX	0004 0009 0049 0051 0135 0031 0000 1007 0268 0310 0001 0394 1025
MGA	0004 0005 0009 0051 0012 0022 0141 0180
MIDLAND	0031 0121 0054 0107 0015
MINTEK	0146
MINUTZ	0052
MISAKAI	0189
MITSUBISHI	0005 0151 0051 0004 0009 0254 0022 0141 0180
MONIVISION	0036
MONTGOMERY WARD	0031 0001 0000
MOTEVA	0049 1013
MOTOROLA	0020 0003



## TV (including LCD, LED and Plasma), cont.

MTC	0004 0005 0009 0105 0109 0014
MULTITECH	0053
MULTIVISION	0084
MYRON&DAVIS	0212
NAD	0004 0009 0109 0185
NEC	1384 0181 0004 0005 0009 0003 0010 0095 0141
NET TV	0046 0124
NEXXTECH	1052 0167
NIKEI	0042
NIKKO	0004 0009 0058
NIKO	1143
NORCENT	0216 0043 0056
NTC	0058
OLEVIA	1027 1012 1140 1142 1156
ONCOMMAND	0201 1161
ONKING	0042
ONWA	0053 0042
OPTIMUS	0170 0185 0374 0381
OPTOMA	1028
OPTONICA	0020 0095
ORION	0121 0135 0035
PANASONIC	1182 0171 0148 0054 0170 0062 0374 0381 0437 0950 0003 0070
PHILCO	0062 0004 0005 0009 0183 0011 1158 0068 0075 0141 0003 0008
PHILIPS	0154 1174 0062 0204 0184 0208 0205 0206 0207 0004 0189 0183 0199 0200 0081 1149 1154 0288 0456 0003 0008 0068 0075 0086 0087 0141
PHILIPS-MAGNAVOX	0062 0204 0207 0183 0226 0288
PILOT	0004
PIONEER	0185 0181 0072 0004 0009 0090 0179
PIVA	1075
PLANAR	1007
POLAROID	1177 1162 1025 0182 0173 0133 1019 1136 0029
PORTLAND	0004 0005 0009 0138 0130
PRECISION	0166
PRICE CLUB	0105
PRIMA	1019 0165 0116 0167 0176
PRINCETON GRAPHICS	0020 0099
PRISM	0054
PROSCAN	0031 0107 0015 0000 0162 0163
PROTON	0192 0004 0009 1010 0093 0175 0186
PROTRON	1017 1157
PROVIEW	1025 1026 1027
PULSAR	0121 0004
QUASAR	0171 0148 0054 0170 0062 0374 0381 0003 0070
RADIO SHACK	0031 0004 0048 0049 0053 0170 0009 0227 0342 0000 0012 0041 0042 0095
RCA	0031 0004 0048 0054 0094 0100 0102 0107 0129 0191 0005 0009 0000 0162 0163 0342 0003 0015 0022 0096 0113 0125 0179 0187 0188
REALISTIC	0031 0004 0048 0049 0053 0170 0009 0000 0227 0012 0041 0042 0095
RHAPSODY	0014
RUNCO	0121 0181 0111
SAMPO	0124 0046 0004 0009 0175 0012
SAMSUNG	0105 0077 0076 0109 0007 0009 0004 0005 0085 0172 0942 0358 0012 0015 0080 0104 0106

## TV (including LCD, LED and Plasma), cont.

SAMSUX	0009
SAMTRON	0105
SANSUI	0135 0310 0394
SANTECA	0194
SANYO	0049 0097 0110 0004 0268 0012 0108 0180
SCEPTRE	1167 1132 0149
SCOTCH	0004 0009
SCOTT	1139 0004 0009 0051 0053 0024 0035 0042
SEARS	0031 0062 0049 0051 0105 0004 0009 0107 0109 0110 0189 0000 0112 0079 0394 0456 0012 0015 0180
SELECTRON	1022 1020 1021
SEMP	1001
SHARP	0079 0123 0063 0020 0004 0009 0226 0266 0006 0095 0122
SHOGUN	0004
SIGNATURE	0031 0000 0001 0023
SIMPSON	0008
SONIC	0014
SONY	0128 0013 0002 0071 0380 0152
SOUNDESIGN	0004 0009 0051 0053 0008 0042
SOVA	1003 1095
SOYO	1130 1131
SPECTRA	0210
SPECTRAVISION	0203
SQUAREVIEW	0189
SSS	0004 0053 0042
STAR SIGHT	0064
STARLITE	0053
SUPERSCAN	0112 0079 0456
SUPERSONIC	0944
SUPRA	0004 0082
SUPREMACY	0174
SUPREME	0002
SVA	0216 0212
SYLVANIA	0062 0004 0009 0135 0189 0183 0141 0227 0456 0008 0071 0075 0141 0161
SYMPHONIC	0053 0189 0227 0456 0024
SYNTAX	1027 1140 1142
TANDY	0020
TATUNG	0081 0198 0003
TECHNICS	0054
TECHWOOD	0004 0009 0054
TEKNIKA	0031 0004 0005 0009 0051 0053 0105 0109 0170 0000 0174 0001 0008 0012 0042
TELECATION	0117
TELERENT	0031 0000 0001
TERA	0004 0186
TEVION	0198
TMK	0004 0009
TOSHIBA	0159 0178 0109 0120 0181 0105 0049 0095 0170 0260 0358 0394 0924 0012 0095 0117 0141
TRUTECH	1029 1145 1121
UNIVERSAL	0052 0087
VENTURER	1183
VICTOR	0060
VIDEOCON	1166
VIDTECH	0004 0005 0009

## TV (including LCD, LED and Plasma), cont.

VIEWSONIC	1179 0046 0072 1014 1144
VIKING	0174
VIORE	1018
VIZIO	1169 1168 0081 0112 0143 1011 0050 1000 1222 1322 1189 0218 0219 0220 0221 0222
WARDS	0031 0062 0004 0005 0009 0051 0000 0068 0075 0087 0095 0119 0052 0001 0008 0024
WESTINGHOUSE	0143 0114 1146 0002
WHITE WESTINGHOUSE	0100 0130 0138 0136 1008 0227 0080
YAMAHA	0170 0004 0005 0009
ZENITH	0121 0009 0050 0078 0091 0138 0059 0131 0038 0111 0134 0153 0064 0004 0135 0226 0227 0247 0266 0288 0310 0338 0358 0023 0039 0001 0058

## HD Set Top Box

CHARTER	0512
DIRECTV Models	0621 1049 1766 1767 1768 0621 1769
GE HDSTB	1769
GO VIDEO HDT100	0610
HITACHI 61HDX98B	0632
HUGHES HIRD-E8	0607 0632 0641
HUGHES HTL-HD	0607 0632 0641
LG HTL-HD	0607 0632 0641
LG LSS-3200A	0607 0632 0641
MITSUBISHI SRHD400	0632
MITSUBISHI SRHD500	0632
MITSUBISHI SR-HD5	0632
MOTOROLA HDT100	0618
PHILIPS DSHD800R	0632
PIONEER SH-D505	0604
PROSCAN PSHD105	0636
RCA HD65W20	0658
RCA DTC-100	0636
RCA DTC-210	0636
RCA PSHD105	0636
SAMSUNG SIR-T165	0583
SAMSUNG SIR-T351	0583
SAMSUNG SIR-TS160	0619
SAMSUNG SIR-TS360	0619
SONY SATHD200	0623
SONY SATHD300	0623
SONY SATHD100	0623
SYLVANLA 6900DTD	0581
TOSHIBA DST3100	0607 0641
TOSHIBA DW65X91	0607 0641
TOSHIBA DST3000	0607 0641
ZENITH DTV1080	0634
ZENITH HDSAT420	0634
ZENITH HDSAT520	0634

## VCR

ACCELE	0354
ADMIRAL	0224 0226
ADVENTURA	0251
AIKO	0252

## VCR, cont.

AIWA	0245 0227 0269 0251
AKAI	0227 0229 0228 0230 0231 0254 0303 0337
ALLEGRO	0247 0329 0243 0245 0405
AMERICAN HIGH	0292
APEX	0949
ASHA	0354
AUDIO DYNAMICS	0376 0377 0234
AUDIOVOX	0245
BEAUMARK	0354
BELL & HOWELL	0268
BROKSONIC	0256 0250 0257 0310 0394 0967 0237 0289
CALIX	0245
CANDLE	0240 0245 0354 0234 0242 0244
CANON	0225 0339 0292
CAPEHART	0329
CARVER	0287
CCE	0252 0356
CINEVISION	0245 0405
CITIZEN	0240 0245 0252 0354 0234 0242 0244
COLORTYME	0234
COLT	0356
CRAIG	0245 0354 0356 0248
CURTIS MATHES	0225 0287 0227 0334 0354 0358 0234 0249 0292
CYBERNEX	0354
DAEWOO	0279 0240 0250 0252 0334 0242 0244 0251 0971
DBX	0376 0377 0234
DENON	0305
DIAMOND VISION	0896
DIMENSIA	0225
DURABRAND	0245 0405
DYNATECH	0227 0251
ELECTROHOME	0245 0254
ELECTROPHONIC	0245
EMERSON	0250 0245 0252 0256 0257 0290 0310 0325 0354 0240 0233 0227 0265 0266 0268 0269 0458 0456 0231 0237 0249 0251 0254 0259 0262 0263 0270 0289 0292 0301 0330 0341
FISHER	0304 0268 0267 0287 0234 0248 0273 0274 0416
FUJI	0229 0292
FUNAI	0227 0456 0458 0251
GARRARD	0251
GE	0225 0311 0335 0342 0354 0278 0292
GOLDSTAR	0227 0245 0338 0329 0346 0234
GO-VIDEO	0354 0375 0407 0426 0455 0971 0368
GRADIENTE	0251 0245
HARLEY DAVIDSON	0251
HARMAN KARDON	0234 0254
HARWOOD	0356
HEADQUARTER	0268
HI-Q	0248
HITACHI	0369 0227 0347 0303 0332 0419
INFINITY	0288
INSIGNIA	0245 0907 0405
INSTANT REPLAY	0227 0292
INTEQ	0245
JC PENNEY	0225 0245 0268 0354 0369 0376 0377 0292 0303 0332 0343 0234

## VCR, cont.

JCL	0292
JENSEN	0369 0303
JVC	0376 0377 0268 0247 0418 0900 0234 0303
KENWOOD	0268 0376 0377 0234 0303
KLH	0356
KODAK	0245 0292
LG	0227 0329 0338 0907
LITEON	1069
LLOYD	0227 0251
LOGIK	0356
LXI	0227 0245
MAGNAVOX	0287 0288 0329 0227 0226 0225 0286 0235 0456 0914 0969 0292 0286
MAGNIN	0354
MARANTZ	0287 0268 0376 0377 0289 0292 0339 0234
MARTA	0245
MATSUSHITA	0292
MEDION	0896
MEI	0292
MEMOREX	0287 0245 0268 0304 0310 0329 0354 0226 0227 0337 0248 0251 0292
MGA	0290 0254
MGN TECHNOLOGY	0354
MIDLAND	0278
MINOLTA	0369 0332
MITSUBISHI	0290 0298 0369 0376 0377 0295 0254
MONTGOMERY WARD	0226 0300
MOTOROLA	0226 0292
MTC	0227 0354 0251
MULTITECH	0227 0354 0251 0278 0356
NEC	0268 0376 0377 0289 0301 0302 0303 0234 0249
MEXXTECH	0327 0449 0949 1063
NIKKO	0245
NOBLEX	0354
OLYMPUS	0292
OPTIMUS	0239 0354 0363 0245 0361 0374 0381 0226
OPTONICA	0354 0300
ORION	0256 0310
PANASONIC	0363 0381 0374 0225 0437 0292
PENTAX	0369 0234 0332
PHILCO	0287 0225 0235 0292
PHILIPS	0287 0288 0378 0383 0456 0286 0292 0969
PHILIPS-MAGNAVOX	0287 0288 0226
PILOT	0245
PIONEER	0305 0369 0376 0377 1084 0343
POLAROID	0949
PORTLAND	0242 0244
PROSCAN	0225 0308
PROTEC	0356
PULSAR	0329
QUARTER	0268
QUARTZ	0268
QUASAR	0363 0374 0225 0381 0292
RADIO SHACK	0225 0226 0227 0239 0245 0268 0342 0354 0361 0363 0248 0251 0254 0274 0292 0300 0337
RADIX	0245
RANDEX	0245

## VCR, cont.

RCA	0225 0245 0308 0309 0311 0312 0313 0314 0315 0316 0335 0342 0354 0369 0228 0278 0292 0332 0409
REALISTIC	0225 0226 0227 0245 0268 0354 0361 0363 0248 0251 0254 0274 0292 0300 0337
RICOH	0353
RIO	0245 0405
RUNCO	0329
SAMSUNG	0354 0358 0240 0369 0455 0942 0963 0230 0337
SAMTRON	0375
SANKY	0226 0329
SANSUI	0310 0376 0377 0394 0256 0967 0303
SANYO	0232 0304 0267 0268 0354 0248 0416
SCOTT	0240 0250 0257 0290 0341 0237 0263
SEARS	0363 0245 0268 0287 0369 0394 0456 0248 0273 0274 0292 0332 0343
SHARP	0360 0361 0226 0227 0266 0242 0254 0300
SHINTOM	0229 0353 0369 0356 0357
SHOGUN	0354
SIGNATURE	0227
SINGER	0292 0356
SONY	0379 0324 0229 0323 0353 0389 0364 0365 0366 0380
STS	0369 0292 0332
SUPERSCAN	0456
SYLVANIA	0899 0227 0287 0290 0225 0456 0251 0292 0236 0458 1106
SYMPHONIC	0227 0236 0456 0251 0458 0899
TANDY	0227 0268
TASHIKO	0245
TATUNG	0303
TEAC	0227 0251 0303
TECHNICS	0292
TECHWOOD	1071
TEKNIKA	0227 0245 0325 0251 0292
TMK	0354 0249 0301
TOSHIBA	0240 0261 0260 0287 0290 0358 0369 0924 0398 0274 0341
TOTEVISION	0245 0354
TRUTECH	0971
UNITECH	0354
VECTOR RESEARCH	0240 0376 0377 0234
VICTOR	0376 0377
VIDEO CONCEPTS	0240 0376 0377 0234 0254
VIDEOSONIC	0354
V-INC	0322
WARDS	0225 0226 0227 0240 0245 0354 0369 0248 0251 0254 0292 0300 0326 0332 0341 0356
WHITE WESTINGHOUSE	0227 0279 0458
XR-1000	0251 0292 0356
YAMAHA	0234 0303 0376 0377
ZENITH	0329 0247 0252 0266 0288 0226 0227 0338 0347 0353 0358 0245 0229 0310 0232 0376 0377 0279 0368 0243 0405

## CD

ADC	0888
ADCOM	0661 0714
AIWA	0663 0707 0842
AKAI	0715 0737 0830
AUDIO TECHNICA	0665
CALIFORNIA AUDIO LABS	0716
CAPETRONIC	0669
CARVER	0666 0667 0668 0825
CASIO	0777
CENTRIOS	0783
CITIZEN	0826
CURTIS MATHES	0777
DENON	0670
EMERSON	0661 0673
FISHER	0667 0675 0676 0677 0718
GENEXXA	0673 0678 0719
GOLDSTAR	0720
HARMAN KARDON	0680 0691
HITACHI	0678
INKEL	0681
INSIGNIA	0769
JC PENNEY	0690 0777
JVC	0682 0813
KENWOOD	0679 0683 0685 0727 0728 0828
KRELL	0666
KYOCERA	0888
LUXMAN	0686 0687 0729 0738
LXI	0777
MAGNAVOX	0666 0731 0800
MARANTZ	0666 0688 0689 0732
MCS	0690 0777
MGA	0691
MISSION	0666
MITSUBISHI	0691 0692
NAD	0721 0743
NAKAMICHI	0693 0694 0831
NEC	0690
NEXXTECH	0780 0782 0788 0789 0829 0854 0861
NIKKO	0665 0673 0676
NSM	0666
ONKYO	0695 0696 0722 0811
OPTIMUS	0667 0668 0678 0679 0697 0698 0699 0700 0744 0747 0751
PANASONIC	0716 0733 0740 0820 0862
PHILIPS	0666 0731 0825
PIONEER	0678 0701 0702 0719 0750 0837 0876
PROTON	0666
QUASAR	0716
RADIO SHACK	0668 0699 0706 0750 0786 0868 0874 0876
RCA	0661 0667 0703 0723 0750 0795 0844 0873 0874 0876
REALISTIC	0661 0667 0669 0673 0678 0689 0697 0699
ROTEL	0666
SAE	0666
SAMSUNG	0741
SANSUI	0666 0704 0723 0734
SANYO	0667 0705 0718 0735 0742

## CD, cont.

SCOTT	0661 0673
SEARS	0679 0689 0777
SHARP	0679 0689
SHERWOOD	0681 0689 0698 0706 0859
SHURE	0690
SONY	0707 0792 0794 0800
STS	0888
SYLVANIA	0666
SYMPHONIC	0709
TEAC	0676 0689 0699 0709 0710 0711 0856
TECHNICS	0716 0733 0820 0862
THETA DIGITAL	0731
TOSHIBA	0721
VICTOR	0682
YAMAHA	0665 0712 0713 0724 0846
ZENITH	0676 0730 0759 0784 0850

## Audio

AIWA	0839 0842 0851 0860
APEX	0436
APPLE IPOD	0885
BOSE	0672 0774 0775
CARVER	0825
CENTRIOS	0762 0763 0764 1055 0854
CITIZEN	0826
CRITERION	0448
DELPHI	0708
DENON	0803 0817 0852
DURABRAND	0776
FISHER	0814 0821
GOLDSTAR	0766
HARMAN KARDON	0804 0818
INSIGNIA	1066
IPOD	0884
JVC	0790 0813 0819
KENWOOD	0881 0683 0808 0816 0828 0832 0869
KODA	0763
KOSS	0415
MAGNAVOX	0796 0814 0915 0756
MARANTZ	0688 0824
MITSUBISHI	0877
NAD	0721 0739 0743
NELSON	0854
NEO	0725
NEXXTECH	1066 1055 0780 0782 0788 0789 0829 0854 0861
NORCENT	0928
ONKYO	0805 0811 0804 0975
OPTIMUS	0667 0747 0748 0749 0751 0752 0754 0793
PANASONIC	0791 0810 0815 0823 0863 0864 0974 0950
PHILIPS	0755 0814 0823 0824 0825 0756 0757
PIONEER	0880 0837 0866 0867 0878 0976 0754 0752 0751
RADIO SHACK	0706 0754 0793 0806 0865 0866 0867 0868 0875 0878 0879
RCA	0717 0726 0772 0781 0795 0827 0845 0866 0867 0870 0871 0872 0875 0878 0879 0449 0920
REALISTIC	0822



## Audio, cont.

REGENT	0776
RIO	0405 0787
SABA	0919
SAMSUNG	0454
SANYO	0705
SCOTT	0768
SHARP	0671 0684 0809
SHERWOOD	0706 0806 0858 0859
SIRIUS	0746 0684
SKYFI	0725
SONY	0753 0323 0778 0779 0785 0797 0798 0799 0833 0834 0835 0836 0843 0986
TAO	0725
TEAC	0710 0807 0855 0856 0857
TECHNICS	0791 0810 0815 0823 0863 0864
TEVION	0448
VENTURER	0745
VIZIO	0600 0883
WONDER	0762
XM RADIO	0708 0725
YAMAHA	0801 0802 0838 0840 0841 0846 0847 0848 0849 0767
ZENITH	0676 0730 0749 0759 0765 0766 0784 0814 0787 0850 0405

## Cable

ABC	0461 0463 0464 0465 0466
ADELPHIA	0512 0511
ALLEGRO	0524 0525
AMERICAST	0527
ANTRONIX	0468 0469
ARCHER	0468 0469 0470 0471
AT&T	1753 0511
BELL	1755
BELL SOUTH	0527
CABLETENNA	0468
CABLEVIEW	0468
CABLEVISION	0506 0512
CENTURY	0471
CHARTER	0512 0529
CISCO	0498 0497 0506 0535 0512 0466 0496
CITIZEN	0471
CLEARMAX	0462
COGECO	0511
COLOR VOICE	0472 0473
COMCAST	0533 0543 0511
COMTRONICS	0474 0475
CONTEC	0476
COX	0529
DIGITAL MUSIC EXPRESS	0514
DIRECTOR	0511
EASTERN	0477
EVERQUEST	0474
GARRARD	0471
GC ELECTRONICS	0469
GE	0549
GEMINI	0536 0479

## Cable, cont.

GENERAL INSTRUMENT (GI)	0509 0461 0465 0511 0513 0518 0530 0531 0514 0464 0463
GOLDSTAR	0494
HAMLIN	0461 0480 0481 0482
HITACHI	0463
ILICO	0506 0512
JASCO	0471
JERROLD	0509 0461 0465 0518 0464 0511 0463 0526
MAGNAVOX	0485
MEMOREX	0486
MOTOROLA	0545 0529 1754 0509 0465 0513 0518 0530 0531 0464 0511 0533 0526 0463 0533
MOVIE TIME	0487
NOVAPLEX	0528
NOWTV	1045
NSC	0487
OAK	0476 0489
PACE	0532
PANASONIC	0460 0508
PARAGON	0486
PHILIPS	0471 0479 0485 0490 0491 0492
PHILIPS-MAGNAVOX	0505 0534
PIONEER	0494 0478 0506 0493
PULSAR	0486
QUASAR	0486
RADIO SHACK	0517 0505 0534 0525
RCA	0460 0471 0507
RCN	0529
REALISTIC	0469
REGAL	0482
REGENCY	0477
REMBRANDT	0463
ROGERS	0506 0512
RUNCO	0486
SAMSUNG	0494 0474
SCIENTIFIC ATLANTA	0498 0497 0506 0535 0512 0466 0496
SHAW	0511
SIGNAL	0474
SIGNATURE	0463
SL MARX	0474
SPRUCER	0460
STANDARD	0499
STAR SIGHT	0507
STAR TRAK	0516
STARCOM	0461 0518
STARGATE	0474
TANDY	0500
TELEVIEW	0474
TEXSCAN	0499
TIME WARNER	0529 0506 0512
TOCOM	0464 0511 0513
TOSHIBA	0486
TV86	0487
UNIKA	0468 0469 0471
UNITED CABLE	0461
UNIVERSAL	0468 0469 0470 0471 0502 0524
VERIZON	0506 0529

## Cable, cont.

VIDEO TECH	0550
VIDEOTRON	0506 0512
VIDEOWAY	0504
VIEWSTAR	0475 0485 0487 0500
VISIONETICS	1046
ZENITH	0503 0525 0471 0486 0521 0522 0523
ZENITH NETWORK	0527

## Satellite (including Set-top Box, WebTV and DTV) (use code (A)(B) etc. if you have 2 or more of the same device)

ADTH	1033
AMPLICA	0575
BELL	0655 0628
BELL EXPRESSVU	0654 0647 0655 0628
CENTURY	0547
CHANNEL MASTER	0577 0578 0579
CHAPPARAL	0560 0561
CHEYENNE	0561
COOLSAT	1036 0546
DIGIWAV	1034
DIRECT	1049 1766 1767 1768 0622 0632 0629 0623 0576 0586 0616 0613 0630 0634 0636 0638 0641 0652 0653 0657 0659 0607 0619 0537 0538 0539
DISH NETWORK	0655(A) 0647(B) 0628 0612 0654 0588 0589 0590
DISHPRO	0588 0589 0590 0654
DRAKE	0562 0574 0587
DREAMBOX	0614 0620
DX ANTENNA	0568 0582
ECHOSPHERE	0628
ECHOSTAR	0655(A) 0647(B) 0628 0612 0654 0588 0589 0590
EXPRESSVU	0654 0647 0655 0628
FORTEC STAR	0569 0555 0556 0557 0558 0559
FUJITSU	0591 0592
GE	1769 1032 0636 0649 0637 0622 0653 0650 0651 0652
GEMINI	0595
GENERAL INSTRUMENT (GI)	0627(A) 0642(B) 0643(C) 0644(D) 0648 0640 0645 0564 0565 0566 0593
GLOBECAST	0553 1047
GO VIDEO	0610
HITACHI	0638 0629 0630 0632 0641 0607
HUGHES NETWORK	0632(A) 0638(B) 0629(C) 0430(D) 0621 0641 0607 0580
JVC	0628 0612
KENWOOD	0598
LG	0607 0632 0641
LUXOR	0599
MACOM	0600
MAGNAVOX	0576 0612 0639
MICROYAL	1763
MITSUBISHI	0641 0632 0638 0629 0630 0607
MOTOROLA	0646 0648 0618 0640
NEOSAT	1761
NET	0548 0606
NORSTAT	0601
NOVAPLEX	0535
ORION	1762

## Satellite (including Set-top Box, WebTV and DTV), cont.

PACE	0614 0615 0646
PANASONIC	0626 0586 0596
PANSAT	1035 0584 1048
PHILIPS	0541 0576 0612 0621 0629 0630 0632 0638 0641 0639 0607 0605
PHILIPS-MAGNAVOX	0576 0612 0639
PIONEER	0604
PRIMESTAR	0627 0640
PROSAT	0563
PROSCAN	1032 0636 0637 0650 0653 0651 0652
RCA	1032 0636 0649 0637 0622 0658 0653 0650 0651 0652 0098
REALISTIC	0603 0567
SAMSONIC	1764
SAMSUNG	0594 0583 0613 0616 0619 0540
SHARP	0604
SIERRA I II III	0561
SKY NETWORK	0542 0541 0614 0615 0646 0537 0538 0539
SONY	0623 0657 0659 0585 0602
STAR SIGHT	0633
STAR TRAK	0608
STARCHOICE	0640 0645 0627
STS	0568 0570 0571
SUPER GUIDE	0609
SYLVANIA	0581
TELSAT	0547
THOMSON	0541 0636
TOSHIBA	0641 0632 0638 0629 0630 0607 0572 0624 0625 0631
TVA	0551
ULTIMATE TV	0653 0659
UNIDEN	0633 0573 0611
UNITED	0597
VIDEO CIPHER	0574
VIEWSAT	1037
VISIONTEC	0552
V-TECH	1039
WEB TV	0612 0585
ZENITH	0617 0634 0656 0595 0646 0562 0574 0587 0635

## DVD

ACESONIC	1119
ADVENT	0922
AFREEY	0417
AIWA	0414
AKAI	0395 0435 1105 1113
ALLEGRO	0245 0405
AMES	0431
AMW	0917 0918
ANABA	0961
APEX	0386 0390 0391 0392 0424 0430 0436 0439 0445 0457 0459 0938 0913 0401 0949
ASPIRE	0933
ASTAR	1093
A-TREND	0393
AUDIOVOX	1390 0921 1117

## DVD, cont.

AXION	0921
B & K	0978
BLAUPUNKT	0430
BLUESKY	0415 0445 1125
BLU-RAY	1411 1403 1399 1398 1397 1396 1389 1129 0405 1500
BODYSONIC	0417
BOSE	0672
BOSS	0911
BOSTON ACOUSTIC	1098
BRITANIA	1395
BROKSONIC	0932 0967 0394
CAVS	1115
CENTRIOS	0951 1067 1068 0921 1054 1055 1059 1060 1061 1064 1065 1062 0449
CHANGHONG	0401
CINEVISION	0405
CITECH	1073
CITIZEN	1073
CLASSIC	0431 1051 0401
COBY	0926 0946 0947 0916 0445 0928 0894 1091 1101 1111 1112 1124
CONCEPT	0430
CONIA	0445
CONTEL	1401
CRITERION	0448
CURTIS INTERNATIONAL	0929 0928 0894
CYBERHOME	1053 0393 0985 0939
CYBERVISION	1391
CYTRON	0446 0388
DAEWOO	0440 0441 0444 0971 0965
DENON	1411 0400 0421
DENZEL	0428
DESAY	0958
DIAMOND VISION	0948 0892 0896
DIGIX	0934
DIGITREX	0445
DISNEY	0458
DRIVE	1094
DUAL	0447 0984 0956 0428 0446 1092
DURABRAND	0449 0405 0446 1086 1087 1088 1089 1090
DVD 2000	0402
EIGERVISION	1116
ELTA	0434 0435
EMERSON	0405 0940 0899 0456 0458
ESA	0956
ESCIENT	1412
FARENHEIT	0960
FISHER	0416
FUNAI	0456 0458 0899
GE	0409 0430
GOLDSTAR	0405
GO-VIDEO	0431 0937 0971 0454 0902 0901 0407 0426 0455
GPX	0936 0944
GRADIENTE	0415 1393 1394
GREENHILL	0430
HAAZ	0451 0452

## DVD, cont.

HAIER	0935
HARMAN KARDON	0427
HD-DVD	1403 1399 1398 1397 1396 1129 1110 0405
HITACHI	0404 0407 0428 0419 0387
HITEKER	0445
HUMAX	0912
ILO	0959 1070 1113
INFINITY	0417
INITIAL	0430 1070 1085 1109
INSIGNIA	1401 1070 1066 0456 0921 0430 0905 0907 0405 1406 1407 1408 1413 0458
INTEGRA	0422
IRT	0894
JBL	0427
JVC	0398 0406 0408 0964 0900 1072 0418 0923
JWIN	0390 0893 0895 1108
KAWASAKI	0945 0449
KENWOOD	0400 0429
KISS	0428
KLH	0430 0906 0386
KONKA	0410 0411 0412 0413 0905
KOSS	0415 0388
KXD	0894
LASONIC	1410 0451 0948
LENOXX	0931 0435 1087 1088
LG	1404 1400 0405 0972 0907
LINN	0443
LIQUIDVIDEO	0921
LITEON	0982 0902 0898 0959 1069
MAGNAVOX	1409 0398 0408 0458 0979 0981 0980 0456 0915 0914 0969
MARANTZ	0398 0405 0408 0423 0981
MAXENT	0923 0903
MEDION	0911 0446 0903 0896 0959
MEMOREX	0394 0446 1050 1118 1123
MERIDIAN	0398
MICROSOFT	0409 1100
MICROVISION	0911
MINTEK	0430
MITSUBISHI	0430
MUSTEK	0431
MYRON & DAVIS	0962
NAD	1405 0405 0433
NAKAMICHI	0432
NEC	0405
NESA	0430 0962
NEXXTECH	1401 1066 0952 0954 0955 0956 0934 1052 1054 1055 1056 1057 1063 1064 0449 0949
NORCENT	0926 0982 0927 0925 0928
ONKYO	0398 0422 0975
OPTIMUS	0404 0403
ORION	0394
ORITRON	0415 1060
PACIFIC	0446
PANASONIC	1399 0396 0400 0974 0970 0437 0950 0387
PHILCO	1392
PHILIPS	1129 0966 0914 1127 1128 1126 0398 0408 0423 0755 0979 0981 0980 0456 0458 0969 1096

## DVD, cont.

PHILIPS-MAGNAVOX	0398 0408 0423 0979 0980
PIONEER	1398 1397 0403 0404 0976 0977 0968 0909 1084
PIVA	1075
POLAROID	0385 0957 0949 1122
POLK AUDIO	0398 0408 0981
PORTLAND	0435 0952
POWER ACOUSTIK	1107
PROLINE	0415
PROSCAN	0409 0890
PROSONIC	0926
PROTRON	0925
PYLE	0910
RADIO SHACK	0449 0453 0919 0920
RCA	0409 0415 0430 0449 0453 0920 0890 1123
REGENT	0931 1086
REOC	0451
RIO	0405
RJ TECHNOLOGY	1076 1097
ROSEN	0930
ROTEL	0406
SABA	0919
SAMPO	0417
SAMSUNG	1389 1388 1387 0407 0454 0942 0963 0891 1099 0455
SANSUI	0394 0967
SANYO	0904 0449 0416
SEARS	0394 0456
SEG	0428
SELECTRON	1077 1078 1079 1080 1081 1082 1083
SEMP	0388
SENSORY SCIENCE	0902
SHARP	1403 0397 0897 0908
SHERWOOD	0425
SHINCO	0430
SHINSONIC	0430
SONIC BLUE	0937
SONY	1396 0987 0988 0989 0399 0986 0389
SOUNDSTORM	0910 0911
SOVA	1095
SUNGALE	0953 0947
SUPERSCAN	0456
SUPERSONIC	0944
SV2000	0456
SVA	0445 0908
SYLVANIA	0456 0458 1106 0899
SYMPHONIC	0456 0458 0899
TASCAM	0406
TEAC	0404 0449 0405
TECHNICS	0400
TECHWOOD	0433 1071 0408
TERAPIN	0943
TEVION	0388 0446 0447 0448 0450 0451 0452
THETA DIGITAL	0404
TIVO	0912 0909
TOSHIBA	1110 1114 1120 0394 0398 0973 0924 0983
TREDEX	0941
TRUTECH	1053 0971 1121

## DVD, cont.

UNITED	0449
VENTURER	1120 0449
VIZIO	1500 1502 1501 1419 0382
WESTINGHOUSE	0987
WHARFEDALE	0442 0417
WHITE WESTINGHOUSE	0458
X-BOX	0409
XENIUS	0388
YAMAHA	1402 0420 0979 0980 0408
YAMAKAWA	0438 0428 1058
ZENITH	0398 0405 0907

## DVR (use code (A)(B) etc. if you have 2 or more of the same device)

AT&T	0373
BELL	0655 0628
BELL EXPRESSVU	0647 0655
CABLEVISION	0506
CHARTER	0533 0512
CISCO	0506
COMCAST	0533
COX	0533
DIRECTV	1049 1766 1767 1768
DISH NETWORK	0655 0647
DREAMBOX	0620
ECHOSTAR	0655 0647
EMTEC	1385 1386
EXPRESSVU	0647 0655
FORTEC STAR	0569 0555 0556
HUGHES	0580
HUGHES NETWORK	0621 0580
HUMAX	0912
ILICO	0506
ILO	0959
JVC	1072
LG	1400
LITEON	0959
MEDION	0959
MOTOROLA	0533
PANASONIC	0373 0387
PANSAT	1035
PHILIPS	0371(A) 0344(B) 0345(C) 0621
PINNACLE	1040 1041 1042
PIONEER	0909 0977 0506
POLAROID	1122
PROSCAN	0653
RCA	0409 0653
RCN	0533
REPLAYTV	0373
ROGERS	0506
SAMSUNG	1388 0583
SCIENTIFIC ATLANTA	0506
SONIC BLUE	0373
SONY	0372 0657 0359 0987 0988 0989 0659
TIME WARNER	0506
TIVO	0371 0372 0344 0345 0657 0983 0912 0909
TOSHIBA	1114 0983 0973



## **DVR, cont.**

ULTIMATE TV	0653 0659
VERIZON	0533
VIDEOTRON	0506
ZENITH	0656

## **DTV/ATSC Digital to Analog Converter**

ACCESS HD	1760
AIRLINK101	1749
ALPHA DIGITAL	1760
AMTC	1760
APEX	0519
ARTEC	1759
CADENCE	1758
CHANNEL MASTER	1757
COSHIP	1758
DIGITALSTREAM	1751
DISH NETWORK	0654
ECHOSTAR	0654
GE	1769
GOODMIND	1769
GRIDLINK	1746
iNet ACCESS	1760
INSIGNIA	1750
KINGBOX	1759
LASONIC	1746
MAGNAVOX	0581
MICROGEM	1747
PHILCO	0581
RCA	1032
SANSONIC	1746
SKARDIN	1749
SUNKEY	1741
TIVAX	1760
VENTURER	1748
WINEGARD	1748
ZENITH	1750
ZENTECH	1749
ZINWELL	1740

## **Laser Discs**

DENON	0305
PIONEER	0305
PROSCAN	0308
RCA	0308
SANYO	0232
SONY	0323
ZENITH	0232

## **DVD Recorder**

ASTAR	0894
APEX	0938
ASPIRE	0933
BROKSONIC	0967
CENTRIOS	0951 1060 1061

## DVD Recorder, cont.

COBY	0894
CYBERHOME	0939
EMERSON	0899
FUNAI	0456
GO-VIDEO	0431 0902 0901
HITACHI	0419 0387
HUMAX	0912
ILO	0959
INSIGNIA	0907
JVC	0900 1072
KXD	0894
LG	0907
LITEON	0902 0898 0959
MAGNAVOX	1409 0979(A) 0980(B)
MEDION	0903 0959
MEMOREX	1050 1118
MUSTEK	0431
ORITRON	1060
PANASONIC	0387
PHILIPS	1096 1128 0979(A) 0980(B)
PHILIPS-MAGNAVOX	0979(A) 0980(B)
PIONEER	0977 0909 1084
POLAROID	0385
RCA	0409
SAMSUNG	1388 0891
SANYO	0904
SELECTRON	1080
SHARP	0897
SONY	0987(A) 0988(B) 0989(C)
SYLVANIA	1106 0899
SYMPHONIC	0899
TOSHIBA	0973 0398 1114
TRUTECH	1053
YAMAHA	0979(A) 0980(B)
ZENITH	0907

## Digital Picture Frames

AUDIOVOX	1729
COBY	1727
DIGITAL DECOR	1734
DIGITAL LIVING	1733
DYNEX	1729
INSIGNIA	1731
KODAK	1730 1720
MEMOREX	1726
NORCENT	1728
PANDIGITAL	1734 1723
PHOTOSHARE	1725
POLAROID	1734 1732 1722
ROYAL	1723
SMARTPARTS	1734 1721
TRUTECH	1724

## Media Center PC

MCE	1100
MICROSOFT	1100
VISTA	1100

## Home Automation

GE HOMEMINDER	0996
X10 HOME AUTOMATION	0998
LUTRON	0887

## Wall Mount

VIZIO	0320
-------	------

## TV/VCR Combos

ADMIRAL	0226
AIWA	0227 0269
AKAI	0254
BROKSONIC	[0147&0250] [0147&0257] 0310
CURTIS MATHES	0358
DAEWOO	[0039&0252] [0138&0279]
DIAMOND VISION	[0092&0896]
DURABRAND	[0153&0245]
ELECTROHOME	0254
EMERSON	0227 0233 0254 0265 0266 0310 0325 [0039&0252] [0147&0250] [0147&0257]
FISHER	0268
FUNAI	0227
GE	0342
GOLDSTAR	0227 0338
GRADIENTE	[0153&0245]
HITACHI	0227
JVC	0247
INFINITY	0288
LG	0227 0338
LXI	0227
MAGNAVOX	0226 0288 0456
MEMOREX	0268 0310
MITSUBISHI	0254
PANASONIC	0374 0381
PHILIPS	0288 0456
PHILIPS-MAGNAVOX	0226 0288
OPTIMUS	0374 0381
QUASAR	0374 0381
RADIO SHACK	0227 0342
RCA	0342 [0031&0035]
REALISTIC	0227
SAMSUNG	0358 0942
SANSUI	0310
SANYO	0268
SHARP	0226 0266
SONY	0380
SYLVANIA	0227
SYMPHONIC	0227
TOSHIBA	0260 0358

## TV/VCR Combos, cont.

WHITE WESTINGHOUSE	0227 [0138&0279]
ZENITH	0226 0227 0247 0266 0288 0310 0338 0358 [0039&0252] [0153&0245] [0138&0279]

## TV/VCR/DVD Combos

BROKSONIC	0932
DIAMOND VISION	[0092&0896]
MAGNAVOX	0456
PANASONIC	0437
PHILIPS	0456
SAMSUNG	0942
SEARS	0456
SUPERSCAN	0456
SYLVANIA	0456
TOSHIBA	0924

## TV/DVD Combos

ADVENT	0922
AKAI	1105 [1139&1113]
APEX	[0214&0401]
AUDIOVOX	1117 [1165&0921] [1164&1390]
AXION	[0177&0921]
BROKSONIC	0394
COBY	1091 1124
CHANGHONG	[0214&0401]
CLASSIC	[0214&0401]
DAEWOO	[0140&0444]
DIAMOND VISION	[0210&0948] [0092&0896]
DURABRAND	[0153&0405]
EMERSON	0456
FUNAI	0456
GPX	0944
HAIER	0935
ILO	1070 [1139&1113]
INITIAL	1070 1085 1109
INSIGNIA	0456 1406 1407 1408 [0029&0905] [1171&1413]
JVC	0923
KAWASAKI	0945
KONKA	0412 0413
LASONIC	[0210&0948]
LIQUIDVIDEO	[0177&0921]
MAGNAVOX	0456
MEMOREX	0394
NEXXTECH	1052
PANASONIC	0437 0950
PHILIPS	0456 [0189&0458]
PIVA	1075
SAMSUNG	0942
SANSUI	0394
SEARS	0394
SHARP	[0079&0397]
SOVA	[1003&1095]
SUPERSONIC	0944

## TV/DVD Combos, cont.

SYLVANIA	0456 [0189&0458]
SYMPHONIC	0456
TOSHIBA	0394 0924
TRUTECH	1121
WESTINGHOUSE	[1146&0987]

## DVD/VCR Combos

ALLEGRO	[0405&0245]
APEX	0949
BROKSONIC	0394 0967
CINEVISION	[0405&0245]
DAEWOO	0971
DIAMOND VISION	0896
DURABRAND	[0405&0245]
EMERSON	0456 [0458&0227]
FISHER	[0416&0267]
FUNAI	0456 [0458&0227]
GO-VIDEO	0407 0426 0455 0971
HITACHI	[0419&0227]
INSIGNIA	[0405&0245] 0907
JVC	0418 0900
LG	0907
LITEON	1069
MAGNAVOX	0548 [0914&0286] [0969&0286] 0456
MEDION	0896
NEXXTECH	0949 1063 [0449&0327]
PANASONIC	0437
PHILIPS	0456 [0969&0286] [0914&0286]
PIONEER	1084
POLAROID	0949
RCA	[0409&0225]
RIO	[0405&0245]
SAMSUNG	0455 0963
SANSUI	0394 0967
SANYO	[0416&0267]
SEARS	0394
SONY	0389
SYLVANIA	0456 1106 0899 [0458&0227] [0458&0236]
SYMPHONIC	0456 [0458&0227] [0899&0236]
TECHWOOD	1071
TOSHIBA	0924 0398
TRUTECH	0971
WHITE WESTINGHOUSE	[0458&0227]
ZENITH	[0405&0245]

## DVR/DVD Combos

HUMAX	0912
ILO	0959
JVC	1072
LASONIC	1410
LG	1400
LITEON	0959
MEDION	0959
PANASONIC	0387
PHILIPS	1128

## **DVR/DVD Combos, cont.**

PIONEER	0909 0977
POLAROID	1122
SAMSUNG	1388
SONY	0987 0988 0989
TIVO	0912 0909
TOSHIBA	0983 0973 1114

## **DVR/SAT Combos**

BELL	0655 0628
BELL EXPRESSVU	0647 0655
DIRECTV	1768 1767 1766 1049
DISH NETWORK	0655 0647
DREAMBOX	0620
EHOSTAR	0655 0647
EXPRESSVU	0647 0655
FORTEC STAR	0569 0555 0556
HUGHES NETWORK	0621 0580
NEOSAT	1761
PANSAT	1035
PHILIPS	0621
PROSCAN	0653
RCA	0653
SAMSUNG	0583
SONY	0657 0659
ULTIMATE TV	0653 0659
ZENITH	0656

## **DVR/CABLE Combos**

ADELPHIA	0512
AT&T	1753
BELL	1755
CABLEVISION	0512 0506
CHARTER	0512 0529
CISICO	0506 0512
COMCAST	0533 0543
COX	0529
ILICO	0506 0512
MOTOROLA	1754 0533
PIONEER	0506
RCN	0529
ROGERS	0506 0512
SCIENTIFIC ATLANTA	0506 0512
TIME WARNER	0506 0529 0512
VERIZON	0529 0512
VIDEOTRON	

## **Home Theater In a Box**

AIWA	[0414&0839]
AMW	0918
APEX	0436
BOSE	0672
BOSTON ACOUSTIC	1098
CENTRIOS	1067 1055 0449
CLASSIC	1051

## Home Theater In a Box, cont.

CRITERION	0448
DURABRAND	0449 0405 0776 1089 1090
EMERSON	0940
INSIGNIA	1066
JVC	0964
KLH	0906
KOSS	0415
LENOXX	0931
LG	0972 1404
MAGNAVOX	0915 [0969&0756] [0408&0756]
MYRON&DAVIS	0962
NESA	0962
NEXXTECH	1066 1055 0449
NORCENT	0928
ONKYO	0975
PANASONIC	0974
PHILIPS	0755 1126 [0969&0756] [0966&0756] [0408&0757]
PIONEER	[0976&0880] 0968
RADIO SHACK	0449 0919 0920 [0453&0879]
RCA	0449 0920 [0453&0879]
REGENT	0931 0776
RIO	[0405&0787]
SABA	0919
SAMSUNG	0454 0942 1099
SELECTRON	1078 1083
SONY	0986
TECHWOOD	1071
TEVION	0448
ZENITH	[0405&0787]

VIZIO  
39 Tesla  
Irvine, CA 92618 USA

Made in China

XRU300-02/12