



Steamfast™

MODEL
—
SF-760



CORDLESS STEAM IRON
OWNER'S GUIDE

READ ALL INSTRUCTIONS BEFORE USING

IMPORTANT SAFETY INSTRUCTIONS

This owner's guide and any additional inserts are considered part of the product. They contain important information about safety and use. Before using the product, please familiarize yourself with all operating and safety instructions. Please keep all documents for future reference and pass these documents on, together with the product, to any future owner. See steamfast.com to view, download and print the most current version of these instructions.

INTENDED USE: This product is intended to be used indoors for ironing and garment steaming in the United States. This product is not intended for commercial or industrial use. The manufacturer assumes no responsibility for damage or injury due to unauthorized use or product modification. Failure to follow these directions will void the product warranty.

WARNING: Risk to Children and Impaired Persons

- Supervision is required during the installation, operation, cleaning and maintenance of this product by children age 12 and younger and anyone with reduced physical, sensory or mental capabilities. Children should be supervised to ensure that they do not play with the appliance, its parts and packaging material.

Directions to reduce risk of fire, electrical shock, and injury:

When using your appliance, basic precautions should always be followed, including the following:

- Read all instructions before use.
- Use caution when handling this steam iron. Burns could occur from touching hot metal parts, hot water, or steam. Use

special care to avoid contact with hot water when turning the product upside down to empty the reservoir.

- To reduce the risk of contact with hot water, test whether steam is ready before each use while carefully holding the product away from your body. If no steam appears, wait a few more minutes and test again. Do not look into the appliance or use your hands or other objects to check for steam.
- Do not leave appliance unattended while connected.
- To reduce the risk of electric shock, do not immerse the appliance in water or other liquids.
- Unit is only meant to be used with recommended accessories. Using other types of attachments may cause damage to unit or injury.
- Always disconnect appliance from electrical outlet when filling with water or emptying, and when not in use.
- Do not allow cord to touch hot surfaces. Let appliance cool completely before putting away. Securely store cord in provided storage on base.
- Never yank cord to disconnect from outlet. Instead, grasp just the plug and pull to disconnect.
- Do not operate appliance with a damaged cord, or if the appliance has been dropped or damaged. To reduce the risk of electric shock, do not disassemble or attempt to repair the appliance. All repairs must be performed by a qualified service professional. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury when the appliance is used.
- If Heating Indicator Light does not illuminate when Temperature Control Dial is turned to a selected heat setting, unit is not operating normally. Immediately unplug and have unit serviced by qualified service personnel.

-
- When filling Water Tank, only water should be used in unit
 - other cleaning agents could damage unit or cause injury. Distilled or de-mineralized water is highly recommended, in order to minimize potential build-up of mineral deposits. Do not overfill unit.
 - Do not remove water tank cap during use. Allow unit to cool completely before refilling.
 - Do not attempt to use steam function without properly filling Water Tank.
 - To reduce risk of contact with hot water emitting from steam vents, check appliance before each use by positioning it away from body and pressing Steam Burst Button. Do not operate unit if steam vents are blocked.
 - Do not allow power cord to touch hot surfaces (such as Ironing Plate) during use. Store cord inside base.
 - Always allow unit to cool completely (at least 30 minutes) before storing. Place unit on base when cooling, to avoid heat damage to surfaces.
 - The iron must be used on a stable surface and rested on the base when not in use.
 - A loose fit between wall outlet (receptacle) and plug may cause overheating and distortion of the plug. Discontinue use of the product in this outlet. Contact a qualified electrician to replace loose or worn outlets.
 - To reduce the likelihood of circuit overload, do not operate another high wattage appliance on the same circuit.
 - If an extension cord is absolutely necessary, a 15 amp rated cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that the cord cannot be pulled or tripped over.
 - This appliance has a polarized plug (one blade is wider than


the other.) To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

- Use appliance only for its intended use.
- The iron must only be used with the BASE provided.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Please refer to our website for the most current version of our owner's guide.

READ AND SAVE THESE INSTRUCTIONS

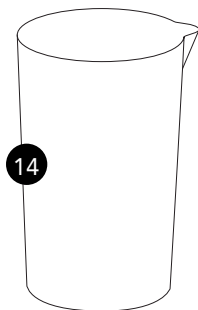

-
1. The **Ironing Plate** is the heated, non-stick surface that is used to press fabrics, remove wrinkles and create creases.
 2. The **Main Body** contains the unit's internal heating components
 3. The **Base** works as a docking and reheating station.
 4. The **Carry Case** provides a convenient, portable option for moving and storing the Cordless Steam Iron.
 5. The **Heating Indicator Light** will turn off when the Ironing Plate's set temperature is reached.
 6. The **Water Tank Cap** covers the Water Tank fill hole. The Cap will "click" when completely shut.
 7. The **Water Tank** is designed to hold a maximum of 6.09 oz (180 ml) of water.
 8. The **Continuous Steam Switch** controls the unit's continuous steam feature. When Switch is in the  position, continuous steam is inactivated. When Switch is in the  position, continuous steam is activated
 9. When pressed, the **Steam Burst Button** provides a quick, powerful burst of steam for tough wrinkles.
 10. The **Spray Mist Button** provides a mist of water for quick wrinkle remover.
 11. The **Spray Mist Outlet** is where the water exits for the Spray Mist feature.
 12. The **Handle** is designed for easy control and navigation of the unit.
 13. The **Temperature Control Dial** is turned to select the various Ironing Plate heat settings based on your fabric and to turn the unit OFF.
 14. The **Fill Cup** is designed to help you easily and consistently fill the Water Tank.
 15. When finished with your ironing and steaming tasks, conveniently store the power cord in the **Power Cord Storage** located in the base (not shown).

FILLING WATER TANK (FOR STEAM IRONING)

1. Turn off iron and unplug Base.
2. Place unit on a flat surface and hold the iron upright.
3. Use provided fill cup to fill Cordless Iron with water to MAX fill line on Water Tank. Do not overfill unit.

NOTE: In order to extend the life of your unit and keep it functioning at it's maximum potential, it is highly recommended that distilled or de-mineralized water be used in Water Tank.

4. When finished filling Water Tank, close Water Tank Cap. Cap will "click" when completely shut.

When the water level becomes low:

1. Turn off iron and unplug base. Allow to cool for at least 5 minutes.
2. Follow **STEPS 2-4** above.
3. Plug power cord back in and resume ironing as usual.

OPERATING UNIT

Your SF-760 Cordless Iron comes with a built-in Auto-Off Feature. When the Cordless Iron is placed on the Base and powered on, the iron will automatically shut off if not removed from Base after 8 minutes.

Always place Iron securely on the Base when not in use. Do not rest Iron on other surfaces or attempt to stand Iron upright.

 **Burn Hazard. Do NOT touch the Ironing Plate or surrounding area.**

 **Discontinue use if iron has been dropped and shows visible damage. If visible damage occurs, do not return iron to base while base is powered on.**

STEAM IRONING

1. Follow Filling Water Tank procedure on pg 8.
2. Plug power cord into a convenient electrical outlet.
3. Set the Cordless Iron on the Base, ensuring back of Iron sits flush against base.
4. When Heating Indicator Light turns off, the sole plate has reached it's set temperature.

NOTE: It is recommended to start with lower temperature first, as high settings designed for heavy material can damage delicate fabrics.

FABRIC	TEMPERATURE CONTROL	TEMPERATURE REQUIREMENT
Silk	●	Low Temperature
Wool	● ●	Medium Temperature
Cotton, Linen	● ● ●	High Temperature

5. To Produce Steam

- For Continuous Steam: Once the Heating Indicator Light has turned off (indicating selected Ironing Plate temperature has been reached), remove the Cordless Iron from the base and move the Continuous Steam Switch to the  position. After a few seconds, the unit will automatically begin to emit steam from the Ironing Plate.
- For Steam Burst: Once the Heating Indicator Light has turned off (indicating selected Ironing Plate temperature has been reached), remove the Cordless Iron from the base, leave the Continuous Steam Switch in the  position, and press the Steam Burst button.

NOTE: Steam can only be produced when the Ironing Plate temperature is set at ●● or ●●●. Steam cannot be produced at the lowest temperature setting.

6. Continue with steam ironing tasks.

IMPORTANT: The Ironing Plate will maintain its set temperature for an approximate 30 seconds. After 30 seconds, set the Cordless Iron back on the Base to reheat the Ironing Plate. This will take approximately 7 seconds. The Heating Indicator Light will turn on when the Cordless Iron is set on the base and after approximately 7 seconds, the light will turn off indicating the Cordless Iron is reheated and ready for use again.

DRY IRONING

1. Plug power cord into a convenient electrical outlet.
2. Set the Cordless Iron on the Base, ensuring back of Iron sits flush against base.
3. When Heating Indicator Light turns off, the Ironing Plate has reached its set temperature. Be sure to set Continuous Steam Switch to  position to avoid water leakage.

NOTE: Follow the fabric guidance chart on pg 9 to select the appropriate Sole Plate temperature for your fabric.

4. Continue with steam ironing tasks.

IMPORTANT: The Ironing Plate will maintain it's set temperature for an approximate 30 seconds. After 30 seconds, set the Cordless Iron back on the Base to reheat the Ironing Plate. This will take approximately 7 seconds. The Heating Indicator Light will turn on when the Cordless Iron is set on the base and after approximately 7 seconds, the light will turn off indicating the Cordless Iron is reheated and ready for use again.



CLEANING & STORAGE

1. Turn Temperature Control Dial to OFF position. To eliminate the potential for water leakage, move Continuous Steam Switch to OFF  position. Place unit securely on the Base.
2. Unplug the power cord. Allow unit to cool for at least 30 minutes.
3. Once cooled, open Water Tank Cap and drain any remaining water into a sink or tub. Close Cap when finished.
4. Wipe Main Body and Ironing Plate with a soft cloth lightly moistened with water.
 - **DO NOT clean Ironing Plate with detergents or descalers.**
 - **DO NOT clean Ironing Plate with abrasive or corrosive products.**
 - **DO NOT submerge unit or hold unit under running water.**
5. If desired for storage or moving Cordless Iron, place unit on the base and securely connect the Carry Case to Base. The clips will “click” into place when securely fastened.
6. Place unit in cool, dry location.

MINERAL BUILD-UP

1. Follow **STEPS 1-3** under **CLEANING & STORAGE** section above; however, leave Water Tank Cap open.
2. Make a mixture of 0.5 oz. distilled water and 0.5 oz. vinegar.
3. Using included Measuring Cup, pour water-vinegar solution into Water Tank. Close Water Tank Cap.
4. Follow normal steam ironing procedure, as outlined on Page 9-10. Allow unit to steam out full contents of Water Tank. When finished, turn Continuous Steam Switch to OFF  position and place unit securely on the Base.
5. Allow to cool for 5 minutes, then refill Water Tank with fresh distilled water. Repeat **STEP 4** until vinegar odor dissipates.
6. Store unit as normal.

PROBLEM	POSSIBLE CAUSE & SOLUTION
Unit fails to heat up.	Base is not plugged in. Plug power cord into electrical outlet.
	Household circuit breaker / ground fault interrupter has tripped or blown a fuse. Reset circuit breaker / ground fault circuit interrupter, or replace fuse. For assistance, contact a licensed electrician.
	Temperature Control Dial has not been turned to a heat setting.
Unit is leaking water.	The Continuous Steam Switch is in this  position, but Temperature Control Dial is not set to high enough heat setting. Refer to Steam Ironing section for further instructions.
	Water tank is overfilled. Do not fill past MAX line.
	There is mineral build-up. Refer to MINERAL BUILD-UP section for further instructions.
Unit is not producing continuous steam	The Continuous Steam Switch is not set in the correct position. Ensure it is set to  position.
	The Temperature Control Dial is not set to high enough heat. Refer to Steam Ironing section for further instructions.
	The Cordless Iron has been left off the base for more than 30 seconds. Place iron back on the base and wait for 7 seconds for reheat. See pg 10 for further instructions.

CONSUMER SERVICES

For problems with your Cordless Steam Iron, please refer to the troubleshooting guide located above. Additional inquiries should be directed to our consumer support services through our Web site, **steamfast.com**.

If you do not have internet access, you may also contact our Consumer Service Department by telephone, at **1-800-711-6617**.

NOTE: In order for our Consumer Service representatives to help you as quickly and efficiently as possible, please have the following information ready before calling:

- Purchase information (where and when you purchased this product)
- Copy of purchase receipt / proof of purchase
- Product serial number (located on electrical specification label on bottom of unit)

For information regarding your 2 Year Limited Warranty, refer to Page 14 of this manual.



Steamfast™

Warranty Information

2-YEAR LIMITED WARRANTY

What is covered

Steamfast, a division of Vornado Air, LLC ("Steamfast"). Subject to the terms and conditions of this 2-Year Limited Warranty ("Warranty") as set forth below, Steamfast warrants to the original consumer or purchaser ("Buyer") that this Steamfast®-branded steam product, excluding all accessories and attachments, (the "Product") is to be free from defects in material and workmanship for a period of two (2) years from the date of purchase when used and maintained in accordance with the Owner's Guide (the "Warranty Period").

In the event Buyer notifies Steamfast of a defect in the Product within the Warranty Period, Steamfast will replace the Product and/or defective component parts, as applicable and necessary. Any such replacement will be made at no charge to Buyer for parts or labor, provided that Buyer shall be responsible for all shipping and transportation costs associated with returning the Product to Steamfast for inspection and covered replacement.

What is not covered

This Warranty shall not be applicable to damage or loss caused in whole or in part by:

- Repairs, modifications or alterations to the Product by anyone other than Steamfast.
- Use or operation of the Product outside the permitted or intended uses described by Steamfast in the Owner's Guide, or other careless operation, handling, misuse, or abuse of the Product.
- Lack of proper maintenance or timely cleaning of the Product as specified in the Owner's Guide.
- Use of the Product other than for normal household purposes.
- Normal wear and tear.
- Used consumable parts, accessories and attachments, including, but not limited to, brushes, hangers, scrub pads and mop pads.
- Use of parts and accessories other than those produced or recommended by Steamfast.
- Cosmetic damage, such as scratches, nicks and dents.
- Damage caused by accident, water, flood, fire or other acts of nature or external causes.

Warranty limitations and exclusions

- NO OTHER EXPRESS WARRANTY IS GIVEN BY STEAMFAST TO BUYER AND NO REPRESENTATIVE HAS THE AUTHORITY TO MAKE REPRESENTATIONS OTHER THAN THOSE PROVIDED HEREIN.
- THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF AND ALL IMPLIED WARRANTIES, SPECIFICALLY THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY EXPRESSLY LIMITED TO THE DURATION OF THE WARRANTY PERIOD, UNLESS A SHORTER PERIOD IS PERMITTED BY LAW.
- STEAMFAST'S REPLACEMENT OF THE PRODUCT IS THE EXCLUSIVE REMEDY. UNDER NO CIRCUMSTANCES SHALL STEAMFAST BE LIABLE TO BUYER OR ANY OTHER PERSON FOR ANY INCIDENTAL, SPECIAL, CONSEQUENTIAL, OR OTHER DAMAGES, EVEN IF STEAMFAST HAS BEEN ADVISED OF OR COULD REASONABLY FORESEE THE POSSIBILITY OF SUCH DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS OR DAMAGE, WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT OR UNDER ANY OTHER THEORY OF LAW.

-
- THIS WARRANTY GIVES BUYER SPECIFIC LEGAL RIGHTS. BUYER MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE-TO-STATE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, AND SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO BUYER.

How do you register the Warranty

Buyer must complete an application to register this Warranty within sixty (60) days following date of purchase. Buyer may either visit Steamfast's website at www.steamfast.com and complete an online application or mail a completed application to Steamfast. Failure to register this Warranty within sixty (60) days following date of purchase will render this Warranty null and void.

Warranty service

For warranty service, call 1-800-711-6617 or email consumerservice@steamfast.com to obtain a Return Authorization ("RA") form. Include the Product model number and serial number, as well as Buyer's name, address, city, state, zip code and phone number when contacting Steamfast for warranty service. Buyer may be required to provide the original sales receipt for purposes of verifying date of purchase. After receiving the RA form, the Product must be shipped, postage prepaid by Buyer, to:

Steamfast
Attn: Warranty & Repair
415 E. 13th Street
Andover, KS 67002

To assure proper handling, packages must be clearly marked with the RA number. Packages not clearly marked with the RA number may be refused at the receiving dock.

Important: After receiving return authorization, carefully pack the Product to avoid damage in shipping. Damage in shipping is not covered by the Warranty and shall be the sole responsibility of Buyer. Damage or loss not covered by this Warranty or occurring outside the Warranty Period will require a fee to cover the cost of handling and shipping. All such fees and costs shall be the sole responsibility of Buyer.


Please allow at least 1-2 weeks for return of the Product after it is received by Steamfast. For ease of recordkeeping, it is recommended that Buyer staple or attach the original sales receipt to this Owner's Guide and record the Product serial number (located on the Product specifications decal) here:

© 2021 Vornado Air, LLC • Andover, KS 67002

Specifications subject to change without notice. Steamfast® is a trademark owned by Vornado Air, LLC. Patented. US Pat. No. 7,062,870 B1
Manufactured in China.

Steamfast Consumer Service

W: steamfast.com • P: 1-800-711-6617 • E: consumerservice@steamfast.com

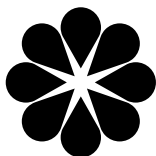

SteamfastTM

Steamfast

415 East 13th Street, Andover, KS 67002

1-800-711-6617 | steamfast.com | consumerservice@steamfast.com

T760-003 R-, V00