


- To see details of specifications and operations, refer to the instruction manual:  F50x/F51x instruction manual


Component identification

F50x

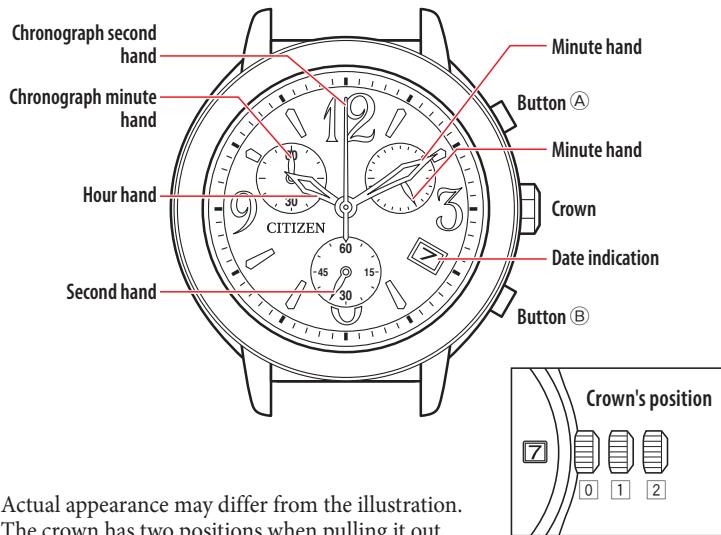

- Actual appearance may differ from the illustration.
- The crown has two positions when pulling it out.

F51x

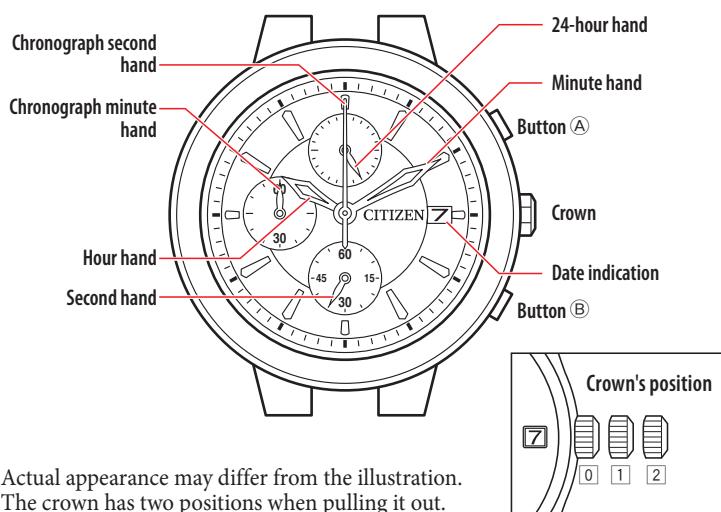

- Actual appearance may differ from the illustration.
- The crown has two positions when pulling it out.
- Refer also to our web page for detail of usage of the scale and bezel on the watch.

(<http://www.citizenwatch-global.com/support/pdf/enhanced/e.pdf>)

Setting the time

1. **Pull the crown out to position 2 when the second hand points 0 second.**
2. **Rotate the crown to set the time.**
 - Take care the time set is AM or PM referring to the 24-hour hand.
 - Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.
3. **Push the crown in to position 0 in accordance with a reliable time source to finish the procedure.**
The second hand starts moving.

Setting the date indication

- Do not adjust the date indication while the watch shows 9:00 PM - 1:00 AM. Otherwise, the date indication may change incorrectly thereafter.
- Date indication adjustment is required on the first days of March, May, July, October and December.

1. **Pull the crown out to position 1.**
2. **Rotate the crown clockwise to set the date indication.**
 - The crown turns freely and the date does not change if the crown is turned to the left.
3. **Push the crown in to position 0 to finish the procedure.**

Using the chronograph

- Measuring up to 60 minutes in 1 second increments. As 60 minutes passed, the chronograph starts measurement from 0 second again.
- Check the chronograph minute hand is returned to 00 minute before starting the measurement.

1. **Push the crown in to position 0.**
2. **Press and release the upper right button A.**
The chronograph minute and chronograph second hands start moving.

Start/stop: press button A.
Reset: press button B.
• Be sure to reset chronograph after finishing measurement.

Adjusting the 0 position of the chronograph second hand

Adjust the position of the chronograph second hand when it does not return to the 0 position after resetting the chronograph or it settles at a wrong position due to strong shock or other causes.

1. **Pull the crown out to position 2.**
2. **Press and release the upper right button A to adjust the chronograph second hand to the 0 position.**
 - Each time button A is pressed, the hand advances by 1 second. Pressing and holding the button moves the hand continuously.
3. **Push the crown in to position 0 to finish the procedure.**