

**onn.**<sup>TM</sup>

CD/Bluetooth Boombox

Model: AAABLK100009771

---

PRODUCT GUIDE

June 7, 2021\_V1

We'd love to hear from you. Scan with you Walmart app and let us know what you think.







## Bluetooth

### Pairing a Bluetooth Device for the First Time

1. Slide the Source Switch to Bluetooth Mode. The letters "bt" will flash on the display.
2. If the unit does not automatically begin to pair, press and hold the Pair button.
3. Using the native controls on your Bluetooth device, select the **onn. CD Boombox** in your Bluetooth settings to pair.
4. When pairing, remain within 3 feet of the unit if your device requests a password, enter the default password 0 0 0 0. Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices. When successfully paired, the display will stop flashing.
5. After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device.
6. If your device should become unpaired, follow the above steps again.
7. If any pairing issues should occur, unpair the unit on your Bluetooth device and follow the above steps again.

### Playing Audio Wirelessly

1. To select, play, pause or skip a track, use the native controls on the connected Bluetooth Device, or press the Pair/Play/Pause or Tun/Skip/Search buttons.
2. Audio played through the connected Bluetooth device will now be heard through the speakers.

## Radio

### Radio Reception

An FM wire antenna is built into the radio. To improve radio reception, adjust the FM wire antenna on the boombox.

### Playing the Radio

1. Slide the Source Switch to FM radio mode.
2. Adjust the Tuning dial to tune the radio.

## CD

### Loading and Playing a CD

Note: This unit is not compatible with MP3 CDs.

1. Open the CD door and place a CD in the boombox, label side facing up.
2. Close the CD door.
3. Slide the **Source Switch** to CD mode.
4. Press the **Play/Pause** button to begin playing the loaded disc.

### Programming a CD

1. Press the **Stop** button to stop a loaded CD.
2. Press the **Program** button. "01" will blink on the display.
3. Press the **Skip/Search** buttons to select a track.
4. Press the **Program** button to add the selected track to the program.
5. Repeat steps 4 and 5 to program up to 20 tracks to play in a specified order.
6. Press the **Stop** button to cancel a program.

## 3.5mm Audio Input

### Using the Line In

3.5 mm audio input cable (not included).

1. Plug one end of a 3.5mm audio input cable into the **Line In** input on the side of the unit, and plug the other end of the cable into the audio output/headphone jack on an MP3 Player or other audio Source.
2. Turn ON the speaker using the Power button.
3. Turn ON the connected audio device using its Power button.
4. Slide the Source Switch to Line In.
5. Select and begin playing audio on the connected audio device. Audio played through the connected device should now be heard through the speakers.

