



# ADL 7103

## Automotive

### Scope / GMM / OBD II Code Reader

#### User's Manual

To receive a FREE catalog of  
our complete line of diagnostic equipment,  
call our UEi sales office at  
**1-800-547-5740**

Find more test instrument  
information on the  
internet at [www.ueitest.com](http://www.ueitest.com)  
or email [info@ueitest.com](mailto:info@ueitest.com).





### DANGER


When measuring signals greater than 150V Peak on inputs CH A and/or CH B, make certain that both the OBD II and USB cables are not connected to the instrument. Activating inputs CH A and/or CH B with the USB or OBD II together on high voltage could result in instrument damage, serious injury or death.



### CAUTION

When handing any extremely high voltage signals, e.g. the signals generated from the spark plugs, NEVER PUT ANY TEST LEADS (Either the Red or Yellow test leads Or the Secondary ignition probe lead Or Power Cable from Cigarette Lighter) CONNECTED TO THE SCOPE IN THE AREAS NEAR THOSE STRONG SIGNALS. If so, the scope can be damaged or worked improperly.

### Menu Overview

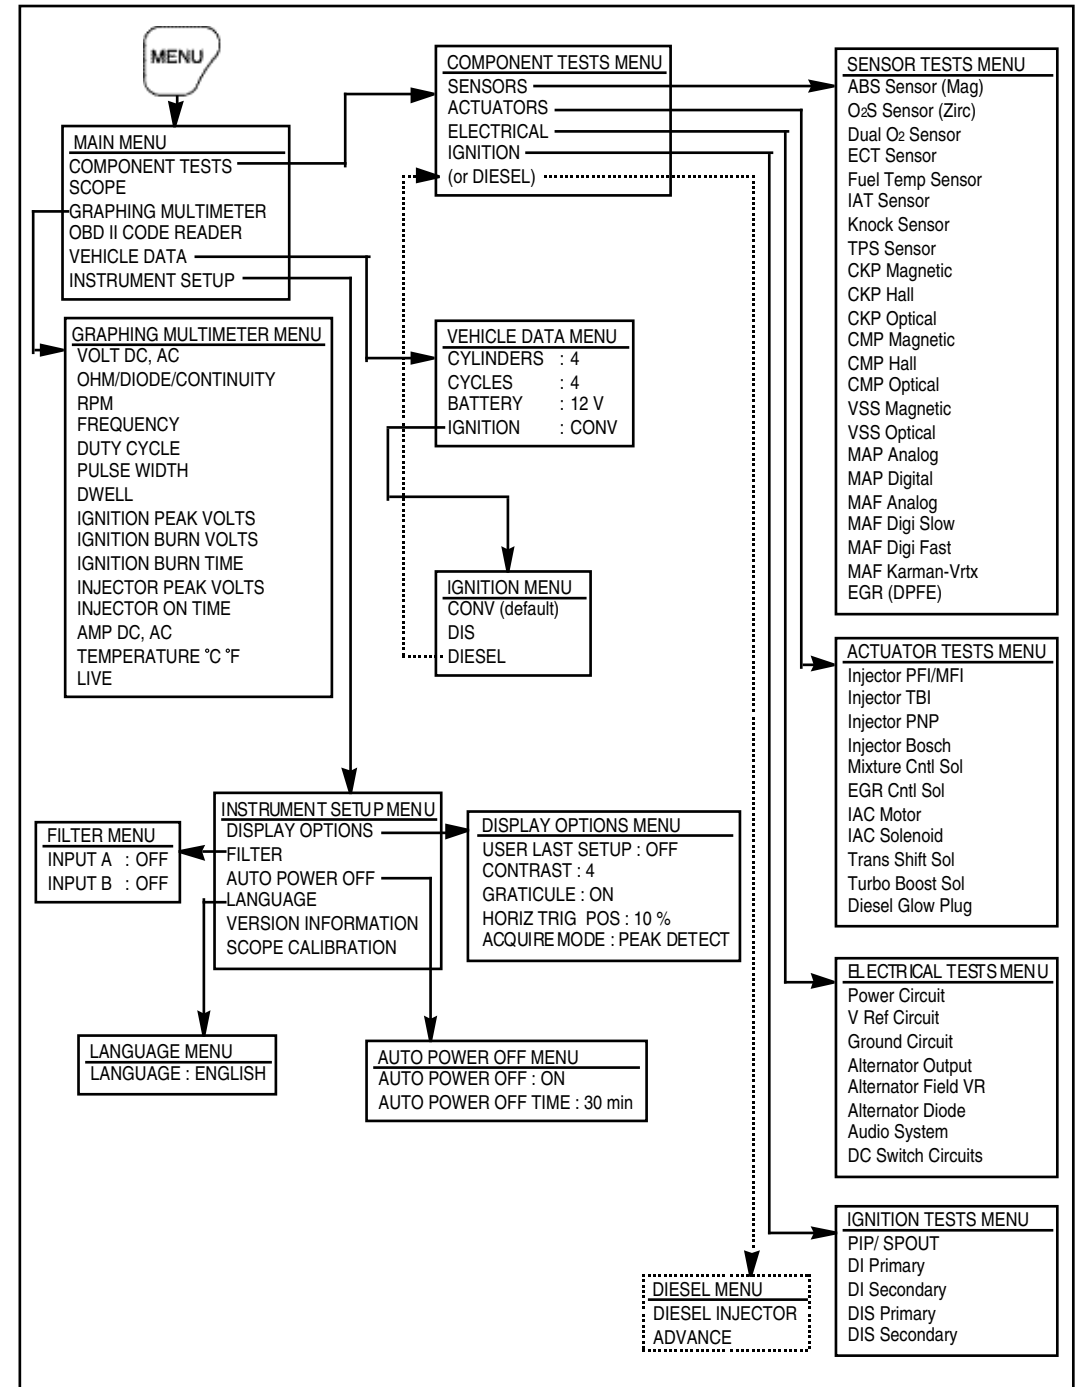

# Contents

## Menu Overview

- 1. Introduction
  - 1.1 Comparing Scan Tools, DSO's and DMM's..... 1- 1
  - 1.2 Vehicle Service Manuals ..... 1- 2
- 2. Safety Information
- 3. Automotive Electronic Signals
  - 3.1 Primary Signal Types Found in Modern Vehicles ..... 3- 1
  - 3.2 Critical Characteristics of Automotive Electronic Signals ..... 3- 2
  - 3.3 The Golden Rule of Electronic System Diagnosis ..... 3- 2
  - 3.4 Signal Probing with an Oscilloscope ..... 3- 2
- 4. Getting Started
  - 4.1 Product Description ..... 4- 1
  - 4.2 Quick Tour ..... 4- 2
  - 4.3 Front Panel Controls ..... 4- 6
  - 4.4 Measurement Connections ..... 4- 7
  - 4.5 Grounding Guidelines ..... 4- 8
  - 4.6 Display ..... 4- 9
  - 4.7 SCOPE Mode ..... 4-15
  - 4.8 GMM (GRAPHING MULTIMETER) Mode ..... 4-16
  - 4.9 OBD II Code Reader Mode ..... 4-17
- 5. Instrument Operation
  - 5.1 Instrument Test Modes ..... 5- 1
  - 5.2 SCOPE Displays ..... 5- 1
  - 5.3 GMM Displays ..... 5- 7
  - 5.4 Dual Input Scope Operation ..... 5-13
  - 5.5 Changing the Vehicle Data and Instrument Setup ..... 5-13
  - 5.6 Freezing, Saving, and Recalling Screens ..... 5-17
  - 5.7 Glitch Snare Operation ..... 5-18
  - 5.8 Tips for Noise Management ..... 5-19
  - 5.9 OBD II Code Reader Mode ..... 5-20
  - Appendix: About OBD II System ..... 5-24
- 6. Automotive Diagnostics & Applications
  - 6.1 Component Tests ..... 6- 1
  - 6.2 Sensor Tests ..... 6- 1
  - 6.3 Actuator Tests ..... 6-32
  - 6.4 Electrical Tests ..... 6-48
  - 6.5 Ignition Tests ..... 6-57
  - 6.6 Diesel Tests ..... 6-68
- 7. Maintenance
- 8. Specifications

Glossary

Menu Overview

## 1. INTRODUCTION

Vehicle manufacturers have helped you locate drivability problems by designing Electronic Control Units with trouble code generating capabilities. ECU's aren't perfect and occasionally don't detect every event (most transients and intermittent events). On-board diagnostic systems are engineered with fairly wide set limits for sensors, actuators, connectors and terminals. When a component exceeds its limit consistently a trouble code is generated. To keep warranty costs in line tolerances are not set to catch all transients even though they can cause some of your worst drivability problems.

Therefore repair technicians are finding more and more uses for a Digital Storage Oscilloscope (DSO) and Digital Multi Meters (DMM). A DSO can capture a live "signature" of a circuit and store it for later analysis or comparison against known-good waveforms – an invaluable resource for detecting marginal components. A GMM (Graphing Multi Meter) gives you advanced multimeter capabilities coupled with the visual power of trend graphing and waveform display.

 
This meter – a combination DSO, GMM and OBD II code reader – represent the most powerful and versatile tool available for troubleshooting automotive electronics since we can track down elusive no-code drivability problems as well as diagnose OBD II sensors and components.

### 1.1 COMPARING SCAN TOOLS, DSO's AND DMM's

All of these tools have unique capabilities, and today's vehicles demand that automotive technicians are able to use all three tools to correctly diagnose various drivability problems. DSO's alone cannot replace DMM's or scan tools, yet DMM's and scan tools cannot replace DSO's.


For example, when anti-lock brakes on a car are sometimes erratic, you might first perform a road test to verify that the ABS light does not come on. When you get back to the shop, you plug in your scan tool and find no trouble codes.

Because you still have your DMM, you follow the manufacturer's instructions and look at the output voltage from each wheel speed sensor. They all appear to be in tolerance, and the manufacture fault tree recommends you replace the ABS computer. Unfortunately, the ABS computer on the vehicle is embedded in the master cylinder, so you must replace everything. The worst thing is the problem still exists even after you complete all of the work.



Normal ABS Signal

 Most of the signal shown above is visible to scan tools, DSO's and DMM's.



Faulty ABS Signal

However, the faults shown above are not visible to scan tools and DMM's. They are only visible to DSO's.

If you had a DSO, you could look at the output signal from each of the wheel speed sensors. From this you would have discovered that the left rear wheel speed sensor had some very fast aberrations that caused the ABS computer to act strange. You replace the left rear wheel speed sensor and cure the problem. The scan tool missed this problem because no trouble codes were set, and the computer communication bus was too slow to pick up the spikes. The DMM missed this problem because it averaged the sensor signals and could not see the fast aberrations.

Scan tools and DMM's sample very slow when compared to a DSO. DSO's are typically more than a few hundred thousand times faster than scan tools and more than 1,000 times faster than DMM's.

There are many examples of vehicle signals that DMM's and scan tools are unable to see. There are many vehicle problems that can occur that require a DSO, or combination of a DSO, DMM and OBD II code reader to diagnose accurately.

## 1.2 VEHICLE SERVICE MANUALS

This instrument tells how to hook up it to the selected vehicle components to be tested. However, it is strongly recommended that you consult the manufacturer's service manual for your vehicle before any test or repair procedures are performed in order to get the color of the wire or the PCM's pin number from a wiring diagram.

For availability of these service manuals, contact your local car dealership, auto parts store, or bookstore. The following companies publish valuable repair manuals:

- **Mitchell International**

14145 Danielson Street  
Poway, CA 92064  
Tel : 888-724-6742

- **Haynes Publications**

861 Lawrence Drive  
Newbury Park, CA 91320  
Tel : 1-800-442-9637

- **Motor Publications**

5600 Crooks Road, Suite 200  
Troy, MI 48098  
Tel : 1-800-426-6867

- **Helm Inc.**

14310 Hamilton Avenue  
Highland Park, MI 48203  
Tel : 1-800-782-4356

## 2. SAFETY INFORMATION



**WARNING**

READ "SAFETY INFORMATION" BEFORE USING THIS MANUAL.

This instrument is designed to be used by properly trained, skilled professional automotive technicians.

It is assumed that the user has a thorough understanding of vehicle systems before using this instrument.

To use this instrument safely, it is essential that operating and servicing personnel follow both generally accepted safety procedures and the safety precautions specified in this manual.

**A DANGER** identifies an imminently hazardous situation which, if not avoided, will result in death or serious injury to the user or the bystanders.

**A WARNING** identifies conditions and actions that pose hazard(s) to the user or the bystanders.

**A CAUTION** identifies conditions and actions that may damage the instrument or the vehicle.

The term "Isolated (or Electrically floating)" is used in this manual to indicate a measurement in which the COM terminal of this instrument is connected to a voltage different from earth ground. The term "Grounded" is used when the COM terminal is connected to an earth ground potential. The COM terminal of this instrument is rated up to 300 V rms above earth ground for the safety of isolated measurements.

### Using Your Instrument Safely

Follow safe servicing practices as described in your vehicle service manual. To use this instrument safely, follow the safety guidelines below :



**DANGER**

- Use this instrument only in WELL VENTILATED service areas that provide at least four changes of air per hour. Engines produce carbon monoxide, an odorless, colorless and poisonous gas that causes lower reaction time and can result in death or serious injury. Route the engine exhaust outside with an approved extraction system while performing tests with the engine running.
- Set the parking brake and block the wheels, especially the wheels on front-wheel drive vehicles, before testing or repairing the vehicle because the parking brake does not hold the drive wheels.
- Be sure there is adequate clearance between any moving components when testing. Moving components and belts can CATCH loose clothing, parts of your body or the instrument and cause serious damage or personal injury.
- Always wear approved safety eye protection when testing or repairing vehicles. Objects can be propelled by whirling engine components can cause serious injury.
- When handling any signals higher than 150 V peak, don't electrically activate BOTH CH A and/or CH B terminal(s) AND USB and/or OBD II terminal(s) together at a time. If they are electrically activated simultaneously, a death or a serious personal injury could be resulted in.



**Avoid Fires:**

- Do not position head directly over carburetor or throttle body. Do not pour gasoline down carburetor or throttle body when cranking or running engine. Engine backfire can occur when air cleaner is out of normal position.
- Do not use fuel injector cleaning solvents or carburetor sprays when performing diagnostic testing.
- The instrument has internal arcing or sparking parts. Do not expose the instrument to flammable vapors.
- Do not smoke, strike a match, place metal tools on battery, or cause a spark in the vicinity of the battery. Battery gases can ignite.
- Keep a fire extinguisher rated for gasoline, chemical, and electrical fires in work area. Fires can lead to serious injury or death.

 **WARNING****Avoid Electrical Shock:**

- Make sure that the vehicle to be tested is at a safe potential before making any measurement connections.
- Connect the COM input of the instrument to vehicle ground before clamping the standard SECONDARY PICKUP (supplied) on the ignition wires. This ground connection is required IN ADDITION TO the normal measurement ground connections.
- Do not touch ignition coils, coil terminals, and spark plugs while operating. They emit high voltages.
- Do not puncture an ignition wire to connect the instrument, unless specifically instructed by vehicle manufacturer.
- Be sure the ignition is in the OFF position, headlights and other accessories are off, and doors are closed before disconnecting the battery cables. This also prevents damage to on-board computer systems.

IF the ground of the instrument is connected to a voltage higher than 42 V peak (30 V rms);

- Use only the standard test leads set supplied with the instrument.
- Do not use conventional exposed metal BNC or BANANA PLUG connectors.
- Use only one ground connection to the instrument (GROUND LEAD of the CH A's shielded test lead).
- Remove all probes and test leads that are not in use.
- Connect the power adapter to the AC outlet before connecting it to the instrument.

Follow the general safety guidelines below;

- Avoid working alone.
- Inspect the test leads for damaged insulation or exposed metal. Check test lead continuity. Replace damaged leads before use.
- Do not use the instrument if it looks damaged.
- Select the proper function and range for your measurement.
- When using the probes, keep your fingers away from probe contacts.  
Keep your fingers behind the finger guards on the probes.

- Disconnect the live test lead before disconnecting the common test lead.
- Do not perform internal service or adjustment of this instrument unless you are qualified to do so.

**Avoid Burns:**

- Do not touch hot exhaust systems, manifolds, engines, radiators, sample probe, etc.
- Do not remove radiator cap unless engine is cold. Pressurized engine coolant may be hot.
- Wear gloves when handling hot engine components.
- Use a suitable battery carrier when transporting batteries.

 **CAUTION**

- Disconnect circuit power and discharge all high voltage capacitors before connecting the instrument to make resistance, continuity, or diodes measurements.
- Do not rely on questionable, erratic, or obviously erroneous test information or results. Make sure that all connections and data entry information are correct and that the test procedure was taken correctly. Do not use suspicious test information or results for diagnostics.

## 3. AUTOMOTIVE ELECTRONIC SIGNALS

### 3.1 PRIMARY SIGNAL TYPES FOUND IN MODERN VEHICLES

Once you become familiar with basic vehicle waveforms it will not matter how new or old the vehicle is, or even who manufactured the vehicle. You will be able to recognize signals that do not look right.

#### Direct Current (DC) Signals

The types of sensors or devices in a vehicle that produce DC signals are:

- Power Supplies - Battery voltage or sensor reference voltages created by the PCM.
- Analog sensor signals - engine coolant temperature, fuel temperature, intake air temperature, throttle position, EGR pressure and valve position, oxygen, vane and hot wire mass airflow sensors, vacuum and throttle switches and GM, Chrysler and Asian manifold absolute pressure (MAP) sensors.

#### Alternating Current (AC) Signals

The types of sensors or devices in a vehicle that produce AC signals are:

- Vehicle speed sensors (VSS)
- Antilock brake system wheel speed sensors (ABS wheel speed sensors)
- Magnetic camshaft (CMP) and crankshaft (CKP) position sensors
- Engine vacuum balance viewed from an analog MAP sensor signal
- Knock sensors (KS)

#### Frequency Modulated Signals

The types of sensors or devices in a vehicle that produce Frequency Modulated signals are:

- Digital mass airflow (MAF) sensors
- Ford's digital MAP sensors
- Optical vehicle speed sensors (VSS)
- Hall Effect vehicle speed sensors (VSS)
- Optical camshaft (CMP) and crankshaft (CKP) position sensors
- Hall Effect camshaft (CMP) and crankshaft (CKP) position sensors

#### Pulse Width Modulated Signals

The types of circuits or devices in a vehicle that produce Pulse Width Modulated signals are:

- Ignition coil primary
- Electronic spark timing circuits
- EGR, purge, turbo boost, and other control solenoids
- Fuel injectors
- Idle air control motors and solenoids

#### Serial Data (Multiplexed) Signals

The types of circuits or devices in a vehicle that produce Serial Data signals are:

- Powertrain control modules (PCM)
- Body control modules (BCM)
- ABS control modules
- Other control modules with self diagnostics or other serial data / communications capability

### 3.2 CRITICAL CHARACTERISTICS OF AUTOMOTIVE ELECTRONIC SIGNALS

Only 5 critical characteristics (or information types) given from the Automotive electronic signals are important because the vehicle's PCM considers them important.

- **Amplitude** - The voltage of the electronic signal at a certain point in time.
- **Frequency** - The time between events, or cycles, of the electronic signal, usually given in cycles per second (Hertz).
- **Shape** - The signature of the electronic signal, with its unique curves, contours, and corners.
- **Duty Cycle** - The on-time, or relative pulse width of the electronic signal.
- **Pattern** - The repeated patterns within the signal that make up specific messages, like synchronous pulses that tell the PCM that cylinder #1 is at TDC (Top Dead Center), or a repeated pattern in the serial data stream that tells the scan tool the coolant temperature is 212 °F (or 100 °C), etc.

### 3.3 THE GOLDEN RULE OF ELECTRONIC SYSTEM DIAGNOSIS

For the vehicle's computer system to function properly, it must send and receive signals with the critical characteristics it was designed to communicate with.

Each of the primary types of electronic signals use the critical characteristics to establish electronic communication. They each use different combinations of the critical characteristics to communicate. Here's a list of which critical characteristics each of the primary signal types uses to communicate:

- Direct Current signals use Amplitude only.
- Alternating Current signals use Amplitude, Frequency, and Shape.
- Frequency Modulated signals use Amplitude, Frequency, and Shape.
- Pulse Width Modulated signals use Amplitude, Frequency, Shape, and Duty Cycle.
- Serial Data signals use Amplitude, Frequency, Shape, Duty Cycle, and Pattern.

The list will help to give you a better understanding of which signal types use which critical characteristics to do their electronic communication. The above rules work very well and hold up in most cases, but there are exceptions to its rules. Not many, but a few.

It may come as no surprise to some that serial data signals are the most complex signals in the vehicle. They use all 5 critical characteristics to communicate with. Thus, they take a special analyzer to decode them - one very familiar to most technicians - the scan tool.

### 3.4 SIGNAL PROBING WITH AN OSCILLOSCOPE

The engine compartment of a running vehicle is a very unfriendly environment for automotive signals to live. Temperature extremes, dirt and corrosion, and electrical leaks, or noises from the high voltage pulses generated from a typical ignition system can produce interference that can contribute significantly to the cause of many driveability problems.

When you are probing components, sensors and circuits, be aware that the electrical noises from today's high output ignition systems can produce an RF energy that is similar to a radio station. Since oscilloscopes are so sensitive, this interference can actually override the signals you are trying to capture and give you a false reading on the display.

To minimize this possible interference with the oscilloscope, keep these tips and suggestions in mind:

- Most interference will be picked up by the oscilloscope test leads.
  - Route the test leads away from all ignition wires and components whenever possible.
  - Use the shortest test leads possible, since other test leads may act as an antenna and increase the potential for interference, especially at higher frequency levels that are found when probing near the vehicle's on-board computer.
  - With the potential for RF interference in the engine compartment, if possible, use the vehicle chassis as ground when connecting the oscilloscope test leads. In some cases the engine block can actually act as an antenna for the RF signals.
  - The test leads are a very important part of any oscilloscope. Substituting other leads in both length and capability may alter the signals on your display.
- The oscilloscope can also pick up interference like the test leads.
  - Because the oscilloscope circuits are so sensitive, and therefore powerful, do not place the oscilloscope directly on ignition wires or near high energy ignition components, like coil packs.
  - If you are using the AC or DC charger/adaptor to power the oscilloscope, keep the external power leads far away from the engine and ignition if possible.

## 4. GETTING STARTED

### 4.1 PRODUCT DESCRIPTION

This instrument is a battery-operated 2-channel lab scope, advanced true rms graphing multimeter (GMM), and OBD II Code Reader designed expressly for use in the automotive service market. The main purpose of this instrument is to provide advanced troubleshooting capabilities for automotive service technicians in an easy-to-operate format.

This instrument offers the following features:

- A 25 Mega-sample/Second (one channel minimum) sample rate for rapid data updates.
- Lab scope signal patterns.
- True RMS Graphing Multimeter (GMM) measurements and graphs.
- OBD II Code Reader function.
- A unique “Glitch Snare” mode which captures, displays and optionally saves abnormal signal patterns in the Scope mode of the COMPONENT TESTS only when they occur.
- Preset tests that enable the user to check the majority of automotive sensors, actuators and systems easily and quickly.
- Powerful built-in reference information for each preset test which includes a test procedure showing how to connect to the circuit, a normal reference signal pattern, theory of operation and troubleshooting tips.
- Menu-driven interface has automatic configurations for most of non-preset tests, so you will find that the instrument is easy-to-use.
- The Secondary Ignition Single function displays the waveform along with the spark voltage, RPM, burn time and burn voltage.
- The Diesel function allows you to set injection pump timing and RPM using the optional Diesel accessories.
- USB interface supports updates for code and data.

Even though this instrument is designed to configure itself to almost any test, it is very important that you continue through this manual and carefully read and understand the capabilities of this instrument before attempting actual measurements.

## 4.2 QUICK TOUR

### Powering the Instrument

Press the POWER key to turn the instrument on. The instrument beeps once and turns on. At power on, the instrument displays the VEHICLE DATA menu as shown in Figure 1.

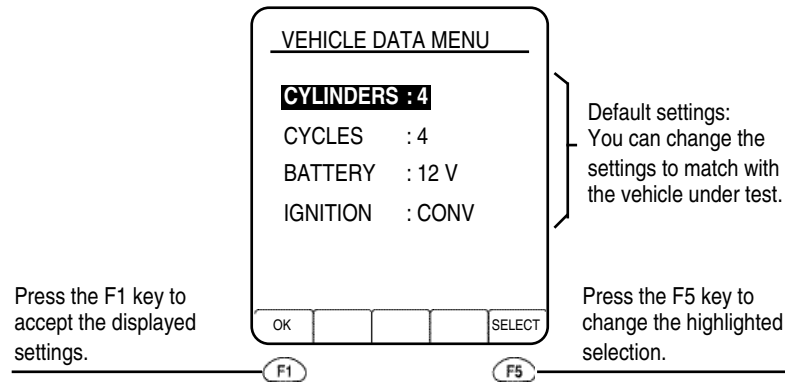


Figure 1. Vehicle Data Menu at Power-On

### Changing the Power-On Display

Use "Instrument Setup" menu option to change the Power-On display from VEHICLE DATA MENU(default) to the user's last display.

### Resetting the Instrument

If you want to restore the instrument settings as delivered from the factory, do the following:

1. Turn the instrument off by pressing the POWER key.
2. Keep **F5** depressed while you turn the instrument on by pressing the POWER key. Release **F5**. You will hear a double beep to indicate that the Master Reset has been executed.

#### NOTE

*The Master Reset clears all memory data.*

### Performing a Navigation Exercise

To display the MAIN MENU while a measurement display is active, press the MENU key to display the MAIN MENU as shown in Figure 2. This menu lists all of the tests, displays and setups available:

- COMPONENT TESTS
- SCOPE
- GRAPHING MULTIMETER
- OBD II CODE READER
- VEHICLE DATA
- INSTRUMENT SETUP

The fastest way to set up the instrument to test most automotive devices(sensors, actuators...) and circuits is to choose from one of the built in **COMPONENT TESTS**. Each test places the instrument in a configuration best suited to display signals for the chosen device or circuit.

Press a Four Way arrow key to position the HIGHLIGHT BAR over the COMPONENT TESTS menu choice and press **F5** to select.

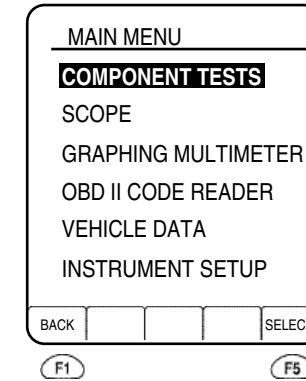


Figure 2. Main Menu

From the resulting COMPONENT TESTS menu, select IGNITION from the test group. Then, press **F5** to select.

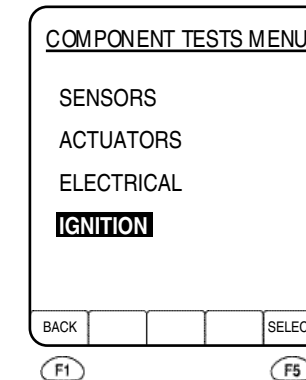


Figure 2. Selecting IGNITION Menu

Next, press the Four Way arrow keys to highlight **PIP/SPOUT**. Press **F5** to select. Now, the instrument is ready to test the input signal(s).

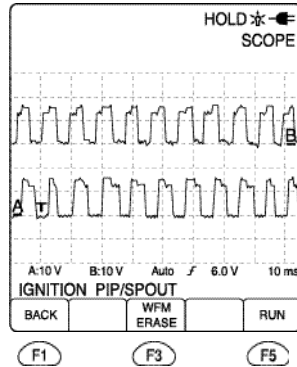


Figure 3. Example of Result Display

Press **F3** to remove the Reference Waveform(s).

Press **F5** to enter the scope into the test mode and continue to display the Reference Waveform(s) for comparison to a live waveform(s).

For this demonstration, view the following reference information specific to the test selected. Reference information is available at any time by pressing the HELP key. Press **F1** when finished viewing each area under the HELP menu.

**Test Procedure** - Tells how to hook up the scope, and what accessories to use. Describes how to stimulate the sensor or operate the circuit to obtain a diagnostic waveform.

**Reference Waveform (REF WFM)** - Shows a typical good or normal signal pattern. Describes significant waveform features or variations.

**Theory of Operation** - Explains what the sensor or circuit does and the important signals involved.

**Troubleshooting Tips** - Tells the symptoms caused by the defective component and how to fix up the problems.

**Function Information** - Explains about the particular function keys that can be used for the selected test for certain COMPONENTS.

Pressing **F1** moves back through the previous displays to return to active tests or to test selected menus.

After you choose a preset test, you may change most instrument settings to get a better look at the signal. You can even change to different display modes, moving between Scope mode and GMM mode as needed, by pressing the GMM MODE function key in the Scope display or the SCOPE MODE function key in the GMM display.

You can hold the information in memory at any time by pressing the HOLD key to freeze the display. Notice that SAVE, RECALL, and CLEAR function key label is displayed above the Function key on the bottom display after **HOLD** is pressed.

- Press the SAVE key to save the present screen in the next memory location.
- Press the RECALL key to recall the screen last saved in memory.
- Press the CLEAR key to clear all the memory locations.
- Press the BACK key to resume measuring or to return to the previous display.

### Power Sources and Charging the Battery

The instrument can be powered from any of the following sources:

- **Internal Battery Pack**  
This is a rechargeable Ni-MH Battery Pack already installed.
- **Power Adapter**  
The Power Adapter / Battery Charger powers the instrument from a standard AC outlet and charges the installed Ni-MH Battery Pack.  
The instrument can be used during battery charging. Verify that your local line voltage is appropriate before using the Power Adapter to power the instrument.
- **Charging Adapter (Optional)**  
This adapter charges the instrument's Ni-MH Battery Pack from a standard 12 V DC cigarette lighter outlet



### WARNING

TO AVOID ELECTRICAL SHOCK, USE A BATTERY CHARGER THAT IS AUTHORIZED FOR USE WITH THE AUTOMOTIVE SCOPE.

USE the following procedure to charge the battery pack and to power the instrument:

1. Connect the Power Adapter / Battery Charger to line voltage.
2. Insert the Power Adapter's low voltage plug into the Power Adapter connector of the instrument. You can now use the instrument while the Ni-MH batteries are being charged slowly. If the instrument is turned off, the batteries are charged more quickly.  
During operation, when the batteries are low, a battery symbol appears on the top right of the display. When this occurs, replace or recharge the internal battery pack immediately.
3. The Power Adapter uses a trickle charging method for the batteries, so no damage can occur even if you leave it charging for long periods.  
Typically a 8 hour recharge during instrument working and a 4 hour recharge during instrument off provides the instrument with the maximum use of 4 hours.

### Auto-Power-Off


When operated on batteries (no adapter connected), the instrument conserves power by turning itself off automatically, if you have not pressed a key for 30 minutes or if the battery level is too low. The instrument turns back on if the POWER key is pressed.

The Auto Power-off feature is disabled automatically in the GMM mode.

You can adjust the Auto-Power-Off time between 5 minutes and 120 minutes to use "Instrument Setup" menu option.

### 4.3 FRONT PANEL CONTROLS

#### Key Control Overview

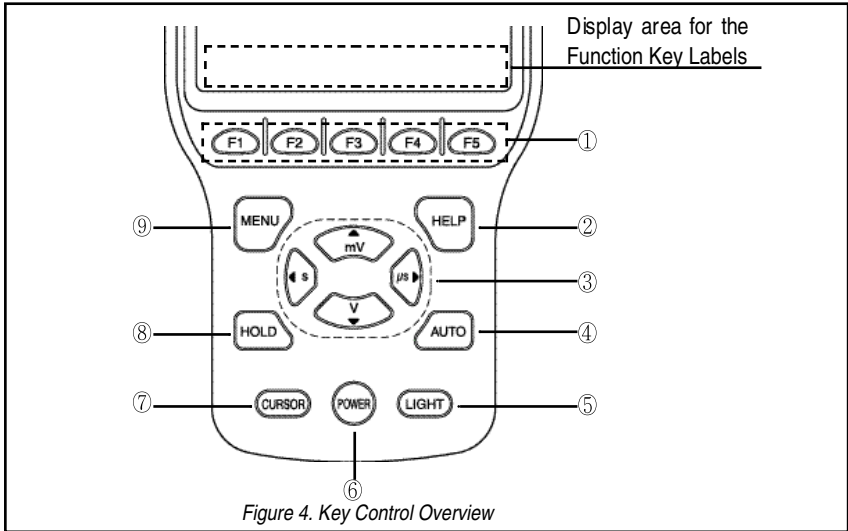


#### Key Descriptions

ITEM	KEYS	DESCRIPTION
①	F1 to F5	These are the Function keys. The function assigned to each key is indicated by the Function Key Label displayed above the key on the bottom display.
②	HELP	Displays information about the highlighted menu choice during menu selection. Displays information about the function keys when a selected test is running.
③		Performs one of the following actions: <ul style="list-style-type: none"> <li>Moves up and down through menu choices.</li> <li>Moves a waveform up and down.</li> <li>Moves a voltage cursor up and down.</li> <li>Adjusts the trigger level when you are in the SCOPE mode.</li> </ul>
		Performs one of the following actions: <ul style="list-style-type: none"> <li>Moves a waveform right and left.</li> <li>Moves a time cursor left and right.</li> </ul>
		Ranges amplitude up and down for both channels (CH A & CH B).
		Ranges Time Bass up and down for both channels (CH A & CH B).

ITEM	KEYS	DESCRIPTION
④	AUTO	Sets automatic ranging on and off (toggle). When on, the top right display shows AUTO. When this function is set on, it searches for the best range and time base settings and once found it tracks the signal. When this function is off, you should manually control ranging.
⑤	LIGHT	Turns the LCD Backlight on and off.
⑥	POWER	Turns the power on and off (toggle). When you turn the power on, previous settings are activated.
⑦	CURSOR	Allows you to use cursors for measurements on waveforms. A cursor is a vertical line or a horizontal line that you can move over the waveform like a ruler to measure values at specific points.
⑧	HOLD	Freezes the display (HOLD is displayed at the top right). Also displays a menu to save or recall screens or to clear the memory.
⑨	MENU	Takes you back to the main navigation menu.

### 4.4 MEASUREMENT CONNECTIONS

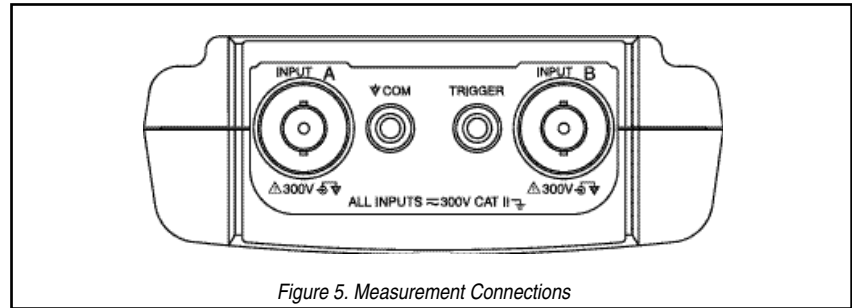

#### INPUT A (Red)

INPUT A is used for all single channel measurements, sometimes combined with use of the other inputs, Various test leads and adapters are required depending on the type of measurement selected.

#### INPUT B (Yellow)

INPUT B is used in conjunction with INPUT A.

- In COMPONENT TEST mode, for DUAL O<sub>2</sub> SENSOR measurements. for PIP/SPOUT measurements. for ADVANCE measurements.
- In SCOPE mode you can use the instrument as a dual trace oscilloscope with INPUT A and INPUT B connected.

## COM, TRIGGER

Used as external trigger for probes with dual banana plugs, such as the RPM Inductive Pickup.

## TRIGGER (as single input)

Used in SCOPE mode to trigger (or start) acquisitions from an external source.

## COM (as single input)

Used for safety grounding when the Capacitive Secondary Pickup is connected to the ignition system.

### WARNING


TO AVOID ELECTRICAL SHOCK, CONNECT THE COM INPUT OF THE INSTRUMENT TO VEHICLE GROUND BEFORE CLAMPING THE CAPACITIVE SECONDARY PICKUP(SUPPLIED) ON THE IGNITION WIRES. THIS GROUND CONNECTION IS REQUIRED IN ADDITION TO THE NORMAL MEASUREMENT GROUND CONNECTIONS.

For other tests, the COM input should not be connected to engine ground when the probes have their own ground connection at the probe end. See the GROUNDING GUIDELINES.


## 4.5 GROUNDING GUIDELINES

Incorrect grounding can cause various problems:

1. A ground loop can be created when you use two ground leads connected to different ground potentials. This can cause excessive current through the grounding leads.

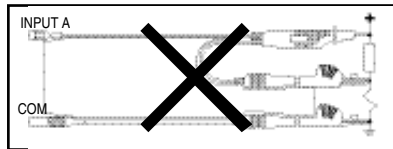

(Incorrect Grounding)  
Ground Loop by Double Grounding on Different Grounds

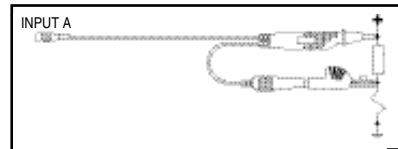


(Correct Grounding)  
Shield of Test Lead Connected to Ground

2. Excessive noise shown on the measured signal.




(Incorrect Grounding)  
Noise Pickup on Unshielded Ground Lead

3. Measurement faults or short circuit with the DUAL INPUT SCOPE mode. This occurs when you perform floating measurements with grounding at different points.

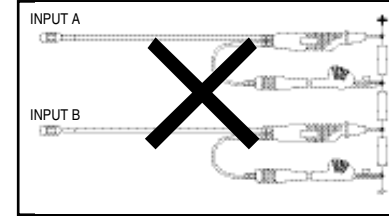

(Incorrect Grounding)  
Short Circuit by Grounding on Different Potentials

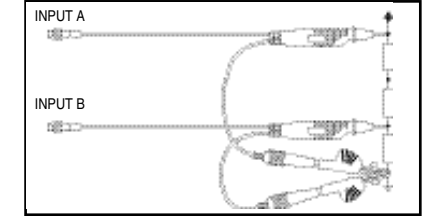

(Correct Grounding)  
Grounding at One Point

## Instrument Grounding for Measurements on the Ignition System

For the instrument safety, connect the COM input to engine ground before you perform measurements on the ignition system with the Capacitive Secondary Pickup.

To prevent ground loops, connect all ground leads to the SAME engine ground.


## 4.6 DISPLAY

The instrument presents "live" measurement data in the form of Scope and GMM displays. Temporary displays are used to display frozen and saved measurement data.

Menus are provided as a means of choosing instrument's measurement configuration. To display the MAIN MENU while a measurement display is active, press the MENU key at any time.

### Menu Display

When you press MENU key, the instrument displays the MAIN MENU. To select a menu option, use the Four Way arrow keys to move the highlight bar to the desired item. Then press **F5**. To exit the MAIN MENU and return to the previous setup, press **F1**. During menu selection, the bottom part of the screen is used to display the function key menu.

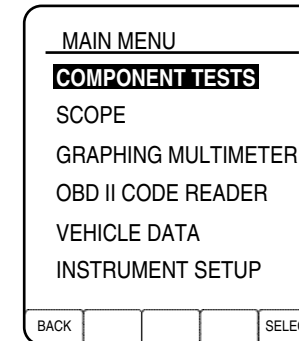



## COMPONENT TESTS

Leads to a series of predefined setups to test most common sensors and circuits.

## SCOPE

Use Single Input Scope mode if you want to measure a single signal, INPUT B is turned off. Use Dual Input Scope mode if you want to simultaneously measure two waveforms - one on INPUT A and the other on INPUT B.

## GRAPHING MULTIMETER

INPUT A is used for all GMM(Graphing Multimeter) tests. The probes and test leads to be used depend upon the type of test performed.

## OBD II CODE READER

The OBD II cable input is located on the right side of the housing. Connect the standard OBD II cable supplied to the vehicle's sixteen-pin DLC (Data Link Connector).

## VEHICLE DATA

Set the vehicle data to match the vehicle under test. If they do not match, you could get incorrect test results and may not be able to select all available tests for this vehicle. This menu appears at power-on as the start-up display due to its importance.

## INSTRUMENT SETUP

Use this menu option to set the following:

- Optimal settings for display.
- Filter function enabled and disabled.
- Auto-Power-Off enabled and disabled and adjusting the Auto-Power-Off time.
- Language for menus and HELP text.
- Version Information of current software.
- Scope Calibration when using the scope in abnormal operating environments.

## Menu Overview

Figure 6. shows an overview of available test functions, displays and setups from the MENU key. The MAIN MENU choices represent categories of applications that are listed in sub-menus as shown in the following figure.


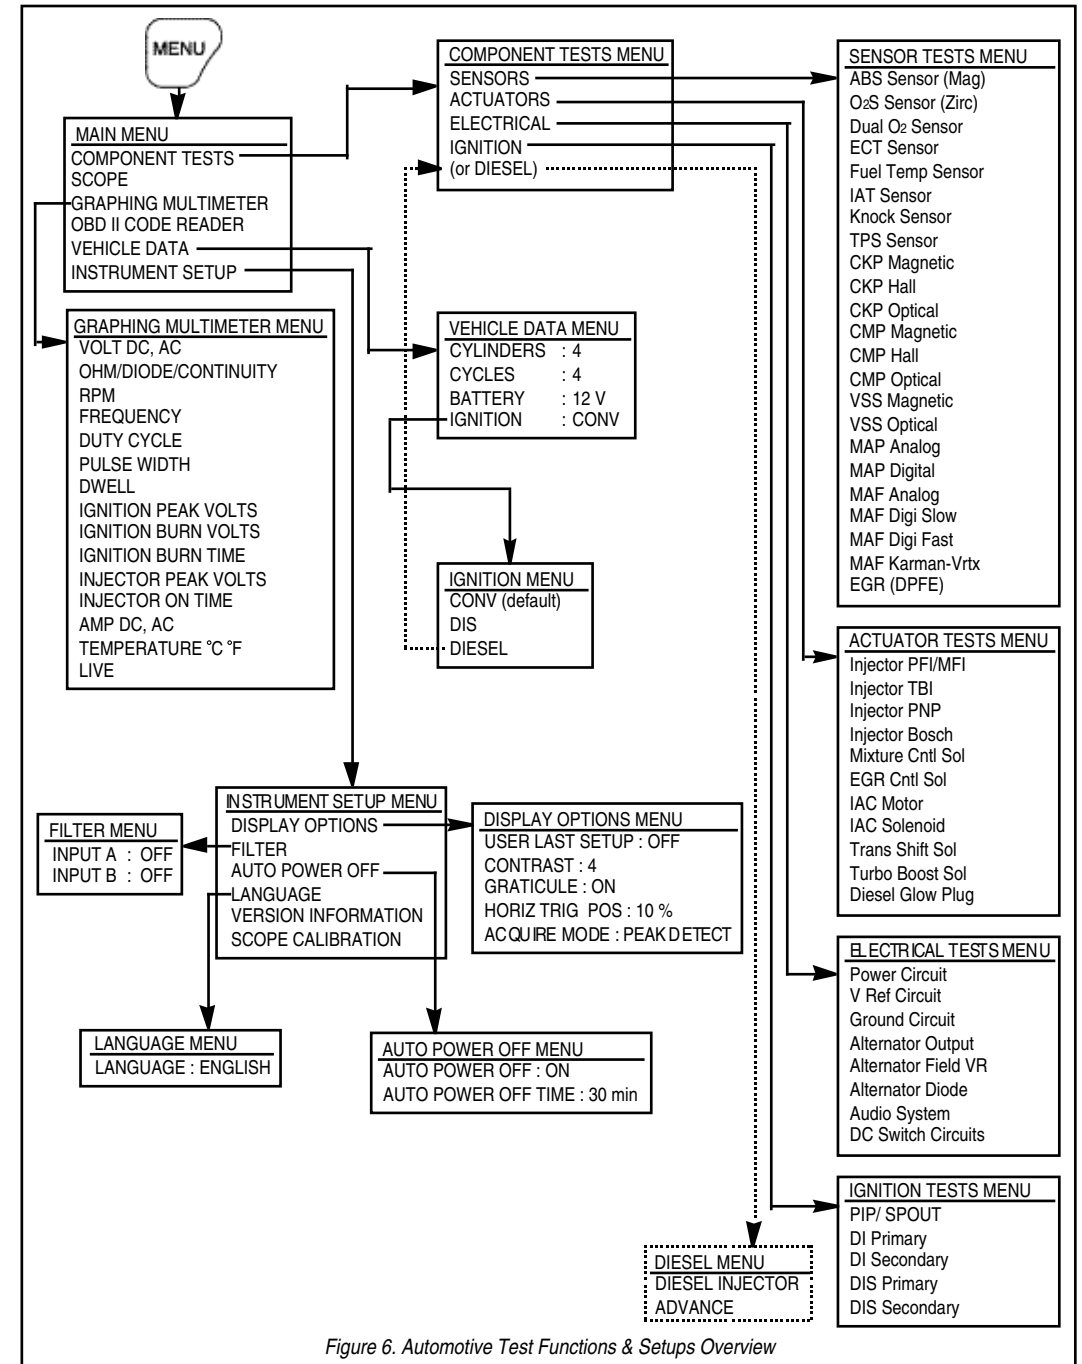


Figure 6. Automotive Test Functions & Setups Overview

## Getting Reference Information for the Selected Test

Reference information is available at any time by pressing the HELP key. Press **F1** when finished viewing each area under the HELP menu.

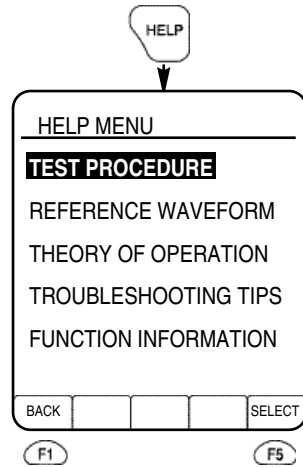

## Getting Information About the Function Keys During a Running Test

When you press this key during a running test, you get information about the function keys that can be used for the test.

For example,

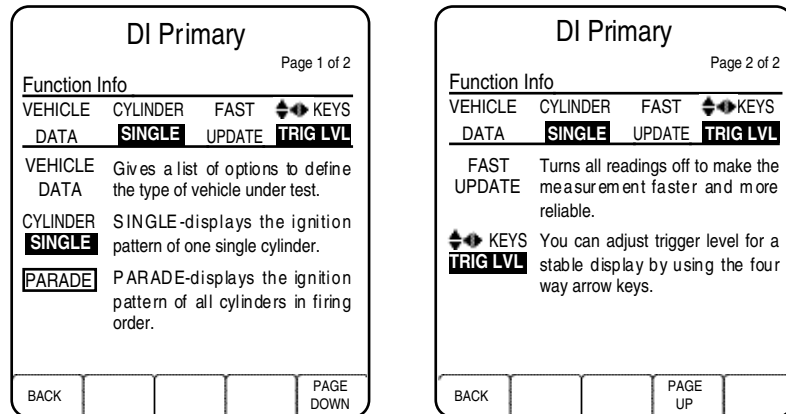


Figure 7. Information About the Function keys

## Screen Displays

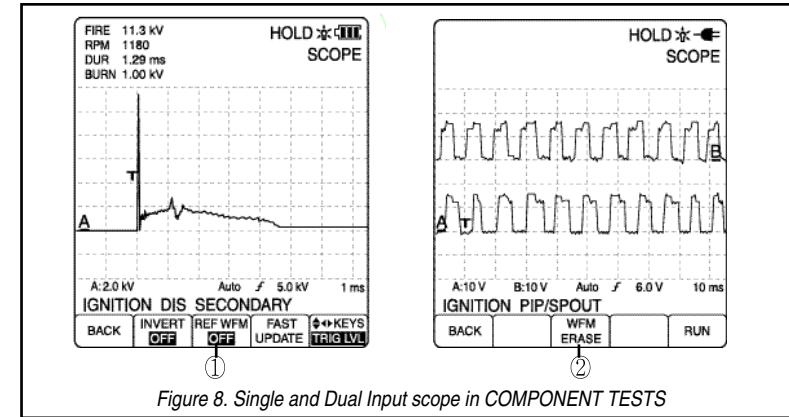


Figure 8. Single and Dual Input scope in COMPONENT TESTS

Use Dual Input Scope mode if you want to simultaneously measure two waveforms - one on INPUT A and the other on INPUT B.

- ① Use SINGLE INPUT SCOPE mode if you want to measure a single signal, INPUT B is turned off.
- ② Use DUAL INPUT SCOPE mode if you want to simultaneously measure two signals.

## Using the Function keys

For each test, one or more Function Key Labels are displayed, depending on the sub-selections possible. The Labels indicate what the keys do when you press them. (See the following example.)

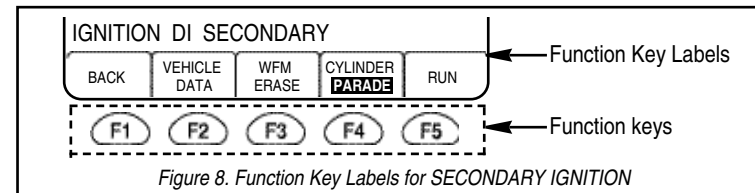


Figure 8. Function Key Labels for SECONDARY IGNITION


Pressing a function key that has no label has no effect.

The same Function Key Label can appear in several tests and it performs a similar function.

## Examples of Function Key Labels

 
CYLINDER PARADE SINGLE Two separate functions can be allowed to the same function key.

When you press **F4**, you can select between PARADE and SINGLE cylinder test.




When you press **F1**, OHM becomes the active function. When you press **F2**, Diode (→) becomes the active function. When you press **F3**, OPEN CONTINUITY becomes the active function. Pressing **F4**, CLOSE CONTINUITY becomes the active function.

 KEYS  
**RANGE A**  
**MOVE A**  
**TRIG LVL**

The  KEYS icon indicates that you can use the Four Way arrow keys to change Volt & Time ranges, to move the waveform position, and to adjust the trigger level for either INPUT A or INPUT B. And also you can use the Four Way arrow keys to adjust the sensitivity level in the COMPONENT TEST (IGNITION mode).

Press **F5** to toggle among **RANGE A** , **MOVE A** , and **TRIG LVL** for INPUT A, or among **RANGE B** , **MOVE B** , and **TRIG LVL** for INPUT B.

 KEYS  
**CURSOR 1**  
**CURSOR 2**

The  con indicates that you can use the Four Way arrow keys to move CURSOR 1 (if **CURSOR 1** is highlighted) or move CURSOR 2 (if **CURSOR 2** is highlighted). Press the function key to toggle between CURSOR 1 and CURSOR 2.

**REPEAT TEST**

This Label is displayed for SINGLE DISPLAY tests, for example the knock sensor test. To repeat the test, press the function key, then perform the required action. The knock sensor test is a single shot measurement, which means that the signal from the knock sensor is displayed only once. To get a new test result, you have to press the **F3** key and then tap the engine block or the sensor again. You may have to readjust the vertical RANGE to get an optimal waveform.

**INVERT**  
**OFF**  
**ON**

To change to the opposite polarity. Puts the waveform display upside down.

**GMM MODE**

This Label is displayed in the Scope test mode of the COMPONENT TESTS only. To change from Scope test mode to GMM test mode, press the function key.

**SCOPE MODE**

This Label is displayed in the GMM test mode of the COMPONENT TESTS only. To change from GMM test mode to Scope test mode, press the function key.

**GLITCH SNARE**

This Label is displayed in the Scope test of the COMPONENT TESTS only. To capture, display, and optionally save abnormal signal patterns when they occur, press the function key.

## 4.7 SCOPE MODE

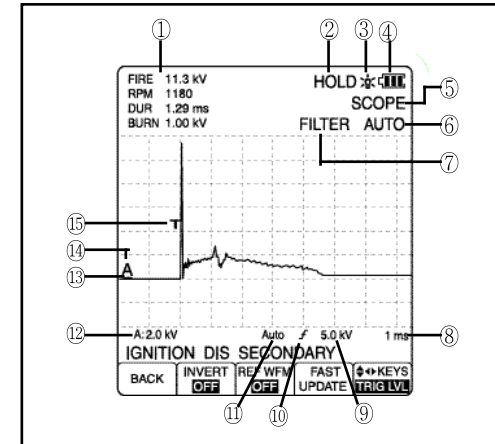



Figure 9. Scope Mode Indicators

SCOPE mode provides a display of signal patterns from either CH A or CH B over times ranging from 1  $\mu$ s to 50 seconds per division, and for voltage ranges from 50 mV to 300 V full scale.

The display may be triggered at all time settings, and trigger slope and level may be adjusted as needed. The scope display is defaulted in Glitch Detect mode to display even the narrowest glitches.

The SINGLE INPUT SCOPE mode (Component Tests only) provides for the display of up to four meter measurements above the waveform viewing area.

- ① Indicate meter measurement function.
- ② Indicate HOLD function enabled.
- ③ Backlit indicator.
- ④ Low battery indicator.
- ⑤ Indicate SCOPE mode.
- ⑥ Indicate AUTORANGING mode.
- ⑦ Indicate FILTER function enabled.
- ⑧ Indicate time base per division.
- ⑨ Indicate trigger level voltage.  
Blank if DC, ~ if AC.
- ⑩ Indicate trigger slope (rising or falling).
- ⑪ Indicate AUTO triggered.
- ⑫ Indicate voltage per division and coupling.  
Blank if DC, ~ if AC,  if GND.
- ⑬ Indicate signal source channel.
- ⑭ Indicate INPUT A zero level.
- ⑮ Indicate trigger location.

## 4.8 GMM (GRAPHING MULTIMETER) MODE

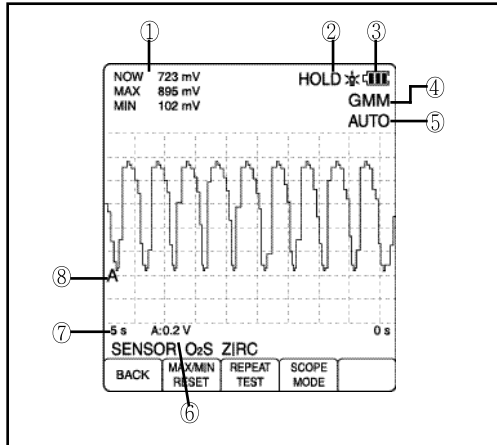



Figure 10. GMM Mode Indicators

GMM mode plots the results of signal measurements such as frequency as the values change with time. The time range in GMM mode may be set manually from 5 seconds to 24 hours per display.

Ranges for the vertical scale may also be set manually, and the available range depends upon the measurement being displayed.

Where possible, measurements plotted in GMM mode are performed on a cycle-by-cycle basis, resulting in extremely fast response.

This mode is very suitable to find faults in slowly changing processes.

- ① Indicate meter measurement functions.  
NOW: Most recent meter reading.  
MAX: Maximum value since last reset.  
MIN: Minimum value since last reset.
- ② Indicate HOLD function enabled.
- ③ Low battery indicator.
- ④ Indicate GMM mode.
- ⑤ Indicate AUTORANGING mode. Pressing  sets automatic ranging on. Using the Four Way arrow keys for ranging turns automatic ranging off and extinguishes AUTO.
- ⑥ Indicate voltage per division.
- ⑦ Indicate time per display.
- ⑧ Indicate signal source channel.

## 4.9 OBD II CODE READER MODE

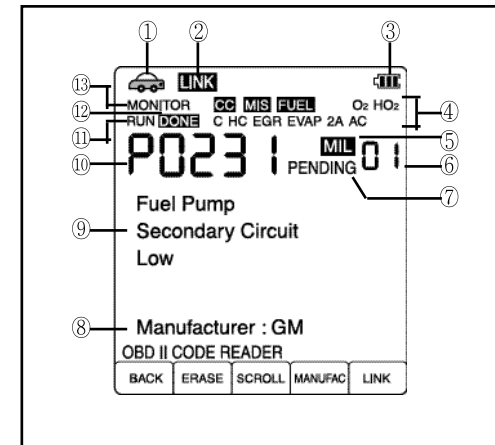


Figure 11. OBD II Code Reader Mode Indicators

OBD II Code Reader mode is designed to retrieve the Diagnostic Trouble Codes (DTC's) from the vehicle Powertrain Control Module (PCM) and to provide an indication of I/M Readiness Monitor status.

This mode is useful to check what code may be causing the malfunction indicator lamp (MIL) to light, or to verify that test results from the scope or GMM are reflecting the same problem.

This also will display the readiness status of certain emissions test monitors.

- ① Vehicle icon - Indicates whether or not the instrument (in the Code Reader mode) is being properly powered through the vehicle's Data Link Connector (DLC). A visible icon indicates that the instrument is being powered through the vehicle's DLC connector.
- ② Link icon - Indicates whether or not the instrument (in the Code Reader mode) is communicating (linked) with the vehicle's on-board computer. When visible, the instrument is communicating (linked) with the PCM. If the Link icon is not visible, the instrument is not linked to the PCM.
- ③ Battery icon - Low battery indicator of the instrument.
- ④ Monitor icons - Indicates which Monitors are supported by the vehicle under test, and whether or not the associated Monitor has run its diagnostic testing. When a Monitor icon is **Solid**, it indicates that the associated Monitor has completed its diagnostic testing. When a Monitor icon is **Flashing**, it indicates that the vehicle supports the associated Monitor, but the Monitor has not yet run its diagnostic testing. On OBD II systems, a maximum of eleven Monitors are utilized. **Not all Monitors are supported by all vehicles.** When the instrument is linked to a vehicle, only the icons for Monitors that are supported by the vehicle under test are visible on the display.

Following is a list of Monitor icons and their associated Monitors:

- CC** - Comprehensive Component Monitor
- MIS** - Misfire Monitor
- FUEL** - Fuel System Monitor
- O<sub>2</sub>** - Oxygen Sensor Monitor
- HO<sub>2</sub>** - Oxygen Sensor Heater Monitor
- C** - Catalyst Monitor
- HC** - Heated Catalyst Monitor
- EGR** - Exhaust Gas Recirculation (EGR) Monitor
- EVAP** - Evaporative System Monitor
- 2A** - Secondary Air System Monitor
- AC** - Air Conditioning System Refrigerant (R-12) Monitor

- ⑤ **MIL** - Indicates the status of the Malfunction Indicator Lamp (MIL). This icon is visible only when a DTC has commanded the MIL to illuminate on the vehicle's dash.
- ⑥ Code Number Sequence - The instrument assigns a sequence number to each DTC that is present in the PCM's memory, in ascending order, starting with "01". This helps keep track of the number of DTC's present in the PCM's memory. Code number "01" will always be the highest priority code, and the code for which "Freeze Frame" data has been stored.
- ⑦ Pending icon - Indicates if the currently displayed DTC is a Pending Code.
- ⑧ Vehicle Manufacturer Display Area - Displays the name of the vehicle manufacturer, whose Manufacturer Specific DTC Definition or Generic DTC Definition will be displayed along with the associated DTC, if a fault will be detected. "Generic" or a manufacturer among GM, Ford, Chrysler, Toyota, and Honda can be selected by the **F4** key.
- ⑨ DTC Definition Display Area - Displays the DTC Definition per the currently displayed DTC.
- ⑩ DTC Display Area - Displays the Diagnostic Trouble Code (DTC) number. Each particular fault is assigned a Code Number that is specific to that fault.
- ⑪ RUN - Indicates the Monitor RUN status of all the Monitors that apply to the vehicle under test.
- ⑫ **DONE** - When visible, indicates that all the Monitors that apply to the vehicle under test have run and completed their Diagnostic Testing, **DONE** is visible only when all supported Monitors have completed their testing.
- ⑬ MONITOR - Identifies the Monitor icon area.

*NOTE: Items 11 through 13 are associated with IM Readiness Monitor Status. Some states require that all vehicle monitors have run and completed their diagnostic testing before a vehicles emissions test (smog check) can be performed.*

## 5. INSTRUMENT OPERATION

### 5.1 INSTRUMENT TEST MODES

From the MAIN MENU, you can choose 4 independent instrument test modes:

- COMPONENT TESTS
- SCOPE
- GRAPHING MULTIMETER
- OBD II CODE READER

**The fastest way to set up the instrument** to test most devices and circuits is to choose from one of the built in COMPONENT TESTS. These tests preset the instrument to either Single or Dual Input Scope mode. Most instrument settings may be adjusted manually once you have chosen a Component Test, enabling you to fine tune settings to get a better look at the signal. Changes you make to settings specific to a Component Test are temporary, and are restored to their preset values each time another test is chosen. When configured for a specific Component Test, the instrument displays the reference waveform and data as well as the name of the test on the bottom display along with the Function Key Labels specific to the test chosen.

**If you prefer total control over your instrument configuration**, choose SCOPE test mode from the MAIN MENU. Settings for SCOPE are separately preserved and restored each time you choose SCOPE from the MAIN MENU. These settings are not affected when you choose a Component Test. This is also true for the GRAPHING MULTIMETER test mode, so in effect they are "custom" setups.


### 5.2 SCOPE DISPLAYS

#### Using Single and Dual Input Scope Mode

The instrument can be configured to show scope displays for either CH A or CH B signals: In DUAL INPUT SCOPE mode, both CH A and CH B may be displayed at the same time.

Use SINGLE INPUT SCOPE mode if you want to measure a single signal, INPUT B is turned off.

Use DUAL INPUT SCOPE mode if you want to simultaneously measure two signals.

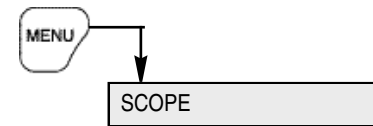

## Function keys and Result Screen

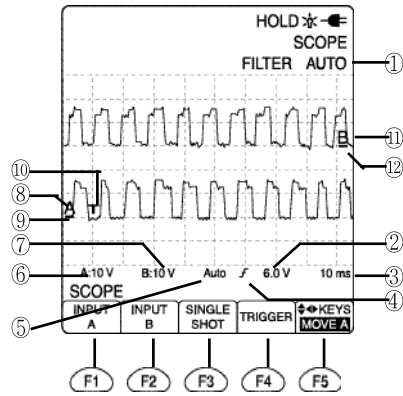


Figure 12. Scope Display

① Automatic ranging and signal tracking is on.

Pressing **AUTO** sets automatic ranging and signal tracking on and off.

AUTO is displayed when auto ranging is active. Manually selecting the range will cause the AUTO indication to turn off.

② Trigger level voltage of INPUT A.

③ Time base range.

④ Trigger icon. Indicates trigger slope (  $\nabla$  indicated negative slope).

⑤ Auto triggered.

⑥ INPUT A range setting.

⑦ INPUT B range setting.

⑧ Indicates signal source channel A.

⑨ INPUT A zero level.

⑩ Indicates trigger location.

⑪ Indicates signal source channel B.

⑫ INPUT B zero level.

## Making an Easy Setup


When you enter the scope mode, the instrument automatically optimizes vertical range, time base, and trigger settings to create a stable display. (Autoranging is default)

- When you press one of the Voltage and Time control keys, the instrument switches to manual control of range and trigger settings.
- Press **AUTO** to toggle between automatic and manual control of range and trigger settings. Use this key if you cannot get a stable display using manual control.

SCOPE displays are defaulted in “Glitch Detection” mode. This means that all signals are sampled at the full sample rate of the instrument and the minimum and maximum excursions are always shown on the display, even if the horizontal time setting is too slow to show each individual sample interval. In this mode, every noise spike of 40 ns and wider will be displayed.

## INPUT A Control Functions


When you are in SCOPE, you can control the INPUT A functions as follows:

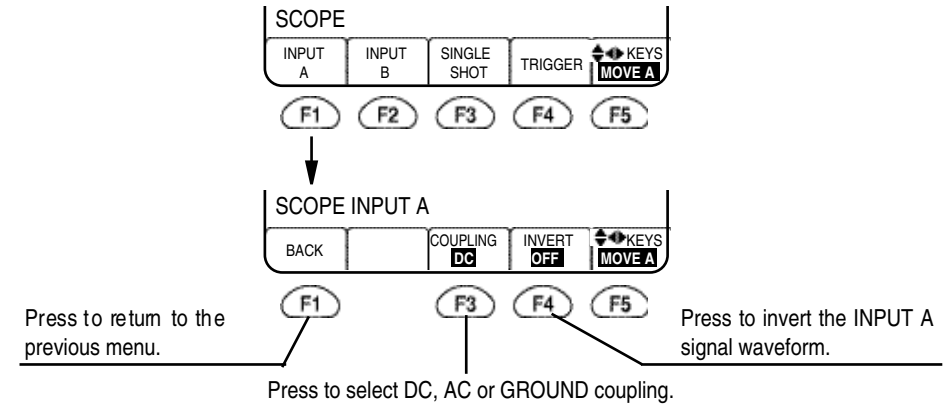

DC Coupling allows you to measure and display both the DC and AC components of a signal. AC Coupling blocks the DC component and passes the AC component only. GND grounds the input of the instrument internally.

## INPUT B Control Functions

When you are in SCOPE, you can control the INPUT B functions as follows:

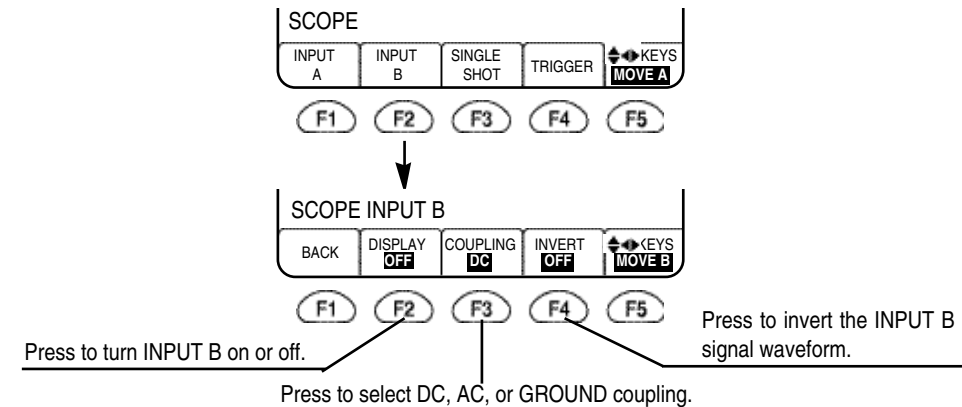


When you entered SINGLE DISPLAY, INPUT B is turned off by default, but you can turn it on by pressing F2.

## Single-Shot Function

Normally the scope mode automatically repeats the measurements to acquire waveforms by the recurrent acquisition mode.

SINGLE-SHOT allows you to perform single acquisition to snap events that occur only once. REPEAT TEST (F3) is used to start a next single acquisition.

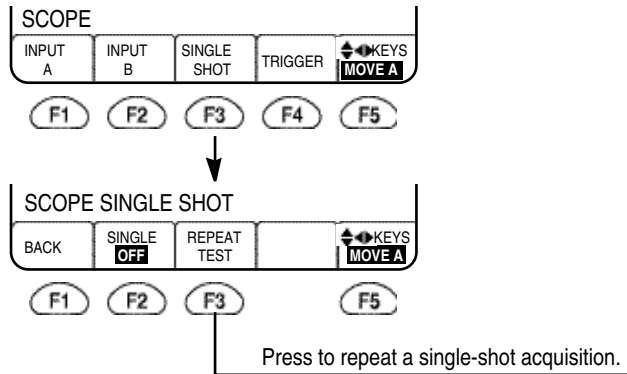


## Trigger Control Functions

TRIGGER is a set of conditions that determine whether and when acquisitions start. The following will determine the trigger conditions:

- Select INPUT A or TRIGGER as the TRIGGER SOURCE input.
- Use AUTO or NORMAL acquisitions.
- Select trigger to occur on a positive or negative SLOPE of the signal.
- SET the trigger LEVEL.

If you change the trigger level, the AUTO RANGE function is turned off.

When you are in SCOPE, you can control the trigger functions as follows:

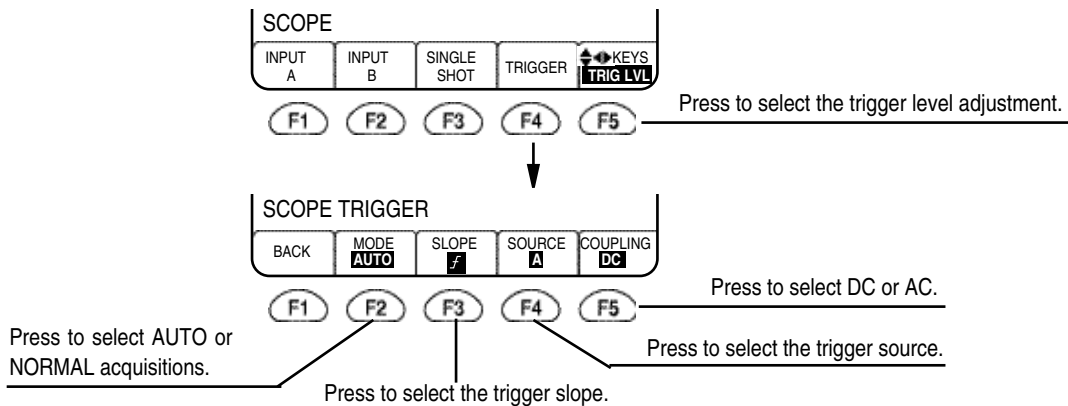

## AUTO versus NORMAL acquisitions

If you select AUTO, the instrument always performs acquisitions, i.e., it always displays the signals on the input. If NORMAL is selected, a trigger is always needed to start an acquisition.

## TRIGGER SLOPE

If you select  $\nearrow$ , trigger occurs at a rising(positive) edge of the signal.

If you select  $\searrow$ , trigger occurs at a falling(negative) edge of the signal.

## TRIGGER SOURCE

If you select TRIGGER SOURCE A (default), acquisitions start when the signal on INPUT A fulfills the selected trigger conditions.

If you select TRIGGER SOURCE TRIG, the previous rule is valid for the signal on the TRIGGER input.

## TRIGGER LEVEL

This function allows you to set the level that the signal must cross to trigger acquisitions.

Normally, after you enter SINGLE or DUAL INPUT SCOPE mode, the AUTO RANGE function automatically sets and maintains an optimal trigger level as the signal changes.

Move the  $\nearrow$  trigger level icon (or  $\searrow$  icon) to the desired level by using  $\uparrow$  and  $\downarrow$  keys.

## HORIZONTAL TRIGGER POSITION (HORIZ TRIG POS)

You can use the INSTRUMENT SETUP menu to set the Horizontal Trigger Position (Horiz Trig Pos) to three different horizontal locations on the display, depending on whether you want to see conditions that led up to the trigger event, or those following it.

- 10 % Trigger located close to left edge of display.
- 50 % Trigger located at center display.
- 90 % Trigger located close to right edge of display.

Use 10 % Trigger to show events which happen after the trigger.

Use 90 % Trigger to show events leading up to the trigger.

## Noise Filter Function

There are cases where you may want to filter out noises in order to see a better signal. This can be especially true when ignition noise is present. The instrument provides a noise filter for each input channel which reduces the bandwidth from its normal 5 MHz to 2 KHz. You can enable or disable CH A Filter or CH B Filter using the INSTRUMENT SETUP menu. When enabled, the FILTER indicator appears on the screen.


## Cursor Key Function

A cursor is a vertical line or a horizontal line placed over the displayed waveform to measure values at certain points. The instrument can measure signal details by using Cursors. This function is not possible for all tests.

Press **CURSOR** to display the Function key Menu for cursor operation.

If cursor operation is not possible for the actual measurement, the instrument beeps to alert you. Two cursors (vertical lines) appear on the display.


The left cursor is named CURSOR 1, the right CURSOR 2.

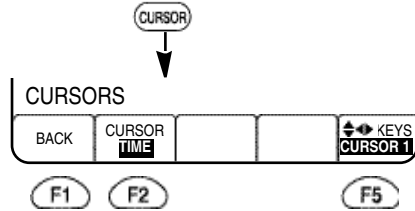


- Press **F2** to set TIME cursor or VOLTS cursor or cursor OFF.
- Press **F5** to select the cursor you want to move (1 or 2).
- Use the Four Way arrow keys to move the cursors.

The top display shows readings related to values at the cursor positions.

For TIME cursors,

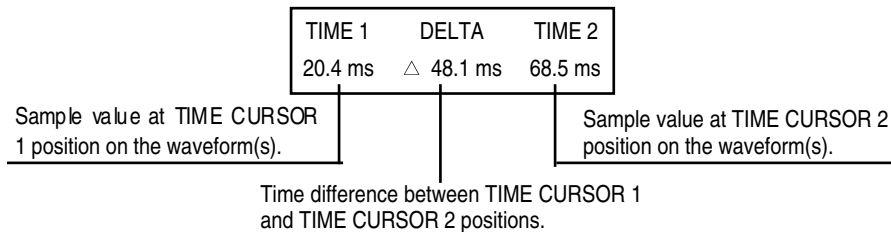

For VOLTS CURSORS,

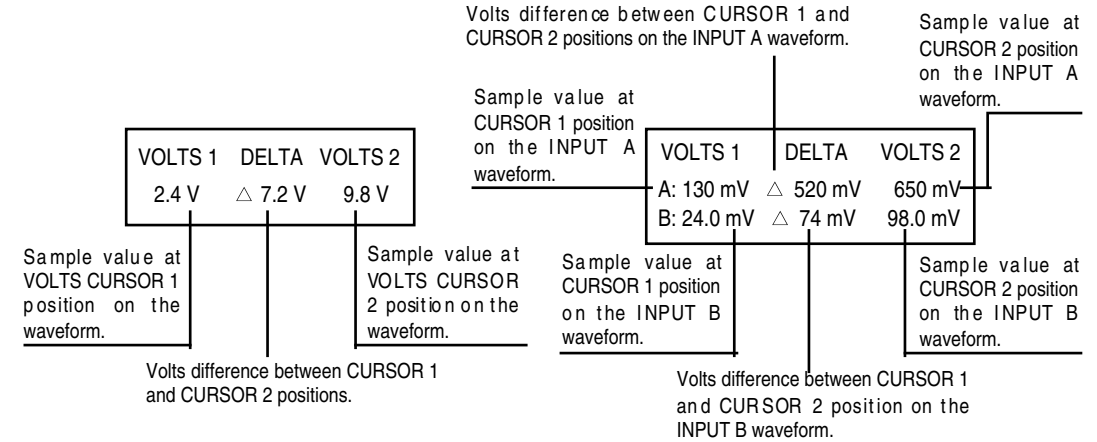

## Reading Test Results on the SCOPE (Component Tests only) Display

Measurement results can be displayed as numeric values (referred to as readings) and waveform. The types of readings depend on the test taking place.

For example, during a O<sub>2</sub>S SENSOR (Zirc) test, MAXIMUM and MINIMUM values are displayed as readings and during a DUAL O<sub>2</sub> SENSOR test MAXIMUM and MINIMUM values of the signals from the oxygen sensor before and after the catalytic converter are displayed as readings. During a DI SECONDARY test, SPARK VOLTAGE, RPM, BURN TIME, and BURN VOLTAGE are displayed as readings.

The values you see on the display most often depend on the vehicle under test. Refer to the Service Manual of the vehicle manufacturer.

In Chapter 6 "Automotive Diagnostics & Applications" you can find typical results of certain applications.

## 5.3 GMM DISPLAYS

The instrument performs cycle by cycle measurements of a variety of signal characteristics in Real Time and plots them as they change with time as a graph. The instrument also performs certain other measurements on a continuous basis, delivering the results for graphing 20 times per second. You can also plot the input signal directly (as in SCOPE mode) by choosing LIVE.

The GMM display includes a meter reading showing the current value of the graphed parameter. This reading is an average over many result values. In some cases, measurements are the maximum or minimum of a series of signal values over the most recent 1 second interval.

The following table shows measurements which can be plotted in GMM displays and the type of graphing and readout.



Code	Measurement	Graphing Type
DC VOLT	DC Average	Continuous
AC VOLT	AC Average	Continuous
AC+DC VOLT	AC+DC Average	Continuous
OHM	Ohms	Continuous
DIODE	Diode drop	Continuous
CONTINUITY	Continuity	Continuous
RPM	RPM	Cycle by Cycle
FREQUENCY	Frequency	Cycle by Cycle
DUTY CYCLE	Duty Cycle	Cycle by Cycle
PULSE WIDTH	Pulse Width	Cycle by Cycle
DWELL	Dwell	Cycle by Cycle
IGNITION PEAK VOLTS	Ignition Peak Volts	Cycle by Cycle
IGNITION BURN VOLTS	Ignition Burn Volts	Cycle by Cycle
IGNITION BURN TIME	Ignition Burn Time	Cycle by Cycle
INJECTOR PEAK VOLTS	Injector Peak Volts	Cycle by Cycle
INJECTOR ON TIME	Injector On Time	Cycle by Cycle
TEMPERATURE	Temperature °C, °F	Continuous
LIVE	Live	Direct input samples

### Vertical and Horizontal Scaling

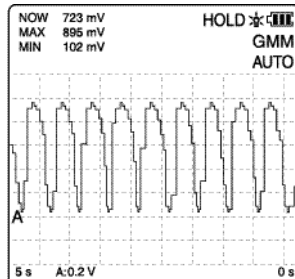


Figure 13. Changing Vertical and Horizontal Ranges


The vertical and horizontal ranges in GMM displays are manually adjustable by using the Four Way arrow keys.

The vertical ranges available in GMM displays vary with the measurement being graphed, and generally cover the possible output range of the measurement.

The time ranges available for GMM displays range from 5 sec. to 24 hrs. per display.

Auto-Power-Off will not occur during the GMM mode, but to graph for periods of 5 min and longer, operate the instrument from external power because operating endurance on internal power is limited to about 4 hours with fresh batteries.

### Using Graphing Multimeter (GMM)

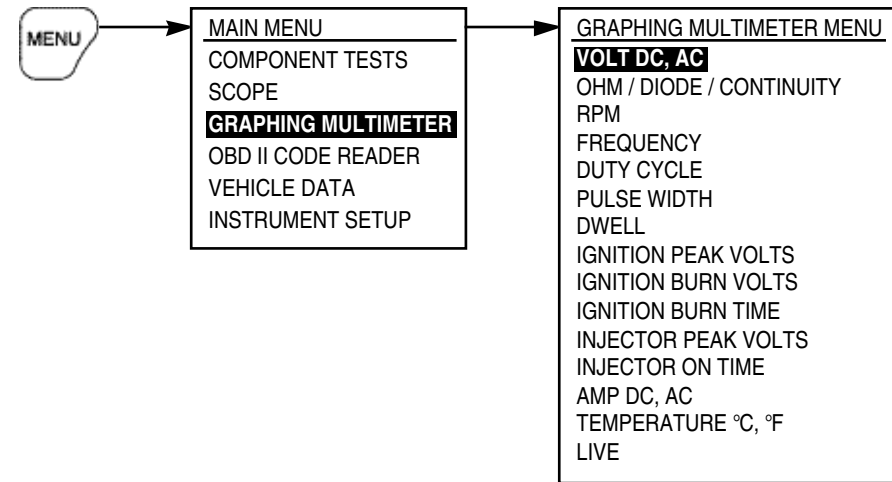


### Making Connections

INPUT A is used for all GMM tests except the RPM measurement. The probes and test leads to be used depend on the type of test performed. When you select certain GMM tests, a connection help screen will guide you by pressing

. This tells you which probe or test lead to use and where to connect it.

### Function Key Labels for Each Test


#### Testing Volt DC, AC

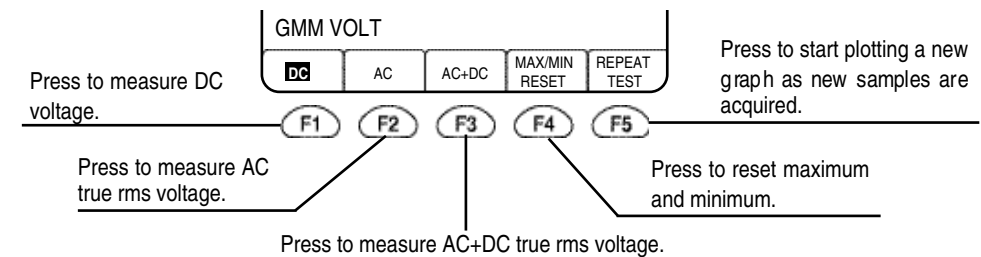

You can stop graphing by pressing HOLD key on the instrument.

## Testing Resistance, Diode, and Continuity

Use this menu option to test resistance, diode forward voltage, and the continuity of wiring and connections. Connect the test lead tip and test lead ground across the object to be tested.

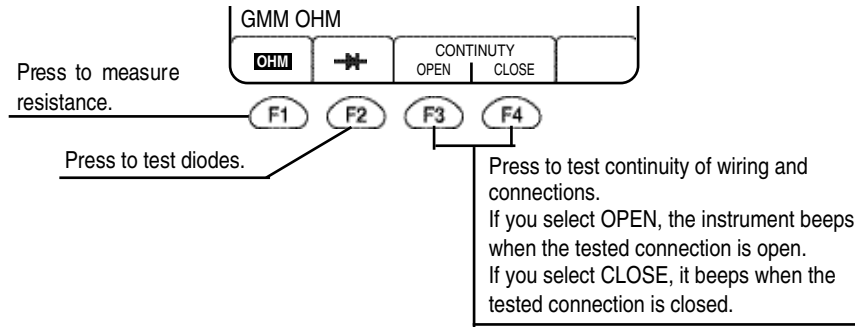


**OFL** is displayed when the resistance is outside the instrument's maximum range. This occurs when the resistance of the sensor is too high or the connection to the sensor is interrupted or open.

To test a diode, the instrument sends a small current through the diode to test the voltage across it. Depending on the type of diode, this voltage should be in the range from 300 to 600 mV. A diode that has an internal short will display about 0 V. **OFL** is displayed when the diode is defective or when it is connected in reverse. If you are not certain about the polarity of the diode, try the reverse connection. If this also displays **OFL**, the diode is defective. A good diode must display **OFL** when connected in reverse.



## Measuring RPM

The instrument automatically scales and displays the waveform on the screen. Connect the Inductive Pickup to the COM/TRIGGER input terminals and clamp the pickup probe on the spark plug wire close to the spark plug.

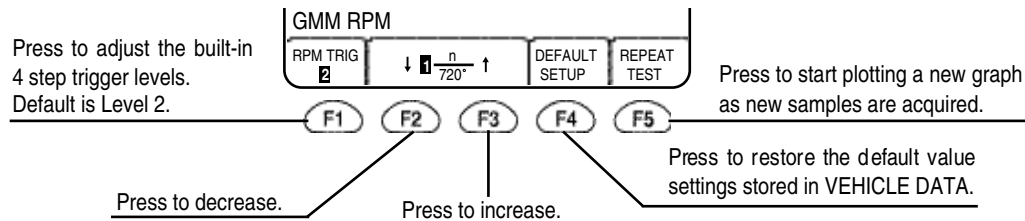

**F2** and **F3** keys are used to set the number of Spark Signal Pulses to the instrument per 720 (two crank shaft revolutions). n = 1, 2, 3, 4, 5, 6, 8, 10, or 12

## Testing Frequency, Duty Cycle, or Pulse Width

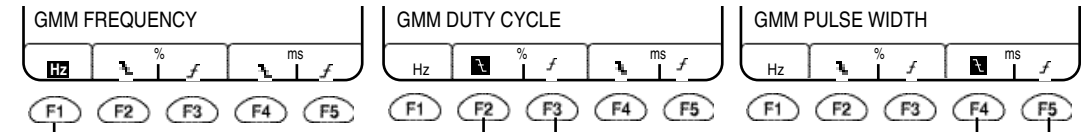
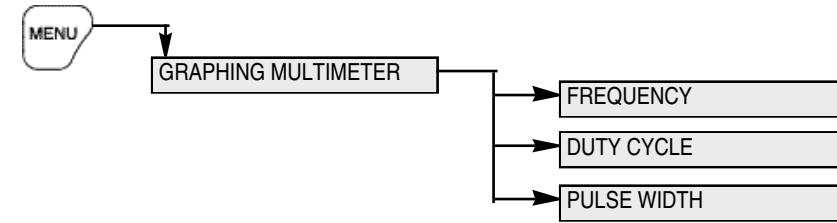


Press to test the signal frequency in Hz.


Press to test the duty cycle of the signal.  
If you select  $\downarrow$ , the duty cycle of the negative-going pulse is displayed.  
If you select  $\uparrow$ , the duty cycle of the positive-going pulse is displayed.

Press to test the pulse width of the signal.  
If you select  $\downarrow$ , the width of the negative-going pulse is displayed.  
If you select  $\uparrow$ , the width of the positive-going pulse is displayed.


## Testing Secondary Ignition Peak Volts, Burn Volts, and Burn Time

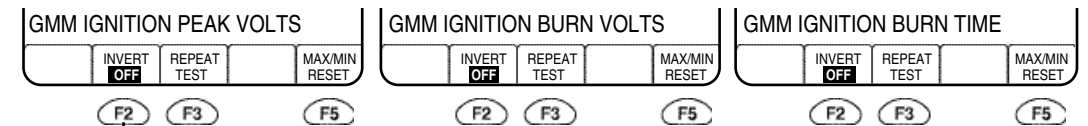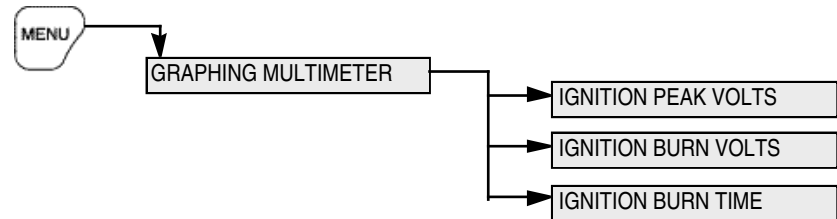

Press to invert the displayed ignition waveform.

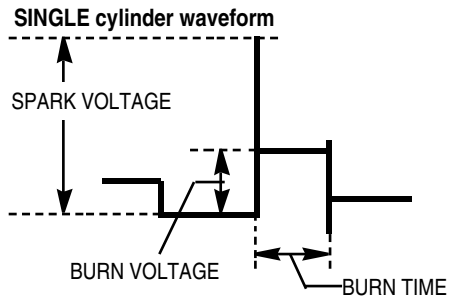


### Testing Injector Peak Volts and On Time

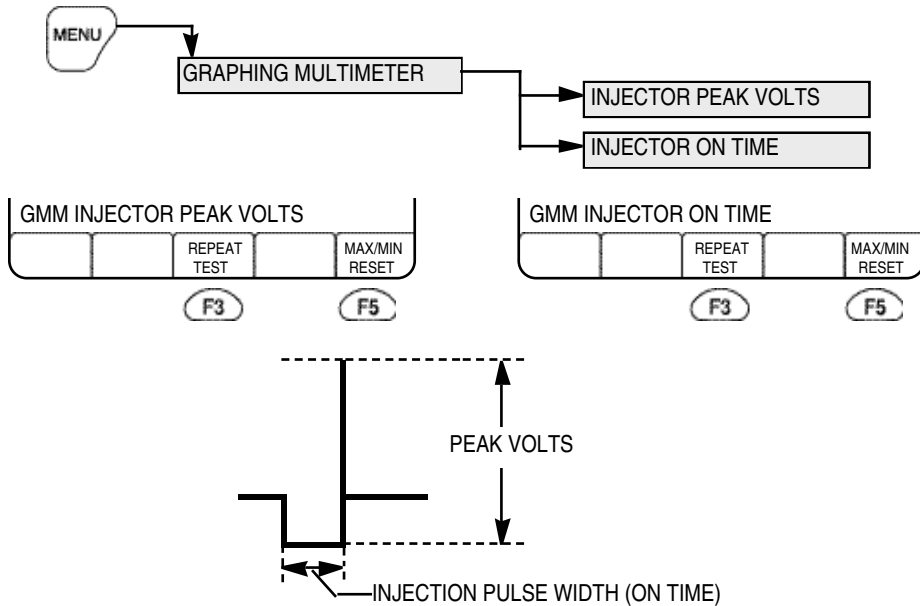


### Testing Dwell

The test is done with the shielded test lead on INPUT A connected to the primary side of the ignition coil.

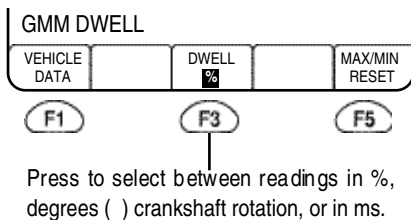

### Testing Current


Use this menu option to test current with a current probe. (optional accessory)

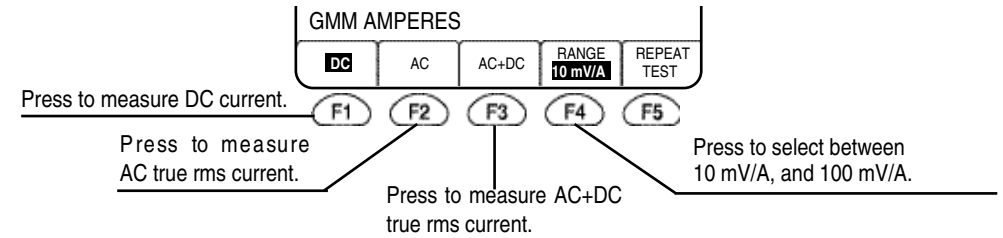

Don't forget to set the Current Probe to zero before using it for measurements.

### Testing Temperature

Use this menu option to test temperature with a temperature probe. (optional accessory)

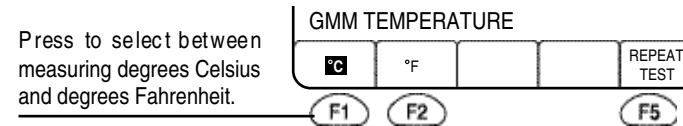

## 5.4 DUAL INPUT SCOPE OPERATION

### Dual Input Scope

Use the scope function if you want to simultaneously measure two waveforms - one on INPUT A and the other on INPUT B.

### Using Single and Dual Input Scope

Use SINGLE INPUT SCOPE if you want to use a single signal, INPUT B is turned off. Use DUAL INPUT SCOPE if you want to simultaneously measure two signals.

## 5.5 CHANGING THE VEHICLE DATA & INSTRUMENT SETUP

There are two groups of setups in the Main Menu.


VEHICLE DATA : Use this menu option to enter the correct vehicle data, such as the number of cylinders or cycles on the vehicle under test.

INSTRUMENT SETUP: Use this menu option to set the following:

- Optimal settings for display.
- Optimal settings for noise filter to each INPUT.
- Auto-Power-Off ON and OFF and adjusting Auto-Power-Off Time.
- Language for menus and help text.
- Scope Calibration

### Changing Vehicle Data

If the vehicle data does not match the vehicle under test you could get incorrect results. Some tests for the vehicle may also not be available through the on-screen functions. Because this menu is very important for the proper use of the instrument, it also appears at power-on as the start-up display.

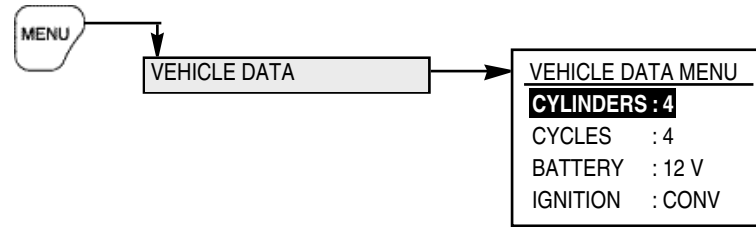


CYLINDERS: 1, 2, 3, 4(default), 5, 6, 8, 10, or 12. Specifies the number of cylinders on the vehicle under test.

CYCLES: 2 or 4(default). Specifies a two-or four-stroke engine.

BATTERY: 12 V (default) or 24 V. Specifies battery voltage.

IGNITION: CONV (default), DIS, or DIESEL.  
Specifies the type of ignition system.  
CONV (conventional) indicates systems using a distributor.  
DIS (or EI) indicates Distributorless Ignition Systems.  
DIESEL indicates ignition systems of Diesel engine.

### Changing Instrument Setup

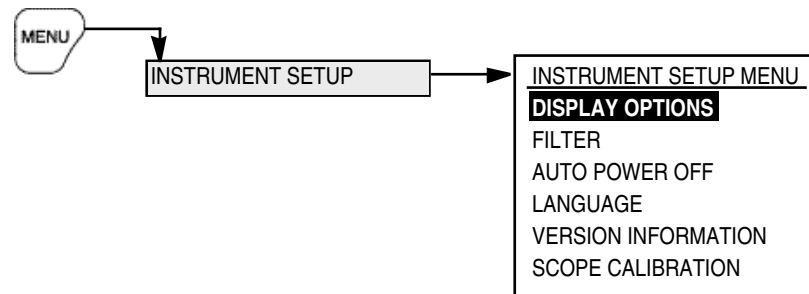

### DISPLAY OPTIONS MENU

USER LAST SETUP: You can change the Power-On display from VEHICLE DATA MENU (default) to the last display having been displayed just before the instrument was turned off.

CONTRAST: This setting, expressed as a percentage, determines the contrast ratio between display text or graphics and the LCD background. 0 % is all white. 100 % is all black. In practice, the percentage will be somewhere between 30 % and 80 %, to have a good readable display.

GRATICULE: Can be set On or Off (default is On). A dot type graticule assists in making visual voltage and timing measurements. The distance between adjacent dots is one division. The graticule also allows you to easily compare wave forms between CH A and CH B and stored waveforms for timing and voltage differences.


HORIZ TRIG POS: Horizontal Trigger Position can be set to three different horizontal locations (10 %, 50 %, or 90 %) on the display, depending on whether you want to see conditions that led up to the trigger event, or those following it.

ACQUIRE MODE: Can be set to Peak Detect mode (default) or Normal mode.

- Peak Detect - This is the default mode to detect glitches and reduces the possibility of aliasing.
- Normal - Use to acquire 480 points and display them at the SEC/DIV setting.

< Key Points >

If you probe a noisy square wave signal that contains intermittent and narrow glitches, the waveform displayed will vary depending on the acquisition mode you choose.

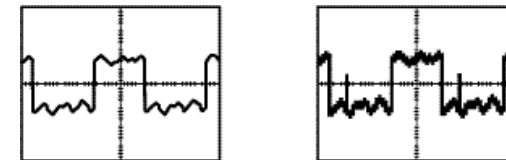


Normal

Peak Detect

The next two topics describe each of the types of acquisition modes and their differences.


**Peak Detect.** Use Peak Detect acquisition mode to detect glitches as narrow as 1  $\mu$ s and to limit the possibility of aliasing. This mode is effective when at 10  $\mu$ s/div or slower.

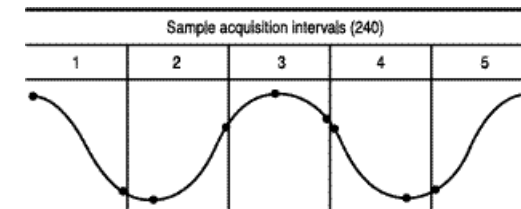

- Sample points displayed

Peak Detect mode displays highest and lowest acquired voltage in each interval.

**Normal.** Use Normal acquisition mode to acquire 480 points and display them at the SEC/DIV setting.

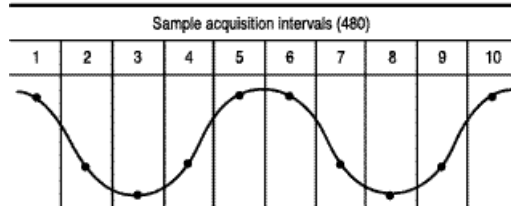

- Sample points  
Normal mode acquires a single sample point in each interval.

The maximum sample rate is 25 MS/s. At 10  $\mu$ s and faster settings, this sample rate does not acquire 480 points. In this case, a Digital Signal Processor interpolates points between the sampled points to make a full 480 point waveform record.

**FILTER MENU:** Can be set On or Off (default is Off) for each INPUT.

- Off - Passes all signal components up to 5 MHz.
- On - Passes signal components up to 2 KHz.

Turn on this option to reduce noises in scope displays and measurements.

**AUTO POWER OFF MENU**

**AUTO POWER OFF:** You can adjust the Auto-Power-Off time between 5 minutes and 120 minutes.

**LANGUAGE MENU**

**LANGUAGE:** This setting is used to select the local language or English for the information text display. This option is not available if only one language is implemented.

**VERSION INFORMATION MENU**

**VERSION INFORMATION:** You can see the version number of current software.

**SCOPE CALIBRATION MENU**

**SCOPE CALIBRATION:** This setting is used to minutely calibrate the scope under the following operating environments.

- When measuring in extremely hot or cold places.
- When the inner temperature of the scope was increased very greatly due to its long operation.

Press **F5** when SCOPE CALIBRATION is highlighted to activate this setting.

**5.6 FREEZING, SAVING, AND RECALLING SCREENS**


**Hold Mode**

The HOLD key enables you to freeze the current display. This makes it possible to examine occasional waveform anomalies and to stop the GMM mode at the end of a manual sweep test.

The instrument provides four memory locations to which you can save the current screen along with its setup in the Scope, GMM, Component Test, and Glitch Snare modes.

Press HOLD ( **HOLD** ) to freeze the current display and show the Function Key Menu to save, recall, or to clear the memory. HOLD indicator appears in the top right of the display when the HOLD key is pressed.

In each (Scope, GMM, Component Test, or Glitch Snare) mode, the operation sequency of the SAVE, RECALL, and CLEAR function is as follows:

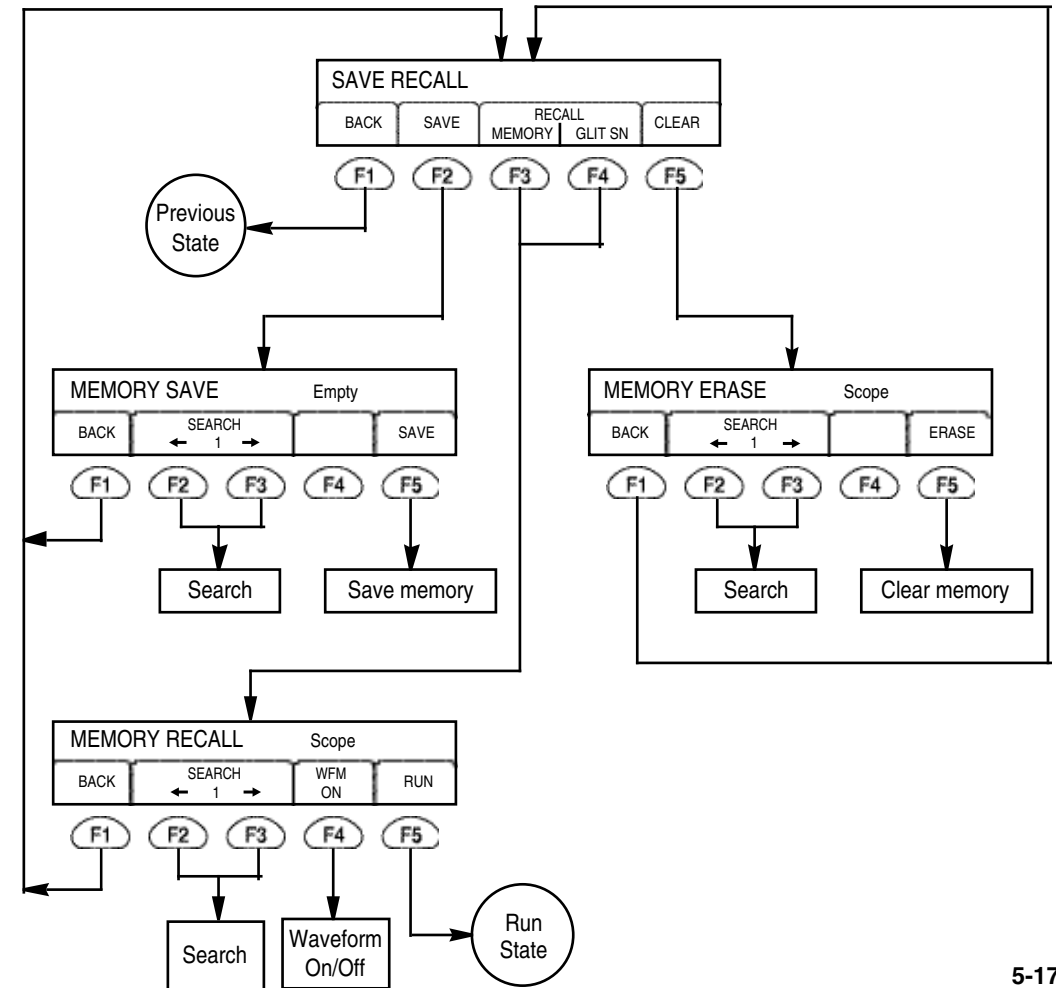

## 5.7 GLITCH SNARE OPERATION

Glitch Snare is a powerful combination of capabilities that enable you to reliably capture and display actual signal waveforms associated with elusive and unusual signals.

Glitch Snare combines real-time measurements with specially designed scope trigger facilities, monitoring measurement results on an event by event basis and triggering on any result which deviates above or below the norm by more than a present limit. The input signal is captured at the moment when a trigger event occurs.

Imagine the frequency graph from an ABS sensor with an occasional dropout due to an intermittent short in the cable. As the wheel spins, the frequency output is stable until it briefly drops out due to the short. A graph of the frequency shows a stable value until the short occurs. At that instant the graph shows a sharp spike downward indicating that the frequency went to zero. Now imagine being able to set "trigger thresholds" above and below the stable frequency value shown on the graph so that when the downward spike on the graph occurs, a trigger event is generated. This is the essence of Glitch Snare operation.

When Ordinary scopes try to detect dropouts and other sudden changes in continuous AC signals, the majority of the signal is ignored because these instruments only display new waveforms at the rate of a few per second. Therefore, it is not easy for them to capture and display the occasional glitch or dropout. If an interesting event does happen to be captured it is soon overwritten with the next normal event, making detailed examination impossible.

The Glitch Snare operation triggers only on abnormal signal conditions, which virtually guarantees you'll catch the first event to come along. The captured signal waveform remains displayed in the Glitch Snare display for you to examine until it is overwritten by the next unusual event.



What's more, by enabling the Auto Save option, each new event to be detected is automatically saved to Memory 1 to Memory 4. By setting the Auto Save option, you can automatically fill up all four memories with the four most recent unusual events.

Best of all, Glitch Snare operation is completely automatic. Trigger thresholds are calculated automatically based on recent signal history. The measurement used as a basis for Glitch Snare operation is Period by default. Certain COMPONENT TESTS use other measurements, and some tests disable Glitch Snare when it is inappropriate.

Glitch Snare is most useful with continuous AC or digital signals where the information is embedded in the signal's frequency, pulse width or duty factor.

To enable Glitch Snare operation, press the Glitch Snare function key in the Scope mode of the COMPONENT TESTS. If Glitch Snare is available for the current test, the instrument will display the Glitch Snare display in a line along with a conventional scope display in a solid line for comparison. Vertical and horizontal settings for both displays are matched.

For example,

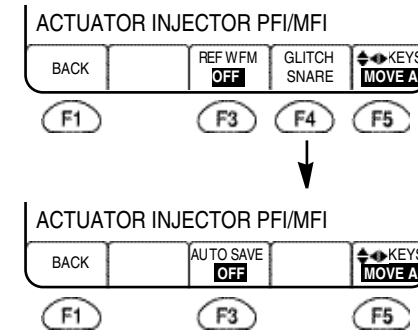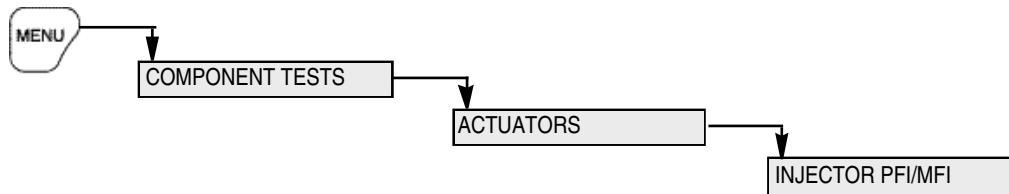

## 5.8 TIPS FOR NOISE MANAGEMENT

The instrument is very sensitive to spikes and other noise pulses which may be present on automotive signals. While this capability can be valuable when tracking down glitch related problems, it can also obscure the signal you really want to see in DC circuits such as power distribution.

If noise is obscuring the signals you want to see, try the following tips:

### Using the Internal Battery Power

In general, noise pickup is minimized when you use this instrument on its internal battery power. Using the standard Shielded Test Leads supplied will help in noise rejection.

### Noise Filter

Turn on the Filter (INSTRUMENT SETUP menu) for the input channel you are using. This blocks frequencies above 2 kHz and should reduce ignition impulse noises and other noises of the short spike variety.

### Ground Connections

Many sensor output signals are "single ended", meaning that a single output pin delivers the signal to the PCM in comparison to a ground pin located on the sensor. In order for the signal to be accurately delivered to the PCM both the ground and signal portions of the circuit must be properly connected. If a sensor output signal at the PCM appears erratic, or its level is incorrect, next check the signal level at the sensor (both signal and ground). If the signal is correct at the sensor then the problem is in the wiring harness between the sensor and PCM. The next step would be to check for voltage drops in both the signal and ground path between the sensor and PCM.

 
Never trust that a chassis ground connection is the same as the PCM or the sensor ground. The ground continuity can be disrupted by a missing strap or loose fastener. These will appear as a voltage level between two points you expect to both be at the ground level.

## 5.9 OBD II CODE READER MODE

If you are having problems with your vehicle and only want to know if any Diagnostic Trouble Codes are present in the vehicle's computer system, use this instrument as an OBDII Code Reader in order to retrieve the codes. The codes retrieved, and their definitions, will give you valuable information and a starting point from which to proceed to the next step. Once the codes have been retrieved, you can diagnosis the particular problem area in depth using SCOPE or GMM mode of this instrument or vice versa.

This instrument works as a simple OBD II Code Reader when entering into the Code Reader mode by using the MAIN MENU.

### Using OBD II Code Reader Mode




### Making Connections

Connect the instrument to the vehicle's sixteen-pin DLC (Data Link Connector) using the standard OBDII cable supplied. The DLC usually located under the dash (instrument panel), within 12 inches (300 mm) of center of the panel, on the driver side of most vehicles. It is easily accessible and visible from a kneeling position outside the vehicle with the door open.

#### NOTE

*If the DLC cannot be located, consult the vehicle's service manual for the location.*

### Function Key Labels

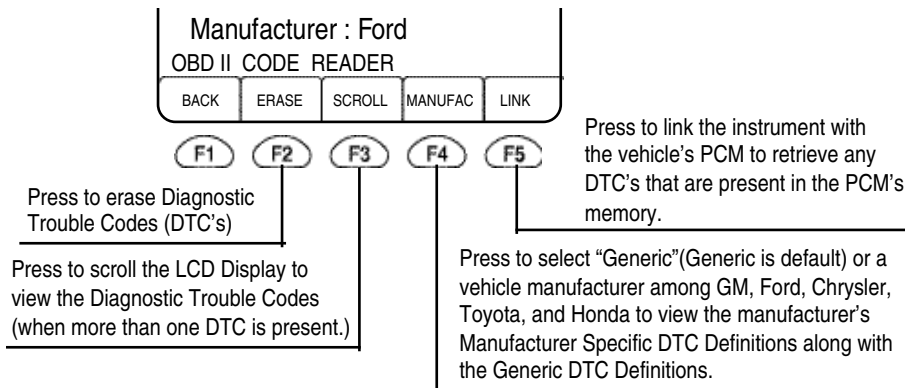

### Vehicles Covered

- The OBDII Code Reader mode is designed to work on all OBD II compliant vehicles. All 1996 and newer vehicles (cars and light trucks) sold in the States are OBDII compliant by **Federal Law**; this includes all Domestic, Asian, and European vehicles.
- Some 1994 and 1995 vehicles are OBD II compliant. You can check this through the Vehicle Emissions Control Information (VECI) label located under the hood or by the radiator of most vehicles. If the vehicle is OBD II compliant, the label will state "**OBD II Certified**". You can also check this to see that the vehicle has a "common" sixteen-pin Data Link Connector (DLC) because the U.S. Government Regulations require that all OBD II compliant vehicles must have a DLC.

### Diagnostic Trouble Codes (DTC's)

Diagnostic Trouble Codes are codes that identify a particular problem area and are intended as a guide to the proper service procedure described in the vehicle's service manual.


#### NOTE

*Do not replace parts or components based only on DTC's without first consulting the vehicle's service manual for proper testing procedures for that particular system, circuit, or component. Utilizing DTC's is only one part of all overall diagnostic strategies.*

*Each DTC has a set of testing procedures, instructions, and flow charts that must be followed to confirm the exact location of the problem. This type of information is found in the vehicle's service manual.*

### • OBD II DTC Example


(P0231 - Fuel Pump Secondary Circuit Low)

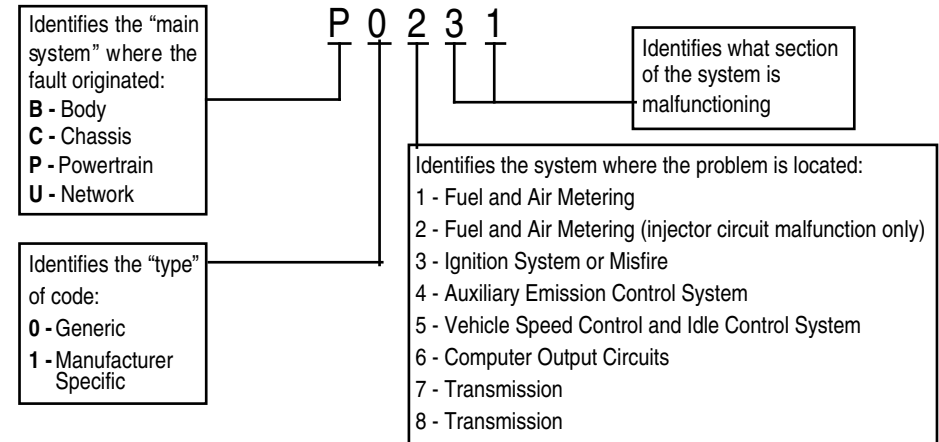

## • DTC Retrieval Procedure

### NOTE

*Fix any known mechanical problems before performing any test. Loose or damaged hoses, wiring or electrical connectors may, in some instances, cause a "false" fault code.*

1. Turn the ignition off.
2. Connect the standard OBD II cable connector to the vehicle's DLC.  
The cable connector is keyed and will only fit one way.
3. Turn the instrument on and select the OBD II Code Reader mode.  
The Vehicle icon  should display at this time to acknowledge a good power connection. If the icon is not displayed, recheck the cable connection.
4. Turn the ignition on. **Do not** start the engine.
5. Press the LINK function key. The LCD will display "READ".  
After 4–5 seconds, the instrument will display any DTC's that are in the vehicle's computer memory and their Definitions.
  - If no codes are present in the vehicle's computer memory, a "0" will be displayed. The instrument is capable of retrieving and holding in memory up to 32 codes, for immediate or later viewing.
  - The instrument will automatically relink to the vehicle's computer every 15 seconds to refresh the data being retrieved. When data is being refreshed, a single beep will sound, and "READ" will be shown on the LCD display for approximately 5–6 seconds. The instrument will keep repeating as long as the instrument is in communication with the vehicle's computer.
  - If the code retrieved is a pending code, the PENDING icon will show on the LCD display, but its Definition will not show on the LCD display.
6. To view additional DTC's (if more than one code is present), press the SCROLL key, as necessary, until all the codes have been displayed.
  - Whenever the SCROLL function is used, the communication link with the vehicle's computer disconnects. To reestablish communication, press the LINK key again.

### NOTE

*If the instrument is relinked to a vehicle to retrieve codes, any prior codes in its memory are automatically cleared.*

## • Erasing DTC's

### NOTE

*When the ERASE function is used to erase the DTC's from the vehicle's computer, "Freeze Frame" data and manufacturer specific enhanced data are also erased.  
If you plan to bring the vehicle to a repair shop, **do not** erase the codes.*

1. Press the ERASE key. The LCD display will indicate "SURE" for your confirmation.
2. If you do not wish to continue erasing the codes, press the LINK key to return to the code retrieval function.

3. If you wish to continue erasing codes from the vehicle's computer, press the ERASE key.  
When "DONE" appears, all retrieval information, including DTC's, has been cleared from the vehicle's computer memory.

## DTC Definitions

The instrument will show both Generic Diagnostic Trouble Code Definitions and Manufacturer Specific Diagnostic Trouble Code Definitions for the following vehicles along with the Codes.

- OBD II Powertrain "GENERIC (P0XXX)" Diagnostic Trouble Codes: OBDII Generic DTC's and their definitions apply to all makes and models of import and domestic vehicles that are OBD II COMPLIANT.
- OBD II Powertrain "MANUFACTURER SPECIFIC (P1XXX)" Diagnostic Trouble Codes: OBD II Manufacturer Specific DTC's and their definitions apply only to vehicles produced by the specific manufacturers (GM, Ford, Chrysler, Toyota, and Honda).

### NOTE

*OBD II is an evolving system so new codes and their definitions will be added as the system matures. Always consult the vehicle's service manual for code definitions not provided by this instrument.  
For Manufacturer Specific Code Definitions not provided by this instrument and/or Body, Chassis, and Network DTC definitions, consult the vehicle service manual.*



### OBD II System Objectives

The Main Objectives of the OBD II System are:

- To detect the degradation and/or failure of an emissions-related component or system that could cause emissions to exceed by 1.5 times the Federal Test Procedure (FTP) standard.
- To expand monitoring of the emissions-related system. This includes a set of computer run diagnostics called **Monitors**.  
Monitors perform diagnostics and testing to verify that all emissions-related components and/or systems are operating correctly within the manufacturer's specifications.
- To equip a Diagnostic Link Connector (DLC) that is common (the same shape and size) for all vehicles.
- To have all vehicle manufacturers utilize a common code number, code definition, and language to describe a particular fault. Before OBD II, each vehicle manufacturer used their own code number, code definition, and language to describe the same fault.
- To expand the operation of the Malfunction Indicator Lamp (MIL).

**NOTE:** In the past, the MIL has been referred to as a "Check Engine" or "Service Engine Soon" light.

- To have standardization of communication procedures and protocols between the diagnostic equipment (Scan Tools, Code Readers, etc.) and the vehicle's on-board computer.

### OBD II Terminology

#### • PCM(Powertrain Control Module)

The PCM is the OBD II accepted term for the vehicle's "on-board computer". The PCM controls the engine management and emissions systems as well as plays an active role in controlling the powertrain(transmission) operation. Most PCM's have the ability to communicate with other vehicle computers.

#### • Monitor

Monitors are a set of "diagnostic strategies(instructions)" programmed into the PCM. The PCM executes these special programs to run diagnostic tests and to monitor the operation of the vehicle's emissions-related components or systems in order to ensure they are operating correctly within the vehicle's manufacturer specifications. Currently, there are eleven OBD II Monitors defined and required by the Environmental Protection Agency (EPA), but **Not all Monitors are supported by all vehicles.**

#### • Monitor Has/Has Not Run

The terms "Monitor has run" or "Monitor has not run" are used in this manual. "Monitor has run" means the PCM has executed a particular Monitor to perform the required diagnostic testing on a system to ensure the system is operating correctly within factory specifications. "Monitor has not run" means the PCM has not yet executed that particular Monitor to perform diagnostic testing on its associated part of the emissions system.

#### • Enabling Criteria

Each Monitor is specifically designed to monitor the operation as well as to run diagnostic tests on a specific part of the vehicle's emissions system (such as EGR system, oxygen sensor, catalytic converter, etc.). "Enabling Criteria (a set of conditions or driving procedures)" are required before the vehicle's computer (PCM) can command a Monitor to run the diagnostic tests on a particular part of the emissions system. The Enabling Criteria vary for each Monitor.

For example, some Monitors only require the ignition key to be turned "on", but others might require a set of complex procedures, such as starting the vehicle when cold, bringing it to operating temperature, then driving the vehicle under specific conditions (accelerating, cruising, decelerating, etc.) before the Monitor can run and complete its diagnostic testing on its associated part of the emissions system.

#### • Trip or Trip Drive Cycle

A "Trip" for a particular Monitor is a drive cycle where the vehicle is driven in such a way that all the Enabling Criteria for that Monitor are met. The "Trip" or "Trip Drive Cycle" for a particular Monitor begins when the ignition key is turned "on" and it is considered to have successfully completed when all the Enabling Criteria for that particular Monitor were met by the time when the ignition key is turned "off". The "Trip Drive Cycle" for each individual Monitor will vary since each Monitor is designed for a different part of the engine or emissions system.

#### • OBD II Drive Cycle

An OBD II Drive Cycle is an extended set of driving procedures considering the various types of driving conditions encountered in real life such as starting the vehicle when it is cold, cruising, accelerating, decelerating, etc.. An OBD II Drive Cycle begins when the vehicle is first turned on (when cold) and ends when the vehicle has been driven in such a way as to have all the Enabling Criteria met for all its applicable Monitors.

Not all driving trips qualify as an OBD II Drive Cycle. Only those trips, that provide the Enabling Criteria for all Monitors applicable to the vehicle, qualify as an OBD II Drive Cycle.

OBD II Drive Cycle requirements and procedures for all Monitors vary from one model of vehicle to another. Vehicle manufacturers set these procedures.

#### • Warm-up Cycle

A Warm-up Cycle is defined as vehicle operation (after an engine off period) where the engine temperature rises from 40 °F (22 °C) to 160 °F (70 °C) after the vehicle was first started.

The PCM uses warm-up cycles as a counter to automatically erase a specific code and pertinent data from its memory when no faults (specific to the original problem) are detected within a specified number of warm-up cycles.

### DTC's and MIL Status

When the PCM detects a failure on an emissions-related component or system, OBD II regulations require that the PCM's diagnostic program assign a DTC that identifies the system or the part of the system where the fault was detected. The diagnostic program is also required to store the code in the computer's memory, to record a "Freeze Frame" of conditions present when the fault was detected, and to command the MIL "on" (some faults require detection for two consecutive "trips" before the MIL is turned on).

There are two categories of DTC's utilized for emissions-related faults: Type A and Type B. Type A codes are One Trip DTC's; Type B codes are usually Two Trip DTC's.

When a Type A DTC is detected on the First trip, the following events take place:

- The computer activates or commands the MIL “on” immediately when the failure is first detected.
- If the detected failure causes a severe misfire that may cause damage to the catalytic converter, the MIL will “flash” once per second and will continue flashing as long as the severe misfire exists. If the condition that could cause the damage is no longer present, the MIL will revert to a “steady on” condition.
- A DTC is saved in the computer’s memory for later retrieval.
- A “Freeze Frame (Snap Shot)” of the conditions present in the engine or emissions system at the instant the MIL was commanded “on” is recorded and saved in the computer’s memory for later retrieval. This information shows fuel system status (closed loop or open loop), engine load, coolant temperature, fuel trim value, MAP vacuum, engine RPM, and DTC Priority.

When a Type B DTC is detected on the First Trip, the following events take place:

- The computer sets a “Pending” DTC, but the MIL is not commanded “on” at this time, and no “Freeze Frame” data is recorded. The Pending DTC is stored in the computer’s memory for later retrieval.
- If the failure is detected on the second consecutive trip, the MIL is commanded “on” and “Freeze Frame” data is recorded and stored in the computer’s memory.
- If the failure is no longer detected on the second consecutive Trip, the Pending DTC is erased from the computer’s memory.

The MIL will stay lighted on Type A and Type B codes until one of the following conditions occurs:

- If the conditions that caused the MIL to illuminate are no longer present for the **next three consecutive trips**, the PCM will automatically command to turn the MIL “off” (if no other emissions-related faults are present). However, the DTC’s will stay in the computer’s memory for 40 warm-up cycles (80 warm-up cycles for fuel and misfire faults) and will automatically erase if the associated specific fault is not detected again during that period of time.
- Misfire and fuel system faults require three “similar conditions” Trips before the MIL is turned “off”. “Similar Conditions” Trips are trips where the engine load, RPM, and temperature are similar to the conditions present when the fault was first detected.

**NOTE:** Freeze Frame data and manufacturer specific enhanced data (besides the DTC’s) also stay in the computer’s memory after the MIL has been turned “off”. These data can only be retrieved by more sophisticated testing equipment such as an **OBD II Scan Tool**.

- Erasing the DTC’s from the computer’s memory can also turn the MIL off. If a Code Reader or a Scan Tool is used to erase the DTC’s, Freeze Frame data as well as other manufacturer specific enhanced data will also be erased.

## OBD II Monitors

To verify the correct operation of the various emissions-related components and systems, a diagnostic program (containing several procedures and diagnostic strategies) was designed and installed in the on-board computer. Each program is developed to monitor the operation of, and run Diagnostic Tests on, a specific emissions-related component or system to ensure the system is operating correctly within the manufacturer’s specifications. On OBD II systems, these procedures and diagnostic strategies are called “Monitors”.

Currently, there are eleven OBD II Monitors defined and required by the U.S. Environmental Protection Agency (EPA), but **not all monitors are supported by all vehicles**. Monitor operation is either “continuous” or “non-continuous” depending upon the specific monitor.

### Continuous Monitors

Three Monitors are designed to continuously monitor their associated components and/or systems for proper operation. Continuous Monitors run continuously when the engine is in operation.

The continuous Monitors are:

- Comprehensive Component Monitor (CCM)
- Misfire Monitor
- Fuel System Monitor

### Non-Continuous Monitors

The other eight Monitors are Non-Continuous Monitors. They perform and complete their Diagnostic Testing once per trip.

The Non-Continuous Monitors are:

- Oxygen Sensor Monitor
- Oxygen Sensor Heater Monitor
- Catalyst Monitor
- Heated Catalyst Monitor
- EGR System Monitor
- EVAP System Monitor
- Secondary Air System Monitor
- Air Conditioning (A/C) Monitor

## OBD II Monitors Table

The current OBD II Monitors are listed in the table below.

MONITOR	A	B	C	D	E	F
Comprehensive Component Monitor	continuous	1	2	1	3 similar conditions	40
Misfire Monitor (Type 1 & 3)	continuous	1	2	1	3 similar conditions	80
Misfire Monitor (Type 2)	continuous		1		3 similar conditions	80
Fuel System Monitor	continuous	1	1 or 2	1	3 similar conditions	80
Catalytic Converter Monitor	once per trip	1	2	1	3 trips	40
Oxygen Sensor Monitor	once per trip	1	2	1	3 trips	40
Oxygen Sensor Heater Monitor	once per trip	1	2	1	3 trips	40
Exhaust Gas Recirculation Monitor	once per trip	1	2	1	3 trips	40
Evaporative Emissions Controls Monitor	once per trip	1	2	1	3 trips	40
Secondary Air System Monitor	once per trip	1	2	1	3 trips	40

Remarks:

- A - Monitor Type (how often does the Monitor run; Continuous or Once per trip)
- B - Number of trips needed, with a fault present, to set a Pending DTC
- C - Number of consecutive trips needed, with a fault present, to command the MIL "on" and store a DTC
- D - Number of trips needed, with no fault present, to erase a Pending DTC
- E - Number and type of trips or drive cycles needed, with no fault present, to turn the MIL off.
- F - Number of warm-up periods needed to erase the DTC from the computers memory after the MIL is turned off

### Inspection and Maintenance (I/M)

- I/M is an Inspection and Maintenance program legislated by the Government to meet federal clean-air standards.
- The program requires that a vehicle to be taken periodically to an Emissions Station for an "Emissions Test" or "Smog Check", where the emissions-related components and systems are inspected and tested for proper operation.

### Enhanced I/M

On OBD II systems, the I/M program is enhanced by requiring vehicles to meet stricter test standards. One of the tests instituted by the Federal Government is called I/M 240. On I/M 240, the vehicle under test is driven under different speeds and load conditions on a dynamometer for 240 seconds, while the vehicle's emissions are measured.

**NOTE:** Emissions tests vary depending upon the geographic or regional area in which the vehicle is registered. If the vehicle is registered in a highly urbanized area, the I/M 240 is probably the type of test required. If the vehicle is registered in a rural area, then a basic no-load test will probably be required.

### I/M Readiness Monitors

I/M Readiness indicates whether or not the various emissions-related systems on the vehicle are operating properly and are ready for Inspection and Maintenance testing.

State and Federal Governments enacted Regulations, Procedures, and Emission Standards to ensure that all emissions-related components and systems are constantly or periodically monitored, tested, and diagnosed whenever the vehicle is in operation. They also requires vehicle manufacturers to automatically detect and report any problems or faults that may increase the vehicle's emissions to an unacceptable level.

To comply with State and Federal Government regulations, vehicle manufacturers designed a series of special computer programs called "Monitors" which are programmed in the vehicle's computer. Each of these Monitors is specifically designed to constantly or periodically run tests and diagnostics on a specific emissions-related component or system to ensure their proper operation.

Each Monitor has a specific function to test and diagnose only its designated emissions-related component or system. The names of the Monitors describe which component or system each Monitor is designated to test and diagnose.

### Retrieving I/M Readiness Monitor Status Information

The I/M Readiness Monitor Status indicates which of the vehicle's Monitors have run and completed their diagnosis and testing and which ones have not yet run and completed testing and diagnosis of their designated sections of the vehicle's emissions system.

- It is very important to know the Monitor status. For example, the Oxygen Sensor Monitor must perform its diagnosis and testing before the working status of the oxygen sensor is known. The Oxygen Sensor Monitor activates the oxygen sensor to monitor its function. If the function is within specifications, no further action is taken. If a fault is detected, the Monitor reports it by generating DTC(s) and illuminating the MIL on the dashboard.
- When a vehicle first comes from the factory, all the Monitors will indicate a **DONE** status, which means that all Monitors have run and completed their diagnostic testing. The **DONE** status will remain in the computer's memory indefinitely unless the DTC's are erased or the vehicle's computer memory is cleared.

### Using the I/M Readiness Monitor Status to Confirm a Repair

The Monitor Status function can be used (after a fault has been repaired) to confirm that the repair has been done correctly and/or to check for the Monitor RUN status.

1. Using retrieved DTC(s) and code definitions, repair the fault or faults following manufacturer's repair procedures.

## 6. AUTOMOTIVE DIAGNOSTICS & APPLICATIONS

### 6.1 COMPONENT TESTS

#### Preset Operation

The instrument provides predefined setups for a variety of vehicle sensors and circuits. To choose a preset test, select COMPONENT TESTS from the MAIN MENU. From the resulting menu, select a test group:

- SENSORS
- ACTUATORS
- ELECTRICAL
- IGNITION

Then select a specific test from those listed. Each test places the instrument in a configuration best suited to display signals for the chosen device or circuit. Once a test has been selected you can obtain some useful reference information specific to that test by pressing the HELP key as previously described.

In some cases there are more than one test for a particular device. If you are not sure which test to use, the descriptions to the tests in the following sections would help you decide.

When you want to test a device for which no test is provided, choose a test for a similar device. For example, to test a temperature sensor not listed, try the Fuel Temp Sensor test. Or choose SCOPE from the MAIN MENU and configure the instrument manually as needed.

After you chose a preset test, you may change most instrument settings as needed to get a better look at the signal. You can even change the display type between SCOPE mode and GMM mode.

2. After the fault or faults have been repaired, connect the Instrument (in Code Reader mode) to the vehicle's DLC to erase the code or codes from the vehicle's computer memory. (Write the codes down on a piece of paper for reference before erasing them.)

3. After erasing the codes, most of the Monitor icons on the Instrument's LCD will be flashing. Leave the Instrument connected to the vehicle and perform a Trip Drive Cycle for each "flashing" Monitor.

**NOTE: Continuous Monitors** (Misfire, Fuel, and Comprehensive Component Monitors) run continuously and their icons will always be on solid, even after the erase function is performed.

■ Each DTC is associated with a specific Monitor. (Consult the vehicle's service manual to identify the Monitor (or Monitors) associated with the faults that were repaired. Follow the manufacturer's procedures to perform a Trip Drive Cycle for the appropriate Monitors.

■ Perform a Trip Drive Cycle for the appropriate Monitor or Monitors, while observing the Monitor icons on the Instrument's LCD.

**WARNING : When performing a Trip Drive Cycle, ALWAYS have a second person help you. Trying to drive and observe the Instrument's LCD at the same time is dangerous and could cause a serious traffic accident.**

4. When a Monitor's Trip Drive Cycle is performed properly, the Monitor icon will change from a "flashing" to a "solid" condition, indicating that the Monitor has run and completed its diagnostic testing.

After the Monitor has run,

■ If the MIL on the vehicle's dash is not illuminated and no codes associated with that particular Monitor are present in the vehicle's computer, the repair was successful.

■ If the MIL on the dash illuminates and/or a DTC associated with that Monitor is present in the computer, the repair was unsuccessful. Consult the vehicle's service manual and recheck the repair procedures.


#### Retrieving I/M Readiness Monitor Status

If the Instrument is being used to retrieve I/M Readiness Monitor Status, follow the DTC retrieval procedures.

- If a Monitor icon on the Instrument's LCD is on **Solid**, it indicates the associated Monitor has run and completed its diagnostic testing.
- If a Monitor icon is **Flashing**, it indicates the associated Monitor has not yet run and completed its diagnostic testing.
- If all the Monitor icons are **Solid** and **DONE** is also displayed on the LCD, it indicates that all the Monitors that are applicable to the vehicle under test have run and completed their diagnostic testing and the I/M Monitor Readiness is completed.

**NOTE:** When DTC's are erased from the vehicle's computer memory, the I/M Readiness Monitor Status program resets status of all the Monitors to a not run ("flashing") condition. To set all of the Monitors to a DONE status, an OBD II Drive Cycle must be performed. Consult your vehicle's service manual for information on how to perform an OBD II Drive Cycle for the vehicle under test.

### 6.2 SENSOR TESTS

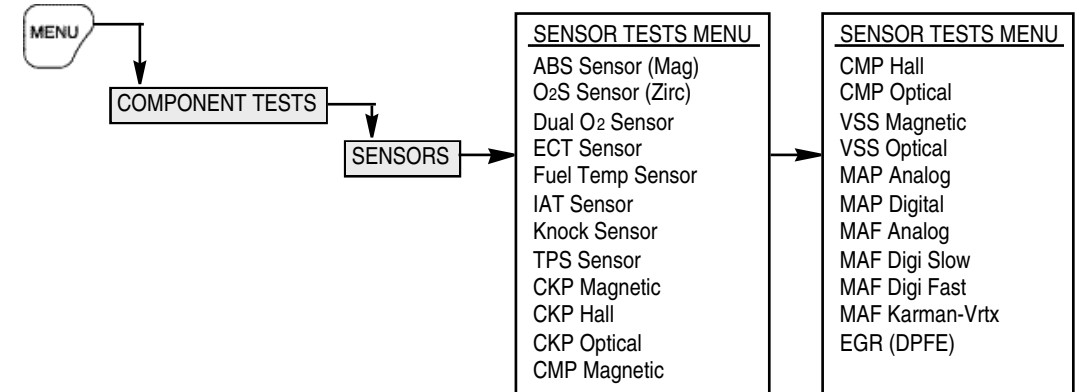

## ABS Sensor-Magnetic

### • Theory of Operation

ABS (Anti-lock Brake System) wheel speed sensors generate AC signals with frequency proportional to wheel speed. The amplitude (peak to peak voltage) increases as the wheel speed increases and is greatly affected by air gap between the magnetic tip and the reluctor wheel. The ABS computer compares the frequencies and uses this information to maintain wheel speeds while braking.

This test shows the sensor's raw output signal or the frequency proportional to wheel speed. The sensor's output signal should be continuous as long as the wheel rotates. Spikes or distortion of individual output pulses may indicate occasional contact between the sensor and the reluctor wheel.


### • Symptoms

ABS light on, no ABS signal generation

### • Test Procedure

1. Connect the shielded test lead to the CH A input and connect the ground lead of the test lead to the sensor output LO or GND and the test lead probe to the sensor output or HI. (Use a wiring diagram for the vehicle being serviced to get the ABS control unit pin number, or color of the wire for this circuit.)
2. Drive vehicle or spin the wheel by hand to generate signal.  
When driving vehicle, back probe the connector leading to the sensor. Place the transmission in drive, and slowly accelerate the drive wheels.  
If the sensor to be tested is on a drive wheel, raise the wheels off the ground to simulate driving conditions. Key OFF, Engine OFF (KOEO).
3. Use the Glitch Snare mode to detect spikes and dropouts.
4. Compare ABS sensors on all wheels for similarities.

### • Reference Waveform

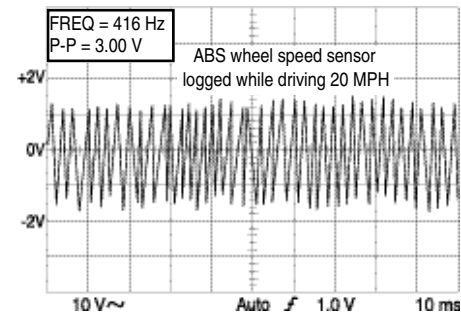

### VEHICLE INFORMATION

YEAR : 1989  
MAKE : Acura  
MODEL : Legend  
ENGINE : 2.7 L  
FUELSYS : Multiport Fuel Injection  
PCM\_PIN : Pos Grn Blu pin 13  
Neg Brn pin 18  
STATUS : KOBD (Key On Driven)  
RPM : 1200  
ENG\_TMP : Operating Temperature  
VACUUM : 18 In. Hg  
MILEAGE : 69050

Amplitude and Frequency increase with wheel speed. Output signal should be stable and repeatable without distorted pulses.

### • Troubleshooting Tips

If the amplitude is low, look for an excessive air gap between the trigger wheel and the pickup.

If the amplitude wavers, look for a bent axle.

If one of the oscillations looks distorted, look for a bent or damaged tooth on the trigger wheel.

## O<sub>2</sub>S Normal - Zirconia

### • Theory of Operation

An O<sub>2</sub> sensor provides an output voltage that represents the amount of oxygen in the exhaust stream. The output voltage is used by the PCM to adjust the air/fuel ratio of the fuel mixture between a slightly Rich condition and a slightly Lean condition.

A zirconia-type O<sub>2</sub> sensor provides high output voltage (a Rich condition) and low output voltage (a Lean condition).

A titania-type O<sub>2</sub> sensor changes resistance as the oxygen content of the fuel mixture changes. This results in a low output voltage (from a Rich condition) and a high output voltage (from a Lean condition). Most Titania O<sub>2</sub> sensors are found on MFI (Multiport Fuel Injection) systems.

A voltage swing between 100 mV and 900 mV indicates that the O<sub>2</sub> sensor is properly signalling PCM to control the fuel mixture.


### • Symptoms [OBD II DTC's : P0130 ~ P0147, P0150 ~ P0167]

Feedback Fuel Control Systems (FFCS's) is not entering Close Loop operation, high emissions, or poor fuel economy.

### • Test Procedure

1. Connect the shielded test lead to the CH A input and connect the ground lead of the test lead to the sensor output LO or GND and the test lead probe to the sensor output or HI. (Get the color of the O<sub>2</sub> signal wire or PCM pin number from a wiring diagram.)
2. Warm the engine and O<sub>2</sub> sensor for 2-3 minutes at 2500 RPM, and let the engine idle for 20 seconds.
3. Rev the engine rapidly five or six times in 2 second intervals from idle to Wide Open Throttle (WOT). Be careful not to overrev the engine. Engine RPM over about 4000 is not necessary. Just get good snap throttle accels and full decels.
4. Use the HOLD key to freeze the waveform on the display to check the maximum O<sub>2</sub> voltage, minimum O<sub>2</sub> voltage and response time from Rich to Lean.

• Reference Waveform

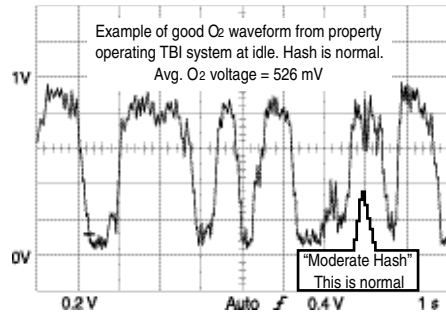

VEHICLE INFORMATION

YEAR : 1995  
 MAKE : Plymouth  
 MODEL : Acclaim  
 ENGINE : 2.5 L  
 FUELSYS : Throttle Body Fuel Injection  
 PCM\_PIN : 41 BkGrn Wire  
 STATUS : KOER (Key On Running)  
 RPM : Idle  
 ENG\_TMP : Operating Temperature  
 VACUUM : 20 In. Hg  
 MILEAGE : 4350

The maximum voltage when forced Rich should be greater than 800 mV. The minimum voltage when forced Lean should be less than 200 mV. The maximum allowable response time from Rich to Lean should be less than 100 ms.

**NOTE**

For a Titania-type O<sub>2</sub> sensor, change the vertical range to 1 V/div.

• Troubleshooting Tips

The response time increases by aging and poisoning of the O<sub>2</sub> sensor.

Peak to peak voltages should be at least 600 mV or greater with an average of 450 mV.

If the waveform is severely hashy, look for a misfire caused by Rich mixture, Lean mixture, ignition problem, vacuum leak to an individual cylinder, injector imbalance, or carboned intake valves.

**IMPORTANT:** Don't use a scan tool at the same time you are analyzing the O<sub>2</sub> waveform on the instrument. The PCM may go into a different operating strategy when diagnostics are activated by the scan tool.

Dual O<sub>2</sub> Sensor

• Theory of Operation

Many vehicles utilize dual O<sub>2</sub> sensors within the Feedback Fuel Control System. Both O<sub>2</sub> sensors provide an output voltage that represent the amount of oxygen in the exhaust stream respectively before and after the catalytic converter. The leading sensor signal is used as feedback for controlling the fuel mixture. The trailing sensor signal is used by PCM to test efficiency of the catalytic converter. The signal amplitude from the trailing sensor will increase when the efficiency of the catalytic converter declines over years. A good O<sub>2</sub> sensor located downstream from the catalyst should see much less fluctuations than its upstream counterpart during steady state operation. This is due to the properly operating catalyst's ability to consume oxygen when it is converting HC and CO, thus dampening the fluctuations in the downstream sensor's signal. That is, the difference in voltage amplitude from the sensors is a measure for the ability of the catalyst to store oxygen for the conversion of harmful exhaust constituents.


• Symptoms [OBD II DTC's : P0420 ~ P0424, P0430 ~ P0434]

Emissions test failure, poor fuel economy.

• Test Procedure

1. Connect one shielded test lead to the CH A and the other test lead to the CH B. Connect the ground leads of both test leads to the engine GND's and one lead probe to the sensor 1 (upstream sensor) output or HI and the other lead probe to the sensor 2 (downstream sensor) output or HI.
2. Run the engine until the O<sub>2</sub> sensors are warmed to at least 600 °F (315 °C) in closed loop operation.
3. Run the engine at idle while increasing engine speed.
4. Use this test to check the efficiency of the catalytic converter.

• Reference Waveform

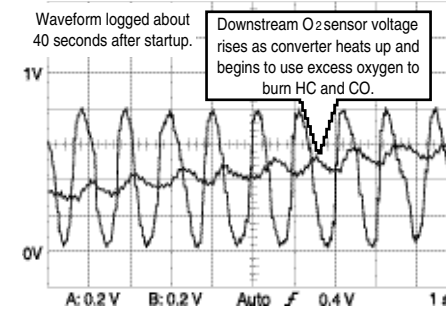


VEHICLE INFORMATION

YEAR : 1990  
 MAKE : Lexus  
 MODEL : LS400  
 ENGINE : 4.0 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : 6 OXL1 BIK wire OXL2 24 Grn wire  
 STATUS : KOER (Key On Running)  
 RPM : 2500  
 ENG\_TMP : Warming UP  
 VACUUM : 21 In. Hg  
 MILEAGE : 79369

Good O<sub>2</sub> sensor's output swing between 100 mV and 900 mV indicates that the O<sub>2</sub> sensor is properly signalling PCM to control the fuel mixture. The fluctuations in the downstream sensor's signal are much smaller than that of the the upstream sensor. As the catalytic converter "lights off" (or reaches operating temperature) the signal goes higher due to less and less oxygen being present in the exhaust stream as the catalyst begins to store and use oxygen for catalytic conversion.

### • Troubleshooting Tips

When a catalytic converter is totally deteriorated, the catalytic conversion efficiency as well as the oxygen storage capability of the catalytic converter are essentially lost. Therefore, the upstream and downstream O<sub>2</sub> sensor signals closely resemble one another on an inactive converter.

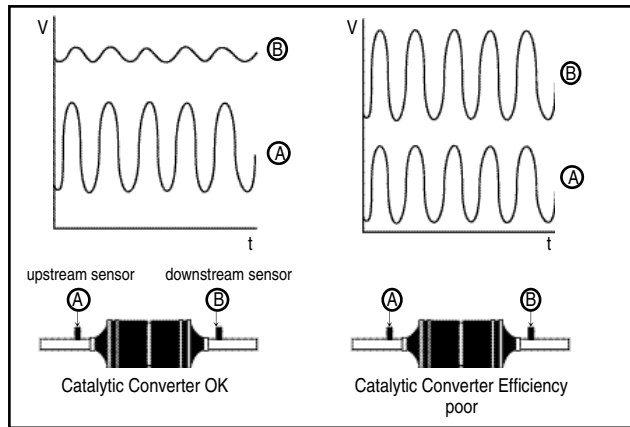

## ECT (Engine Coolant Temperature) Sensor

### • Theory of Operation

Most ECT sensors are Negative Temperature Coefficient (NTC) type thermistors. This means they are primarily two wire analog sensors whose resistance decreases when their temperature increases. They are supplied with a 5 V V Ref power signal and return a voltage signal proportional to the engine coolant temperature to the PCM. When this instrument is connected to the signal from an ECT sensor, what is being read is the voltage drop across the sensor's NTC resistor.

Typically, ECT sensor's resistance ranges from about 100,000 ohms at -40 °F (-40 °C) to about 50 ohms at +266 °F (+130 °C).

The ECT sensor signal is used by the PCM to control closed-loop operation, shift points, torque converter clutch operation, and cooling fan operation.

### • Symptoms [OBD II DTC's: P0115 ~ P0116, P0117 ~ P0119]


No or hard start, high fuel consumption, emissions failure, driveability problems.

### • Test Procedure

1. Backprobe the terminals on the ECT sensor with the CH A lead and its ground lead.
2. Run the engine at idle and monitor the sensor voltage decrease as the engine warms. (Start the engine and hold the throttle at 2500 RPM until the trace goes across the screen.)
3. Set the time base to 50 sec/div to see the sensor's entire operating range, from stone cold to operating temperature.

4. Press the HOLD key to freeze the waveform on the display for closer inspection.
5. To measure resistance, disconnect the sensor before changing to the GMM mode and then connect the Ground and CH A leads to the terminals on the sensor.

### • Reference Waveform

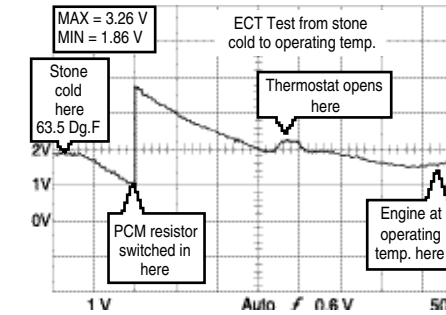

### VEHICLE INFORMATION

YEAR	: 1986
MAKE	: Oldsmobile
MODEL	: Toronado
ENGINE	: 3.8 L
FUELSYS	: Multiport Fuel Injection
PCM_PIN	: C10 Yel wire
STATUS	: KOER (Key On Running)
RPM	: 1500
ENG_TMP	: Warming Up
VACUUM	: 18 In. Hg
MILEAGE	: 123686

### • Troubleshooting Tips

Check the manufacturer's specifications for exact voltage range specifications, but generally the sensor's voltage should range from 3 V to just under 5 V when stone cold, dropping to around 1 V at operating temperature. The good sensor must generate a signal with a certain amplitude at any given temperature.

Opens in the ECT sensor circuit will appear as upward spikes to V Ref.

Shorts to ground in the ECT sensor circuit will appear as downward spikes to ground level.

## Fuel Temp Sensor

### • Theory of Operation

Most Fuel Temperature (FT) sensors are Negative Temperature Coefficient (NTC) type thermistors. They are primarily two wire analog sensors whose resistance decreases when their temperature increases. Some sensors use their own case as a ground, so they have only one wire, the signal wire. They are supplied with a 5 V V Ref power signal and return a voltage signal proportional to the temperature to the PCM. FT sensors usually sense the engine's fuel temperature in the fuel rail. When this instrument is connected to the signal from a FT sensor, what is being read is the voltage drop across the sensor's NTC resistor.

Typically, FT sensor's resistance ranges from about 100,000 ohms at -40 °F (-40 °C) to about 50 ohms at +266 °F (+130 °C).


### • Symptoms [OBD II DTC's: P0180 ~ P0184, P0185 ~ P0189]

Hard start, poor fuel economy, driveability problems

### • Test Procedure

1. Backprobe the terminals on the FT sensor with the CH A lead and its ground lead.
2. Start the engine and hold the throttle at 2500 RPM until the trace goes across the screen.
3. Set the time base to 50 sec/div to see the sensor's entire operating range, from stone cold to operating temperature.
4. Press the HOLD key to freeze the waveform on the display for closer inspection.
5. To measure resistance, disconnect the sensor before changing to the GMM mode and then connect the Ground and CH A leads to the terminals on the sensor.

### • Reference Waveform

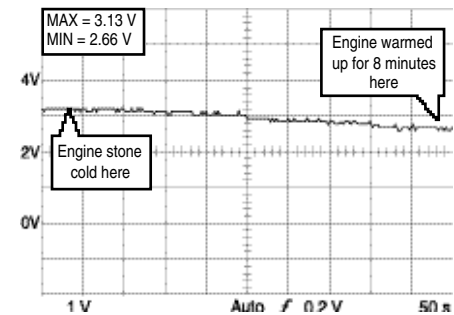

#### VEHICLE INFORMATION

YEAR : 1988  
 MAKE : Nissan/Datsun  
 MODEL : 300 ZX non-turbo  
 ENGINE : 3.0 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : 15 Yel wire  
 STATUS : KOER (Key On Running)  
 RPM : 2000  
 ENG\_TMP : Warming Up  
 VACUUM : 21 In. Hg  
 MILEAGE : 57782

### • Troubleshooting Tips

Check the manufacturer's specifications for exact voltage range specifications, but generally the sensor's voltage should range from 3 V to just under 5 V when stone cold, dropping to around 1 to 2 V at operating temperature. The good sensor must generate a signal with a certain amplitude at any given temperature.

Opens in the FT sensor circuit will appear as upward spikes to V Ref.

Shorts to ground in the FT sensor circuit will appear as downward spikes to ground level.

## INTAKE AIR TEMP (IAT) Sensor

### • Theory of Operation

Most Intake Air Temperature (IAT) sensors are Negative Temperature Coefficient (NTC) type thermistors. They are primarily two wire analog sensors whose resistance decreases when their temperature increases. They are supplied with a 5 V V Ref power signal and return a voltage signal proportional to the intake air temperature to the PCM. Some sensors use their own case as a ground, so they have only one wire, the signal wire. When this instrument is connected to the signal from an IAT sensor, what is being read is the voltage drop across the sensor's NTC resistor.

Typically, IAT sensor's resistance ranges from about 100,000 ohms at -40 °F (-40 °C) to about 50 ohms at +266 °F (+130 °C).


### • Symptoms [OBD II DTC's: P0110 ~ P0114]

Poor fuel economy, hard start, high emissions, tip-in hesitation

### • Test Procedure

1. Backprobe the terminals on the IAT sensor with the CH A lead and its ground lead.
2. When the IAT sensors are at engine operating temperature, spray the sensors with a cooling spray, a water spray, or evaporative solvent spray and monitor the sensor voltage. Perform this test with the Key ON, Engine Off. The waveform should increase in amplitude as the sensor tip cools.
3. Press the HOLD key to freeze the waveform on the display for closer inspection.
4. To measure resistance, disconnect the sensor before changing to the GMM mode and then connect the Ground and CH A leads to the terminals on the sensor.

### • Reference Waveform

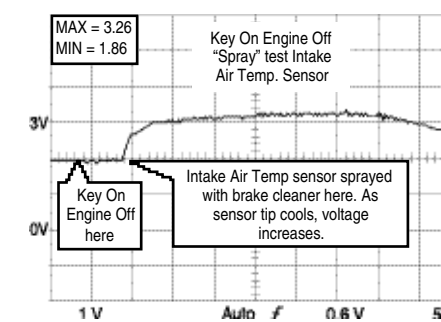

#### VEHICLE INFORMATION

YEAR : 1986  
 MAKE : Oldsmobile  
 MODEL : Toronado  
 ENGINE : 3.8 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : C11 Tan wire  
 STATUS : KOEO (Key On Engine Off)  
 RPM : 0  
 ENG\_TMP : Ambient Temp.  
 VACUUM : 0 In. Hg  
 MILEAGE : 123686

### • Troubleshooting Tips

Check the manufacturer's specifications for exact voltage range specifications, but generally the sensor's voltage should range from 3 V to just under 5 V when stone cold, dropping to around 1 to 2 V at operating temperature. The good sensor must generate a signal with a certain amplitude at any given temperature.

Opens in the IAT sensor circuit will appear as upward spikes to V Ref.

Shorts in the IAT sensor circuit will appear as downward spikes to ground level.

## Knock Sensor

### • Theory of Operation

AC signal generating Knock Sensors are piezoelectric devices that sense vibration or mechanical stress (knock) from engine detonation. They are quite different from most other AC signal generating automotive sensors that sense the speed or position of a rotating shaft.

Engine detonation resulting from overadvanced ignition timing can cause severe engine damage. Knock sensors supply the PCM (sometimes via a spark control module) with Knock detection so the PCM can retard ignition timing to prevent further Knocking.



Knock sensors generate a small AC voltage spike when vibration or a knock from detonation occurs. The bigger the Knock or vibration, the bigger the spike. Knock sensors are usually designed to be very sensitive to the Knocking frequencies (in 5 to 15 kHz range) of the engine block.

- **Symptoms [OBD II DTC's: P0324 ~ P0334]**


No AC signal generation at all from Knock Sensors.

- **Test Procedure**

1. Connect the CH A lead to the sensor output or HI and its ground lead to the engine block or the sensor wire labeled LO (if internally grounded).
2. Test 1: With the Key On, Engine Running, put a load on the engine and watch the Scope display. The peak voltage and frequency of the waveform will increase with engine load and RPM increment. If the engine is detonating or pinging from too much advanced ignition timing, the amplitude and frequency will also increase.

Test 2: With the Key On, Engine Off, tap the engine block lightly near the sensor with a small hammer or a ratchet extension. Oscillations will be displayed immediately following a tap on the engine block. The harder the tap, the larger the amplitude of the oscillations.

- **Reference Waveform**

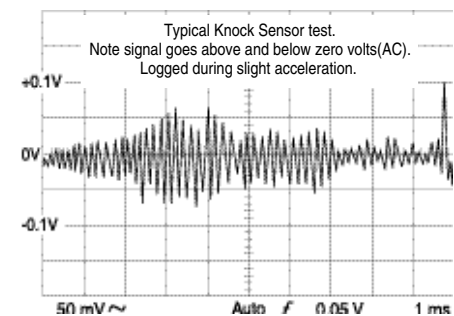

**VEHICLE INFORMATION**

YEAR : 1993  
 MAKE : Ford  
 MODEL : F150 4WD Pickup  
 ENGINE : 5.0 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : Neg-GND  
 Pos-Pin23 Yel Red wire  
 STATUS : KOER (Key On Running)  
 RPM : Slightly Accelerate  
 ENG\_TMP : Operating Temperature  
 VACUUM : 19 In. Hg  
 MILEAGE : 66748

- **Troubleshooting Tips**

Knock sensors are extremely durable and usually fail from physical damage to the sensor itself. The most common type of Knock Sensor failure is not to generate a signal at all due to its physical damage, when the waveform stays flat even if you rev the engine or tap on the sensor. In this case, check the sensor and the instrument connections; make sure the circuit is not grounded, then condemn the sensor.

## Throttle Position Sensor (TPS)

- **Theory of Operation**

A TPS is a variable resistor that tells the PCM the position of the throttle, that is, how far the throttle is open, whether it is opening or closing and how fast. Most throttle position sensors consist of a contact connected to the throttle shaft which slides over a section of resistance material around the pivot axis for the movable contact.

The TPS is a three wire sensor. One of the wires is connected to an end of the sensor's resistance material and provides 5 V via the PCM's V Ref circuit, another wire is connected to the other end of the resistance material and provides the sensor ground (GND). The third wire is connected to the movable contact and provides the signal output to the PCM. The voltage at any point in the resistance material is proportional to the throttle angle as sensed through the movable contact.

The voltage signal returning to the PCM is used to calculate engine load, ignition timing, EGR control, idle control and other PCM controlled parameters such as transmission shift points. A bad TPS can cause hesitation, idle problems, high emissions, and Inspection/ Maintenance (I/M) test failures.

Generally, throttle position sensors produce just under 1 V with the throttle closed and produce just under 5 V with the throttle wide open (WOT). The PCM determines the sensor's performance by comparing the sensor output to a calculated value based on MAP and RPM signals.


- **Symptoms [OBD II DTC's: P0120 ~ P0124, P0220 ~ P0229]**

Hesitation, stall at stops, high emissions, I/M test failures, transmission shifting problems.

- **Test Procedure**

1. Connect the CH A lead to the output or signal circuit of TPS and its ground lead to the TPS's GND.
2. With KOEO, slowly sweep the throttle from closed to the wide open position (WOT) and then the closed position again. Repeat this process several times.

- **Reference Waveform**

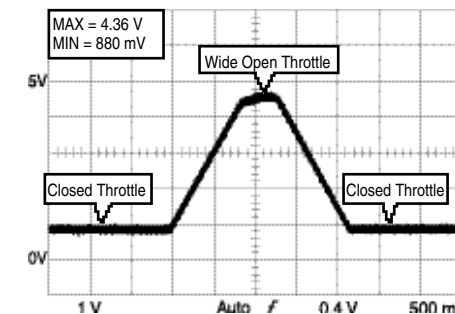


**VEHICLE INFORMATION**

YEAR : 1989  
 MAKE : Chevrolet  
 MODEL : 1500 Series Truck  
 ENGINE : 5.0 L  
 FUELSYS : Throttle Body Fuel Injection  
 PCM\_PIN : C13 DkBlu wire  
 STATUS : KOEO (Key On Engine Off)  
 RPM : 0  
 ENG\_TMP : Operating Temperature  
 VACUUM : 0 In. Hg  
 MILEAGE : 108706

## • Troubleshooting Tips

Check the manufacturer's specifications for exact voltage range. Generally, the sensor output should range from just under 1 V at idle to just under 5 V at wide open throttle (WOT). There should be no breaks, spikes to ground or dropouts in the waveform.

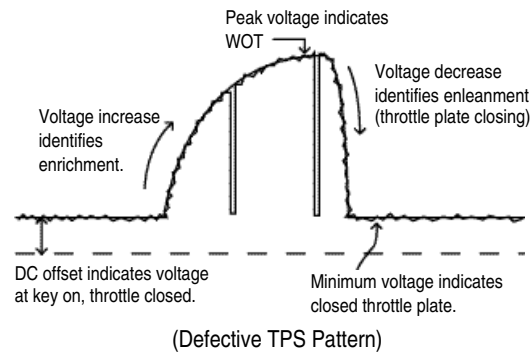

Dropouts on the slopes of the waveform indicate a short to ground or an intermittent open in the sensor's carbon track (resistance materials).

The first 1/8 to 1/3 of the sensor's carbon track usually wears out most because this portion is most used while driving. Thus, pay particular attention to the waveform as it begins to rise.

## Magnetic Crankshaft Position (CKP) Sensor

### • Theory of Operation

The magnetic CKP sensors are AC signal generating analog sensors. They generally consist of a wire wrapped, soft bar magnet with two connections. These two winding, or coil, connections are the sensor's output terminals. When a ring gear (a reluctor wheel) rotates past this sensor, it induces a voltage in the winding. A uniform tooth pattern on the reluctor wheel produces a sinusoidal series of pulses having a consistent shape. The amplitude is proportional to the rotating speed of the reluctor wheel (that is, the crankshaft or camshaft). The frequency is based on the rotational speed of the reluctor. The air gap between the sensor's magnetic tip and the reluctor wheel greatly affects the sensor's signal amplitude.

They are used to determine where TDC (Top Dead Center) position is located by creating a "synchronous" pulse which is generated by either omitting teeth on the reluctor wheel or moving them closer together.

The PCM uses the CKP sensors to detect misfire. When a misfire occurs, the amount of time it takes for a waveform to complete its cycle increases. If the PCM detects an excessive number of misfires within 200 to 1000 crankshaft revolutions, a misfire code (OBD II DTC) is set.


### • Symptoms [OBD II DTC's: P0340 ~ P0349, P0365 ~ P0369, P0390 ~ P0394]

No or hard start, intermittent misfire, driveability problems

### • Test Procedure

1. Connect the CH A lead to the sensor output or HI and its ground lead to the sensor output LO or GND.
2. With KOER (Key On, Engine Running), let the engine idle, or use the throttle to accelerate or decelerate the engine or drive the vehicle as needed to make the driveability, or emissions, problem occur.
3. Use the Glitch Snare mode to catch dropouts or stabilize waveforms when a "sync" pulse is created.

## • Reference Waveform

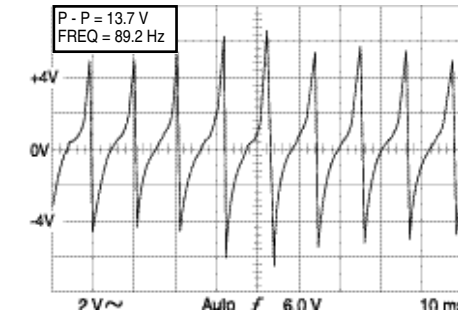

### VEHICLE INFORMATION

YEAR	: 1987
MAKE	: Chrysler
MODEL	: Fifth Avenue
ENGINE	: 5.2 L
FUELSYS	: Feedback Carburetor
PCM_PIN	: 5 #1 Org wire + 9 #1 Blk wire
STATUS	: KOER (Key On Running)
RPM	: 1400
ENG_TMP	: Operating Temperature
VACUUM	: 19 In. Hg
MILEAGE	: 140241

The amplitude and frequency increase with engine speed (RPM). The amplitude, frequency and shape should be all consistent for the conditions (RPM, etc.), repeatable (except for "sync" pulses), and predictable. Generally, the oscillations may not be perfect mirror images of each other above and below the zero level mark, but they should be relatively close on most sensors.

### • Troubleshooting Tips

Make sure the frequency of the waveform is keeping pace with engine RPM, and that the time between pulses only changes when a "sync" pulse is displayed. This time changes only when a missing or extra tooth on the reluctor wheel passes the sensor. That is, any other changes in time between the pulses can mean trouble.

Look for abnormalities observed in the waveform to coincide with an engine sputter or driveability problem.

Before assuring the sensor's failure, when waveform abnormalities are observed, make sure that a chafed wire or bad wiring harness connector is not the cause, the circuit isn't grounded, and the proper parts are spinning.

## Hall Effect Crankshaft Position (CKP) Sensor

### • Theory of Operation

These CKP sensors are classified as "CKP Sensors-Low Resolution" in industry.

The Hall CKP sensors are low resolution digital sensors which generate the CKP signal, that is a low frequency (hundreds of Hz) square wave switching between zero and V Ref, from a Hall sensor.

The Hall CKP sensor, or switch, consists of an almost completely closed magnetic circuit containing a permanent magnet and pole pieces. A soft magnetic vane rotor travels through the remaining air gap between the magnet and the pole piece. The opening and closing of the vane rotor's windows interrupt the magnetic field, causing the Hall sensor to turn on and off like a switch - so some vehicle manufacturers call this sensor a Hall switch.

These sensors operate at different voltage levels depending on the vehicle manufacturers and deliver a series of pulses as the shaft rotates.

They are used to switch the ignition and/or fuel injection triggering circuits on and off.

The PCM uses the Hall CKP sensors to detect misfire.


- **Symptoms [OBD II DTC's: P0340 ~ P0349, P0365 ~ P0369, P0390 ~ P0394]**

Long cranking, poor fuel economy, emissions problem

- **Test Procedure**

1. Connect the CH A lead to the sensor output or HI and its ground lead to the sensor output LO or GND.
2. With KOEC (Key On, Engine Cranking), or with KOER, use the throttle to accelerate or decelerate the engine or drive the vehicle as needed to make the driveability, or emissions, problem occur.
3. Use the Glitch Snare mode to catch dropouts or stabilize waveforms when a "sync" pulse is created.

- **Reference Waveform**

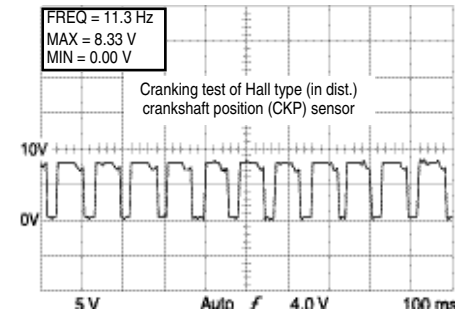

**VEHICLE INFORMATION**

YEAR : 1985  
 MAKE : Volkswagen  
 MODEL : Jetta  
 ENGINE : 1.8 L  
 FUELSYS : CIS Fuel Injection  
 PCM\_PIN : 9 GryWht wire  
 STATUS : KOEC (Key On Cranking)  
 RPM : Cranking  
 ENG\_TMP : Operating Temperature  
 VACUUM : 5 In. Hg  
 MILEAGE : 105522

The amplitude, frequency, and shape should be all consistent in the waveform from pulse to pulse. The amplitude should be sufficient (usually equal to sensor supply voltage), the time between pulses repeatable (except for "sync" pulses), and the shapes repeatable and predictable. Consistency is the key.

- **Troubleshooting Tips**

The duty cycle of the waveform changes only when a "sync" pulse is displayed. Any other changes in duty cycle can mean troubles.

The top and bottom corners of the waveform should be sharp and voltage transitions of the edge should be straight and vertical.

Make sure the waveform isn't riding too high off the ground level. This could indicate a high resistance or bad ground supply to the sensor.

Although the Hall CKP sensors are generally designed to operate in temperatures up to 318 °F (150 °C), they can fail at certain temperatures (cold or hot).

## Optical Crankshaft Position (CKP) Sensor

- **Theory of Operation**

These CKP sensors are classified as "CKP Sensors - High Resolution" in industry.

The optical CKP sensors can sense position of a rotating component even without the engine running and their pulse amplitude remains constant with variations in speed. They are not affected by electromagnetic interference (EMI). They are used to switch the ignition and/or fuel injection triggering circuits on and off.

The optical sensor consists of a rotating disk with slots in it, two fiber optic light pipes, an LED, and a phototransistor as the light sensor. An amplifier is coupled to the phototransistor to create a strong enough signal for use by other electronic devices, such as PCM or ignition module.

The phototransistor and amplifier create a digital output signal (on/off pulse).


- **Symptoms [OBD II DTC's: P0340 ~ P0349, P0365 ~ P0369, P0390 ~ P0394]**

No or hard starts, stall at stops, misfires, poor fuel economy, emissions failure

- **Test Procedure**

1. Connect the CH A lead to the sensor output or HI and its ground lead to the sensor output LO or GND.
2. With KOER (Key On, Engine Running), let the engine idle, or use the throttle to accelerate or decelerate the engine or drive the vehicle as needed to make the driveability, or emissions, problem occur.
3. Use the Glitch Snare mode to catch dropouts or stabilize waveforms when a "sync" pulse is created.

- **Reference Waveform**

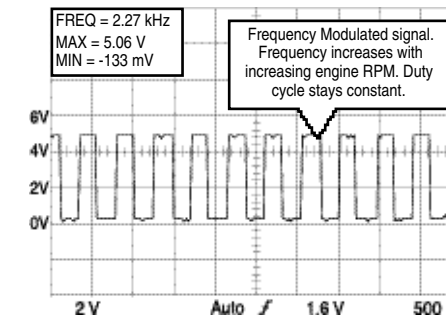

**VEHICLE INFORMATION**

YEAR : 1989  
 MAKE : Mitsubishi  
 MODEL : Montero  
 ENGINE : 3.0 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : 22 Blk wire at PCM  
 STATUS : KOER (Key On Running)  
 RPM : Idle  
 ENG\_TMP : Operating Temperature  
 VACUUM : 20 In. Hg  
 MILEAGE : 184066

The amplitude, frequency, and shape should be all consistent in the waveform from pulse to pulse. The amplitude should be sufficient, the time between pulses repeatable (except for "sync" pulses), and the shapes repeatable and predictable. Consistency is the key.

### • Troubleshooting Tips

The duty cycle of the waveform changes only when a “sync” pulse is displayed. Any other changes in duty cycle can mean troubles.

The top and bottom corners of the waveform should be sharp. However, the left upper corner may appear rounded on some of the higher frequency (high data rate) optical distributors. This is normal.

Optical CKP sensors are very susceptible to malfunction from dirt or oil interfering with the light transmission through the rotating disk. When dirt or oil enters into the sensitive areas of the sensors, no starts, stalls, or misfires can occur.

## Magnetic Camshaft Position (CMP) Sensor

### • Theory of Operation

The magnetic CMP sensors are AC signal generating analog sensors. They generally consist of a wire wrapped, soft bar magnet with two connections. These two winding, or coil, connections are the sensor's output terminals. When a ring gear (a reluctor wheel) rotates past this sensor, it induces a voltage in the winding. A uniform tooth pattern on the reluctor wheel produces a sinusoidal series of pulses having a consistent shape. The amplitude is proportional to the rotating speed of the reluctor wheel (that is, the crankshaft or camshaft). The frequency is based on the rotational speed of the reluctor. The air gap between the sensor's magnetic tip and the reluctor wheel greatly affects the sensor's signal amplitude.

They are used to determine where TDC (Top Dead Center) position is located by creating a “synchronous” pulse which is generated by either omitting teeth on the reluctor wheel or moving them closer together.

The PCM or ignition module uses the CMP sensors to trigger ignition or fuel injector events. The magnetic CMP and CKP sensors are susceptible to Electromagnetic Interference (EMI or RF) from high voltage spark plug wires, car phones or other electronic devices on the vehicle. This can cause a driveability problem or set a Diagnostic Trouble Code (DTC).


### • Symptoms [OBD II DTC's: P0340 ~ P0349, P0365 ~ P0369, P0390 ~ P0394]

Long cranking time, poor fuel economy, emissions failure

### • Test Procedure

1. Connect the CH A lead to the sensor output or HI and its ground lead to the sensor output LO or GND.
2. With KOER (Key On, Engine Running), let the engine idle, or use the throttle to accelerate or decelerate the engine or drive the vehicle as needed to make the driveability, or emissions, problem occur.
3. Use the Glitch Snare mode to catch dropouts or stabilize waveforms when a “sync” pulse is created.

### • Reference Waveform

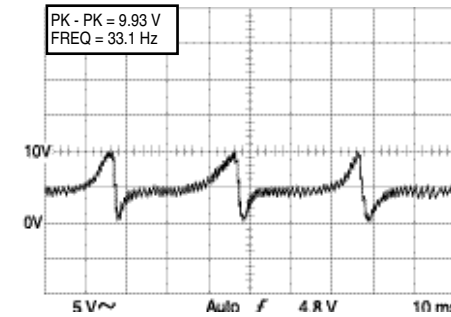

### VEHICLE INFORMATION

YEAR : 1989  
MAKE : Acura  
MODEL : Legend  
ENGINE : 2.7 L  
FUELSYS : Multiport Fuel Injection  
PCM\_PIN : C3 OrgBlu  
STATUS : KOER (Key On Running)  
RPM : Idle  
ENG\_TMP : Operating Temperature  
VACUUM : 20 In. Hg  
MILEAGE : 69050

The amplitude and frequency increase with engine speed (RPM). The amplitude, frequency and shape should be all consistent for the conditions (RPM, etc.), the time between pulses repeatable (except for “sync” pulses), and the shapes repeatable and predictable.

### • Troubleshooting Tips

Make sure the frequency of the waveform is keeping pace with engine RPM, and that the time between pulses only changes when a “sync” pulse is displayed. This time changes only when a missing or extra tooth on the reluctor wheel passes the sensor. That is, any other changes in time between the pulses can mean trouble.

Look for abnormalities observed in the waveform to coincide with an engine sputter or driveability problem.

## Hall Effect Camshaft Position (CMP) Sensor

### • Theory of Operation

These CMP sensors are classified as “CMP Sensors - Low Resolution” in industry.

The Hall CMP sensors are low resolution (accuracy) digital sensors which generate the CMP signal, that is a low frequency (tens of Hz) square wave switching between zero and V Ref, from a Hall sensor.

The Hall CMP sensor, or switch, consists of an almost completely closed magnetic circuit containing a permanent magnet and pole pieces. A soft magnetic vane rotor travels through the remaining air gap between the magnet and the pole piece. The opening and closing of the vane rotor's window interrupts the magnetic field, causing the Hall sensor to turn on the off like a switch - so some vehicle manufacturers call this sensor a Hall switch.

These sensors operate at different voltage levels depending on the vehicle manufacturers and deliver a series of pulses as the shaft rotates.

They are used to switch the ignition and/or fuel injection triggering circuits on and off.

The PCM uses the Hall CMP sensors to detect misfire.


- Symptoms [OBD II DTC's: P0340 ~ P0349, P0365 ~ P0369, P0390 ~ P0394]

Long cranking time, poor fuel economy, emissions failure

- Test Procedure

1. Connect the CH A lead to the sensor output or HI and its ground lead to the sensor output LO or GND.
2. With KOER (Key On, Engine Running), let the engine idle, or use the throttle to accelerate or decelerate the engine or drive the vehicle as needed to make the driveability, or emissions, problem occur.
3. Use the Glitch Snare mode to catch dropouts or stabilize waveforms when a "sync" pulse is created.

- Reference Waveform

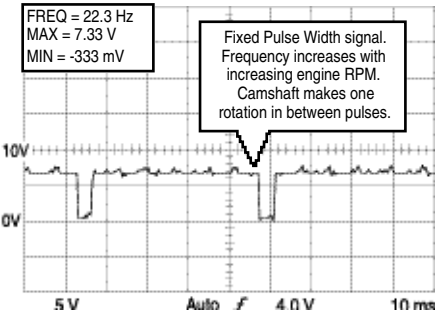

**VEHICLE INFORMATION**

YEAR : 1986  
 MAKE : Oldsmobile  
 MODEL : Toronado  
 ENGINE : 3.8 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : K BrnWht wire at ignition module  
 STATUS : KOER (Key On Running)  
 RPM : 2500  
 ENG\_TMP : Operating Temperature  
 VACUUM : 20 In. Hg  
 MILEAGE : 123686

The amplitude, frequency, and shape should be all consistent in the waveform from pulse to pulse. The amplitude should be sufficient (usually equal to sensor supply voltage), the time between pulses repeatable (except for "sync" pulses), and the shape repeatable and predictable. Consistency is the key.

- Troubleshooting Tips

The duty cycle of the waveform changes only when a "sync" pulse is displayed. Any other changes in duty cycle can mean troubles.

The top and bottom corners of the waveform should be sharp and voltage transitions of the edge should be straight and vertical.

Make sure the waveform isn't riding too high off the ground level. This could indicate a high resistance or bad ground supply to the sensor.

Although the Hall CMP sensors are generally designed to operate in temperatures up to 318 °F (150 °C), they can fail at certain temperatures (cold or hot).

## Optical Camshaft Position (CMP) Sensor

- Theory of Operation

These CMP sensors are classified as "CMP Sensors - High Resolution" in industry.

The optical CMP sensors are high resolution (accuracy) digital sensors which generate the CMP signal, that is a high frequency (hundreds of Hz to several kHz) square wave switching between zero and V Ref.

The optical CMP sensors can sense position of a rotating component even without the engine running and their pulse amplitude remains constant with variations in speed. They are not affected by electromagnetic interference (EMI). They are used to switch the ignition and/or fuel injection triggering circuits on and off.

The optical sensor consists of a rotating disk with slots in it, two fiber optic light pipes, and LED, and a phototransistor as the light sensor. An amplifier is coupled to the phototransistor to create a strong enough signal for use by other electronic devices, such as PCM or ignition module.

The phototransistor and amplifier create a digital output signal (on/off pulse)


- Symptoms [OBD II DTC's: P0340 ~ P0349, P0365 ~ P0369, P0390 ~ P0394]

No or hard starts, stall at stops, misfires, poor fuel economy, emissions failure

- Test Procedure

1. Connect the CH A lead to the sensor output or HI and its ground lead to the sensor output LO or GND.
2. With KOER (Key On, Engine Running), let the engine idle, or use the throttle to accelerate or decelerate the engine or drive the vehicle as needed to make the driveability, or emissions, problem occur.
3. Use the Glitch Snare mode to catch dropouts or stabilize waveforms when a "sync" pulse is created.

- Reference Waveform

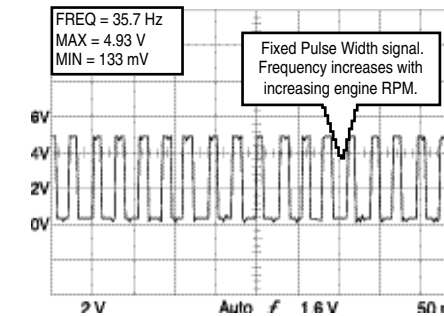

**VEHICLE INFORMATION**

YEAR : 1989  
 MAKE : Mitsubishi  
 MODEL : Montero  
 ENGINE : 3.0 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : 23 Red wire at PCM  
 STATUS : KOER (Key On Running)  
 RPM : Idle  
 ENG\_TMP : Operating Temperature  
 VACUUM : 20 In. Hg  
 MILEAGE : 184066

The amplitude, frequency, and shape should be all consistent in the waveform from pulse to pulse. The amplitude should be sufficient, the time between pulses repeatable (except for "sync" pulses), and the shapes repeatable and predictable. Consistency is the key.

### • Troubleshooting Tips

The duty cycle of the waveform changes only when a “sync” pulse is displayed. Any other changes in duty cycle can mean troubles.

The top and bottom corners of the waveform should be sharp. However, the left upper corner may appear rounded on some of the higher frequency (high data rate) optical distributors. This is normal.

Optical CMP sensors are very susceptible to malfunction from dirt or oil interfering with the light transmission through the rotating disk.

When dirt or oil enters into the sensitive areas of the sensors, no starts, stalls, or misfires can occur.

## Magnetic Vehicle Speed Sensor (VSS)

### • Theory of Operation

The vehicle speed sensors provides vehicle speed information to the PCM, the cruise control, and the speedometer. The PCM uses the data to decide when to engage the transmission torque converter clutch lockup and to control electronic transmission shift levels, cruise control, idle air bypass, engine cooling fan, and other functions.

The magnetic vehicle speed sensors are usually mounted directly on the transmissions or transaxles. They are two wire sensors and AC signal generating analog sensors. They are very susceptible to Electromagnetic Interference (EMI or RF) from other electronic devices on the vehicle.

They generally consist of a wire wrapped, soft bar magnet with two connections. These two winding, or coil, connections are the sensor's output terminals. When a ring gear (a reluctor wheel) rotates past this sensor, it induces a voltage in the winding.

A uniform tooth pattern on the reluctor wheel produces a sinusoidal series of pulses having a consistent shape. The amplitude is proportional to the rotating speed of the reluctor wheel. The signal frequency is based on the rotational speed of the reluctor. The air gap between the sensor's magnetic tip and the reluctor wheel greatly affects the sensor's signal amplitude.


### • Symptoms [OBD II DTC's: P0500 ~ P0503]

Inaccurate speedometer, improper transmission shifting, problems affecting ABS and cruise control

### • Test Procedure

1. Raise the drive wheels off the ground and place the transmission in drive.
2. Connect the CH A lead to the sensor output or HI and its ground lead to the sensor output LO or GND.
3. With KOBD (Key On, Being Driven), monitor the VSS output signal at low speed while gradually increasing the speed of the drive wheels.
4. Use the Glitch Snare mode to detect spikes and dropouts.

### • Reference Waveform

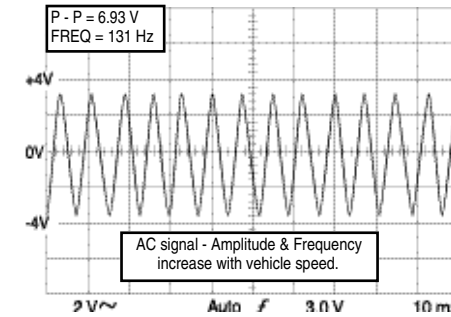

### VEHICLE INFORMATION

YEAR : 1988  
MAKE : Nissan/Datsun  
MODEL : 300 zx non-turbo  
ENGINE : 3.0 L  
FUELSYS : Multiport Fuel Injection  
PCM\_PIN : 12 Wht wire at the instrument cluster  
STATUS : KOBD (Key On Being Driven)  
RPM : 1500  
ENG\_TMP : Operating Temperature  
VACUUM : 20 In. Hg  
MILEAGE : 57782

The amplitude and frequency increase with vehicle speed. Vehicle Speed Sensors make waveforms whose shapes all look and behave very similar. Generally, the oscillations (the ups and downs in the waveform) are very symmetrical at constant speed.

### • Troubleshooting Tips

If the amplitude is low, look for an excessive air gap between the trigger wheel and the pickup.

If the amplitude wavers, look for a bent trigger wheel or shaft.

If one of the oscillations look distorted, look for a bent or damaged tooth on the trigger wheel.

**IMPORTANT:** When troubleshooting a missing VSS signal, check the fuse first. If there is no power to the buffer, there will be no square wave output. If the fuse is good, check the sensor first than a buffer mounted under the dash. If you have a sine wave coming from the sensor, but no square wave from the buffer, don't assume the problem is in the buffer; it may not be there because of a loose connector between the sensor and the buffer.

## Optical Vehicle Speed Sensor (VSS)

### • Theory of Operation

The optical vehicle speed sensors are usually driven by a conventional cable and are found under the dash. They are digital sensors and are not affected by electromagnetic interference (EMI).

They generally consist of a rotating disk with slots in it, two fiber optic light pipes, a light emitting diode, and a phototransistor as the light sensor. An amplifier is coupled to the phototransistor to create a strong enough signal for use by other electronic devices, such as the PCM or ignition module. The phototransistor and amplifier create a digital output signal (on/off pulse).

Optical sensors are very susceptible to malfunction from dirt or oil interfering with the light transmission through the rotating disk. When dirt or oil enters into the sensitive areas of the sensors, driveability problems can occur and DTC's can be set.


- Symptoms [OBD II DTC's: P0500 ~ P0503]

Improper transmission shifting, inaccurate speedometer, problems affecting ABS and cruise control

- Test Procedure

1. Raise the drive wheels off the ground and place the transmission in drive.
2. Connect the CH A lead to the sensor output or HI and its ground lead to the sensor output LO or GND.
3. With KOBD (Key On, Being Driven), monitor the VSS output signal at low speed (about 30 MPH) while gradually increasing the speed of the drive wheels.
4. Use the Glitch Snare mode to detect spikes and dropouts.

- Reference Waveform

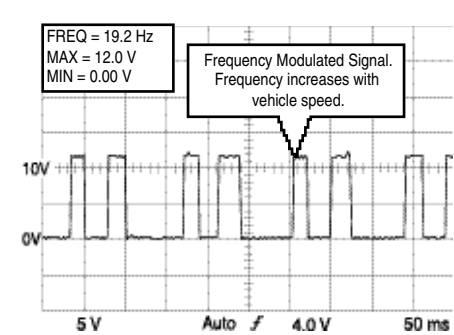

#### VEHICLE INFORMATION

YEAR : 1984  
MAKE : Oldsmobile  
MODEL : Toronado  
ENGINE : 5.0 L  
FUELSYS : Feedback Carburetor  
PCM\_PIN : 16 Brn wire  
STATUS : KOBD (Key On Being Driven)  
RPM : 1350  
ENG\_TMP : Operating Temperature  
VACUUM : 15 In. Hg  
MILEAGE : 52624

The signal frequency should increase with increasing vehicle speed, but the duty cycle should stay consistent at any speed. The amplitude, frequency, and shape should be all consistent in the waveform from pulse to pulse. The amplitude should be sufficient (usually equal to sensor supply voltage), the time between pulses repeatable and the shapes repeatable and predictable.

- Troubleshooting Tips

The top and bottom corners of the waveform should be sharp and voltage transitions of the edge should be straight and vertical.

All of the waveforms should be equal in height due to the constant supply voltage to the sensor.

Make sure the waveform isn't riding too high off the ground level. This could indicate a high resistance or bad ground supply to the sensor. (Voltage drop to ground should not exceed 400 mV.)

Look for abnormalities observed in the waveform to coincide with a driveability problem or a DTC.

## Analog Manifold Absolute Pressure (MAP) Sensor

- Theory of Operation

Almost all domestic and import MAP sensors are analog types in design except Ford's MAP sensor. Analog MAP sensors generate a variable voltage output signal that is directly proportional to the intake manifold vacuum, which is used by the PCM to determine the engine load. They are primarily three wire sensors and are supplied with 5V V Ref power, a ground circuit, and the signal output to the PCM.

High pressure occurs when the engine is under a heavy load, and low pressure (high intake vacuum) occurs when there is very little load. A bad MAP sensor can affect the air-fuel ratio when the engine accelerates and decelerates. It may also have some effect on ignition timing and other PCM outputs. A bad MAP sensor or its hose can trigger DTC's for MAF, TP, or EGR sensors.

- Symptoms [OBD II DTC's: P0105 ~ P0109]

Low power, stall, hesitation, excessive fuel consumption, emissions failure


- Test Procedure

1. Connect the CH A lead to the sensor output or HI and its ground lead to the sensor output LO or GND.
2. Shut off all accessories, start the engine and let it idle in park or neutral. After the idle has stabilized, check the idle voltage.
3. Rev the engine from idle to Wide Open Throttle (WOT) with a moderate input speed (this should only take about 2 seconds - don't overrev the engine.)
4. Let engine speed drop back down to idle for about two seconds.
5. Rev the engine again to WOT (very quickly) and let it drop back to idle again.
6. Press the HOLD key to freeze the waveform on the display for closer inspection.

#### NOTE

*It may be advantageous to put the sensor through its paces by using a handheld vacuum pump to see that it generates the correct voltage at a specific vacuum.*

- Reference Waveform

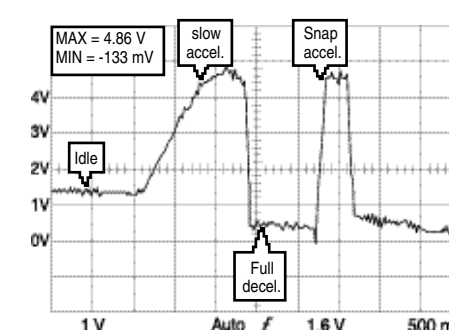


#### VEHICLE INFORMATION

YEAR : 1993  
MAKE : Chevrolet  
MODEL : Suburban 1500  
ENGINE : 5.7 L  
FUELSYS : Throttle Body Fuel Injection  
PCM\_PIN : B13 LtGrn wire at MAP sensor  
STATUS : KOER (Key On Running)  
RPM : Acceleration & Deceleration  
ENG\_TMP : Operating Temperature  
OVACUUM : 3-24 In. Hg  
MILEAGE : 55011

Check the manufacturer's specifications for exact voltage range versus vacuum levels, and compare them to the readings on the display. Generally the sensor voltage should range about 1.25 V at idle to just under 5 V at WOT and close to 0 V on full deceleration. High vacuum (around 24 In. Hg on full decel) produces low voltage (close to 0 V), and low vacuum (around 3 In. Hg at full load) produces high voltage (close to 5 V).

**IMPORTANT:** There are a few MAP sensors designed to do the opposite (high vacuum = high voltage). Some Chrysler MAP sensors just stay at a fixed voltage when they fail, regardless of changes in vacuum level. Generally 4 cylinder engines make noisier waveforms because their vacuum fluctuates more between intake strokes.

### • Troubleshooting Tips

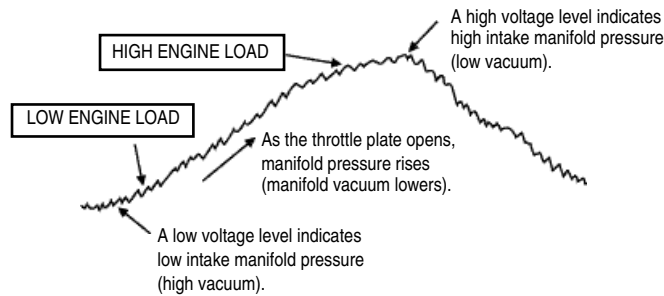

## Digital Manifold Absolute Pressure (MAP) Sensor

### • Theory of Operation

Ford's digital MAP sensor is found on many Ford and Lincoln Mercury vehicles from the early 1980's to well into the 1990's. This sensor produces a frequency modulated square wave whose frequency varies with the amount of intake vacuum sensed. It generates about 160 Hz with no vacuum applied, and it generates about 105 Hz when it is sensing around 19 In.Hg at idle. Check the manufacturer's specs for the year, make and model for exact vacuum versus frequency reference numbers. This is a three wire sensor, supplied with 5 V V Ref power, a ground circuit, and the digital signal output pulses based on the amount of vacuum it senses.

### • Symptoms [OBD II DTC's: P0105 ~ P0109]


Low power, stall, hesitation, excessive fuel consumption, emissions failure

### • Test Procedure

1. Connect the CH A lead to the sensor output or HI and its ground lead to the sensor output LO or GND.
2. With the Key On, Engine Off (KOEO), apply different amounts of vacuum to the sensor using a handheld vacuum pump.

3. Make sure that the amplitude, frequency and shape are all present, repeatable, and consistent. Amplitude should be close to 5 V.  
Frequency should vary with vacuum. Shape should stay constant (square wave).
4. Make sure the sensor produces the correct frequency for a given amount of vacuum, according to the specification chart for the vehicle you are working on.
5. Use the Glitch Snare mode to detect dropouts or unstable output frequency.

### • Reference Waveform

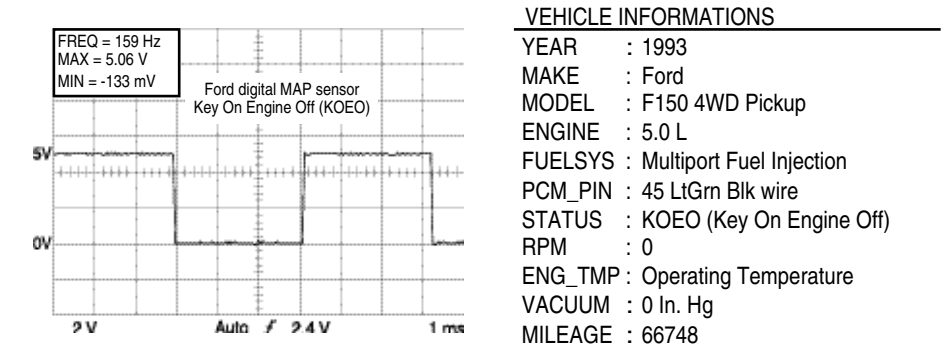

Frequency decreases as vacuum increases. Look for pulses that are a full 5 V in amplitude. Voltage transitions should be straight and vertical. Voltage drop to ground should not exceed 400 mV. If the voltage drop is greater than 400 mV, look for a bad ground at the sensor or the PCM.

### • Troubleshooting Tips

A bad digital MAP sensor can produce incorrect frequencies, rounded (shortened) pulses, unwanted spikes and rounded off corners that could all have the effect of garbling "electronic communication", thus causing a driveability or emissions problem.

## Analog Mass Air Flow (MAF) Sensor

### • Theory of Operation

There are two main varieties of analog MAF sensors; Hot Wire type and Vane type. Hot wire type MAF sensors use heated-metal-foil sensing element to measure air flow entering the intake manifold. The sensing element is heated to about 170 °F (77 °C), above the temperature of incoming air. As air flows over the sensing element, it cools the element, causing resistance to drop. This causes a corresponding increase in current flow, which causes supply voltage to decrease. This signal is seen by the PCM as a change in voltage drop (high air flow = high voltage) and is used as an indication of air flow. The PCM uses this signal to calculate engine load, to determine the right amount of fuel to be mixed with the air, and ignition timing, EGR control, idle control, transmission shift points, etc.



Vane type MAF sensors, mainly, consist of a variable resistor (potentiometer) that tells the PCM the position of the vane air flow door. As the engine is accelerated and more air passes through the vane air flow sensor, the vane air door is pushed open by the incoming air. The angle of the vane air flow door is proportional to the volume of air passing by it. A vane type MAF sensor consists of a contact connected to the vane door which slides over a section of resistance material that is placed around the pivot axis for the movable contact. The voltage at any point in the resistance material, as sensed through the movable contact, is proportional to the angle of the vane air door. Overswing of the door caused by snap accelerations provides information to the PCM for acceleration enrichment. [Many Toyotas are equipped with vane type MAF sensors operating opposite the above – their voltage is high when airflow is low.]


- **Symptoms [OBD II DTC's: P0100 ~ P0104]**

Hesitation, stall, low power, idle problems, excessive fuel consumption, emissions failure

- **Test Procedure**

1. Connect the CH A lead to the sensor output or HI and its ground lead to the sensor output LO or GND.
2. Shut off all accessories, start the engine and let it idle in park or neutral. After the idle has stabilized, check the idle voltage.
3. Rev the engine from idle to Wide Open Throttle (WOT) with a moderate input speed (this should only take about 2 seconds – don't overrev the engine).
4. Let engine speed drop back down to idle for about two seconds.
5. Rev the engine again to WOT (very quickly) and let it drop back to idle again.
6. Press the HOLD key to freeze the waveform on the display for closer inspection.

- **Reference Waveform**

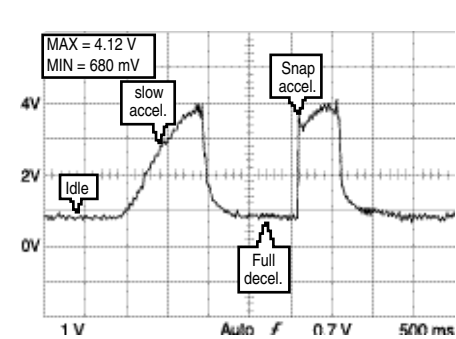

**VEHICLE INFORMATIONS**

YEAR : 1993  
 MAKE : Ford  
 MODEL : Explorer  
 ENGINE : 4.0 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : 14 LtBlu Red wire  
 STATUS : KOER (Key On Running)  
 RPM : Acceleration and Deceleration  
 ENG\_TMP : Operating Temperature  
 VACUUM : 2-24 In. Hg  
 MILEAGE : 54567

Hot wire type MAF sensor voltage should range from just over 2 V at idle to just over 4 V at WOT, and should dip slightly lower than idle voltage on full deceleration. Vane type MAF sensor voltage should range from about 1 V at idle to just over 4 V at WOT and not quite back to idle voltage on full deceleration. Generally, on non-Toyota varieties, high airflow makes high voltage and low airflow makes low voltage. When the sensor voltage output doesn't follow airflow closely, the waveform will show it and the engine operation will be noticeably affected.

- **Troubleshooting Tips**

If overall voltage is low, be sure to check for cracked, broken, loose, or otherwise leaking intake air ducts.

**IMPORTANT:** 0.25 V can make the difference between a good sensor and a bad one, or an engine that is blowing black smoke and one that is in perfect control of fuel mixture. However, because the sensor output voltages will vary substantially depending on vehicle engine families, in some cases, this sensor can be difficult to diagnose definitively.

## Digital Slow MAF (Mass Air Flow) Sensor

- **Theory of Operation**

There are three main varieties of digital MAF sensors; Digital Slow type (output signals in the 30 to 500 Hz range), Digital Fast type (output signals in the kHz range), and Karman Vortex type (which changes pulse width as well as frequency). A digital MAF sensor receives a 5 V reference signal from the PCM and sends back a variable frequency signal that is proportional to the mass of air entering the engine. The output signal is a square wave, in most cases, with a full 5 V in amplitude. As the airflow increases, the frequency of the signal generated increases. The PCM uses these signals to calculate fuel injector ON time and ignition timing and also determines MAF sensor deterioration by comparing the MAF signal to a calculated value based on MAP, TP, IAT, and RPM signals.

Digital Slow MAF sensors can be found on early to mid 1980's GM vehicles, and many other engine systems. Generally, the older the MAF sensor, the slower the frequency it produces.


- **Symptoms [OBD II DTC's: P0100 ~ P0104]**

Hesitation, stall, low power, idle problems, excessive fuel consumption, emissions failure

- **Test Procedure**

1. Connect the CH A lead to the sensor output or HI and its ground lead to the sensor output LO or GND.
2. With the Key On, Engine Running (KOER), use the throttle to accelerate and decelerate the engine. Try different RPM ranges while spending more time in the RPM ranges that correspond to the driveability problem.
3. Make sure that the amplitude, frequency and shape are all correct, consistent, and repeatable.
4. Make sure that the sensor generates the correct frequency for a given RPM or airflow rate.
5. Use the Glitch Snare mode to detect dropouts or unstable output frequency.

• **Reference Waveform**

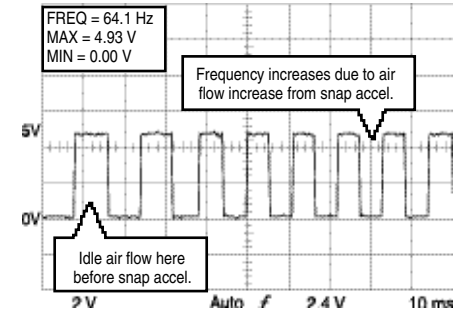

**VEHICLE INFORMATION**

YEAR : 1986  
 MAKE : Oldsmobile  
 MODEL : Toronado  
 ENGINE : 3.8 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : B6 Yel wire  
 STATUS : KOER (Key On Running)  
 RPM : Snap Acceleration  
 ENG\_TMP : Operating Temperature  
 VACUUM : 0-24 In. Hg  
 MILEAGE : 123686

Frequency stays constant when airflow is constant. Frequency increases as airflow increases from snap acceleration. Look for pulses that are a full 5 V in amplitude. Voltage transitions should be straight and vertical. Voltage drop to ground should not exceed 400 mV. If greater than 400 mV, look for a bad ground at the sensor or the PCM.

• **Troubleshooting Tips**

Possible defects to watch for are runted (shortened) pulses, unwanted spikes, and rounded off corners that could all have the effect of garbling an electronic communication, causing a driveability or emissions problem. The sensor should be replaced if it has intermittent faults.

**Digital Fast MAF (Mass Air Flow) Sensor**

• **Theory of Operation**

Digital Fast type MAF sensors can be found on GM's 3800 V-6 engine with the Hitachi sensor, Lexus models, and many others. The Hitachi sensor has a square wave output in the 10 kHz range. Voltage level of square waves should be consistent and frequency should change smoothly with engine load and speed.

• **Symptoms [OBD II DTC's: P0100 ~ P0104]**


Hesitation, stall, low power, idle problems, excessive fuel consumption, emissions failure

• **Test Procedure**

1. Connect the CH A lead to the sensor output or HI and its ground lead to the sensor output LO or GND.
2. With the Key On, Engine Running (KOER), use the throttle to accelerate and decelerate the engine. Try different RPM ranges while spending more time in the RPM ranges that correspond to the driveability problem.
3. Make sure that the amplitude, frequency and shape are all consistent, repeatable, and accurate.

4. Make sure that the sensor generates the correct frequency for a given RPM or airflow rate.
5. Use the Glitch Snare mode to detect dropouts or unstable output frequency.

• **Reference Waveform**

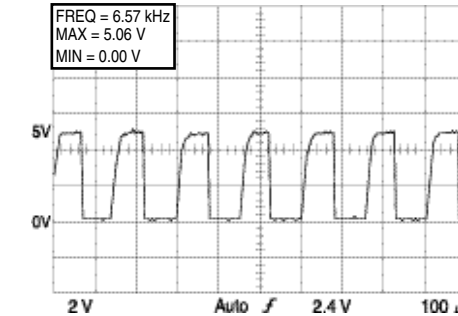

**VEHICLE INFORMATION**

YEAR : 1990  
 MAKE : Buick  
 MODEL : Le Sabre  
 ENGINE : 3.8 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : Yel wire  
 STATUS : KOER (Key On Running)  
 RPM : 2500  
 ENG\_TMP : Operating Temperature  
 VACUUM : 20 In. Hg  
 MILEAGE : 103128

Frequency stays constant when airflow is constant. Frequency increases as airflow increases from snap acceleration. Look for pulses that are a full 5 V in amplitude. Voltage transitions should be straight and vertical. Voltage drop to ground should not exceed 400 mV. If greater than 400 mV, look for a bad ground at the sensor or the PCM.

**NOTE**

On some Digital Fast MAF sensors, such as the GM Hitachi sensor found on 3800 Buick V-6s, the upper left corner of the pulse is rounded off slightly. This is normal and doesn't indicate a bad sensor.

• **Troubleshooting Tips**

Possible defects to watch for are runted (shortened) pulses, unwanted spikes, and rounded off corners that could all have the effect of garbling an electronic communication, causing a driveability or emissions problem. The sensor should be replaced if it has intermittent faults.

**Digital Karman-Vortex MAF (Mass Air Flow) Sensor**

• **Theory of Operation**

Karman-Vortex type MAF sensors are usually manufactured as part of the air cleaner assembly. They are commonly found on Mitsubishi engine systems. While most digital MAF sensors vary only their frequency with changes in airflow rate, the Karman-Vortex type's signal varies Pulse Width as well as Frequency with changes in airflow rate. As the airflow increases, the frequency of the signal generated increases.

Karman-Vortex sensors differ from other digital MAF sensors during acceleration modes. During acceleration, not only does the sensor's frequency output increase, but also its pulse width changes.


- Symptoms [OBD II DTC's: P0100 ~ P0104]

Hesitation, stall, low power, idle problems, excessive fuel consumption, emissions failure

- Test Procedure

1. Connect the CH A lead to the sensor output HI and its ground lead to the sensor output LO or GND.
2. With the Key On, Engine Running (KOER), use the throttle to accelerate and decelerate the engine. Try different RPM ranges while spending more time in the RPM ranges that correspond to the driveability problem.
3. Make sure that the amplitude, frequency, shape, and pulse width are all consistent, repeatable and accurate for any given operating mode.
4. Make sure that the sensor generates the correct and steady frequency for a given RPM or airflow rate.
5. Use the Glitch Snare mode to detect dropouts or unstable output frequency.

- Reference Waveform

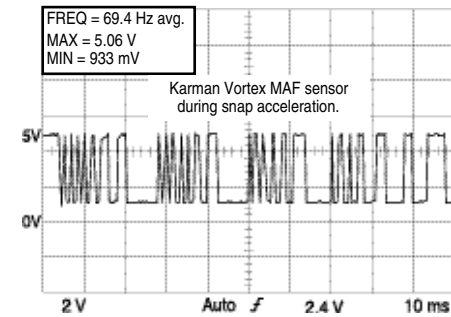

VEHICLE INFORMATION

YEAR : 1992  
MAKE : Mitsubishi  
MODEL : Eclipse  
ENGINE : 1.8 L  
FUELSYS : Multiport Fuel Injection  
PCM\_PIN : 10 GrnBlu wire  
STATUS : KOER (Key On Running)  
RPM : Snap Acceleration  
ENG\_TMP : Operating Temperature  
VACUUM : 3-24 In. Hg  
MILEAGE : 49604

Frequency increases as airflow rate increases. Pulse width (duty cycle) is modulated in acceleration modes.  
Look for pulses that are a full 5 V in amplitude. Look for the proper shape of the waveform in terms of consistent, square corners, and consistent vertical legs.

- Troubleshooting Tips

Possible defects to watch for are runted (shortened) pulses, unwanted spikes, and rounded off corners that could all have the effect of garbling an electronic communication, causing a driveability or emissions problem. The sensor should be replaced if it has intermittent faults.

## Differential Pressure Feedback EGR (DPFE) Sensor

- Theory of Operation

An EGR (Exhaust Gas Recirculation) pressure sensor is a pressure transducer that tells the PCM the relative pressures in the exhaust stream passages and, sometimes, intake manifold. It is found on some Ford EEC IV and EEC V engine systems.

Ford calls it a PFE (Pressure Feedback EGR) sensor when the sensor outputs a signal that is proportional to the exhaust backpressure.

Ford calls it a DPFE (Differential Pressure Feedback EGR) sensor when the sensor outputs the relative difference in pressure between intake vacuum and exhaust.

These are important sensors because their signal input to the PCM is used to calculate EGR flow. A bad EGR pressure sensor can cause hesitation, engine ping, and idle problems, among other driveability problems, and I/M emission test failures.

The EGR pressure sensor is usually a three wire sensor. One wire supplies the sensor with 5 V via the PCM's V Ref circuit, another wire provides the sensor ground, and the third wire is the sensor's signal output to the PCM.

Generally, Ford's DPFE sensors are found on late model 4.0 L Explorers and other vehicles and produce just under 1 V with no exhaust gas pressure and close to 5 V with maximum exhaust gas pressure.

**NOTE**

*Ford's PFE sensors produce 3.25 V with no exhaust back pressure increasing to about 4.75 V with 1.8 PSI of exhaust back pressure. On properly operating vehicles the voltage won't ever get to 5 V. PFE sensors can be found on many Taurus and Sable models.*


- Symptoms [OBD II DTC's: P0400 ~ P0408]

Hesitation, engine ping, idle problems, I/M emission test failure

- Test Procedure

1. Connect the CH A lead to the sensor output HI and its ground lead to the sensor output LO or GND.
2. Start the engine and hold throttle at 2500 RPM for 2-3 minutes until the engine is fully warmed up and the Feedback Fuel System is able to enter closed loop. (Verify this by viewing the O<sub>2</sub> sensor signal, if necessary.)
3. Shut off A/C and all other accessories. Drive the vehicle under normal driving modes; start from dead stop, light acceleration, heavy acceleration, cruise, and deceleration.
4. Make sure that the amplitude is correct, repeatable, and present during EGR conditions. The sensor signal should be proportional to exhaust gas versus manifold vacuum pressures.
5. Make sure that all the hoses and lines to and from the intake manifold, EGR valve, and vacuum solenoid valve are intact, and routed properly, with no leaks. Make sure the EGR valve diaphragm can hold the proper amount of vacuum (check manufacturer's specs.). Make sure that the EGR passageways in and around the engine are clear and unrestricted from internal carbon buildup.
6. Press the HOLD key to freeze the waveform on the display for closer inspection.

• Reference Waveform

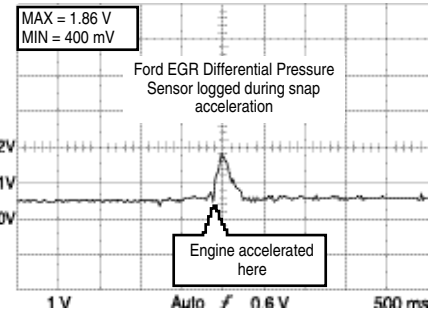

VEHICLE INFORMATION


YEAR : 1994  
 MAKE : Ford  
 MODEL : Explorer  
 ENGINE : 4.0 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : 27 BrnLtGrn wire  
 STATUS : KOER (Key On Running)  
 RPM : Snap Acceleration  
 ENG\_TMP : Operating Temperature  
 VACUUM : 3-24 In. Hg  
 MILEAGE : 40045

As soon as the engine reaches the predetermined EGR requirement conditions, the PCM will begin opening the EGR valve. The waveform should rise when the engine is accelerated. The waveform should fall when the EGR valve closes and the engine decelerates. EGR demands are especially high during accelerations. During idle and deceleration, the valve is closed.

• Troubleshooting Tips

There should be no breaks, spikes to ground, or dropouts in the waveform.

6.3 ACTUATOR TESTS

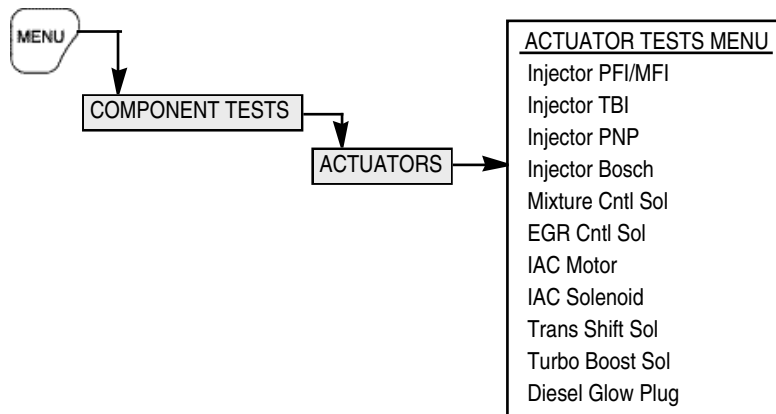

Saturated Switch Type (MFI/PFI/SFI) Injector

• Theory of Operation

The fuel injector itself determines the height of the release spike. The injector driver (switching transistor) determines most of the waveform features. Generally an injector driver is located in the PCM that turns the injector on and off. Different Kinds (Saturated Switch type, Peak-and-Hold type, Bosch type Peak-and-Hold, and PNP type) of injector drivers create different waveforms. Knowing how to interpret injector waveforms (determining on-time, referencing peak height, recognizing bad drivers, etc.) can be a very valuable diagnostic talent for driveability and emission repair.

Saturated switch injector drivers are used primarily on multiport fuel injection (MFI, PFI, SFI) systems where the injectors are fired in groups or sequentially. Determining the injector on-time is fairly easy. The injector on-time begins where the PCM grounds the circuit to turn it on and ends where the PCM opens the control circuit. Since the injector is a coil, when its electric field collapses from the PCM turning it off, it creates a spike. Saturated Switch type injectors have a single rising edge. The injector on-time can be used to see if the Feedback Fuel Control System is doing its job.

• Symptoms


Hesitation, rough idle, intermittent stall at idle, poor fuel mileage, emissions test failure, low power on acceleration

• Test Procedure

1. Connect the CH A lead to the injector control signal from the PCM and its ground lead to the injector GND.
2. Start the engine and hold throttle at 2500 RPM for 2-3 minutes until the engine is fully warmed up and the Feedback Fuel System enters closed loop. (Verify this by viewing the O<sub>2</sub> sensor signal, if necessary.)
3. Shut off A/C and all other accessories. Put vehicle in park or neutral. Rev the engine slightly and watch for the corresponding injector on-time increase on acceleration.
  - 1) Induce propane into the intake and drive the mixture rich. If the system is working properly, the injector on-time will decrease.
  - 2) Create a vacuum leak and drive the mixture lean. The injector on-time will increase.
  - 3) Raise the engine to 2500 RPM and hold it steady. The injector on-time will modulate from slightly larger to slightly smaller as the system controls the mixture. Generally, the injector on-time only has to change from 0.25 ms to 0.5 ms to drive the system through its normal full rich to full lean range.

**IMPORTANT:** If the injector on-time is not changing, either the system may be operating in an "open loop" idle mode or the O<sub>2</sub> sensor may be bad.
4. Use the Glitch Snare mode to check for sudden changes in the injector on-time.

## • Reference Waveform

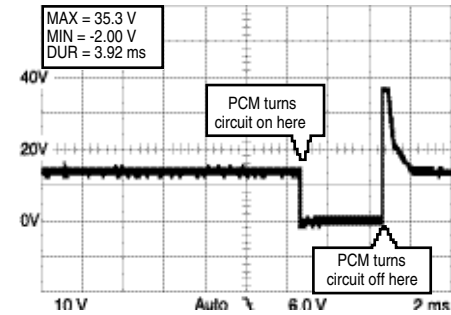

### VEHICLE INFORMATION

YEAR : 1993  
 MAKE : Ford  
 MODEL : F150 4WD Pickup  
 ENGINE : 5.0 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : 58 Tan wire  
 STATUS : KOER (Key On Running)  
 RPM : Idle  
 ENG\_TMP : Operating Temperature  
 VACUUM : 19 In. Hg  
 MILEAGE : 66748

When the Feedback Fuel Control System controls fuel mixture properly, the injector on-time will modulate from about 1-6 ms at idle to about 6-35 ms under cold cranking or Wide Open Throttle (WOT) operation. The injector coil release spike(s) ranges are from 30 V to 100 V normally.

## • Troubleshooting Tips

Spikes during on-time or unusual high turn off spikes indicate the injector driver's malfunction.

## Peak and Hold Type (TBI) Injector

### • Theory of Operation

Peak and Hold fuel injector drivers are used almost exclusively on Throttle Body Injection (TBI) systems. These drivers are only used on a few selected MFI systems like GM's 2.3 L Quad-4 engine family, Saturn 1.9 L, and Isuzu 1.6 L. The driver is designed to allow approximately 4 A to flow through the injector coil and then reduce the current flow to a maximum of about 1 A. Generally, far more current is required to open the pintle valve than to hold it open.

The PCM continues to ground the circuit (hold it at 0 V) until it detects about 4 A flowing through the injector coil. When the 4 A "Peak" is reached, the PCM cuts back the current to a maximum of 1 A, by switching in a current limiting resistor. This reduction in current causes the magnetic field to collapse partially, creating a voltage spike similar to an ignition coil spike. The PCM continues the "Hold" operation for the desired injector on-time, then it shuts the driver off by opening the ground circuit completely. This creates the second spike. Under acceleration the second spike move to the right, while the first remains stationary. If the engine is running extremely rich, both spikes are nearly on top of one another because the PCM is attempting to lean out the mixture by shortening injector on-time as much as possible.


### • Symptoms

Hesitation on throttle tip in, rough idle, intermittent stall at idle, poor fuel mileage, emissions test failure, low power on acceleration.

## • Test Procedure

1. Connect the CH A lead to the injector control signal from the PCM and its ground lead to the injector GND.
2. Start the engine and hold throttle at 2500 RPM for 2-3 minutes until the engine is fully warmed up and the Feedback Fuel System enters closed loop. (Verify this by viewing the O<sub>2</sub> sensor signal, if necessary.)
3. Shut off A/C and all other accessories. Put vehicle in park or neutral. Rev the engine slightly and watch for the corresponding injector on-time increase on acceleration.
  - 1) Induce propane into the intake and drive the mixture rich. If the system is working properly, the injector on-time will decrease.
  - 2) Create a vacuum leak and drive the mixture lean. The injector on-time will increase.
  - 3) Raise the engine to 2500 RPM and hold it steady. The injector on-time will modulate from slightly larger to slightly smaller as the system controls the mixture. Generally, the injector on-time only has to change from 0.25 ms to 0.5 ms to drive the system through its normal full rich to full lean range.
4. Use the Glitch Snare mode to check for sudden changes in the injector on-time.

## • Reference Waveform

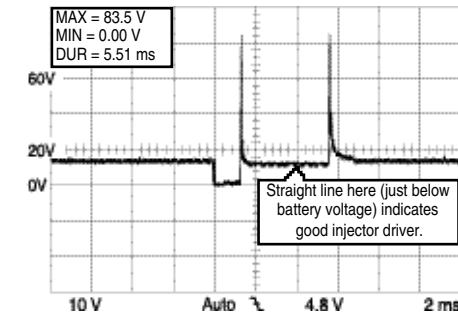

### VEHICLE INFORMATION

YEAR : 1993  
 MAKE : Chevrolet  
 MODEL : Suburban 1500  
 ENGINE : 5.7 L  
 FUELSYS : Throttle Body Fuel Injection  
 PCM\_PIN : A16 DkBlu  
 STATUS : KOER (Key On Running)  
 RPM : Snap Acceleration  
 ENG\_TMP : Operating Temperature  
 VACUUM : 3-24 In. Hg  
 MILEAGE : 55011

When the Feedback Fuel Control System controls fuel mixture properly, the injector on-time will modulate from about 1-6 ms at idle to about 6-35 ms under cold cranking or Wide Open Throttle (WOT) operation. The injector coil release spike(s) ranges are from 30 V to 100 V normally. The turn off spikes less than 30 V may indicate shorted injector coil. Initial drive voltage should go close to 0 V. If not, injector driver may be weak.

## • Troubleshooting Tips

Spikes during on-time or unusual high turn off spikes indicate the injector driver's malfunction. On GM and some ISUZU dual TBI systems lots of extra oscillations or "hash" in between the peaks indicates a faulty injector driver in the PCM.

## PNP Type Injector

### • Theory of Operation

A PNP type injector driver within the PCM has two positive legs and one negative leg. PNP drivers pulse power to an already grounded injector to turn it on. Almost all other injector drivers (NPN type) are opposite. They pulse ground to an injector that already has voltage applied. This is why the release spike is upside-down. Current flow is in the opposite direction. PNP type drivers can be found on several MFI systems; Jeep 4.0 L engine families, some pre-1988 Chrysler engine families, a few Asian vehicles, and some Bosch vehicles in the early 1970s like the Volvo 264 and Mercedes V-8s.

The injector on-time begins where the PCM switches power to the circuit to turn it on. The injector on-time ends where the PCM opens the control circuit completely.

### • Symptoms

Hesitation on throttle tip in, rough idle, intermittent stall at idle, poor fuel mileage, emissions test failure, low power on acceleration


### • Test Procedure

1. Connect the CH A lead to the injector control signal from the PCM and its ground lead to the injector GND.
2. Start the engine and hold throttle at 2500 RPM for 2-3 minutes until the engine is fully warmed up and the Feedback Fuel System enters closed loop. (Verify this by reviewing the O<sub>2</sub> sensor signal, if necessary.)
3. Shut off A/C and all other accessories. Put vehicle in park or neutral. Rev the engine slightly and watch for the corresponding injector on-time increase on acceleration.
  - 1) Induce propane into the intake and drive the mixture rich. If the system is working properly, the injector on-time will decrease.
  - 2) Create a Vacuum leak and drive the mixture lean. The injector on-time will increase.
  - 3) Raise the engine to 2500 RPM and hold it steady. The injector on-time will modulate from slightly larger to slightly smaller as the system control the mixture. Generally, the injector on-time only has to change from 0.25 ms to 0.5 ms to drive the system through its normal full rich to full lean range.

**IMPORTANT:** If the injector on-time is not changing, either the system may be operating in an "open loop" idle mode or the O<sub>2</sub> sensor may be bad.

4. Use the Glitch Snare mode to check for sudden changes in the injector on-time.

### • Reference Waveform

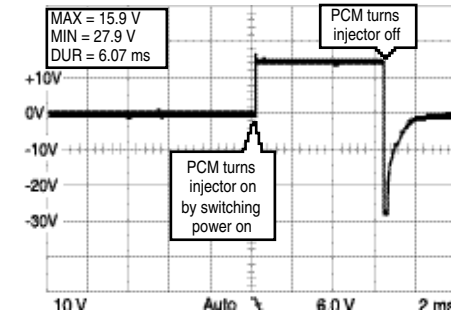

### VEHICLE INFORMATION

YEAR : 1990  
MAKE : Jeep  
MODEL : Cherokee  
ENGINE : 4.0 L  
FUELSYS : Multiport Fuel Injection  
PCM\_PIN : 4 Yel wire at #4 injector  
STATUS : KOER (Key On Running)  
RPM : Idle  
ENG\_TMP : Operating Temperature  
VACUUM : 16.5 In. Hg  
MILEAGE : 85716

When the Feedback Fuel Control System controls fuel mixture properly, the injector on-time will modulate from about 1-6 ms at idle to about 6-35 ms under cold cranking or Wide Open Throttle (WOT) operation.  
The injector coil release spike(s) ranges are from -30 V to -100 V normally.

### NOTE

Some injector spike heights are "chopped" to between -30 V to -60 V by clamping diodes. There are usually identified by the flat top on their spike(s) instead of a sharper point. In those cases, a shorted injector may not reduce the spike height unless it is severely shorted.


### • Troubleshooting Tips

Spikes during on-time or unusual large turn off spikes indicate the injector driver's malfunction.

## Bosch-Type Peak and Hold Injector

### • Theory of Operation

Bosch type Peak and Hold injector drivers (within the PCM) are designed to allow about 4 A to flow through the injector coil, then reduce the flow to a maximum of 1 A by pulsing the circuit on and off at a high frequency. The other type injector drivers reduce the current by using a “switch-in” resistor, but this type drivers reduce the current by pulsing the circuit on and off.

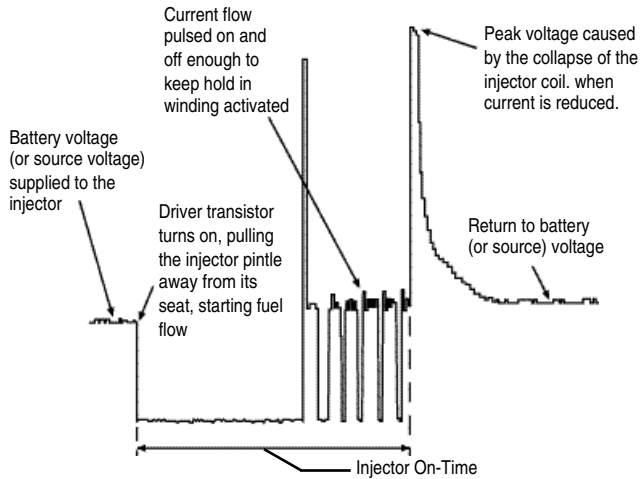

Bosch type Peak and Hold injector drivers are found on a few European models with MFI systems and some early to mid-1980s Asian vehicles with MFI systems.

### • Symptoms

Hesitation on throttle tip in, rough idle, intermittent stall at idle, poor fuel mileage, emissions test failure, low power on acceleration


### • Test Procedure

1. Connect the CH A lead to the injector control signal from the PCM and its ground lead to the injector GND.
2. Start the engine and hold throttle at 2500 RPM for 2-3 minutes until the engine is fully warmed up and the Feedback Fuel System enters closed loop. (Verify this by reviewing the O<sub>2</sub> sensor signal, if necessary.)
3. Shut off A/C and all other accessories. Put vehicle in park or neutral. Rev the engine slightly and watch for the corresponding injector on-time increase on acceleration.
  - 1) Induce propane into the intake and drive the mixture rich. If the system is working properly, the injector on-time will decrease.
  - 2) Create a vacuum leak and drive the mixture lean. The injector on-time will increase.
  - 3) Raise the engine to 2500 RPM and hold it steady. The injector on-time will modulate from slightly larger to slightly smaller as the system control the mixture. Generally, the injector on-time only has to change from 0.25 ms to 0.5 ms to drive the system through its normal full rich to full lean range.

**IMPORTANT:** If the injector on-time is not changing, either the system may be operating in an “open loop” idle mode or the O<sub>2</sub> sensor may be bad.

4. Use the Glitch Snare mode to check for sudden changes in the injector on-time.

### • Reference Waveform

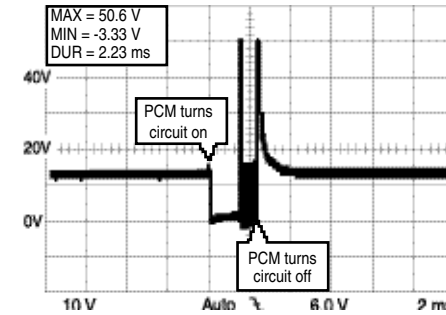

### VEHICLE INFORMATION

YEAR : 1986  
 MAKE : Nissan/Datsun  
 MODEL : Stanza Wagon  
 ENGINE : 2.0 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : B WhtBlk wire  
 STATUS : KOER (Key On Running)  
 RPM : Idle  
 ENG\_TMP : Operating Temperature  
 VACUUM : 21 In. Hg  
 MILEAGE : 183513

When the Feedback Fuel Control System controls fuel mixture properly, the injector on-time will modulate from about 1-6 ms at idle to about 6-35 ms under cold cranking or Wide Open Throttle (WOT) operation. The injector coil release spike(s) ranges are from 30 V to 100 V normally.

**IMPORTANT:** On some European vehicles like Jaguar, there may be only one release spike because the first release spike does not appear due to a spike suppression diode.

### • Troubleshooting Tips

Spikes during on-time or unusual high turn off spikes indicate the injector driver's malfunction.

## Mixture Control Solenoid

### • Theory of Operation

The mixture control signal is the most important output signal in a carbureted Feedback Fuel Control system. On a GM vehicle, this circuit pulses about 10 times per second, with each individual pulse (pulse width or on-time) varying, depending upon the fuel mixture needed at that moment.

In a GM vehicle, this circuit controls how long (per pulse) the main jet metering rods in the carburetor stay down (lean position). Most feedback carburetor systems operate in the same way – more mixture control on-time means lean mixture command. Generally, mixture control commands (from the PCM) that oscillate around duty cycles greater than 50 % mean the system is commanding a lean mixture in an effort to compensate for a long term rich condition.

### • Symptoms

Hesitation on throttle tip in, poor fuel economy, erratic idle, rich or lean emissions


### • Test Procedure

**IMPORTANT:** Before performing the test procedure, the O<sub>2</sub> sensor must be tested and confirmed good.

1. Connect the CH A lead to the mixture solenoid control signal from the PCM and its ground lead to GND.

2. Start the engine and hold throttle at 2500 RPM for 2-3 minutes until the engine is fully warmed up and the Feedback Fuel System enters closed loop. (Verify this by viewing the O<sub>2</sub> sensor signal.)
3. Shut off A/C and all other accessories. Put vehicle in park or neutral. Adjust lean stop, air bleed, and idle mixture as per recommended service procedures for the carburetor being serviced.
4. Use the Glitch Snare mode the check for signal dropouts.

#### • Reference Waveform

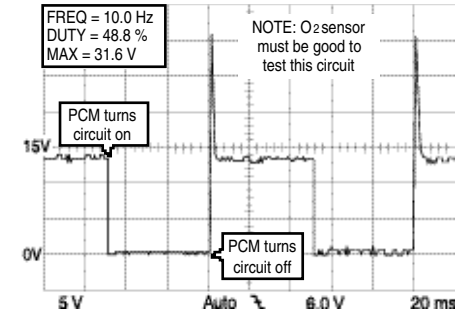

#### VEHICLE INFORMATION

YEAR : 1984  
 MAKE : Oldsmobile  
 MODEL : Delta 88  
 ENGINE : 5.0 L  
 FUELSYS : Feedback Carburetor  
 PCM\_PIN : 18 Blu wire (at test connector)  
 STATUS : KOER (Key On Running)  
 RPM : Idle  
 ENG\_TMP : Operating Temperature  
 VACUUM : 19.5 In. Hg  
 MILEAGE : 104402

When the main venturi metering circuits are adjusted properly (lean stop, air bleed, etc.), the mixture control signal should oscillate around 50 % duty cycle normally. When the main metering and idle mixture adjustments are set correctly, the tall spike will oscillate slightly from right to left and back again, but remain very close to the middle of the two vertical drops in the waveform. The PCM is oscillating the signal right to left, based on input from the O<sub>2</sub> sensor.

#### • Troubleshooting Tips

If the duty cycle does not remain around 50 %, check for vacuum leaks or a poor mixture adjustment.

If the waveform oscillates around 50 % duty cycle during one operating mode (for instance, idle) but not another, then check for vacuum leaks, misadjusted idle mixture, main metering mixture, or other non-feedback system problems that affect mixture at different engine speeds.

### EGR (Exhaust Gas Recirculation) Control Solenoid

#### • Theory of Operation

EGR systems are designed to dilute the air-fuel mixture and limit NO<sub>x</sub> formation when combustion temperatures generally exceed 2500 °F (1371 °C) and air-fuel ratios are lean. The effect of mixing exhaust gas (a relatively inert gas) with the incoming air-fuel mixture is a sort of chemical buffering or cooling of the air and fuel molecules in the combustion chamber. This prevents excessively rapid burning of the air-fuel charge, or even detonation, both of which can raise combustion temperatures above 2500 °F. The initial formation of NO<sub>x</sub> is limited by EGR flow and then the catalytic converter acts to chemically reduce the amounts of produced NO<sub>x</sub> entering the atmosphere.

How much and when EGR flow occurs is very important to emissions and driveability. To precisely control EGR flow, the PCM sends Pulse Width Modulated signals to a vacuum solenoid valve to control vacuum flow to the EGR valve. When applying vacuum, the EGR valve opens, allowing EGR flow. When blocking vacuum, EGR flow stops.

Most engine control systems do not enable EGR operation during cranking, engine warm up, deceleration, and idling. EGR is precisely controlled during acceleration modes to optimize engine torque.


#### • Symptoms

Hesitation, power loss, stall, emissions with excessive NO<sub>x</sub>, engine detonation (pinging)

#### • Test Procedure

1. Connect the CH A lead to the EGR control signal from the PCM and its ground lead to GND.
2. Start the engine and hold throttle at 2500 RPM for 2-3 minutes until the engine is fully warmed up and the Feedback Fuel System enters closed loop. (Verify this by viewing the O<sub>2</sub> sensor signal.)
3. Shut off A/C and all other accessories. Drive the vehicle under normal driving modes; start from dead stop, light acceleration, heavy acceleration, cruise, and deceleration.
4. Make sure that the amplitude, frequency, shape, and pulse width are all correct, repeatable, and present during EGR flow conditions.
5. Make sure that all the hoses and lines to and from the intake manifold, EGR valve, and vacuum solenoid valve are all intact, and routed properly, with no leaks. Make sure the EGR valve diaphragm can hold the proper amount of vacuum. Make sure that the EGR passageways in and around the engine are clear and unrestricted from internal carbon buildup.
6. Use the Glitch Snare mode to check for signal dropouts.

#### • Reference Waveform

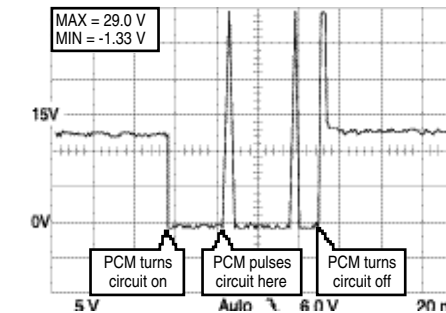

#### VEHICLE INFORMATION

YEAR : 1990  
 MAKE : Chevrolet  
 MODEL : Suburban  
 ENGINE : 5.7 L  
 FUELSYS : Throttle Body Fuel Injection  
 PCM\_PIN : A4 Gry wire  
 STATUS : KOER (Key On Running)  
 RPM : Light Acceleration  
 ENG\_TMP : Operating Temperature  
 VACUUM : 12-23 In. Hg  
 MILEAGE : 59726

As soon as the engine reaches the predetermined EGR requirement conditions, the PCM should begin pulsing the EGR solenoid with a pulse width modulated signal to open the EGR solenoid valve. EGR demands are especially high during accelerations.



### • Troubleshooting Tips

If the waveform has runt (shortened) spike heights, it indicates a shorted EGR vacuum solenoid.

If the waveform has a flat line (no signal at all), it indicates a PCM failure, PCM's EGR conditions not met, or wiring or connector problem.

Too much EGR flow can make the vehicle hesitate, loose power, or even stall. Not enough EGR flow can result in emissions with excessive NOx and engine detonation (pinging).

## IAC (Idle Air Control) Motor

### • Theory of Operation

Idle air control valves keep the engine idling as low as possible, without stalling, and as smoothly as possible when accessories such as air conditioning compressors, alternators, and power steering load the engine.

Some IAC valves are solenoids (most Fords), some are rotating motors (European Bosch), and some are gear reduction DC stepper motors (most GM, Chrysler). In all cases, however, the PCM varies the amplitude or pulse width of the signal to control its operation and ultimately, idle speed.

Rotating IAC motors receive a continuous pulse train. The duty cycle of the signal controls the speed of the motor, and in turn the amount of air bypassing the throttle plate.


### • Symptoms

Erratic high or low idle, stalling, high activity but no change in idle

### • Test Procedure

1. Connect the CH A lead to the IAC control signal from the PCM and its ground lead to GND.
2. Run the engine at idle while turning accessories (A/C, blowers, wipers, etc.) on and off. If the vehicle has an automatic transmission, put it in and out of drive and park. This will change the load on the engine and cause the PCM to change the output command signal to the IAC motor.
3. Make sure that idle speed responds to the changes in duty cycle.
4. Use the Glitch Snare mode to check for signal dropouts.

### • Reference Waveform

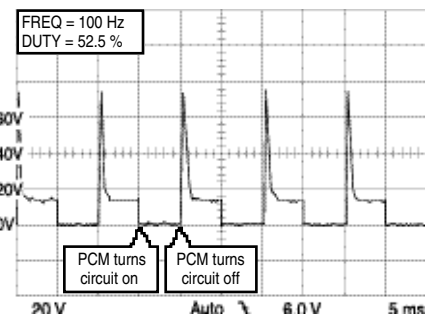

### VEHICLE INFORMATIONS

YEAR : 1989  
MAKE : BMW  
MODEL : 525 I  
ENGINE : 2.5 L  
FUELSYS : Multiport Fuel Injection  
PCM\_PIN : 22 WhtGrn wire  
STATUS : KOER (Key On Running)  
RPM : Idle  
ENG\_TMP : Operating Temperature  
VACUUM : 15 In. Hg  
MILEAGE : 72822

The idle control output command from the PCM should change when accessories are switched on and off or the transmission is switched in and out of gear. The pulse width modulated signals from the PCM should control the speed of the motor, and in turn the amount of air bypassing the throttle plate. The turn off spikes may not be present in all IAC drive circuits.

**IMPORTANT** : Before diagnosing IAC motor, several things must be checked and verified; the throttle plate should be free of carbon buildup and should open and close freely, the minimum air rate (minimum throttle opening) should be set according to manufacturer's specifications, and check for vacuum leaks or false air leaks.

### • Troubleshooting Tips

If the engine idle speed doesn't change corresponding with the change of the PCM's command signal, suspect a bad IAC motor or clogged bypass passage.

## IAC (Idle Air Control) Solenoid

### • Theory of Operation

Idle air control solenoids keep the engine idling as low as possible, without stalling, and as smoothly as possible when accessories such as air conditioning compressors, alternators, and power steering load the engine.

Ford's IAC solenoids are driven by a DC signal with some AC superimposed on top. The solenoid opens the throttle plate in proportion to the DC drive it receives from the PCM. The DC drive is applied by holding one end of the solenoid coil at battery positive while pulling the other end toward GND. The DC voltage at the driven pin decreases as the solenoid drive current is increased.


### • Symptoms

Erratic high or low idle, stalling, high activity but no change in idle

### • Test Procedure

1. Connect the CH A lead to the IAC control signal from the PCM and its ground lead to the chassis GND.
2. Run the engine at idle while turning accessories (A/C, blowers, wipers, etc.) on and off. If the vehicle has an automatic transmission, put it in and out of drive and park. This will change the load on the engine and cause the PCM to change the output command signal to the IAC solenoid.
3. Make sure that the amplitude, frequency, and shape are all correct, repeatable, and consistent for the various idle compensation modes.
4. Make sure that idle speed responds to the changes in the IAC drive.

- **Reference Waveform**

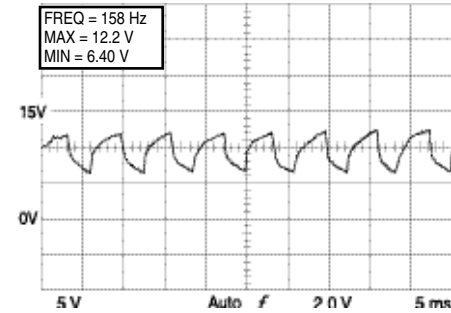

**VEHICLE INFORMATION**

YEAR : 1993  
 MAKE : Ford  
 MODEL : Explorer  
 ENGINE : 4.0 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : 21 Wht-LtBlu wire  
 STATUS : KOER (Key On Running)  
 RPM : Idle  
 ENG\_TMP : Operating Temperature  
 VACUUM : 19 In. Hg  
 MILEAGE : 54567

The idle control output command from the PCM should change when accessories are switched on and off or the transmission is switched in and out of gear. DC level should decrease as the IAC solenoid drive current is increased.

**IMPORTANT :** Before diagnosing IAC solenoid, several things must be checked and verified; the throttle plate should be free of carbon buildup and should open and close freely, the minimum air rate (minimum throttle opening) should be set according to manufacturer's specifications, and check for vacuum leaks or false air leaks.

- **Troubleshooting Tips**

If the engine idle speed doesn't change corresponding with the change of the PCM's command signal, suspect a bad IAC solenoid or clogged bypass passage.

### Transmission Shift Solenoid

- **Theory of Operation**

The PCM controls an automatic transmission's electronic shift solenoid or torque converter clutch (TCC) lockup solenoid.

The PCM opens and closes the solenoid valves using a DC switched signal. These solenoid valves, in effect, control transmission fluid flow to the clutch pack, servos, torque converter lockup clutches, and other functional components of the transmission under the PCM's control.

Some electronic shift solenoid systems use ground feed controlled solenoids that are always powered up and some systems use power feed controlled solenoids that are always grounded. A ground feed controlled solenoid on a DC switched circuit appears as a straight line at the system voltage, and drops to ground when the PCM activates the solenoid. A power feed controlled solenoid on a DC switched circuit appears as a straight line at 0 V until the PCM activates the solenoid.

Many vehicle PCM's are programmed not to enable TCC operation until the engine reaches a certain temperature as well as a certain speed.


- **Symptoms**

Slow and improper shifting, engine stops running when vehicle comes to a stop

- **Test Procedure**

1. Connect the CH A lead to the transmission shift solenoid control signal from the PCM and its ground lead to the chassis GND.
2. Drive the vehicle as needed to make the driveability problem occur or to exercise the suspected shift solenoid circuit.
3. Make sure that the amplitude is correct for the suspected transmission operation.
4. Use the proper transmission fluid pressure gauges to make sure the transmission fluid pressure and flow being controlled by the solenoid is being effected properly by solenoid operation. This will help discriminate between an electronic problem and a mechanical problem (such as a sticking solenoid valve, clogged fluid passages, or leaking internal seals, etc.) in the transmission.

- **Reference Waveform**

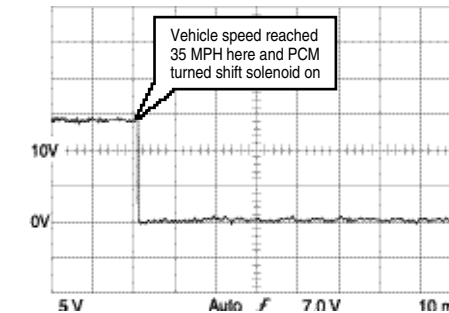

**VEHICLE INFORMATION**

YEAR : 1993  
 MAKE : Ford  
 MODEL : Explorer  
 ENGINE : 4.0 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : 52 Org Yel wire  
 STATUS : KOBD (Key On Driven)  
 RPM : 1500  
 ENG\_TMP : Operating Temperature  
 VACUUM : 19 In. Hg  
 MILEAGE : 54567

The drive signal should be consistent and repeatable.

- **Troubleshooting Tips**

If the waveform appears as a flat line (no signal at all), it can indicate a PCM failure, PCM conditions not met (shift points, TCC lockup, etc.), or wiring or connector problems.

### Turbo Boost Control Solenoid

- **Theory of Operation**

Turbochargers increase horsepower considerably without increasing engine piston displacement. Turbochargers also improve torques over the useful RPM range and fuel economy, and reduces exhaust gas emissions.

Turbocharger's boost pressure must be regulated to obtain optimum acceleration, throttle response, and engine durability. Regulating the boost pressure is accomplished by varying the amount of exhaust gas that bypasses the exhaust side turbine. As more exhaust gas is routed around the turbine, the less boost pressure is increased.

A door (called the wastegate) is opened and closed to regulate the amount of bypass. The wastegate is controlled by a vacuum servo motor, which can be controlled by a vacuum solenoid valve that receives a control signal from the PCM. When the PCM receives a signal from the MAP sensor indicating that certain boost pressure is reached, the PCM commands the vacuum solenoid valve to open in order to decrease boost pressure. The PCM opens the solenoid valve via a pulse width modulated signal.


### • Symptoms

Poor driveability, engine damage (blown head gasket), hard stall under acceleration

### • Test Procedure

1. Connect the CH A lead to the solenoid control signal from the PCM and its ground lead to the chassis GND.
2. Start the engine and hold throttle at 2500 RPM for 2-3 minutes until the engine is fully warmed up and the Feedback Fuel system enters closed loop. (Verify this by viewing the O<sub>2</sub> sensor signal, if necessary.)
3. Drive the vehicle as needed to make the suspected problem occur.
4. Make sure that the drive signal comes on as the boost pressure is regulated and the wastegate actually responds to the solenoid control signal.

### • Reference Waveform

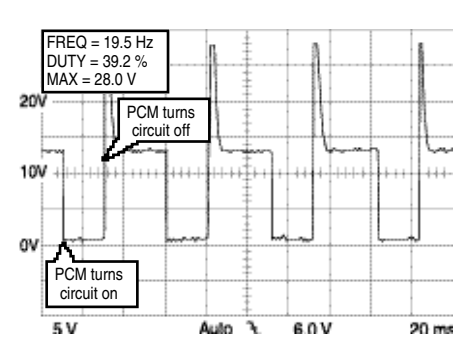

### VEHICLE INFORMATION

YEAR : 1988  
 MAKE : Chrysler  
 MODEL : LeBaron Convertible  
 ENGINE : 2.2 L Turbo  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : 39 LtGrn Blk wire  
 STATUS : KOBD (Key On Driven)  
 RPM : Moderate Acceleration (35 MPH)  
 ENG\_TMP : Operating Temperature  
 VACUUM : 5 In. Hg  
 MILEAGE : 77008

As soon as the turbo engine reaches a predetermined boost pressure under acceleration, the PCM should begin pulsing the turbo boost solenoid with a varying pulse width modulated signal to open the wastegate. On deceleration, the signal is stopped and the valve is closed.

### • Troubleshooting Tips

If the turn off spikes are not present, the solenoid coil may be shorted.

If the drive signal never appears under the high boost conditions, the driver within the PCM may have failed.

If the turn off spikes are runted (shortened), the vacuum solenoid valve may be shorted.

## Diesel Glow Plug

### • Theory of Operation

Starting cold diesel engines are not easy because Blowby past the piston rings and thermal losses reduce the amount of compression possible. Cold starting can be improved by a sheathed element glow plug in the precombustion chamber (in case of Direct-injection (DI) engines, in the main combustion chamber).

When current flows through the heating coil of the glow plug, a portion of the fuel around the glow plug's hot tip is vaporized to assist in igniting the air-fuel mixture. Newer glow plug systems, which continue to operate after engine startup for up to 3 minutes, improve initial engine performance, reduce smokes, emissions, and combustion noises.

Usually, a glow plug control unit supplies power to the glow plug during appropriate conditions. Some newer glow plugs are designed with a heater element that changes resistance with temperature. The glow plug's resistance increases as the heating element gets hotter by the combustion temperature's increment after startup.

Usually, glow plug systems are power feed controlled so the waveform of the current going through its heating element appears as a straight line at 0 V until the ignition key is switched on.


### • Symptoms

No or hard start, emissions with excessive smoke, excessive combustion noises (knocks)

### • Test Procedure

1. Set the instrument up with the current probe. (Connect the probe to the CH A.)
2. Adjust the probe to read DC Zero.
3. Clamp the current probe around the glow plug feed wire.
4. With the diesel engine stone cold, turn on the ignition key and watch for the readings.
5. Make sure that the amplitude of the current is correct and consistent for the glow plug systems under test.

### • Reference Waveform

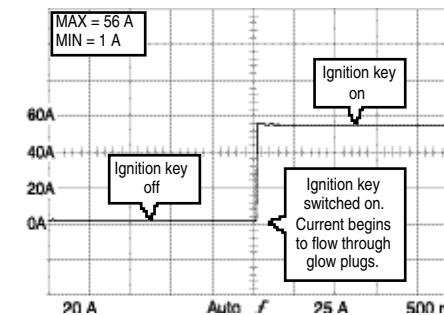

### VEHICLE INFORMATION


YEAR : 1977  
 MAKE : Mercedes-Benz  
 MODEL : 240 D  
 ENGINE : 2.4 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : Power supply to glow plugs  
 STATUS : KOEO (Key On Engine Off)  
 RPM : 0  
 ENG\_TMP : Ambient Temperature  
 VACUUM : 0 In. Hg  
 MILEAGE : 151417

Look for the current going through the glow plug to be at its maximum when the ignition key is switched on. Maximum current and operating current specifications may be available from the manufacturer's service manual. All glow plugs should draw about the same current under cold or hot conditions.

**• Troubleshooting Tips**

If the waveform stays flat (at 0 V), suspect a faulty glow plug. If the waveform has drop outs, suspect an open circuit in the glow plug's heating element. An open circuit may be caused by overheat from a faulty controller, vibration, or fatigue related malfunctions.

**6.4 ELECTRICAL TESTS**

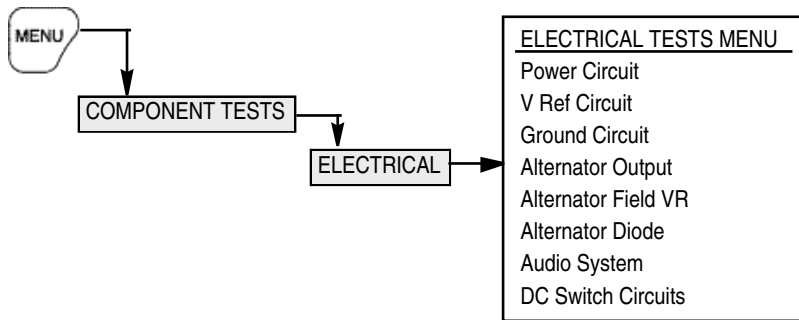

**Power Supply Circuit**

**• Theory of Operation**

This test procedure tests the integrity of the battery power supply to vehicle as well as to subsystems or switches that rely on battery power to operate. This test procedure can be used to assure components and devices are getting the quality and quantity of power supply necessary for proper operation. This procedure can be applied to a lot of different automotive circuits that use battery voltage as their power source, such as power supply circuits (to PCM and other control modules), temperature switches, throttle switches, vacuum switches, light switches, brake switches, cruise control switches, etc.

**• Symptoms**


No start, loss of power

**• Test Procedure**

1. Connect the CH A lead to the power supply circuit of the device to be tested and its ground lead to the device's GND.
2. Make sure power is switched on in the circuit so that the sensor, device or circuit is operational and current is flowing through the circuit.

3. Exercise the sensor, device, or circuit while watching for the amplitude of the signal. The amplitude should stay in a predetermined voltage range for a given condition.
4. In most cases, the amplitude of the waveform should stay at the battery voltage when the circuit is on, and go to 0 V when the circuit is off.

**• Reference Waveform**

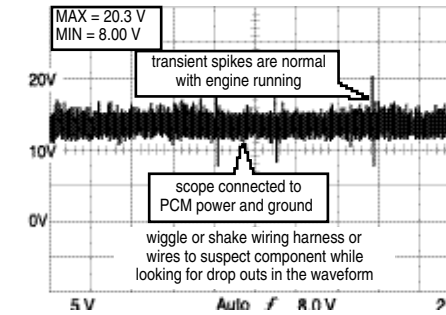

VEHICLE INFORMATION	
YEAR	: 1986
MAKE	: Oldsmobile
MODEL	: Toronado
ENGINE	: 3.8 L
FUELSYS	: Multiport Fuel Injection
PCM_PIN	: C16 Org and D1 BlkWht wires
STATUS	: KOER (Key On Running)
RPM	: Idle
ENG_TMP	: Operating Temperature
VACUUM	: 20 In. Hg
MILEAGE	: 123686

The voltage should stay in a predetermined voltage range for a given condition (during normal operation). Transient spikes above average voltage level are normal with engine running.

**• Troubleshooting Tips**

If the amplitude is changing when it is not supposed to (for example, when the switch in the circuit is not being operated), there may be a failure in the circuit.

If the waveform has some spikes to ground, there may be an open circuit in the power side or there may be a voltage short to ground.

If the waveform has some upward spikes, there may be an open circuit in the ground side.

**Voltage Reference (V Ref) Circuit**

**• Theory of Operation**

The PCM provides a stable regulated voltage, normally 5 V DC (8 V or 9 V DC on some older vehicles), to sensors and components controlled by it for operation. The V Ref circuit should stay at their specified voltage during normal operation. (The voltage level should not vary more than 200 mV under normal operation.)

**• Symptoms**


Low power, sensor output values out of range

**• Test Procedure**

1. Connect the CH A lead to the V Ref signal from the PCM and its ground lead to the sensor or chassis GND.

2. Make sure power is switched on to the PCM and monitor the voltage level of the V Ref signal from the PCM. Compare it with the manufacturer's recommended limits.
3. If the voltage level is unstable or the waveform shows spikes to ground, check the wiring harness for shorts or intermittent connections.

#### • Reference Waveform

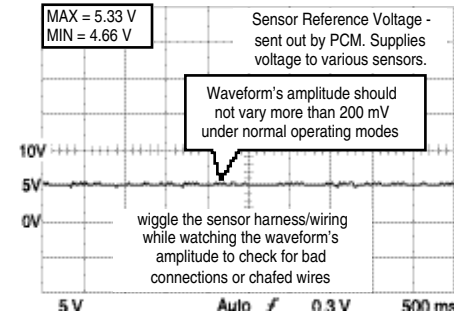

#### VEHICLE INFORMATION

YEAR : 1986  
 MAKE : Oldsmobile  
 MODEL : Toronado  
 ENGINE : 3.8 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : C14 Gry wire at TPS  
 STATUS : KOER (Key On Running)  
 RPM : Idle  
 ENG\_TMP : Operating Temperature  
 VACUUM : 18 In. Hg  
 MILEAGE : 123686

The voltage should stay in a predetermined voltage range for a given condition. Normal V Ref voltage ranges are from 4.50 V to 5.50 V.

#### • Troubleshooting Tips

If the voltage level is unstable or the waveform shows spikes to ground, check the wiring harness for shorts or bad connections.

Waveform's amplitude should not vary more than 200 mV under normal operation.

### Ground Circuit

#### • Theory of Operation

A ground circuit controls the feedback on any controlled circuit by grounding that circuit to a common conductor (ground).

This test procedure tests the integrity of ground circuits by performing a voltage drop test across the suspected resistance in a ground circuit or the suspect junction.

This test procedure can be used to assure components and devices are getting the quality of ground supply necessary for proper operation. This procedure can be applied to a lot of different automotive circuits that are grounded to the vehicle's electrical systems either through the engine block, chassis, or through a wire connected to the negative side of the battery.


#### • Symptoms

Poor performance, inaccurate sensor outputs

#### • Test Procedure

1. Connect the CH A lead to the GND pin of the grounded device or the one side of the suspect junction and its ground lead to the chassis GND or the other side of the suspect junction.
2. Make sure power is switched on in the circuit so that the sensor, device, or circuit is operational and current is flowing through the circuit.
3. The average voltage drop across the junction should be less than 100 mV to 300 mV.

#### • Reference Waveform

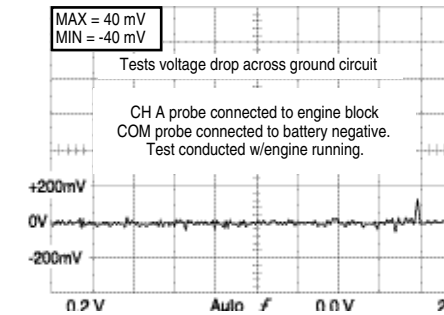

#### VEHICLE INFORMATION

YEAR : 1986  
 MAKE : Oldsmobile  
 MODEL : Toronado  
 ENGINE : 3.8 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : CH A on Engine Block  
           COM on Battery Negative  
 STATUS : KOER (Key On Running)  
 RPM : Idle  
 ENG\_TMP : Operating Temperature  
 VACUUM : 18 In. Hg  
 MILEAGE : 123686

Average voltage drop should not exceed 100 - 300 mV. If there is too much resistance in the ground circuit, the waveform's amplitude will be too high.

#### • Troubleshooting Tips

If average voltage drop is excessive, clean or replace the connections and cables.

### Alternator Output

#### • Theory of Operation

Alternators replaced generators due to their higher output at low engine speed, and their more compact and lightweight design. An alternator is an AC generator with diode rectification, which converts the AC signal to a pulsating DC signal. The DC signal charges the vehicle's battery and supplies power to run the vehicle's electrical and electronic systems. Field current is supplied to the rotor in the alternator to vary its output. Alternator output voltage increases as engine RPM increases.

The alternator's output voltage is controlled by a solid state regulator within the PCM, in some cases. The regulator limits the charging voltage to a preset upper limit and varies the amount of the excitation current supplied to the field winding. The field winding excitation is varied according to the battery's need for charge and ambient temperature.

Check the manufacturer's specs regarding the upper and lower limits of charging voltage permitted for the vehicle being checked.

The alternator's output voltage should be roughly 0.8 V to 2.0 V above the static battery voltage with the KOEO (Key Off Engine Off).

- Symptoms


No start, low battery, slow cranking

- Test Procedure

Before performing the alternator output voltage test, the battery's state of charge should be checked and a battery load test should be performed.

1. Connect the CH A lead to the battery positive post and its ground lead to the battery negative post.
2. Turn off all electrical loads and start the engine.
3. Hold the engine at 2500 RPM for about 3 minutes and check the alternator's output voltage.

- Reference Waveform

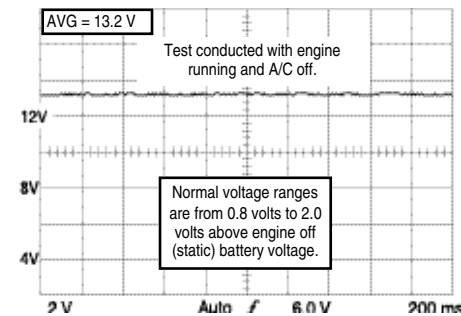

**VEHICLE INFORMATION**

YEAR : 1986  
 MAKE : Oldsmobile  
 MODEL : Toronado  
 ENGINE : 3.8 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : CH A to Positive side of Battery  
                   COM to GND  
 STATUS : KOER (Key On Running)  
 RPM : 2500  
 ENG\_TMP : Operating Temperature  
 VACUUM : 20 In. Hg  
 MILEAGE : 123686

Normal voltage ranges are about 0.8 V to 2.0 V above the static battery voltage with the Key Off Engine Off. Over 2.0 V may indicate an overcharge condition and less than 0.8 V may indicate an undercharge solution. Different vehicles have different charging system specifications. Consult the manufacturer's specs.  
 General rules of thumb; GM 14.5 to 15.4 V, Ford 14.4 to 14.8 V, and Chrysler 13.3 to 13.9 V

**IMPORTANT:** The test results can be different in a big way according to the ambient temperature, what electrical loads are on the battery during testing, the age of battery, the battery's charging state, the level and quality of the battery's electrolyte, or the battery design.

- Troubleshooting Tips

If the output voltage is excessively high, or the battery is leaking, wet, smells like acid, or is boiling, the alternator may be defective. Check the regulator for its proper operation. Also perform a voltage drop test on both sides of the alternator housing and at the battery. If the voltage is different, the alternator may be grounded improperly.

## Alternator Field/ VR (Voltage Reference)

- Theory of Operation

A voltage regulator (in the PCM) controls alternator output by adjusting the amount of current flowing through the rotor field windings. To increase alternator output, the voltage regulator allows more current to flow through the rotor field windings. The field control current is varied according to the battery's need for charge and ambient temperature.

If the battery is discharged, the regulator may cycle the field current on 90 % of the time to increase the alternator output. If the electrical load is low, the regulator may cycle the field current off 90 % of the time to decrease the alternator output. This signal is usually pulse width modulated.

If the field control circuit is malfunctioning, the charging system can overcharge or undercharge, either creating problems.


- Symptoms

Undercharging, overcharging, or no charging output

- Test Procedure

1. Connect the CH A lead to the field control circuit, and its ground lead to the chassis GND.
2. Start the engine and run at 2500 RPM. Operate the heater fan on high with the headlight on high beam, or use battery load tester to vary the amount of load on the vehicle's electrical system.
3. Make sure that the voltage regulator is properly controlling the duty cycle of the alternator field drive signal as the load changes.

- Reference Waveform

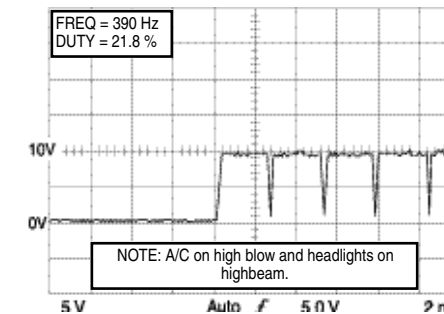

**VEHICLE INFORMATION**

YEAR : 1986  
 MAKE : Oldsmobile  
 MODEL : Toronado  
 ENGINE : 3.8 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : 3D11 at BCM Grey wire at alternator pin F  
 RPM : 2500  
 ENG\_TMP : Operating Temperature  
 VACUUM : 18 In. Hg  
 MILEAGE : 123686

The charging system's voltage regulator should vary the on-time of the alternator's field control drive signal depending on the electrical system requirements. The regulator should pulse the field drive signal with the overall duty cycle average meeting the electrical system demands. When electrical load is put on the battery, the field control circuit should go high to compensate for it. Frequency may increase during conditions of increased charging demand.

### • Troubleshooting Tips

If the voltage is high, there is no command to turn the alternator on or the regulator does not have the ability to decrease the voltage.

If the voltage is low, the alternator will be on all the time and cause an overcharging state.

If the voltage can not be pulled to ground sufficiently, there may be bad regulator within the PCM.

## Alternator Diode

### • Theory of Operation

An alternator generates current and voltage by the principles of electromagnetic induction. Accessories connected to the vehicle's charging system require a steady supply of direct current (DC) at a relatively steady voltage level. A set of diodes, part of the alternator's rectifier bridge, modifies the AC voltage (produced in the alternator) to the DC voltage. When analyzing a vehicle's charging system, both AC and DC level should be analyzed because the AC level (called "ripple voltage") is a clear indication of diode condition. Too high a level of AC voltage can indicate a defective diode and discharge the battery.

Usually, a bad alternator diode produces Peak to Peak voltages of more than 2 V.

### • Symptoms

Overnight battery draining, excessive AC current from alternator output, flickering lights, poor driveability


### • Test Procedure

#### **NOTE**

*This test is made at the rear case half of the alternator and not battery.  
The battery can act as a capacitor and absorb the AC voltage.*

1. Connect the CH A lead to the B+ output terminal on the back of the alternator and its ground lead to the alternator case.
2. With the Key On, Engine Off, turn on the high beam headlights, put the A/C or heater blower motor on high speed, turn on the windshield wipers, and rear defrost (if equipped) for 3 minutes.
3. Start the engine and let it idle.
4. Make sure that pulses in ripple waveform are all about the same size and that pulses are not grouped into pairs.

### • Reference Waveform

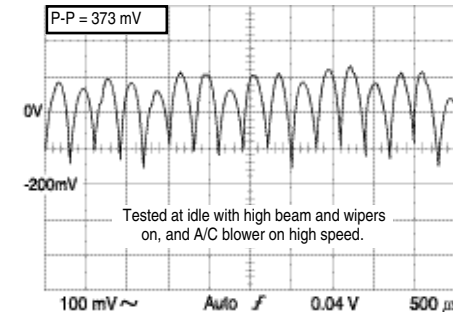

#### VEHICLE INFORMATION

YEAR : 1986  
MAKE : Oldsmobile  
MODEL : Toronado  
ENGINE : 3.8 L  
FUELSYS : Multiport Fuel Injection  
PCM\_PIN : B+ post at alternator  
STATUS : KOER (Key On Running)  
RPM : Idle  
ENG\_TMP : Operating Temperature  
VACUUM : 18 In. Hg  
MILEAGE : 123686

A bad alternator diode produces Peak to Peak voltages exceeding 2 V usually and its waveform will have "humps" that drop out and go much lower than the normal ones shown above.  
A shorted diode splits the pulses into pairs.

### • Troubleshooting Tips

If the waveform has very noticeable dropouts with two or three times the peak to peak amplitude of a normal ripple, the diodes are defective. Dropouts from bad diodes usually have a peak to peak voltages of around 1.5 V to 2.0 V.

If the humps in the waveform are grouped into pairs, the alternator has one or more bad diodes.

## Audio System Speaker

### • Theory of Operation

Automotive speakers are electromechanical devices that convert electrical signal from a vehicle's radio (or monitoring system) into mechanical vibrations. The mechanical vibrations produced by automotive speakers are in the audible frequency range from 16 to 20,000 Hz.

Audio signals to the speaker usually range between 0.5 and 10 V Peak to Peak. DC resistance of the speaker voice coils is normally less than 10 ohms.


### • Symptoms

A blown speaker with an open circuit

### • Test Procedure

1. Connect the CH A lead to the positive speaker circuit and its ground lead to the negative speaker circuit.
2. Turn on the radio at normal listening level and make sure that the speaker drive signal is present.
3. To measure the resistance of the speaker voice coils, set the instrument to the GMM mode. Measure the resistance with the drive signal disconnected.

• **Reference Waveform**

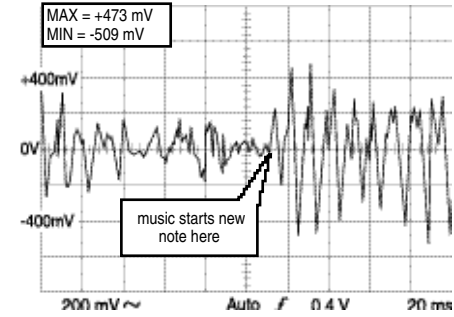

VEHICLE INFORMATION

YEAR : 1989  
 MAKE : Buick  
 MODEL : Le Sabre  
 ENGINE : 3.8 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : CH A to speaker (+)  
                   COM to speaker (-)  
 STATUS : KOEO (Key On Engine Off)  
 RPM : 0  
 ENG\_TMP : Ambient Temperature  
 VACUUM : 0 In. Hg  
 MILEAGE : 93640

A few notes from Willie Nelson's  
 "On The Road Again"

Automotive speaker drive signals normally range between 0.5 V and 10 V Peak to Peak.  
 Resistance of the speaker voice coils is normally less than 10 ohms.

• **Troubleshooting Tips**

If the speaker is blown, suspect an open circuit.

**DC Switch Circuits**

• **Theory of Operation**

This test procedure can be applied to a lot of different automotive circuits that use B+ as their power source, such as power supply circuits (to the PCM and other control modules), temperature switches, throttle switches, vacuum switches, light switches, brake switches, cruise control switches, etc.

This test can be used to test the integrity of the battery power supply to the switches that rely on the battery power to operate.

• **Symptoms**


No start, loss of power, no working of switches

• **Test Procedure**

1. Connect the CH A lead to the power supply circuit of the switch to be tested and its ground lead to the switch GND circuit.
2. Make sure power is switched on in the circuit so that the switch is operational.

3. Exercise the switch while paying attention to the amplitude of the signal. It should stay in a predetermined voltage range for a given condition. In most cases, the amplitude of the waveform should stay at B+ or battery voltage when the circuit is on, and go to 0 V when the switch is activated.

• **Reference Waveform**

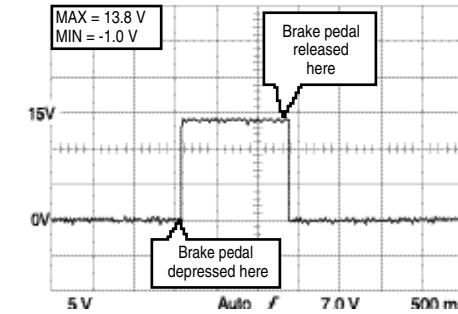

VEHICLE INFORMATION


YEAR : 1993  
 MAKE : Ford  
 MODEL : Explorer  
 ENGINE : 4.0 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : 2 Lt Grn wire  
 STATUS : KOER (Key On Running)  
 RPM : Idle  
 ENG\_TMP : Operating Temperature  
 VACUUM : 19 In. Hg  
 MILEAGE : 54567

If there is a failure in the circuit, the waveform's amplitude will change when it is not supposed to.

• **Troubleshooting Tips**

- If the waveform has spikes to ground, there may be an open circuit in the power side or a voltage short to ground.
- If the waveform has upward spikes, there may be an open in the ground side.

**6.5 IGNITION TESTS**

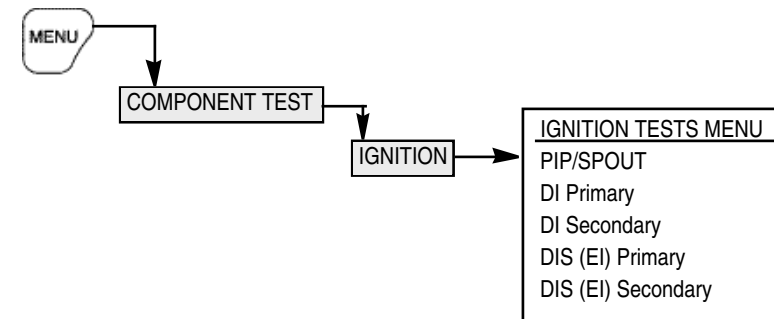



## PIP (Profile Ignition Pickup)/SPOUT (Spark Output)

### • Theory of Operation

The most common electronic ignition system found on Ford vehicles (primarily on Ford/Lincoln/Mercury) has been dubbed TFI for Thick Film Ignition. This system uses a Hall Switch in the TFI module, mounted on the distributor, to produce a basic spark timing signal, PIP (Profile Ignition Pickup). This signal is sent to the PCM and the PCM uses this signal to monitor results and accurately time the fuel injector and electronic spark timing output (SPOUT) signals. The PCM sends the SPOUT back to the TFI module, which then fires the ignition coil primary circuit. The PIP signal is primarily a frequency modulated signal that increases and decreases its frequency with engine RPM, but it has also a pulse width modulated component because it is acted upon by the TFI module, based on information previously received via the SPOUT signal.

The SPOUT signal is a pulse width modulated signal because the PCM continually alters the SPOUT signal's pulse width, which has the primary ignition dwell and ignition timing advance information encoded in it. The frequency of the SPOUT signal also increases and decreases with engine RPM because it simply mimics the frequency of the PIP signal.

Many GM/European/Asian vehicles use a similar overall ignition circuit design.

The rising and falling edges of the SPOUT move in relation to PIP. The rising edge controls spark timing and the falling edge controls coil saturation (dwell).

Watching both simultaneously using this instrument will tell you whether the PCM can compute timing based on sensor inputs. For example, if the MAP sensor fails, the rising edge of SPOUT will not move relative to the rising edges of PIP when Manifold Absolute Pressure changes.


### • Symptoms

Engine stall out, misfire, slow advance timing, hesitations, no start, poor fuel economy, low power, high emissions

### • Test Procedure

1. Connect the ground leads of both channel test leads to the chassis GND's. Connect the CH A to the PIP signal and the CH B to the SPOUT signal. Use a wiring diagram for the vehicle being serviced to get the PCM pin number, or color of the wire for each circuit.
2. Crank or start the engine.
3. With the Key On, Engine Running (KOER), let the engine idle, or use the throttle to accelerate and decelerate the engine, or drive the vehicle as needed to make the driveability problem occur.
4. Look closely to see that the frequency of both signals is keeping pace with engine RPM and that the pulse width on the pulse width modulated notches of the signal changes when timing changes are required.
5. Look for abnormalities observed in the waveforms to coincide with an engine sputter or driveability problem.

### • Reference Waveform

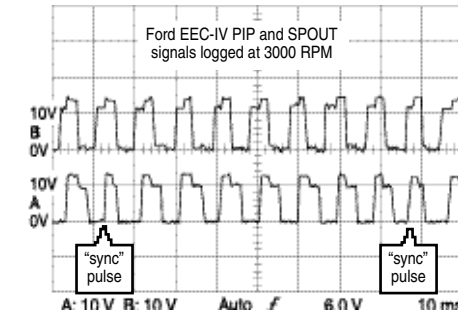

### VEHICLE INFORMATION

YEAR : 1993  
MAKE : Ford  
MODEL : F150 4WD Pickup  
ENGINE : 5.0 L  
FUELSYS : Multiport Fuel Injection  
PCM\_PIN : CH A 56 GryOrg wire  
          : CH B 36 Pnk wire  
STATUS : KOER (Key On Running)  
RPM : 3000  
ENG\_TMP : Operating Temperature  
VACUUM : 21 In. Hg  
MILEAGE : 66748

The edges must be sharp. Anything that affects ignition timing should change the position of SPOUT (upper trace) with respect to PIP (lower trace). The notches out of the top and bottom corner of PIP go away when the SPOUT connector is removed because this cuts off the TFI's ability to encode the PIP signal with the SPOUT information.

### • Troubleshooting Tips

If changing manifold vacuum has no effect on the rising edges of SPOUT, check for a faulty BP/MAP sensor.

If PIP is absent, the engine will not start; check for a bad TFI module or other distributor problem.

If SPOUT is absent, the system may be in LOS (Limited Operation Strategy) or limp-home mode. Check for problems in the PCM or bad wiring harness connectors.

If the rising edges of PIP or SPOUT are rounded, timing will be inaccurate, although the system may not set an error code. Check for problems in the module producing each signal.

## DI (Distributor Ignition) Primary

### • Theory of Operation

The ignition coil primary signal is one of the top three most important diagnostic signals in powertrain management systems. This signal can be used for diagnosing the driveability problems such as no starts, stalls at idle or while driving, misfires, hesitation, cuts out while driving, etc.

The waveform displayed from the ignition primary circuit is very useful because occurrences in the ignition secondary burn are induced back into the primary through mutual induction of the primary and secondary windings.

This test can provide valuable information about the quality of combustion in each individual cylinder. The waveform is primarily used to :

1. analyze individual cylinder's dwell (coil charging time),
2. analyze the relationship between ignition coil and secondary circuit performance (from the firing line or ignition voltage line),
3. locate incorrect air-fuel ratio in individual cylinder (from the burn line), and

4. locate fouled or damaged spark plugs that cause a cylinder misfire (from the burn line).

It's sometimes advantageous to test the ignition primary when the ignition secondary is not easily accessible.


### • Symptoms

No or hard starts, stalls, misfires, hesitation, poor fuel economy

### • Test Procedure

1. Connect the CH A lead to the ignition coil primary signal (driven side) and its ground lead to the chassis GND.
2. With the Key On, Engine Running (KOER), use the throttle to accelerate and decelerate the engine or drive the vehicle as needed to make the driveability problem or misfire occur.
3. For cranking test, set the Trigger mode to Normal.
4. Make sure that the amplitude, frequency, shape and pulse width are all consistent from cylinder to cylinder. Look for abnormalities in the section of the waveform that corresponds to specific components.

### • Reference Waveform

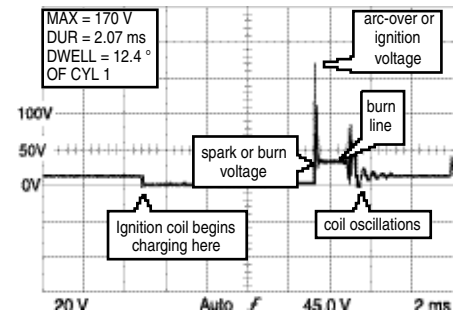

### VEHICLE INFORMATIONS

YEAR : 1987  
MAKE : Chrysler  
MODEL : Fifth Avenue  
ENGINE : 5.2 L  
FUELSYS : Feedback Carburetor  
PCM\_PIN : CH A to Negative side of ignition coil  
STATUS : KOER (Key On Running)  
RPM : Idle  
ENG\_TMP : Operating Temperature  
VACUUM : 20 In. Hg  
MILEAGE : 140241

The Ignition Peak voltage and Burn voltage measurements are available in this test, but they should be corrected to account for the turns ratio of the coil windings. Look closely to see that the pulse width (dwell) changes when engine load and RPM changes.

### • Troubleshooting Tips

Look for the drop in the waveform where the ignition coil begins charging to stay relatively consistent, which indicates consistent dwell and timing accuracy of individual cylinder.

Look for a relatively consistent height on the "arc-over" voltage or firing line. A line that is too high indicates high resistance in the ignition secondary due to an open or bad spark plug wire or a large spark gap. A line that is too short indicates lower (than normal) resistance in the ignition secondary due to fouled, cracked, or arcing spark plug wire, etc.


Look for the spark or burn voltage to remain fairly consistent. This can be an indicator of air-fuel ratio in the cylinder. If the mixture is too lean, the burn voltage may be higher, and if too rich, the voltage may be lower than normal.

Look for the burn line to be fairly clean without a lot of hash ("noise"). A lot of hash can indicate an ignition misfire in the cylinder due to over-advanced ignition timing, bad injector, fouled spark plug, or other causes. Longer burn lines (over 2 ms) can indicate an abnormally rich mixture and shorter burn line (under 0.75 ms) can indicate an abnormally lean mixture.

Look for at least 2, preferably more than 3 oscillations after the burn line. This indicates a good ignition coil (and a good condenser on point-type ignitions).

### DI (Distributor Ignition) Secondary (Conventional Single and Parade)

Secondary ignition patterns are very useful when diagnosing ignition related malfunctions. The secondary scope pattern is divided into three sections:

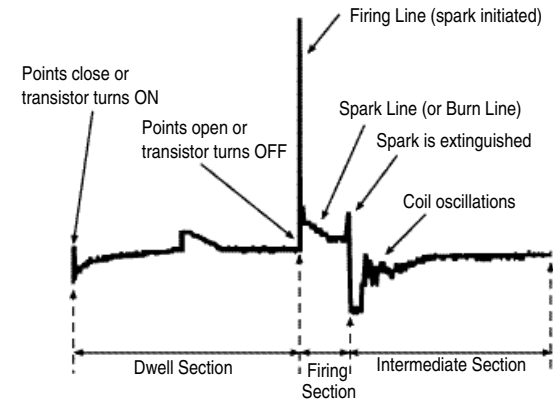

### SECONDARY FIRING SECTION

The firing section consists of a firing line and a spark (or burn) line. The firing line is a vertical line that represents the voltage required to overcome the gap of the spark plug. The spark line is a semi-horizontal line that represents the voltage required to maintain current flow across the spark gap.

### SECONDARY INTERMEDIATE SECTION

The intermediate section displays the remaining coil energy as it dissipates itself by oscillating between the primary and secondary side of the coil (with the points open or transistor off).

### SECONDARY DWELL SECTION


The dwell section represents coil saturation, which is the period of time the points are closed or the transistor is on. The ignition (or distributor) dwell angle is the number of degrees of distributor rotation during which the points or transistor are closed (or magnetic saturation time in degrees).

Normally, it takes about 10 to 15 ms for an ignition coil to develop complete magnetic saturation from primary current.

The secondary ignition test has been an effective driveability check for over three decades along with the primary ignition test. The ignition secondary waveform can be useful in detection of problems in mechanical components of engine and fuel system, as well as the ignition system components.

When the PARADE mode is selected, this instrument will present a parade of all the cylinders, starting at the left with the spark line of the number 1 cylinder. The instrument will display the pattern for each cylinder's ignition cycle in the engine's firing order. For example, if the firing order for a given engine is 1,4,3,2, the instrument will display the ignition cycles for each cylinder as shown starting with cylinder number 1, then 4, then 3, and then 2.

Firing lines should be equal. A short line indicates low resistance in the wire. A high line indicates high resistance in the wire

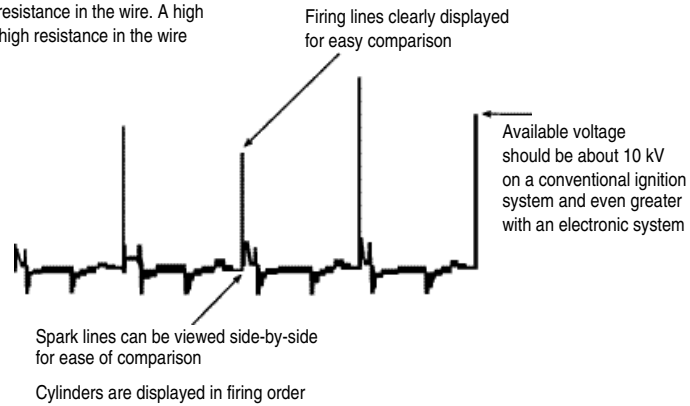

• Symptoms

No or hard starts, stalls, misfires, hesitation, poor fuel economy

• Test Procedure

**NOTE**

A Capacitive type ignition secondary probe must be used to test the ignition secondary circuit.  
Connecting the CH A or CH B leads directly to an ignition secondary circuit can cause severe damage to the instrument or even personal injury.

Connect the test leads as displayed by the test tool's HELP (Test Procedure) and shown in Figure below.

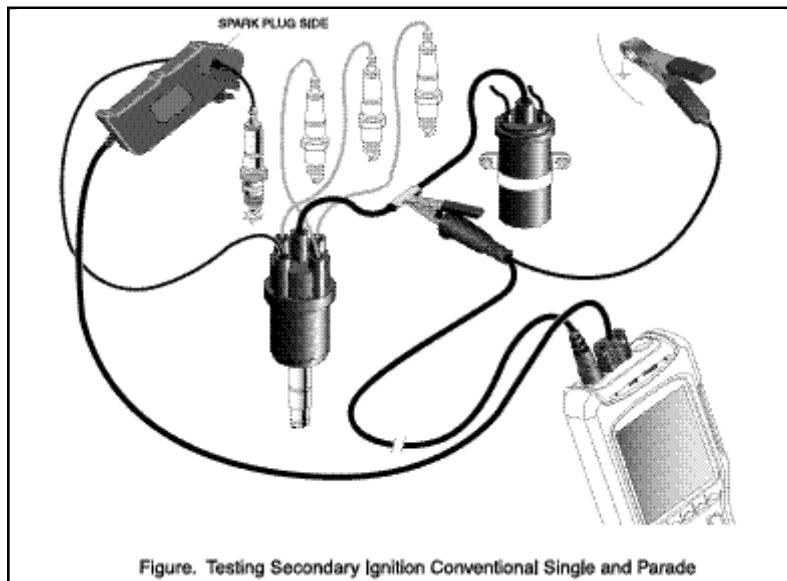


Figure. Testing Secondary Ignition Conventional Single and Parade

1. Connect the capacitive type ignition secondary probe to the CH A input terminal and its ground lead to chassis GND.
2. Connect the Inductive Pickup to the COM/TRIGGER input terminals.

**NOTE**

The Inductive Pickup must be used to synchronize triggering between the spark plug wire signal and the coil secondary signal clamped by the capacitive secondary probe.

3. Clip the secondary probe to the coil secondary lead wire and clamp the pickup probe on the spark plug wire close to the spark plug.


**IMPORTANT** : Signals from individual spark plug wires are useful only for triggering. Ignition Peak Voltage, Burn Voltage, and Burn Time measurements may not be accurate, if the signal is taken on the spark plug side of the distributor, due to the rotor spark gap. For accurate measurements, use the coil secondary signal before the distributor.

**NOTE**

If you want to test SECONDARY IGNITION SINGLE, press **F4** to highlight SINGLE and SECONDARY IGNITION PARADE, press **F4** to highlight PARADE.

4. With the Key On, Engine Running (KOER), use the throttle to accelerate and decelerate the engine or drive the vehicle as needed to make the driveability problem or misfire occur.
5. Make sure that the amplitude, frequency, shape and pulse width are all consistent from cylinder to cylinder. Look for abnormalities in the section of the waveform that corresponds to specific components.

• Reference Waveform

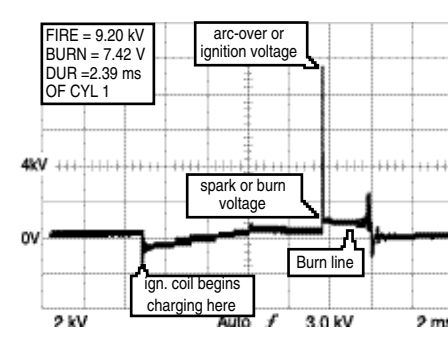

**VEHICLE INFORMATIONS**

YEAR	: 1984
MAKE	: Mercedes-Benz
MODEL	: 380 SE
ENGINE	: 3.8 L
FUELSYS	: CIS Fuel Injection
PCM_PIN	: CH A to the Coil wire
STATUS	: KOER (Key On Running)
RPM	: Idle
ENG_TMP	: Operating Temperature
VACUUM	: 19.5 In. Hg
MILEAGE	: 18575

Look closely to see that the pulse width (dwell) changes when engine load and RPM changes.

## • Troubleshooting Tips

Look for the drop in the waveform where the ignition coil begins charging to stay relatively consistent, which indicates consistent dwell and timing accuracy of individual cylinder.

Look for a relatively consistent height on the “arc-over” voltage or firing line. A line that is too high indicates high resistance in the ignition secondary due to an open or bad spark plug wire or a large spark gap. A line that is too short indicates lower (than normal) resistance in the ignition secondary due to fouled, cracked, or arcing spark plug wire, etc.

Look for the spark or burn voltage to remain fairly consistent. This can be an indicator of air-fuel ratio in the cylinder. If the mixture is too lean, the burn voltage may be higher, and if too rich, the voltage may be lower than normal.

Look for the burn line to be fairly clean without a lot of hash. A lot of hash can indicate an ignition misfire in the cylinder due to over-advanced ignition timing, bad injector, fouled spark plug or other causes. Longer burn lines (over 2 ms) can indicate an abnormally rich mixture and shorter burn lines (under 0.75 ms) can indicate an abnormally lean mixture.

Look for at least 2, preferably more than 3 oscillations after the burn line. This indicate a good ignition coil (a good condenser on point-type ignitions).

## DIS (Distributorless Ignition System) Primary

### • Theory of Operation

The DIS (or EI) primary ignition test is an effective test for locating ignition problems that relate to EI ignition coils. The waveform is very useful because occurrences in the ignition secondary burn are induced back into the primary through mutual induction of the primary and secondary windings. The waveform is primarily used to :

1. analyze individual cylinder dwell (coil charging time),
2. analyze ignition coil and secondary circuit performance (from the firing line),
3. locate incorrect air-fuel ratio in individual cylinders (from the burn line), and
4. locate fouled or damaged spark plugs that cause a cylinder misfire (from the burn line).

This test can be useful in detection of problems in mechanical engine and fuel system components, as well as ignition system components.


### • Symptoms

No or hard starts, stalls, misfires, hesitation, poor fuel economy

### • Test Procedure

1. Connect the CH A lead to the ignition coil primary signal (driven side) and its ground lead to the chassis GND.
2. With the key on, engine running, let the engine idle, or use the throttle to accelerate and decelerate the engine or drive the vehicle as needed to make the driveability problem or misfire occur.
3. Make sure that the amplitude, frequency, shape and pulse width are all consistent from cylinder to cylinder. Look for the abnormalities in the section of the waveform that corresponds to specific components.
4. If necessary, adjust the trigger level for a stable display.

## • Reference Waveform

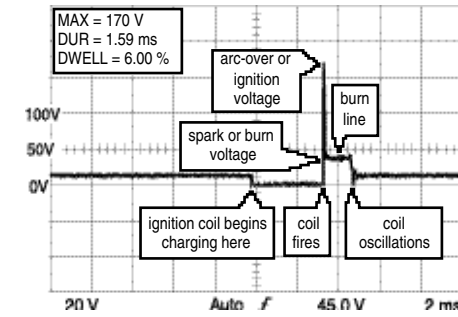

The Ignition Peak voltage and Burn voltage measurements are available in this test, but they should be corrected to account for the turns ratio of the coil windings.

## VEHICLE INFORMATION

YEAR : 1994  
MAKE : Ford  
MODEL : Explorer  
ENGINE : 4.0 L  
FUELSYS : Multiport Fuel Injection  
PCM\_PIN : 10 Coil A YelBlk at ignition  
STATUS : KOER (Key On Running)  
RPM : Idle  
ENG\_TMP : Operating Temperature  
VACUUM : 19.5 In. Hg  
MILEAGE : 40045

## • Troubleshooting Tips

Look for the drop in the waveform where the ignition coil begins charging to stay relatively consistent, which indicates consistent dwell and timing accuracy of individual cylinder.

Look for a relatively consistent height on the “arc-over” voltage or firing line. A line that is too high indicates high resistance in the ignition secondary due to an open or bad spark plug wire or a large spark gap. A line that is too short indicates lower (than normal) resistance in the ignition secondary due to fouled, cracked, or arcing spark plug wire, etc.

Look for the spark or burn voltage to remain fairly consistent. This can be an indicator of air-fuel ratio in the cylinder. If the mixture is too lean, the burn voltage may be higher, and if too rich, the voltage may be lower than normal.

Look for the burn line to be fairly clean without a lot of hash, which can indicate an ignition misfire in the cylinder due to over-advanced ignition timing, bad injector, fouled spark plug or other causes. Longer burn lines (over 2 ms) can indicate an abnormally rich mixture and shorter burn lines (under 0.75 ms) can indicate an abnormally lean mixture.

Look for at least 2, preferably more than 3 oscillations after the burn line. This indicate a good ignition coil (a good condenser on point-type ignitions).

## DIS (Distributorless Ignition System) Secondary

### • Theory of Operation

Most Distributorless Ignition systems use a waste spark method of spark distribution. Each cylinder is paired with the cylinder opposite to it (1-4, or 3-6, or 2-5). The spark occurs simultaneously in the cylinder coming up on the compression stroke and in the cylinder coming up on the exhaust stroke. The cylinder on the exhaust stroke requires very little of the available energy to fire the spark plug.

The remaining energy is used as required by the cylinder on the compression stroke. The same process is repeated when the cylinders reverse roles.

The secondary POWER/WASTE spark display waveform can be used to test several aspects of EI (or DIS) system operation. This test can be used to :

1. analyze individual cylinder dwell (coil charging time),
2. analyze ignition coil and secondary circuit performance (from the firing line),
3. locate incorrect air-fuel ratio in individual cylinders (from the burn line), and
4. locate fouled or damaged spark plugs that cause a cylinder misfire (from the burn line).

Generally on modern high energy ignition (HEI) systems, firing voltages should be around 15 kV to beyond 30 kV. Firing voltages vary based on spark plug gap, engine compression ratio, and air-fuel mixture. On dual spark EI systems, the WASTE spark is usually much lower in peak voltage than the POWER spark. Close to 5 kV can be normal.

#### • Symptoms

No or hard starts, stalls, misfires, hesitation, poor fuel economy

#### • Test Procedure

##### NOTE

*A Capacitive type ignition secondary probe must be used to test the ignition secondary circuit. Connecting the CH A or CH B leads directly to an ignition secondary circuit can cause severe damage to the instrument or even personal injury.*

Connect the test leads as displayed by the test tool's HELP (Test Procedure) and shown in Figure below.


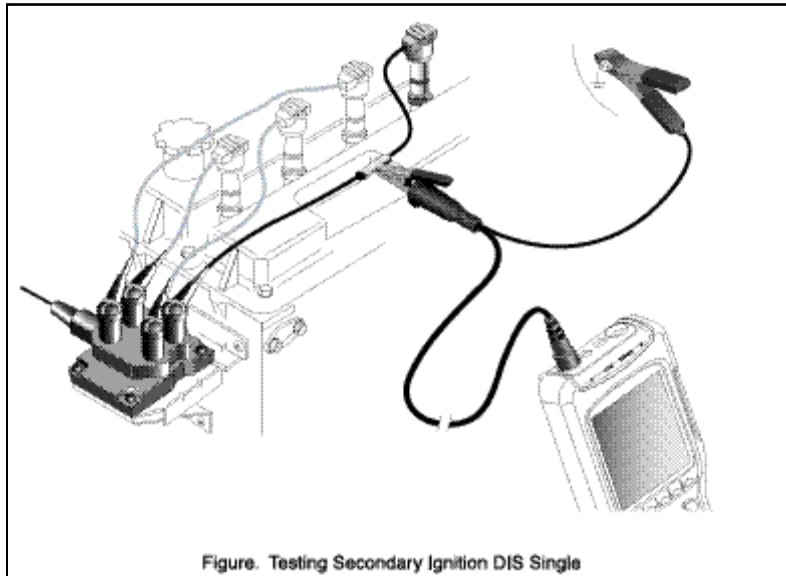


Figure. Testing Secondary Ignition DIS Single

1. Connect the capacitive type ignition secondary probe to the CH A input terminal and its ground lead to chassis GND.
2. Clip the secondary probe to the coil secondary lead wire before the distributor.
3. With the Key On, Engine Running (KOER), use the throttle to accelerate and decelerate the engine or drive the vehicle as needed to make the driveability problem or misfire occur.
4. If the firing line is negative, press **F2** to invert the pattern.
5. Make sure that the amplitude, frequency, shape and pulse width are all consistent from cylinder to cylinder. Look for abnormalities in the section of the waveform that corresponds to specific components.

#### • Reference Waveform

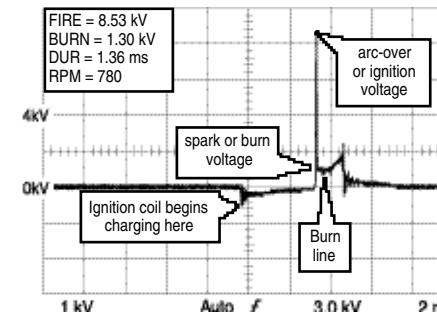

#### VEHICLE INFORMATIONS

YEAR : 1994  
 MAKE : Ford  
 MODEL : Explorer  
 ENGINE : 4.0 L  
 FUELSYS : Multiport Fuel Injection  
 PCM\_PIN : Cyl #1 Spark Plug wire  
 STATUS : KOER (Key On Running)  
 RPM : Idle  
 ENG\_TMP : Operating Temperature  
 VACUUM : 19.5 In. Hg  
 MILEAGE : 40045

Look closely to see that the pulse width (dwell) changes when engine load and RPM changes.

#### • Troubleshooting Tips

Look for the drop in the waveform where the ignition coil begins charging to stay relatively consistent, which indicates consistent dwell and timing accuracy of individual cylinder.


Look for a relatively consistent height on the "arc-over" voltage or firing line. A line that is too high indicates high resistance in the ignition secondary due to an open or bad spark plug wire or a large spark gap. A line that is too short indicates lower (than normal) resistance in the ignition secondary due to fouled, cracked, or arcing spark plug wire, etc.

Look for the spark or burn voltage to remain fairly consistent. This can be an indicator of air-fuel ratio in the cylinder. If the mixture is too lean, the burn voltage may be higher, and if too rich, the voltage may be lower than normal.


Look for the burn line to be fairly clean without a lot of hash, which can indicate an ignition misfire in the cylinder due to over-advanced ignition timing, bad injector, fouled spark plug or other causes. Longer burn lines (over 2 ms) can indicate an abnormally rich mixture and shorter burn lines (under 0.75 ms) can indicate an abnormally lean mixture.

Look for at least 2, preferably more than 3 oscillations after the burn line. This indicates a good ignition coil (a good condenser on point-type ignitions).

## 6.6 DIESEL TESTS

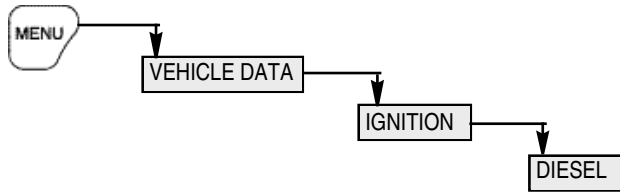

The diesel test functions are selected if "IGNITION: DIESEL" has been set in the VEHICLE DATA menu. To choose a preset DIESEL test menu, select COMPONENT TESTS from the MAIN MENU. From the resulting menu, select DIESEL TESTS menu.

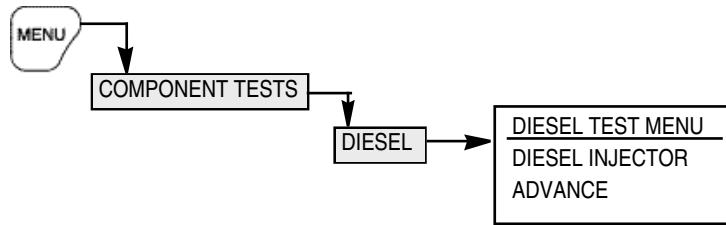

### Introduction

During the compression stroke of a diesel engine, the intake air is compressed to about 735 psi (50 Bar). The temperature hereby increases up to 1,292 ° to 1,652 °F (700 ° to 900 °C). This temperature is sufficient to cause automatic ignition of the Diesel fuel which is injected into the cylinder, shortly before the end of the compression stroke and very near to the TDC (Top Dead Center).

Diesel fuel is delivered to the individual cylinders at a pressure of between 5145 psi and 17,640 psi (350 Bar and 1200 Bar). The start of the injection cycle should be timed within 1 ° Crankshaft to achieve the optimum trade-off between engine fuel consumption and combustion noise (knock). A timing device controls the start of the injection and will also compensate for the propagation times in the fuel delivery lines.

Diesel RPM measurements are necessary for adjusting idle speed, checking maximum RPM, and performing smoke tests at fixed RPM values.

### Measurement Conditions

**Cleaning :** The fuel lines (to be measured on) should be cleaned in order to assure a good contact of the fuel line itself to the Piezo Pickup and ground clip. Use sandpaper (preferably a de-greaser) to clean the lines.

**Positioning and Probe Connection :** The Piezo Adapter should be placed as close as possible to the Diesel injector on a straight part of the fuel line. Clamp the ground clip close to the Piezo Pickup. Make sure that the ground clip does not make contact to the piezo itself or to adjacent fuel lines. Connect the adapter to the instrument. Notice that the ground wire is shorter than the signal wire in order to have the weight of probe and cable loaded on the ground wire, not on the signal wire. The piezo element may not bounce or rattle on the fuel line, or make contact to other fuel lines or any other material close by.

### Some tips to keep in mind :


- Always position the piezo pickup on the fuel line at about the same distance from the injector.
- Place the pickup on a straight part of the fuel line. Don't place it on a bent part of the line.
- Always compare results with a reference waveform from a good diesel engine to get acquainted with the signal shape.
- Always compare signals at the same engine speed (RPM).
- Pump timing is critical and should occur within 1 degree of crankshaft rotation.

### Diesel Injector

(Diesel RPM Measurement and Diesel Injection Pattern Display)


Use the optional Diesel Probe Set consisting of a Piezo Pickup, which is clamped on the diesel fuel pipe, and a Diesel Adaptor to be connected to the CH A input of the instrument.

#### • Reference Waveform

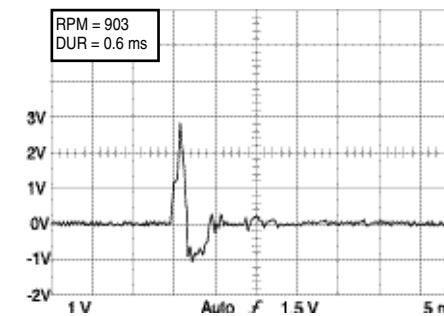

DUR = Duration of the injection pulse

#### • Analysis of Injection Pattern at Idle Speed

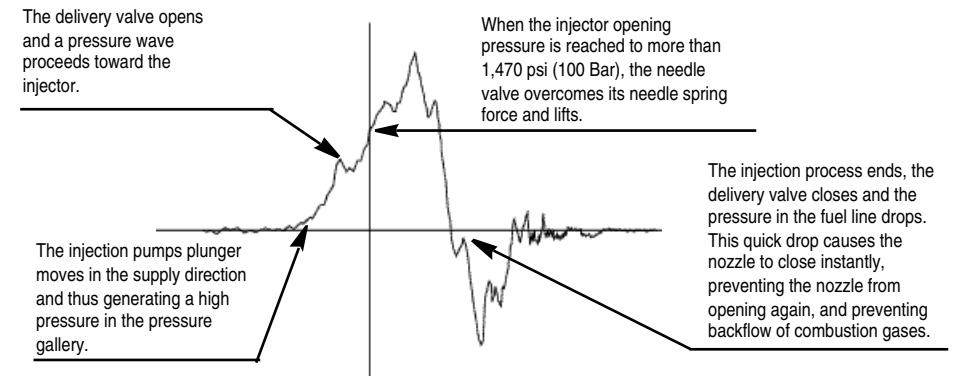

## Diesel Advance


Diesel pump testers are used to calibrate pumps exactly to the engine's requirements. The testers monitor the signals from the reference on the engine's flywheel. The start of the delivery is monitored and timing adjustments can be made at different speeds.

We can reveal problems in the timing of the start of fuel delivery compared to the TDC signal of the flywheel sensor through this advance measurement, which cannot be an absolute and accurate diesel pump adjustment test.


### • Test Procedure

1. Clamp the piezo pickup and its ground clip on the fuel line of the first cylinder close to the injector and connect the adapter to the CH A.
2. Connect the CH B to the TDC sensor signal output or HI. Don't use the ground lead of the CH B test lead, since the instrument is already grounded through the pickup adapter to the fuel line (double grounding).
3. Use the cursors to read the advance in degrees of the flywheel rotation.

### • Reference Waveform

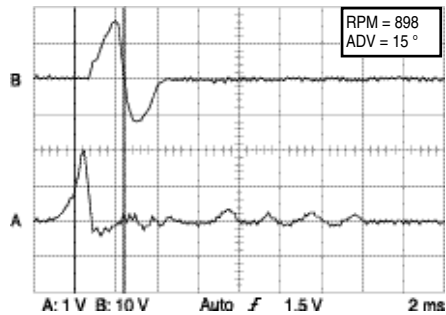

(Advance at idle)

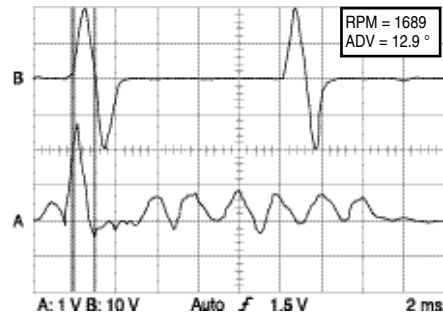

(Advance at 1689 RPM)

## 7. Maintenance

### WARNING

#### Avoid Electrical Shock or Fire:

- Use only insulated probes, test lead, and connectors specified in this manual when making measurements > 42 V Peak (30 Vrms) above earth ground or on circuits > 4800 VA.
- Use probes and test leads within ratings and inspect them before use. Remove probes and test leads before opening case or battery cover.
- The instrument must be disconnected from all voltage sources before it is opened for any adjustment, replacement, maintenance, or repair.
- Capacitors inside may still be charged even if the instrument has been disconnected from all voltage sources. Discharge all high voltage capacitors before making resistance, continuity, or diodes measurements.


### Cleaning

Clean the instrument with a damp cloth and a mild detergent.

Do not use abrasives, solvents, or alcohol.

Do not use any type of paper to clean the display screen. This will cause scratches and diminish the transparency of the screen. Use only a soft cloth with a mild detergent.

### Keeping Batteries in Optimal Condition

Always operate the instrument on batteries until a battery symbol  appears in the top right of the display. This indicates that the battery level is too low and the batteries need to be recharged.

### CAUTION

Frequent charging of the batteries when they are not completely empty can cause a "memory effect". This means that the capacity of the Ni-MH batteries decreases, which can reduce the operating time of the instrument.

### Replacing and Disposing of Batteries

#### WARNING

To avoid electrical shock, remove the test leads, probes, and battery charger before replacing the batteries.

1. Disconnect the test leads, probes, and battery charger from both the source and the instrument.
2. Remove the battery cover by using a screwdriver.
3. Replace the Ni-MH battery pack with a new Ni-MH battery pack ONLY specified in this manual.
4. Reinstall the battery cover by using a screwdriver.



*Do not dispose of the replaced battery with other solid waste. Used batteries should be disposed of by a qualified recycler or hazardous materials handler.*

### Fuses Not Required

Since the instrument uses electronically protected inputs, no fuses are required.

## 8. Specifications

### General Specifications

Operation temperature	: 32 °F to 104 °F (0 °C to 40 °C)
Storage temperature	: -4 °F to 140 °F (-20 °C to 60 °C)
Relative Humidity	: 0 % to 80 % at 32 °F to 95 °F (0 °C to 35 °C), 0 % to 70 % at 32 °F to 131 °F (0 °C to 55 °C)
Temperature Coefficient	: Nominal 0.1 x (Specified Accuracy) / °C (< 18 °C or > 28 °C ; < 64 °F or > 82 °F)
Max Voltage between any input and Ground	: 300 V
Max Input Voltage	: 300 V
GMM Basic DC Accuracy	: 0.3 %
Bandwidth	: DC to 5 MHz (-3dB)
Max Sample rate	: 25 Mega sample/second
Graphing Multimeter Display Counter	: 5,000 count
Display	: 280 x 240 pixels (active area) with backlit (EL)
Reference Waveform	: 51 Waveform
PC interface	: USB version 1.1
Power requirements	: Rechargeable Battery (External AC to DC Power Adaptor)
Battery Life	: 4 Hours with backlit off
Size (H x W x D)	: 9.06 x 4.72 x 1.97" (230 x 120 x 50 mm)
Safety & design	: CAT II 300 V per IEC 1010-1, UL 3111-1 and C22.2 No. 1010-1

### Accessory

User Manual	: 1 ea
AC to DC Power Adaptor /Battery Charger	: 1 ea
Shielded Test Leads	: 2 ea (red and yellow)
Ground Leads for Shielded Test Leads	: 2 ea (black)
Alligator Clips	: 3 ea (red, yellow and black)



Back Probe Pins : 3 ea (red, yellow and black)  
 2 mm Adaptor : 3 ea (red, yellow and black)  
 Secondary Pick-up : 1 ea  
 Inductive Pick-up : 1 ea  
 OBD II Code Reader Cable : 1 ea  
 Soft Carrying Case : 1 ea  
 USB Interface  
     Cable and Software (Optional) : 1 ea  
 Current Probe - CA113 OS/AT (Optional) : 1 ea  
 Diesel Probe Set (Optional) : 1 ea  
 Temperature Probe (Optional) : 1 ea  
 Isolated 12V Charging Adaptor (Optional) : 1 ea  
 Isolated 24V Charging Adaptor (Optional) : 1 ea

### Scope Specifications

#### Horizontal

Sample rate : 25 Mega sample/second  
 Record length : 1000 Points  
 Update rate : Real time, Roll  
 Accuracy :  $\pm (0.1 \% + 1 \text{ pixel})$   
 Sweep rate : 1  $\mu\text{s}$  to 50 sec in a 1, 2, 5 sequence (Scope mode)  
               5 s to 24 Hours in a 1, 2, 5 sequence (GMM mode)

#### Vertical

Band width : DC to 5 MHz ; -3 dB  
 Resolution : 8 bit  
 Channel : 2 Channel  
 Coupling : AC, DC, GND  
 Input Impedance : 1 Mohm / 70 pF  
 Maximum Input Voltage : 300 V  
 Volt/Division : 50 mV to 100 V in a 1, 2, 5 sequence  
 Accuracy :  $\pm 3 \%$

#### Trigger

Trigger Source : CH A, CH B, TRIGGER (External trigger)  
 Sensitivity (CH A) :  $< 1.0 \text{ div to } 5 \text{ MHz}$   
 Sensitivity (Trigger) : 0.2 V p-p  
 Modes : Single shot, Normal, Auto  
 Coupling : AC, DC  
 Slope : Rising and falling edge

#### Others

Glitch Snare : SCOPE Mode (Component test only)  
 Acquire Mode : SCOPE Mode  
 Setup memory : 8 Waveform & Setup  
 Reference waveform : 51 Waveform and Setup  
 Cursor : Time and Volt  
 Instrument Setup : Language, Contrast, Graticule

### Graphing Multimeter (GMM) Specifications

#### DC Voltage Measurement

Range	Resolution	Accuracy	
500 mV	0.1 mV	$\pm (0.3 \% + 5 \text{ d})$	
5 V	0.001 V		
50 V	0.01 V		
600 V	0.1 V		

> Input Impedance : 10 M $\Omega$

#### AC Voltage Measurement

Range	Resolution	Accuracy	
		40 Hz ~ 400 Hz	400 Hz ~ 10 kHz
500 mV	0.1 mV	$\pm (0.5 \% + 5 \text{ d})$	$\pm (2.5 \% + 5 \text{ d})$
5 V	0.001 V		
50 V	0.01 V		
600 V	0.1 V		

> Input Impedance : 10 M $\Omega$

**(AC+DC) Voltage Measurement**

Range	Resolution	Accuracy	
		40 Hz ~ 400 Hz	400 Hz ~ 10 kHz
DC 500 mV	0.1 mV	± (0.8 % + 5 d)	± (3.0 % + 5 d)
DC 5 V	0.001 V		
DC 50 V	0.01 V		
DC 600 V	0.1 V		

**RPM Measurement**

Mode	Range	Accuracy
4 cylinder	120 - 20000 RPM	2 RPM
2 cylinder	60 - 10000 RPM	

**Frequency Measurement**

Function	Range	Resolution	Accuracy
Frequency	10 Hz	0.001 Hz	± (0.1 % + 3 d)
	100 Hz	0.01 Hz	
	1 kHz	0.1 Hz	
	10 kHz	1 Hz	
	100 kHz	10 Hz	
	1 MHz	100 Hz	
	5 MHz	1 kHz	
% Duty	2.0 % ~ 98 %	0.1 %	Pulse Width > 2 µs
Dwell	3.6 ° ~ 356.4 °	0.1 °	1.2 °/krpm + 2 d
Pulse Width	2 µs ~ 450 ms (Pulse Width > 2 µs)		

**Ohm Measurement**

Range	Resolution	Accuracy
500 Ω	0.1 Ω	± (0.5 % + 5 d)
5 kΩ	0.001 kΩ	
50 kΩ	0.01 kΩ	
500 kΩ	0.1 kΩ	
5 MΩ	0.001 MΩ	± (0.75 % + 5 d)
30 MΩ	0.01 MΩ	± (0.75 % + 10 d)

**Continuity Test**

Test Voltage	Threshold	Response time
1.2 V	Approx. 70 Ω	1 ms

**Diode Test**

Range	Open Circuit Voltage	Accuracy
2.0 V	3.0 V	± (2.0 % + 5 d)

**Temperature Measurement**

Range	Resolution	Accuracy
-50 °C to 1300 °C	0.1 °C	± 3 °C
-58 °F to 2372 °F	0.1 °F	± 5.4 °F

**DC Ampere Measurement (Current Probe Output)**

Range	Resolution	Accuracy
30 mA ~ 20 A	1 mV/10 mA	± (1.5 % + 20 mA)
100 mA ~ 40 A	1 mV/100 mA	± (2.0 % + 20 mA)
40 A ~ 60 A	1 mV/100 mA	± (4.0 % + 0.3 A)



**AC Ampere Measurement (Current Probe Output)**

Range	Resolution	Accuracy	
		40 Hz ~ 1 kHz	1 kHz ~ 5 kHz
30 mA ~ 10 A	1 mV/10 mA	± (2.0 % + 20 mA)	± (4.0 % + 30 mA)
100 mA ~ 40 A	1 mV/100 mA	± (2.0 % + 20 mA)	± (6.0 % + 30 mA)
40 A ~ 60 A	1 mV/100 mA	± (8.0 % + 0.3 A)	

**GLOSSARY**

<b>Terminology</b>	<b>Description</b>
ABS	Antilock Brake System
AC	Alternating Current
AC Coupling	A mode of signal transmission that passes the dynamic (AC) signal component to the input (INPUT A or INPUT B), but blocks the DC component. Useful to observe an AC signal that is normally riding on a DC signal, e.g. charging ripple.
Acquisition	The process of gathering measurement data into the instrument's memory.
Acquisition Rate	The number of acquisitions performed per second
Actuator	A mechanism for moving or controlling something indirectly instead of by hand.
Alternating Current	An electrical signal in which current and voltage vary in a repeating pattern over time.
Alternator	An AC generator with diode rectification.
Amplitude	The difference between the highest and the lowest level of a waveform.
Attenuation	The decrease in amplitude of a signal
Auto Range	Activates an automatic adaptation of the instrument to the input signal in amplitude, timebase, and triggering.
Bandwidth	A frequency range.
Baud Rate	Communication parameter that indicates the data transfer rate in bits per second.
Blower	A device designed to supply a current of air at a moderate pressure. The blower case is usually designed as part of a ventilation system.
BNC	Coaxial type input connector used for INPUT A and INPUT B.
Bottom Display	The lower part of the display, where the function key menu is listed.
Bypass	Providing a secondary path to relieve pressure in the primary passage.
Carburetor	A mechanism which automatically mixes fuel with air in the proper proportions to provide a desired power output from a spark ignition internal combustion engine.
Catalytic Converter	An in-line exhaust system device used to reduce the level of engine exhaust emissions.
Closed Loop (Engine)	An operating condition or mode which enables modification of programmed instructions based on a feedback system.
Continuity	Instrument setup to check wiring, circuits, connectors, or switches for breaks (open circuit) or closed circuits.
Contrast	This setting (expressed in a percentage) determines the contrast ratio between display text or graphics and the LCD background. (0 % is all white. 100 % is all black.)
Conventional Ignition System	Ignition system that uses a distributor.

Terminology	Description
Cursor	A vertical or horizontal line (kind of ruler) that you can place on the screen and move horizontally or vertically to measure values at certain points of the waveform.
DC	Direct Current
DC Coupling	A mode of signal transmission that passes both AC and DC signal components to the input (INPUT A or INPUT B) of the instrument.
Default Setup	The setup that exists as long as there are no changes made to the settings.
Diesel Probe	A test probe that has a pickup element to measure the pressure pulse in the diesel fuel pipe. It converts fuel pipe expansion into voltage.
Differential Measurement(Delta)	Measurement of the difference between the waveform sample values at the positions of the two cursors.
Diode	An electrical device that allows current to flow in one direction only.
Direct Current	A signal with constant voltage and current
DIS	Distributorless Ignition System
Division	A specific segment of a waveform, as defined by the grid on the display.
Drive	A device which provides a fixed increase or decrease ratio of relative rotation between its input and output shafts.
Driver	A switched electronic device that controls output state.
Duty Cycle	On-time or off-time to period time ratio expressed in a percentage.
Earth Ground	A conductor that will dissipate large electrical currents into the Earth.
ECM	Electronic Control Module on a vehicle.
ECU	Electronic Control Unit on a vehicle.
EIA-232-D/RS-232C	International standard for serial data communication to which the optical interface of the instrument conforms.
Electromagnetic Interference	Mutual disturbance of signals, mostly caused by signals from adjacent wiring.
EMI	Electromagnetic Interference
Feed Controlled Circuit	A circuit that is energized by applying voltage; it has already been grounded.
Filter	Electrical circuits or device that only passes or blocks certain signal frequencies. An application can be to remove noises from a signal.
Freeze Frame	A block of memory containing the vehicle operating conditions for a specific time.
Frequency	The number of times a waveform repeats per second, measure in Hz. 1 Hz equals one cycle per second.
Fuel Trim	A set of positive and negative values that represent adding or subtracting fuel from engine. A fuel correction term.


Terminology	Description
Function Key Labels	Labels shown on the bottom display that indicate the function of the function keys to  .
Function Key Menu	The function key labels listed on the bottom display.
Glitch	A momentary spike in a waveform. This can be caused by a momentary disruption in the circuit under test.
Glow plug	A combustion chamber heat generating device to aid starting diesel engines.
Governor	A device designed to automatically limit engine speed.
Ground	An electrical conductor used as a common return for an electric circuit(s) and with a relative zero potential.
Ground Controlled Circuit	A circuit that is energized by applying ground; voltage has been already supplied.
Hall-Effect Sensor (or Hall Sensor)	A semiconductor moving relative to a magnetic field, generating a variable voltage output. Used to determine position in the automotive industry.
Idle	Rotational speed of an engine with vehicle at rest and accelerator pedal not depressed.
Ignition	System used to provide high voltage spark for internal combustion engines.
Inductance	The signal caused by a sudden change of a magnetic field. For example, when you turn off the current through a solenoid, a voltage spike is generated across the solenoid.
Intake Air	Air drawn through a cleaner and distributed to each cylinder for use in combustion.
Intermittent	Irregular, a condition that happens with no apparant or predictable pattern.
Invert	To change to the opposite polarity. Puts the waveform display upside down.
Knock (Engine)	The sharp, metallic sound produced when two pressure fronts collide in the combustion chamber of an engine.
Lamda Sensor	Oxygen (or O <sub>2</sub> ) sensor.
LCD	Liquid Crystal Display
Link (Electrical/Electronic)	General term used to indicate the existence of communication facilities between two points.
Manifold	A device designed to collect or distribute fluid, air or the like.
Master Reset	Resets the instrument to the factory "Default Setup". You can do this by turning power on while pressing the F5 function key (  ).
Menu	A list of choices for selecting a test, a function, or a setting.
Malfunction Indicator Lamp (MIL)	A required on-board indicator to alert the driver of an emission related malfunction.
Noise	Extraneous electrical signal that can interfere with other electrical signals. The noise can disturb the function of the signal when it exceeds a certain electrical level.

Terminology	Description
NTC	A resistor that has a Negative Temperature Coefficient; resistance decreases as temperature increases.
O <sub>2</sub> Sensor	Oxygen sensor
Off-time	The part of an electrical signal during which an electrical device is de-energized.
On-time	The part of an electrical signal during which an electrical device is energized.
OBD II	On-Board Diagnostics Second Generation (or Generation Two)
OBD II Systems	Provide comprehensive diagnostics and monitoring of emission controlling systems.
Open Loop	An operating condition or mode based on programmed instructions and not modified by a feedback system.
Peak Value	The highest or lowest value of a waveform.
Peak-and-Hold	A method for regulating the current flow through electronic fuel injectors. Supplies higher current necessary to energize the injector, then drops to a lower level just enough to keep the injector energized.
Pixel	The smallest graphic detail possible for the liquid crystal display (LCD)
Powertrain	The elements of a vehicle by which motive power is generated and transmitted to the driven axles.
Pressure (Absolute)	The Pressure referenced to a perfect vacuum.
Pressure (Differential)	The pressure difference between two regions, such as between the intake manifold and the atmospheric pressures.
PTC	A resistor that has a Positive Temperature Coefficient; resistance increases as temperature increases.
Pulse	A voltage signal that increases or decreases from a constant value, then returns to the original value.
Pulse Modulated	A circuit that maintains average voltage levels by pulsing the voltage on and off.
Rail	A manifold for fuel injection fuel.
Range	Specified limits in which measurements are done.
Reference Voltage	An unaltered voltage applied to a circuit. Battery plus (B+) and ground (GND) are examples of reference voltages.
Regulator (Voltage)	A device that automatically controls the functional output of another device by adjusting the voltage to meet a specified value.
Relay	A generally electromechanical device in which connections in one circuit are opened or closed by changes in another circuit.
Root Mean Square (RMS)	Conversion of AC voltages to the effective DC value.
RPM	Engine speed expressed in Rotations Per Minute of the crankshaft.

Terminology	Description
Scan Tool	A device that interfaces with and communicates information on a data link.
Sample	A reading taken from an electrical signal. A waveform is created from a successive number of samples.
Sampling Rate	The number of readings taken from an electrical signal every second.
Saturated Driver	Fuel injection circuit that maintains the same voltage level throughout its on-time.
Secondary Pickup	An accessory that can be clamped on the high voltage coil wire used to measure secondary ignition patterns.
Shielded Test Lead	A test lead that is surrounded by a conductive screen to protect the measurement signal against environmental influences, such as electrical noise or radiation.
Shift Solenoid	A device that controls shifting in an automatic transmission.
Single Shot	A signal measured by an oscilloscope that only occurs once (also called a transient event).
Spark Advance	The relationship between the ignition timing and top dead center (DTC).
Spike	A (high) voltage pulse during a short period of time (sharp pulse).
Throttle	A valve for regulating the supply of a fluid, usually air or a fuel/air mixture, to an engine.
Time Base	The time defined per horizontal division on the display.
Trace	The displayed waveform that shows the variations of the input signal as a function of time.
Trigger	Determines the beginning point of a waveform.
Trigger Level	The voltage level that a waveform must reach to start display.
Trigger Slope	The voltage direction that a waveform must have to start display. A positive Slope requires the voltage to be increasing as it crosses the Trigger Level, a negative Slope requires the voltage to be decreasing.
Trigger Source	The instrument input that supplies the signal to provide the trigger.
Transducer	A device that receives energy from one system and retransmits (transfers) it, often in a different form, to another system. For example, the cruise control transducer converts a vehicle speed signal to a modulated vacuum output to control a servo.
Turbocharger	A centrifugal device driven by exhaust gases that pressurize the intake air, thereby increasing the density of charge air and the consequent power output from a given engine displacement.
USB	Universal Serial Bus (visit <a href="http://www.usb.org">www.usb.org</a> for details.)
User's Last Display	The last display having been displayed just before the instrument was turned off.
Vertical Scale	The scale used for vertical display (vertical sensitivity) expressed in certain units per division.

Terminology	Description
Voltage Drop	Voltage lose across a wire, connector, or any other conductor. Voltage drop equals resistance in ohms times current in amperes (ohm's Law).
Wastegate	A valve used to limit charge air pressure by allowing exhaust gases to bypass the turbocharger.
Waveform	The pattern defined by an electrical signal.
WOT	Wide Open Throttle.

## Menu Overview

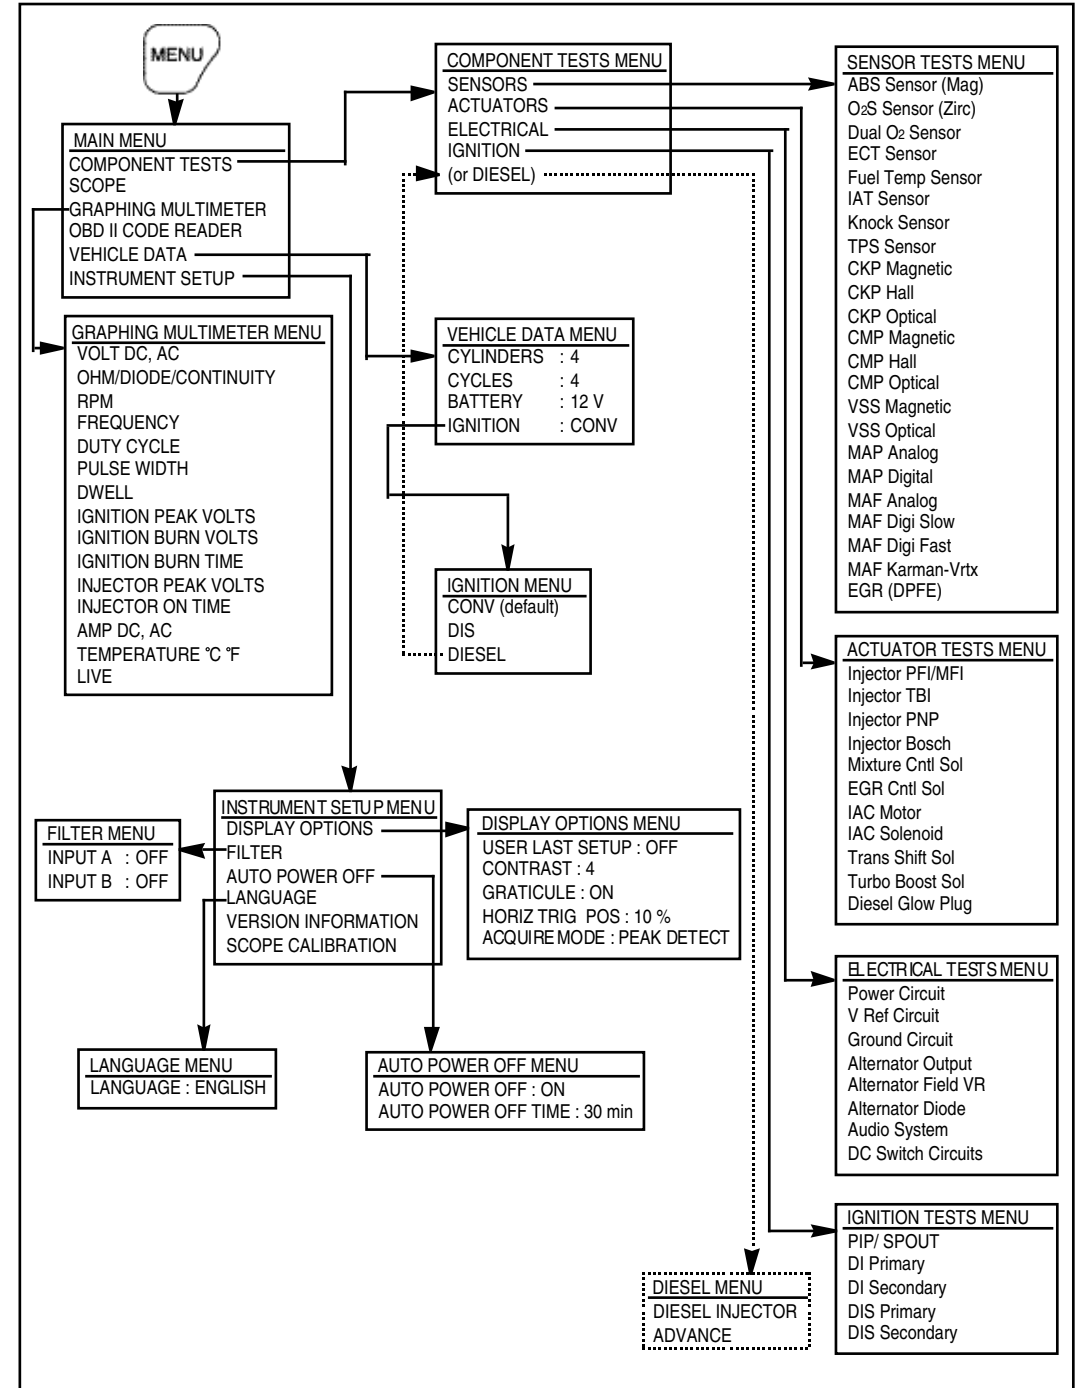

**The ADL7103 is warranted for a period of one year from date of purchase.**

This warranty covers defects in material and workmanship that have occurred during normal use. The tester will be repaired or replaced at the absolute discretion of UEi. The warranty also includes the cost of transportation from a UEi nominated repair facility by a carrier chosen by UEi. A normal repair charge will be levied if, in the considered opinion of UEi, the defect was caused by improper use or use outside the instruments published specification.

This warranty is in lieu of any other warranties, expressed or implied, including any warranty of merchantability or fitness for a particular purpose. UEi shall not be liable for any special, indirect, incidental or consequential damages or losses, including loss of data, whether arising from breach of warranty or based on contract, tort, reliance or any other theory.