

Wi-Fi® QUICK SETUP GUIDE

Thank you for purchasing this product.
Please read these instructions carefully before using this product,
and save this manual for future use.

RQCA2270
F0216TM1036


- This guide describes how to connect this system to a network while starting up and operating the Panasonic Music Streaming app.
- The operations and on-screen display items, etc. of the app "Panasonic Music Streaming" are subject to change.
For the latest information, visit
<http://panasonic.jp/support/global/cs/audio/app/>
(This site is in English only.)

The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance®.
The Wi-Fi Protected Setup™ Identifier mark is a certification mark of Wi-Fi Alliance®.
"Wi-Fi®" is a registered trademark of Wi-Fi Alliance®.
"Wi-Fi Protected Setup™", "WPA™", and "WPA2™" are trademarks of Wi-Fi Alliance®.
Google Play and Android are trademarks of Google Inc.
App Store is a service mark of Apple Inc.
All other trademarks are trademarks of their respective owners.



1 Download the app

Download the free
"Panasonic Music
Streaming" app from the
store on your smartphone/
tablet.

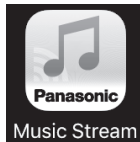

iOS : App Store




Android : Google Play™



2



Open the app and follow the on-screen instructions

Select ALL7CD.


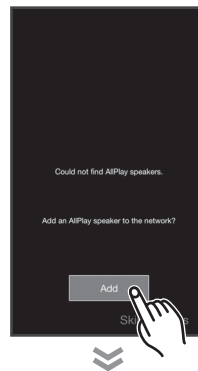


Connect the AC mains
lead.

NOTE:
Do not connect the LAN
cable.

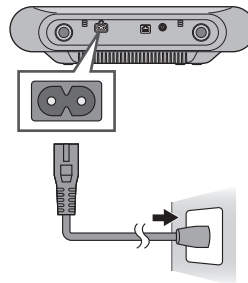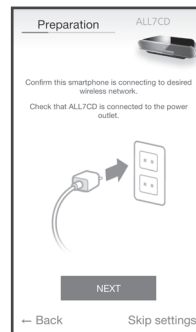


Turn on the unit.
Enter network setup for
the unit by following the
steps on app screen.

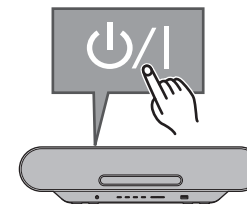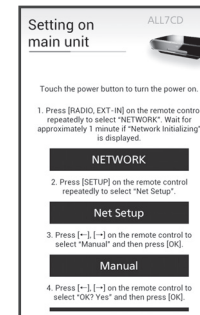


- Depending on the screen size of your smartphone/tablet, you may need to scroll to the bottom for any remaining steps. After doing the last step, "Setting" will blink on the unit's display.

iOS : Follow the steps
on app screen.

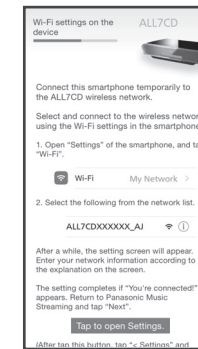


- "ALL7CDXXXXX_AJ" can sometimes take 1 minute to appear in the network list.
- Depending on the screen size of your smartphone/tablet, you may need to scroll to the bottom for any remaining steps.

Android : Enter the password
of your wireless network.

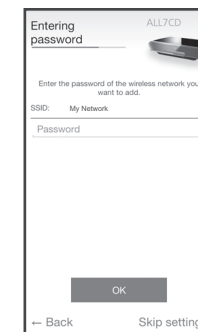

3 After a short wait ...you're connected!

The network indicator
lights up solid.

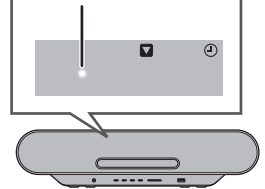

After a short wait, your
smartphone/tablet should be
automatically reconnected to
your Wi-Fi network. In case you
are not reconnected
automatically, please re-select
your Wi-Fi network from the
settings / Wi-Fi settings menu on
your device.

Further Support

For more information and
other network setting
methods, refer to the
Operating Instructions.
If you require further help,
please visit
<http://panasonic.jp/support/global/cs/audio/>
(This site is in English only.)