

anko

BIG DISPLAY ALARM CLOCK USER MANUAL



Table of Contents

Functions	2
Important Safeguards	2 - 3
Battery Safety	3 - 4
Parts	4 - 5
Before First Use	5
Power Supply	6
Inserting Battery	6
Basic Operations	6
Settings	7 - 8
Radio Operation	9
Cleaning and Care	9
Technical Data	9
Warranty Card	10

42190301

Dear Customer,

Thank you for choosing the Big Display Alarm Clock. For correct operation and maintenance of this appliance, please read this User Manual carefully. Please pay particular attention to the Safety section.

FUNCTIONS

- ▶ Clock
- ▶ Two Alarms
- ▶ Buzzer or Radio Alarm
- ▶ Snooze, Sleep and Nap Function
- ▶ Radio: FM: 87.5 --108 MHz / AM: 522 --1620 KHz,
- ▶ 20 Preset Stations (10 FM, 10 AM)
- ▶ Dimmer Control

IMPORTANT SAFEGUARDS

Please read this instruction manual thoroughly before using this appliance! Follow all the safety instructions to avoid damage caused by improper use.

- ▶ Keep the instruction manual for future reference. Should this appliance be given to a third party, then this instruction manual must also be handed over.
- ▶ Use this appliance solely for its intended purpose.
- ▶ This appliance is intended for household use only.
- ▶ Only use this appliance indoors.
- ▶ Danger of electroshock! Do not immerse the appliance, power cord or power plug in water or in other liquids.
- ▶ Do not place the appliance in the direct vicinity of liquids - e.g. bathtubs and sinks, in a damp basement or close to a swimming pool.
- ▶ Do not start up the appliance with damp hands or if you are standing on a wet floor. Never grasp the power plug with damp or wet hands.
- ▶ The manufacturer assumes no liability for possible damages that may have been caused by incorrect usage or mishandling of the appliance.
- ▶ This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- ▶ Young children should be supervised to ensure that they don't play with the appliance.
- ▶ Keep the appliance away from all hot surfaces and naked flames.
- ▶ Do not place any objects on the appliance. Don't put objects with naked flames (such as candles) on or next to the appliance. Never put items containing liquid (such as vases) on or next to the appliance.
- ▶ Do not expose the appliance to direct sunlight.
- ▶ Do not use the appliance if it is damaged. To avoid hazards, defective components must

only be replaced by the manufacturer, his customer service or similar qualified persons.

 
- ▶ Do not dismantle and repair the appliance by yourself.
- ▶ Do not insert any foreign objects into the housing.
- ▶ Do not cover the appliance while in use.
- ▶ This appliance should be only operated with the type of power source indicated on the marking label.
- ▶ Always turn the power off before plugging the appliance into the power outlet or unplugging it.
- ▶ Prevent damage to the power cord by not squeezing, bending or rubbing it on sharp edges. Keep the cord away from hot surfaces and open flames.
- ▶ Always pull the plug, not the power cord when disconnecting the appliance from a power outlet.
- ▶ Plug the appliance into an easily accessible socket, so that you can disconnect it quickly from the mains, in the event of an emergency. Unplug the appliance from the power socket to switch it off completely. Use the mains plug as a disconnecting appliance.
- ▶ If the appliance malfunctions due to electrostatic discharge or short-term overvoltage, disconnect it from the power supply and connect it once again.
- ▶ Unplug the appliance during lightning storms or when unused for a long period of time.

 
BATTERY SAFETY

- ▶ Only use Alkaline or rechargeable batteries.
- ▶ If the battery leaks, remove it with a cloth and dispose of it accordingly. Ensure that leaking battery acid does not come into contact with skin and eyes. If you do get battery acid in your eyes, flush them thoroughly with lots of water and consult a with lots of water and soap.
- ▶ Danger of explosion! Batteries must not be charged or reactivated by other means, taken apart, thrown in the fire or short-circuited.
- ▶ Do not expose batteries to extreme temperatures such as from direct sunlight or fire. Do not place the appliance on a heater. Leaking battery acid can cause damage.
- ▶ Caution! There is a danger of explosion if the battery is inserted incorrectly. Use only the same battery type with the corresponding technical data to replace it.
- ▶ Always insert the battery in accordance with the correct polarity (+ and -). See Inserting battery for memory backup.
- ▶ Batteries are life-threatening if swallowed. Store all batteries out of the reach of small children and domestic animals. Seek medical help immediately if batteries are swallowed.
- ▶ Do not allow children to change batteries without adult supervision.
- ▶ If the battery compartment door does not secure closely, stop using the appliance and keep it away from children.

- ▶ If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- ▶ If the device is not to be used for an extended period of time, then the battery should be removed, as the device could become damaged should it leak.
- ▶ If the device functions weaken, replace the battery.
- ▶ Remove the battery prior to disposing of the device.
- ▶ Batteries do not belong in household waste! Expired batteries must be disposed of in an environmentally friendly way and according to the applicable legal regulations.

PARTS

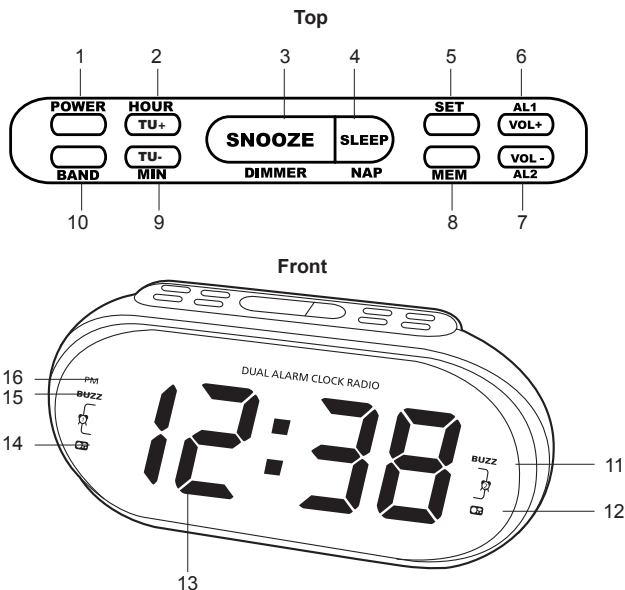

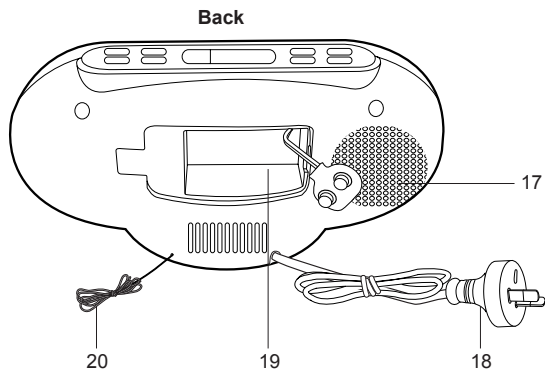

PARTS

- | | |
|--------------------------|-------------------------|
| 1 POWER button | 11 AL2 buzzer indicator |
| 2 TU + / HOUR button | 12 AL2 radio indicator |
| 3 SNOOZE / DIMMER button | 13 LED Display |
| 4 SLEEP / NAP button | 14 AL1 radio indicator |
| 5 SET button | 15 AL1 buzzer indicator |
| 6 VOL + / AL1 button | 16 PM indicator |
| 7 VOL - / AL2 button | 17 Speaker |
| 8 MEM button | 18 Power cord |
| 9 TU - / MIN button | 19 Battery compartment |
| 10 BAND selector button | 20 FM Antenna |

BEFORE FIRST USE

- ▶ Unpack the appliance and check if all parts are there and undamaged. Should this not be the case, return the product to Kmart for replacement.
- ▶ Danger of suffocation! Keep all packaging materials away from children.
- ▶ Dispose of the packaging materials properly. Inform yourself at the local authorities regarding collection points or garbage separation.
- ▶ Remove all protective foils and packaging material prior to use.

 
POWER SUPPLY

1. Connect the power cord (18) with a suitable electrical outlet. Make sure that the power supply voltage is the same as needed for the appliance.

INSERTING BATTERY FOR MEMORY BACKUP

It is advisable to fit a standard 9-volt battery (not supplied) into the battery compartment to prevent the loss of settings during a power failure.

1. Disconnect the radio from power.
2. Remove the door of the battery compartment (19).
3. Carefully lift the small terminal clip out of the compartment.
4. Match the large (-) terminal on the battery to the small terminal on the clip and the small (+) terminal on the battery to the large terminal on the clip.
5. Snap the terminals firmly together.
6. Place the battery in the compartment and replace the battery compartment door.

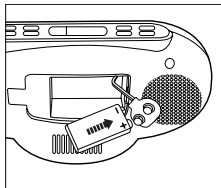

Note: When operating with battery only, the display will be blank and the clock will only remain accurate for a short period of time. The clock accuracy will decrease due to the voltage drop of the backup battery. It is important that the mains supply is restored as soon as possible. If no backup battery is installed or the power interruption is prolonged, you will need to set the clock again.

BASIC OPERATIONS

Standby Mode

- ▶ After connecting the power supply, the unit is in standby mode and the clock time 12:00 will first flash in the display.
- ▶ To get into standby mode without disconnecting the power, press and hold the SET button (5) for two seconds. The hour / minute digits will start flashing.

Display mode

- ▶ Press the POWER (1) button to switch the radio function on. The display will show the current radio frequency for five seconds and then the current time.

Dimmer control

- ▶ Press DIMMER button (3) to toggle between high and low brightness of display (13).

Volume Control

- ▶ Press the VOL + (6) and VOL - (7) buttons to adjust the volume level.

SETTINGS

Note: Press and hold the TUN + and TUN - buttons (2,9) and VOL + (6) and VOL - (7) buttons for faster change.

Setting the Clock

1. In standby mode, press the HOUR button (2) to set the hours. For post midday times the PM indicator (16) lights up.
2. Then press the MIN button (9) to set the minutes.
3. Press the SET button (5) to confirm the clock time setting or do not press any button for a few seconds. The hour / minute digits stop flashing and the set time shows in the display (13).
4. To reset the time, press and hold the SET button (5) for two seconds. The hour and minute digits will start flashing. Follow above steps 1-3.

Setting Alarm 1 and 2

1. In standby mode, press and hold the AL1 (6) or AL2 (7) button for two seconds. The clock time will flash in the display.
2. Press the HOUR (2) to set the hours.
3. Press the MIN button (9) to set the minutes.
4. Press the AL1 (6) or AL2 (7) again to confirm the setting.
5. The unit will then return to the clock time display after five seconds.

Checking the Alarm Time

1. In standby mode, press and hold the AL1 (6) or AL2 (7) button for two seconds to display the set alarm time. The unit will return to the clock time display after five seconds.

Waking up with Buzzer or Radio Sound

1. To select the buzzer or radio mode for Alarm 1, press the AL1 (6) repeatedly. The corresponding AL1 buzzer indicator (15) or AL1 radio indicator (14) will light up on the LED display.
2. To select the buzzer or radio mode for Alarm 2, press the AL2 (7) button repeatedly. The corresponding AL2 buzzer indicator (11) or AL2 radio indicator (12) will light up on the LED display.
3. When the preset alarm time is reached, the alarm will sound in the selected mode.
4. To stop the alarm, press the POWER (1) button. The alarm will sound again at the same time the next day.

Note: The buzzer alarm volume is fixed and cannot be adjusted. The radio alarm volume can be adjusted with the VOL + (6) and VOL - (7) buttons.

Disabling Alarm Functions

1. For Alarm 1, press the AL1 button (6) and for Alarm 2 the AL2 (7) button repeatedly until the buzzer (11,15) and / or radio indicators (12,14) have disappeared.

Snooze Function

1. When the alarm sounds, press the SNOOZE button (3) to stop the alarm temporarily. The AL1 / AL2 buzzer indicator (11,15) or AL1 / AL2 radio indicator (12,14) will continue to flash and the alarm will sound again after 9 minutes.
2. To cancel the SNOOZE function and repeat the alarm the next day, press the POWER button (1).

Sleep Function

This function allows you to program the unit so that the radio switches off automatically after a certain length of time (up to 90 minutes).

1. In Radio Mode, press the SLEEP button (4). "90" or the pre-set sleep time appears in the display.
2. Press the SLEEP button (4) button repeatedly to select the turn off time. Each time the button is pressed, the duration is reduced by 10 minutes, until "OFF" is displayed.
3. When the desired time is selected, release the SLEEP button (4) and wait for about two seconds, the sleep time is now set.
4. When the preset sleep duration has elapsed, the radio turns off automatically. If you would like to know the remaining time, press the SLEEP button (4) button once.
5. To cancel the sleep function before the preset time elapses, press the POWER (1) button to turn the radio off immediately.

NAP Function

This function wakes you up after a set length of time (up to 90 minutes) without disturbing the alarm function settings.

1. In Standby Mode, press the NAP button (4) repeatedly to select the turn on time. Each time the button is pressed, the duration is reduced by 10 minutes, until "OFF" is displayed.
2. When the desired time is selected, release the NAP button (4) and wait for about two seconds, the nap time is now set.
3. Press the NAP button (4) once to briefly show the nap time left.
4. When the preset nap duration has elapsed, the radio turns on automatically.
5. To cancel the nap alarm press the NAP button (4) until "OFF" is displayed.

RADIO OPERATION

Listening to the Radio

1. Press the POWER (1) button to turn on the radio. Depending on the last station you have listened to, an FM or AM frequency will be displayed.
2. Press the BAND selector button (10) to toggle between FM and AM.
3. For automatic tuning, press and hold the TUN + button (2) and TUN - button (9) for two seconds. Release the button. The tuner will scan and stop for the first strong station. Repeat until the desired station is reached.
4. For manual fine-tuning, press the same buttons repeatedly to adjust the frequency step by step.

Achieving Optimum Reception

1. In FM mode, extend and position the FM antenna (20) to achieve optimum reception.
2. In AM mode, rotate the unit to achieve optimum reception.

Preset Radio Stations

You can store up to 10 stations each for FM and AM.

1. Go to your desired station.
2. Press and hold the SET button (5) for two seconds, the program number will flash in the display. Press SET (5) again to confirm the setting.
3. Repeat these steps to store any other desired stations.

Listen to a Preset Station

1. When listening to the radio, press the MEM (8) button repeatedly to select a preset radio station.

CLEANING AND CARE

Danger of electroshock! Do not immerse the appliance in water or in other liquids.

1. Always pull the plug and remove the battery before storage.
2. Wipe the housing with a dry, soft cloth.
3. Do not use petrol, alcohol or other abrasive cleaners to clean the device.

TECHNICAL DATA

Power:	AC 230 V - 240 V ~ 50 Hz, 5 W
Battery:	DC 9 V, 1 x 9 V battery, type 6F22 / 006P (not included)
Frequency range:	AM 522 – 1620 kHz FM 87.5 – 108 MHz

WARRANTY CARD

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.