



# **TABLE OF CONTENTS**

---

## **Chapter 1 - Introduction**

<b>Introduction</b> .....	<b>1-2</b>
The Purpose of this Manual.....	1-2
Who Can and Should Use <b>DirectSOFT6</b> .....	1-2
Only One <b>DirectSOFT6</b> Version.....	1-3
Supplemental Manuals.....	1-4
Technical Support .....	1-4
<b>Conventions Used</b> .....	<b>1-5</b>
Menu Selections and Keystrokes.....	1-5
Key Topics for Each Chapter.....	1-5

## **Chapter 2 - Quick Start**

<b>Getting to Know Windows</b> .....	<b>2-2</b>
System Requirements .....	2-2
Power Supply .....	2-2
<b>DirectSOFT6</b> Package Contents.....	2-2
<b>Installation of DirectSOFT6</b> .....	<b>2-3</b>
Step 1: Load the CD .....	2-3
Step 2: Exit all other Windows Applications.....	2-3
Step 3: Enter the Product Key Code.....	2-4
Step 4: Installing an Upgrade.....	2-4
Step 5: License Agreement.....	2-5
Step 6: Enter the Customer Information.....	2-5
Step 7: Select the Type of Installation .....	2-6
Step 8: Ready to Install.....	2-6

## Table of Contents

---

Step 9: Installation is Complete.....	2-7
If an Upgrade.....	2-7
<b>Getting Started.....</b>	<b>2-8</b>
<b>Welcome to <i>DirectSOFT100</i> .....</b>	<b>2-11</b>
What is <i>DirectSOFT100</i> ? .....	2-11
Using <i>DirectSOFT100</i> ?.....	2-12
<b>Begin Editing a Program .....</b>	<b>2-13</b>
Step 1: Start a New Project .....	2-13
Step 2: Select Edit Mode .....	2-16
Step 3: Enter an Input Element .....	2-18
Step 4: Enter an Output Element .....	2-19
Step 5: Enter the End Rung .....	2-20
<b>Establish the Communication Link.....</b>	<b>2-23</b>
Connect the PC to the PLC .....	2-23
Step 1: Select the Port.....	2-23
Step 2: Select the PLC.....	2-24
Step 3: Choose the Protocol and Node Address.....	2-24
Step 4: Name the Link .....	2-25
<b>Monitor the Program .....</b>	<b>2-29</b>
 <b>Chapter 3 - Managing Projects</b>	
<b>Get Started Using <i>DirectSOFT6</i>.....</b>	<b>3-2</b>
Understanding the Launch Window .....	3-2
<b>Create a New Project.....</b>	<b>3-4</b>
New Program.....	3-4
Enter the New Project Information .....	3-4
<b>Importing Projects.....</b>	<b>3-5</b>
Program Documentation Mapping from TISOFT and Logicmaster .....	3-6
<b>Copy or Save Existing <i>DirectSOFT</i> Files .....</b>	<b>3-7</b>
 <b>Chapter 4 - Programming Environment</b>	
<b>Offline Toolbar Components .....</b>	<b>4-2</b>
Offline Toolbar .....	4-2

**Online Toolbar Components..... 4-5**  
    Online Toolbar ..... 4-5

**Additional Toolbars ..... 4-6**  
    The File Toolbar ..... 4-7  
    The Edit Toolbar..... 4-8  
    The Search Toolbar ..... 4-9  
    The View Toolbar ..... 4-10  
    The Tools Toolbar ..... 4-11  
    The PLC Toolbar..... 4-12  
    The PLC Diagnostics Toolbar..... 4-13  
    The PLC Setup Toolbar..... 4-13  
    The Debug Toolbar ..... 4-15  
    The Window Toolbar..... 4-16  
    The Help Toolbar ..... 4-17  
    The Custom Toolbar ..... 4-17  
    PLC System Information ..... 4-19  
    Communication/Link Information..... 4-20  
    PLC Mode ..... 4-20  
    Program Memory Usage ..... 4-20  
    PLC Type..... 4-20  
    Program Cursor Location..... 4-20

**The Options Dialog ..... 4-21**  
    Ladder Options ..... 4-22  
    Global Options..... 4-23

**Colors in *DirectSOFT6* ..... 4-24**  
    Select New Colors ..... 4-24  
    Color Selections ..... 4-25  
    The Default Settings..... 4-25  
    Monochrome ..... 4-25  
    Colors Conveying Information..... 4-26  
    Select a Theme..... 4-27

**The Ladder Palette ..... 4-28**  
    Be Familiar with the Ladder Palette ..... 4-28

**The Split Screen Feature ..... 4-30**

Split Screen Bar ..... 4-30  
The New Window Feature..... 4-31

**Chapter 5 - Edit a Program**

**I/O Configuration** ..... 5-2  
**Referencing Program Elements**..... 5-4  
    Data Types ..... 5-4  
    Aliases ..... 5-5  
    Timer/Counter Current Values..... 5-5  
    Accessing I/O Points as Memory Locations..... 5-5  
**Entering Program Instructions**..... 5-6  
    The Instruction Editor..... 5-6  
    Using the Ladder Palette ..... 5-8  
    Opening the Instruction Browser..... 5-8  
**Shortcuts for Entering Instructions**..... 5-11  
    Entering NO and NC Contacts ..... 5-12  
    Entering Instructions in Parallel..... 5-13  
    Entering Power Flow Instructions ..... 5-14  
    Entering Special Case Elements ..... 5-16  
    End Coil ..... 5-17  
    Setting and Resetting a Bit ..... 5-18  
    Using Floating Point Math..... 5-18  
**Drawing/Deleting Connecting Lines** ..... 5-19  
    Drawing the Lines ..... 5-19  
    Create Midline Outputs..... 5-20  
    Deleting Connecting Lines ..... 5-20  
**Selecting Rungs for Deleting, Cutting or Copying**..... 5-21  
**Deleting Rungs** ..... 5-22  
**Copying Rungs**..... 5-23  
**Cut and Paste Rungs** ..... 5-25  
**Merge (Combine) Rungs**..... 5-26  
**Inserting Columns, Rows and Rungs** ..... 5-27  
    Insert a Column to Add an Instruction ..... 5-27

Insert a Row or Rung..... 5-28

**Using Search and Replace ..... 5-29**

    Using the Object Section..... 5-29

    The Search Range Section ..... 5-30

    The Document Section..... 5-30

    The Object Table Section ..... 5-30

**Common Mistakes ..... 5-31**

    Failure to Enter the Edit Mode..... 5-31

    AND above a Join..... 5-31

    Forgetting to Select Rungs ..... 5-31

**Chapter 6 - Documentation**

**Turn Documentation On and Off..... 6-2**

    The Options Dialog ..... 6-2

    Documentation Selections..... 6-3

    General Documentation ..... 6-3

**Using the Documentation Editor ..... 6-4**

    Using the Scroll Buttons ..... 6-4

    Copying Documentation Between Elements..... 6-5

**Documenting and Assigning Nicknames ..... 6-6**

    Create an Unassigned Nickname ..... 6-6

    Assign the Nickname to an Element ..... 6-6

**Entering Rung Comments ..... 6-9**

    Comments are Free-form ..... 6-9

    Selecting Rungs for Comments ..... 6-9

    Using the Scroll Buttons ..... 6-10

    Use the Editing Keys..... 6-10

    Move Rung Comments ..... 6-11

**Entering Stage Comments ..... 6-12**

    Use Stage View..... 6-12

    Comments are Free-form ..... 6-13

    Selecting Stages to Comment ..... 6-13

    Editing the Comments ..... 6-13

## Table of Contents

---

<b>Importing and Exporting .....</b>	<b>6-14</b>
Exporting Program Documentation.....	6-14
Export Element Documentation .....	6-16
Export Rung Comments.....	6-18
Importing a Program.....	6-19
Importing Element Documentation .....	6-22
Importing Program Comments .....	6-24
Insert Instructions.....	6-24
Restore.....	6-27
<b>Prevent Documentation Loss .....</b>	<b>6-28</b>
Save Project.....	6-28
Backup Project .....	6-29

## Chapter 7 - Other Views

<b>Tabbed Views .....</b>	<b>7-2</b>
The Primary Views.....	7-2
<b>Stage (RLL<sup>PLUS</sup>) View.....</b>	<b>7-4</b>
Troubleshooting RLLplus vs. RLL.....	7-4
Stage Components.....	7-4
<b>Mnemonic View.....</b>	<b>7-5</b>
Handheld Programmer Aid.....	7-5
<b>Cross Reference (XRef) View.....</b>	<b>7-6</b>
XRef Mode .....	7-6
Change the XRef Query .....	7-7
XRef Toolbar .....	7-8
Usage Mode.....	7-9
Usage Mode Toolbar.....	7-9
XRef DB.....	7-10
<b>PID View.....</b>	<b>7-11</b>
PID Setup .....	7-11
<b>Trend View.....</b>	<b>7-13</b>
Creating a new Trend View.....	7-13
Output Window .....	7-15

Bookmark..... 7-17  
View Terminology..... 7-18

**Chapter 8 - Printing**

**Print the Current View** ..... 8-2  
    Print the Ladder View..... 8-2  
    Other Print Views ..... 8-3  
**Print Multiple Views** ..... 8-5  
**Print View Common Setup**..... 8-7  
**Using Print Preview** ..... 8-8  
    Print Preview Setup ..... 8-8  
    Print Preview ..... 8-9  
**Print Troubleshooting** ..... 8-10  
    Parts of Program not Printed ..... 8-10  
    Program Prints "Garbage" ..... 8-10  
    DirectSOFT6 Crashes..... 8-10  
    Print Setup Dialog ..... 8-11

**Chapter 9 - Setup and Manage Communication Links**

**Establish the Communications Link** ..... 9-2  
**Setup a Serial Link** ..... 9-2  
    Link Status..... 9-6  
**Setup an Ethernet Link**..... 9-7  
    NetEdit3 Troubleshooting Tips ..... 9-12  
**Setup a Modem Link** ..... 9-14  
    Modem Setup ..... 9-14  
    Configuring the Link ..... 9-18  
**Comm Link Options**..... 9-22  
**Going Online** ..... 9-24  
    Connect the PLC ..... 9-24  
    Use the Project Folder ..... 9-24  
    Use the Link ..... 9-24

## Chapter 10 - Debugging and Monitoring

<b>Monitor with Data View</b> .....	<b>10-2</b>
Using Data View.....	10-2
Open a New Data View Window.....	10-2
A Closer Look.....	10-3
Data View Options.....	10-4
Select Bits for Display.....	10-5
Data View Documentation Options.....	10-7
Apply Options.....	10-7
Data View Mode Options.....	10-8
Make Data View Entries.....	10-8
Data Format and Size.....	10-10
Write the Edits.....	10-11
Auto-increment.....	10-12
Editing Entries.....	10-12
Save the Data View Window.....	10-13
Using Pause Bits.....	10-14
Use Override Bits to Control I/O (DL05, DL06, D2-240, D2-250-1, D2-260, D2-262, D3-350, D4-450, D4-454) ...	10-15
<b>Change Value Dialog</b> .....	<b>10-16</b>
Use the Change Value Dialog.....	10-16
Specify an Element Reference or Nickname.....	10-17
Enter a New Value.....	10-18
<b>Using the Memory Editor</b> .....	<b>10-20</b>
Select the Locations to View.....	10-20
<b>Test Mode Operations for Debugging</b> .....	<b>10-22</b>
Select Test Mode.....	10-22
Test Program Operations.....	10-23
The Test Operations Window.....	10-24
<b>Trap Monitor</b> .....	<b>10-25</b>
Access the Trap Monitor.....	10-25
Use with Data View.....	10-27
<b>Stack Monitor (D4-440 Only)</b> .....	<b>10-28</b>
Access the Stack Monitor.....	10-28



# Table of Contents

---

<b>Trend View</b> .....	<b>10-29</b>
Using the Trend View .....	10-29
The Crosshair Cursor .....	10-30
<b>Check <i>Direct</i>SOFT6 File Revision</b> .....	<b>10-33</b>

## Appendix A - Protocols and Cable Diagrams

<b>Protocols and Cables</b> .....	<b>A-2</b>
<b>Programming Cable Diagrams</b> .....	<b>A-6</b>

## Appendix B - Communications Troubleshooting

<b>Communications Resources</b> .....	<b>B-2</b>
Startup .....	B-2
USB-TO-SERIAL Devices .....	B-9
DUMP (used to troubleshoot SERIAL and MODEM links).....	B-10
<b>Editing the DSxxx.ini file</b> .....	<b>B-10</b>
Windows XP and Windows 7/8/10 .....	B-10
Windows Vista .....	B-11
UAC = ON .....	B-11
UAC = OFF. ....	B-12
Other Editable Parameters .....	B-12
<b>Other Possible Issues</b> .....	<b>B-15</b>
How to Change USB-Serial Port Assignment .....	B-15
“PORT UNAVAILABLE OR IN USE” .....	B-15
Laptop AC Adapter Issue .....	B-15

## Appendix C - Hardware - Software Compatibility Table

<b>Hardware – Software Compatibility Table</b> .....	<b>C-2</b>
--	------------