

RODGERS®

IMAGINE

SERIES

OWNER'S MANUAL

IMAGINE 351D (Drawknobs)

IMAGINE 351T (Tabs)

RODGERS®

EXPERIENCE ELEVATED

RODGERS®

IMAGINE

SERIES

Dear Rodgers Imagine Owner,

Thank you very much for your purchase of a new Rodgers Imagine Series organ, built in the Rodgers facility in Hillsboro, Oregon. It is our honor and pleasure to welcome you to our worldwide group of Rodgers owners who enjoy the rich tradition of the Rodgers sound.

Since 1958, the Rodgers story has been one of continuous leadership in innovation of sound quality and performance in the pipe organ industry. Throughout our history, Rodgers has put musical purpose and sound advancement first in product development. That's why Rodgers organs are found in such prestigious performance venues as Carnegie Hall, educational institutions like The Juilliard School, homes of leading performing artists, and thousands of houses of worship around the world. Our goal is simply to develop and manufacture the finest American built digital organ available with an exquisite sound that elevates any occasion.

Since 2016, the premium Rodgers brand has been part of the Global Organ Group, a family-owned company which is solely and continuously focused on developing digital pipe organ instruments. The Global Organ Group provides the vast expertise of its team of specialized engineers with decades of experience in digital pipe organ technology, striving for continuous improvement and innovation.

An organ purchase is a major investment and the Rodgers team wants to have a long and positive relationship with you as a Rodgers owner, supporting you, your dealer and/or their technician(s) throughout the years. To do the best possible job and to activate your warranty, the Rodgers Customer Support department asks you to take a moment to let us know about your purchase. So please, register online at www.rodgersinstruments.com/warranty.

On behalf of our complete Rodgers team, thank you again for your confidence and for the opportunity to build your new Rodgers Imagine organ.

Best wishes,

John Moesbergen

CEO Rodgers Instruments US LLC

RODGERS®

RODGERS INSTRUMENTS US LLC
8117 NE Jacobson Street, Building 7, Suite D-200, Hillsboro, OR 97124
PHONE 503.648.4181 FAX 503.681.0444 WEB rodgersinstruments.com

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING - When using electric products, basic precautions should always be followed, including the following:

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

For the U.K. —

WARNING: THIS APPARATUS MUST BE EARTED

IMPORTANT: THE WIRES IN THIS MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE.

GREEN-AND-YELLOW: EARTH, BLUE: NEUTRAL, BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol (⏚) or coloured GREEN or GREEN-AND-YELLOW.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.


For additional safety, all externally accessible metal parts (such as headphones, Aux-in/out, MIDI, USB, toe pistons, etc.) are floating from safety earth.

Before using this unit, carefully read the section "IMPORTANT SAFETY INSTRUCTIONS" (p. 3), "USING THE UNIT SAFELY" (p. 5), and "IMPORTANT NOTES" (p. 9). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, the Owner's Manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

CONSIGNES DE SÉCURITÉ IMPORTANTES CONSERVEZ CES INSTRUCTIONS

INSTRUCTIONS RELATIVES AU RISQUE D'INCENDIE, D'ÉLECTROCUTION OU DE BLESSURE.

AVERTISSEMENT : Pour réduire le risque d'incendie ou d'électrocution, ne pas exposer cet appareil à la pluie ou à l'humidité.

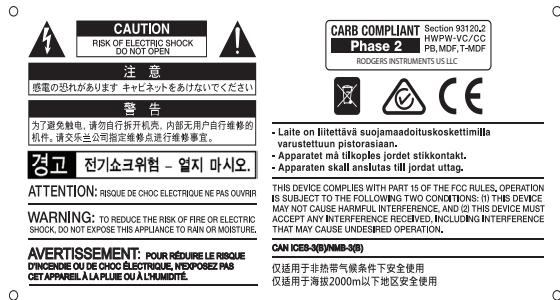

Le symbole de l'éclair fléché dans un triangle équilatéral prévient l'utilisateur de la présence d'une « tension dangereuse » non isolée à l'intérieur de l'appareil, qui peut être suffisamment élevée pour présenter un risque d'électrocution.

Le point d'exclamation dans un triangle équilatéral prévient l'utilisateur de la présence d'instructions d'emploi et d'entretien importantes dans la documentation qui accompagne l'appareil.

AVERTISSEMENT – Lors de l'utilisation d'un appareil électrique, toujours prendre des précautions de base, y compris les suivantes :

1. Lire ces instructions.
2. Conserver ces instructions.
3. Tenir compte de tous les avertissements.
4. Suivre toutes les instructions.
5. Ne pas utiliser cet appareil près de l'eau.
6. Nettoyer uniquement avec un chiffon sec.
7. Éviter d'obstruer les ouvertures de ventilation. Installer l'appareil conformément aux instructions du fabricant.
8. Ne pas installer l'appareil à proximité de sources de chaleur telles que radiateurs, grilles à registre, poêles ou autres appareils qui émettent de la chaleur (y compris les amplificateurs).
9. Ne pas supprimer la fonction de sécurité de la fiche polarisée ou de mise à la terre. Une fiche polarisée comporte deux lames, dont l'une est plus large que l'autre. Une fiche de mise à la terre comporte deux lames, plus une broche de mise à la terre. La lame la plus large et la troisième broche assurent votre sécurité. Si la fiche fournie n'entre pas dans la prise de courant, demander à un électricien de remplacer la prise obsolète.
10. Protéger le cordon d'alimentation de façon à éviter de marcher dessus ou de le pincer, en particulier au niveau des fiches, des prises de courant et du point de sortie de l'appareil.
11. Utiliser uniquement les accessoires spécifiés par le fabricant.
12. Débrancher cet appareil pendant les orages ou s'il reste longtemps inutilisé.
13. Confier toute réparation à un technicien compétent. L'appareil doit être réparé lorsqu'il est endommagé de quelque manière que ce soit, par exemple si le cordon d'alimentation ou la fiche est endommagée, si un liquide a été renversé ou des objets sont tombés dans l'appareil, si l'appareil a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement, ou s'il est tombé sur le sol.

Avant d'utiliser cet appareil, lire attentivement les sections intitulées : « CONSIGNES DE SÉCURITÉ IMPORTANTES » (p. 4), « UTILISATION SÉCURITAIRE DE L'APPAREIL » (p. 6) et « REMARQUES IMPORTANTES » (p. 10). Ces sections donnent des renseignements importants sur le fonctionnement de l'appareil. En outre, pour bien comprendre chaque fonctionnalité de votre nouvel appareil, vous devez prendre soin de lire intégralement le Manuel du propriétaire. Conserver le manuel à portée de la main aux fins de référence.

USING THE UNIT SAFELY

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About WARNING and CAUTION Notices

WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

WARNING

Make sure that the power cord is grounded

Connect mains plug of this model to a mains socket outlet with a protective earthing connection.



Do not disassemble or modify by yourself

Do not open or perform any internal modifications on the unit.



Do not repair or replace parts by yourself

Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so), or use internal connections for optional external speakers. Refer all servicing to your retailer, or Rodgers Instruments US LLC, as listed on the "Notice to Users" (p. 11).



Do not use or store in the following types of locations

- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Humid; or are
- Exposed to rain or moisture; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness.



Indoor use only.



WARNING

Connect the power cord to an outlet of the correct voltage

The unit should be connected to a power supply only of the type described as marked under the keyboard deck of unit.



Do not bend the power cord or place heavy objects on it

Do not excessively twist or bend the power cord, nor place heavy objects on it. Doing so can damage the cord, producing severed elements and short circuits. Damaged cords are fire and shock hazards!



To prevent possible hearing damage, do not listen at high volume levels for long periods.

This unit, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level, or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should immediately stop using the unit, and consult an audiologist.



Don't allow foreign objects or liquids to enter unit; never place containers with liquid on unit

Do not place containers containing liquid (flower vases) on this product. Never allow foreign objects (e.g., flammable objects, coins, wires) or liquids (e.g., water or juice) to enter this product. Doing so may cause short circuits, faulty operation, or other malfunctions.



Adults must provide supervision in places where children are present

When using the unit in locations where children are present, be careful so no mishandling of the unit can take place. An adult should always be on hand to provide supervision and guidance.



WARNING

Turn off the unit if an abnormality or malfunction occurs

Immediately turn the unit off, remove the power cord from the outlet, and request servicing by your retailer, or Rodgers Instruments US LLC, as listed on the "Notice to Users" (p. 11) page when:



- The power-supply cord or the plug has been damaged; or
- If smoke or unusual odor occurs; or
- Objects have fallen into, or liquid has been spilled onto the unit; or
- The unit has been exposed to rain (or otherwise has become wet); or
- The unit does not appear to operate normally or exhibits a marked change in performance.

Do not drop or subject to strong impact

Protect the unit from strong impact.

(Do not drop it!)



Do not share an outlet with an unreasonable number of other devices

Do not force the unit's power-supply cord to share an outlet with an unreasonable number of other devices. Be especially careful when using extension cords—the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating (watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through.



Do not use overseas

Before using the unit in a foreign country, consult with your retailer, or Rodgers Instruments US LLC, as listed on the "Notice to Users" (p. 11).



UTILISATION SÉCURITAIRE DE L'APPAREIL

UTILISATION SÉCURITAIRE DE L'APPAREIL

INSTRUCTIONS POUR PRÉVENIR LES INCENDIES, LES CHOCS ÉLECTRIQUES ET LES BLESSURES

À propos des messages de type  AVERTISSEMENT et  ATTENTION

 AVERTISSEMENT	Utilisé pour les instructions visant à prévenir l'utilisateur d'un danger de mort ou d'un risque de blessure grave en cas d'utilisation incorrecte de l'appareil.
 ATTENTION	Utilisé pour les instructions visant à prévenir l'utilisateur d'un risque de blessure ou de dommages matériels en cas d'utilisation incorrecte de l'appareil. * Par dommages matériels, on entend les dommages ou les autres conséquences préjudiciables relatives au domicile et à son ameublement, de même qu'aux animaux de compagnie.

À propos des symboles

	Le symbole  attire l'attention de l'utilisateur sur des instructions ou des avertissements importants. L'image représentée à l'intérieur du triangle indique la signification précise du symbole.
	Le symbole  attire l'attention de l'utilisateur sur des manipulations interdites. La manipulation interdite est représentée à l'intérieur du cercle. Le symbole présenté à gauche, par exemple, indique l'interdiction de démonter l'appareil.
	Le symbole  attire l'attention de l'utilisateur sur une obligation. L'action obligatoire est représentée à l'intérieur du cercle. Le symbole présenté à gauche, par exemple, indique que le cordon d'alimentation doit être débranché de la prise de courant.

TOUJOURS OBSERVER LES CONSIGNES SUIVANTES

Avertissement

Vérifier que le cordon d'alimentation est relié à la terre

Brancher la fiche principale de ce modèle dans une prise de courant mise à la terre.



Ne pas démonter ni modifier

Ne pas ouvrir l'appareil ni tenter de le modifier.



Ne pas réparer ni remplacer soi-même les pièces

Ne pas tenter de réparer l'appareil, ni d'en remplacer les pièces (sauf si le présent manuel fournit des instructions précises en ce sens). Confiez toute réparation à un technicien en vous adressant à votre revendeur ou à Rodgers Instruments US LLC (voir l'*« Avis aux utilisateurs »*, p. 6).



Ne pas utiliser ni ranger dans des endroits présentant les caractéristiques suivantes :

- des températures extrêmes (p. ex. exposition directe au soleil dans un véhicule fermé, à proximité d'un conduit de chauffage, au-dessus d'un appareil qui émet de la chaleur);
- présence d'eau (p. ex. salle de bain ou de toilettes, sols mouillés);
- exposition à la vapeur ou à la fumée;
- risque d'exposition au sel;
- humidité;
- exposition à la pluie;
- exposition à la poussière ou au sable;
- exposition à de fortes vibrations ou secousses.



Utilisation intérieure seulement.



Brancher le cordon d'alimentation dans une prise de tension appropriée

L'appareil doit être branché à une source d'alimentation du type indiqué sous le clavier.



Avertissement

Ne pas plier le cordon d'alimentation ni poser d'objet lourd dessus

Ne pas tordre ni plier excessivement le cordon d'alimentation, et ne pas poser d'objet lourd dessus, ce qui risquerait d'endommager le cordon, de rompre ses composants et de provoquer un court-circuit. Les cordons endommagés posent des risques d'incendie et d'électrocution!



Pour éviter d'éventuels dommages auditifs, n'écoutez pas à des niveaux de volume élevés pendant de longues périodes

Cet appareil, seul ou combiné avec un amplificateur et un casque ou des enceintes, peut générer des niveaux sonores susceptibles d'occasionner une perte auditive permanente. Ne pas faire fonctionner longtemps à niveau sonore élevé ou inconfortable. Si vous constatez une perte auditive ou des bourdonnements d'oreille, cessez immédiatement d'utiliser l'appareil et consultez un audiologiste.



Éviter que des objets étrangers ou des liquides pénètrent dans l'appareil; ne jamais placer de récipients contenant du liquide sur l'appareil

Ne pas poser de récipients contenant du liquide (vases) sur cet appareil.



Ne jamais laisser d'objets étrangers (p. ex. objets inflammables, pièces de monnaie, fils) ni de liquides (p. ex. eau ou jus) pénétrer dans l'appareil. La présence d'objets étrangers ou de liquide risque de provoquer un court-circuit, un défaut de fonctionnement ou d'autres défauts.



Ne pas laisser les enfants sans surveillance en présence de l'appareil

Si l'appareil est utilisé en présence d'enfants, veiller à le protéger de toute manipulation incorrecte. Un adulte doit toujours être présent pour assurer la supervision et expliquer le fonctionnement de l'appareil.



Avertissement

Éteindre l'appareil en cas d'anomalie ou de défectuosité

Éteindre immédiatement l'appareil, débrancher le cordon d'alimentation et demander l'intervention d'un technicien en vous adressant à votre revendeur ou à Rodgers Instruments US LLC (voir l'*« Avis aux utilisateurs »*, p. 6), dans les situations suivantes :



- le cordon d'alimentation ou la fiche est endommagée;
- l'appareil émet de la fumée ou une odeur inhabituelle;
- un objet est tombé ou du liquide a pénétré dans l'appareil;
- l'appareil a été exposé à la pluie (ou s'est mouillé d'une autre manière);
- l'appareil ne semble pas fonctionner normalement ou présente un rendement significativement altéré.

Éviter de laisser tomber l'appareil ou de le soumettre à un choc important

Protéger l'appareil des impacts. (Ne pas le laisser tomber!).



Ne pas brancher l'appareil dans une prise de courant déjà occupée par un trop grand nombre d'appareils

Éviter de brancher un trop grand nombre d'appareils dans la même prise de courant. User de prudence dans l'emploi de rallonges : la puissance totale utilisée par l'ensemble des appareils branchés sur la rallonge ne doit jamais dépasser la puissance nominale (watts/ampères) de la rallonge. Les charges excessives peuvent faire surchauffer et fondre l'isolation de la rallonge.



Ne pas utiliser l'appareil à l'étranger

Avant d'utiliser l'appareil dans un pays étranger, consulter votre détaillant ou Rodgers Instruments US LLC (voir l'*« Avis aux utilisateurs »*, p. 6).



⚠ Avertissement

仅适用于海拔2000m以下地区安全使用。



《2000m چاھے گیاں مکانات کے لئے اسکے ہمچنانچہ ایسا مکان کیا کہ اس کے لئے اس کو 2000m کی سطح پر بھی ایسا ہے۔

“گھر کے دلچسپی کے لئے اس کے لئے اس کو 2000m کی سطح پر بھی ایسا ہے۔

Dan hab yungh youq gj digih haijbaz 2000m doxroengz haenx ancienz sawjyungh.

دېڭىز يۈزىدىن 2000 مېتىر تۈۋەن رايونلا دىلا بىخەتە، ئىشلەتكىلى بولىدۇ

⚠ ATTENTION**Placer dans un endroit bien aéré**

L'appareil doit être placé d'une manière qui n'interfère pas avec sa propre ventilation.

**Saisir la fiche pour brancher ou débrancher le cordon d'alimentation**

Toujours saisir uniquement la fiche du cordon d'alimentation au moment de brancher ou de débrancher l'appareil.

**Nettoyer régulièrement la fiche du cordon d'alimentation**

À intervalles réguliers, débrancher la fiche d'alimentation et nettoyer avec un chiffon sec pour enlever toutes les poussières et autres saletés des broches. Veiller également à débrancher l'appareil lorsqu'il reste longtemps inutilisé.

L'accumulation de poussière entre la fiche et la prise de courant peut entraîner une isolation insuffisante et un risque d'incendie.

**Gérer les câbles avec précaution**

Essayer d'éviter que les câbles ne s'emmèlent, et garder tous les câbles hors de la portée des enfants.

**Ne pas monter sur l'appareil, ni poser d'objets lourds dessus**

Ne jamais grimper sur l'appareil; éviter d'y poser des objets lourds.

**⚠ ATTENTION****Ne pas brancher ni débrancher le cordon d'alimentation avec des mains mouillées**

Ne jamais manipuler le cordon d'alimentation ni les fiches avec des mains mouillées au moment de brancher ou de débrancher l'appareil.

**Précautions à prendre lors du transport de l'appareil**

Cet appareil est très lourd. Veiller à disposer d'un nombre suffisant de personnes pour le soulever et le déplacer en toute sécurité, sans forcer indûment. Il faut disposer d'une prise solide, afin d'éviter de se blesser et d'endommager l'instrument. Avant de déménager l'instrument, consultez votre détaillant ou Rodgers Instruments US LLC (voir l'"Avis aux utilisateurs", p. 6).

**Débrancher le cordon d'alimentation avant de nettoyer l'appareil**

Éteindre l'appareil et débrancher le cordon d'alimentation de la prise de courant avant de nettoyer l'appareil.

**Débrancher le cordon d'alimentation s'il y a risque de foudre.**

Chaque fois qu'il y a risque d'orage dans la région, débrancher le cordon d'alimentation de la prise de courant.

**Veiller à ne pas se pincer les doigts sous le couvercle**

User de prudence pour éviter de se coincer les doigts en manipulant des pièces mobiles, comme les suivantes :



Le couvercle

La surveillance d'un adulte est recommandée lorsque de jeunes enfants utilisent l'appareil.

⚠ ATTENTION**Précautions concernant l'utilisation du banc**

Respecter les consignes suivantes lors de l'utilisation du banc :

- Ne pas laisser deux personnes ou plus s'asseoir sur le banc.

**Ne pas enlever la grille du haut-parleur ni le haut-parleur**

Ne pas tenter d'aucune façon d'enlever la grille du haut-parleur ni le haut-parleur. Le haut-parleur ne peut être remplacé par l'utilisateur. L'intérieur du boîtier présente des risques d'électrocution, ainsi que des tensions et des courants dangereux.

**Débranchement du cordon d'alimentation de la prise secteur**

Pour enlever toute alimentation électrique de l'appareil, débrancher le cordon d'alimentation de la prise de courant.

**Garder le cordon d'alimentation accessible**

La fiche principale du cordon d'alimentation doit rester facilement accessible.



ou

L'interrupteur d'alimentation doit être accessible

L'interrupteur d'alimentation est le dispositif de coupure d'alimentation principal de cet appareil. Per conséquent, l'interrupteur d'alimentation doit être facilement accessible.



Power Supply

- Do not connect this unit to same electrical outlet that is being used by an electrical appliance that is controlled by an inverter or a motor (such as a refrigerator, washing machine, microwave oven, or air conditioner). Depending on the way in which the electrical appliance is used, power supply noise may cause this unit to malfunction or may produce audible noise. If it is not practical to use a separate electrical outlet, connect a power supply noise filter between this unit and the electrical outlet.
- To prevent malfunction and equipment failure, always make sure to turn off the power on all your equipment before you make any connections.
- Although the LCD and LEDs are switched off when the unit is turned off, this does not mean that the unit has been completely disconnected from the source of power. If you need to turn off the power completely, first turn off the unit's switch, then unplug the power cord from the power outlet. For this reason, the outlet into which you choose to connect the power cord's plug should be one that is within easy reach and readily accessible.
- The supply voltage tolerance for 120V and 240V units is -10% to +10%. The operating ambient temperature range is 32-113°F (0-45°C).

NOTE

The settings you were editing will be lost when the unit is turned off. If you want to keep your settings, you must save your settings before turning the unit off.

Placement

- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
- This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- Do not expose the unit to direct sunlight, place it near devices that radiate heat, or otherwise subject it to temperature extremes. Also, do not allow lighting devices that normally are used while their light source is very close to the unit (such as a piano light), or powerful spotlights to shine upon the same area of the unit for extended periods of time. Excessive heat can deform or discolor the unit.
- Do not allow rubber, vinyl, or similar materials to remain on this unit for long periods of time. Such objects can discolor or otherwise harmfully affect the finish.
- Do not allow objects to remain on top of the keyboard or pedal board. This can be the cause of malfunction, such as keys ceasing to produce sound.
- Do not paste stickers, decals, or the like to this instrument. Peeling such matter off the instrument may damage the exterior finish.

- Do not put anything that contains water on this unit. Also, avoid the use of insecticides, perfumes, alcohol, nail polish, spray cans, etc., near the unit. Swiftly wipe away any liquid that spills on the unit using a dry, soft cloth.

Maintenance

- To clean the unit, use a dry, soft cloth; or one that is slightly dampened. Try to wipe the entire surface using an equal amount of strength, moving the cloth along with the grain of the wood. Rubbing too hard in the same area can damage the finish.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Repairs and Data

- Please be aware that all data contained in the unit's memory may be lost when the unit is sent for repairs. Important data should always be backed up the USB drive, or written down on paper (when possible). During repairs, due care is taken to avoid the loss of data. However, in certain cases (such as when circuitry related to memory itself is out of order), we regret that it may not be possible to restore the data, and Rodgers assumes no liability concerning such loss of data.

- Due to the structural design of this instrument, small pets or other animals could end up getting trapped inside it. If such a situation is encountered, you must immediately turn off the unit and disconnect the power cord from the outlet. You should then consult with the retailer from whom the instrument was purchased, or contact Rodgers Instruments US LLC, as listed on the "Notice to Users" (p. 11).

- When opening or closing the lid, please be careful not to get your fingers pinched between the movable part and the panel.
- The explanations in this manual include illustrations that depict what should typically be shown by the display.

Note, however, that your unit may incorporate a newer, enhanced version of the system (e.g., includes newer sounds), so what you actually see in the display may not always match what appears in the manual.

Before Using External Memories

Using External Memories

- Carefully insert the USB drive all the way in—until it is firmly in place.



- Never touch the terminals of the USB drive. Also, avoid getting the terminals dirty.
- USB drive is constructed using precision components; handle the cards carefully, paying particular note to the following.
 - To prevent damage to the cards from static electricity, be sure to discharge any static electricity from your own body before handling the cards.
 - Do not touch or allow metal to come into contact with the contact portion of the cards.
 - Do not bend, drop, or subject cards to strong shock or vibration.
 - Do not keep cards in direct sunlight, in closed vehicles, or other such locations.
 - Do not allow cards to become wet.
 - Do not disassemble or modify the cards.

REMARQUES IMPORTANTES

Alimentation

- Ne pas brancher cet appareil dans une prise de courant déjà utilisée par un appareil électrique contrôlé par un onduleur (réfrigérateur, lessiveuse, four micro-ondes, climatiseur, etc.) ou comportant un moteur. Suivant le mode d'utilisation de l'appareil électrique, le bruit induit peut nuire au fonctionnement de l'instrument ou produire un bruit audible. Si, pour des raisons pratiques, il est impossible d'utiliser une prise distincte, brancher un filtre de bruit induit entre cet appareil et la prise de courant.
- Avant de brancher l'appareil à d'autres appareils, mettre l'ensemble des appareils hors tension, de façon à éviter d'endommager les haut-parleurs et les autres périphériques.
- Bien que l'écran et les voyants s'éteignent lorsqu'on éteint l'appareil, celui-ci peut rester activé par la source d'alimentation. S'il faut désactiver l'alimentation complètement, appuyer d'abord sur le commutateur pour désactiver l'appareil, puis débrancher le cordon d'alimentation de la prise de courant. C'est pourquoi la prise de courant choisie pour brancher le cordon d'alimentation doit être facilement accessible.
- La tolérance de tension d'alimentation pour les unités 120V et 240V est comprise entre -10% et +10%. La plage de température ambiante de fonctionnement est 32-113°F (0-45°C).

NOTE

Si l'appareil est éteint pendant la modification des paramètres, les nouveaux réglages seront perdus. Pour les conserver, il faut les enregistrer avant de l'éteindre.

Emplacement

- Lorsque l'appareil est utilisé à proximité d'amplificateurs de puissance (ou de tout autre équipement contenant d'importants transformateurs de puissance), un bourdonnement peut se faire entendre. Pour atténuer le problème, changer l'orientation de l'appareil ou l'éloigner de la source d'interférence.
- Cet appareil peut interférer avec la réception radio et télévision. Ne pas l'utiliser à proximité de ce type de récepteurs.
- Un bruit peut se faire entendre si des appareils de communication sans fil, tels que des téléphones cellulaires, sont utilisés à proximité de l'appareil. Ce type de bruit peut se produire lors de la réception ou de l'émission d'un appel, ou pendant une conversation téléphonique. En cas de problème de ce genre, éteindre les appareils sans fil concernés ou les déplacer de façon à les éloigner suffisamment de l'appareil.
- Éviter d'exposer l'appareil à la lumière directe du soleil, de le placer à proximité d'appareils qui émettent de la chaleur, de le laisser à l'intérieur d'un véhicule fermé et de le soumettre de quelque manière que ce soit à des températures extrêmes. Éviter en outre de laisser les appareils d'éclairage dont l'utilisation normale place la source lumineuse très près de l'appareil (comme une lampe de piano) ou de puissants projecteurs éclairer longtemps la même partie de l'appareil. Une chaleur excessive peut déformer ou décolorer l'appareil.
- Ne pas laisser d'objets de caoutchouc, de vinyle ou de matériaux semblables sur l'appareil pendant longtemps. Ces objets peuvent décolorer ou abîmer la finition de l'appareil.

- Ne pas laisser d'objets sur le clavier ou le pédailler. Le poids de ces objets risque de provoquer des déféctuosités, par exemple des touches qui ne produisent aucun son.
- Ne pas coller d'autocollants, de décalcomanies ou autres images sur l'appareil. Au moment de les enlever, la finition risque de s'abîmer.
- Ne jamais placer sur l'appareil quelque chose qui contient de l'eau. Éviter en outre d'utiliser des insecticides, des parfums, de l'alcool, du vernis à ongles, des vaporisateurs, etc., à proximité de l'appareil. Si du liquide est renversé sur l'appareil, l'essuyer rapidement avec un linge sec et doux.

Entretien

- Pour nettoyer l'appareil, utiliser un chiffon sec et doux ou un chiffon légèrement imbibé d'eau. Essayer d'essuyer toute la surface en appuyant également, dans le sens des fibres du bois. Ne pas frotter trop fort en un seul endroit, pour éviter d'endommager la finition.
- Ne jamais utiliser de benzine, de diluant, d'alcool ni de solvants afin d'éviter tout risque de décoloration ou de déformation.

Réparations et données

- Veuillez prendre note que toutes les données enregistrées dans la mémoire de l'appareil peuvent se perdre lorsque l'appareil est envoyé pour réparation. Il est important de toujours sauvegarder les données sur une clé de mémoire USB, ou de les inscrire sur papier (si possible). Durant les réparations, les techniciens prennent soin d'éviter toute perte de données. Malheureusement, dans certains cas (comme un bris des circuits de mémoire), il peut s'avérer impossible de récupérer les données, et Rodgers ne peut assumer aucune responsabilité quant aux données perdues.

Précautions Supplémentaires

- Il est important de savoir que le contenu de la mémoire peut être définitivement perdu en cas d'erreur technique ou de déféctuosité de l'appareil. Pour prévenir le risque de perte des données importantes, nous recommandons aux utilisateurs de faire régulièrement des copies de sauvegarde de ce qui se trouve dans la mémoire de l'appareil et sur la clé de mémoire USB.
- Malheureusement, si le contenu de la mémoire de l'appareil ou de la clé USB est perdu, sa récupération pourrait s'avérer impossible, et Rodgers ne peut pas assumer la responsabilité des données perdues.
- Manipuler avec un soin raisonnable les boutons, index et autres commandes de l'appareil, de même que les prises audio et les connecteurs. Une manipulation non soignée peut entraîner des dysfonctionnements.
- Ne jamais frapper l'écran ou y appliquer une forte pression.
- Pour débrancher un câble, le saisir par le connecteur – ne jamais tirer sur le câble lui-même, de façon à éviter de causer des mauvais contacts ou d'endommager ses éléments internes.
- Il est normal que l'appareil dégage un peu de chaleur pendant qu'il fonctionne.
- Pour éviter de déranger les gens à proximité, essayer de garder le volume à un niveau raisonnable. Il est aussi possible d'utiliser des écouteurs pour ne pas avoir à s'en soucier.

- Si l'appareil doit être transporté, le protéger d'abord avec un emballage antichoc. Autrement, il risque d'être égratigné ou endommagé, et un dysfonctionnement pourrait s'ensuivre.

- Éviter d'appliquer une trop grande force sur le lutrin lorsqu'il est en cours d'utilisation.
- Certains câbles de connexion contiennent des résistors; aux fins de connexion à cet appareil, éviter d'utiliser ces câbles, qui peuvent rendre le son extrêmement faible, voire inaudible. Pour obtenir les caractéristiques techniques de câbles en particulier, prière de communiquer avec le fabricant concerné.

- En raison de la conception structurelle de cet instrument, il pourrait arriver que des petits animaux domestiques ou autres se retrouvent coincés à l'intérieur. En pareille situation, éteindre immédiatement l'appareil et le débrancher de la prise de courant. Ensuite, consulter le détaillant qui a vendu l'instrument ou communiquer avec Rodgers Instruments aux coordonnées indiquées dans l'avis aux utilisateurs (Notice to Users, p. 11).

- En ouvrant ou en refermant le couvercle, faire attention de ne pas se coincer les doigts entre la partie mobile et le panneau.

- Les explications fournies dans ce manuel comprennent des illustrations qui indiquent ce qui apparaît habituellement à l'écran.

Il est toutefois à noter que l'appareil pourrait comporter une version mise à jour ou améliorée du système (p. ex. une banque sonore renouvelée), de telle sorte que l'affichage à l'écran peut ne pas correspondre à ce qui est montré dans le manuel.

Avant d'utiliser une mémoire externe

Pour l'utilisation d'une mémoire externe

Insérer soigneusement la clé de mémoire USB jusqu'au fond, en s'assurant qu'elle tient bien en place.



- Ne pas appliquer de force excessive sur la clé USB lorsqu'elle est branchée.
- Les clés USB sont des instruments de précision; il faut les manipuler avec précaution, en veillant à ce qui suit :
 - L'électricité statique peut endommager une clé USB. Prendre soin de décharger le corps de son électricité statique avant de manipuler une clé USB.
 - Ne pas toucher la partie de contact de la clé USB, ni la mettre en contact avec du métal.
 - Éviter de plier et de faire tomber les clés USB, et de les soumettre à des vibrations ou à des chocs violents.
 - Éviter de laisser des clés USB exposées à la lumière directe du soleil, dans des véhicules fermés ou dans d'autres lieux semblables.
 - Garder les clés USB à l'abri de l'humidité.
 - Ne jamais essayer de démonter ou de modifier une clé USB.

Contents

USING THE UNIT SAFELY	5
IMPORTANT NOTES	9
Imagine 351 Quick Tour	12
The Display	14
Thumb Pistons	15
Expression Shoes and Toe Pistons	16
Control Knobs	16
External Connectors	16
Headphones	16
Selecting Stops (Sounds)	17
Selecting a Sound Variation (Voice Palette)	17
Organ Type	17
List of Stops	18
Library/MIDI A and Library/MIDI B Thumb Pistons	19
Organ Stop Library	19
Orchestral Library	20
MIDI Channel	20
Storing a Combination of Stops	21
Storing or Recalling a Registration	21
Resetting the Sound Settings (General Cancel)	21
Using Memory Levels	22
Selecting a Memory Level	22
Recalling a Registration from a Different Memory Level	22
NEXT: Recalling Registrations Successively	22
Using a USB Drive to Store and Recall Stop Combinations	23
Preparing USB Drive	23
Selecting USB Memory Folder	23
Copying an entire Memory level from the Organ to the USB Drive	23
Recalling a Registration from USB Memory	23
List of Demo Songs	24
Making Settings in the Menus	25
Storing Your Settings (Customize)	25
Menu List	26
Demo	26
USB Memory	26
Hymn Player	26
Song Recorder	27
Pitch/Tuning	28
Room Type	28
Stop Library	29
Console	30
Pipe Disable	31
Expression Pedal	31
Tremulant	32
Crescendo	32
Audio	32
MIDI	33
Save/Load (USB)	33
Utility	33
About the Keyboards	34
Recording Your Performances	35
Recording a Song	35
Play Back the Recorded Song	35
Saving a Recorded Song	35
Deleting a Recorded Song	36
Playing Back a Saved Song	36
Hymn Player	37
To Enter the Hymn Player	37
Selecting Hymn	37
Playing a Hymn	37
Playing a Prelude	37
Hymn Player Song List by Hymn Tune Names	38
Hymn Player Song List by Common Hymn Titles	40
Saving and Loading Settings on USB Drive	43
Formatting USB Drive	43
Deleting a Memory Level from USB Drive	43
Copying a Memory Level (Bank)	43
Saving and Loading Voice Setup	44
Saving to USB Drive	44
Loading a Voice Setup	44
Deleting a Voice Setup	44
Reset Procedures	45
Returning all Settings to the Factory Default State	45
Backing Up/Loading Data	45
Displaying the Version	45
List of Shortcuts	45
Specifications	46

Notice to Users

Information in this document is subject to change without notice. No part of this manual may be translated into any language, stored in a retrieval system, reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the express written permission of **Rodgers Instruments US LLC**.

RODGERS INSTRUMENTS US LLC

8117 NE Jacobson Street, Building 7, Suite D-200
Hillsboro, Oregon 97124
(503) 648-4181

<http://www.rodgersinstruments.com/>

Rodgers instruments are manufactured and protected under one or more of the following U.S. patents: 4,622,878, 5,060,179, 5,087,798, 5,091,613, 5,225,619, 5,262,581, 5,508,472, 6,369,310, 6,399,868

Copyright ©2020. Rodgers Instruments US LLC. All rights reserved. Created and printed in the United States of America.


Rodgers®, Rodgers Imagine Series™, Rodgers Inspire Series™, Rodgers Infinity Series™, Rodgers Artist Series™, Library Access™, Natural Pipe Realism™, Pipe Dimensional Imaging™, Dimensional Sound Modeling®, Parallel Digital Imaging®, Voice Palette™, PDI™, are trademarks or registered trademarks of Rodgers Instruments US LLC, Hillsboro, Oregon.

Imagine 351 Quick Tour


Imagine 351D



Imagine 351T

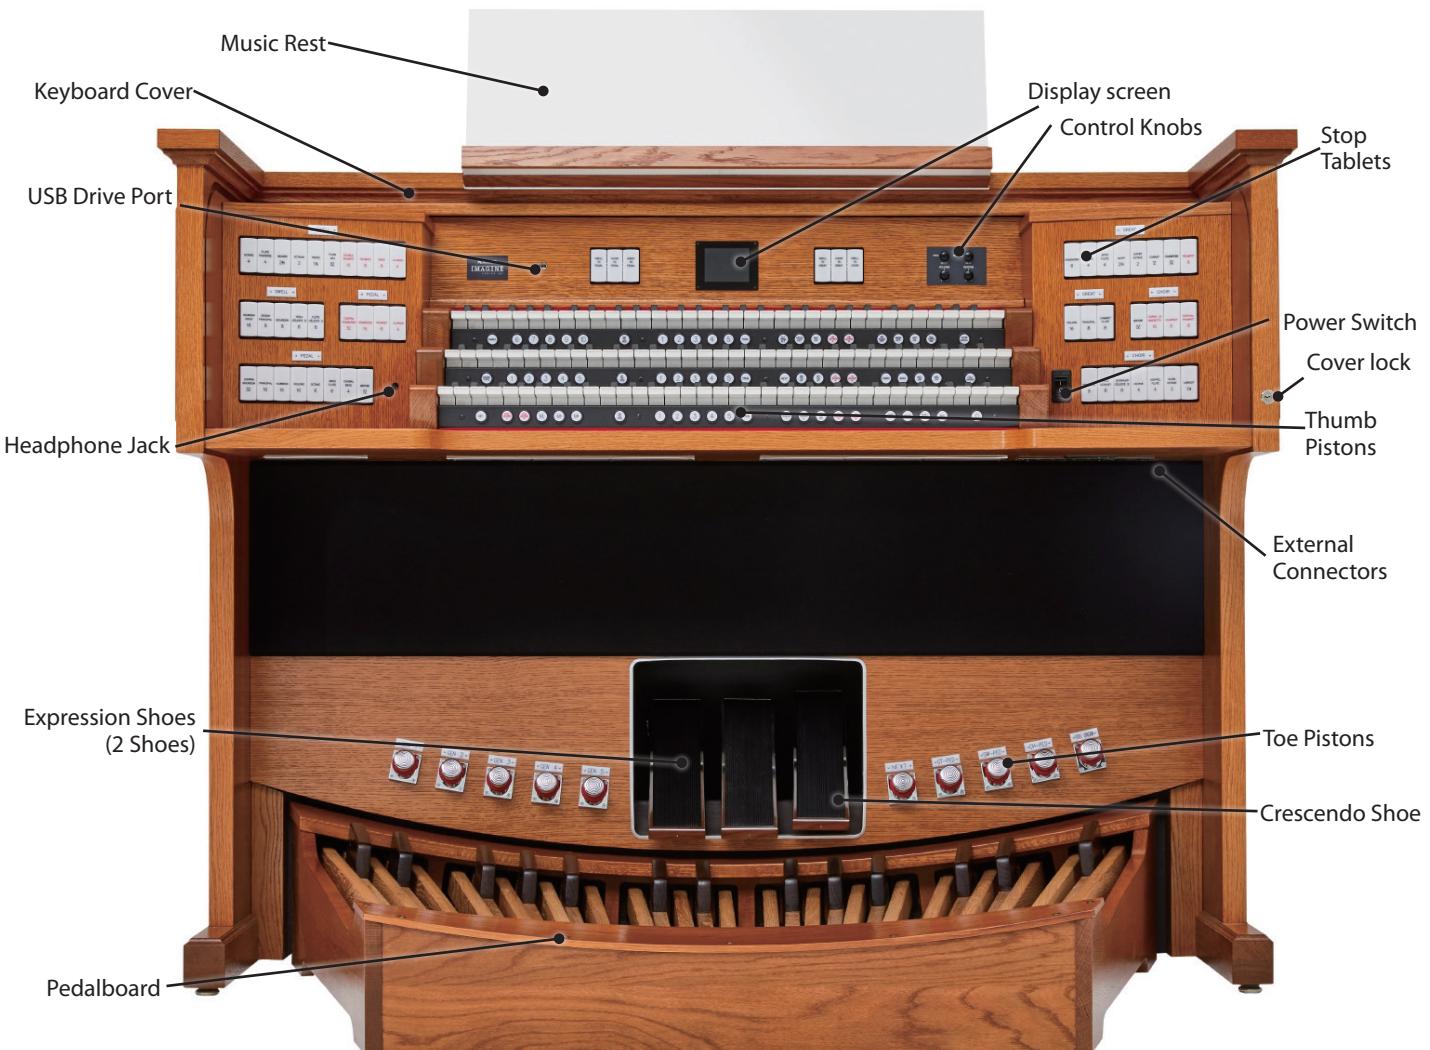

The Display Screen

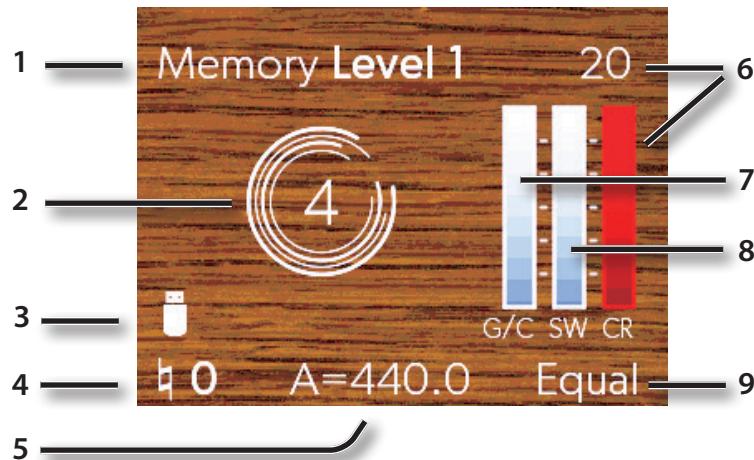

Contents of the Main Screen

1. Memory level number
2. General piston number
3. USB status indicator
4. Keyboard transposition status

Range (semitones)


-6-+5

5. Reference pitch (master tuning)
6. Open/closed status position of the Crescendo shoe.
7. Open/closed status position of the Choir/Great/Pedal expression shoe.
8. Open/closed status position of the Swell expression shoe.
9. Temperament

Available Settings


EQUAL, WERCK., KIRN.2, KIRN.3, VALLO., MEAN.D, MEAN.E, PYTHG., M.BACH

Thumb Pistons

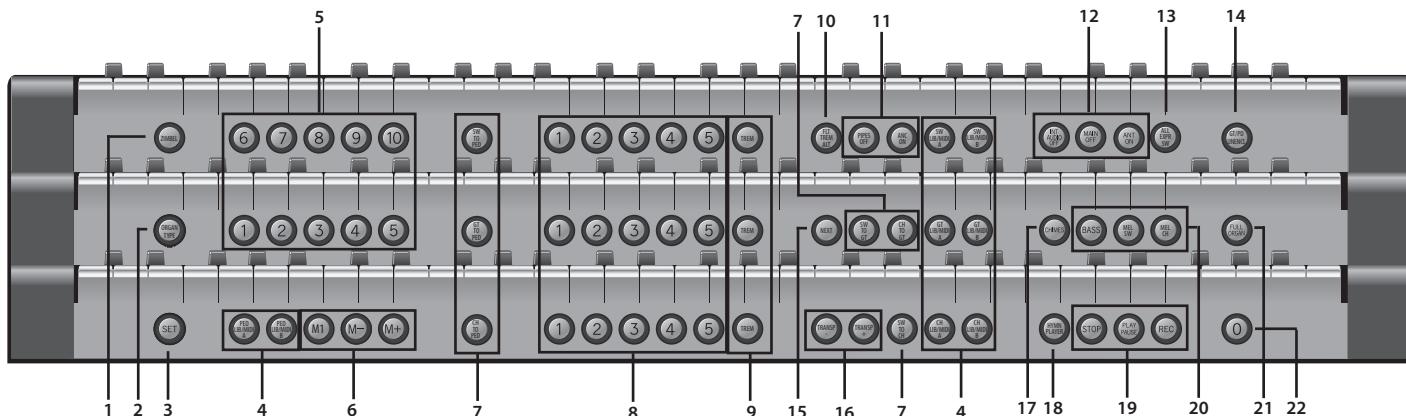

Piston	Explanation
1 ZIMBEL	This piston toggles on/off the Zimbelstern.
2 ORGAN TYPE	This piston allows you to select Organ Type by rotating the SELECT knob.
3 SET	Hold in SET and press a general or divisional piston, then release both, to capture the active stops to that piston.
4 LIB/MIDI A LIB/MIDI B	Each division includes 2 pistons. Turning on any LIB/MIDI piston makes playable an onboard Library voice or a external MIDI channel (if a MIDI sound module is connected). Please refer to page 19 for detailed information.
5 General Pistons 1-10	Each of these pistons can store a combination of sounds (registration) from the entire organ (all divisions).
6 Memory Level M1, M-, M+	Use these pistons when you want to switch memory levels. The organ has a total of 50 memory levels. [M1] piston selects Memory Level 1. Pressing [M-] will decrease Memory Levels. Pressing [M+] will increase Memory Levels.
7 Divisional Couplers	Each of these pistons couple one division to another.
8 Divisional Pistons 1-5	Each of these pistons can store the sounds (registration) for the SWELL, GREAT, or CHOIR divisions.
9 TREM	Tremulant pistons for each division. This adds vibrato (cyclic modulation) to the sound.
10 FLT TREM ALT	This piston engages an alternate tremulant setting for the manual flutes of the organ.
11 PIPES OFF ANC ON	This piston silences wind-blown pipes if they are connected to the organ. This piston plays the digital stops assigned as pipes if pipes are connected to the organ.
12 INT AUDIO OFF	This piston turns off the internal speakers.
12 MAIN OFF	This piston turns off the main organ speakers.
ANT ON	This piston turns on the antiphonal organ speakers.
13 ALL EXPR SW	This piston assigns the expression of all divisions to the Swell expression shoe.
14 GT/PED UNENCL	This piston causes the Great and Pedal divisions to be non-expressive (Unenclosed).
15 NEXT	This piston advances the General pistons.
16 TRANSP - TRANSP +	At each press of these pistons, the pitch of the entire organ is transposed one half-step down or up. Pressing 0 (Cancel) returns the organ's pitch to normal. The LCD screen displays the transposed value ranging from -6 to +5 half-steps.
17 CHIMES	This piston allows you to play the Chimes voice on the Great manual.
18 HYMN PLAYER	This piston accesses the Hymn Player mode.
STOP	This stops playback or recording of a song.
19 PLAY/PAUSE	This starts or pauses playback of a song.
REC	Use this when you want to record your playing.
BASS	This Bass coupler causes the lowest note played on the Great manual to play stops active in the PEDAL division.
20 MEL SW	This Melody Swell coupler causes the highest note played on the Great manual to play stops active in the SWELL division.
MEL CH	This Melody Choir coupler piston causes the highest note played on the Great manual to play stops active in the CHOIR division.
21 FULL ORGAN	This piston engages a full organ registration.
22 [0] General Cancel	This turns off, or cancels, all stops, couplers, and pistons, so that no sounds are selected.


Expression Shoes and Toe Pistons

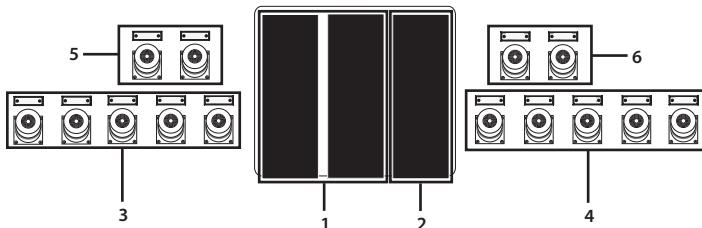

Control		Explanation
1	Expression Shoes	The left shoe controls the expression of the Choir, Great & Pedal. The center shoe controls the expression of the Swell.
2	Crescendo Shoe	This shoe gradually adds a predetermined selection of stops as it is pressed forward.
3	5 x Toe Pistons	General Pistons 1-5.
4	5 x Toe Pistons	Pedal divisional Pistons 1-5.
5	2 x Toe Pistons	Reversible pistons Great to Pedal, Previous (optional).
6	2 x Toe Pistons	Reversible pistons Next, Full Organ (optional).

External Connectors

The external connectors are located under the keyboards, to the right side.

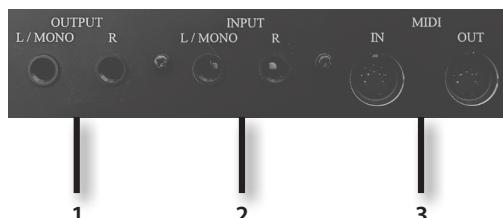

1. OUTPUT L/MONO, R Jacks

You can connect an external amplified speaker system here so that the sound of the organ is played from the connected speakers.


2. (AUX) INPUT L/MONO, R Jacks

You can connect an external sound module or similar device here so that its audio is heard from the organ's speakers.

3. MIDI IN, OUT Connectors

You can connect an external MIDI device here to exchange performance data with the organ.

Control Knobs

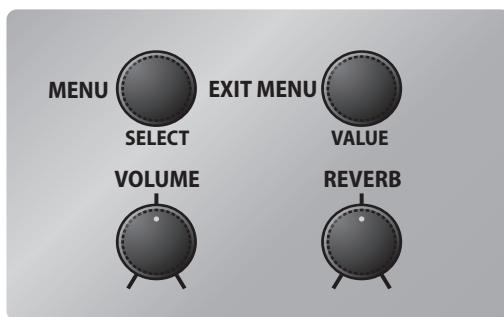

[MENU/SELECT] Knob

Turn: When you're in a menu screen, turn this knob to navigate to the menu item you want to operate.

Press: Enters a menu, or finalizes a setting item.

[EXIT MENU/VALUE] Knob

Turn: Adjusts a setting.

Press: Returns you to the previous menu, or cancels an operation.

[VOLUME] Knob

This adjusts the volume level of the entire organ.

[REVERB] Knob

This adjusts the volume level of reverberation.

Headphones

1. Location of Headphone Port

A 1/4" stereo headphone port is located to the left of the keyboards. (See illustration on page 12 or 13).

NOTE

When a headphone jack is inserted, the organ's speakers are automatically muted.

⚠ To prevent malfunction and equipment failure, always turn off the unit before making any connections.

⚠ Carefully insert the USB drive all the way in until it is firmly in place.

⚠ This unit is equipped with a protection circuit. A brief interval (a few seconds) after turning the unit on is required before it will operate normally.

⚠ If you need to turn off the power completely, first turn off the unit, then unplug the power cord from the power outlet.

Selecting Stops (Sounds)

By pulling the drawknobs or pressing the tablets you can play a variety of pipe organ sounds. The sounds assigned to the drawknobs or stop tablets are called "stops."

The drawknobs or stop tablets are organized into groups called "divisions." If a drawknob or stop tablet is lit, you'll be able to play the corresponding stop.

Selecting a Sound Variation (Voice Palette)

1. Pull a drawknob or press a stop tablet.


The "Voice Palette" screen will appear, showing the variation of the selected stop.

If the indicator blinks momentarily when you press a tablet, a variation is already selected for the stop.

If the "Voice Palette" screen is not shown, return to the main screen (press the [EXIT MENU/VALUE] knob a number of times) and perform the procedure from step 1.

2. Turn the [EXIT MENU/VALUE] knob.

You can choose from five sound variations: VP0 through VP4. Refer to the List of Stops on the next page.

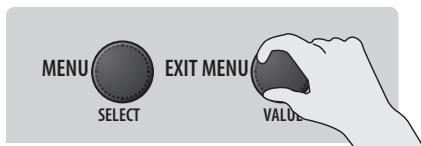

NOTE

Press and hold the general cancel [0] piston for several seconds, the settings will be reset to "Default Voice Palettes."

ORGAN TYPE

The Organ Type thumb piston automatically selects Voice Palette stops which are specific to an organ sound genre.

1. Press the [ORGAN TYPE] piston. It will light up.

2. Turn the [MENU/SELECT] knob to select an Organ Type.

Menu item	Explanation
American Eclectic	(Voice Palette 0 - the engraved stop names.) Transparency and clarity of tone, eclectic specification characteristic of American organ builders
English Cathedral	(Voice Palette 1.) Broad 8' fundamental tone and smooth dark reeds typical of Willis and Harrison & Harrison organs
French Romantic	(Voice Palette 2.) Warm 8' ensemble and bright, fiery reeds characteristic of 19th-century Cavaillé-Coll tonal style
German Baroque	(Voice Palette 3.) Articulate and bright tonal spectrum in the North German style of 17th-century Arp Schnitger organs

3. Turn on any drawknob or stop tablet. The appropriate Voice Palette will be selected.

4. To return to the main screen, press the [ORGAN TYPE] piston again.

NOTE

All Voice Palette variations are always available. For example, you can change a particular stop's onscreen selection to any of the alternate Voice Palette selections.

List of Stops

GREAT Division (Middle Keyboard)

Engraving (VP0) American Eclectic	VP1 English Cathedral	VP2 French Romantic	VP3 German Baroque
Violone 16'	Double Open Diapason 16'	Montre 16'	Prinzipal 16'
Principal 8'	Open Diapason 8'	Montre 8'	Prinzipal 8'
Chimney Flute 8'	Rohrflute 8'	Bourdon 8'	Rohrflöte 8'
Gemshorn 8'	Salicional 8'	Gambe 8'	Quintatön 8'
Octave 4'	Principal 4'	Prestant 4'	Oktave 4'
Spitzflute 4'	Waldflute 4'	Flûte Ouverte 4'	Gemshorn 4'
Quint 2-2/3'	Twelfth 2-2/3'	Quinte 2-2/3'	Nasat 2-2/3'
Super Octave 2'	Fifteenth 2'	Doublette 2'	Super Oktave 2'
Cornet V	Cornet IV	Cornet IV	Kornett V
Fourniture IV	Mixture IV	Grand Fourniture IV	Mixtur VI
Trumpet 8'	Tromba 8'	Trompette 8'	Trompete 8'
Chimes (thumb piston)			
Zimbelstern (thumb piston)			

SWELL Division (Upper Keyboard)

Engraving (VP0) American Eclectic	VP1 English Cathedral	VP2 French Romantic	VP3 German Baroque
Bourdon Doux 16'	Bourdon 16'	Dulciane 16'	Lieblich Gedackt 16'
Geigen Principal 8'	Horn Diapason 8'	Montre 8'	Prinzipal 8'
Bourdon 8'	Stopped Diapason 8'	Traverse Flute 8'	Holzgedackt 8'
Flute Céleste II 8'	Unda Maris II 8'	Flûte Céleste II 8'	Voce Umana 8'
Viola Céleste II 8'	Voile Céleste II 8'	Voix Céleste II 8'	Schwebung II 8'
Octave 4'	Octave Gamba 4'	Prestant 4'	Oktave 4'
Flute Traverse 4'	Flute 4'	Flûte Octaviante 4'	Flöte 4'
Nazard 2-2/3'	Quintflute 2-2/3'	Nasard 2-2/3'	Nasard 2-2/3'
Octavin 2'	Lieblich Piccolo 2'	Flûte à Bec 2'	Waldflöte 2'
Tierce 1-3/5'	Seventeenth 1-3/5'	Tierce 1-3/5'	Quinte 1-1/3'
Plein Jeu IV	Mixture III	Fourniture III	Scharff IV
Double Trumpet 16'	Contra Trumpet 16'	Bombarde 16'	Posaune 16'
Trumpet 8'	Trumpet 8'	Trompette 8'	Trompete 8'
Oboe 8'	Cornopean 8'	Hautbois 8'	Dulzian 8'
Clarion 4'	Clairon 4'	Petite Clairon 4'	Rohr Schalmei 4'

CHOIR Division (Lower Keyboard)

Engraving (VP0) American Eclectic	VP1 English Cathedral	VP2 French Romantic	VP3 German Baroque
Principal 8'	Diapason 8'	Montre 8'	Spitz Prinzipal 8'
Holzgedackt 8'	Gedackt 8'	Bourdon 8'	Singendgedeckt 8'
Erzähler Céleste II 8'	Muted Violins II 8'	Dulcett Céleste II 8'	Unda Maris II 8'
Octave 4'	Principal 4'	Prestant 4'	Oktave 4'
Koppelflute 4'	Orchestral Flute 4'	Nachthorn 4'	Blockflöte 4'
Kelin Octave 2'	Super Octave 2'	Italian Principal 2'	Oktave 2'
Larigot 1-1/3'	Nineteenth 1-1/3'	Quinte 1-1/3'	Oktave 1'
Mixture IV	Plein Jeu IV	Cymbale IV	Zimbel IV
Corno di Bassetto 16'	Basson 16'	Hautbois 16'	Dulzian 16'
Clarinet 8'	English Horn 8'	Bombarde 8'	Krummhorn 8'
Festival Trumpet 8'	Royal Tuba 8'	Tromba del Guibileo 8'	Trompette en Chamade 8'

PEDAL Division (Pedalboard)

Engraving (VP0) American Eclectic	VP1 English Cathedral	VP2 French Romantic	VP3 German Baroque
Contra Bourdon 32'	Open Wood 32'	Contra Violon 32'	Untersatz 32'
Principal 16'	Open Diapason 16'	Principal 16'	Prinzipalbass 16'
Subbass 16'	Bourdon 16'	Soubasse 16'	Bordun 16'
Violone 16'	Lieblich Bourdon 16'	Contre Basse 16'	Grossgamba 16'
Octave 8'	Diapason 8'	Prestant 8'	Oktave 8'
Bass Flute 8'	Flute 8'	Bourdon 8'	Gedackt Bass 8'
Choral Bass 4'	Fifteenth 4'	Prestant 4'	Oktave 4'
Mixture IV	Mixture III	Plein Jeu III	Hintersatz III'
Contra Bombarde 32'	Double Waldhorn 32'	Contre Hautbois 32'	Bombarde 32'
Bombarde 16'	Trombone 16'	Bombarde 16'	Posaune 16'
Trumpet 8'	Tromba 8'	Trompette 8'	Trompete 8'
Clarion 4'	Hautbois 4'	Clairon Harmonique 4'	Rohr Schalmei 4'

Library/MIDI A and Library/MIDI B Thumb Pistons

Sounds for user settings can be assigned to the [LIBRARY/MIDI] A or B thumb pistons (couplers) and played together with the organ sounds of each division. The sounds that are available as user settings consist of the "Organ Stop Library" and the "Orchestral Instrument Library." The two libraries differ as follows in the way that reverb and tremulant will operate.

Organ Stop Library

- The tremulant effect will be applied for each division. If the expression pedal is enabled, the expression pedal will affect the selections of the Organ Stop Library along with the organ's regular stops.
- The velocity settings are ignored for organ stops.

Orchestral Instrument Library

- The tremulant effect will not be applied.
- The velocity settings range from keyboard velocity to a fixed setting from 2-127.

Organ Stop Library

1. Principal 32'*	19. Oktav 4'	37. Harmonics V	55. Vox Humana 8'	200. 16+8 Voxes II
2. Contra Violone 32'*	20. Principal 4'	38. Tierce Fourniture VI	56. Vox Humaine 8'	201. 16+4 Voxes II
3. Contra Bourdon 32'*	21. Rohrflöte 4'	39. Grand Mixtur IV-VIII	57. Tuba Mirabilis 8'	202. Tibia 8'
4. Diapante Grave 21-2/3'*	22. Orchestral Flute 4'	40. Klein Mixture III	58. State Trumpet 8'	203. Tibia 4'
5. Lieblich Gedackt 16'	23. Unda Maris II 4'	41. Double Ophicleide 32'*	59. Chamades 8'	204. Viols d'Orch 8'II
6. Dulciana 16'	24. Gross Tierce 3-1/5'	42. Contre Bombarde 32'*	60. Trumpet de Fete 8'	205. Viols d'Orch 8'II Trem
7. Open Wood 16'	25. Violetta in Quinta 2-2/3'	43. Contra Fagott 16'	61. Clarion 4'	206. Tuba 8'Trem
8. Spitzflute 16'	26. Nazard 2-2/3'	44. Pontifical Trumpet 16'	62. Second Clairon 4'	207. Cornopean 8'Trem
9. Quint 10-2/3'	27. Salicional 2'	45. Rankett 16'	63. Schalmei 4'	208. Tibia 16+8+Vox 16+8
10. English Diapason 8'	28. Piccolo 2'	46. Trompet 8'	64. 16+4 Flute Célestes IV	209. Tibia 16842+Strings
11. Italian Principal 8'	29. Tierce 1-3/5'	47. Second Trompette 8'	65. 16+4 Célestes IV	210. Tib 84+Q+Vx+Cel
12. Gemshorn 8'	30. Larigot 1-1/3'	48. French Horn 8'	66. 16+8+4 Célestes VI	211. Vox 16+8+Célestes
13. Gamba 8'	31. Septième 1-1/7'	49. Hautbois 8'	67. 16+8+4 Célestes + Vox	212. Tib 84+VDO Cel
14. Gamba Céleste II 8'	32. Sifflöte 1'	50. Rohr Schalmei 8'	68. Barker Noise	213. Tib 84+Vox+Cel
15. Aeoline 8'	33. Jeu de Clochette II	51. Dulzian 8'		214. Tib 84+Cel+Tuba
16. Flute Harmonique 8'	34. Grave Cornet V	52. Cromorne 8'		215. Tibia 4 + Cel 8
17. Gross Flute 8'	35. Tertian II	53. Oboe 8'		216. Tib 42+Str168
18. Quint 5-1/3'	36. Pedal Grand Mixtur VI *	54. Regal 8'		217. Tibia 4 + Kinura
				218. Str8+Tib2+Glock
				219. Tibia 4 + Glock

*These stops have a limited range of 34 notes (C1-A34)

Library/MIDI A and Library/MIDI B Thumb Pistons

Orchestral Library

- | | |
|-----------------------------|---|
| 300. Grand Piano (S) | 319. Orchestral Trumpet (L) |
| 301. Electric Piano (S) | 320. Trombone |
| 302. Harpsichord 8 (NVS) | 321. Bright Brass |
| 303. Harpsichord 4 (NVS) | 322. Brass Ensemble |
| 304. Harpsichord Lute (NVS) | 323. French Horn |
| 305. Harpsichord 8+4 (NVS) | 324. Tuba (<i>Limited note range from C1 to F54</i>) |
| 306. Celesta (S) | 325. Orchestral Flute (L) |
| 307. Xylophone (L) | 326. Bagpipes (<i>Drone notes C1-F18. Limited note range from C25 to C49</i>) |
| 308. Orchestral Harp (S) | 327. Pan Pipes (L) |
| 309. Drawbars 1(NVS) (KS) | 328. Orchestral Oboe (L) |
| 310. Drawbars 2 (NVS) (KS) | 329. Orchestral Clarinet |
| 311. Guitar | 330. Bandoneon |
| 312. Acoustic Bass | 331. Choir Aahs (S) |
| 313. String Ensemble (S) | 332. Choir Oohs (S) |
| 314. Orchestra (S) | 333. Organ Chimes |
| 315. Slow Strings (S) | 334. Tubular Bells |
| 316. Octave Strings (S) | 335. Handbells |
| 317. Violin (S) (L) | 336. Timpani (<i>Limited range C1-A#47</i>) |
| 318. Saxophone | |

(S) designates this orchestral voice will sustain. Refer to "Sustaining an Orchestral Voice" below.

(NVS) designates this voice is not velocity-sensitive; it is set to a fixed velocity.

(KS) The kick-switch can activate or deactivate the tremulant rotor effect for Drawbars 1 and 2 voices if the kick-switch is configured as GOSP ROTOR. Refer to the Owner's Manual for more information.

(L) This orchestral voice has a limited note range from C13 to C61.

- When the orchestral instrument is displayed onscreen, the selection can be changed by rotating the EXIT MENU/VALUE knob.
- When the orchestral instrument is displayed onscreen, you may rotate the MENU/SELECT knob to navigate to adjustable parameters. Rotate the EXIT MENU/VALUE knob to change the parameter's value: Source/MIDI CH, Name, Level, Octave, Velocity.
- If the Velocity value is set to KBD, the orchestral voice responds to your touch on the velocity-sensitive keyboard.
- LIBRARY/MIDI A and B selections and parameter settings can be saved to a piston for immediate recall.
- Orchestral selections do not respond to the organ's Tremulant control.
- The orchestral selection responds to the same expression as organ stops of that division.
- The orchestral selection responds to couplers.
- LIBRARY/MIDI A and B selections can be played together with organ stops.

Sustaining an Orchestral Voice

The Orchestral voices listed above with (S) are sustainable. By default, pressing pedal key F#19 acts as a sustain pedal for those voices. You may rest your heel on pedal key F18 and press your toe on F#19 to activate the sustain function (like you would for an acoustic piano). When any Library/MIDI A or B piston is turned on and set to a sustainable voice, pedal notes F18 to G32 are silent.

Pedal F# Sustain function can be disabled in menu 8 "Console" (refer to page 30 for more information). When the F# function is set to NONE, all 32 pedal notes will play normally. The kick-switch and/or a toe piston can also be configured as sustain without muting pedal notes F18-G32.

MIDI Channel

Please refer to pages 29-30 for more information.

Storing a Combination of Stops

About the General Pistons

The General pistons store a combination of sounds for the entire organ. General pistons (1 through 10) can store any stop, LIB/MIDI A or B piston, coupler, and tremulant. The stored settings are maintained even when the power is turned off.

Registrations are a convenient way to store favorite combinations of sounds, or to switch between combinations of sounds while you perform.

About the Divisional Pistons

The Imagine 351 has 5 Divisional thumb pistons for the Swell, Great, and Choir, and 5 Divisional toe pistons for the Pedal. While the General pistons store a combination of sounds for the entire organ, the Divisional pistons store only the combination of sounds for each division.

Storing or Recalling a Registration (Combination of Stops)

Storing a Registration

1. Turn on the stops to select the combination of sounds you want to store.
2. While holding the [SET] piston, press one of the general pistons or divisional pistons.
 - If you press a general piston, the state of the stops for all divisions, the couplers, and the tremulant will be stored.
 - If you press a divisional piston, the state of the stops and the tremulant for the division will be stored to that piston.

Recalling a Registration

1. Press one of the general pistons or divisional pistons.

Resetting the Sound Settings (General Cancel)

1. Press the general cancel [0] piston.


The illumination for all stops and pistons will turn off.

If you want to quickly reset all the stop Voice Palettes to default

Press and hold the general cancel [0] piston for several seconds; the settings will be reset to a state in which no sound is selected, and the Voice Palette settings will also be reset for all tablets, restoring the default Voice Palette selections.

Using Memory Levels

The state of the general pistons and the divisional pistons can be stored as a “memory level.”

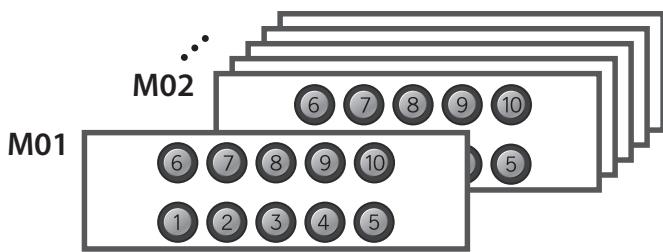

Selecting a Memory Level

1. Use the memory level [M-]/[M+] pistons to select the memory level number to be used for stop registrations. The Imagine 351 organ has 50 memory levels in the organ’s internal memory.
2. Pistons may be set differently on each memory level.

Recalling a Registration from a Different Memory Level

1. From the main screen, use the memory level select [M-]/[M+] pistons to select the number of the memory level that you want to recall.

MEMO

If you hold down the memory level select [M-]/[M+] piston, the memory level number will continue changing consecutively.

NOTE

Simply pressing a memory level select [M-]/[M+] piston will not recall a registration.

2. Press one of the general pistons or divisional pistons.

NEXT: Recalling Registrations Successively

NOTE

This applies if the organ has a [NEXT] toe piston and/or if the Kick Switch is configured as [NEXT].

By pressing the [NEXT] toe piston (or the Kick Switch if it is configured as [NEXT]), you can progressively recall registrations that are stored in general pistons.

For example, if you will be performing a recital, you can store your registrations in the order in which you will be using them, and then smoothly switch to the next registration while you perform. If the top-numbered General Piston is active, engaging [NEXT] will advance to General Piston 1 of the successive memory level.

Using a USB Drive to Store and Recall Stop Combinations

When a USB drive is inserted, piston registration data is written to and recalled from the USB drive.

This is a secure method to personalize and back up your own registrations. If multiple organists play this organ, each organist should have their own USB drive to assure utilization of their own piston registrations.

Any USB memory drive should be compatible with the organ. A small-capacity USB drive, for example, 128k to 2 GB, is more than adequate to store the organ's data files.

Preparing a USB Drive

1. For preparing the USB Drive, refer to "Formatting USB Drive" (p. 43).

Selecting a USB Memory Folder

In order to organize piston registration data and memory levels, Rodgers uses the concept of USB memory folders. Folders on a USB device are labeled A through Z. Like a file folder, a memory folder is used to store groups of information on the USB device. Each of the 26 folders can contain up to 50 memory levels.

This means that a single USB device can contain up to 26 different configurations of all Memory Levels.

1. Connect your USB drive to the USB drive port.
2. From the main screen, press the [MENU/SELECT] knob.
3. Turn the [MENU/SELECT] knob to select "USB Memory."
4. Press the [MENU/SELECT] knob to access the "USB Memory."
5. Turn the [EXIT MENU/VALUE] knob to select a USB Memory folder A-Z.

Copying an entire Memory Level from the Organ to the USB Drive

1. Select an unpopulated folder in the USB Drive.
2. Use the memory level select [M-]/[M+] pistons to select the memory level number to be used for storage.
3. Press a general piston or divisional piston.
4. Hold the [SET] piston and press the same general or division piston again. The entire memory level will be copied to USB memory in that folder.

NOTE

If the selected Memory Level was previously populated on the USB Drive, this operation will only save the registration of the piston pressed, not the entire Memory Level.

Recalling a Registration from USB Memory

1. From the main screen, use the memory bank select [M-]/[M+] pistons to select the number of the memory bank that you want to recall.

MEMO

⚠ If you hold down the memory level select [M-]/[M+] piston, the memory level number will continue changing consecutively.

NOTE

⚠ Simply pressing a memory level select [M-]/[M+] piston will not recall a registration.

2. Press one of the general pistons or divisional pistons.

List of Demo Songs


- All rights reserved. Unauthorized use of this material for purposes other than private, personal enjoyment is a violation of applicable laws.
- No data for the music is sent to the MIDI OUT port.

Sound Tour				
Song Title		Display	Composer	Memo
Principals	---	Principals	Welsh Folk Melody	
Flutes	---	Flutes	Welsh Folk Melody	
Strings	---	Strings	Welsh Folk Melody	
Reeds	---	Reeds	Welsh Folk Melody	
Full Organ	---	Full Organ	Welsh Folk Melody	
Bach Chorales (Bach Chorale): Various chorales composed by J.S. Bach				
Song Title		Display	Composer	Memo
Chorale "Jesus, bleibet meine Freude"	BWV 147	Bach BWV147	J.S. Bach	
Chorale "Liebster Jesu, wir sind hier"	BWV 731	Bach BWV731	J.S. Bach	Famous melody with impressive sound
Chorale "Nun Komm' der Heiden Heiland"	BWV 599	Bach BWV599	J.S. Bach	Beautiful positiv organ sound
Chorale "Gott, durch dein Güte"	BWV 600	Bach BWV600	J.S. Bach	"Trompete" reed melody by pedals
Chorale "Herr Gott, nun schleuss den Himmel auf"	BWV 617	Bach BWV617	J.S. Bach	Reed sound with soft tremulant
Chorale "Chris Lag in Todesbanden"	BWV 625	Bach BWV625	J.S. Bach	Principal chorus sound
Chorale "Wo soll ich fliehen hin"	BWV 646	Bach BWV646	J.S. Bach	4' reed melody by pedals
Baroque Organ Works (Baroque): Various organ tunes with Baroque sound				
Song Title		Display	Composer	Memo
Toccata and Fugue in D Minor	BWV 565	T&F BWV565	J.S. Bach	
Prelude and Fugue No.4 in F Major	BWV 556	PreFugueB556	J.S. Bach	
Concerto "The Cuckoo and the Nightingale"	HWV 295	ConcertoH295	G.F. Haendel	Various stops simulating the birds
Prelude in Eb Major	BWV 552	Prelude B552	J.S. Bach	Rich pipe sound with full organ
Noel Etranger No. 8	---	NoelEtranger	L.C. d'Acquin	French Carol
Trumpet Voluntary I in D Major	---	Trumpet Vol.	W. Boyce	Trumpet reed sound without pedals
Fugue in G Minor	BWV 578	Fugue B578	J.S. Bach	Simple stop for famous fugue by Bach
Romantic Organ Works (Romantic): Various organ tunes with Romantic sound				
Song Title		Display	Composer	Memo
from "Prelude, Fugue and Variation"	Op.18	PreludeFranc	C. Franck	
Toccata from "Suite Gothique"	Op.25	Toccata	L. Böellman	
Sonata No.2	Op. 65-2	Sonata No.2	F. Mendelssohn	Symphonic organ sound
Andantino	---	Andantino	C. Franck	Simple but beautiful tune
Trumpet Voluntary	---	Tp Voluntary	H. Purcell & J. Clarke	With orchestral trumpet
Trumpet Tune and Air	---	Tp Tune&Air	H. Purcell	With orchestral trumpet
European Organ Tour (European Org): A tour to visit small churches in Europe and their beautiful organs.				
Song Title		Display	Composer	Memo
Netherlands: "Malle Sijmen"	---	Netherlands	J.P. Sweelinck	
Germany: Chorale "Werde munter, mein Gemuet"	---	Germany	J. Pachelbel	Chorale with positiv sound
France: "Dialogue Sur la grand clavier et la positif"	---	France	F. Couperin	Trumpet reed with French positiv sound
Italy: "Toccata per l'élevatione"	---	Italy	G. Frescobaldi	Positiv stop with tremulant without pedals
Belgium: from "Psalm 24"	---	Belgium	A.V. Noordt	Simple stop with pedals
Spain: "Tiento de 1 tono de mano derecha"	---	Spain	P. Bruna	Without pedals
England: "Upon la mi re"	---	England	Unknown	Without pedals
Germany: "Passacaglia"	BWV 582	Bach BWV582	J.S. Bach	Finally back to Germany for Bach Organ
Ceremony Organ Works (Ceremony): Selected organ works for wedding ceremonies				
Song Title		Display	Composer	Memo
Ave Verum Corpus in D Major	KV 618	AveVermKV618	W.A. Mozart	
"Largo" from Opera "Xerxes"	---	Largo	G.F. Haendel	Celeste choruses mp-f
"Rigaudon" from "Idomeneus"	---	Rigaudon	A. Campra	Rich pipe sound, alternating organ and harpsichord, full organ
"Salut d'Amour"	---	Salut d'Amor	E. Elgar	With orchestral oboe
"Wedding March" from "Midsummer Night's Dream"	---	MendelWeddin	F. Mendelssohn	Famous tune for wedding ceremonies
"Bridal Chorus" from "Lohengrin: Act III"	---	WagnerWeddin	R. Wagner	Originally a choir with orchestra


Making Settings in the Menus

This is an explanation of how to enter the menus and to make settings in the menus. Perform these steps from the main screen. For a list of the menu items, refer to the next page.


1. Press the [MENU/SELECT] knob to access the menu.

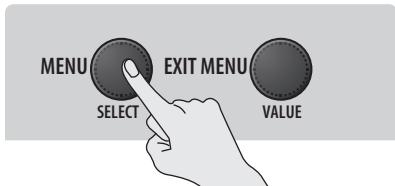


2. Turn the [MENU/SELECT] knob to select the item.

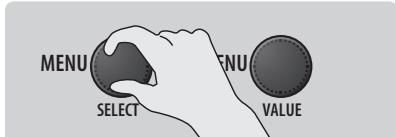

3. Press the [MENU/SELECT] knob to enter the item.

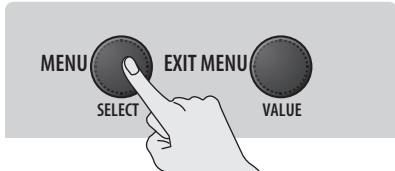


4. Turn the [EXIT MENU/VALUE] knob to change the item's setting.

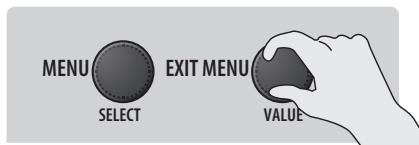


To cancel the setting or to return to the previous menu:

Press the [EXIT MENU/VALUE] knob.

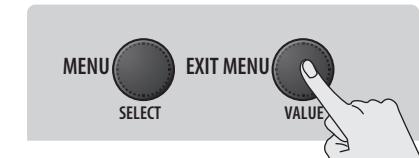

5. If a Yes/No confirmation screen appears, press the [SET] piston to put the setting into effect.

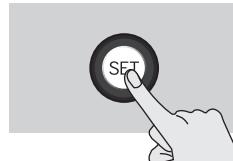

Storing Your Settings (Customize)

The following settings will return to their default state when you switch off the organ's power, but you can use the procedure described below to store these settings.

Setting	Group
Default Voice Palettes (*)	DEFAULT STOPS
MIDI/LIB A / B settings	DEFAULT STOPS
"Room Type" screen settings	SYSTEM
"Console" screen settings	
"Exp. Pedal" screen settings	
"Audio" screen settings	
"MIDI" screen settings	
Hymnbook	

* What is the Default Voice Palette?

The "Default Voice Palettes" specifies which variation sound will be heard when you turn on a specific stop.

If you specify the Voice Palette that you frequently use, you'll be able to play that Voice Palette simply by selecting the tablet without needing to select the specific Voice Palette option.

1. Hold down the [SET] piston and press the [0] piston.

Confirmation screen will appear.

2. Turn the [EXIT MENU/VALUE] knob to choose the group.

- If you choose "DEFAULT STOPS," the DEFAULT STOPS group settings will be saved.
- If you choose "SYSTEM," the SYSTEM group settings will be saved.

3. Press the [SET] piston to save the settings.

If you decide to cancel, press the [EXIT MENU/VALUE] knob.

NOTE

⚠ Never turn off the power before the storage has been completed. (Wait until the "Executing" indication is no longer shown.)

Menu List

Refer to the previous page for instructions how to enter and navigate menus.

The settings shown below will revert to their default values when the organ's power is turned off; however, with a number of the settings, you can save the changed value to the organ's internal memory (overriding the default value) even after the power is turned off.

Setting items marked with [S]	Can be stored in the SYSTEM group.	Refer to "Storing Your Settings (Customize)" (p. 25).
Setting items marked with [P]	Settings can be stored on an individual piston basis.	Refer to "Storing or Recalling a Registration" (p. 21).

1. Demo

Listen to demo songs. Please refer to page 24 for the list of Demo Songs.

⚠ All rights reserved. Unauthorized use of this material for purposes other than private, personal enjoyment is a violation of applicable laws.

⚠ No data for the music that is played will be output from MIDI OUT connector.

Menu item	Value
Group	Demo song group
Song	Demo song
Tempo	Tempo of the demo song

2. USB Memory

Insert a USB drive into the USB port. After insertion, wait approximately 5 seconds for the USB to engage. When a USB drive is inserted, piston registrations will save to the USB drive and piston registrations are recalled from the USB drive data. However, if a memory level and piston registrations have not been saved to the USB drive, then the organ's internal memory will recall piston registrations.

Menu item	Value	Explanation
Folder	A-Z	Select a USB Memory folder. Each folder can contain up to 50 memory levels of registration data.
Memory Bank	* files	* the number of memory levels stored to the folder will appear here.

3. Hymn Player

Play back Hymn and Prelude. A short-cut to this menu is to press the HYMN PLAYER thumb piston.

Menu item	Value	Explanation
Mode	-	Select Hymn or Prelude
Hymn number and Hymntune name	-	Select Hymn number by rotating the VALUE knob which will scroll through the Hymn Tunes alphabetically. For organs with 10 General pistons, a short-cut is to hold in the HYMN PLAYER thumb piston, and while you're holding it, press the numbered General pistons for the appropriate Hymn Tune selection; then release the HYMN PLAYER thumb piston. General 10 serves as the digit 0 (zero).
Next	Intro, Verse	Select to play introduction or verse
Play Mode [S] (Prelude Mode only)	VAR.	Prelude begins at a random selection and plays continuously
	FIXED	Prelude begins at a predetermined selection and plays continuously
Tempo	20 - 240	Tempo of the Hymn
Volume	0% – 100%	Volume of the Hymn
Transpose	-6 – +5	Change the key of the song in semitone steps
Book	Rodgers	Common hymntunes from various denominational hymnals

4. Song Recorder

Recording, playing back a song, saving, deleting, and copying song data

Menu item	Value	Explanation
Source	--	Temporary memory; the song will be lost when the organ is powered off.
	USB	Play back song data from USB drive. Refer to "Playing Back a Saved Song" (p. 36).
Song	Name of the song	
Tempo	20–200	Tempo of the song
Measure	Measure of the song	
Playback Transpose	-6 – +5	The transpose function lets you shift the pitch in semitone steps.
Play Mode	OFF	Play back only the selected song.
	CHAIN	Consecutively play back all the songs on the selected media.
Metronome Volume	OFF, 0% - 100%	Volume of the metronome. Turn this "OFF" if you don't want the metronome to sound.
Beat	Beat of the song or metronome. The range within which the tempo can be set will vary depending on the setting for Beat.	
	Beat	Tempo range
	2/2	20–200
	0/4, 2/4, 3/4, 4/4, 5/4, 6/4, 7/4	20–200
	3/8	20–200
	6/8, 9/8, 12/8	20–200
[Save Song]	Refer to "Saving a Recorded Song" (p. 35).	
[Delete Song]	Refer to "Deleting a Recorded Song" (p. 36).	

Making Settings in the Menus

5. Pitch/Tuning

Settings for pitch, Temperament, Tuning, and Transpose

Menu item	Value	Explanation
Pitch	VERSAILLES	The reference pitch can be changed from "A=440.0 Hz" to "A=415.0 Hz" (Baroque pitch) or "A=392.0 Hz" (Versailles pitch).
	BAROQUE	392 (Hz)
	MODERN	415 (Hz)
	VENETIAN	440 (Hz)
	466 (Hz)	
Temperament	EQUAL (Equal temperament)	Historical styles of music such as baroque can be played in the tunings that were used during that time.
	WERCK. (Werckmeister)	This temperament divides the octave into twelve equal intervals. Modulating to a different key will not affect the sonority of the chords.
	KIRN.2 (Kirnberger 2)	This temperament combines the meantone temperament and the Pythagorean temperament. It allows playing in all keys.
	KIRN.3 (Kirnberger 3)	This is an improvement of meantone temperament and just intonation to allow greater freedom of modulation. It allows playing in all keys.
	VALLO. (Vallotti)	This is a variation of Kirnberger 2.
	MEAN.D (Meantone temperament)	This is a relatively recent temperament. It is close to equal temperament but has a certain amount of just intonation, making it easier to stay in tune with other instruments, and is thus frequently used for ensembles.
	MEAN.E (Meantone temperament)	This temperament is a partial compromise from just intonation in order to allow a certain degree of modulation. Preference is given to the sonority in D#.
	PYTHG. (Pythagorean tuning)	This temperament is a partial compromise from just intonation in order to allow a certain degree of modulation. Preference is given to the sonority in Eb.
	M.BACH (Modern Bach)	This is a system of tuning attributed to the philosopher Pythagoras, in which the fourth and fifth are pure. Chords including the third will not sound smooth, but the melody will sound good.
		This is one of the recently researched temperaments from the era of Bach. It allows playing in all keys.
Transpose	-6→+5	The transpose function lets you shift the pitch in semitone steps without changing the keys you play on the keyboard.
MEMO <i>A Shortcut: Use the TRANSP- and TRANSP+ pistons.</i>		
Tuning	± 50 cents	You can adjust this in a range of ± 50 cents centered on the selected pitch (A=427.5-452.9).

6. Room Type

Reverb settings. The "Reverb" knob increases or decreases the volume of the Reverb.

Menu item	Value	Explanation
Room Type [S]	By changing the type of reverberation you can experience the sensation of performing in a variety of locations.	
	Tittle Chapel, Evanston, Illinois	2.0 seconds
	Mt. Vernon Place Church, Washington, D.C.	2.5 seconds
	Park Church, Grand Rapids, Michigan	3.0 seconds
	Brown Memorial Church, Baltimore, Maryland	3.5 seconds
	St. Dunstan's Church, McLean, Virginia	4.0 seconds
	Mechanics Hall, Worcester, Massachusetts	5.0 seconds
	Cathedral of the Incarnation, Baltimore, Maryland	5.5 seconds
	St. Matthew's Church, Hillsboro, Oregon	6.0 seconds
	St. Michael Church, Wheaton, Illinois	6.5 seconds
	Eglise Saint-Eloi, Dunkerque, France	7.5 seconds
	Kathedrale Sankt Trinitatis, Dresden, Germany	9.0 seconds
	St. Mary of the Angels Church, Chicago, Illinois	10.0 seconds

7. Stop Library

- Selecting sounds available on the LIBRARY/MIDI A and LIBRARY/MIDI B pistons
- MIDI coupler settings if an external sound module is connected to the organ
- Adjusting sounds

Menu item	Value	
Division	PD A, PD B, GT A, GT B, SW A, SW B, CH A, CH B	
Menu item	Value	Explanation
Library/MIDI CH [P]	LIB CH1–16	Orchestral voices resident in the organ's Stop Library MIDI transmit channel

If LIB = LIBRARY

Menu item	Value	Explanation
Name [P]	Name of Library selection.	Refer to pages 19-20 for the list of Library selections. <i>This setting can be saved independently per piston.</i>
Level [P]	-24dB – +12dB	<i>This setting can be saved independently per piston.</i>
Octave [P]	-2 – NORMAL, +2	<i>This setting can be saved independently per piston.</i>
appears for Library no. 300-336: Attack/Brightness [P]	0% - 100%	<i>This menu item appears only for Orchestral selections no. 300-336. This setting can be saved independently per piston.</i>
appears for Library no. 300-336: Velocity [P]	KBD	The keyboard's velocity will be used. <i>This setting can be saved independently per piston.</i>
	EXP	The expression pedal's position will be used as velocity. <i>This setting can be saved independently per piston.</i>
	2 –127	The specified value will be used as a fixed velocity. <i>This setting can be saved independently per piston.</i>
Coarse Tune [P]	-12 – +12	Adjust the coarse tuning by half-steps. <i>This setting can be saved independently per piston.</i>
Fine Tune [P]	-50 – +50 cts	Adjust the fine tuning by cents. <i>This setting can be saved independently per piston.</i>
appears for Library no. 100-219: [Voice Equalization] [P]	Press the MENU/VALUE knob for these values:	<i>This menu item appears only for Organ stops no. 100-219. These settings affect an <u>Library organ stop</u> for all pistons.</i>
	Bass	-10 dB to +10 dB
	Treble	-10 dB to +10 dB

If LIB = CH1–16

Menu item	Value	Explanation
PC Number [P]	OFF, 001–128	Program change number
Bank MSB [P]	OFF, 000–127	Bank select MSB
Bank LSB [P]	OFF, 000–127	Bank select LSB
Level [P]	-24dB – +12dB	Specifies the volume of the MIDI selection.
Octave [P]	-2 – NORMAL, +2	Specifies the octave of the MIDI selection.
Velocity [P]	KBD	The keyboard's velocity will be used.
	EXP	The expression pedal's position will be used as velocity.
	2 –127	The specified value will be used as a fixed velocity.
Expression [P]	OFF, ON	Specifies whether the expression shoe will express the MIDI selection.

About MIDI transmit channels

When the [LIB/MIDI] piston is on

To avoid a conflict between the MIDI transmit channels of the various [LIB/MIDI] pistons, the MIDI transmit channels are fixed as follows.

Division (keyboard)	Piston name	MIDI transmit channel
SWELL	SW LIB/MIDI A	CH2 (fixed)
	SW LIB/MIDI B	CH6 (fixed)
GREAT	GT LIB/MIDI A	CH1–CH16
	GT LIB/MIDI B	CH5 (fixed)
CHOIR	CH LIB/MIDI A	CH4 (fixed)
	CH LIB/MIDI B	CH8 (fixed)
PEDAL	PD LIB/MIDI A	CH3 (fixed)
	PD LIB/MIDI B	CH7 (fixed)

When the [LIB/MIDI] piston is off



Even when the [LIB/MIDI] piston is off, the performance data from each division is transmitted on the following MIDI channels.

As appropriate, you'll need to change the MIDI reception settings on the MIDI device that's connected.

Division (keyboard)	MIDI transmit channel
SWELL	CH13 (fixed)
GREAT	CH12 (fixed)
CHOIR	CH15 (fixed)
PEDAL	CH14 (fixed)

When using an [LIB/MIDI] piston to control an external MIDI sound module, we recommend that you set your external MIDI device to not receive messages on channels 12–15.

8. Console

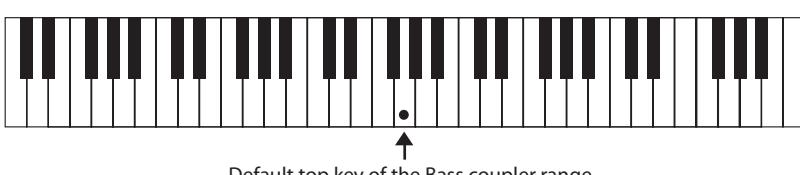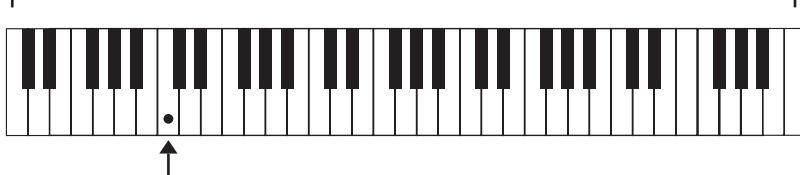Menu item	Value	Explanation
Bass Split [S]		You can change the range of the Bass coupler. This couples the Pedal registration to the lowest note played on the Great within the range. Bass coupler maximum range (notes 1–32) 
Mel Split Swell [S] Mel Split Choir [S]		You can change the range of the Melody coupler. This couples the Swell registration to the highest note played on the Great within the range. Melody coupler maximum range (notes 1–61) 
Blind [S]	BLIND VISIBLE	When the [FULL ORGAN] piston is pressed or Crescendo pedal is activated, tablet illumination is turned off. When the [FULL ORGAN] piston is pressed or Crescendo pedal is activated, tablet illumination is turned on.
Keyboard Mode [S]	AUTO HIGH LOW VEL	This is default, with high actuator point for organ stops and full velocity sensitivity for orchestral stops. The actuator point is high but no velocity sensitivity for orchestral voices. The actuator point is low but no velocity sensitivity for orchestral voices. The actuator point is low with minimal velocity sensitivity for orchestral voices.
Music/Pedal lamp [S]	0–3	Setting the intensity of the music desk and pedal board lamps.
Console lamps [S]	1–4	Setting the intensity of the piston, drawknob (for 351D) and tablet lamps.
PD/GT Piston Coupler [S]	OFF, ON	Couples the Pedal and Great divisional pistons.
Pedal F# Sustain [S]	OFF, ON	Pedal F#19 functions as a Sustain Switch for orchestral voices only (refer to p. 20). Pedal F18 functions as a damper to rest your heel as you press F#19 sustain. Pedal notes F18–32 are muted.
Harp [S]	NONE, SUSTAIN, DAMPER	The selection determines how Pedal F#19 functions for the Orchestral Harp.
Display [S]	Light F, Light G, Dark F, Dark G, Purple, Green, Blue	A selection of color displays for the LCD screen.
Brightness [S]	Low, Medium, High	Setting the intensity of the LCD screen.
Wood image [S]	Off, On	This determines the background of the LCD display.

9. Pipe Disable

This menu applies only if this organ is interfaced to pipes.

Menu item	Value	Explanation
All pipes	---	This is displayed when no pipes are interfaced to the organ.
<i>If any pipes are interfaced to the organ, the menu has this appearance:</i>		
All pipes	DISABLED, ENABLED* <i>*If set to ENABLED, the following menus appear:</i>	Enable or disable all the pipe stops.
*Auto Tuning	DISABLED, ENABLED	Disables/Enables the automatic tuner device which adjusts the pitch of the digital stops to match the pitch of the pipes.
*Stop	Name of stop	A list of pipe-enabled stop names that scrolls as you rotate the Value knob.
*Pipes	DISABLED, ENABLED	This affects only the displayed stop.

10. Expression Pedal

Expression pedal settings

Menu item	Value	Explanation
CHOIR	ENCL	The Choir division is expressive.
	UNENCL	The Choir division is unenclosed (not expressive).
GREAT/PEDAL	ENCL	The Great and Pedal divisions are expressive.
	UNENCL	The Great and Pedal divisions are unenclosed (not expressive).
SWELL	ENCL	The Swell division is expressive.
	UNENCL	The Swell division is unenclosed (not expressive).
EXPRESSION	PPPP	Least volume when the expression shoe(s) is (are) closed.
	PPP	Somewhat higher volume when the expression shoe(s) is (are) closed.
	PP	Somewhat higher volume when the expression shoe(s) is (are) closed.
Kick SW [S]	The kick switch is located on the left side of the left expression shoe. You can assign a function to the kick switch. To engage the kick switch, as your foot is on the expression shoe, slide your foot to the left.	
	OFF	The kick switch will be off.
	NEXT	Each time you press the kick switch, the general piston will advance to the next higher number.
	PREV	Each time you press the kick switch, the general piston will decrease to the next lower number.
	SUSTAIN	Sustain will be applied while you are pressing the switch. <i>⚠ Sustain can be applied only to select Library Instrumental selections in [LIB/MIDI A] and [LIB/MIDI B] pistons and to the patches of an external MIDI sound module.</i> <i>⚠ Sustain will not be applied to organ stops.</i>
	GOSP ROTOR	When you play the "Drawbars 1" or "Drawbars 2" voice on an [LIB/MIDI A] or [LIB/MIDI B] tab, each time you press the kick switch, a rotary effect will switch on or off. <i>⚠ This function only applies to "Drawbars 1" or "Drawbars 2."</i>
[Rotor Speed] [S]	Upper rotor tremolo	400 – 498
	Upper rotor chorale	0 – 497
	Lower rotor tremolo	51 – 498
	Lower rotor chorale	0 – 497

Making Settings in the Menus

11. Tremulant

The tremulant effect adds vibrato (cyclic modulation) to the sound.

Menu item	Value	Explanation
Division	Swell Main	Sets the tremulant for the all Swell stops that aren't Flutes.
	Swell Flute 1	Sets the Flute 1 tremulant for Swell Flute stops.
	Swell Flute 2	Sets the Flute Trem Alt tremulant for Swell Flute stops.
	Great Main	Sets the tremulant for the all Great stops that aren't Flutes.
	Great Flute 1	Sets the Flute 1 tremulant for Great Flute stops.
	Great Flute 2	Sets the Flute Trem Alt tremulant for Great Flute stops.
	Choir Main	Sets the tremulant for the all Choir stops that aren't Flutes.
	Choir Flute 1	Sets the Flute 1 tremulant for Choir Flute stops.
	Choir Flute 2	Sets the Flute Trem Alt tremulant for Choir Flute stops.
	Rate [S]	0.00 Hz - 12.7 Hz A slow tremulant will be applied with a setting of "0.00," which will become faster as you increase the value.
Depth increase [S]	0% - 100%	This item appears for Flute 1 and 2 tremulants only. Increasing this value will make the tremulant deeper.

12. Crescendo

Crescendo settings. To reset the Crescendo to Factory default, refer to Menu 16 (p. 33).

Menu item	Value	Explanation
Crescendo Step	0 – 20	1. From the main screen, press the [MENU/SELECT] knob. 2. Turn the [MENU/SELECT] knob to select "Crescendo." 3. Press the [MENU/SELECT] knob to access the "Crescendo." 4. Turn the [EXIT MENU/VALUE] knob to select Crescendo Step 0–20. 5. Press a tablet, and select the stop you want to be sounded. 6. Press the [SET] piston to save your settings.

13. Audio

Audio settings.

Menu item	Value	Explanation
Master Volume [S]	KNOB, OFF, 1–100%	Adjusts the overall volume of the organ. When set to KNOB, the Master Volume knob can be used to perform the adjustment. When set to a fixed value from 1 through 100, the Master Volume knob will be disabled.
Reverb Volume [S]	KNOB, OFF, 1–100%	Adjusts the reverb volume of the organ. When set to KNOB, the Reverb Volume knob can be used to perform the adjustment. When set to a fixed value from 1 through 100, the Reverb Volume knob will be disabled.
Aux In Volume [S]	0–100%	The volume of Aux In, for anything connected to the organ's INPUT connectors (refer to "External Connectors" on p. 16).
Aux In Reverb [S]	0–100%	The volume of Aux In Reverb.
[Tone Control] [S]		Parameters affecting the organ's internal audio fidelity. Press the MENU knob to enter these menus.
	Int.	Bass -6.0dB– +6.0dB Brilliance -6.0dB– +6.0dB Tone Controls affecting the organ's internal audio sound.

14. MIDI

MIDI settings

Menu item	Value	Explanation
TX Piston [S]	When transmitting performance data via MIDI, you can specify the type of MIDI data that will be transmitted when you press a general memory piston and division memory piston.	
	OFF	MIDI data will not be transmitted.
	STOP MAP	Data describing the details of the sounds that should be produced when that piston is pressed will be transmitted. If you're recording your performance into a MIDI sequencer, this will ensure that the sounds are reproduced accurately. However, since a large amount of data is transmitted when you press the piston, the sounding of the first note-on after you press the piston may be delayed in some cases.
	PC	Only program changes indicating the memory piston that was pressed will be transmitted. If you're recording your performance into a MIDI sequencer, the performance will not be accurately reproduced unless the contents of the memory bank used during the performance match the contents during recording.
Local	OFF	The keyboard is disconnected from the internal sound generator. No sound will be heard when you play the keyboard.
	ON	The keyboard is connected to the internal sound generator.
Active Sense	OFF, ON	An Active Sense message is sent (at least once) every 300 milliseconds if there has been no other activity on the MIDI buss, to let other devices know that there is still a good MIDI connection between the devices.
Master Channels	ON, Rx, Tx, OFF	Specifies if Master Channels are On, Receive only, Transmit only, or Off.

15. Save/Load (USB)

Save/load the contents of the general memory pistons and voice setup, and format the USB flash drive

Menu item	Explanation
Copy Memory Bank	Refer to "Copying a Memory Level (Bank)" (p. 43).
Delete Memory Bank	Refer to "Deleting a Memory Level from USB Flash Drive" (p. 43).
Save Voice Setup	Refer to "Saving and Loading Voice Setup" (p. 44).
Load Voice Setup	Refer to "Loading a Voice Setup" (p. 44).
Delete Voice Setup	Refer to "Deleting a Voice Setup" (p. 44).
Format USB Memory	Refer to "Formatting USB Flash Drive" (p. 43).

16. Utility

Backing Up/Restoring Data, Reset Procedures, Date and Time, Firmware Update

Menu item	Explanation
[Version]	Displays the software versions for Program, Reverb, Mixer, and Sampleset.
[Back up/Restore]	Refer to "Backing Up/Loading Data" (p. 45).
[Reset Procedure]	Factory CRESCENDO Factory M01 Factory M02 - 50 Factory DEFAULT STOPS Factory SYSTEM
[Date and Time]	Reset Date and Time
[Firmware Update]	This menu is for an authorized Rodgers technician only.

ABOUT THE KEYBOARDS

For generations, organ key tops were made from the best materials – ivory (for white keys) and ebony (for black keys). The keyboards use the latest technologies to reproduce the touch and feel of these materials.

- Surfaces incorporate moisture-absorbing material for improved touch and playability.
- Keys feature a subtle gloss and understated coloring, enhancing the look and elegance.
- White keys are finished with a slight yellowish tinge for the look of real ivory.

Handling...

- Do not write on the keyboard with any pen or other implement, and do not stamp or place any marking on the instrument. Ink will seep into the surface lines and become unremovable.
- Do not affix stickers on the keyboard. You may be unable to remove stickers that use strong adhesives, and the adhesive may cause discoloration.

Care and Maintenance...

Please note the following points. Failure to do so may result in scratches on the surface finish, damaged gloss, or other discoloration or deformation.

- Gently wipe dirt and grime with soft cloth; do not rub the surfaces forcefully.
- To remove more serious grime, use a commercial keyboard cleaner not containing abrasives.
- Do not use benzene, paint thinner, or alcohol on the keys.

Recording Your Performances

Recording a Song

1. Press the [REC] piston; the [REC] piston will light.

The [PLAY/PAUSE] piston will flash, indicating the organ is in the recording-standby mode.

MEMO

If desired, you can sound the metronome while you record. The metronome volume is adjusted in the Song Recorder menu.

2. When you play the keyboard, the [PLAY/PAUSE] piston will light steady and recording will start automatically.

MEMO

Move the expression shoe(s) so your expression level is captured in the recording data.

3. Press the [STOP] piston to stop recording.

The [PLAY/PAUSE] and [REC] pistons' lights will go out.

Play Back the Recorded Song

1. Press the [STOP] piston to return to the first measure of the song you recorded.

2. Press the [PLAY/PAUSE] piston to play back the recorded song.

MEMO

Press the [PLAY/PAUSE] piston, you can pause the playback. Playback will resume from the same location when you press the [PLAY/PAUSE] piston once again.

3. To stop playback, press the [STOP] piston.

Saving a Recorded Song

The song you recorded will be lost when you switch off the organ's power. If you want to keep the recorded song, you must save it to your USB drive:

1. Connect your USB drive to the USB drive port.

2. Press the [MENU/SELECT] knob to enter the menus of the organ.

3. Turn the [MENU/SELECT] knob to select Menu #4 "Song Recorder".

4. Press the [MENU/SELECT] knob to enter this menu.

5. Turn the [MENU/SELECT] knob to select "Save Song."

6. Press the [MENU/SELECT] knob to access the "Save Song" screen.

7. Turn the [MENU/SELECT] knob to select "New Song," and press the [MENU/SELECT] knob to assign a name to the song.

Naming a saved song

You can assign a name to the performance data.

- As "New Song" is highlighted, press the [MENU/SELECT] knob.
- Turn the [MENU/SELECT] knob to move the cursor to left or right, and turn the [EXIT MENU/VALUE] knob to change the character at the cursor location.
- Press the [SET] piston to finalize the name.

You can use the following characters.

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z a b c d e f
g h i j k l m n o p q r s t u v w x y z 0 1 2 3 4 5 6 7 8 9 ! &
\$ # @ (space) + - % = . , ' () [] { } ^ _ ` ~

8. Turn the [MENU/SELECT] knob to select "No.", and turn the [EXIT MENU/VALUE] knob to choose the save-destination number.


9. Press the [SET] piston; the data will be saved.

When saving is finished, the name of the newly saved song data will appear.

10. Press the [EXIT MENU/VALUE] knob twice to return to the main screen.

If a screen like the following appears

The following message appears when you have recorded a song without saving it, and you pressed the REC piston again to begin a new recording:

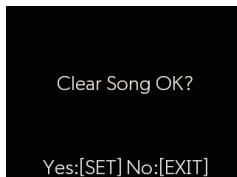

- Press the [SET] piston if you want to clear the data; i.e., delete the previous recording and start a new one. The existing data will be erased.
- If you decide that you want to keep the performance data, press the [EXIT MENU/VALUE] knob.

Deleting a Recorded Song

MEMO

You can't erase a preset demo song.

1. If you want to delete a song that's saved on your USB drive, connect your USB drive to the USB port.
2. From the main screen, press the [MENU/SELECT] knob to access the "Song Recorder" menu.
3. Turn the [MENU/SELECT] knob to select [Delete Song.]
4. Press the [MENU/SELECT] knob to access the "Delete Song" screen.
5. Turn the [MENU/SELECT] knob to select "No.", and turn the [EXIT MENU/VALUE] knob to specify the song that you want to delete.
6. Press the [SET] piston; a confirmation screen will appear.

Press the [SET] piston once again to delete the song.

If you decide to cancel, press the [EXIT MENU/VALUE] knob.

NOTE

⚠ Do not disconnect the USB drive or turn off the power before the deletion has been completed. Otherwise, you risk damaging the USB drive or the organ's internal memory, rendering it unusable.

7. Press the [EXIT MENU/VALUE] knob three times to return to the main screen.

Playing Back a Saved Song

1. If you want to play a song that's saved on your USB drive, insert your USB drive to the USB port.
2. From the main screen, press the [MENU/SELECT] knob and rotate it to access the "Song Recorder" menu.
3. Press the [MENU/SELECT] knob to enter the "Song Recorder" menu.
4. Turn the [EXIT MENU/VALUE] knob to select [USB].
5. Turn the [MENU/SELECT] knob to access [Song].
6. Turn the [EXIT MENU/VALUE] knob to select the song you wish to play.
7. Press the [PLAY/PAUSE] piston to play the song.

Hymn Player

To Enter the Hymn Player

Press the [HYMN PLAYER] piston.

Selecting a Hymn

1. Press the [HYMN PLAYER] piston. Refer to the following pages to select a hymn.
2. Turn the [MENU/SELECT] knob to move the cursor to Hymn number. The selections are alphabetized by Hymn Tune Name.



3. Turn the [EXIT MENU/VALUE] knob to select Hymn number.

Or use this shortcut: while holding the [HYMN PLAYER] piston, press General pistons to select the Hymn number. Use General 10 for 0 (zero). For example, for hymn number 203 you would hold [HYMN PLAYER] and press General 2, 10, 3, then release the [HYMN PLAYER] piston. Hymn number 203 is now displayed and ready to play.

Playing a Hymn

1. Press the [PLAY] piston.

An introduction will play for the selected hymn.

2. When the introduction has finished, press [PLAY] piston again and the verse will begin. At the conclusion of each verse simply press [PLAY] piston again to hear as many additional verses as desired.

If NO introduction to the hymn is desired, turn the [MENU/SELECT] knob to Next, and turn the [EXIT MENU/VALUE] knob to select Verse.

Press [PLAY] piston and the hymn will play the verse only.

Playing a Prelude

1. Press the [HYMN PLAYER] piston.
2. Turn the [MENU/SELECT] knob to move the cursor to Mode.
3. Turn the [EXIT MENU/VALUE] knob to select Prelude.
4. Press the [PLAY] piston.

The selected Prelude will automatically play continuously.

MEMO

Press the [STOP] piston; the [PLAY/PAUSE] piston will blink, and Prelude will stop automatically at end of the Prelude. To stop the Prelude, press the [STOP] piston again.

To Exit the Hymn Player

Press the [EXIT MENU/VALUE] knob.

Hymn Player Song List by Hymn Tune Names

1	ABERYSTWYTH	59	DEJLIG ER DEN HIMMEL BLAA	117	HANKEY
2	ACK, VAD AR DOCK LIVET HAR	60	DENNIS	118	HANOVER
3	ADELAIDE	61	DET KIMER NU TIL JULEFEST	119	HANSON PLACE
4	ADESTES FIDELES	62	DETROIT	120	HAPPY DAY
5	ALL IS WELL	63	DIADEM	121	HE IS LORD
6	ALL THE WAY	64	DIADEMATA	122	HE LEADETH ME
7	ALL TO CHRIST	65	DISTRESS	123	HEAR OUR PRAYER
8	AMERICA	66	DIVINUM MYSTERIUM	124	HEAVEN
9	AMSTERDAM	67	DIX	125	HENDON
10	ANGEL'S STORY	68	DON'T FORGET THE SABBATH	126	HER KOMMER DINE ARME SMAA
11	ANGELIC SONGS	69	DOWN AMPNEY	127	HERLICH TUT MICH VERLANGEN
12	ANTIOCH	70	DOXOLOGY	128	HERZLIEBSTER JESU
13	AR HYD Y NOS	71	DUKE STREET	129	HIGHER GROUND
14	ARLINGTON	72	DUNCANNON	130	HOLINESS
15	ASCEND TO ZION'S HIGHEST	73	DUNDEE	131	HOLY IS THE LORD
16	ASH GROVE	74	EASTER HYMN	132	HOLY MANNA
17	ASSAM	75	EBENEZER	133	HOLY SABBATH DAY OF REST
18	ASSURANCE	76	EIN' FESTE BURG	134	HUDSON
19	AURELIA	77	EL NATHAN	135	HYFRYDOL
20	AUSTRIAN HYMN	78	ELLACOMBE	136	HYMN TO JOY
21	AWAKE	79	ELLERS	137	I AM THINE
22	AWAY IN A MANGER	80	ENDLESS SONG	138	I WANT TO BE A CHRISTIAN
23	AZMON	81	ENGLEBERG	139	I WOULD DRAW NEARER
24	BATTLE HYMN	82	ERMUNTRE DICH	140	I'LL FLY AWAY
25	BEACH SPRING	83	ES IST EIN ROS'	141	I'M SO GLAD
26	BEAUTIFUL GARDEN	84	EVANGEL	142	I'VE FOUND A PLACE I LOVE SO WELL
27	BEECHER	85	EVENTIDE	143	IN BABILON
28	BEREDEN VAG FOR HERRAN	86	FACE TO FACE	144	IN DIR IST FREUDE
29	BEYOND WHERE CLOUDS NO MORE APPEAR	87	FESTAL SONG	145	IN DULCI JUBIL
30	BLOTT EN DAG	88	FILLMORE	146	IN THE GLORYLAND
31	BONNIE ELOISE	89	FLEMMING	147	IRBY
32	BOYSLTON	90	FOREST GREEN	148	IT MAY BE AT MORN
33	BRADBURY	91	FOUNDATION	149	ITALIAN HYMN
34	BREAD OF LIFE	92	FRANCONIA	150	IVERSON
35	BROTHER JAMES' AIR	93	FRED TIL BOD	151	JEFFERSON
36	BUNESSAN	94	FREU DICH SEHR	152	JESU, MEINE FREUDE
37	BY AND BY	95	GALILEE	153	JESUS IS COMING AGAIN
38	CAITHNESS	96	GARDEN	154	JESUS LOVES ME
39	CANONBURY	97	GATHER	155	JESUS SAVES
40	CAROL; NOEL	98	GELOBT SEI GOT	156	JOYFUL SONG
41	CHESTERFIELD	99	GERMANY	157	JUDAS MACCABEUS
42	CHRIST AROSE	100	GLAD HOSANNA! DAVID'S SON	158	JUNGST
43	CHRISTMAS	101	GLORIA	159	JUST AS I AM
44	CLEANSING FOUNTAIN	102	GLORY TO HIS NAME	160	KINGS OF ORIENT
45	CLOSE TO THEE	103	GLORY, GLORY	161	KINGSFOLD
46	CLOSER WALK	104	GO DOWN, MOSES	162	KREMSE
47	COME AND GO WITH ME	105	GOD BE WITH YOU	163	KUM BA YAH
48	CONSOLATION	106	GOOD NEWS	164	LACQUIPARLE
49	CONSTANTINE	107	GORDON	165	LANCASHIRE
50	CONVERSE	108	GRAND ISLE	166	LAND OF REST
51	CORONATION	109	GREATOREX	167	LANDAS
52	CRADLE SONG	110	GREENSLEEVES	168	LASST UNS ERFREUEN
53	CRANHAM	111	GROSSER GOT	169	LAUDA ANIMA
54	CRIMOND	112	HAF TRONES LAMPA FARDIG	170	LAUDES DOMINI
55	CRUSADER'S HYMN	113	HALL	171	LAUS REGIS
56	CWM RHONDDA	114	HALLELUJAH! WHAT A SAVIOR	172	LEONI
57	DARWALL	115	HAMBURG	173	LET US BREAK BREAD
58	DEEP RIVER	116	HANDS LET'S BE JOINING	174	LET US SING WITH JOYFUL VOICES

175 LIFT EVERY VOICE	236 PENITENCE	297 THAXTED
176 LIGHT OF MINE	237 PEVENSEY	298 THE ASH GROVE
177 LIGHTBEAMS	238 PICARDY	299 THE CALL
178 LLANFAIR	239 POWER IN THE BLOOD	300 THE FATHER'S HOUSE IS OUR DELIGHT
179 LO DESEMBRE CONGELAT	240 PRAISE, MY SOUL	301 THE FIRST NOEL
180 LOBE DEN HERREN	241 PRECIOUS LORD	302 THE LORD IN ZION REIGNETH
181 LOBT GOTT, IHR CHRISTEN	242 PROMISED LAND	303 THERE IS A GLORIOUS LAND
182 LONDONDERRY AIR	243 PROMISES	304 TIDINGS
183 LORD MY SAVIOR AND MY SHEPHERD	244 PUER NOBIS	305 TO GOD BE THE GLORY
184 LYONS	245 QUAM DILECTA	306 TOA-SIA
185 MARCHING TO ZION	246 QUEM PASTORES LAUDAVERE	307 TOKYO
186 MARION	247 RATHBUN	308 TOPLADY
187 MARTIN	248 RATISBON	309 TOULON
188 MARTYRDOM	249 REDEEMED	310 TRENTHAM
189 MARYTON	250 REDHEAD	311 TRURO
190 MATERNA	251 REGENT SQUARE	312 TRUST AND OBEY
191 McDANIEL	252 REPTON	313 TRUST IN JESUS
192 McKEE	253 REST	314 TRUST IN THE LORD
193 MEINEKE	254 REVIVE US AGAIN	315 TRYGGARE KAN INGEN VARA
194 MELITA	255 RHOSYMEDRE	316 TWENTY-FOURTH
195 MENDELSSOHN	256 ROCKINGHAM OLD	317 UNSER HERRSCHER
196 MESSAGE	257 RUSINGTON	318 UTTINGEN
197 METERNA	258 RUSSIAN HYMN	319 VARINA
198 MIT FREUDEN ZART	259 SABBATH	320 VENI EMMANUEL
199 MOODY	260 SAGINA	321 VILLE DU HAVRE
200 MORECAMBE	261 ST. AGNES	322 VINEYARD HAVEN
201 MORNING STAR	262 ST. ANNE	323 VON HIMMEL HOCH
202 MORRIS	263 ST. CATHERINE	324 VRUECHTEN
203 MUNICH	264 ST. CHRISTOPHER	325 W ZLOBIE LEZY
204 MY JESUS IS MY DEAREST FRIEND	265 ST. CLEMENT	326 WACHET AUF
205 MY SAVIOR'S LOVE	266 ST. COLUMBA	327 WALK WITH ME
206 NAAR MIT OIE	267 ST. DENIO	328 WAREHAM
207 NATIONAL ANTHEM	268 ST. GEORGE'S, WINDSOR	329 WE SOLL ICH DICH EMPFANGEN
208 NATIONAL HYMN	269 ST. GERTRUDE	330 WEBB
209 NEAR THE CROSS	270 ST. LEONARDS	331 WELLESLEY
210 NEED	271 ST. LOUIS	332 WEM IN LEIDENSTAGEN
211 NETTLETON	272 ST. MAGNUS	333 WERE YOU THERE
212 NEUMARK	273 ST. MARGARET	334 WESTMINSTER ABBEY
213 NEW BRITAIN	274 ST. PETER	335 WHEN THE SAINTS
214 NICEA	275 ST. THOMAS	336 WHEN THE STORMS OF LIFE ARE RAGING
215 NOEL NOUVELET	276 SAKURA	337 WHOLE WORLD
216 NUN DANKE ALLE GOT	277 SALZBURG	338 WIE LIEBLICH IST DER MAIEN
217 NUN KOMM, DER HEIDEN HEILAND	278 SCHMUCKE DICH	339 WIE SCHON LEUCHTET
218 O CANADA	279 SCHOLFIELD	340 WINCHESTER NEW
219 O DU LIEBE MEINER LIEBE	280 SCHUMANN	341 WIR HATTEN GEBAUET
220 O FILII ET FILIAE	281 SHOWALTER	342 WIR PFLUGEN
221 O HOW I LOVE JESUS	282 SICILIAN MARINERS	343 WONDERFUL GRACE
222 O PERFECT LOVE	283 SINE NOMINE	344 WONDROUS LOVE
223 O QUANTA QUALIA	284 SIYAHAMBA	345 WOODWORTH
224 O STORE GUD	285 SLANE	346 WORDS OF LIFE
225 OLD 100th	286 SOFTLY AND TENDERLY	347 WUNDERBARER KONIG
226 OLD RUGGED CROSS	287 SOLID ROCK	348 WYE VALLEY
227 OLD TIME RELIGION	288 SPIRITUS VITAE	349 YIELD NOT
228 OLIVET	289 STILLE NACHT	350 ZION
229 OMNI DIE	290 SUFFERER	
230 OPEN MY EYES	291 SURRENDER	
231 OVER MY HEAD	292 SUSSEX CAROL	
232 PARK STREET	293 SWEET HOUR	
233 PASS ME NOT	294 TACK O GUD	
234 PASSION CHORALE	295 TALLIS' CANON	
235 PATMOS	296 TERRA BEATA	

Hymn Player Song List by Common Hymn Titles

83 A GREAT AND MIGHTY WONDER	60 BLEST BE THE TIE THAT BINDS	278 FEED THY CHILDREN, GOD MOST HOLY
168 A HYMN OF GLORY LET US SING!	82 BREAK FORTH, O BEAUTEOUS HEAV'LY LIGHT	283 FOR ALL THE SAINTS
75 A MIGHTY FORTRESS IS OUR GOD	310 BREATHE ON ME, BREATH OF GOD	87 FOR ALL YOUR SAINTS, O LORD
85 ABIDE WITH ME	59 BRIGHT AND GLORIOUS IS THE SKY	67 FOR THE BEAUTY OF THE EARTH
182 ABOVE THE HILLS OF TIME THE CROSS IS GLEAMING	201 BRIGHTEST AND BEST OF THE STARS	229 FOR THE BREAD WHICH YOU HAVE BROKEN
128 AH, HOLY JESUS	315 CHILDREN OF THE HEAVENLY FATHER	13 FOR THE FRUITS OF ALL CREATION
134 ALAS! AND DID MY SAVIOR BLEED	42 CHRIST AROSE (LOW IN THE GRAVE HE LAY)	62 FORGIVE OUR SINGS AS WE FORGIVE
188 ALAS! AND DID MY SAVIOR BLEED	285 CHRIST BE MY LEADER BY NIGHT AS BY DAY	71 FROM ALL THAT DWELLS BELOW THE SKIES
168 ALL CREATURES OF OUR GOD AND KING	334 CHRIST IS MADE THE SURE FOUNDATION	168 FROM ALL THAT DWELLS BELOW THE SKIES
51 ALL HAIL THE POWER OF JESUS' NAME!	57 CHRIST IS OUR CORNERSTONE	323 FROM EAST TO EAST, FROM SHORE TO SHORE
63 ALL HAIL THE POWER OF JESUS' NAME!	148 CHRIST RETURNETH	323 FROM HEAVEN ABOVE
225 ALL HAIL, ADORED TRINITY	172 CHRIST SITS AT GOD'S RIGHT HAND	252 GIVE THANKS FOR SAINTS
225 ALL PEOPLE THAT ON EARTH DO DWELL	64 CHRIST THE ETERNAL LORD	71 GIVE TO OUR GOD IMMORTAL PRAISE!
244 ALL PRAISE TO THEE, ETERNAL LORD	178 CHRIST THE LORD IS RISEN TODAY; ALLELUIA	100 GLAD HOSANNA! DAVID'S SON
81 ALL PRAISE TO THEE, FOR THOU, O KING DIVINE	132 CHRIST THE WORD OF GOD INCARNATE	109 GLORIA PATRI
295 ALL PRAISE TO THEE, MY GOD, THIS NIGHT	181 CHRIST, WHEN FOR US YOU WERE BAPTIZED	20 GLORIOUS THINGS OF YOU ARE SPOKEN
6 ALL THE WAY MY SAVIOR LEADS ME	248 CHRIST, WHOSE GLORY FILLS THE SKY	258 GLORIOUS YULETIDE
7 ALL TO CHRIST	238 CHRISTIANS, LET US LOVE ONE ANOTHER	332 GLORY BE TO JESUS
291 ALL TO JESUS I SURRENDER ALL	43 CHRISTMAS (HANDEL)	193 GLORY BE TO THE FATHER
132 ALL WHO HUNGER, GATHER GLADLY	135 CHURCH OF GOD, ELECT AND GLORIOUS	102 GLORY TO HIS NAME
339 ALLELUIA! LET PRAISES SING	155 CLEANSED IN OUR SAVIOR'S PRECIOUS BLOOD	103 GLORY, GLORY
135 ALLELUIA! SING TO JESUS	45 CLOSE TO THEE (THOU MY EVERLASTING PORTION)	104 GO DOWN, MOSES
136 ALLELUIA, ALLELUIA! HEARTS TO HEAV'N	47 COME AND GO WITH ME	250 GO TO DARK GETHSEMANE
169 ALLELUIA, SONG OF GLADNESS	69 COME DOWN, O LOVE DIVINE	13 GO, MY CHILDREN, WITH MY BLESSING
240 ALLELUIA, SONG OF GLADNESS	97 COME GATHER IN THIS SPECIAL PLACE	105 GOD BE WITH YOU TILL WE MEET AGAIN
225 ALMIGHTY FATHER, BLESS THE WORD	92 COME JOIN IN CANA'S FEAST	8 GOD BLESS OUR NATIVE LAND
213 AMAZING GRACE	304 COME MY SOUL	306 GOD CREATED HEAVEN AND EARTH
190 AMERICA (O BEAUTIFUL FOR SPACIOUS SKIES)	149 COME NOW, ALMIGHTY KING	347 GOD HIMSELF IS PRESENT
197 AMERICA, THE BEAUTIFUL	206 COME TO CALV'RY'S HOLY MOUNTAIN	256 GOD LOVED THE WORLD
260 AND CAN IT BE	25 COME TO ME, ALL PILGRIMS THIRSTY	73 GOD MOVES IN A MYSTERIOUS WAY
11 ANGELIC SONGS	246 COME YOUR HEARTS AND VOICES RAISING	25 GOD OF DAY AND GOD OF DARKNESS
10 ANGEL'S STORY	161 COME, JOIN THE DANCE OF TRINITY	56 GOD OF GRACE AND GOD OF GLORY
101 ANGELS WE HAVE HEARD ON HIGH	299 COME, MY WAY, MY TRUTH, MY LIFE	208 GOD OF OUR FATHERS
251 ANGELS, FROM THE REALMS OF GLORY	136 COME, O HOLY SPIRIT	56 GOD OF TEMPEST, GOD OF WHIRLWIND
87 ARISE, YOUR LIGHT HAS COME	149 COME, THOU ALMIGHTY KING	309 GOD OF THE NATIONS, WHO FROM DAWN OF DAY
90 AS SAINTS OF OLD	211 COME, THOU FOUNT OF EVERY BLESSING	309 GOD OF THE PROPHETS
143 AS WE GATHER AT YOUR TABLE	135 COME, THOU LONG-EXPECTED JESUS	258 GOD SAVE AMERICA
211 AS WE GATHER AT YOUR TABLE	151 COME, THOU LONG-EXPECTED JESUS	211 GOD WE PRAISE YOU
67 AS WITH GLADNESS MEN OF OLD	185 COME, WE THAT LOVE THE LORD	258 GOD, THE OMNIPOTENT
15 ASCEND TO ZION'S HIGHEST	317 COME, YE FAITHFUL, RAISE THE ANTHEM	13 GOD, WHO MADE THE EARTH AND HEAVEN
277 AT THE LAMB'S HIGH FEAST	268 COME, YE THANKFUL PEOPLE, COME	132 GOD, WHO STRETCHED THE SPANGLED HEAVENS
23 AWAKE, O SLEEPER, RISE FROM DEATH	94 COMFORT, COMFORT NOW MY PEOPLE	149 GOD, WHOSE ALMIGHTY WORD
192 AWAY FROM US! THE DEMON CRIED	94 COMFORT, COMFORT YE MY PEOPLE	257 GOD, WHOSE GIVING KNOWS NO ENDING
22 AWAY IN A MANGER	316 CONSIDER ALL MY SORROWS, LORD	75 GOD'S WORD IS OUR GREAT HERITAGE
52 AWAY IN A MANGER	179 CRADLE SONG	145 GOOD CHRISTIAN FRIENDS, REJOICE
36 BAPTIZED IN WATER	64 CROWN HIM WITH MANY CROWNS	98 GOOD CHRISTIAN FRIENDS, REJOICE AND SING!
24 BATTLE HYMN (MINE EYES HAVE SEEN THE GLORY)	30 DAY BY DAY	106 GOOD NEWS
225 BE PRESENT AT OUR TABLE LORD	13 DAY IS DONE	132 GRACIOUS GOD, YOU SEND GREAT BLESSINGS
285 BE THOU MY VISION	253 DEAR LORD AND FATHER OF MANKIND	135 GRACIOUS SAVIOUR, GRANT YOUR BLESSING
26 BEAUTIFUL GARDEN OF PRAYER	58 DEEP RIVER	56 GUIDE ME EVER, GREAT REDEEMER
55 BEAUTIFUL SAVIOR	68 DON'T FORGET THE SABBATH	350 GUIDE ME O, THOU GREAT JEHOVAH
232 BEFORE JEHOVAH'S AWFUL THRONE	70 DOXOLOGY	56 GUIDE ME, O THOU GREAT REDEEMER
57 BEFORE YOU, LORD, WE BOW	159 DRAWN TO THE CROSS, WHICH THOU HAST BLESSED	178 HAIL THE DAY THAT SEEKS HIM RISE
264 BENEATH THE CROSS OF JESUS	194 ETERNAL FATHER, STRONG TO SAVE	268 HAIL, REDEEMER, KING DIVINE
29 BEYOND WHERE CLOUDS NO MORE APPEAR	86 FACE TO FACE	93 HALLELUJAH! JESUS LIVES!
18 BLESSED ASSURANCE	132 FAITH AND TRUST AND LIFE BESTOWING	114 HALLELUJAH! WHAT A SAVIOR
143 BLESSED FEATS OF BLESSED MARTYRS	263 FAITH OF OUR FATHERS	116 HANDS LET'S BE JOINING
90 BLEST BE THE GOD OF ISRAEL (BENEDICTUS)	237 FAR FROM ALL CARE	120 HAPPY DAY
32 BLEST BE THE TIE THAT BINDS	38 FATHER OF PEACE, AND GOD OF LOVE	95 HARK THE VOICE OF JESUS CALLING
		95 HARK THE VOICE OF JESUS CRYING

195	HARK! THE HERALD ANGELS SING	257	IN THE SHATTERED BLISS OF EDEN	127	LORD, THEE I LOVE WITH ALL MY HEART
41	HARK, THE GLAD SOUND	37	IN THE SWEET BY AND BY	219	LORD, 'TIS NOT THAT I DID CHOOSE THEE
44	HARK, THE GLAD SOUND	144	IN THEE IS GLADNESS	166	LORD, WHEN YOU CAME AS WELCOME GUEST
88	HARK: THE VOICE OF JESUS CALLING	325	INFANT HOLY, INFANT LOWLY	25	LORD, WHOSE LOVE IN HUMBLE SERVICE
3	HAVE THINE OWN WAY	40	IT CAME UPON THE MIDNIGHT CLEAR	132	LORD, WHOSE LOVE IN HUMBLE SERVICE
252	HE COMES TO US AS ONE UNKNOWN	5	IT IS WELL WITH MY SOUL	316	LOVE CONSECRATES THE HUMBLEST ACT
339	HE IS ARISEN! GLORIOUS WORD	321	IT IS WELL WITH MY SOUL	27	LOVE DIVINE, ALL LOVES EXCELLING
121	HE IS LORD	279	I'VE FOUND A FRIEND WHO IS ALL TO ME	135	LOVE DIVINE, ALL LOVES EXCELLING
122	HE LEADETH ME	142	I'VE FOUND A PLACE I LOVE SO WELL	213	MAGNIFICAT (MY SOUL PROCLAIMS THE LORD)
182	HE LOOKED BEYOND MY FAULT AND SAW MY NEED	146	I'VE FOUND A PLACE I LOVE SO WELL	164	MANY AND GREAT
25	HEALING RIVER OF THE SPIRIT	166	JERUSALEM, MY HAPPY HOME	199	MARVELOUS GRACE
123	HEAR OUR PRAYER	95	JESUS CALLS US; O'ER THE TUMULT	213	MARY'S SONG
135	HEAR US NOW, OUR GOD AND FATHER	74	JESUS CHRIST IS RISEN TODAY	270	MAY THE MIND OF CHRIST MY SAVIOR
307	HERE, O LORD, YOUR SERVANTS GATHER	153	JESUS IS COMING	24	MINE EYES HAVE SEEN THE GLORY
337	HE'S GOT THE WHOLE WORLD	276	JESUS LOVES ME	36	MORNING HAS BROKEN
129	HIGHER GROUND	154	JESUS LOVES ME!	167	MY FAITH HAS FOUND A RESTING PLACE
111	HOLY GOD, WE PRAISE YOUR NAME	71	JESUS SHALL REIGN	228	MY FAITH LOOKS UP TO THEE
131	HOLY IS THE LORD	2	JESUS, IN THY DYING WOES	245	MY FATHER, HEAR MY PRAYER
133	HOLY SABBATH DAY OF REST	209	JESUS, KEEP ME NEAR THE CROSS	73	MY GOD, HOW WONDERFUL THOU ART
143	HOLY SPIRIT, EVER DWELLING	49	JESUS, MEEK AND GENTLE	194	MY HOPE IS BUILT ON NOTHING LESS
214	HOLY, HOLY, HOLY, LORD GOD ALMIGHTY!	151	JESUS, PRICELESS TREASURE	287	MY HOPE IS BUILT ON NOTHING LESS
78	HOSANNA, LOUD HOSANNA	219	JESUS, REFUGE OF THE WEARY	107	MY JESUS I LOVE THEE
80	HOW CAN I KEEP FROM SINGING	261	JESUS, THE VERY THOUGHT OF YOU	204	MY JESUS IS MY DEAREST FRIEND
252	HOW CLEAR IS OUR VOCATION, LORD	99	JESUS, THY BLOOD AND RIGHTEOUSNESS	80	MY LIFE FLOWS ON IN ENDLESS SONG
91	HOW FIRM A FOUNDATION	12	JOY TO THE WORLD	205	MY SAVIOR'S LOVE
158	HOW GREAT OUR JOY	136	JOYFUL, JOYFUL WE ADORE THEE	161	MY SOUL PROCLAIMS YOUR GREATNESS
224	HOW GREAT THOU ART	46	JUST A CLOSER WALK WITH THEE	144	MY SOUL REJOICES, MY SPIRIT VOICES
166	HOW LONG, O GOD	159	JUST AS I AM	161	NO TRAMP OF SOLDIERS' MARCHING FEET
161	HOW SMALL OUR SPAN OF LIFE	202	JUST AS I AM	168	NOW ALL THE VAULT OF HEAVEN RESOUNDS
31	HOW SWEET ARE THE TIDINGS	345	JUST AS I AM, WITHOUT ONE PLEA	145	NOW SING WE, NOW REJOICE
274	HOW SWEET THE NAME OF JESUS SOUNDS	163	KUM BA YAH	216	NOW THANK WE ALL OUR GOD
137	I AM THINE LORD	72	LEAD ME TO CALVARY	215	NOW THE GREEN BLADE RISES
182	I CANNOT TELL	165	LEAD ON, O KING ETERNAL!	278	NOW WE JOIN IN CELEBRATION
309	I GREET THEE	281	LEANING ON THE EVERLASTING ARMS	190	O BEAUTIFUL FOR SPACIOUS SKIES
17	I HAVE DECIDED TO FOLLOW JESUS	161	LED BY THE SPIRIT	275	O BLESS THE LORD, MY SOUL
161	I HEARD THE VOICE OF JESUS SAY	238	LET ALL MORTAL FLESH KEEP SILENCE	288	O BREATH OF LIFE
77	I KNOW NOT WHY GOD'S WONDROUS GRACE	298	LET ALL THINGS NOW LIVING	266	O BREATHE ON ME, O BREATH OF GOD
71	I KNOW THAT MY REDEEMER LIVES!	16	LET ALL THINGS NOW LIVING	218	O CANADA
203	I LAY MY SINS ON JESUS	181	LET ALL TOGETHER PRAISE OUR GOD	181	O CHRIST, OUR HOPE
212	I LEAVE ALL THINGS TO GOD'S DIRECTION	275	LET JUSTICE FLOW LIKE STREAMS	65	O CHRIST, THE HEALER, WE HAVE COME
117	I LOVE TO TELL THE STORY	297	LET STREAMS OF LIVING JUSTICE	296	O CHRIST, WHO CALLED THE TWELVE
275	I LOVE YOUR KINGDOM, LORD	217	LET THE EARTH NOW PRAISE THE LORD	78	O CHRIST, YOUR HEART, COMPASSIONATE
309	I MAY NOT GO TONIGHT TO BETHLEHEM	277	LET THE WHOLE CREATION CRY	4	O COME, ALL YE FAITHFUL
108	I SING A SONG OF THE SAINTS OF GOD	173	LET US BREAK BREAD	320	O COME, O COME, EMMANUEL
78	I SING THE MIGHTY POWER OF GOD	174	LET US SING	78	O DAY OF REST AND GLADNESS
327	I WANT JESUS TO WALK WITH ME	175	LIFT EVERY VOICE AND SING	127	O DEAREST JESUS, WHAT LAW HAST THOU BROKEN
331	I WANT JESUS TO WALK WITH ME	311	LIFT UP YOUR HEADS, YE MIGHTY GATES	19	O FATHER, ALL CREATING
139	I WOULD DRAW NEARER TO JESUS	176	LIGHT BEAMS	99	O GIVE THE LORD WHOLEHEARTED PRAISE
212	IF THOU BUT TRUST IN GOD TO GUIDE THEE	334	LIGHT OF LIGHT, O SOLE-BEGOTTEN	297	O GOD BEYOND ALL PRAISING
140	I'LL FLY AWAY	348	LIKE A RIVER GLORIOUS	159	O GOD OF MERCY, GOD OF LIGHT
124	I'M BUT A STRANGER HERE	83	LO, HOW A ROSE E'R BLOOMING	262	O GOD, OUR HELP IN AGES PAST
14	I'M NOT ASHAMED TO OWN MY LORD	166	LORD BID YOUR SERVANT GO IN PEACE	338	O HOLY SPIRIT, ENTER IN
141	I'M SO GLAD	198	LORD CHRIST, WHEN FIRST YOU CAME TO EARTH	221	O HOW I LOVE JESUS
309	IMMANUEL	251	LORD DISMISS US WITH YOUR BLESSING	210	O JESUS LORD MOST MERCIFUL
309	IMMORTAL HONORS REST	282	LORD DISMISS US WITH YOUR BLESSING	203	O JESUS, I HAVE PROMISED
267	IMMORTAL, INVISIBLE, GOD ONLY WISE	328	LORD JESUS CHRIST THE CHILDREN'S FRIEND	99	O JESUS, JOY OF LOVING HEARTS
267	IN CHRIST CALLED TO BAPTIZE	183	LORD MY SAVIOR AND MY SHEPHERD	265	O LIGHT WHOSE SPLENDOR THRILLS
192	IN CHRIST THERE IS NO EAST OR WEST	285	LORD OF ALL HOPEFULNESS	271	O LITTLE TOWN OF BETHLEHEM
251	IN HIS TEMPLE NOW BEHOLD HIM	135	LORD OF GLORY, YOU HAVE BOUGHT US	19	O LIVING BREAD FROM HEAVEN
334	IN HIS TEMPLE NOW BEHOLD HIM	182	LORD OF THE CHURCH, WE PRAY FOR OUR RENEWING	329	O LORD, HOW SHALL I MEET YOU
34	IN HOLY CONVERSATION	253	LORD, I BELIEVE A REST REMAINS	48	O LORD, THROUGHOUT THESE 40 DAYS
53	IN THE BLEAK MIDWINTER	138	LORD, I WANT TO BE A CHRISTIAN	273	O LOVE THAT WILT NOT LET ME GO
247	IN THE CROSS OF CHRIST I GLORY	39	LORD, SPEAK TO US, THAT WE MAY SPEAK	182	O LOVING GOD
96	IN THE GARDEN			189	O MASTER, LET ME WALK WITH YOU

Hymn Player

339 O MORNING STAR, HOW FAIR AND BRIGHT	79 SAVIOR, AGAIN TO THY DEAR NAME	143 THERE'S A WIDENESS IN GOD'S MERCY
222 O PERFECT LOVE	33 SAVIOR, LIKE A SHEPHERD LEAD US	290 THEY CRUCIFIED MY LORD
127 O SACRED HEAD, NOW WOUNDED	1 SAVIOR, WHEN IN DUST TO YOU (THEE)	157 THINE IS THE GLORY
234 O SACRED HEAD, NOW WOUNDED	315 SEE THIS WONDER IN THE MAKING	36 THIS DAY GOD GIVES ME
220 O SONS AND DAUGHTERS, LET US SING	16 SENT FORTH BY GOD'S BLESSING	36 THIS IS A DAY, LORD, GLADLY AWAITED
203 O WORD OF GOD INCARNATE	298 SENT FORTH BY GOD'S BLESSING	166 THIS IS THE SPIRIT'S ENTRY NOW
21 O ZION'S DAUGHTER	119 SHALL WE GATHER AT THE RIVER	78 THIS JOYFUL EASTERTIDE
66 OF THE FATHER'S LOVE BEGOTTEN	149 SHEPHERD OF TENDER YOUTH	324 THIS JOYFUL EASTERTIDE
57 OH WHAT HAS NOW BEEN SOWN	261 SHEPHERDS OF SOULS	177 THIS LITTLE LIGHT OF MINE
23 OH, FOR A THOUSAND TONGUES TO SING	94 SIGNS AND WONDERS	297 THREE DAYS
181 OH, HAPPY DAY WHEN WE SHALL STAND	289 SILENT NIGHT, HOLY NIGHT	75 THROUGH THE NIGHT OF DOUBT AND SORROW
118 OH, WORSHIP THE KING	191 SINCE JESUS CAME INTO MY HEARD	75 THY STRONG WORD
226 OLD RUGGED CROSS	211 SING A NEW CHURCH	313 TIS SO SWEET TO TRUST IN JESUS
227 OLD TIME RELIGION	338 SING TO THE LORD OF HARVEST	81 TO BE YOUR PRESENCE
292 ON CHRISTMAS NIGHT	136 SING WITH ALL THE SAINTS IN GLORY	305 TO GOD BE THE GLORY
242 ON JORDAN'S STORMY BANK I STAND	284 SIYAHAMBA	312 TRUST AND OBEY
236 ON THE GOOD AND FAITHFUL	286 SOFTLY AND TENDERLY	314 TRUST IN THE LORD
147 ONCE IN ROYAL DAVID'S CITY	143 SON OF GOD, ETERNAL SAVIOR	326 WAKE, AWAKE, FOR NIGHT IS FLYING
269 ONWARD CHRISTIAN SOLDIERS	225 SONG OF FAREWELL	25 WASH, O GOD, OUR SONS AND DAUGHTERS
9 OPEN LORD MY INWARD EAR	268 SONGS OF THANKFULNESS AND PRAISE	284 WE ARE MARCHING IN THE LIGHT
230 OPEN MY EYES, THAT I MAY SEE	277 SONGS OF THANKFULNESS AND PRAISE	188 WE COME TO YOU FOR HEALING, LORD
317 OPEN NOW THY GATES OF BEAUTY	278 SOUL, ADORN YOURSELF WITH GLADNESS	162 WE GATHER TOGETHER
255 OUR FATHER, BY WHOSE NAME	200 SPIRIT OF GOD, DESCEND UPON MY HEART	280 WE GIVE THEE BUT THINE OWN
234 OUR FATHER, WE HAVE WANDERED	150 SPIRIT OF THE LIVING GOD	81 WE KNOW THAT CHRIST IS RAISED
231 OVER MY HEAD	330 STAND UP! STAND UP FOR JESUS	245 WE LOVE THE PLACE, O GOD
233 PASS ME NOT	243 STANDING ON THE PROMISES	65 WE PLACE UPON YOUR TABLE, LORD
93 PEACE, TO SOOTHE OUR BITTER WOES	223 STARS OF THE MORNING, SO GLORIOUSLY BRIGHT	342 WE PLOW THE FIELDS AND SCATTER
94 PRAISE AND THANKS AND ADORATION	293 SWEET HOUR	162 WE PRAISE YOU, O GOD
36 PRAISE AND THANKSGIVING	125 TAKE MY LIFE AND LET IT BE	186 WE SHALL OVERCOME
70 PRAISE GOD FROM WHOM ALL BLESSINGS FLOW	235 TAKE MY LIFE AND LET IT BE	160 WE THREE KINGS
225 PRAISE GOD, FROM WHOLM ALL BLESSINGS FLOW	235 TAKE MY LIFE, THAT I MAY BE	185 WE'RE MARCHING TO ZION
156 PRAISE HIM! PRAISE HIM!	113 TAKE THOU OUR MINDS, DEAR LORD	333 WERE YOU THERE
169 PRAISE MY SOUL, THE KING OF HEAVEN	130 TAKE TIME TO BE HOLY	196 WE'VE A STORY TO TELL TO THE NATIONS
9 PRAISE THE LORD WHO REIGNS ABOVE	99 TAKE UP THY CROSS	281 WHAT A FELLOWSHIP, WHAT A JOY DIVINE
20 PRAISE THE LORD! O HEAVENS	84 TELL ME THE OLD, OLD STORY	50 WHAT A FRIEND WE HAVE IN JESUS
136 PRAISE THE LORD, YE HEAVENS	98 TELL THE GOOD NEWS	110 WHAT CHILD IS THIS
25 PRAISE THE ONE WHO BREAKS THE DARKNESS	294 THANKS TO GOD FOR MY REDEEMER	110 WHAT FEAST OF LOVE
211 PRAISE THE ONE WHO BREAKS THE DARKNESS	275 THE ADVENT OF OUR KING	182 WHAT GRACE IS MINE
180 PRAISE TO THE LORD, THE ALMIGHTY	61 THE BELLS OF CHRISTMAS	48 WHAT HOPE! AN EDEN PROPHESIED
94 PRAISE TO YOU AND ADORATION	328 THE CHURCH OF CHRIST, IN EVERY AGE	344 WHAT WONDROUS LOVE IS THIS
89 PRAISE YE THE FATHER	19 THE CHURCH'S ONE FOUNDATION	341 WHEN CHRISTMAS MORN IS DAWNING
89 PRAISE YE THE TRIUNE GOD	78 THE DAY OF RESURRECTION	115 WHEN I SURVEY THE WONDROUS CROSS
240 PRAISE, MY SOUL, THE GOD OF HEAVEN	165 THE DAY OF RESURRECTION	81 WHEN IN OUR MUSIC GOD IS GLORIFIED
240 PRAISE, MY SOUL, THE KING OF HEAVEN	265 THE DAY YOU GAVE US, LORD, HAS ENDED	170 WHEN MORNING GILDS THE SKIES
241 PRECIOUS LORD, TAKE MY HAND	300 THE FATHER'S HOUSE IS OUR DELIGHT	5 WHEN PEACE LIKE A RIVER
28 PREPARE THE ROYAL HIGHWAY	301 THE FIRST NOEL	335 WHEN THE SAINTS GO MARCHING IN
203 PRESERVE YOUR WORD, O SAVIOR	172 THE GOD OF ABR'HAM PRAISE	336 WHEN THE STORMS OF LIFE ARE RAGING
249 REDEEMED	272 THE HEAD THAT ONCE WAS CROWNED	39 WHEN TO OUR WORLD THE SAVIOR CAME
57 REJOICE THE LORD IS KING	255 THE INFANT PRIEST WAS HOLY BORN	316 WHERE CHARITY AND LOVE PREVAIL
171 REJOICE, FOR CHRIST IS KING!	340 THE JORDAN'S RIVER CAME OUR LORD	99 WHERE CROSS THE CROWDED WAYS OF LIFE
186 REJOICE, O PILGRIM THRONG	266 THE KING OF LOVE MY SHEPHERD IS	151 WHO ARE YOU WHO WALK IN SORROW
339 REJOICE, REJOICE THIS HAPPY MORN	48 THE KING SHALL COME	198 WITH HIGH DELIGHT LET US UNITE
112 REJOICE, REJOICE, BELIEVERS	98 THE KING SHALL COME WHEN MORNING DAWNS	92 WITHIN THE FATHER'S HOUSE
322 REJOICE, YE PURE IN HEART	302 THE LORD IN ZION REIGNETH	343 WONDERFUL GRACE OF JESUS
186 REJOICE, YE PURE IN HEART!	54 THE LORD IS MY SHEPHERD	346 WONDERFUL WORDS OF LIFE
275 REMEMBER AND REJOICE	216 THE LORD, MY GOD, BE PRAISED	318 WORSHIP THE LORD
254 REVIVE US O LORD	35 THE LORD'S MY SHEPHERD	220 YE SONS AND DAUGHTERS, LET US SING
340 RISE ON, RIDE ON IN MAJESTY	181 THE PEOPLE THAT IN DARKNESS SAT	168 YE WATCHERS AND YE HOLY ONES
87 RISE UP, O SAINTS OF GOD!	23 THE SPIRIT SENDS US FORTH TO SERVE	349 YIELD NOT TO TEMPTATION
326 RISE! TO ARMS! WITH PRAYER EMPLOY YOU	41 THE SPIRIT SENDS US FORTH TO SERVE	73 YOU ARE THE WAY
9 RISE, MY SOUL, AND STRETCH THY WINGS	207 THE STAR-SPANGLED BANNER	297 YOU PRAISE YOU AND ACKNOWLEDGE YOU
308 ROCK OF AGES, CLEFT FOR ME	303 THERE IS A GLORIOUS LAND	184 YOU SERVANTS OF GOD
259 SAFE THROUGH ANOTHER WEEK	319 THERE IS A LAND OF PURE DELIGHT	161 YOUR HAND, O LORD, IN DAYS OF OLD
217 SAVIOR OF THE NATIONS, COME	239 THERE IS POWER IN THE BLOOD	126 YOUR LITTLE ONES, DEAR LORD

Saving and Loading Settings on USB Drive

Formatting USB Drive

The process of preparing USB drive for use by the organ is called "Formatting."

If the USB drive is not in the correct format for the organ, it cannot be used by the organ.

⚠ Before you use USB drive for the first time with the organ, you must format the USB drive on the organ.

⚠ When you format USB drive, all songs or settings that have been stored on that USB drive will be lost. Once they're erased, the songs cannot be recovered, so be sure to check the contents before you execute formatting.

1. Connect your USB drive to the USB drive port.
2. From the main screen, press the [MENU/SELECT] knob.
3. Turn the [MENU/SELECT] knob to select "Save/Load (USB)."
4. Press the [MENU/SELECT] knob to access the "Save/Load (USB)" screen.
5. Turn the [MENU/SELECT] knob to select "Format USB Memory."
6. Press the [MENU/SELECT] knob.
A confirmation screen will appear.
If you decide to cancel the format operation, press the [EXIT MENU/VALUE] knob.
7. Press the [SET] piston to execute formatting.

NOTE

⚠ Never disconnect the USB drive before formatting has been completed. Always wait until the "Executing" indication is no longer shown.

8. Press the [EXIT MENU/VALUE] knob to return to the main screen.

Deleting a Memory Level from USB Drive

1. Connect your USB drive to the USB drive port.
2. Select the desired Folder. (refer to "USB Memory", p. 26).
3. Turn the [MENU/SELECT] knob to select "Save/Load (USB)."
4. Press the [MENU/SELECT] knob to access the "Save/Load (USB)" screen.
5. Turn the [MENU/SELECT] knob to select "Delete Memory Bank."
6. Press the [MENU/SELECT] knob to access the "Delete Memory Bank" screen.
7. At "Delete Bank" turn the [EXIT MENU/VALUE] knob to select the memory level you want to delete.
8. Press the [SET] piston to delete the settings.
9. Press the [SET] piston; the sound settings (registration) will be deleted.

NOTE

⚠ Never disconnect the USB drive or turn off the power before the sound settings have been deleted.

Copying a Memory Level (Bank)

Here's how a specific memory level (bank) saved in internal memory or USB drive can be copied to another bank of the organ's internal memory.

You can also return a specific bank of the organ's internal memory to the factory-set state.

As an example, we'll show how to load a specific memory bank from USB drive into the organ's internal memory.

1. As a precaution, save the internal memory levels to USB drive. Refer to "Using Memory Levels" (p. 22).
When doing so, choose a number that indicates (Empty).
2. Connect your USB drive to the USB drive port.
3. From the main screen, press the [MENU/SELECT] knob.
4. Turn the [MENU/SELECT] knob to select "Save/Load (USB)."
5. Press the [MENU/SELECT] knob to access the "Save/Load (USB)" screen.
6. Turn the [MENU/SELECT] knob to select "Copy Memory Bank."
7. Press the [MENU/SELECT] knob to access the "Copy Memory Bank" screen.
8. Turn the [MENU/SELECT] knob to select "Copy from," and turn the [EXIT MENU/VALUE] knob to change to "USB."
Select the "Copy from" setting as appropriate.

Setting	Explanation
INTERNAL	Copy the specified internal bank to another bank
USB	From the memory banks saved on USB drive, load only the specified bank into internal memory

9. Turn the [MENU/SELECT] knob to select the "Copy From Bank" field, and turn the [EXIT MENU/VALUE] knob to select the memory bank that you want to copy.
10. Turn the [MENU/SELECT] knob to select the "Copy to INT Bank" field, and turn the [EXIT MENU/VALUE] knob to select the desired copy-destination bank number.
11. Press the [SET] piston.
A confirmation screen will appear.
If you decide to cancel, press the [EXIT MENU/VALUE] knob.
12. Press the [SET] piston; the memory level will be copied.

Saving and Loading Voice Setup

NOTE

⚠ This procedure is usually performed by an authorized Rodgers representative.

A "Voice Setup" contains voicing data that specifies the volume balance of each sound (stop), its brightness, and various adjustments for parameters.

Saving to USB Drive

1. Connect your USB drive to the USB drive port.
2. From the main screen, press the [MENU/SELECT] knob.
3. Turn the [MENU/SELECT] knob to select "Save/Load (USB)."
4. Press the [MENU/SELECT] knob to access the "Save/Load (USB)" screen.
5. Turn the [MENU/SELECT] knob to select "Save Voice Setup."
6. Press the [MENU/SELECT] knob to access the "Save Voice Setup" screen.
7. Turn the [MENU/SELECT] knob to select the "Name" field, and press the [MENU/SELECT] knob to assign a name to the voice setup you want to save.
For details on how to assign a name, refer to "Naming a Saved Song" (p. 35).
8. Turn the [MENU/SELECT] knob to select the "No." field, and turn the [EXIT MENU/VALUE] knob to choose the desired save-destination number.
If you don't want to overwrite an existing voice setup, choose a save destination that's indicated as "Empty."
If you decide to cancel, press the [EXIT MENU/VALUE] knob.
9. Press the [SET] piston.
The currently used voice setup will be saved to USB drive.

NOTE

⚠ To prevent malfunction, never disconnect the USB drive or turn off the power while a voice setup is being saved to USB drive.

Loading a Voice Setup

1. If you want to load a voice setup from USB drive, connect your USB drive to the USB drive port.
2. From the main screen, press the [MENU/SELECT] knob.
3. Turn the [MENU/SELECT] knob to select "Save/Load (USB)."
4. Press the [MENU/SELECT] knob to access the "Save/Load (USB)" screen.
5. Turn the [MENU/SELECT] knob to select "Load Voice Setup."
6. Press the [MENU/SELECT] knob to access the "Load Voice Setup" screen.
7. Turn the [EXIT MENU/VALUE] knob to select the name of the voice setup that you want to use.
8. Press the [SET] piston.

A confirmation screen will appear.

If you decide to cancel, press the [EXIT MENU/VALUE] knob.

9. Press the [SET] piston.

The organ's voice setup will switch to the voice setup you loaded.

⚠ This setting will return to the default value when you turn off the power, but you can store the setting so that it will be remembered even after the power is turned off. For details, refer to "Storing Your Settings (Customize)" (p. 25).

NOTE

⚠ To prevent malfunction, never turn off the power while the voice setup is being switched.

Deleting a Voice Setup

1. If you want to deleting a voice setup from USB drive, connect your USB drive to the USB drive port.
2. From the main screen, press the [MENU/SELECT] knob.
3. Turn the [MENU/SELECT] knob to select "Save/Load (USB)."
4. Press the [MENU/SELECT] knob to access the "Save/Load (USB)" screen.
5. Turn the [MENU/SELECT] knob to select "Delete Voice Setup."
6. Press the [MENU/SELECT] knob to access the "Delete Voice Setup" screen.
7. Turn the [MENU/SELECT] knob to select "No." field, and turn the [EXIT MENU/VALUE] knob to select the voice setup that you want to delete.
8. Press the [SET] piston.
A confirmation screen will appear.
If you decide to cancel, press the [EXIT MENU/VALUE] knob.
9. Press the [SET] piston; the voice setup will be deleted.

NOTE

⚠ Never disconnect the USB drive or turn off the power until the voice setup have been deleted.

Reset Procedures

Returning Settings to the Factory Default State

Some settings stored in the organ can be reset to their factory-set condition.

1. From the main screen, press the [MENU/SELECT] knob.
2. Turn the [MENU/SELECT] knob to select "Utility."
3. Press the [MENU/SELECT] knob to access the "Utility" screen.
4. Turn the [MENU/SELECT] knob to select "Reset Procedure."
5. Press the [MENU/SELECT] knob.
If you decide to cancel, press the [EXIT MENU/VALUE] knob.
6. Rotate the [MANU/SELECT] knob to select one of the following:
Factory CRESCENDO
Factory M01 (Factory piston registrations on M01)
Factory M02-50 (Clear Memory Levels 2-50)
Factory DEFAULT STOPS
Factory SYSTEM
7. Press the [MENU/SELECT] knob to initiate the reset.
8. Press the [EXIT MENU/VALUE] knob to exit the menu.

Backing Up/Loading Data

Here's how to back up and load data. This is usually done by an authorized Rodgers representative.

1. Connect your USB drive to the USB drive port.
2. From the main screen, press the [MENU/SELECT] knob.
3. Turn the [MENU/SELECT] knob to select "Utility."
4. Press the [MENU/SELECT] knob to access the "Utility" screen.
5. Turn the [MENU/SELECT] knob to select "Backup/Restore."
6. Press the [MENU/SELECT] knob to access the "Backup/Restore" screen.
7. Turn the [MENU/SELECT] knob to select "Direction," then turn the [EXIT MENU/VALUE] knob to select either backup or load.

Setting	Explanation
BACK UP	Selected to back up data.
RESTORE	Selected to load data.

8. Press the [SET] piston to carry out the data backup or load procedure.

If you decide to cancel, press the [EXIT MENU/VALUE] knob.

Displaying the Version

Here's how to check the software version being used.

1. From the main screen, press the [MENU/SELECT] knob.
2. Turn the [MENU/SELECT] knob to select "Utility."
3. Press the [MENU/SELECT] knob to access the "Utility" screen.
4. Turn the [MENU/SELECT] knob to select "Version."
5. Press the [MENU/SELECT] knob to access the "Version" screen.

List of Shortcuts

By using these shortcuts you can directly access a desired screen without going through a menu screen.

To access the screen	Shortcut	
Save confirmation screen		Press the general cancel piston [0]
Console screen	While holding the [SET] piston...	Press the bass coupler [BASS] piston or Press the melody coupler [MEL] piston

⚠ All shortcut operations must be performed from the main screen.

Specifications

Keyboards	
Manual	3 x 61 keys
Pedal	32 keys (AGO standard radial concave)
Stops	
351 D (Drawknob) 351 T (Tab)	51 stops / 323 total voices. 4 unique organ styles + Stop Library. 147 Voice Palette™ voices, 89 organ stops in Stop Library, 37 orchestral voices in Orchestral Library.
Coupplers	
Manual Couplers	Great to Pedal, Swell to Pedal, Choir to Pedal, Swell to Great, Choir to Great, Swell to Choir
Melody Couplers	2 (MEL SW, MEL CH)
Bass Coupler	1 (BASS)
Tremulants	
Great, Swell, Choir	Total 3
FLT TREM ALT	1
Pistons	
SET	1
General Pistons	10
Toe Pistons	10 (+4 optional, total 14)
Great divisional pistons	5
Swell divisional pistons	5
Choir divisional pistons	5
M+, M-, M1	1 each (memory level)
STOP, PLAY/PAUSE, REC	1 each (song recorder)
0	1 (General cancel)
Chimes	1 (chimes voice played on the Great manual)
Zimbelstern	1
Hymn Player	1
Organ Type	1
Transpose +	1
Transpose -	1
FULL ORGAN	1
INT AUDIO OFF	1
PIPS OFF	1
ANC ON	1
MAIN OFF	1
ANT ON	1
ALL EXPR SW	1
GT/PD UNENCL	1
Effects	
True Sound Space	12 real reverb environments
Controls	
	[MENU] knob [EXIT MENU/VALUE] knob [VOLUME] knob [REVERB] knob
Tuning Functions	
Key Transpose	-6 to +5 (semitone steps)
Temperament	9 types (Equal, Werckmeister III, Kirnberger II/III, Vallotti, Meantone D#/Eb, Pythagorean, Modern Bach)
Pitch	4 types (Versailles: 392 Hz, Baroque: 415 Hz, Modern: 440 Hz, Venetian: 465 Hz)

Song Recorder	
Tracks	1
Piston	STOP, PLAY/PAUSE, REC
Tempo	Quarter note = 20 to 240
File Storage	
Media	USB drive
Shoes	
Expression Shoes	2
Crescendo Shoe	1
Kick Switch	1
Speakers*	
Subwoofer	1 x 27 cm, 16 Ohms, Dual Voice Coils, 8 Ohms each
Fullrange driver	2 x coaxial 16.5 cm + 24mm, 8 Ohms
External speakers*	4-8 Ohms
*External speakers are to be installed by qualified personnel only. For internal connection of external (optional) loudspeaker, consult with the retailer from whom the instrument was purchased, or contact Rodgers Instruments.	
Connectors	
	6.5 mm Phones jack (Stereo) 6.5 mm Output jacks (L/Mono, R - balanced) 6.5 mm Input jacks (L/Mono, R - balanced) MIDI connectors (In, Out) USB connector (USB drive port) Satellite Speaker (Optional Dedicated Connector) 3x D-Sub Connectors for multichannel external amplifiers Fixed AC cable with connector
Power Consumption	
190W nominal power; 80W idle Mode	
Supply Voltage Tolerance	
100V, 220V & 230V: +/- 10%. 120V & 240V: +/- 10%.	
Operational Ambient Temperature Range	
32-113° F (0-45° C).	
Cabinet Finishes	
Dark, Medium, or Light Oak finishes standard; custom finishes optional.	
Console Dimensions	
Height without music rest	49.07" (1246.3 mm)
Height with music rest	59.49" (1511.0 mm)
Width	63.98" (1625.0 mm)
Depth without pedals	30.31" (770.0 mm)
Depth with Pedalboard	47.58" (1208.6 mm)
Weights	
Console	351 T: 406 lbs (184.2 kg) 351 D: 411 lbs (186.4 kg)
Bench	46.3 lbs (21 kg)
Pedalboard	79.4 lbs (36 kg)
Total Weight	351 T: 531.7 lbs (241.2 kg) 351 D: 536.7 lbs (243.4 kg)

In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

Please note that the actual dimensions and weight may differ slightly from this specification due to the woodwork.

For EU Countries



This product complies with the requirements of EMCD 2014/30/EU and LVD 2014/35/EU.

For the USA



Supplier's Declaration of Conformity (SDoC, according to: 47 CFR Section 2.906)

TRADE NAME: Rodgers Instruments US LLC

MODEL IDENTIFICATION OF PRODUCT: Imagine 351D and Imagine 351T

APPLICABLE COMPLIANCE STATEMENTS: §15.19(a)(3)

RESPONSIBLE PARTY (IN USA) NAME: Rodgers Instruments US LLC

ADDRESS: 8117 NE Jacobson Street, Building 7, Suite D-200, Hillsboro, OR 97124

TELEPHONE: 503-648-4181

or INTERNET CONTACT INFORMATION: <http://www.rodgersinstruments.com>

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules as documented for identified product above. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and then on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment referenced in this declaration is identical to the unit tested and found acceptable with the standards. The technical records maintained by the responsible party continue to reflect the equipment being produced under this Declaration of Conformity within the variation that can be expected due to quantity production and testing on a statistical basis.

This equipment requires shielded interface cables in order to meet FCC class B limit. Any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

For Canada

NOTICE

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

AVIS

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

For C.A. US (Proposition 65)

WARNING

This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

有关产品中所含有害物质的说明

本资料就本公司产品中所含的特定有害物质及其安全性予以说明。

本资料适用于2007年3月1日以后本公司所制造的产品。

环保使用期限



此标志适用于在中国国内销售的电子信息产品，表示环保使用期限的年数。所谓环保使用期限是指在自制造日起的规定期限内，产品中所含的有害物质不致引起环境污染，不会对人身、财产造成严重的不良影响。

环保使用期限仅在遵照产品使用说明书，正确使用产品的条件下才有效。

不当的使用，将会导致有害物质泄漏的危险。

产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
外壳(壳体)	×	○	○	○	○	○
电子部件(印刷电路板等)	×	○	×	○	○	○
附件(电源线、交流适配器等)	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

因根据现有的技术水平，还没有什么物质能够代替它。

For EU Countries



UK This symbol indicates that in EU countries, this product must be collected separately from household waste, as defined in each region. Products bearing this symbol must not be discarded together with household waste.

DE Dieses Symbol bedeutet, dass dieses Produkt in EU-Ländern getrennt vom Hausmüll gesammelt werden muss gemäß den regionalen Bestimmungen. Mit diesem Symbol gekennzeichnete Produkte dürfen nicht zusammen mit den Hausmüll entsorgt werden.

FR Ce symbole indique que dans les pays de l'Union européenne, ce produit doit être collecté séparément des ordures ménagères selon les directives en vigueur dans chacun de ces pays. Les produits portant ce symbole ne doivent pas être mis au rebut avec les ordures ménagères.

IT Questo simbolo indica che nei paesi della Comunità europea questo prodotto deve essere smaltito separatamente dai normali rifiuti domestici, secondo la legislazione in vigore in ciascun paese. I prodotti che riportano questo simbolo non devono essere smaltiti insieme ai rifiuti domestici. Ai sensi dell'art. 13 del D.Lgs. 25 luglio 2005 n. 151.

ES Este símbolo indica que en los países de la Unión Europea este producto debe recogerse aparte de los residuos domésticos, tal como esté regulado en cada zona. Los productos con este símbolo no se deben depositar con los residuos domésticos.

PT Este símbolo indica que nos países da UE, a recolha deste produto deverá ser feita separadamente do lixo doméstico, de acordo com os regulamentos de cada região. Os produtos que apresentem este símbolo não deverão ser eliminados juntamente com o lixo doméstico.

NL Dit symbool geeft aan dat in landen van de EU dit product gescheiden van huishoudelijk afval moet worden aangeboden, zoals bepaald per gemeente of regio. Producten die van dit symbool zijn voorzien, mogen niet samen met huishoudelijk afval worden verwijderd.

DK Dette symbol angiver, at i EU-lande skal dette produkt opsamles adskilt fra husholdningsaffald, som definerer i hver enkelt region. Produkter med dette symbol må ikke smides ud sammen med husholdningsaffald.

NO Dette symbolet indikerer at produktet må behandles som spesialavfall i EU-land, iht. til retningslinjer for den enkelte regionen, og ikke kastes sammen med vanlig husholdningsavfall. Produkter som er merket med dette symbolet, må ikke kastes sammen med vanlig husholdningsavfall. Apparatet må tilkopes jordet stikkontakt.

SE Symbolen anger att i EU-länder måste den här produkten kasseras separat från hushållsavfall, i enlighet med varje regions bestämmelser. Produkter med den här symbolen får inte kasseras tillsammans med hushållsavfall. Apparaten skall anslutas till jordat uttag.

FI Tämä merkintä ilmäsee, että tuote on EU-maissa kerätävä erillään kotitalousjätteistä kunkin alueen voimassa olevien määärysten mukaisesti. Tällä merkinnällä varustettuja tuotteita ei saa hävittää kotitalousjätteiden mukana. Laite on liitetävä suojaoskettimilla varustettuun pistorasiaan.

HU Ez a szimbólum azt jelenti, hogy az Európai Unióban ezt a terméket a háztartási hulladékoltó elkölnöítve, az adott régióban érvényes szabályozás szerint kell gyűjteni. Az ezzel a szimbólummal ellátott termékekkel nem szabad a háztartási hulladék közé dobni.

PL Symbol oznacza, że zgodnie z regulacjami w odpowiednim regionie, w krajach UE produktu nie należy wyrzucać z odpadami domowymi. Produktów opatrzonych tym symbolem nie można utylizować razem z odpadami domowymi.

CZ Tento symbol udává, že v zemích EU musí být tento výrobek sbírána odděleně od domácího odpadu, jak je určeno pro každý region. Výrobky nesoucí tento symbol se nesmí vyhazovat spolu s domácím odpadem.

SK Tento symbol vyjadruje, že v krajinách EÚ sa musí zberať tohto produktu vykonávať oddelenie od domového odpadu, podľa nariadení platných v konkrétnej krajine. Produkty s týmto symbolom sa nesmú vyhadzovať spolu s domovým odpadom.

EE See sümbol näitab, et EL-i maades tuleb see toode olempriügist eraldi koguda, nii nagu on igas piirkonnas määratletud. Selle sümboliga märgitud tooteid ei tohi ära visata koos olmeprügiga.

LT Šis simbolis rodo, kad ES šalyse šis produktas turi būti surenkaamas atskirai nuo buitininių atliekų, kaip nustatyta kiekviename regione. Šiuo simboliu paženklinti produktai neturi būti išmetami kartu su buitinėmis atliekomis.

LV Šis simbols norāda, ka ES valstīs šo produktu jāievāc atsevišķi no mājsaimniecības atrkritumiem, kā noteikts katrā reģionā. Produktus ar šo simbolu nedrīkst izmest kopā ar mājsaimniecības atrkritumiem.

SI Ta simbol označuje, da je treba proizvod v državah EU zbirati ločeno od gospodinjskih odpadkov, tako kot je določeno v vsaki regiji. Proizvoda s tem znakom ni dovoljeno odlagati skupaj z gospodinjskimi odpadki.

GR To σύμβολο αυτό υποδηλώνει ότι στις χώρες της Ε.Ε. το συγκεκριμένο προϊόν πρέπει να συλλέγεται χωριστά από τα υπόλοιπα οικιακά απορρίμματα, σύμφωνα με όσα προβλέπονται σε κάθε περιοχή. Τα προϊόντα που φέρουν το συγκεκριμένο σύμβολο δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα.

LIMITED WARRANTY

Rodgers Instruments US LLC Musical Instrument

Rodgers Instruments US LLC warrants only to the original Purchaser of this product that all the parts contained in this product will be free from defects in materials and/or workmanship for a period of ten (10) years*. Any repaired or replaced parts in your product will be warranted for the unexpired portion of this parts warranty.

* Warranty activates one (1) year after Authorized Dealer's purchase if product has not been sold. It is the dealer's responsibility to convey the time remaining on the warranty when it sells to the original Purchaser. It is the Authorized Dealer's responsibility to register this product online at www.rodgersinstruments.com/warranty to complete the warranty process for After-Sales support and warranty coverage. Without warranty registration, coverage is not guaranteed for any timeframe. In addition to warranty registration, original purchaser needs to have original proof of purchase for warranty coverage. All transportation and freight charges shall be paid by Purchaser. Rodgers Instruments US LLC is not responsible for any labor for this product.

Conditions, Limitations and Restrictions of this Warranty

The Warranty for this product does not apply to the following:

- A. Any product that was not purchased directly from an Authorized Rodgers Dealer;
- B. Any defects or damage that occurred as a result of abuse or misuse, neglect or abnormal service or handling;
- C. Any defects or damage that was caused by installation, repairs or service, including the use of improper parts, provided or attempted by anyone who is not authorized by Rodgers Instruments US LLC;
- D. Any defects or damage that may have been caused, either directly or indirectly, by the use of another product;
- E. Any defects or damage that occurred because the product has been altered or modified in any way;
- F. Any defects or damages which may have been caused by an Act of God, such as fire, flood, earthquake, lightning, rain, wind, hurricane, etc., which are beyond the control of Rodgers Instruments US LLC;
- G. Any defects or damages which may have occurred by ordinary wear and tear;
- H. Any and all accessories and other equipment;
- I. Any defects or damage that resulted from commercial use of the product.
- J. Peripheral parts (speakers, amplifiers, etc.) have a five (5) year warranty from purchase date.

IN NO EVENT SHALL RODGERS INSTRUMENTS US LLC BE LIABLE FOR ANY DIRECT, INCIDENTAL, COLLATERAL, EXEMPLARY, PUNITIVE, CONSEQUENTIAL OR SPECIAL DAMAGES OR LOSSES ARISING OUT OF YOUR PURCHASE OF THIS PRODUCT AND/OR OUT OF THIS WARRANTY, INCLUDING WITHOUT LIMITATION, LOSS OF USE, PROFITS, GOODWILL OR SAVINGS OR LOSS OF DATA, MUSIC, ELECTRONIC FILES, OR PROGRAMS THAT MAY HAVE BEEN STORED BY A USER OF THIS PRODUCT EVEN IF RODGERS INSTRUMENTS US LLC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR CLAIMS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Where applicable, if you qualify as a "consumer" under the Magnuson-Moss Warranty Act, then you shall be entitled to any implied warranties allowed by law for the period of the Limited Warranty as set forth above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. EXCEPT AS STATED ABOVE, THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER CONDITIONS OR WARRANTIES, EXPRESS, IMPLIED OR STATUTORY INCLUDING WITHOUT LIMITATION, AN IMPLIED CONDITION OR WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND OF ANY OTHER WARRANTY OBLIGATION ON THE PART OF RODGERS INSTRUMENTS US LLC. RODGERS INSTRUMENTS US LLC DOES NOT ASSUME OR AUTHORIZE ASSUMPTION OF LIABILITY FOR IT OR ANY OTHER WARRANTY, EITHER EXPRESS OR IMPLIED. THIS LIMITED WARRANTY GIVES U.S. PURCHASERS SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

RODGERS

RODGERS INSTRUMENTS US LLC
8117 NE Jacobson Street, Building 7, Suite D-200, Hillsboro, OR, 97124
503.648.4181
www.rodgersinstruments.com

DEDICATED TO MOVING HEARTS AND SOULS

Since 1958, Rodgers has been committed to heightening the spiritual experience of audiences with the transformational power of music. Rodgers organs not only capture the essence of American pipe organ sound, they have led the way in making organs more accessible to places of worship, universities, music schools, and enthusiasts around the world.

RODGERS INSTRUMENTS US LLC

8117 NE Jacobson Street, Building 7, Suite D-200, Hillsboro, OR 97124

PHONE 503.648.4181 **WEB** rodgersinstruments.com

A MEMBER OF THE
Global Organ Group