

2006-09 Volkswagen Jetta

About the Vehicle

Make: Volkswagen
Model: Jetta
Year: 2006-09

Standard/Optional

10-Speaker System
CD Player
MP3 Compatible
Navigation System
In-Dash 6 Disc Changer
XM or Sirius Satellite Radio

In Dash Application

Dash Type : Double Din
Aftermarket Type: Single/Double Din
Kit: VW2317B
Harness: VW03B
Antenna Adapter: VWA-4B

Wire Color Codes

Type: Standard Audio System Location: At Speakers

+12v Constant = Red/Yellow

+12v Acc. Switch = N/A

-12v Chassis Ground= Brown

+12v Illumination = N/A

+12v Dimmer =

Antenna/ Amp Remote = N/A

Can-Bus = Orange/Violet

LF+ = Green

LF- = Yellow

RF+ = Blue

RF- = Brown

LR+ = White

LR- = Brown

RR+ = Yellow

RR- = Brown



SCOSCHE®

Speaker Notes

Front Speaker Sizes

Upper Door: 1" Tweeter

Mid Door: 4" Midrange

Lower Door: 6 1/2" Midbass

Speaker Adapter: SAVW6

Speaker Harness: TBA

Factory Assembly: Midrange-4 T-20 Torx securing it to door panel. Midbass-Riveted.

Dimensions:

W=

L=

D=

NOTES

Rear Speaker Sizes

Upper Door: 1" Tweeter

Lower Door: 6 1/2" Midrange

Speaker Adapter: SAVW6

Speaker Harness: TBA

Factory Assembly: Door Speaker-rivited.

Tweeter secured to door panel.

Dimensions:

W=

L=

D=

NOTES

2006-09 Volkswagen Jetta

SCOSCHE®

Recommended: Disconnect negative battery cable

Radio removal

1. Using a PRT carefully place in between the crack that separates the upper vent panel from the lower bezel that surround the radio.
2. Once the PRT is placed in the proper position push in an upward position to unsnap vent panel from lower bezel. The vent panel does not have to be completely removed.
3. This will expose two T20 torx head screws, Extract the two screws.
4. Using a PRT Unsnap lower bezel surrounding the radio.
5. Extract 4 T20 torx screws securing radio. Lift away, disconnect and remove.

Front Speakers

Front Door

1. Extract 4 T20 torx head screws surrounding door panel 3 on the lower half and 1 on the edge of the door panel next to the tweeter.
2. Unsnap the lower portion of the door handle using a PRT and extract 2 T27 torx head screws.
3. Using a PRT unsnap the perimeter of the door panel. Lift away disconnect and remove.
4. Extract 1 T20 torx head screw securing tweeter pod to door. Using a PRT unsnap the rest of the pod to remove.
5. Midrange is securing to door panel by 4 T20 torx head screws.
6. Midbass is riveted to door.

Rear Speakers

Rear Door

1. Extract 1 T20 torx head screws located at lower part of door panel.
2. Using PRT unsnap lower half of door handle, Extract 2 T27 torx head screws from behind.
3. Using PRT unsnap perimeter of door panel. Lift up and away, then disconnect, and remove.
4. Door speaker is riveted to door.
5. Tweeter is mounted to door panel.

Images

Radio



Front Speakers



Rear Speakers

