

WARRANTY CARD

Customer name	Name
Address	Date
Product name	
Purchase date	
Serial number	
Phone number	
Product model	
Accessories	

1. This warranty card user, please safeguard, for maintenance certificate;
 2. The product warranty 1 year from the date of purchase;
 3. Warranty equipment during the maintenance period, in the case of normal use and maintenance. The malfunction of the machine itself function problems, as is true, our company provide free maintenance service;
 4. during the warranty period, the following items, the company shall have the right to refuse service Or a service charge of materials, as appropriate:
 1) will not be able to provide this guarantee and effective purchase vouchers;
 2) users that caused by improper use of product failure and damage;
 3) artificial abnormal external force damage;
 4) than our maintenance service is authorized by the repairing damage;
 5) natural disaster or other force majeure factors causing malfunction and damage;
 6) other artificial intentionally damage;
 7) the company reserves the rights of modification and interpretation of all content.

11

**TRUE WIRELESS STEREO
USER MANUAL**

CORRECT DISPOSAL OF THIS PRODUCT

(Waste Electrical & Electronic Equipment)
 The Marking shown on the product or its literature indicate that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

10

PACKING LIST

1

RESET

fast clip X6

Take single earbud from charge case. In pairing mode and don't connect any device, quick click 6 consecutive MFB, when see blue lighting, for 3 seconds, reset successfully, one by one reset.

CHARGING COMPARTMENT INDICATOR

● ● ● ●	0%-25%
○ ● ● ●	25%-50%
○ ○ ● ●	50%-75%
○ ○ ○ ●	75%-100%

Less than 5% LED1 flashes

7

POWER OFF

Mode 1

Put the earphones back in the charging case and close the case to turn them off.

Mode 2

Hold on 5s

If the earphones are not in the charging case, just press and hold the MFB of either earbud for 5 seconds to power them off.

4

PAIRING

LED lights up
Red White
Voice prompt pairing
"F100"

Open the charging case, they will automatically enter the pairing mode in which LED light flashes red and white alternately, and then select "F100".

TWS headphones	No fixed master-slave, master-slave automatic switch, any connection phone mainly depends.
Bluetooth headset	Support connected bluetooth devices and supports the double channel stereo Hi-Fi music playing.
Ear phone	Support the TWS ears
Power indicator	Support iOS and part of the android mobile phone battery indicator Suggestion: A long time not to use this production, charging case need to be charged every 3 months.

5

TOUCH CONTROL

- Play/pause:** Double click right earbud.
- Previous Track:** Hold the left side for 1 second, then release.
- Next Track:** hold the right side for 1 second, then release.
- Volume up:** single click on the right earbud.
- Volume down:** single click on the left earbud.
- Answer a phone call:** Click on either earbud;
- Reject a call:** Click & Hold 1 Second either earbud
- SIRI/Four Click:** Click on either earbud
- Environmental mode/Denise mode:** Three Click on either earbud.

6

FCC STATEMENT

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1) This device may not cause harmful interference.
 2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

FCC ID: 2AVTM-TT2109

9

DIAGRAM

LED light, Type-C charging port, Magnetic interface, MIC, LED light, MFB (Multifunction Buttons with Touch Sensors)

2

POWER ON

Mode 1

LED lights up
ON

Open the charging case. The red and white lights will flash alternately. The headset will automatically turn on and enter pairing mode.

Mode 2

Hold on 3s
LED lights up
ON

Long press MFB key for 5 seconds, the blue lights 1 second, headset automatically POWER ON.

3

SPICIFICATIONS

Bluetooth version: 5.1
 Charging interface: Type-C
 Power input: DC 5V
 Earbuds battery capacity: 40mAh/3.7V
 Music time: About 4 hours (80% volume)
 Support agreement: A2DP/AVCTP/AVDTP/SPP/HFP
 Talk time: 4-5 hours (80% volume)
 Charging time: about 1.5 hours
 Rechargeable battery box: 400 mAh/3.7 V

8

保修卡

尊敬的客户，感谢您购买我们的产品，为了能更好的为您服务，在购买产品后，请仔细阅读，填写并妥善保管好此保修卡。

客户名称	联系人
客户地址	联系电话
产品名称	产品型号
购买日期	出厂编号

保修说明

1. 本保修卡适用于本产品保修，以作保修凭证。
 2. 本产品由购买之日起保修。
 3. 保修期内发生故障，在正常使用和维护的情况下，机器本身出现任何故障，发生故障，经维修，本公司提供免费维修服务。
 4. 在保修期内，发生下列事项，本公司有权拒绝受理故障维修材料、服务券：
 1) 不能提供有效证明及保修凭证。
 2) 用户擅自不当而造成产品的损坏及报废。
 3) 人为损坏或正常磨损。
 4) 非我司授权的维修商或非指定维修站的。
 5) 购买时或维修时未向本公司提供详细故障现象及原因。
 6) 其他人人为损坏。
 7. 本公司保留对任何产品的修改权和解释权。

11

**真无线立体声
用户手册**

正确处理本产品

(废弃电器电子产品)
 产品或其说明书上显示的标志表明，在其使用寿命结束时，不应与其他生活垃圾一起处理。

为防止不受控制的废物处置可能对环境和人类健康造成危害，请您将本产品与其他类型的废物分开，并负责回收利用，以促进材料的可持续再利用。请通过产品及其系统或本产品的零售商或当地政府办公室，了解他们在哪里以及如何处理本产品于环保回收并符合规定。

商业用户应联系系统供应商提供回收产品的条款和条件。本产品不得与其他废物混合处置。

10

包装清单

1

FCC 声明

未经授权不得对设备进行任何更改或修改，因为未经授权可能导致用户操作设备的性能失效。

该设备符合 FCC 第 15 部分的要求。操作受以下两个条件限制：
 1) 此设备不得造成有害干扰。
 2) 此设备必须接受任何接收到的干扰，包括干扰可能会导致设备操作。

FCC 辐射暴露声明：

该设备符合 FCC 针对非受控环境规定的辐射暴露限值。

9

产品示意

LED 指示灯, Type-C 充电接口, 磁吸充电界面, 麦克风, LED 指示灯, 触控界面 (多功能触控按钮)

2

LED lights up
左指示灯 右指示灯

耳机电: 关闭充电仓时, 左右指示灯亮, 呼吸闪烁, 意味着两个耳机处于充电模式。
 备注: 当充电仓电量少于 5% 时, LED 灯闪烁 4 次后熄灭, 并且停止向耳机供电。

8

开机

状态 1

指示灯点亮
开启

打开充电仓, 耳机指示灯以红和白交替闪烁, 耳机将自动打开并进入配对模式。

状态 2

触控 5s
指示灯点亮
ON

长按耳机触控键 5 秒, 指示灯蓝光亮起 5 秒, 耳机将自动开机。

3

RESET

fast clip X6

Take single earbud from charge case. In pairing mode and don't connect any device, quick click 6 consecutive MFB, when see blue lighting, for 3 seconds, reset successfully, one by one reset.

CHARGING COMPARTMENT INDICATOR

● ● ● ●	0%-25%
○ ● ● ●	25%-50%
○ ○ ● ●	50%-75%
○ ○ ○ ●	75%-100%

Less than 5% LED1 flashes

7

POWER OFF

Mode 1

Put the earphones back in the charging case and close the case to turn them off.

Mode 2

Hold on 5s

If the earphones are not in the charging case, just press and hold the MFB of either earbud for 5 seconds to power them off.

4

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. Due to the product material, the FCC ID number cannot be marked, and the FCC ID number is printed on the charging box.

FCC ID: 2AVTM-TT2109

耳机重置

快速点击 X6

从充电仓中取出单个耳塞, 在配对模式下, 并且不连接任何设备, 快速点击触控键 6 次, 当 3 秒看到蓝色指示灯亮时, 重置成功。(耳机需要逐个重置)

充电及点亮指示

● ● ● ●	0%-25%
○ ● ● ●	25%-50%
○ ○ ● ●	50%-75%
○ ○ ○ ●	75%-100%

备注: 点亮 5 秒, LED 将会闪烁。

7

关机

状态 1

将耳机放回充电仓中, 盖上耳机盒, 耳机将会停止工作。

状态 2

触控 5s

如果耳机不在充电仓中, 只需按住任一耳塞的操作触控键 5 秒, 即可关闭耳机。

4

配对

指示灯点亮
红 白
语音提示: 配对
"F100"

打开充电仓, 耳机将自动进入配对模式, 耳机 LED 指示灯红白交替闪烁, 然后蓝牙选择 "F100" 配对名称。

无耳机	不需要主从, 非从自动切换, 任意连接手机的耳机为主耳机。
蓝牙连接	支持蓝牙设备并支持双声道立体声高质量音乐播放。
双耳通话	支持 TWS 双耳通话功能。
电量显示	支持 iOS 及部分安卓手机电量显示。

建议长时间不使用或每超过 3 个月给充电仓充电一次。

5

触摸控制

- 开始: 暂停: 双击右耳机。
- 上一曲: 按住左耳机一秒, 然后松开。
- 下一曲: 按住右耳机一秒, 然后松开。
- 音量: 单击右耳机。
- 音量: 单击左耳机。
- 接听电话: 单击左右任一耳机。
- 挂断电话: 双击左右任一耳机。
- 拒绝接听来电: 按住左右任一耳机一秒。
- 唤醒 Siri: 双击左右任一耳机。
- 通话模式: 降噪模式切换: 三击任一耳机。

6