


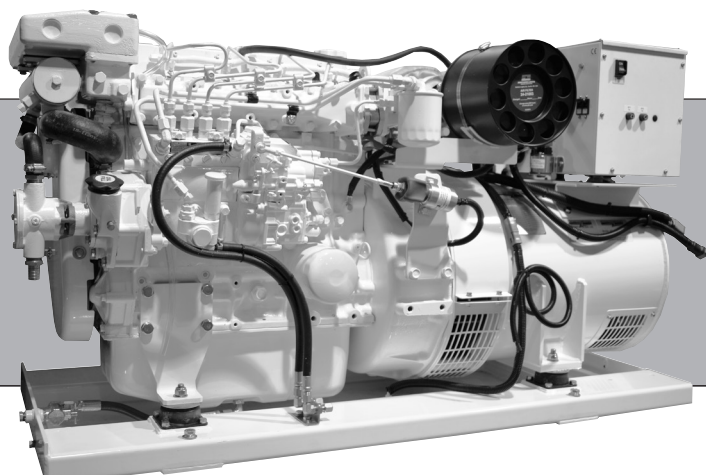

OPERATOR'S MANUAL

OM944F

For Models: M944W3, M944W3G, M944W3F,
M944W3FG, M944T3F, M944T3FG, M30CW3,
M30C3F and M38C3F



www.northern-lights.com



— CALIFORNIA —
Proposition 65 Warning:

Breathing Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

- * Always start and operate the engine in a well-ventilated area.
- * If in an enclosed area, vent the exhaust to the outside.
- * Do not modify or tamper with the exhaust system.
- * Do not idle the engine except as necessary.

For more information, go to www.P65warnings.ca.gov/diesel.

Northern Lights
4420 14th Avenue NW
Seattle, WA 98107
Tel: (206) 789-3880
Fax: (206) 782-5455

Copyright © 2021 Northern Lights, Inc.
All rights reserved. Northern Lights™, and
the Northern Lights logo are trademarks of
Northern Lights, Inc.

Printed in U.S.A.
PART NO.: OM944F 5/21



OPERATOR'S MANUAL

for Models

**M944W3, M944W3G, M944W3F, M944W3FG, M944T3F, M944T3FG,
M30CW3, M30C3F & M38C3F**

**Read this operator's manual thoroughly before starting to operate your equipment.
This manual contains information you will need to run and service your new unit.**

Table of Contents

INTRODUCTION	2
Unit Identification	2
Model Numbers	3
Serial Numbers	3
WARRANTY	4
SAFETY RULES	4 - 8
LOCK OUT / TAG OUT PROCEDURES	9
COMPONENT LOCATIONS	
M944W3 Generator Set	10 - 11
M944W3F Generator Set	12 - 13
M944W3FG Generator Set	14 - 15
CONTROL PANELS	16
OPERATING PROCEDURES	
Emissions Related Instructions	17
Break-in Period	17
Before Starting	17
Starting	18
Operating	18
Stopping	18
Shutdowns and Alarms	19
Spare Parts	19
SERVICING SCHEDULE CHART	20
SERVICING RECORD	21
SERVICING	
Lubrication - General	22
Checking Oil Level	22
Oil Changes	22

SERVICING (Cont.)

Changing Lube Oil Filter	23
Air Cleaner	23
V-Belts	23
Valve Clearances	24
Fuels - General	25
Primary Fuel Filter	25
Primary Fuel Filter Element	25
Secondary Fuel Filter	25
Bleeding the Fuel System	26
Injector Service	27
Injection Pump	28
Turbocharger	29
Cooling System - General	30
Check Coolant Level	30
Coolant System Flushing	30
Heat Exchanger	31
Raw Water Pump	31
Zinc Electrodes	31
Generator End	32
Electrical System - General	32
Booster Batteries	32
Battery Care	33
Winterizing / Out-of-Service	33

TROUBLESHOOTING

DC Electrical System	34
Engine	35 - 37

WIRING DIAGRAMS

AC Wiring	38 - 47
DC Wiring	48 - 67
Panel Wiring	68 - 71

APPENDIX (Non-Current Production Diagrams)

Panel Diagrams	72 - 80
----------------------	----------------

Proprietary Information

This publication is the property of Northern Lights, Inc.
It may not be reproduced in whole or in part without the written permission of Northern Lights, Inc.
© Northern Lights, Inc. All rights reserved. Litho U.S.A. Publication number OM944F • 5/21

Introduction

The servicing of marine engines and generator sets presents unique problems. In many cases, boats cannot be moved to a repair facility. Marine engines cannot be compared to the servicing of automobiles, trucks, or even farm equipment. Failures often occur in remote areas far from competent assistance. Marine engines are taxed far more severely than auto or truck engines; therefore, maintenance schedules must be adhered to

more strictly. Failures begin with minor problems that are overlooked and become amplified when not corrected during routine maintenance.

As operator, it is your obligation to learn about your equipment and its proper maintenance. This is not a comprehensive technical service manual. Nor will it make the reader into an expert mechanic. Its aim is to aid you in maintaining your unit properly.

Unit Identification


MODELS INCLUDED

This manual covers the operating instructions for:

- **M944W3, M944W3G, M944W3F AND M944W3FG** marine generator sets, using the 944 engine block.
- **M944T3F AND M944T3FG** turbocharged marine generator sets, using the 944 engine block.
- **M30CW3, M30C3F and M38C3F** commercial marine generator sets, using the 944 engine block.

Model Numbers

Model numbers are based on the unit's application, block model, aspiration, and kW:

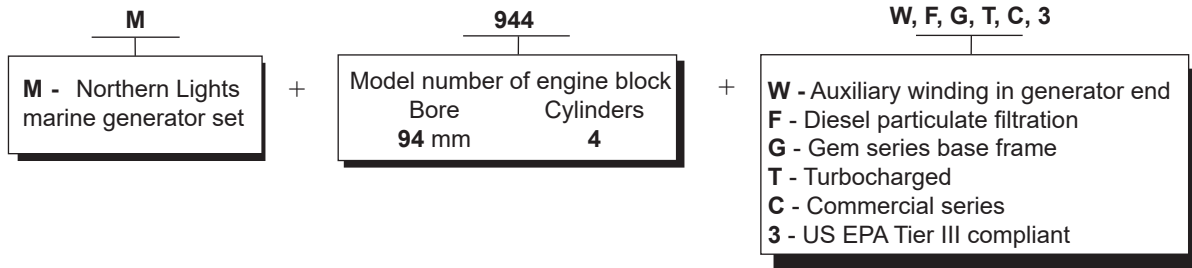

M944W3 = Northern Lights marine diesel generator set with a 944 engine and a PX-332K2 series generator end with auxiliary winding. US EPA Tier III.

M944W3G = Northern Lights marine diesel generator set with a 944 engine and a PX-332K2 series generator end with auxiliary winding on a Gem series base frame. US EPA Tier III.

M944W3F = Northern Lights marine diesel generator set with a 944 engine and a PX-300K2 series generator end with auxiliary winding. US EPA Tier III.

M944W3FG = Northern Lights marine diesel generator set with a 944 engine and a PX-300K2 series generator end with auxiliary winding on a Gem series base frame. US EPA Tier III.

M944T3F = Northern Lights turbocharged marine diesel generator set with a 944 engine and a PX-300K2 series generator end. US EPA Tier III.

M944T3FG = Northern Lights turbocharged marine diesel generator set with a 944 engine and a PX-300K2 series generator end with auxiliary winding on a Gem series base frame. US EPA Tier III.

M30CW3 = Northern Lights marine diesel generator set with a 944 engine and a PX-332K2 series generator end; commercial unit, 30 kW, Tier III.

M30C3F = Northern Lights commercial marine diesel generator set with a 944 engine and a PX-300K2 series generator end. US EPA Tier III.

M38C3F = Northern Lights commercial marine diesel generator set with a 944 engine and a Newage or MeccAlte series generator end. US EPA Tier III.

Serial Numbers

Figure 1:
Generator set
serial number
plate.



Your set has three serial numbers: ① an engine number stamped on a plate attached to the valve cover, ② a generator end serial number, and ③ a generator set serial number.

NOTE: Always use the generator set serial number when ordering parts or in correspondence. The generator set serial number plate is found on the service side of the generator and resembles the drawing in Figure 1.

Warranty

A warranty registration certificate is supplied with your set. It entitles the original purchaser of our equipment to a warranty covering material or assembly faults. The extent of coverage is described in the Limited Warranty Statement. We recommend that you study the statement carefully.

NOTE: If the warranty is to apply, the servicing instructions outlined in this manual must be followed. If further information is needed, please contact an authorized dealer or the factory.

Safety Rules

NOTICE: Northern Lights generator sets and /or any other diesel powered equipment provided by NLI is not provided with spark arresting or explosion proof components, and therefore is not to be installed in the presence of combustible gasses having a flash point of 43.3 Degrees C (110 Degrees F) or lower, such as Gasoline, Propane, Natural Gas or other similar fuel sources.



NOTICE: Accident reports show that careless use of engines causes a high percentage of accidents. You can avoid accidents by observing these safety rules. Study these rules carefully and enforce them on the job.

IMPORTANT SAFETY INSTRUCTIONS.

Electromagnetic equipment, including generator sets and their accessories, can cause bodily harm and life threatening injuries when improperly installed, operated or maintained. To prevent accidents be aware of potential dangers and act safely.



READ AND FOLLOW ALL SAFETY INSTRUCTIONS IN THIS MANUAL, PRIOR TO THE INSTALLATION OF ANY GENERATOR SET OR ACCESSORY. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Recognize Safety Symbols and Instructions

In addition to the information found in this section, this operator's manual uses three different signal words to outline potential dangers of a specific nature.

 DANGER	DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

Follow All Safety Instructions

Carefully read and understand all safety messages in this manual and on your machine's safety signs. Keep signs in good and clean condition. Replace missing or damaged signs. Be sure new equipment components and



repair parts include the current safety signs. For replacement signs, proper placement of safety signs or clarification on any safety issue, consult your Northern Lights dealer or the factory. There can be additional safety information contained on parts and components from outside suppliers that is not reproduced in this manual. Consult the suppliers for additional safety information.

Learn how to operate the machine and how to use the controls properly. Only trained personnel should operate machines, or work on or around them.

Keep you machine in proper working condition. UNAUTHORIZED MODIFICATIONS TO THE MACHINERY MAY IMPAIR ITS FUNCTION AND SAFETY PARAMETERS.

Prevent Bypass and Accidental Starting



Do not start engine by shorting across start terminal. Engine will start if normal circuitry is bypassed, creating a hazard by runaway machinery.



Start engine only from operator's station.

Safety Rules (Continued)

Handle Fuel Safely - Avoid Flames

! WARNING

Diesel is highly flammable and should be treated with care at all times. Do not refuel while smoking or when near sparks or open flame.

ALWAYS STOP ENGINE BEFORE FUELING

MACHINE. Always fill portable fuel tank outdoors.

Never fuel a hot engine.

Prevent accidental discharge of starting fluids by storing all cans in a cool, safe place, away from sparks or open flame. Store with cap securely on container. Never incinerate or puncture a fuel container.




Prevent fires by keeping machine clean of accumulated trash, grease and debris. Always clean any spilled fuel as swiftly as possible. Do not store oily rags, which can ignite and burn spontaneously.

Be prepared if a fire starts. Keep a first aid kit and fire extinguisher handy. Keep emergency contact numbers for fire department, doctors, ambulance and hospital near the telephone.

Service Machines Safely

! DANGER

Do not wear a necktie, scarf, necklace, rings or other jewelry, or any loose clothing when working near moving parts. Tie long hair behind your head. If any of these items get caught in moving machinery, severe injury or death could result.

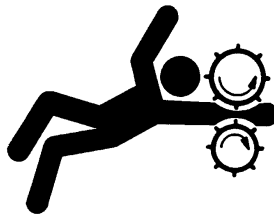

Check for any loose electrical connections or faulty wiring.


Look completely around engine to make sure that everything is clear before starting.

Wear Protective Clothing

! WARNING

To prevent catching anything in moving machinery, always wear close fitting clothes and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause hearing loss or impairment. Wear suitable authorized hearing protection, such as earmuffs or plugs to protect against loud noises.

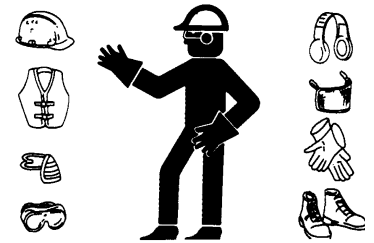

Operating equipment requires the full attention of the operator. Do not use radio or music headphones while operating machinery.

Practice Safe Maintenance

! CAUTION

Understand all service procedures before starting work. Keep area clean and dry. Never lubricate, service, or adjust machine while it is in operation.



Keep hands, feet and clothing away from power-driven equipment. When shutting down an engine, disengage all power and operator controls. Allow the engine to cool completely before beginning any service work.

Securely support any machinery elements that must be raised for service work with support or lifting machinery specifically intended for that purpose.

Keep all parts in good conditions and properly installed. Fix damage immediately. Replace any worn or broken parts. Remove any build up of grease, oil or debris.

Disconnect battery ground cable (-) before making any adjustments or service work.

Safety Rules (Continued)

Stay Clear of Rotating Drivelines

! DANGER

Entanglement in rotating drivelines can cause serious injury or death. Keep shields in place at all times. Make sure that rotating shields turn freely in pace with the drivelines.



Do not wear loose fitting equipment around rotating drivelines. Stop the engine and make sure that all moving parts have stopped before making any adjustments, connections, or performing any other type of service to the engine or other driven equipment.

Install all Safety Guards

! WARNING

Direct contact with rotating fans, belts, pulley and drives can cause serious injury.



Keep all guards in place at all times during engine operation.

Wear close-fitting clothes. Stop the engine and be sure all fans, belts, pulleys and drives are stopped before making adjustments, connections, or cleaning near fans and their components.

Do not allow anything on your person to dangle into or come in contact with a moving fan, belt, pulley or drive. Fans can act as vacuums and pull materials up from below, so avoid that area as well while in service.

Safe Battery Handling

! WARNING

Prevent Battery Explosions

Battery gas is highly flammable. Battery explosions can cause severe injury or death. To help prevent battery explosions, keep sparks, lighted matches and open flame away from the top of battery. When checking battery electrolyte level, use a flashlight.

Never check battery charge by contacting the posts with a metal object. Use a volt-meter or hydrometer.

Frozen batteries may explode if charged. Never charge a battery that has not been allowed to warm to at least 16°C (60°F).

Always remove grounded (-) battery clamp first and replace ground clamp last.

Sulfuric acid in battery electrolyte is poisonous and strong enough to burn skin, eat holes into clothing and other materials, and cause blindness if splashed into eyes.

To Avoid Hazards:


- Fill batteries only in well-ventilated areas.
- Wear appropriate eye protection and rubber gloves.
- Never use air pressure to clean batteries.
- Wear appropriate ventilation equipment to avoid inhaling fumes when adding electrolyte.
- Do not spill or drip electrolyte.
- Use correct jump-start procedure if required.

If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize acid.
3. Flush eyes with water for 15-30 minutes.
4. Get medical attention immediately.

If acid is swallowed:

1. DO NOT induce vomiting.
2. Drink large amounts of water or milk, without exceeding 2 liters (2 quarts)
3. Get medical attention immediately

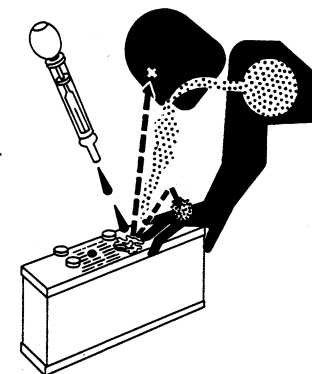

! WARNING


Battery posts, terminals, and related accessories can contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

Safety Rules (Continued)

Handle Chemical Products Safely

! WARNING

Direct exposure to hazardous chemicals can cause serious injury. Among the potentially hazardous chemicals that may be used with Northern Lights products are lubricants, coolants, paints and adhesives.

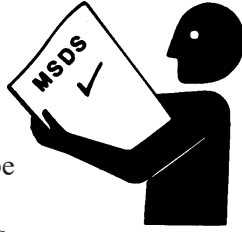

All potentially hazardous chemicals come with a Material Data Safety Sheet (MSDS). The MSDS provides specific details on chemical products, including physical hazards, safety procedures and emergency response techniques.

Read and understand the MSDS for each chemical before you start any job that includes it. Follow the procedures and use appropriate equipment exactly as recommended.

Contact your Northern Lights dealer or Northern Lights factory for MSDS's used on Northern Lights products.

Work in Well Ventilated Areas

! CAUTION

Exhaust fumes from engines contain carbon monoxide and can cause sickness or death. Work in well ventilated areas to avoid prolonged exposure to engine fumes. If it is necessary to run an engine in an enclosed area, route the exhaust fumes out of the area with an approved, leak proof exhaust pipe extension.

Remove Paint Before Welding or Heating

! WARNING

Hazardous fumes can be generated when paint is heated by welding, soldering or using a torch. To avoid potentially toxic fumes and dust, remove paint before heating.



- Remove paint a minimum of 100 mm (4 in.) from the area that will be affected by heat.
- If paint cannot be removed, wear an approved respirator.
- If you sand or grind paint, use an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers from the area.
- Allow at least 15 minutes for fumes to disperse before welding or heating.

Do not use a chlorinated solvent in an area where welding will occur. Work only in areas that are well ventilated. Dispose of paint and solvent properly.

Service Cooling System Safely

! WARNING

Opening a pressurized cooling system can release explosive fluids and causing serious burns. Before opening any pressurized cooling system, make sure the engine has been shut off. Do not remove a filler cap unless it is cool enough to comfortably grip with bare hands. Slowly loosen cap to relieve pressure before opening fully.



Avoid High Pressure Fluids

! WARNING

Relieve pressure prior to disconnecting pressurized lines. Escaping fluid under pressure can penetrate the skin causing serious injury. Always relieve pressure before disconnecting hydraulic or other pressurized lines. Tighten all connections firmly before re-applying pressure.



If searching for leaks, use a piece of cardboard. Always protect your hands and other body parts from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any high pressure spray injected into the skin must be removed within a few hours to prevent the risk of gangrene or other infection.

Avoid Heating Near Pressurized Fluid Lines

! WARNING

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns and bodily injury. Pressurized lines can rupture when heat goes beyond the immediate flame area. Do not weld, solder or use a torch or open flame near pressurized lines or other flammable fluids.



Safety Rules (Continued)

Do Not Open High-Pressure Fuel System

DANGER

 Many Northern Lights engines use high-pressure fuel injection. High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect or attempt any repair of fuel lines, sensors, or other components between the high-pressure fuel pump and nozzles on engines with high pressure fuel systems.

ONLY AUTHORIZED TECHNICIANS CAN PERFORM REPAIRS ON AN HIGH PRESSURE FUEL INJECTION SYSTEMS.

Avoid Hot Exhaust

WARNING

Avoid exposure to and physical contact with hot exhaust gases. Exhaust parts and streams can reach high temperatures during operation, leading to burns or other serious injury.



Cleaning exhaust filters can also lead to exposure to hot exhaust gas and the injury risk associated with it. Avoid exposure to and physical contact with hot exhaust gases when cleaning exhaust filters.

During auto or manual/stationary exhaust filter cleaning operations, the engine will run at elevated temperatures for an extended period of time. Exhaust parts and streams can reach high temperatures during operation, leading to burns or other serious injury.

Avoid Harmful Asbestos Dust

WARNING

Inhaling asbestos fibers may cause lung cancer. Avoid breathing any dust that may be generated when handling components containing asbestos fibers, including some gaskets.




The asbestos used in these components is usually found in a resin or otherwise sealed. Normal handling of these components is not dangerous, as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding materials containing asbestos. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If this vacuum is not available, apply a mist of oil or water on the material containing asbestos. Keep all bystanders away from any area where asbestos dust may be generated.

Use Proper Lifting Equipment and Techniques

WARNING

Lifting heavy components incorrectly can cause severe injury or damage to machinery. Avoid unbalanced loads. Do not use lifting eyes. Lift the generator set using lifting bars inserted through the lifting holes on the skid. Follow all recommended removal and installation procedures in this and associated Northern Lights manuals.

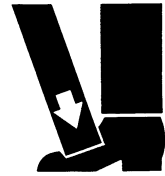

Use Proper Tools

CAUTION

Makeshift tools and procedures can create safety hazards. Always use appropriate tools for the job.



Use power tools only to loosen threaded parts and fasteners. For loosening and tightening hardware, always use the correct sized tools.

Do not use US measurement tools on metric fasteners, or vice versa. Use only service parts that meet Northern Lights specifications.

Dispose of Waste Properly

CAUTION

Disposing of waste improperly can threaten the environment and lead to unsafe working conditions. Potentially harmful waste used in Northern Lights equipment can include oil, fuel, coolant, filters and batteries.

Use leakproof containers to drain fluid. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain or into any water source.

Lock Out / Tag Out Procedures

Scope

During maintenance, repairs or retooling of a Northern Lights generator set, simply turning the machine off or unplugging it while it is being worked on does not give enough protection to others who are not performing the maintenance or repair. Many serious accidents happen when someone thought the machine was turned off, or all of its energy was safely blocked or released.

General Policy

CAUTION

To avoid dangerous or hazardous situations, refrain from any of the following:

- Removing or bypassing a guard or other safety device
- Placing any part of your body in a position where you could be caught by moving machinery.
- Cleaning or oiling machinery when in operation.
- Adjusting circuits, chillers, pumps, air handlers, valves, circuit breakers or fans while in operation.
- Working on piping or high pressure systems.

Lock Out/Tag Out Instructions - Electrical Equipment

WARNING

Be sure the equipment's ON/OFF switch is in the OFF position and is unplugged from any electrical source before attempting to perform any type of work on the equipment. Obtain an electrical plug cap cover with a lockset. Secure the plug terminal end using the electrical plug lockout cap. Lock the cap and retain the key.

If the equipment is directly wired into an electrical box with a shut off switch, obtain a lock pad and/or the appropriate colored tags and place the lock and tag through the shut off lever. Retain the key until the repair is completed and the machine is safe to start. Be certain the shut off lever is in the OFF position before restarting. NEVER give a lock out key to unauthorized personnel.

If the equipment is directly wired into an electrical box without a shut off switch and lock out capability, then a circuit breaker lock out will be required. Obtain a circuit lock and tag set. Install the lock onto the circuit breaker box. Ensure the unit ON/OFF switch is in the OFF position before restarting.

Lock Out/Tag Out Instructions - Pneumatic and Hydraulic Equipment

For servicing pneumatic and hydraulic equipment, the following additional procedures must be implemented, following completion of lock out/tag out procedures for the unit to be serviced:

Shut off air, water or supply valves at the equipment to be serviced.

Check the local bleed-off point for completed release of pressurized air, water or oil.

If shutting off of air, water or other material cannot be achieved at the local supply valve, shut off valves further back in the system and re-check the bleed-off point until complete shut-off is achieved.

Affix a DO NOT OPERATE tag to each valve handle that requires shut off. Each DO NOT OPERATE tag must be signed and dated by the authorized technician servicing the equipment.

Lock Out/Tag Out Instructions - Air Hose Connected Pneumatic Equipment

WARNING

Equipment connected to the compressed air system through an air hose with a detachable fitting must be shutdown and unplugged. Excess air must be bled prior to removing the air hose, prior to any maintenance or repair activities.

Affix a DO NOT OPERATE tag to the air hose near the detachable fitting. Each DO NOT OPERATE tag must be signed and dated by the authorized technician servicing the equipment. Check that the equipment cannot be operated by activating the ON switch.

Stored Energy

WARNING

Immediately after applying Lock Out or Tag Out devices, ensure that all potentially hazardous stored or residual energy is relieved, disconnected, restrained and otherwise rendered safe.

Verification of Isolation

CAUTION

Verify the machinery or equipment is actually isolated and de-energized prior to beginning work on a machine or on equipment that has been locked out.

Restarting Procedures

Follow the procedures below prior to restoring energy:

- Ensure that all machinery or equipment is properly reassembled. Inspect the machinery or equipment to verify non-essential items have been removed.
- Ensure that all personnel are safely outside danger zones. Notify personnel that lock out/tag out devices have been removed and energy will be reapplied.
- Only authorized personnel may remove lock out/tag out devices or notices.

M944W3 Generator Set Component Locations

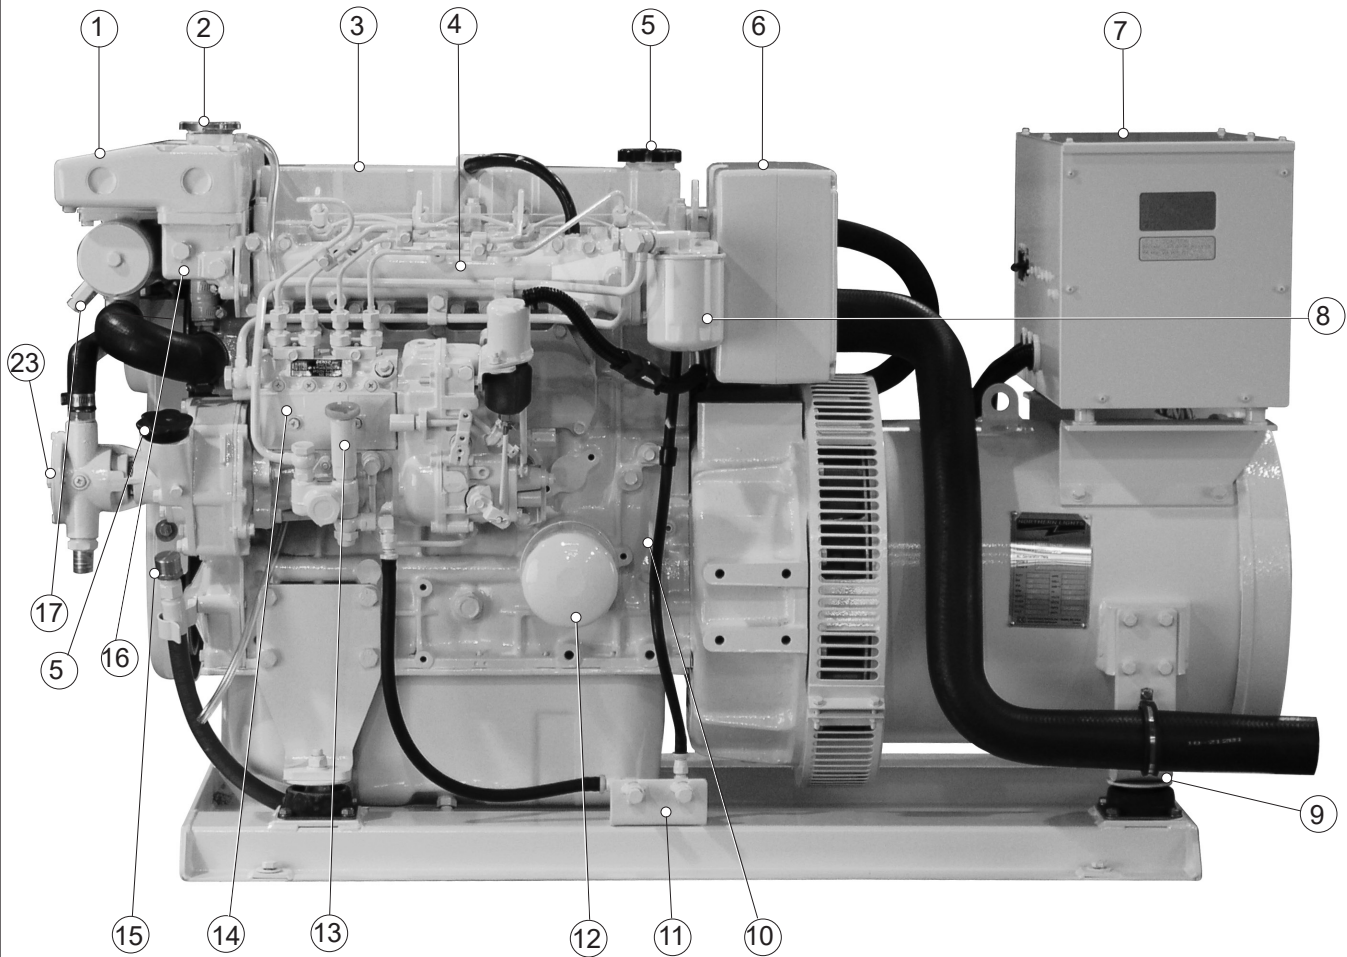


Figure 2: M944W3 Service Side with PX-300K2 series generator end.

- | | | |
|---------------------|-----------------------|---|
| 1. Expansion Tank | 8. Fuel Filter | 15. Lube Oil Drain |
| 2. Coolant Fill | 9. Vibration Mounts | 16. Thermostat Housing |
| 3. Rocker Arm Cover | 10. Lube Oil Dipstick | 17. Heat Exchanger Raw Water Drain and Zinc |
| 4. Intake Manifold | 11. Fuel Manifold | 23. Raw Water Pump |
| 5. Lube Oil Fill | 12. Oil Filter | |
| 6. Air Filter | 13. Fuel Primer Pump | |
| 7. Junction Box | 14. Injection Pump | |

M944W3 Generator Set Component Locations

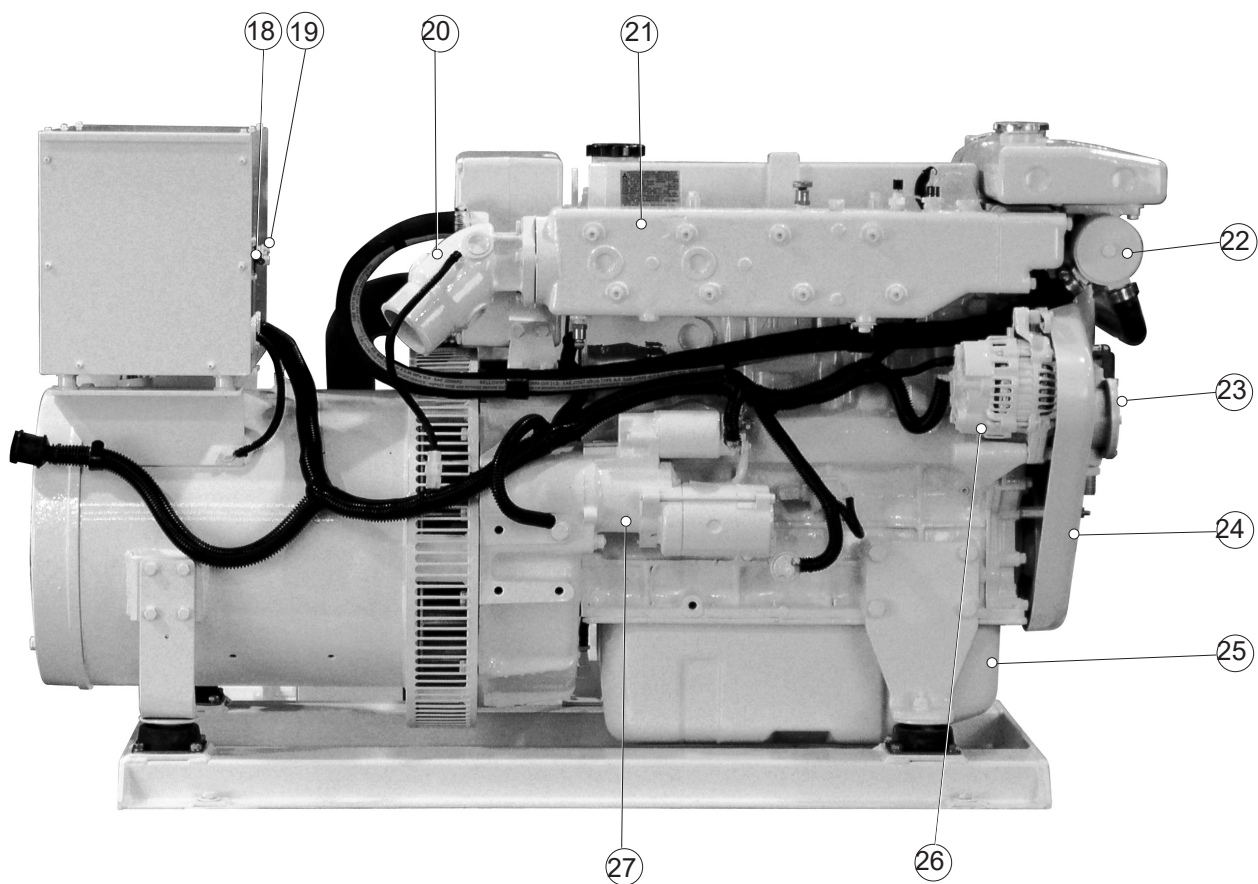


Figure 3: M944W3 Non-Service Side with PX-300K2 series generator end.

- | | |
|------------------------|----------------|
| 18. AC Circuit Breaker | 24. Belt Guard |
| 19. DC Circuit Breaker | 25. Oil Pan |
| 20. Wet Exhaust Elbow | 26. Alternator |
| 21. Exhaust Manifold | 27. Starter |
| 22. Heat Exchanger | |
| 23. Raw Water Pump | |

M944W3F Generator Set Component Locations

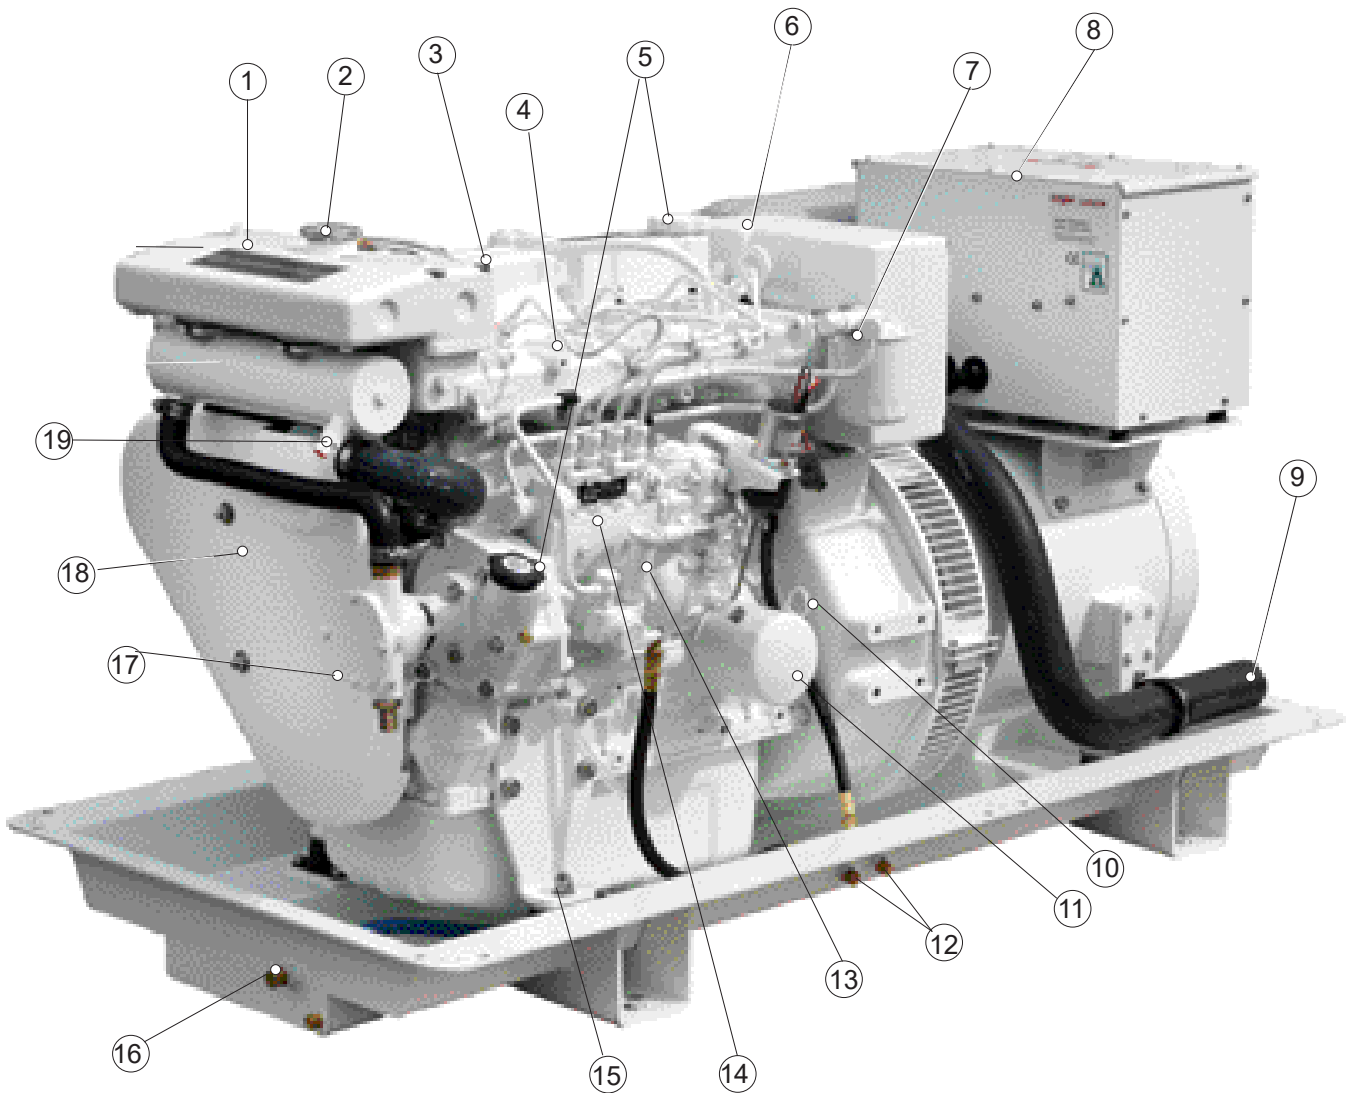


Figure 4: M944W3F Service Side - consult factory for details on additional models.

- | | | |
|---------------------|--------------------------------------|------------------------------------|
| 1. Expansion Tank | 8. Junction Box | 14. Injection Pump |
| 2. Coolant Fill | 9. Intake Air Noise Reduction Tube | 15. Vibration Isolation Mount |
| 3. Rocker Arm Cover | 10. Lube Oil Dipstick | 16. Lube Oil Drain |
| 4. Intake Manifold | 11. Oil Filter | 17. Raw Water Pump |
| 5. Lube Oil Fills | 12. Fuel Supply & Return Connections | 18. Belt Guard |
| 6. Air Filter | 13. Fuel Primer Pump | 19. Heat Exchanger Raw Water Drain |
| 7. Fuel Filter | | 20. Zinc |

M944W3F Generator Set Component Locations

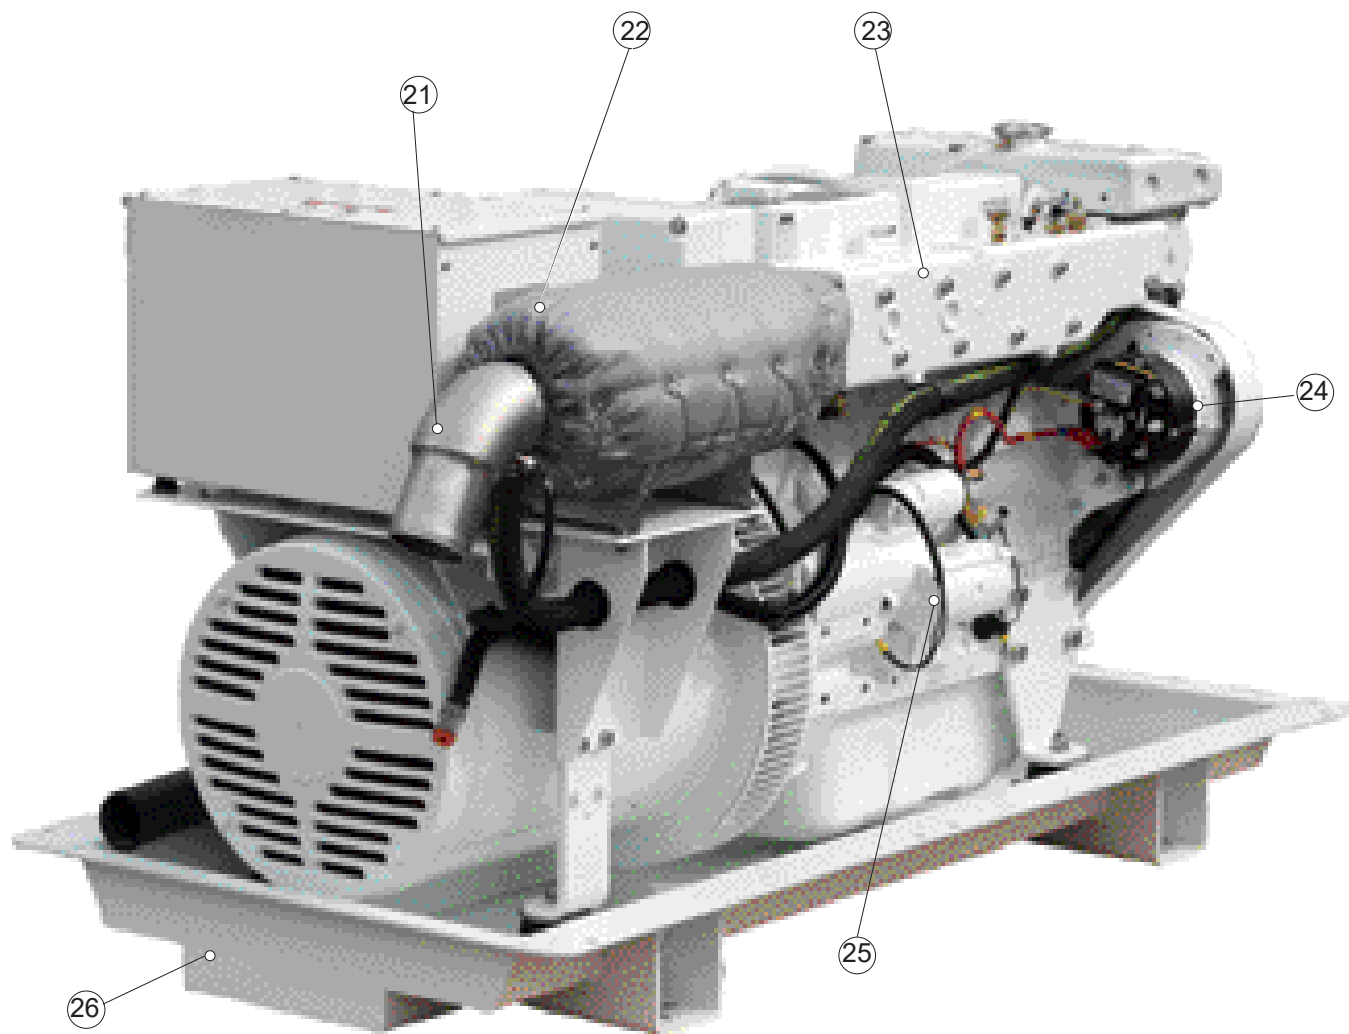


Figure 5: *M944W3F Non-Service Side - consult factory for details on additional models.*

- | | |
|------------------------------------|-----------------------|
| 21. Exhaust Elbow | 24. Alternator |
| 22. DPF and Exhaust Blanket | 25. Starter |
| 23. Exhaust Manifold | 26. Base Pan |

M944T3FG Generator Set Component Locations

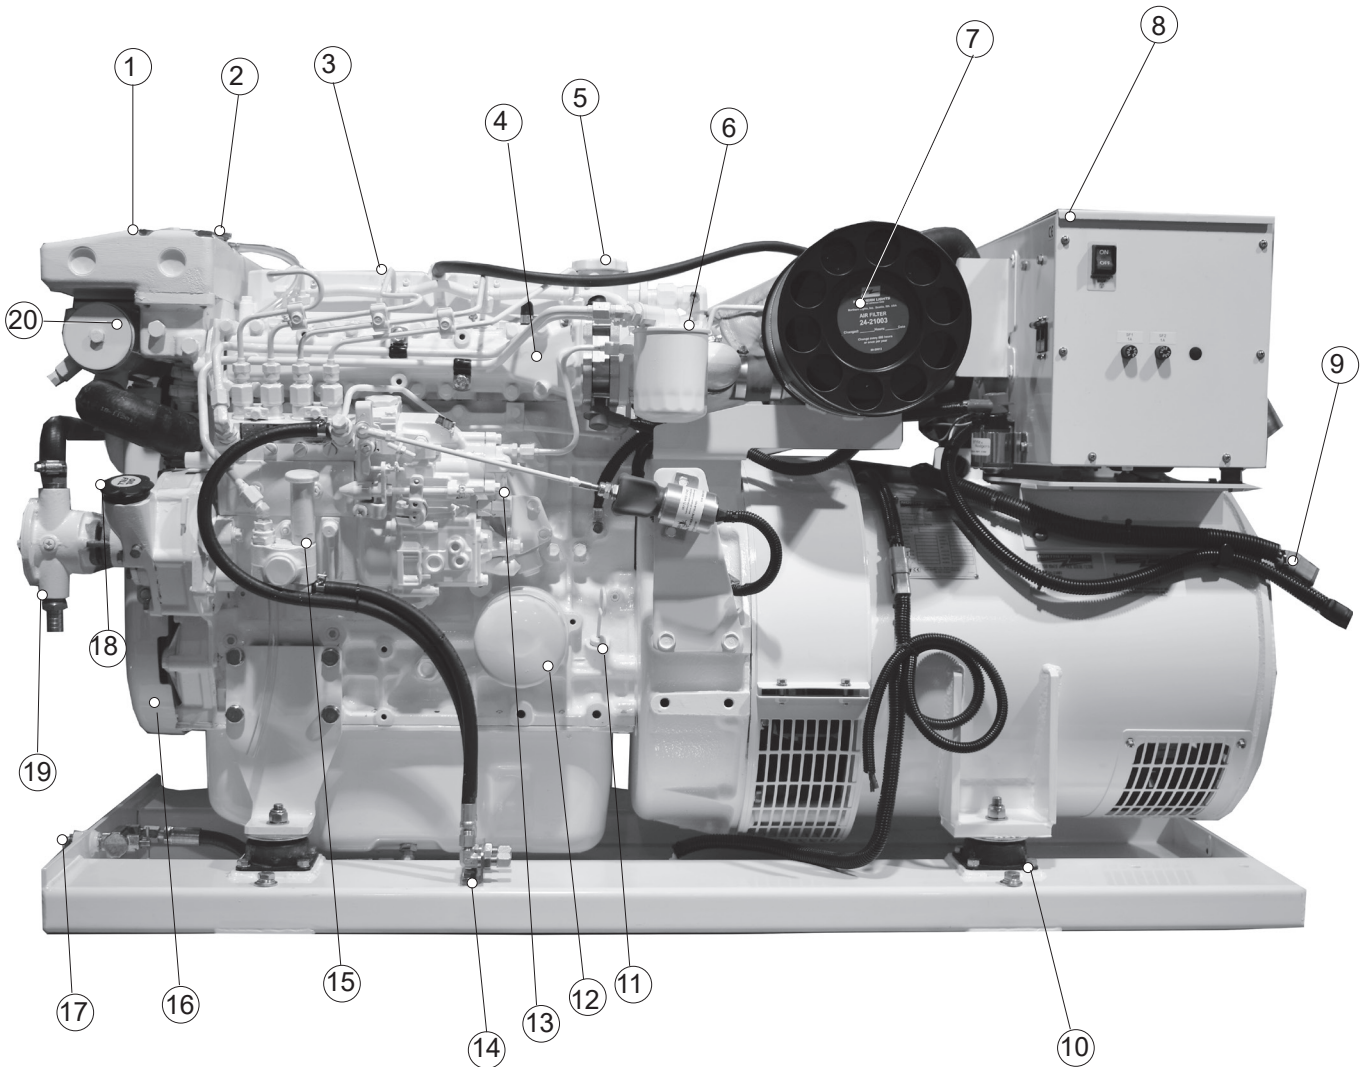


Figure 6: M944W3FG Service Side - consult factory for details on additional models.

- | | | |
|----------------------|--------------------------------------|------------------------|
| 1. Expansion Tank | 9. Control Panel Plug | 15. Fuel Primer Pump |
| 2. Coolant Fill | 10. Vibration Isolation Mount | 16. Belt Guard |
| 3. Rocker Arm Cover | 11. Lube Oil Dipstick | 17. Lube Oil Drain |
| 4. Intake Manifold | 12. Oil Filter | 18. Side Lube Oil Fill |
| 5. Top Lube Oil Fill | 13. Starter | 19. Raw Water Pump |
| 6. Fuel Filter | 14. Fuel Supply & Return Connections | 20. Heat Exchanger |
| 7. Air Filter | | |
| 8. Junction Box | | |

M944W3F Generator Set Component Locations

Figure 7: *M944W3F Non-Service Side - consult factory for details*

Control Panels

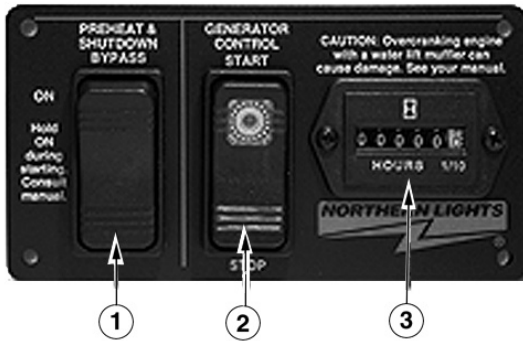


Figure 8: Series 1-B Generator Control Panel



Figure 9: Series 3 Generator Control Panel

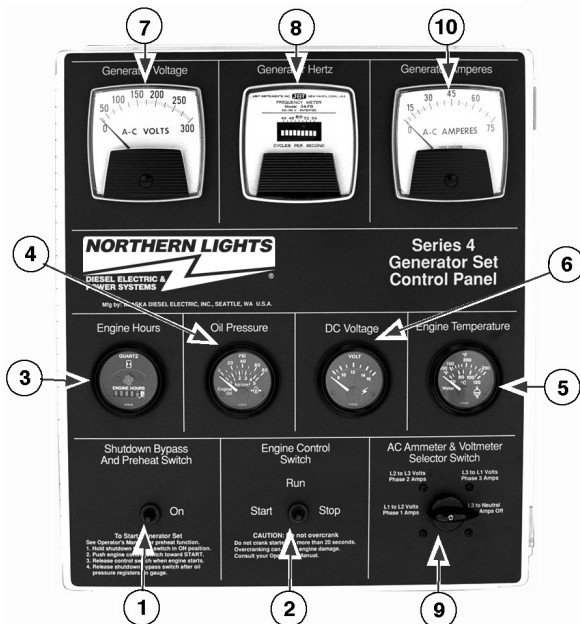


Figure 10: Series 4 Generator Control Panel

1. PREHEAT/ SHUTDOWN BYPASS

This switch serves two functions:

1. Preheats air before beginning the starting process. Press switch for 10-20 seconds before attempting startup.
2. Bypasses the safety shutdown feature during the starting process. Keep switch engaged while starting engine, and for 2 to 3 seconds afterwards, allowing oil pressure to build beyond shutdown setpoint.

2. ENGINE CONTROL SWITCH

To start the engine, hold this switch in the START position until the engine is running. After the engine starts, release the switch and it will return to RUN position. To stop the engine, hold the switch in the STOP position.

NOTE: The rocker switch is used on Series 1 panels only, and has a light that glows when the set is running.

3. HOUR METER

Keeps track of engine running time.

4. OIL PRESSURE GAUGE

Shows the oil pressure in the engine lubricating system.

5. WATER TEMPERATURE GAUGE

Registers the temperature of the cooling water.

6. D.C. VOLTMETER

When the engine is stopped, the voltmeter indicates the condition of the battery. When the engine is running, the voltmeter indicates the voltage output of the alternator.

For Series 4 Control Panels only:

7. A.C. VOLTMETER

Shows the generator output voltage.

8. FREQUENCY METER (Hertz)

The frequency meter indicates alternating current frequency: 60 Hz (1800 rpm) or 50 Hz (1500 rpm).

9. AMMETER/VOLTMETER SELECTOR

Used to check the voltage and current of each phase. Return to "Amps Off" position when not monitoring.

10. A.C. AMMETER

Shows the generator load on each phase. The phase is selected with the Ammeter Selector switch (#9).

For units equipped with TSC panels, consult publication OTSC for full details.

Emission-Related Installation Instructions (For “F” Series Models)

Failing to follow these instructions when installing a certified engine in a vessel violates federal law (40 CFR 1068.105(b)), subject to fines or other penalties as described in the Clean Air Act.

If you install the engine in a way that obscures the engine’s emission control information label during normal engine maintenance, you must place a duplicate label on the vessel, as described in 40 CFR 1068.105.

The installed exhaust system should not create exhaust back pressure greater than 15” (381 mm) of water, measured at the engine exhaust elbow.

Operating Procedures

BREAK-IN PERIOD

1. The first 100 hours on a new or reconditioned engine are critical to its life and performance.
2. Operate engine under various conditions, particularly heavy loading and minimal or no load conditions to help seat engine components properly.
3. Constantly check the engine temperature and oil pressure gauges.
4. Oil consumption is greater during break-in as piston rings take time to seat.
5. Break-In Oil Changes: Change engine oil and filter at 50 hours. Change oil and filter again at 100 hours (consult Lubricants section for oil recommendation).

Operating Instructions:

Maintain at least a 75% load on your generator set for the first 100 hours. If this is not possible, maintain no less than a 50% load to ensure proper seating of the piston rings. Vary the load to help seat the rings.

BEFORE STARTING

1. Check the water level by removing the pressure cap from the expansion tank. In order to give the cooling water an opportunity to expand, the level should be about 1 in. (2.5 cm) below the filler cap sealing surface when the engine is cold.



CAUTION: Use protective clothing and open the filler cap carefully when the engine is warm to prevent burns.

2. Check the oil level in the crankcase with the dipstick. The oil level must be between high and low marks on the stick. Never allow the level to go below this area. Always add the same viscosity of oil as is already in the crankcase.
3. Check the fuel tank level and open any fuel valves on the tank and at the secondary fuel filter.
4. Close the sea-cock, check and clean the sea strainer, and reopen the sea-cock.
5. Place the battery switch in the ON position.

NOTE: The battery switch must always be kept ON while the engine is running. If the switch is turned OFF while the engine is running, the battery charging alternator could be damaged.

Operating Procedures

STARTING

1. Hold the Shutdown Bypass switch in the ON position.
2. While holding the Shutdown Bypass switch in the ON position, push the Engine Control switch to the START position.
3. As soon as the engine starts, release the start switch and continue to hold the bypass/preheat switch for an additional five seconds. Do not crank the starter for more than 10 seconds consecutively. If the engine fails to start with the first attempt, be sure that it has stopped completely before re-engaging.

NOTE: Excessive cranking of the starter on marine sets equipped with a water lift muffler can cause engine damage. If the engine does not start after 3 consecutive 10-second cranks, remove the impeller from the seawater pump. This will prevent the muffler from filling with water and backfilling the exhaust line and engine. Once the engine starts, shut it off immediately and reinstall the impeller. Restart and check the exhaust overboard outlet for gushes of water.

OPERATING

1. Units with Series 3 and Series 4 Control Panels: check gauges often. Oil pressure must be above 15 PSI. The D.C. voltmeter should read between 11 and 15 volts at 80° F (25° C) ambient temperature. The water temperature gauge must be below 200° F (94° C). Check the A.C. voltage and frequency meters (Series 4 panel). If the gauges deviate from normal levels, shut down the generator set and investigate.
2. Let the unit run unloaded for three to five minute warm up period.
3. Add electrical load.

STOPPING

1. Remove electrical load from the generator set.
2. Run the engine for a two to three minute cool-down period.
3. Move the Engine Control switch to the STOP position until the engine comes to a complete stop.
4. Shut off sea-cock, fuel valve and battery switch.

Operating Procedures

SHUTDOWNS AND ALARMS

1. Your unit is fitted with a system to protect it from high water temperature or low oil pressure.
 - a. Generator sets have shutdown systems to stop the engine. They have no warning horns.
 - b. Other alarms and shutdowns are available as optional equipment.

NOTE: If your unit is equipped with optional shutdowns and alarms, do not rely on your warning or shutdown system to the exclusion of careful gauge monitoring. Watching your gauges can prevent damage to the unit and dangerous power losses.

2. Do the following when your warning or shutdown system is activated:
 - a. Engage the preheat switch to check the temperature gauge.
 - b. If above 205°F (96°C), use the Troubleshooting Guide on page 25 to isolate the cause of the over-heat.



CAUTION: Do not remove the water fill cap of an overheated engine. Escaping high temperature steam can cause severe burns. Allow the engine to cool and then remove the cap slowly using protective clothing.

- c. Make repairs and restart after the temperature gauge registers below 200° F (94° C).
 - d. Watch the temperature gauge regularly and turn off the unit if the temperature rises above 205° F (96° C). Repeat troubleshooting.
3. If shutdown is activated and the temperature gauge shows temperature within normal temperature range:
 - a. This shutdown could have happened because of a too high exhaust temperature. This could have been caused by a damaged impeller or a partially blocked sea water strainer. Check the sea water strainer first. If it is clear, then check the condition of the sea water pump impeller.
 - b. Check the engine crankcase oil level.

- c. If the oil level is low, fill with recommended lubricating oil and restart. Watch the oil pressure gauge carefully and shut off the engine if it does not show a normal reading (20-60 PSI) after a few seconds of operation.
 - d. If the oil level is normal, DO NOT restart the engine. Call your dealer for assistance.

SPARE PARTS

1. Northern Lights recommends that you keep the following spare parts on hand for field service. Spare parts and world class spare parts kits are available from your local Northern Lights dealer.
2. Northern Lights standard spare parts kit (P/N 38-01200)* contains:
 - a. Primary fuel filters
 - b. Oil filters
 - c. Air filter element
 - d. Drive belt
 - e. Thermostat and seal ring
 - f. Rocker arm cover gasket
 - g. Raw water pump impellers
 - h. Zinc anodes
3. Intended for long-distance cruisers, Northern Lights world class spare parts kit (P/N 38-01201)* contains:
 - a. Primary fuel filters
 - b. Oil filters
 - c. Air filter element
 - d. Drive belt
 - e. Thermostat and seal ring
 - f. Rocker arm cover gasket
 - g. Raw water pump impellers
 - h. Zinc anodes
 - i. Fuel injector
 - j. Glow plug
 - k. Raw water pump
 - l. O-ring
 - m. 12VDC, 50A replay
 - n. Gasket kit
 - o. Workshop manual

*- For use with M944W, M944W3, M944W3F generator sets with heat exchangers. Consult your Northern Lights dealer for your unit's specific spare parts requirements.

Servicing Schedule Chart

The Servicing Schedule Chart below shows the service schedule required for proper maintenance of your generator set. More detailed coverage of each Service Point (SP) is listed on the page noted in the 'page' column.

DAILY:

	Inspect for any signs of fluid leaking
SP1	Check oil level in engine
SP8	Check primary fuel filter
SP14	Check cooling water level
	Check sea strainer

EVERY 250 HOURS:

SP2-3	Change engine oil and filter
SP4	Check air cleaner
SP13	Check turbocharger
SP18	Check zinc electrodes

AFTER FIRST 50 HOURS:

SP2-3	Change engine oil and filter
SP5	Check V-belt tension
SP19	Check electrolyte level in batteries

EVERY 500 HOURS:

SP6	Check valve clearances
SP8	Change primary fuel filter element
SP9	Change secondary fuel filter
SP11	Check injectors
SP14-15	Check cooling system
SP17	Change impeller
SP20	Check battery charge with hydrometer

EVERY 50 HOURS:

SP5	Check V-belt tension
SP6	Check valve clearances
SP19	Check electrolyte level in batteries

AFTER FIRST 100 HOURS:

SP2-3	Change engine oil and filter
-------	------------------------------

EVERY 2000 HOURS or as needed:

SP4	Change air cleaner
SP12	Check fuel injection pump
SP16	Check and clean heat exchanger

SERVICE POINT	PAGE	OPERATION	DAILY	50 Hours	100 Hours	250 Hours	500 Hours	2000 Hours
ENGINE:								
SP1	18	Check oil level	•					
SP2	18	Change engine oil ^{1, 5}		•	•	•		
SP3	19	Change lube oil filters ^{1, 5}		•	•	•		
SP4	19	Check air cleaner ^{1, 3}				•		•
SP5	19	Check V-belt tension ^{1, 5}		•				
SP6	20	Check valve clearances ^{1, 5}		•			•	
FUEL SYSTEM:								
SP7	21	Check primary filter ²	•					
SP8	21	Change primary filter element ^{1, 2, 3}					•	
SP9	21	Change secondary fuel filter ^{1, 3}					•	
SP10	22	Bleed the fuel system ³						
SP11	23	Check injectors ^{1, 6}					•	
SP12	24	Check fuel injection pump ³						•
TURBOCHARGER:								
SP13	25	Check air, oil, & or leakage ¹				•		
COOLING SYSTEM:								
SP14	26	Check cooling water level	•					
SP15	26	Check and flush cooling system ⁷						•
SP16	27	Check and clean heat exchanger ³						•
SP17	27	Change impeller in raw water pump ^{1, 3}					•	
SP18	27	Check zinc electrodes ³				•		
ELECTRICAL SYSTEM:								
SP19	28	Check electrolyte level in batteries ^{1, 3}		•				
SP20	28	Check condition of batteries with hydrometer ¹					•	
OUT OF SERVICE:								
SP21	29	Winterizing or out-of-service ³						

1) Perform maintenance once a year even if hour level has not been reached.
 2) Consult manufacturer's maintenance schedule, note on chart.
 3) Or whenever necessary.
 4) Change at 1000 hours.

5) After first 50 hours.
 6) Fuel inj. valve opening pressure: 11.77 MPa (120 kgf/cm²)
 7) Or every 2 years.
 8) Valve clearance = .25 mm (0.0098").

Service Record											
Service Point	OPERATION	HOURS/ DATE									
50 HOURS											
SP5	Check V-belt tension										
SP19	Check electrolyte in batteries										
250 HOURS											
SP2	Change engine oil										
SP3	Change lubricating oil filters										
SP4	Check air cleaner										
SP13	Check turbocharger										
SP18	Check zinc electrodes										
EVERY 500 HOURS											
SP6	Check valve clearances										
SP8	Change primary filter element										
SP9	Change secondary fuel filter										
SP11	Check injectors										
SP15	Flush cooling system										
SP17	Change impeller in seawater pump										
SP20	Check condition of batteries with hydrometer										
2000 HOURS or as required											
SP-4	Change air cleaner										
SP12	Check fuel injection pump										
SP16	Check and clean heat exchanger										
Service Notes:											

Servicing

LUBRICATION - GENERAL

1. Use only clean, high quality lubricants stored in clean containers in a protected area.

Use only low ash lubrication oil.
2. After first 100 hour break in, acceptable lube oils must meet API specification:
 - a. For units with DPF ("F" Series models) use FA-4 or CK-4 (low ash for diesel particulate filters)
 - b. For units without DPF ("W" Series models) use CH-4 or higher)
3. Use the proper weight oil for your average operation temperature.

Air Temperature	Multi-Viscosity
Above 32° F (0° C)	SAE 15-40W
-10° to 32° F (-23° to 0° C)	SAE 10-30W

Figure 7: Lube Oils

4. Never put additives or flushing oil in crankcase.

SP-1. CHECKING OIL LEVEL

1. While the engine is stopped, check the oil level in the crankcase with the dipstick daily. The oil level must be between the high and low marks on the stick. Fill with the recommended oil, and fill only to the high mark on the dipstick. Follow the lubrication recommendations in Figure 7.

SP-2. OIL CHANGES

1. The set is delivered with special break-in oil. Change the engine oil and oil filter after 50 hours of operation. Use diesel-rated break in oil (John Deere pre-packaged or equivalent) during the first 100 hours. Consult your dealer for more information.
2. Change the oil and filter again at 100 hours using the oil recommended in the above paragraph. After this, change oil and filter every 250 hours.
3. During intermittent cold weather operation, change oil every 100 hours or six weeks, whichever comes first.
4. Change oil at any seasonal change in temperature when a new viscosity of oil is required.
5. Change oil when engine is warm but not hot.
6. Dispose of waste oil in an approved manner.
7. Never use a flushing oil.
8. Remove oil tube plug and spin valve to drain oil. Replace plug and close the valve.
9. Refill engine with recommended oil.
10. Engine capacity with new oil filter is:
2.64 gallons (10 liters)

Servicing

SP-3. CHANGING LUBE OIL FILTER

1. Change the lube oil filter every 250 hours.
2. Use a filter wrench to remove old filter. Dispose of filter in approved manner.
3. Make sure the gasket from the old filter is removed and discarded. Clean mount face.
4. Spread a thin film of engine oil on the rubber gasket on the new filter and screw it on nipple until gasket meets the sealing surface.
5. Using hands only – no wrench – tighten filter one-half turn farther. Overtightening can do damage to filter housing.
6. Fill engine with recommended oil. Start engine and check for leakage. Stop engine, wait 3 minutes, and check oil level. Add additional oil if necessary.
7. Oil filter part number is:
#24-01201

Note: Make absolutely sure no impurities enter the engine while changing the element, and do not run the engine with the air cleaner removed.

Do not clean the filter with diesel fuel, solvent, or gasoline. Serious engine damage can result.

SP-5. V-BELTS

1. Check the tension and wear on the V-belt after every 50 hours.
2. Use your thumb to press on the belt at the midpoint between the crankshaft and alternator pulleys. The tension is correct if the belt can be depressed about .39 to .47 in. (10 - 12 mm) with 22 lbs. (10 kg) force.

SP-4. AIR CLEANER

1. For units with turbocharger ("T" Series models)
 - a. Visually inspect air cleaner every 250 hours.
 - b. Take off the hose clamp on the bracket and the hump hose to detach the air cleaner.
 - c. Make sure the hump hose is clean inside and also that the new filter element is absolutely clean and installed properly.
2. For naturally aspirated units
 - a. Visually inspect air cleaner every 250 hours.
 - b. Remove air intake hose and the four retaining bolts from intake box. Remove the box rear cover to access filter element. Inspect and wash element in soapy water if needed. Rinse and dry thoroughly before re-installing.

Serviceing

SP-6. VALVE CLEARANCES

1. Readjust valve clearance after first 50 hours of operation. Check valves every 500 hours thereafter.
2. Check the valves when the engine is cold.
3. Rotate the crankshaft in a clockwise direction in the front 180° to bring each piston to the top dead center on the compression stroke. Top dead center (TDC) is when notch on the pulley aligns with the pointer and the two valves on cylinder No. 1 "rock". Rocking is when the rocker arms (for the two valves on a given cylinder) are moving in opposite directions, one up closing the valve and one down opening the other valve. The moment when the two rocker arms are exactly aligned with each other is when they "rock".

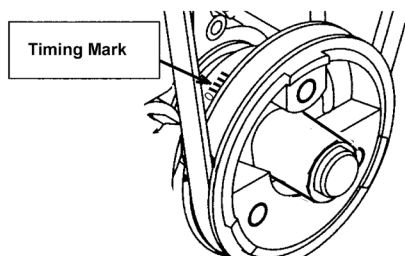


Figure 11: Timing Mark

4. Measure the valve clearance for each of the valves, with a feeler gauge, in the firing order (1-3-4-2). Standard valve clearances for a cold engine are:
Intake (IN).....0.0098 in. (0.25 mm)
Exhaust (EX).....0.0098 in. (0.25 mm)
5. To adjust valve clearance, loosen the lock nut on the adjustment screw. Insert a feeler gauge between the rocker arm and the valve stem cap. Adjust, while measuring the clearance, until the feeler gauge slides with a slight drag. Tighten the lock nut and recheck the clearance (Figure 9).
6. Adjust the remaining valves.
7. Replace the rocker arm cover.

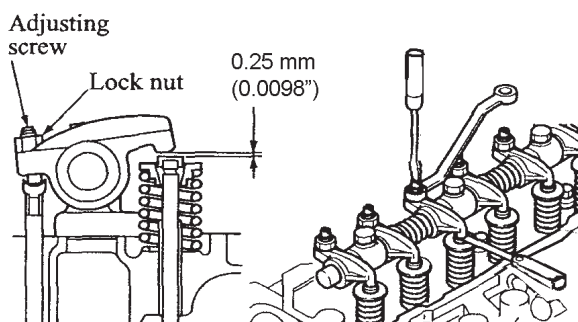


Figure 12: Valve Adjustment

Servicing

FUELS - GENERAL

1. Use only clean, high quality fuels of the following specifications, as defined by ASTM designation D975 for diesel fuels:
 - a. Use grade No. 2 diesel at ambient temperatures above freezing 32° F (0° C).
 - b. Use grade No. 1 at ambient temperatures below freezing.
 - c. International fuel specifications:
JIS K2204
ISO-8217-DMA
BS 2869 Part 1 Class A1
BS 2869 Part 2 Class A2
2. Use fuel having less than 0.2% sulphur of weight (less than 0.05% recommended).
3. The cetane number should be 45 or higher.
4. Particulate contaminate should be 5.0 mg/l (0.00018 oz/U.S. gal) or lower.
5. DO NOT use these unsuitable grades of fuel:
 - a. Domestic heating oils, all types.
 - b. Class B engine.
 - c. Class D domestic fuels.
 - d. Class E, F, G or H industrial or marine fuels.
 - e. ASTM-D975-60T No. 4-D and higher number fuels.
6. Storing fuel:
 - a. Keep dirt, scale, water, and other foreign matter out of fuel.
 - b. Avoid storing fuel for long periods of time.
 - c. Fill the fuel tank at the end of each day's operation. This will reduce condensation.

SP-7. PRIMARY FUEL FILTER

- a. Check the primary fuel filter daily as recommended by the filter manufacturer.

SP-8. PRIMARY FUEL FILTER ELEMENT

- b. Change the element as often as necessary or every 200 hours.
- c. If the bowl fills with water, change the primary and secondary element immediately.

SP-9. SECONDARY FUEL FILTER

- d. Change the engine mounted filter as often as necessary or every 250 hours.
- e. Remove the fuel filter with a filter wrench.
- f. Apply a coating of fuel to the o-ring of the new fuel filter.
- g. Tighten the new filter by hand, do not use a filter wrench for tightening.
- h. The filter should be dry.
- i. Do not add fuel to the fuel filter before installation, as this could cause unfiltered fuel to enter the fuel pump.
- j. Bleed the air out of the filter.

The fuel filter part number is:

24-51201

Servicing

SP-10. BLEEDING THE FUEL SYSTEM



CAUTION: Escaping diesel fuel under pressure can penetrate skin causing serious personal injury. Before disconnecting lines be sure to relieve all pressure. Before applying pressure, be sure all connections are tight and lines, pipes and hoses aren't damaged. Fuel escaping from a very small hole can be almost invisible. Use a piece of cardboard or wood, rather than hands, to search for suspected leaks. If injured by escaping fuel, see a doctor at once. Serious infection or reaction can develop if proper medical treatment is not administered immediately.

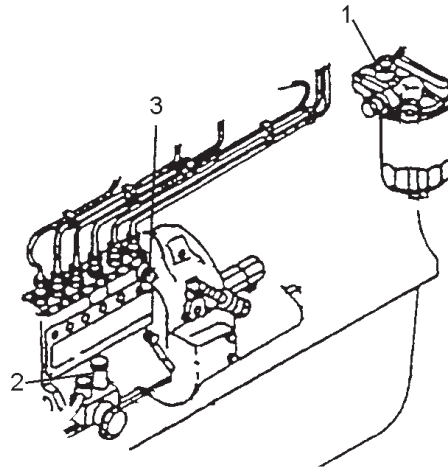


Figure 13: Fuel Feed Pump

1. Fuel system air bleeding may be needed when:
 - a. After fuel has been added to a newly installed engine.
 - b. A new fuel filter is installed.
 - c. The engine has run out of fuel.
 - d. The fuel lines, injection pump, or any other fuel system component has been removed and installed.
2. After changing the fuel filter, air only needs to be bled from the fuel filter.
 - a. Loosen the air vent plug (#1 on Figure 10) on the fuel filter by about 1-1/2 turns. (Be sure to cover the vent with a cloth to prevent fuel from splashing.)
 - b. Turn the priming pump cap on the fuel feed pump counterclockwise to unlatch it. Move the priming pump plunger (#2 on Figure 10) up and down. To close the pump turn the cap clockwise while depressing it.
 - c. Close the air vent plug when no more air bubbles can be seen in the fuel flowing from the air vent plug hole.
3. To bleed air at the fuel injection pump:
 - a. Turn the air vent plug (#3 on Figure 10) about 1-1/2 turns to loosen it. (Cover the vent with a cloth to prevent fuel from splashing.)
 - b. Pump the feed pump cap up and down.
 - c. When there are no air bubbles to be seen in the fuel flowing from the air vent plug hole, push down the priming pump cap and turn it clockwise to lock it in place.

NOTE:

Do not close the air vent plug before locking the priming pump cap in place, because the internal pressure in the pump will prevent the priming pump cap from returning to the original position.

4. If the engine does not start after this bleeding process, loosen a fuel line at the injector while cranking the engine with the starter motor until pure fuel escapes. Then tighten the connections. Do each line one-at-a-time. After the engine has started, use a piece of cardboard to look for fuel leaks.

Servicing

SP-11. INJECTOR SERVICE

1. Injectors should be checked every 500 hours. This check should be made by a Northern Lights dealer or local injection repair station.



CAUTION: Escaping diesel fuel under pressure can have sufficient force to penetrate the skin causing serious personal injury. If injured by escaping fuel, see a doctor at once.

2. Injector removal:
 - a. Clean loose dirt from around the injectors and the fuel lines.
 - b. Relieve high pressure in the fuel lines by loosening the delivery line flare nuts at each injector.
 - c. Remove delivery lines by disconnecting them from the injectors and injection pump. Remove all lines as an assembly; do not remove the spacers. Cover the ends of the lines, the injector inlets, and the injector pump outlets to keep dirt out.
 - d. Remove the return line retaining bolts, washers, and return line.
 - e. Loosen the injector retaining nuts at the same time a little at a time. Remove the injector.
 - f. Remove the injector seat. Cover the holes to prevent debris from entering the cylinders.

Note: Do not use pry bars to remove injectors from the cylinder head.

3. Injector repair and cleaning:
 - a. Take injectors to your Northern Lights dealer or local injection repair station for testing and service.

For M944W3F and M30C3F:

4. Injector installation
 - a. Install new injector seal washer seat and injector. Evenly tighten the injector retaining nuts to 39.1 to 47.7 ft/lbs (53.0 to 64.7 N•m), or 5.4 to 6.6 kgf•m. Do not overtighten.
 - b. Reinstall the return line using new sealing washers. Tighten bolts to 13.0 to 15.9 ft/lbs (17.7 to 21.6 N•m), or 1.8 to 2.2 kgf•m.

NOTE: Overtightening can damage injectors.

- c. Reinstall injection lines. Tighten flare nuts at injection pump to 19.5 to 23.9 ft/lbs (26.5 to 32.4 N•m), or 2.7 to 3.3 kgf•m. Leave the lines loose at injectors for bleeding.
 - d. Bleed the injection lines. Crank the engine to fill the lines. Tighten flare nuts at injectors to 15.2 to 18.1 ft/lbs (20.6 to 24.5 N•m), 2.1 to 2.45 kgf•m.
 - e. Start the engine and check for leaks using a piece of paper or cardboard. Do not use your hand to check for leaks.

For M944T3F and M38C3F:

4. Injector installation
 - a. Install new injector seal washer seat and injector. Evenly tighten the injector retaining nuts to 18.1 to 25.3 ft/lbs (24.5 to 34.3 N•m), or 2.5 to 3.5 kgf•m. Do not overtighten.
 - b. Reinstall the return line using new sealing washers. Tighten bolts to 13.0 to 15.9 ft/lbs (17.7 to 21.6 N•m), or 1.8 to 2.2 kgf•m.

NOTE: Overtightening can damage injectors.

- c. Reinstall injection lines. Tighten flare nuts at injection pump to 19.5 to 23.9 ft/lbs (26.5 to 32.4 N•m), or 2.7 to 3.3 kgf•m. Leave the lines loose at injectors for bleeding.
 - d. Bleed the injection lines. Crank the engine to fill the lines. Tighten flare nuts at injectors to 14.5 to 17.4 ft/lbs (21.0 to 23.0 N•m), 2.0 to 2.4 kgf•m.
 - e. Start the engine and check for leaks using a piece of paper or cardboard. Do not use your hand to check for leaks.

Servicing

SP-12. INJECTION PUMP

1. Since operating conditions may vary considerably, it is difficult to give a definite interval for checking the injection pump. But as a rule, pump settings, maximum speed, and exhaust smoke should be checked after every 2000 hours of operation. Service of the fuel injection pump should only be done if checks indicate pump malfunction.
2. Black smoke can be an indication of pump malfunction. Before servicing the pump, check other possible causes:
 - a. Check cleanliness of the air filter.
 - b. Check valve clearances.
 - c. Clean and check injectors.
3. Any repair which involves disassembly of the injection pump must be carried out by specially trained mechanics with the proper tools and test equipment.

NOTE: All warranties on the engine become null and void if the injection pump seals are broken by unauthorized persons.

4. Injection Pump Removal:



CAUTION: Escaping diesel fuel under pressure can have sufficient force to penetrate the skin, causing serious personal injury. If injured by escaping diesel fuel, see a doctor at once.

- a. Clean the injection pump, hoses, and area around the pump with a cleaning solvent or steam cleaner.

NOTE: Never steam clean or pour cold water on an injection pump while the engine is running or the pump is warm.

- b. Remove the injection lines from the pump and injectors. Remove all lines as an assembly. Do not remove the spacers. Cover the ends of the lines, the injector inlets, and the injection pump outlets to keep dirt out of the injectors, lines, and pump.

- c. Remove the injection pump drive gear cover plate and the sea water pump.
- d. Align timing marks on timing gears.
- e. Remove the pump support bracket on rear of pump.
- f. Remove the 4 mounting nuts.
- g. Take the pump to your Northern Lights dealer or an injection repair station for testing and service.

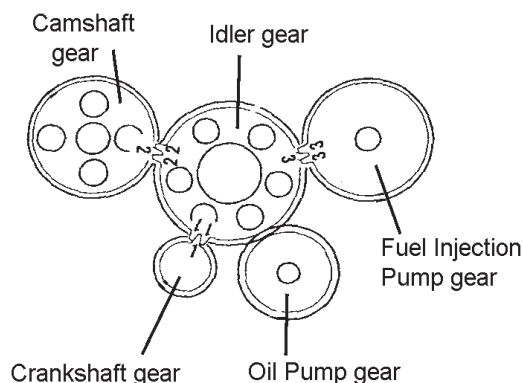


Figure 14: Timing Marks

5. Injection Pump Installation:
 - a. Install the fuel injection pump after having aligned its gear alignment mark with that of the idler gear alignment mark as shown in Figure 11 above. When the alignment marks of the timing gears align as in the diagram to the right, the No. 1 piston is top dead center in the compression stroke.
 - b. Install the injection pump to the side of the engine first then put in the end bolts, and then the tube with its bolts, and then the side bracket.
 - c. Torque mounting bolts to 13.0 - 18.1 ft/lbs (17.7 to 24.5 N•m), 1.8 to 2.5 kgf•m.

SP-13. TURBOCHARGER

1. Check for air leaks every 250 hours. Air leakage will lower engine output and may cause black exhaust smoke and soot.
2. Listen along air line while the engine is running. A whistling or hissing sound could indicate leakage.
3. Leakage on the pressure side, between turbo and engine, can be found by applying soapy water to the air line.
4. Tighten the hose clamps and replace hoses or gaskets as required.
5. Check to see that the lubrication and cooling lines are tight and without leaks.

Servicing

COOLING SYSTEM - GENERAL

NOTE: Be sure to close the sea-cock before working on the engine cooling system.



CAUTION: The cooling water in the engine reaches extremely high temperatures. You must use extreme caution when working on hot engines to avoid burns. Allow the engine to cool before working on the cooling system. Open the filler cap carefully, using protective clothing when the engine is warm.

WATER QUALITY

1. Distilled, deionized, soft water is preferred for use in cooling systems. Bottled distilled water from a food store or water supplier is recommended. Tap water often has a high mineral content. Tap water should NEVER be put in a cooling system unless first tested by a water quality laboratory. Do not use water made by the reverse osmosis method unless it has been PH neutralized.

2. Here are acceptable water quality specifications:

Contaminates	Parts per Million	Grains per Gallon
Maximum Chlorides	40	2.5
Maximum Sulfates	100	5.9
Maximum Dissolved Solids	340	20.0
Maximum Total Hardness	170	10.0
PH Level 5.5 to 9.0		

3. If chlorides, sulfates or total dissolved solids are higher than the above given specification, the water must be distilled, demineralized, or deionized before it is used in a cooling system.
4. If total hardness is higher than 170 ppm and all other parameters are within the given specifications, the water must be softened before it is used to make coolant solution.

SP-14. CHECKING COOLANT LEVEL

1. Check the coolant level each day before starting the engine.
 - a. Check the water level by removing the pressure cap from the expansion tank. In order to give the cooling water an opportunity to expand, the level should be about 1 in. (2.5 cm) below the filler cap sealing surface when the engine is cold.
 - b. Soft water with about a pH about 6.5 to 8.5 combined with an antifreeze in a 30% to 50% (maximum) solution should be used.
 - c. The antifreeze should not contain amine, silicate, or borate.

SP-15. COOLING SYSTEM FLUSHING

1. Flush the cooling system every 2000 hours or every 12 months, whichever comes first.
2. Remove fill cap and open drains on engine block. The engine block drain is on the service side of the engine above the dipstick, next to the flywheel housing.
3. Pour clean water into the engine until water coming from engine is clear of discoloration. Close drains and refill the engine with recommended coolant mixture.
4. Use 50% water / 50% (maximum) ethylene glycol antifreeze mix. Antifreeze mixture is recommended as a good year-round coolant.
5. Coolant capacity is approximately 3 gal. (11.4 liters).
6. Check hoses and connections and repair any leakage.
7. Start the engine and check for leaks. Run the engine for five minutes, then shut it down. Let engine cool, and then check the coolant level in the engine. Add coolant as needed.

NOTE: Be sure to open the sea-cock after working on the engine cooling system and starting the engine.

Servicing

SP-16. HEAT EXCHANGER

1. Clean the heat exchanger core as needed.
2. Drain the expansion tank and heat exchanger.
3. Remove the heat exchanger end covers.
4. Clean the inside of the exchanger core tubes using a metal rod. Flush, inspect, and clean again if necessary.

To remove scaling, cleaning the heat exchanger using a 50/50 mix of muriatic acid and water may be necessary. The heat exchanger will need to be removed from the generator. **To be performed only by qualified technician.**

5. Reassemble the heat exchanger. Fill the cooling system. Start the engine and check for leaks.

SP-17. RAW WATER PUMP

1. Change the raw water pump impeller every 500 hours, or as needed.
2. Remove the pump cover. Pry out the impeller using needle-nose pliers or two screwdrivers. Be sure to remove all pieces of the failed impeller.

NOTE: Place some kind of protection under the screwdrivers in order to not damage the pump housing.

3. Clean the inside of the housing.
4. Press in the new impeller and place the sealing plug in the outer end of the impeller center if this has not already been done.

NOTE: Make sure that there is always an extra impeller and cover gasket in reserve on board.

SP-18. ZINC ELECTRODES

1. A zinc electrode is installed in the heat exchanger cooling system to protect the engine from electrolysis. Check it faithfully every 250 hours. If you are in warm saltwater, or where electrolysis is a known problem, check it more often. Wear rate of zinc varies from vessel to vessel. Operators will develop their own service schedule based on observed wear pattern.
2. Remove the zinc holder from the bottom of the exchanger. This will drain raw water from the exchanger.
3. Scrape or steel brush the zinc electrode clean. If more than 50% of the electrode is corroded away, replace it with a new zinc. The electrode screws out of the holder.
4. Reinstall the zinc holders. Be sure the threads are clean for good metal-to-metal contact. Do not use thread sealant.
5. Refill the cooling system. Start the engine and check for leaks.

Servicing

GENERATOR END

The maintenance and operation recommendations for the generator end are in a separate Owner's Manual (OPX300K2 or OLXE, check generator end part number for correct manual)

Megger generator end windings every two years.

Generator end bearings should be replaced every 10,000 hours.

If you do not have one of these manuals, they can be obtained through the Northern Lights web site www.nothern-lights.com.

ELECTRICAL SYSTEM - GENERAL



CAUTION: *Excessive non-linear loads can lead to regulator and/or generator end failures and should be no greater than 20% of overall load. Failures caused by excessive non-linear loads are not warrantable.*

1. Never switch the battery switch off or break the circuit between the alternator and the batteries while the engine is running. Alternator damage can result.
2. Do not reverse the polarity of the battery cables when installing the battery.

BOOSTER BATTERIES



CAUTION: *Battery gas can explode. Keep all flames and sparks away from batteries.*

1. Before changing or using booster batteries, check the battery electrolyte level. Add distilled water if necessary.
2. Booster and main batteries must have the same voltage rating.
3. First, connect the positive (+) terminal of the booster battery to the positive (+) terminal of the main battery. Then, connect the negative (-) terminal of the booster battery to ground on the engine block (Figure 15).
4. Remove the booster battery after starting the engine.
5. Sealed Batteries:
See the manufacturer's charging and booster instructions.

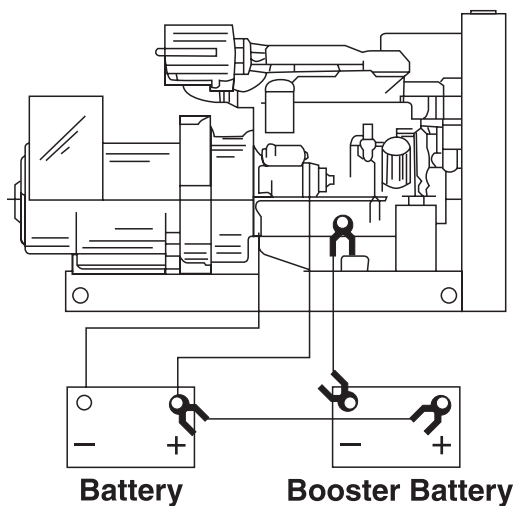


Figure 15: *Booster Battery Connections*

Servicing

BATTERY CARE**SP-19. CHECK ELECTROLYTE LEVELS**

1. Check the electrolyte level every 50 hours, or once a month. Add distilled water to the manufacturer's recommended level.

SP-20. CHECK CABLES AND TERMINALS

2. Batteries, cables, and cable terminals should be checked and cleaned every 100 hours. Clean corrosion with a water and baking soda solution. Flush with clean water. Tighten terminals and grease them to inhibit future corrosion.
3. Check the battery condition with a hydrometer every 500 hours.

SP-21. WINTERIZING / OUT-OF-SERVICE

If the generator set will not be used for more than 3 months the following preparations should be taken for long term storage.

- Change engine oil and filter.
- Start engine and operate it with no load for 1 to 2 minutes or enough time to circulate clean oil through the engine.
- Completely drain, flush, and fill the cooling system with pre-mixed, 50/50, conventional ethylene-glycol heavy-duty diesel engine coolant (with SCAs).
- Loosen alternator drive belt.
- Completely seal off intake and exhaust openings with heavy plastic bags and duct tape.

To Remove Generator Set from Long-Term Storage:

1. Take off all protective coverings and unseal all the openings that were covered up.
2. Install batteries that are fully charged and connect the terminals.
3. Install the fan and alternator belts if they had been removed.
4. Fill the fuel tank.
5. Perform all pre-start checks.
6. Crank the engine for 10 seconds with the starter, without letting the engine start. Wait 2 minutes and crank the engine an additional 10 seconds to make sure all bearing surfaces are well coated.
7. Start the engine and run at no load for several minutes. Make sure the engine is warmed up and check gauges before going under load.
8. Check all gauges and check for leaks.

Troubleshooting

DC ELECTRICAL SYSTEM

PROBLEM	POSSIBLE CAUSE	RECOMMENDATION(S)
Battery Will Not Charge	Loose or corroded connections	• Clean and tighten battery connections.
	Sulfated or worn out batteries	• Check specific gravity of each battery. • Check electrolyte level of each battery.
	Loose or defective alternator belt	• Adjust belt tension. • Replace belt.
Starter Inoperative	Check DC circuit breaker	• If the breaker is tripped, reset it.
	Loose or corroded connections	• Clean and tighten loose battery and harness plug connection.
	Low battery condition	• Check specific gravity of each battery. • Check electrolyte level of each battery.
	Defective electrical system ground wire:	• Repair or replace.
Starter Cranks Slowly	Low battery condition	• Battery is too small. • Battery cables are too small.
	Check specific gravity of each battery	• Replace battery if necessary.
	Check electrolyte level of each battery	• If low, fill cells with distilled water.
	Crankcase oil too heavy	• Fill with oil of appropriate viscosity.
	Loose or corroded connections	• Clean and tighten loose connections.
Entire Electrical System Does Not Function	Check DC circuit breaker	• If breaker is tripped, reset it.
	Faulty connection	• Clean and tighten battery and harness plug connections.
	Sulfated or worn out batteries	• Check specific gravity and electrolyte level of each battery.

If you cannot correct problems with these procedures, see your **Northern Lights** dealer.

Troubleshooting

ENGINE

PROBLEM	POSSIBLE CAUSE	RECOMMENDATION(S)
Engine Hard to Start or Will Not Start	Improper starting procedure	• See starting section of this manual. Take special note of Bypass Switch operation.
	No fuel	• Check level of fuel in fuel tank.
	Low battery condition	• Check electrolyte level and condition.
	Excessive resistance in starting circuit	• Clean and tighten all battery connections.
	Crankcase oil too heavy	• Use oil of proper viscosity.
	Improper type of fuel	• Consult fuel supplier and use proper type of fuel for operating condition.
	Water, dirt or air in fuel system	• Drain, flush, fill and bleed system.
	Clogged primary fuel filter element	• Clean or replace filter element.
	Clogged secondary fuel filter element	• Replace filter element.
Engine Runs Irregularly or Stalls Frequently	Dirty or faulty injection nozzles	• Have your dealer check injection nozzles.
	Below normal engine temperature	• Remove and check thermostat.
	Clogged primary fuel filter element	• Clean or replace filter element.
	Clogged secondary fuel filter element	• Replace secondary filter element.
	Water or dirt in the fuel system	• Drain, flush, fill and bleed system.
	Dirty or faulty injection nozzles	• Have your dealer check injection nozzles.
	Air in fuel system	• Inspect clamps and hoses on suction side of fuel pump for air leak.
Lack of Engine Power	Improper type of fuel	• Consult fuel supplier and use proper type of fuel for operating condition.
	Engine overloaded	• Reduce the load.
	Intake air restriction	• Service air cleaner.
	Clogged primary fuel filter element	• Clean or replace filter element.
	Clogged secondary fuel filter element	• Replace filter element.
	Improper type of fuel	• Consult fuel supplier and use proper type of fuel for operating conditions.
	Overheated engine	• See "Engine Overheats" in next category.
	Below normal engine temperature	• Remove and check thermostat.
	Improper valve clearance	• Reset valves. Best done by dealer.
	Dirty or faulty injection nozzles	• Replace injectors. Best done by dealer.

Troubleshooting

ENGINE

Lack of Engine Power (continued)

Low compression pressure
(worn piston rings, etc...)

- Consult dealer.

Engine Overheats

Engine overloaded

- Reduce the electrical load.

Low coolant level

- Fill tank or radiator to proper level.
- Check hoses for loose connections and leaks.

Keel cooling tubes (marine sets) have been painted

- Remove paint from tubes.

Cooling system needs flushing

- Flush cooling system.

Defective thermostat

- Remove and check thermostat.

Defective temperature gauge

- Check water temperature with thermometer and replace gauge if necessary.

Water pump impeller worn or broken

- Check the impeller and replace if necessary.

Engine Knocks

Insufficient oil

- Call your dealer.

Injection pump out of time

- Call your dealer.

Below normal engine temperature

- Check your thermostats.
- Check water temperature to see if temperature gauge is working properly.

Faulty fuel injector

- Call your dealer.

Engine overheating

- See "Engine Overheating" section.

High Fuel Consumption

Improper type of fuel

- Use correct fuel for temperature.

Clogged or dirty air cleaner

- Service air cleaner.

Engine overloaded

- Reduce the electrical load.

Improper valve clearance

- See your dealer.

Injection nozzles dirty

- See your dealer.

Injection pump out of time

- See your dealer.

Engine not at proper temperature

- Check your thermostats.
- Check water temperature with thermometer and replace gauge if necessary.

Below Normal Engine Temperature

Thermostats not working properly

- Check thermostats.

Temperature gauge not working properly

- Check water temperature with thermometer.

Low Oil Pressure

Low oil level

- Fill crankcase to proper level.

Improper type of oil

- Drain and fill crankcase with correct oil.

Partially plugged oil filter

- Replace filter.




Troubleshooting

ENGINE


PROBLEM	POSSIBLE CAUSE	RECOMMENDATION(S)
High Oil Consumption	Break-in period	• Oil consumption decreases after break in.
	Crankcase oil too light	• Use proper viscosity oil.
	Oil leaks	• Check for leaks in lines around gaskets and drain plug.
	Crankcase over full	• Remove excess oil.
Engine Emits Black or Gray Exhaust Smoke	Clogged or dirty air cleaner	• Service air cleaner.
	Defective muffler (back pressure too high)	• Have dealer check back pressure.
	Improper fuel	• Use correct fuel for temperature.
	Fuel pump faulty	• See your dealer.
	Injection nozzles dirty	• See your dealer.
	Engine overloaded	• Reduce the electrical load.
	Injection nozzles dirty	• See your dealer.
	Injection pump faulty	• Consult your dealer.
	Engine out of time	• See your dealer.
	Incorrect valve clearance	• Consult your dealer.
Engine Emits White Smoke	Improper fuel	• Use correct fuel for temperature.
	Cold engine	• Warm up engine to normal operating temperature.
	Defective thermostat	• Remove and check thermostat.
	Engine out of time	• See your dealer.
	Low Compression Pressure	• See your dealer.
	Low engine oil viscosity	• Use proper viscosity of oil to ambient temperature.
	Excessive amount of engine oil	• Maintain correct oil level.
	Fuel injection nozzles faulty (uneven injection)	• See your dealer.

If you cannot correct problems with these procedures, see your **Northern Lights** dealer.

AC Wiring Diagram

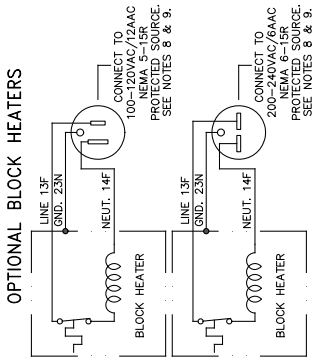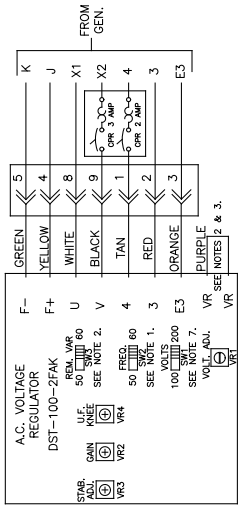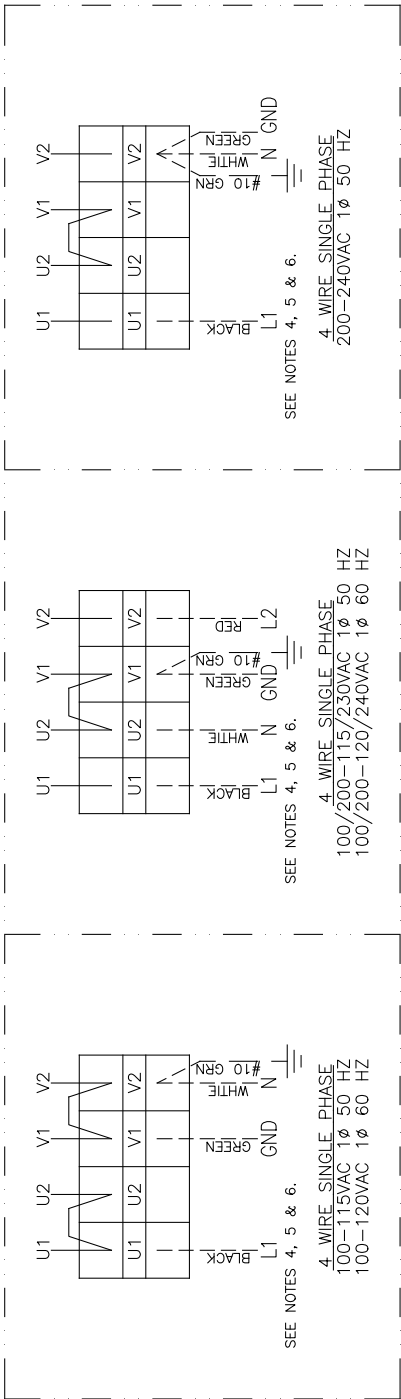

OPTIONAL BLOCK HEATERS

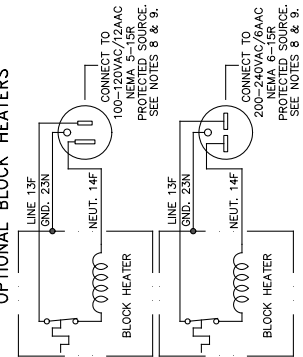

HEATER SPEC	VOLTAGE	500W CURRENT	750W CURRENT	1000W CURRENT	1500W CURRENT
120 VAC	100-120 VAC	5 A	7 A	10 A	13 A
240 VAC	200-240 VAC	3 A	4 A	5 A	7 A

AC Wiring Diagram


PX300K2 - DST 100 - 2FAK
B-9724J

Drawings subject to change without notice.


- NOTES:**
1. SET SW2 FOR CURRENT APPLICATION, (50 OR 60 HZ.)
 2. SET SW3 PER APPLICATION IF REMOTE VOLTAGE ADJUST RHEOSTAT IS USED.
 3. FOR REMOTE VOLTAGE ADJUST RHEOSTAT CUT JUMPER AND SPLICE INTO TERMINAL LEADS.
 4. IF REQUIRED, REMOVE AFFECTED LEADS FROM TERMINAL BLOCK(S) AND MAKE CONNECTIONS USING BOLT, LOCK WASHER AND NUT. ISOLATE BY WRAPPING WITH ELECTRICAL TAPE.
 5. MARINE GENSETS ARE GROUNDED BY CUSTOMER, AT CUSTOMER'S DISCRETION. INDUSTRIAL GENSETS ARE TO BE GROUNDED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ANY APPLICABLE LOCAL CODES.
 6. HIDDEN (DASHED) LINES INDICATE CUSTOMER SUPPLIED AND CONNECTED MAIN OUTPUT CONDUCTORS. SIZING TO BE DETERMINED PER INSTALLATION.
 7. AVR INPUT SENSING SWITCH SW1 IS TO BE SET TO THE 200V POSITION FOR ALL VOLTAGES EXCEPT 100-120VAC APPLICATIONS.
 8. DO NOT ENERGIZE HEATER WHEN UNIT IS IN OPERATION.
 9. REMOVE THREE-POLE PLUG AND WIRE BLOCK HEATER LEADS TO TERMINALS NUMBERED AS INDICATED FOR MARINE DUTY UNITS ONLY.

AC Wiring Diagram


GENERATOR JUNCTION BOX

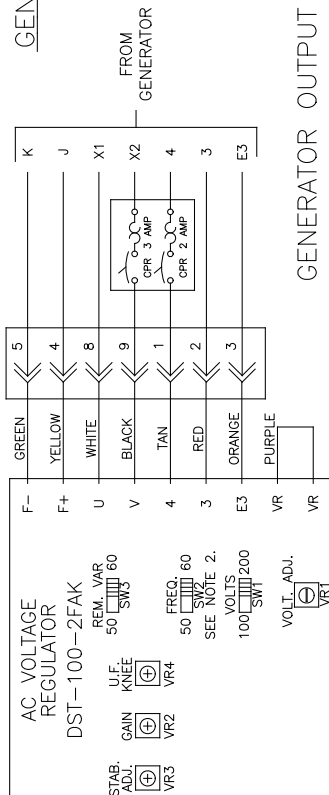

GENERATOR OUTPUT LEADS

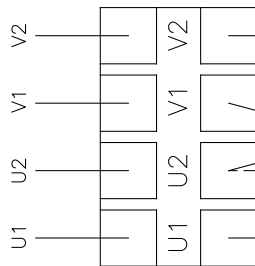

OUTPUT TERMINAL BOARD

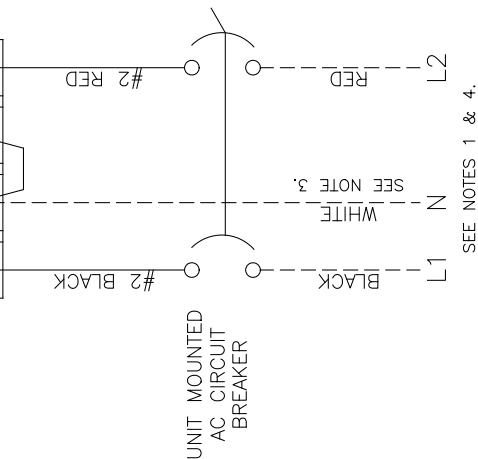


- NOTES:
1. HIDDEN (DOTTED) LINES REPRESENT CUSTOMER CONNECTIONS.
 2. WIRE SIZING TO BE DETERMINED PER INSTALLATION.
 3. SELECT FREQUENCY SETTING PER APPLICATION.
 4. IF LOWER VOLTAGE (100-120VAC) IS NOT REQUIRED, THE OUTPUT CONDUCTOR CONNECTED TO TERMINAL U2 IS DELETED AND THE L2 (RED) CONDUCTOR BECOMES NEUTRAL (WHITE).
 5. GENSETS ARE TO BE GROUNDED BY CUSTOMER, AT CUSTOMER'S DISCRETION.

AC Wiring Diagram


4-wire w/circuit breaker PX300K2 - DST 100-2FAK
B-8459E

Drawings subject to change without notice.

AC Wiring Diagram

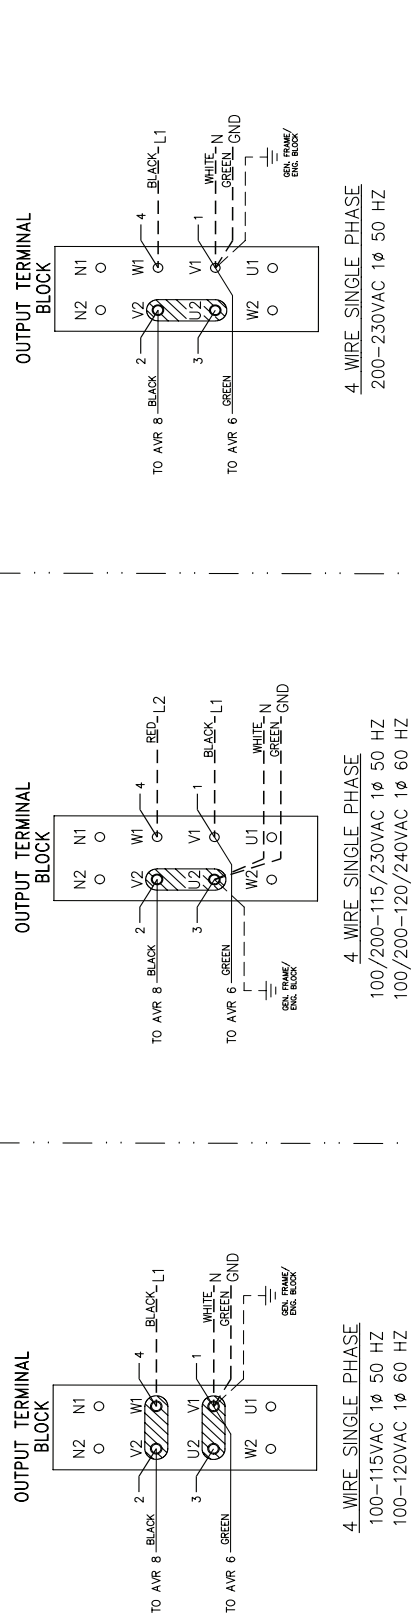


INDICATES LINK BAR USED.

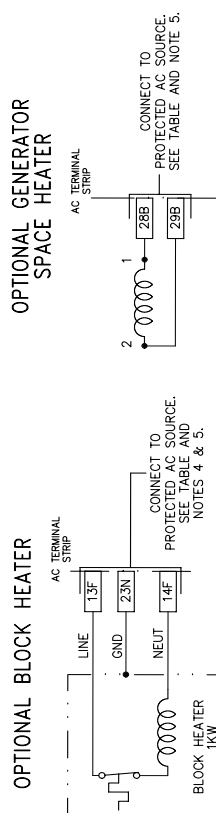

HEATER SPEC	VOLTAGE	CURRENT
120 VAC	100-120 VAC	9 A
240 VAC	200-240 VAC	5 A

HEATER SPEC	VOLTAGE	CURRENT
110 VAC	100-120 VAC	1 A
220 VAC	200-240 VAC	0.5 A

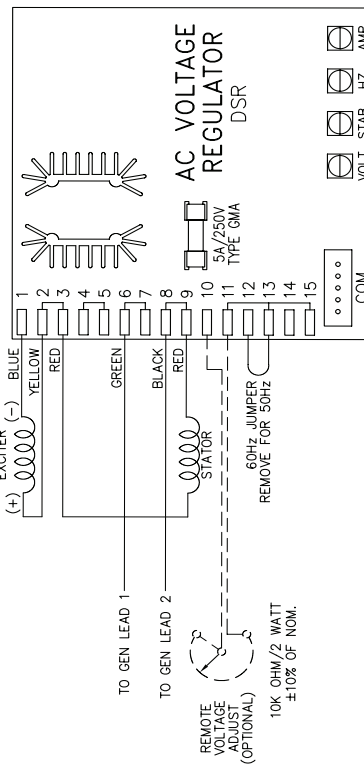

NOTES:

- ALL INSTALLATION CONDUCTORS ARE TO BE AWG 14, TYPE MTW, 105°C, 600VAC, STRANDED, EXCEPT AS NOTED.
- MARINE GENSETS ARE TO BE GROUNDED BY CUSTOMER ONLY, AT CUSTOMER'S DISCRETION. INDUSTRIAL GENSETS TO BE GROUNDED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ANY APPLICABLE LOCAL CODES.
- DASHED LINES INDICATE CUSTOMER SUPPLIED AND CONNECTED MAIN OUTPUT CONDUCTORS. SIZING DETERMINED PER INSTALLATION.
- REMOVE THREE-POLE PLUG AND WIRE BLOCK HEATER LEADS TO TERMINALS NUMBERED AS INDICATED FOR MARINE DUTY UNITS ONLY.
- DO NOT ENERGIZE HEATER WHEN UNIT IS IN OPERATION.

AC Wiring Diagram


M40C3F, M40C3FR

4-wire MeccAlite DSR

B-10606

Drawings subject to change without notice.

AC Wiring Diagram

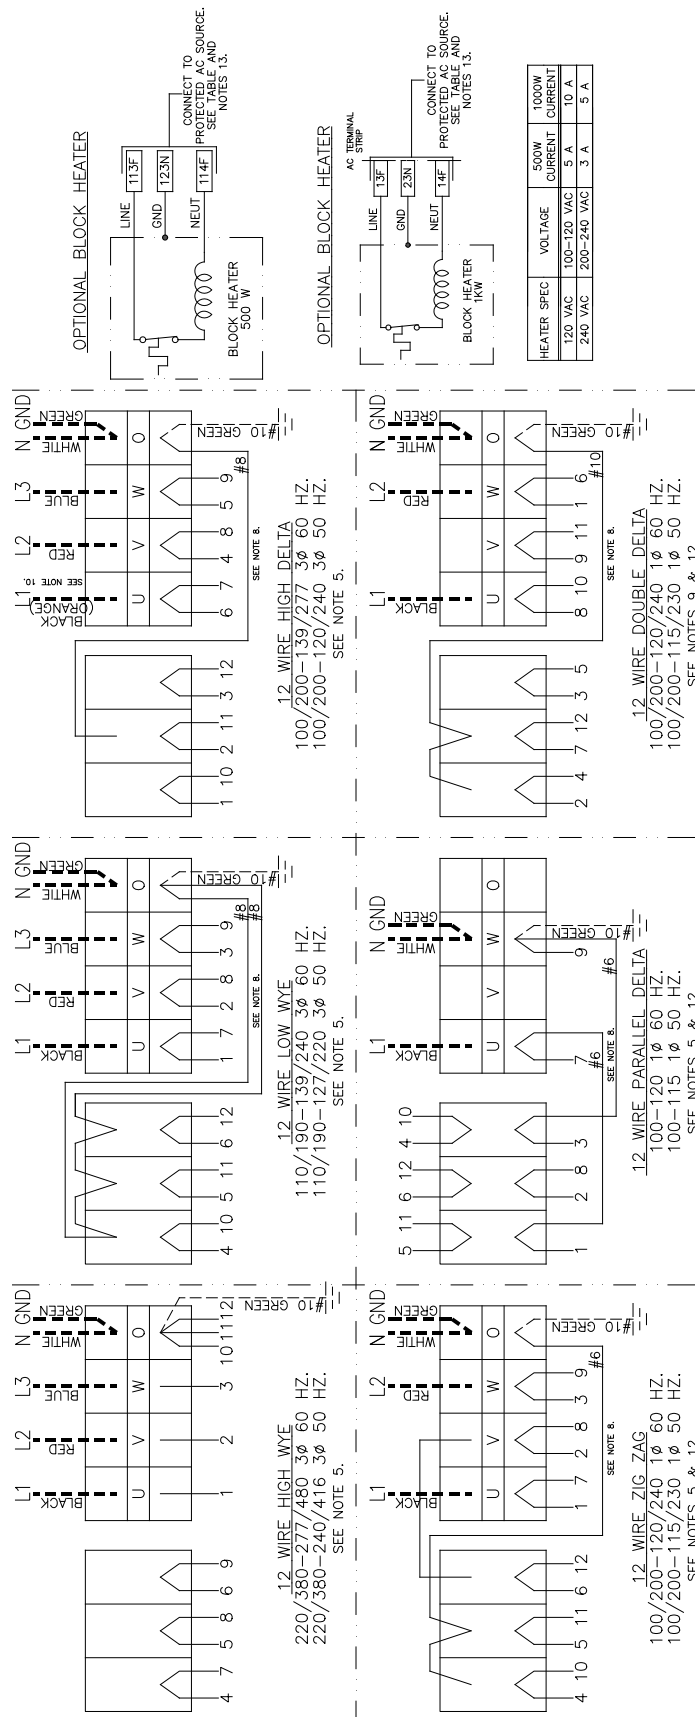

REVISION	DATE	DESCRIPTION	BY	CHK
1	10/14/2019	CHANGED NOTE 12 TO COVER 30-30 KW MODELS IN PLACE OF MOD043	ENR	ENR
2	10/14/2019	ADDED REV 1.000	ENR	ENR
3	5/7/2019	REVISED HEATER TABLE	ENR	ENR
4	2/19/2018	ADDED OPTIONAL 300V BLOCK HEATER	ENR	ENR
5	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
6	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
7	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
8	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
9	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
10	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
11	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
12	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
13	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
14	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
15	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
16	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
17	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
18	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
19	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
20	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
21	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
22	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
23	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
24	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
25	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
26	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
27	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
28	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
29	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
30	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
31	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
32	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
33	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
34	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
35	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
36	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
37	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
38	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
39	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
40	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
41	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
42	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
43	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
44	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
45	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
46	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
47	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
48	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
49	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
50	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
51	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
52	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
53	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
54	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
55	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
56	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
57	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
58	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
59	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
60	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
61	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
62	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
63	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
64	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
65	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
66	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
67	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
68	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
69	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
70	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
71	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
72	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
73	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
74	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
75	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
76	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
77	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
78	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
79	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
80	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
81	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
82	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
83	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
84	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
85	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
86	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
87	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
88	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
89	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
90	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
91	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
92	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
93	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
94	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
95	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
96	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
97	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
98	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR
99	10/14/2016	REVISED THE 18 WIRE TABLE TO INCLUDE 18 WIRE ONLY. SEE NOTE 13.	ENR	ENR
100	10/14/2016	ADDED NOTE: MARKING THE 18 AS BEING FOR MODEL MOD043 ONLY.	ENR	ENR

NOTES:

- ALL NLI INSTALLED CONDUCTORS ARE TO BE TYPE MTW, 105°C, STRANDED, 600VAC.
- SET SW2 FOR CURRENT APPLICATION, (50 OR 60 HZ).
- FOR REMOTE VOLTAGE ADJUST, RHEOSTAT IS USED.
- DELETE NEUTRAL CONDUCTOR (AND JUMPER IF PRESENT), IF LOWER VOLTAGE IS NOT REQUIRED.
- MARINE GENSETS ARE GROUNDED BY CUSTOMER, AT CUSTOMER'S DISCRETION, INDUSTRIAL GENSETS ARE TO BE GROUNDED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ANY APPLICABLE LOCAL CODES.
- THICK HIDDEN (DASHED) LINES INDICATE CUSTOMER SUPPLIED AND CONNECTED MAIN OUTPUT CONDUCTORS.
- SIZING TO BE DETERMINED PER INSTALLATION.
- NEUTRAL CONDUCTORS SIZED FOR 30KW UNITS AT THE LOWEST LISTED VOLTAGE. CONSULT N.L.I. ENGINEERING FOR SIZING OF 30KW UNITS AT FACE/BACK OF UNIT.
- THE DOUBLE DELTA CONFIGURATION REQUIRES THE AVR TO BE REQUIRED AS FOLLOWS: DISCONNECT LEADS 3, AND 4 FROM AVR. CONNECT LEAD 3 TO AVR TERM. 4 (THROUGH C.B.), CONNECT LEAD 4 TO AVR TERM. 3. DISCONNECT LEAD E3 FROM AVR AND ISOLATE. CONNECT AVR TERMINAL E3 TO MAIN OUTPUT BLOCK TERM. "W". USING A RED AWG 14 LEAD.
- LINE ONE (HIGH LEGS) TO BE MARKED ORANGE WHEN NEUTRAL IS PRESENT, IN ACCORDANCE WITH ARTICLE 215-8 OF THE NATIONAL ELECTRICAL CODE.
- 18 WIRE HEATER WITH SW1 IS TO BE SET TO THE 200V POSITION FOR ALL VOLTAGES EXCEPT 100-120VAC APPLICATIONS.
- THE 18 WIRING OPTIONS ARE FOR 16 KW THRU 30 KW MODELS ONLY.
- DO NOT ENERGIZE HEATER WHEN UNIT IS IN OPERATION.

AC Wiring Diagram

12-wire PX300K2 - DST 100-2FAK
B-9723H


Drawings subject to change without notice.



1. ALL N.L.I. INSTALLED CONDUCTORS ARE TO BE TYPE MTW, 105°C, STRANDED, 600VAC.
2. SET SW2 FOR CURRENT APPLICATION, (50 OR 60 HZ)
3. SET SW3 PER APPLICATION IF REMOTE VOLTAGE ADJUST RHEOSTAT IS USED.
4. FOR REMOTE VOLTAGE ADJUST RHEOSTAT CUT JUMPER AND SPLICE INTO PLEULE LEADS.
5. DELETE NEUTRAL CONDUCTOR (AND JUMPER IF PRESENT), IF LOWER VOLTAGE IS NOT REQUIRED.
6. MARINE GENSETS ARE GROUNDED BY CUSTOMER, AT CUSTOMER'S DISCRETION.
7. THICK ODDEN (DASHED) LINES INDICATE CUSTOMER SUPPLIED AND CONNECTED MAIN OUTPUT CONDUCTORS. SIZING TO BE DETERMINED PER INSTALLATION.
8. NEUTRAL CONDUCTORS SIZED FOR 38KW UNITS AT THE LOWEST LISTED VOLTAGE. CONSULT NLI ENGINEERING FOR CONDUCTOR SIZING AT OTHER GENSET VOLTAGE/KW RATINGS.
9. LINE ONE (HIGH LEG) TO BE MARKED ORANGE WHEN NEUTRAL IS PRESENT. IN ACCORDANCE WITH ARTICLE 215-8 OF THE NATIONAL ELECTRIC CODE. DO NOT ENERGIZE HEATER WHEN UNIT IS IN OPERATION.

AC Wiring Diagram



GENERATOR JUNCTION BOX

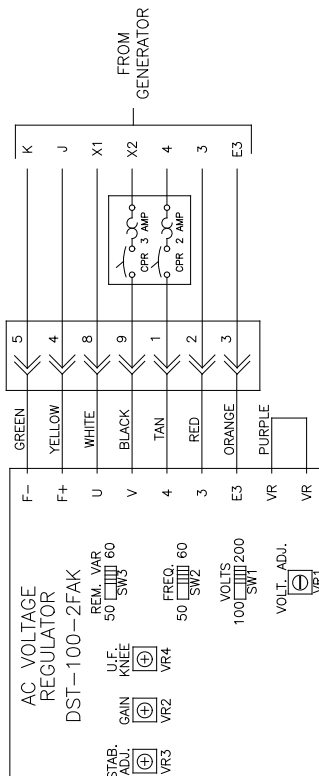

- NOTES:**
1. ALL NU INSTALLED CONDUCTORS ARE TO BE TYPE MTW, 105°C, STRANDED, 600VAC.
 2. MARINE GENSETS ARE GROUNDED BY CUSTOMER. AT CUSTOMER'S DISCRETION.
 3. THICK HIDDEN (DASHED) LINES INDICATE CUSTOMER SUPPLIED AND CONNECTED MAIN OUTPUT CONDUCTORS. SIZING TO BE DETERMINED PER INSTALLATION.

120/240VAC 1 Ø 60 HZ

OUTPUT TERMINAL BLOCKS

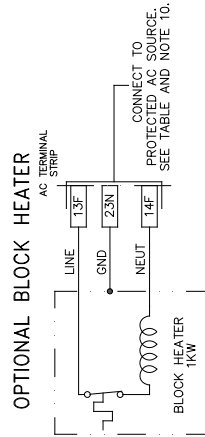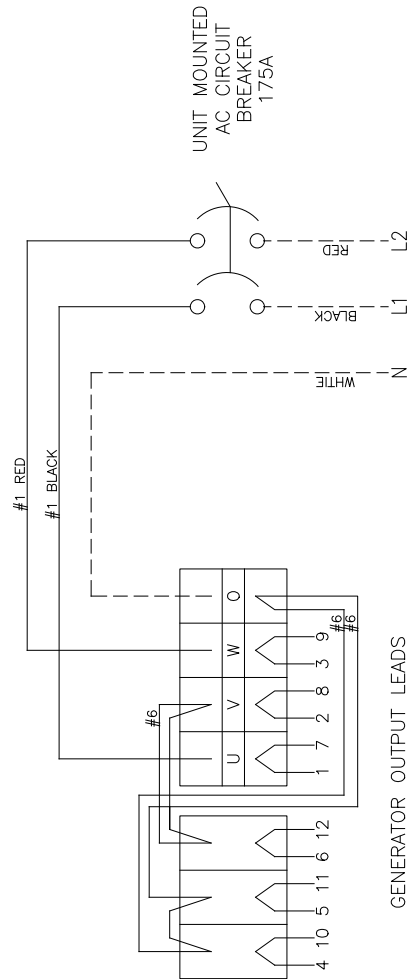



HEATER SPEC	VOLTAGE	CURRENT
120 VAC	100-120 VAC	9 A
240 VAC	200-240 VAC	5 A

AC Wiring Diagram M944T3F

12-wire ZigZag w/circuit breaker LX-E 34E - DST-100-2FAK
B-10597A

Drawings subject to change without notice.


AC Wiring Diagram

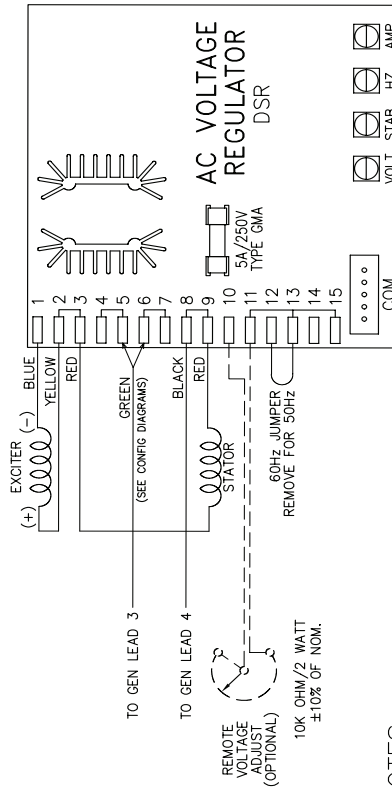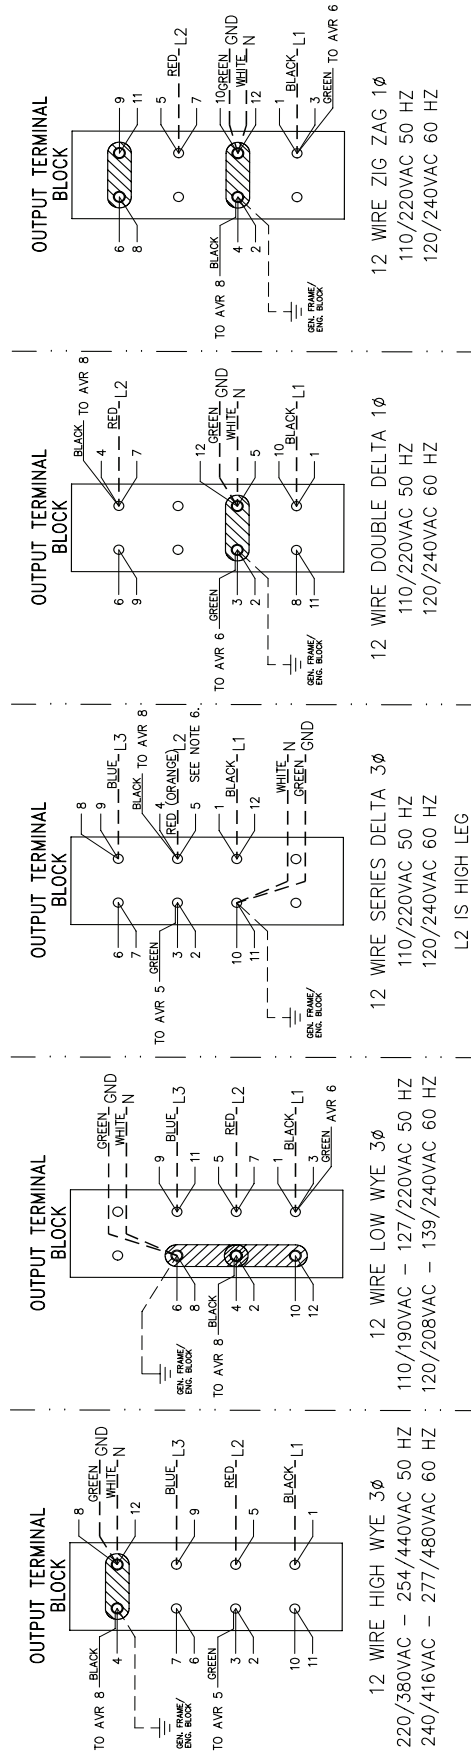

NOTES:


1. ALL INSTALLATION CONDUCTORS ARE TO BE AWG 14.
2. TYPE MTW, 105°C, 600VAC, STRANDED, EXCEPT AS NOTED.
3. MARINE GENSETS ARE TO BE GROUNDED BY CUSTOMER ONLY. AT CUSTOMER'S DISCRETION, INDUSTRIAL GENSETS TO BE GROUNDED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ANY APPLICABLE LOCAL CODES.
4. DELETE NEUTRAL CONNECTION IF L-N VOLTAGE IS NOT REQUIRED.
5. CONNECT GREEN SENSE LEAD FROM GENERATOR LEAD 3 TO AVR TERMINAL 5 OR 6 PER INDIVIDUAL CONFIGURATION DIAGRAMS.
6. DASHED LINES INDICATE CUSTOMER SUPPLIED AND CONNECTED MAIN OUTPUT CONDUCTORS. SIZING DETERMINED PER INSTALLATION.
7. HIGH LEG IS TO BE MARKED ORANGE WHEREVER NEUTRAL IS PRESENT, IN ACCORDANCE WITH ARTICLE 215-8 OF THE NATIONAL ELECTRICAL CODE.
8. REMOVE THREE-POLE PLUG AND WIRE BLOCK HEATER LEADS TO TERMINALS NUMBERED AS INDICATED FOR MARINE DUTY UNITS ONLY.

OPTIONAL GENERATOR SPACE HEATER

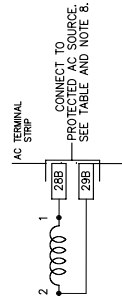

HEATER SPEC	VOLTAGE	CURRENT
110 VAC	100-120 VAC	1 A
220 VAC	200-240 VAC	0.5 A

OPTIONAL BLOCK HEATER

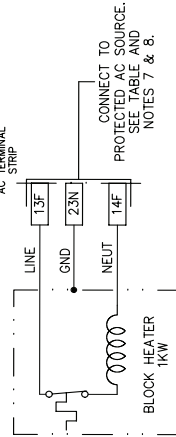

HEATER SPEC	VOLTAGE	CURRENT
120 VAC	100-120 VAC	9 A
240 VAC	200-240 VAC	5 A




INDICATES LINK BAR USED.

AC Wiring Diagram

M40C3F, M40C3FR three phase
12-wire Mecc Alte - ECP32-3L/4B.3 - DSR
B-10539A
Drawings subject to change without notice.

AC Wiring Diagram

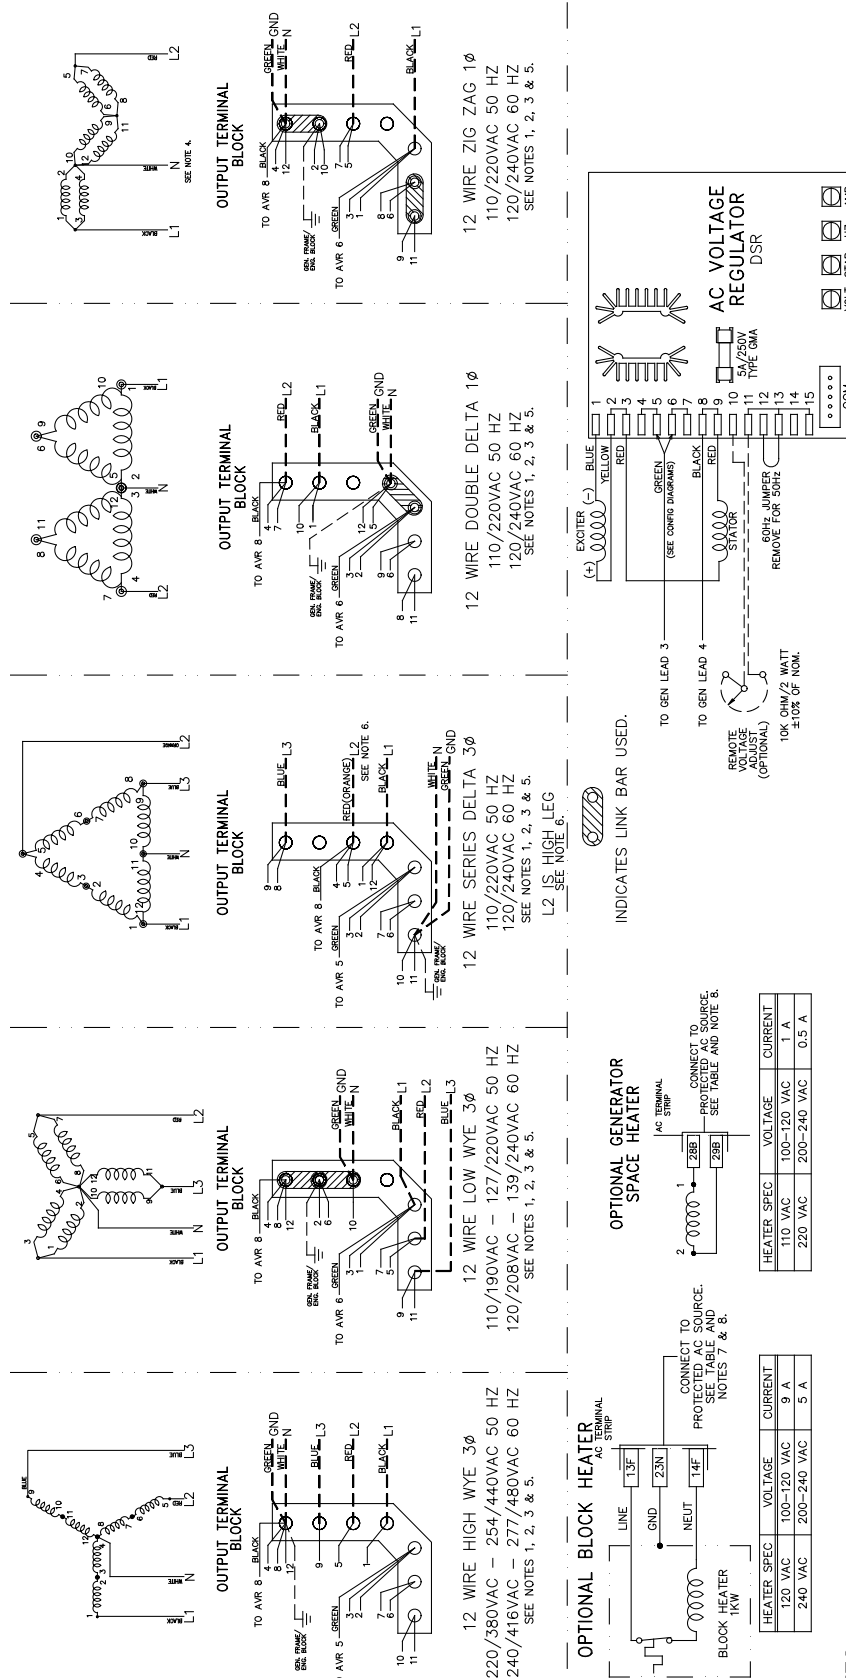

NOTES:

1. ALL INSTALLATION CONDUCTORS ARE TO BE AWG 14.
2. TYPE MTW, 105°C, 600VAC, STRANDED, EXCEPT AS NOTED.
3. GENERATOR TO BE GROUNDING BY CUSTOMER ONLY. AT CUSTOMER DISCRETION, INDIVIDUAL PHASES MAY BE GROUNDING IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ANY APPLICABLE LOCAL CODES.
4. REMOVE NEUTRAL CONNECTION IF L-N VOLTAGE IS NOT REQUIRED.
5. CONNECT GREEN SENSE LEAD FROM GENERATOR LEAD 3 TO AVR TERMINAL 5 OR 6 PER INDIVIDUAL CONFIGURATION DIAGRAMS.
6. MAIN OUTPUT CONDUCTORS: SIZING DETERMINED PER INSTALLATION. REMOVE THREE-POLE PLUG AND WIRE BLOCK HEATER LEADS TO TERMINALS 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15 OF THE NATIONAL ELECTRICAL CODE IN ACCORDANCE WITH ARTICLE 215-8 OF THE NATIONAL ELECTRICAL CODE.
7. NUMBERED AS INDICATED FOR MARINE DUTY UNITS ONLY.
8. DO NOT ENERGIZE HEATER WHEN UNIT IS IN OPERATION.


AC Wiring Diagram

12-wire Mecc Alte - ECP32-1L4C-DSR


B-11861

Drawings subject to change without notice.

AC Wiring Diagram

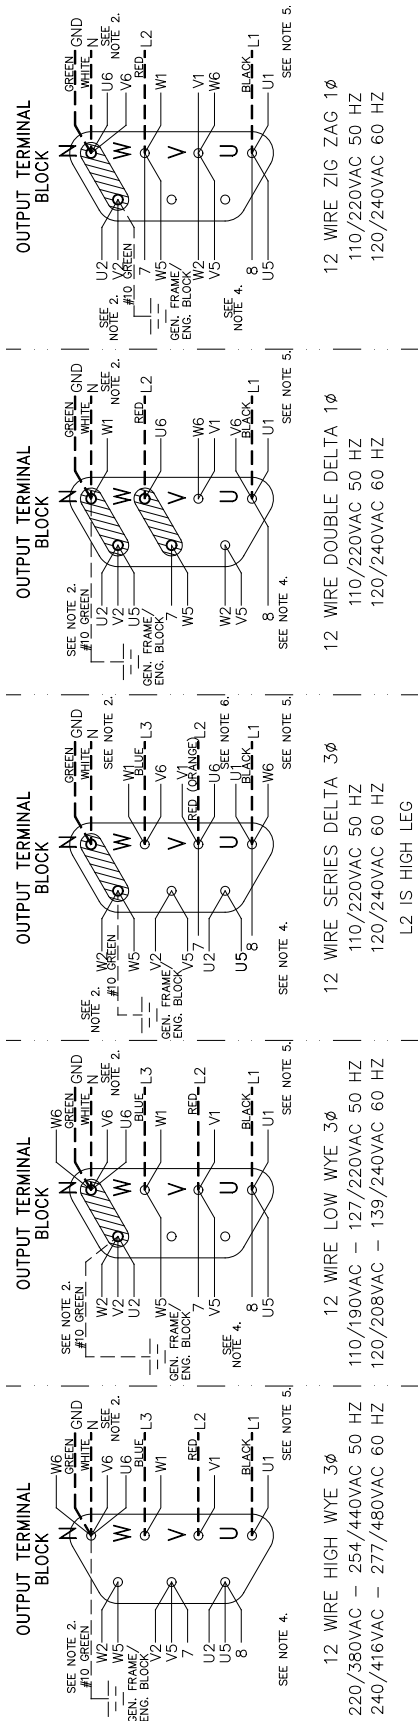


INDICATES LINK BAR USED.

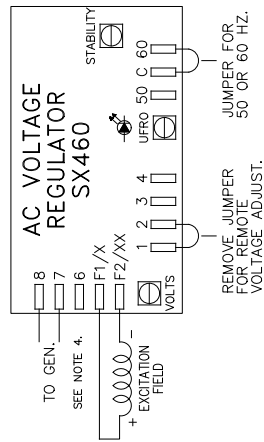


NOTES:

1. ALL INSTALLATION CONDUCTORS ARE TO BE AWG 14, TYPE MTW, 105°C, UNLESS OTHERWISE SPECIFIED.
2. ALL WIRING MUST BE GROUNDED BY CUSTOMER ONLY. AT CUSTOMER'S DISCRETION, INDUSTRIAL GENSSETS TO BE GROUNDED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ANY APPLICABLE LOCAL CODES.
3. DELETE NEUTRAL CONNECTION IF L-N VOLTAGE IS NOT REQUIRED.
4. CONNECT LEADS SEVEN AND EIGHT TO TERMINALS SEVEN AND EIGHT ON THE SX460. UNUSED LEAD SIX IS TO REMAIN DISCONNECTED.
5. DASHED LINES INDICATE CUSTOMER SUPPLIED AND CONNECTED MAIN OUTPUT CONDUCTORS. SIZING DETERMINED PER INSTALLATION.
6. HIGH LEG IS TO BE MARKED ORANGE WHEREVER NEUTRAL IS PRESENT, IN ACCORDANCE WITH ARTICLE 215-8 OF THE NATIONAL ELECTRICAL CODE.
7. REMOVE THREE-POLE PLUG AND WIRE BLOCK HEATER LEADS TO TERMINALS NUMBERED AS INDICATED FOR MARINE DUTY UNITS ONLY.
8. DO NOT ENERGIZE HEATERS WHEN UNIT IS IN OPERATION.


OPTIONAL TANK-TYPE BLOCK HEATERS

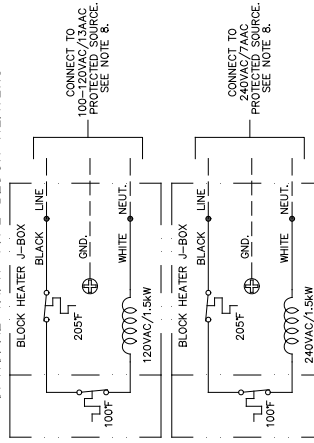

OPTIONAL INTERNAL BLOCK HEATERS

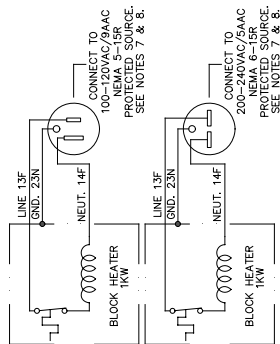

OPTIONAL GENERATOR SPACE HEATERS

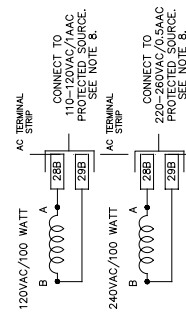
AC Wiring Diagram
M944T3F

AC Stamford SX460

B-10180A


Drawings subject to change without notice.

AC Wiring Diagram

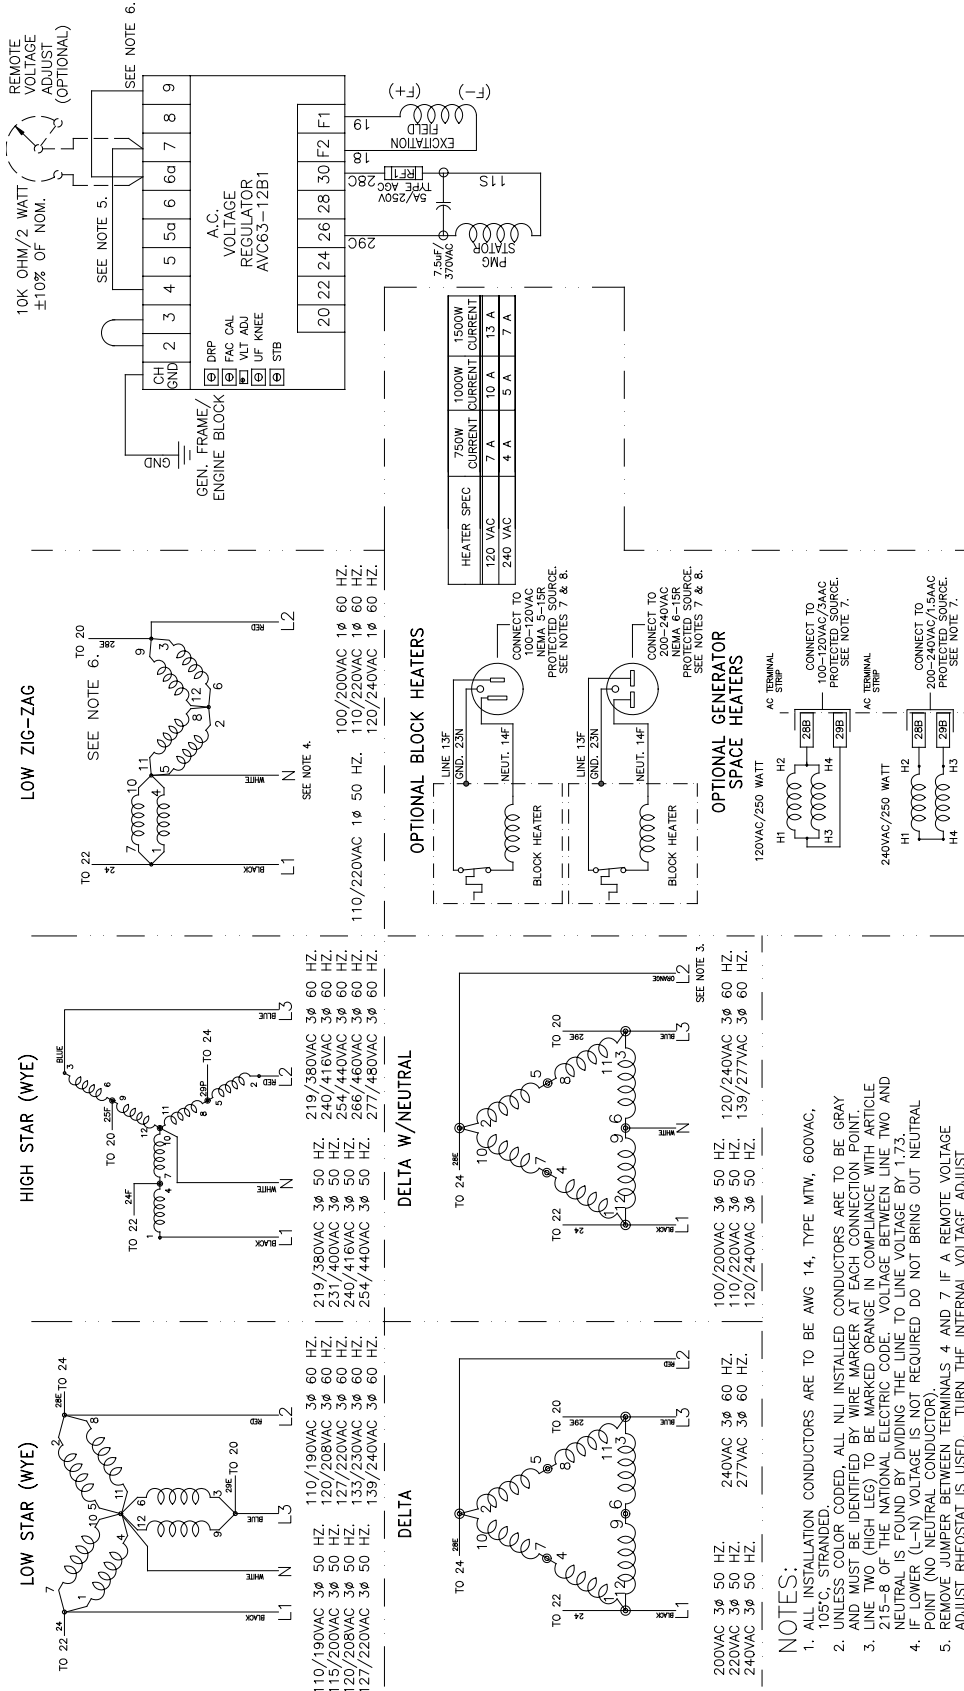


AC Wiring Diagram
M40C3F, M40C3FR
Marathon AVC63-12B1 w/PMG
B-7429Q
Drawings subject to change without notice.

 
- NOTES:**
1. ALL INSTALLATION CONDUCTORS ARE TO BE AWG 14, TYPE MTW, 600VAC, 105°C, STRANDED.
 2. UNLESS COLOR CODED, ALL NLI INSTALLED CONDUCTORS ARE TO BE GRAY AND MUST BE IDENTIFIED BY WIRE MARKER AT EACH CONNECTION POINT.
 3. LINE TWO (HIGH LEG) TO BE MARKED ORANGE IN COMPLIANCE WITH ARTICLE 215-8 OF THE NATIONAL ELECTRIC CODE. VOLTAGE BETWEEN LINE TWO AND NEUTRAL IS FOUND BY DIVIDING THE LINE TO LINE VOLTAGE BY 1.73.
 4. IF LOWER (L-N) VOLTAGE IS NOT REQUIRED DO NOT BRING OUT NEUTRAL POINT (NO NEUTRAL CONDUCTOR).
 5. REMOVE JUMPER BETWEEN TERMINALS 4 AND 7 IF A REMOTE VOLTAGE ADJUST RHEOSTAT IS USED. TURN THE INTERNAL VOLTAGE ADJUST POTENTIOMETER FULLY CLOCKWISE FOR PROPER REMOTE VAR OPERATION.
 6. REMOVE JUMPER BETWEEN TERMINALS 6a AND 9 FOR SINGLE PHASE SENSING.
 7. DO NOT ENERGIZE HEATERS WHILE UNIT IS IN OPERATION.
 8. REMOVE THREE-POLE PLUG AND WIRE BLOCK HEATER LEADS TO TERMINALS NUMBERED AS INDICATED FOR MARINE DUTY UNITS ONLY.



1. ALL INSTALLATION CONDUCTORS ARE TO BE AWG 16, TYPE MTW, 600VAC, 105°C, MULTISTRAND, EXCEPT THE ENGINE WIRE, HARNESS, UNTESTED PAIRS AND AS NOTED.
2. ALL UNTESTED PAIRS AND AS NOTED.
3. ALL UNTESTED PAIRS AND AS NOTED.
4. ALL UNTESTED PAIRS AND AS NOTED.
5. REMOVE SHUTDOWN WIRE (SOR) AND DISCONNECT DIOE CONNECTION AS SHOWN WHEN USING WITH ELECTRONIC CONTROL PANELS AND AS NOTED.
6. 50 OVERSPEED SWITCH TRIP _____ 1895 RPM (3192 HZ)
7. 60 OVERSPEED SWITCH TRIP _____ 2034 RPM (3831 HZ)
8. FOR DIP SWITCHES, LEAVE SWITCH 3 & 4 ON AND REST OF THE SWITCHES REMAIN OFF.
9. UNTESTED PAIR SHIELDERS ARE TO BE ENGINE BLOCK GROUNDED AT ONE END AND SHIELDING AT THE OTHER.
10. IF TWO GAUGED CONTROL PANELS ARE USED, DUAL STATION SENSORS MUST BE INSTALLED.
11. WIRE OPTIONAL 24V PTO CLUTCH TO TERMINAL STATION IN J-BOX.
12. WIRE OPTIONAL 24V PTO CLUTCH TO TERMINAL STATION IN J-BOX.
13. WIRE OPTIONAL PANEL CONNECTION.
14. WIRE OPTIONAL PANEL CONNECTION.

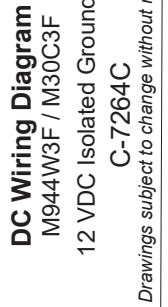

DC Wiring Diagram

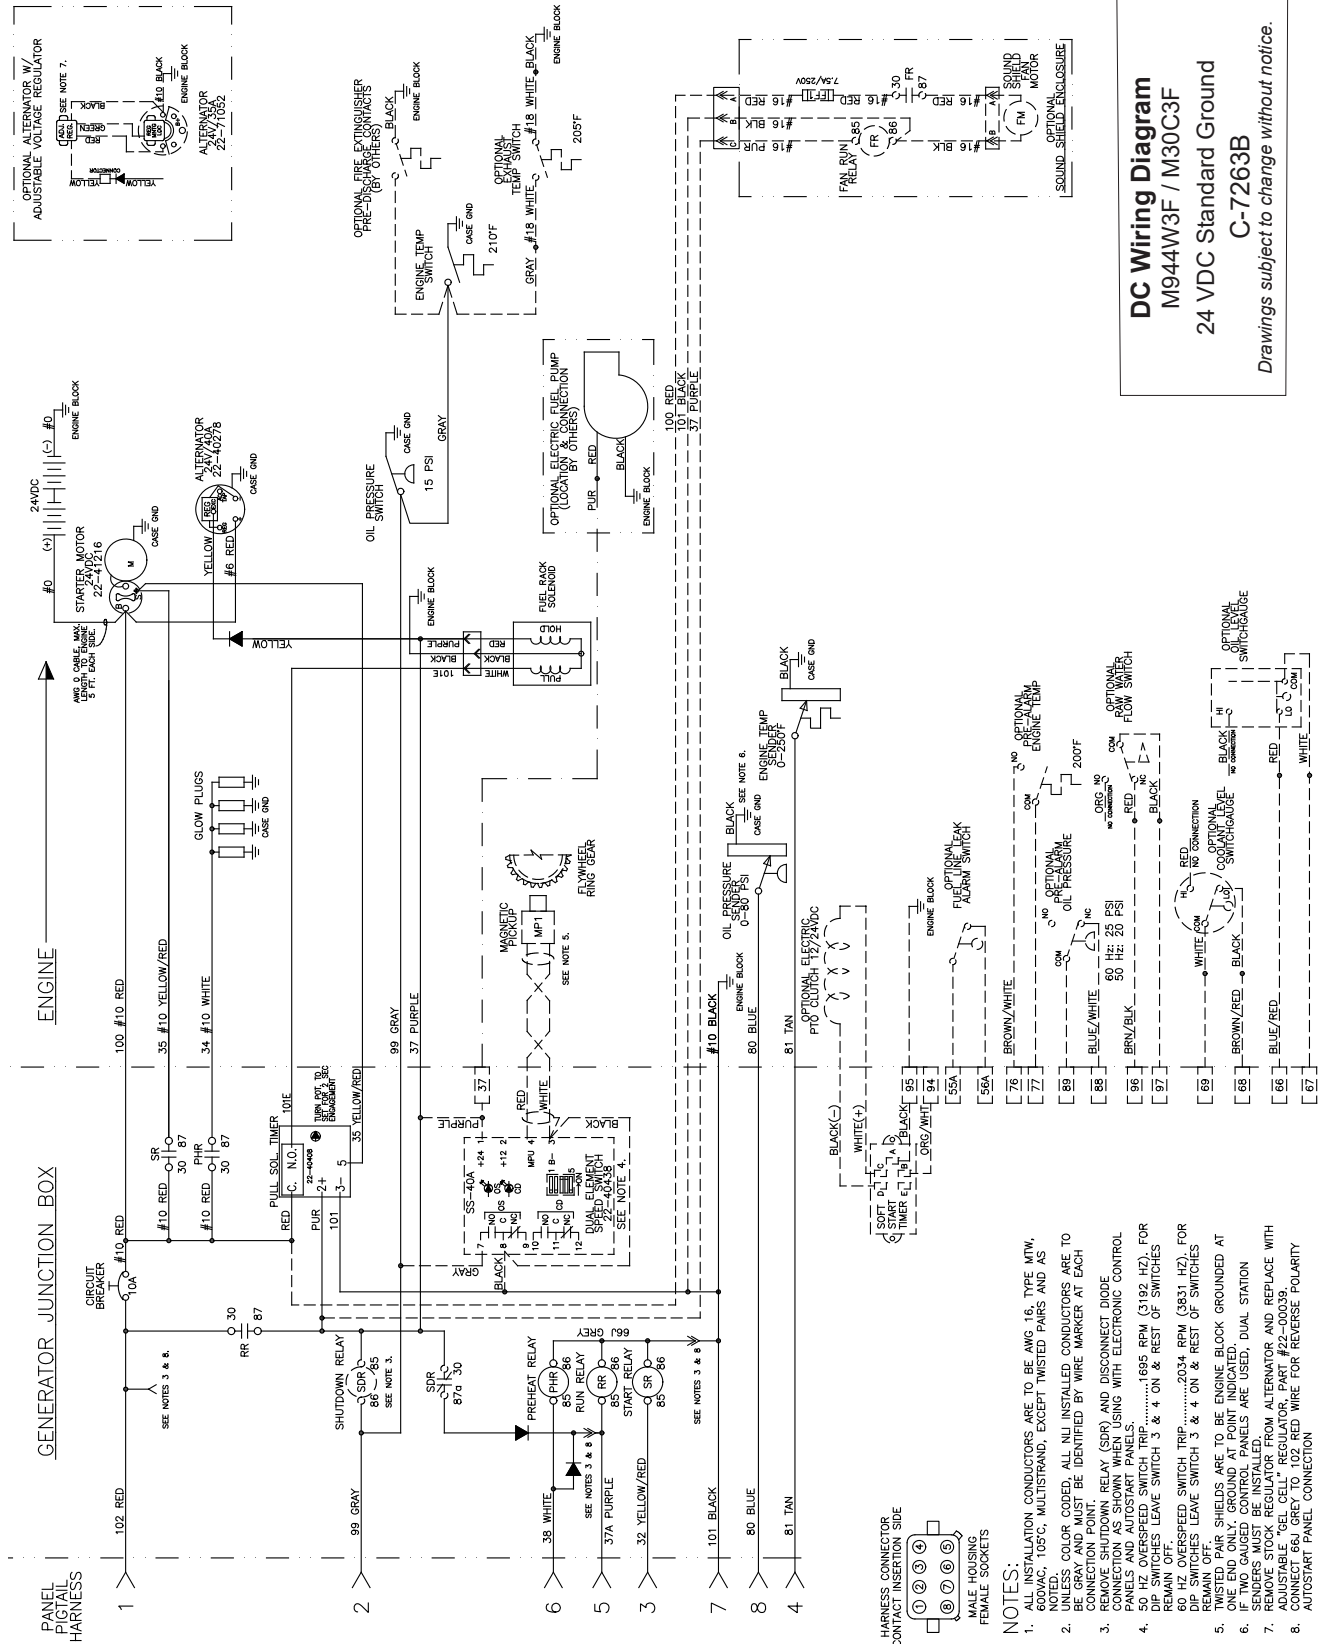


DC Wiring Diagram
M944W3F / M30C3F
24 VDC Standard Ground
C-7263B

Drawings subject to change without notice.




DC Wiring Diagram

DC Wiring Diagram
M944W3FG
12 VDC Standard Ground
C-7514A
Drawings subject to change without notice.

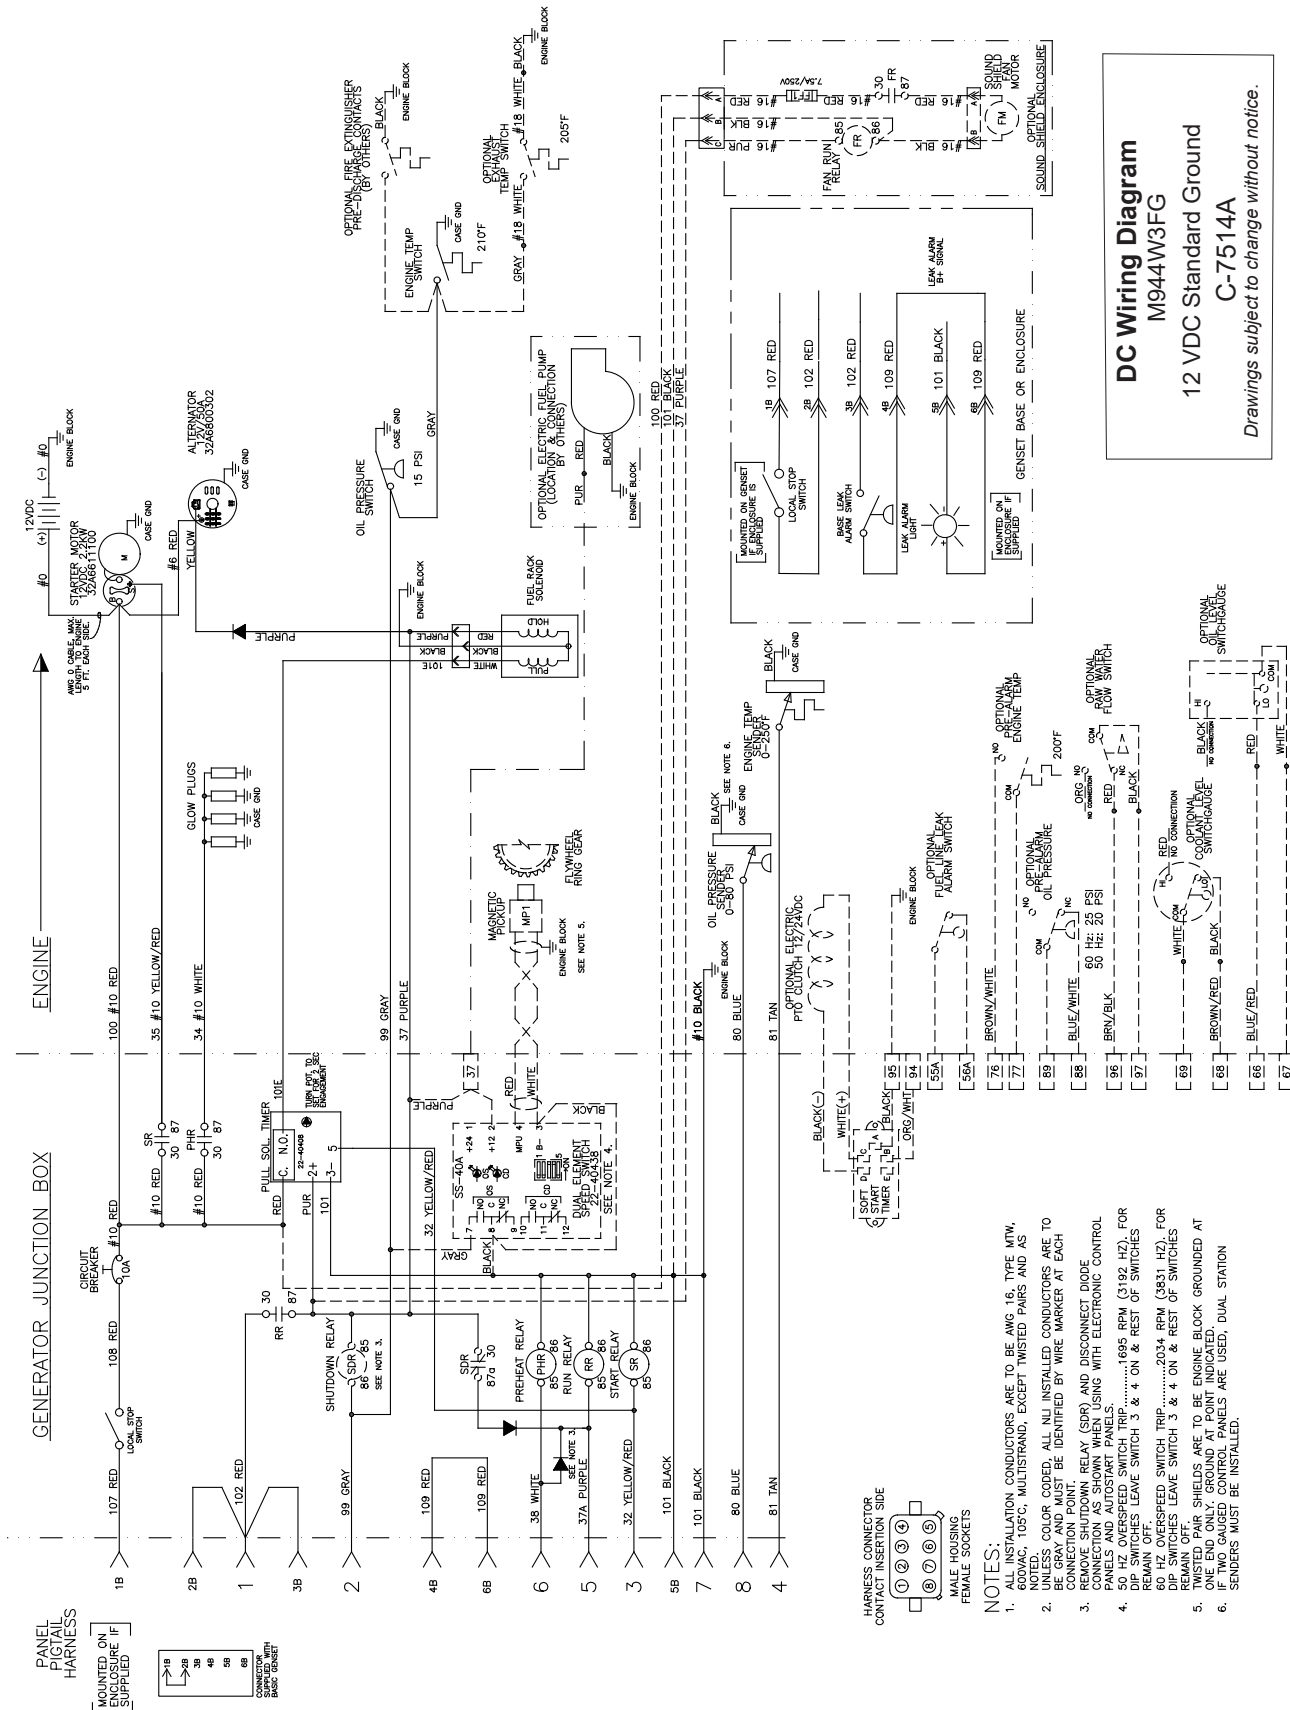

DC Wiring Diagram

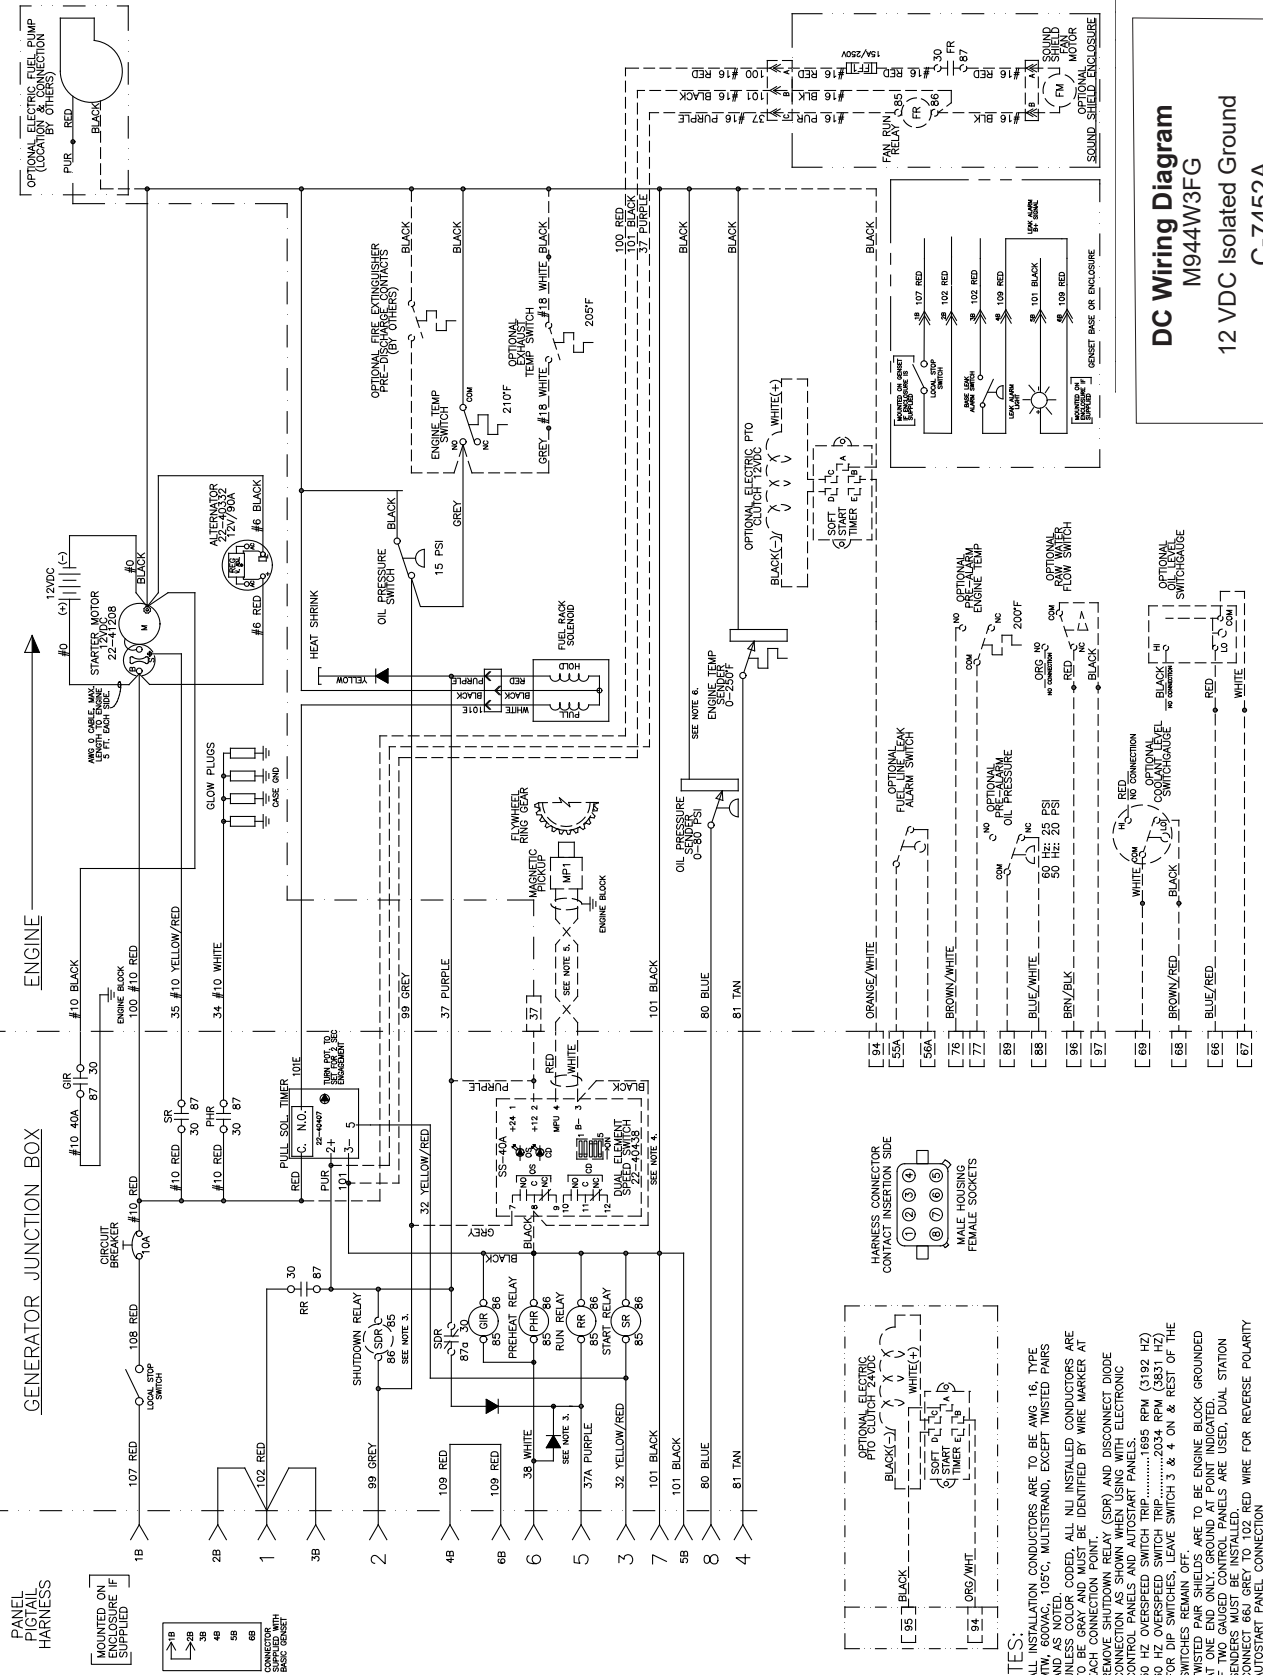

DC Wiring Diagram
M944W3FG
12 VDC Isolated Ground
C-7452A

Drawings subject to change without notice.

 
NOTES:

1. **INSULATION CONDUCTORS ARE TO BE AWG 16, TYPE TW, 90°C, 105°C, MULTISTRAND, EXCEPT TWISTED PAIRS AND AS NOTED.**
2. **UNLESS COLOR CODED, ALL NU INSULATED CONDUCTORS ARE TO BE IDENTIFIED BY WIRE MARKER AT EACH CONNECTION POINT.**
3. **REMOVE SHUTDOWN RELAY (SDR) AND DISCONNECT DIODE CONNECTION AS SHOWN WHEN USING WITH ELECTRONIC CONTROL PANELS AND AUTOSTART PANELS.**
4. **TO OVERSEED CH 3000, CH 3001, CH 3002, CH 3003, CH 3004, CH 3005, CH 3006, CH 3007, CH 3008, CH 3009, CH 3010, CH 3011, CH 3012, CH 3013, CH 3014, CH 3015, CH 3016, CH 3017, CH 3018, CH 3019, CH 3020, CH 3021, CH 3022, CH 3023, CH 3024, CH 3025, CH 3026, CH 3027, CH 3028, CH 3029, CH 3030, CH 3031, CH 3032, CH 3033, CH 3034, CH 3035, CH 3036, CH 3037, CH 3038, CH 3039, CH 3040, CH 3041, CH 3042, CH 3043, CH 3044, CH 3045, CH 3046, CH 3047, CH 3048, CH 3049, CH 3050, CH 3051, CH 3052, CH 3053, CH 3054, CH 3055, CH 3056, CH 3057, CH 3058, CH 3059, CH 3060, CH 3061, CH 3062, CH 3063, CH 3064, CH 3065, CH 3066, CH 3067, CH 3068, CH 3069, CH 3070, CH 3071, CH 3072, CH 3073, CH 3074, CH 3075, CH 3076, CH 3077, CH 3078, CH 3079, CH 3080, CH 3081, CH 3082, CH 3083, CH 3084, CH 3085, CH 3086, CH 3087, CH 3088, CH 3089, CH 3090, CH 3091, CH 3092, CH 3093, CH 3094, CH 3095, CH 3096, CH 3097, CH 3098, CH 3099, CH 3100, CH 3101, CH 3102, CH 3103, CH 3104, CH 3105, CH 3106, CH 3107, CH 3108, CH 3109, CH 3110, CH 3111, CH 3112, CH 3113, CH 3114, CH 3115, CH 3116, CH 3117, CH 3118, CH 3119, CH 3120, CH 3121, CH 3122, CH 3123, CH 3124, CH 3125, CH 3126, CH 3127, CH 3128, CH 3129, CH 3130, CH 3131, CH 3132, CH 3133, CH 3134, CH 3135, CH 3136, CH 3137, CH 3138, CH 3139, CH 3140, CH 3141, CH 3142, CH 3143, CH 3144, CH 3145, CH 3146, CH 3147, CH 3148, CH 3149, CH 3150, CH 3151, CH 3152, CH 3153, CH 3154, CH 3155, CH 3156, CH 3157, CH 3158, CH 3159, CH 3160, CH 3161, CH 3162, CH 3163, CH 3164, CH 3165, CH 3166, CH 3167, CH 3168, CH 3169, CH 3170, CH 3171, CH 3172, CH 3173, CH 3174, CH 3175, CH 3176, CH 3177, CH 3178, CH 3179, CH 3180, CH 3181, CH 3182, CH 3183, CH 3184, CH 3185, CH 3186, CH 3187, CH 3188, CH 3189, CH 3190, CH 3191, CH 3192, CH 3193, CH 3194, CH 3195, CH 3196, CH 3197, CH 3198, CH 3199, CH 3200, CH 3201, CH 3202, CH 3203, CH 3204, CH 3205, CH 3206, CH 3207, CH 3208, CH 3209, CH 3210, CH 3211, CH 3212, CH 3213, CH 3214, CH 3215, CH 3216, CH 3217, CH 3218, CH 3219, CH 3220, CH 3221, CH 3222, CH 3223, CH 3224, CH 3225, CH 3226, CH 3227, CH 3228, CH 3229, CH 3230, CH 3231, CH 3232, CH 3233, CH 3234, CH 3235, CH 3236, CH 3237, CH 3238, CH 3239, CH 3240, CH 3241, CH 3242, CH 3243, CH 3244, CH 3245, CH 3246, CH 3247, CH 3248, CH 3249, CH 3250, CH 3251, CH 3252, CH 3253, CH 3254, CH 3255, CH 3256, CH 3257, CH 3258, CH 3259, CH 3260, CH 3261, CH 3262, CH 3263, CH 3264, CH 3265, CH 3266, CH 3267, CH 3268, CH 3269, CH 3270, CH 3271, CH 3272, CH 3273, CH 3274, CH 3275, CH 3276, CH 3277, CH 3278, CH 3279, CH 3280, CH 3281, CH 3282, CH 3283, CH 3284, CH 3285, CH 3286, CH 3287, CH 3288, CH 3289, CH 3290, CH 3291, CH 3292, CH 3293, CH 3294, CH 3295, CH 3296, CH 3297, CH 3298, CH 3299, CH 3300, CH 3301, CH 3302, CH 3303, CH 3304, CH 3305, CH 3306, CH 3307, CH 3308, CH 3309, CH 3310, CH 3311, CH 3312, CH 3313, CH 3314, CH 3315, CH 3316, CH 3317, CH 3318, CH 3319, CH 3320, CH 3321, CH 3322, CH 3323, CH 3324, CH 3325, CH 3326, CH 3327, CH 3328, CH 3329, CH 3330, CH 3331, CH 3332, CH 3333, CH 3334, CH 3335, CH 3336, CH 3337, CH 3338, CH 3339, CH 3340, CH 3341, CH 3342, CH 3343, CH 3344, CH 3345, CH 3346, CH 3347, CH 3348, CH 3349, CH 3350, CH 3351, CH 3352, CH 3353, CH 3354, CH 3355, CH 3356, CH 3357, CH 3358, CH 3359, CH 3360, CH 3361, CH 3362, CH 3363, CH 3364, CH 3365, CH 3366, CH 3367, CH 3368, CH 3369, CH 3370, CH 3371, CH 3372, CH 3373, CH 3374, CH 3375, CH 3376, CH 3377, CH 3378, CH 3379, CH 3380, CH 3381, CH 3382, CH 3383, CH 3384, CH 3385, CH 3386, CH 3387, CH 3388, CH 3389, CH 3390, CH 3391, CH 3392, CH 3393, CH 3394, CH 3395, CH 3396, CH 3397, CH 3398, CH 3399, CH 3400, CH 3401, CH 3402, CH 3403, CH 3404, CH 3405, CH 3406, CH 3407, CH 3408, CH 3409, CH 3410, CH 3411, CH 3412, CH 3413, CH 3414, CH 3415, CH 3416, CH 3417, CH 3418, CH 3419, CH 3420, CH 3421, CH 3422, CH 3423, CH 3424, CH 3425, CH 3426, CH 3427, CH 3428, CH 3429, CH 3430, CH 3431, CH 3432, CH 3433, CH 3434, CH 3435, CH 3436, CH 3437, CH 3438, CH 3439, CH 3440, CH 3441, CH 3442, CH 3443, CH 3444, CH 3445, CH 3446, CH 3447, CH 3448, CH 3449, CH 3450, CH 3451, CH 3452, CH 3453, CH 3454, CH 3455, CH 3456, CH 3457, CH 3458, CH 3459, CH 3460, CH 3461, CH 3462, CH 3463, CH 3464, CH 3465, CH 3466, CH 3467, CH 3468, CH 3469, CH 3470, CH 3471, CH 3472, CH 3473, CH 3474, CH 3475, CH 3476, CH 3477, CH 3478, CH 3479, CH 3480, CH 3481, CH 3482, CH 3483, CH 3484, CH 3485, CH 3486, CH 3487, CH 3488, CH 3489, CH 3490, CH 3491, CH 3492, CH 3493, CH 3494, CH 3495, CH 3496, CH 3497, CH 3498, CH 3499, CH 3500, CH 3501, CH 3502, CH 3503, CH 3504, CH 3505, CH 3506, CH 3507, CH 3508, CH 3509, CH 3510, CH 3511, CH 3512, CH 3513, CH 3514, CH 3515, CH 3516, CH 3517, CH 3518, CH 3519, CH 3520, CH 3521, CH 3522, CH 3523, CH 3524, CH 3525, CH 3526, CH 3527, CH 3528, CH 3529, CH 3530, CH 3531, CH 3532, CH 3533, CH 3534, CH 3535, CH 3536, CH 3537, CH 3538, CH 3539, CH 3540, CH 3541, CH 3542, CH 3543, CH 3544, CH 3545, CH 3546, CH 3547, CH 3548, CH 3549, CH 3550, CH 3551, CH 3552, CH 3553, CH 3554, CH 3555, CH 3556, CH 3557, CH 3558, CH 3559, CH 3560, CH 35**



Drawings subject to change without notice.








DC Wiring Diagram

1. INSULATION CONDUCTORS ARE TO BE AWG 15, TYPE WPL, 60/3VAC, 100' MIN. MULTISTRAND, EXCEPT THE ENGINE HARNESS, THINSTAIN PAINS AND AS NOTED.
2. TO BE GRAY AND MUST BE IDENTIFIED BY WIRE MARKER AT EACH CONNECTION POINT. (GSP) AND DISCONNECT DIODE CONNECTION AS SHOWN WHEN DEALING WITH ELECTRONIC PANEL, PANELS AND AUTOSTART PANELS.
3. FOR DIP SWITCHES, LEAVE SWITCH 3 ON AND REST OF SWITCHES REMAIN OFF.
4. FOR DIP SWITCHES, LEAVE SWITCH 3 ON AND REST OF SWITCHES REMAIN OFF.
5. SWITCHES REMAIN OFF.
6. TO BE ENGINE BLOCK GROUNDING AT ONE END ONLY, GROUND AT POINT INDICATED.
7. TWO GAUGED CONTROL PANELS ARE USED, DUAL STATION.
8. WIRE OUTLINE 244, FLY CUTLICH TO TERMINAL STRIP IN J-BOX.




Drawings subject to change without notice.

DC Wiring Diagram

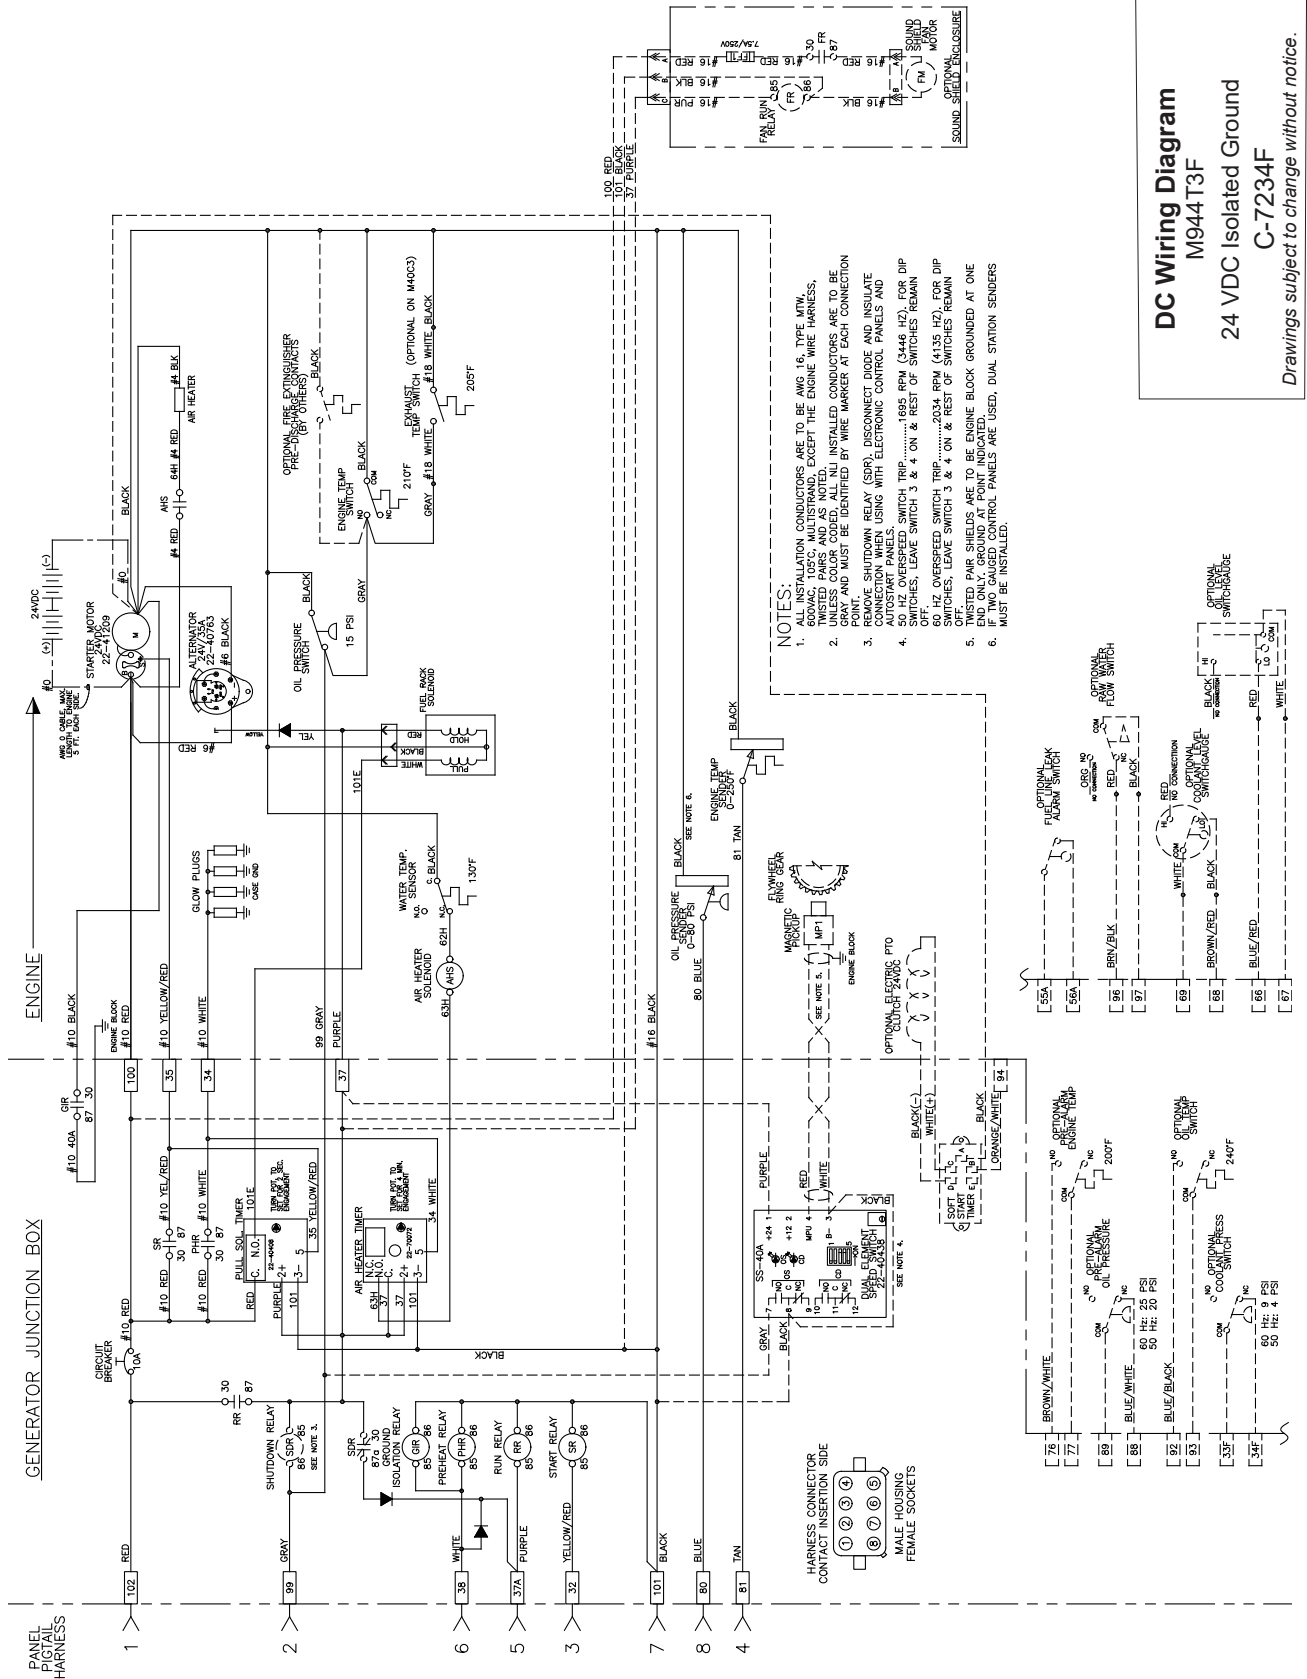



DC Wiring Diagram

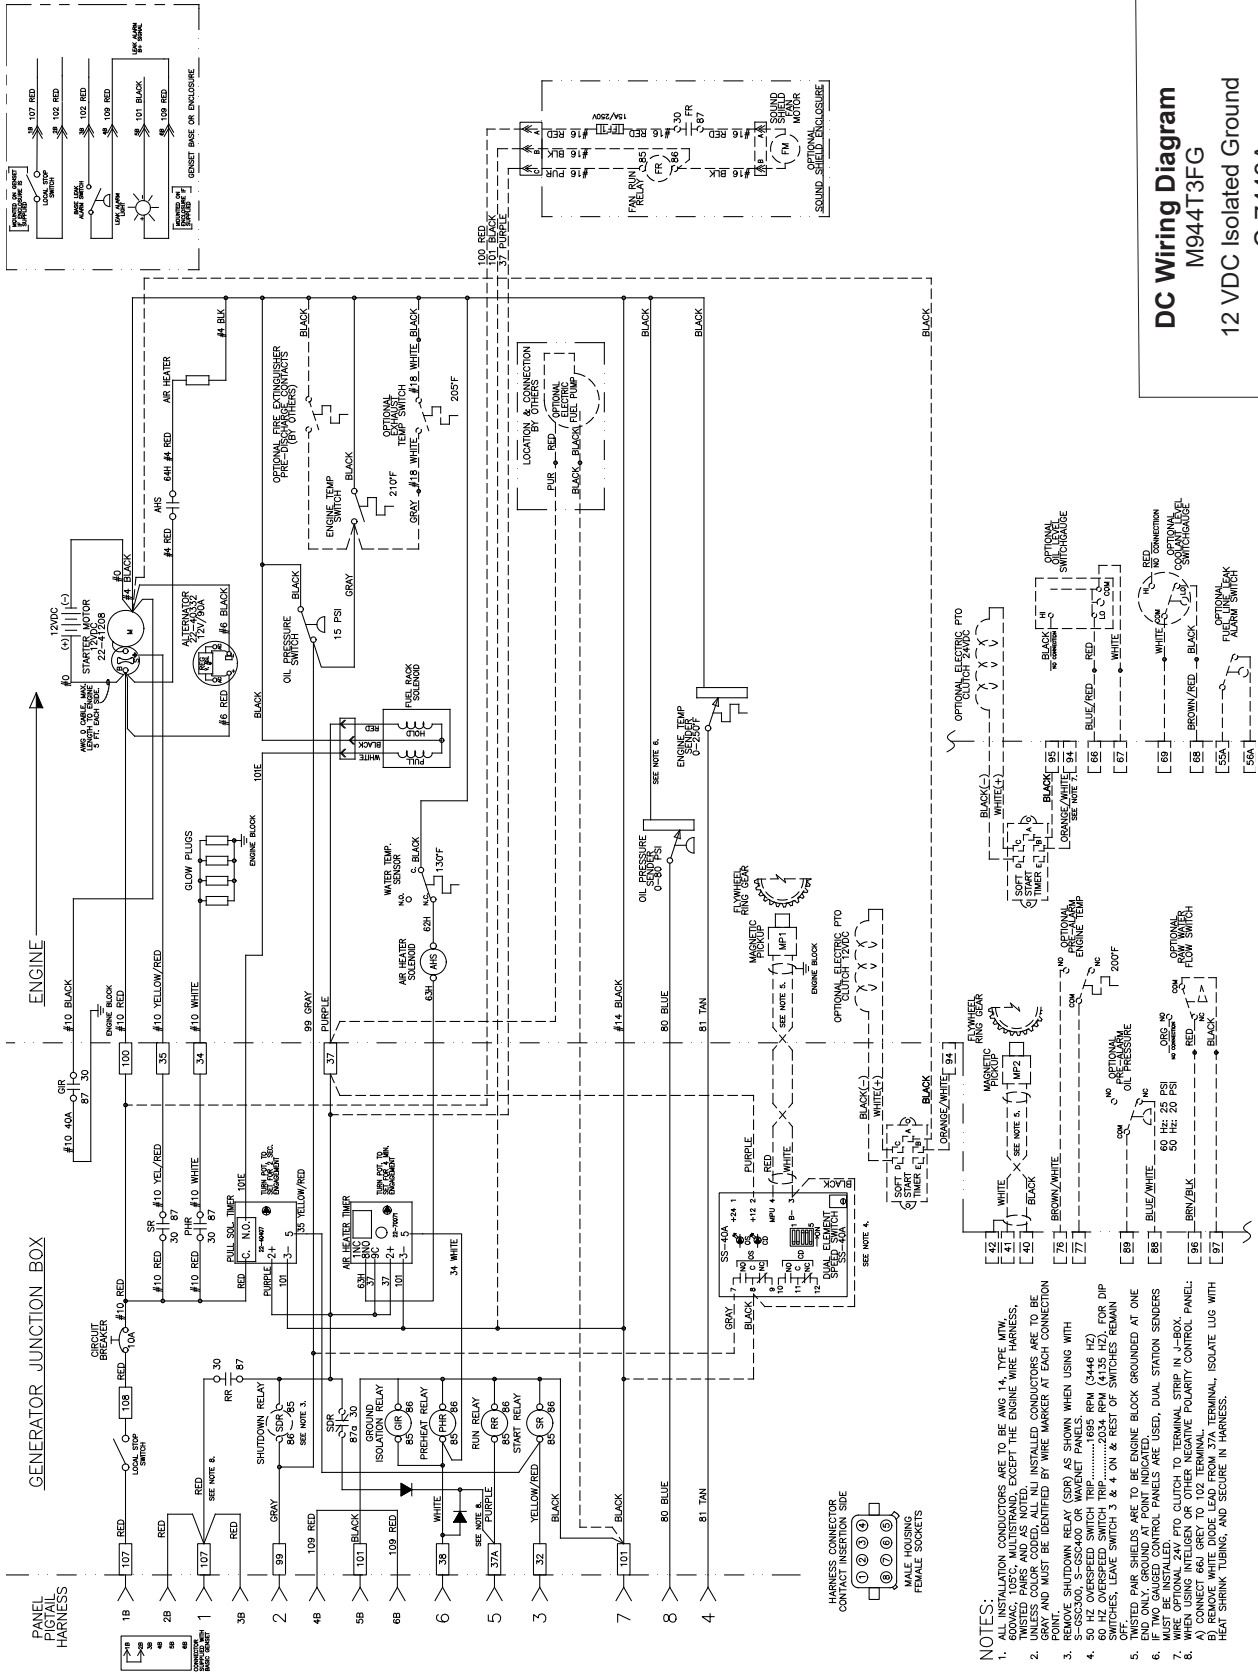


DC Wiring Diagram
M944T3FG


12 VDC Isolated Ground


C-7443A

 Drawings subject to change without notice.




DC Wiring Diagram

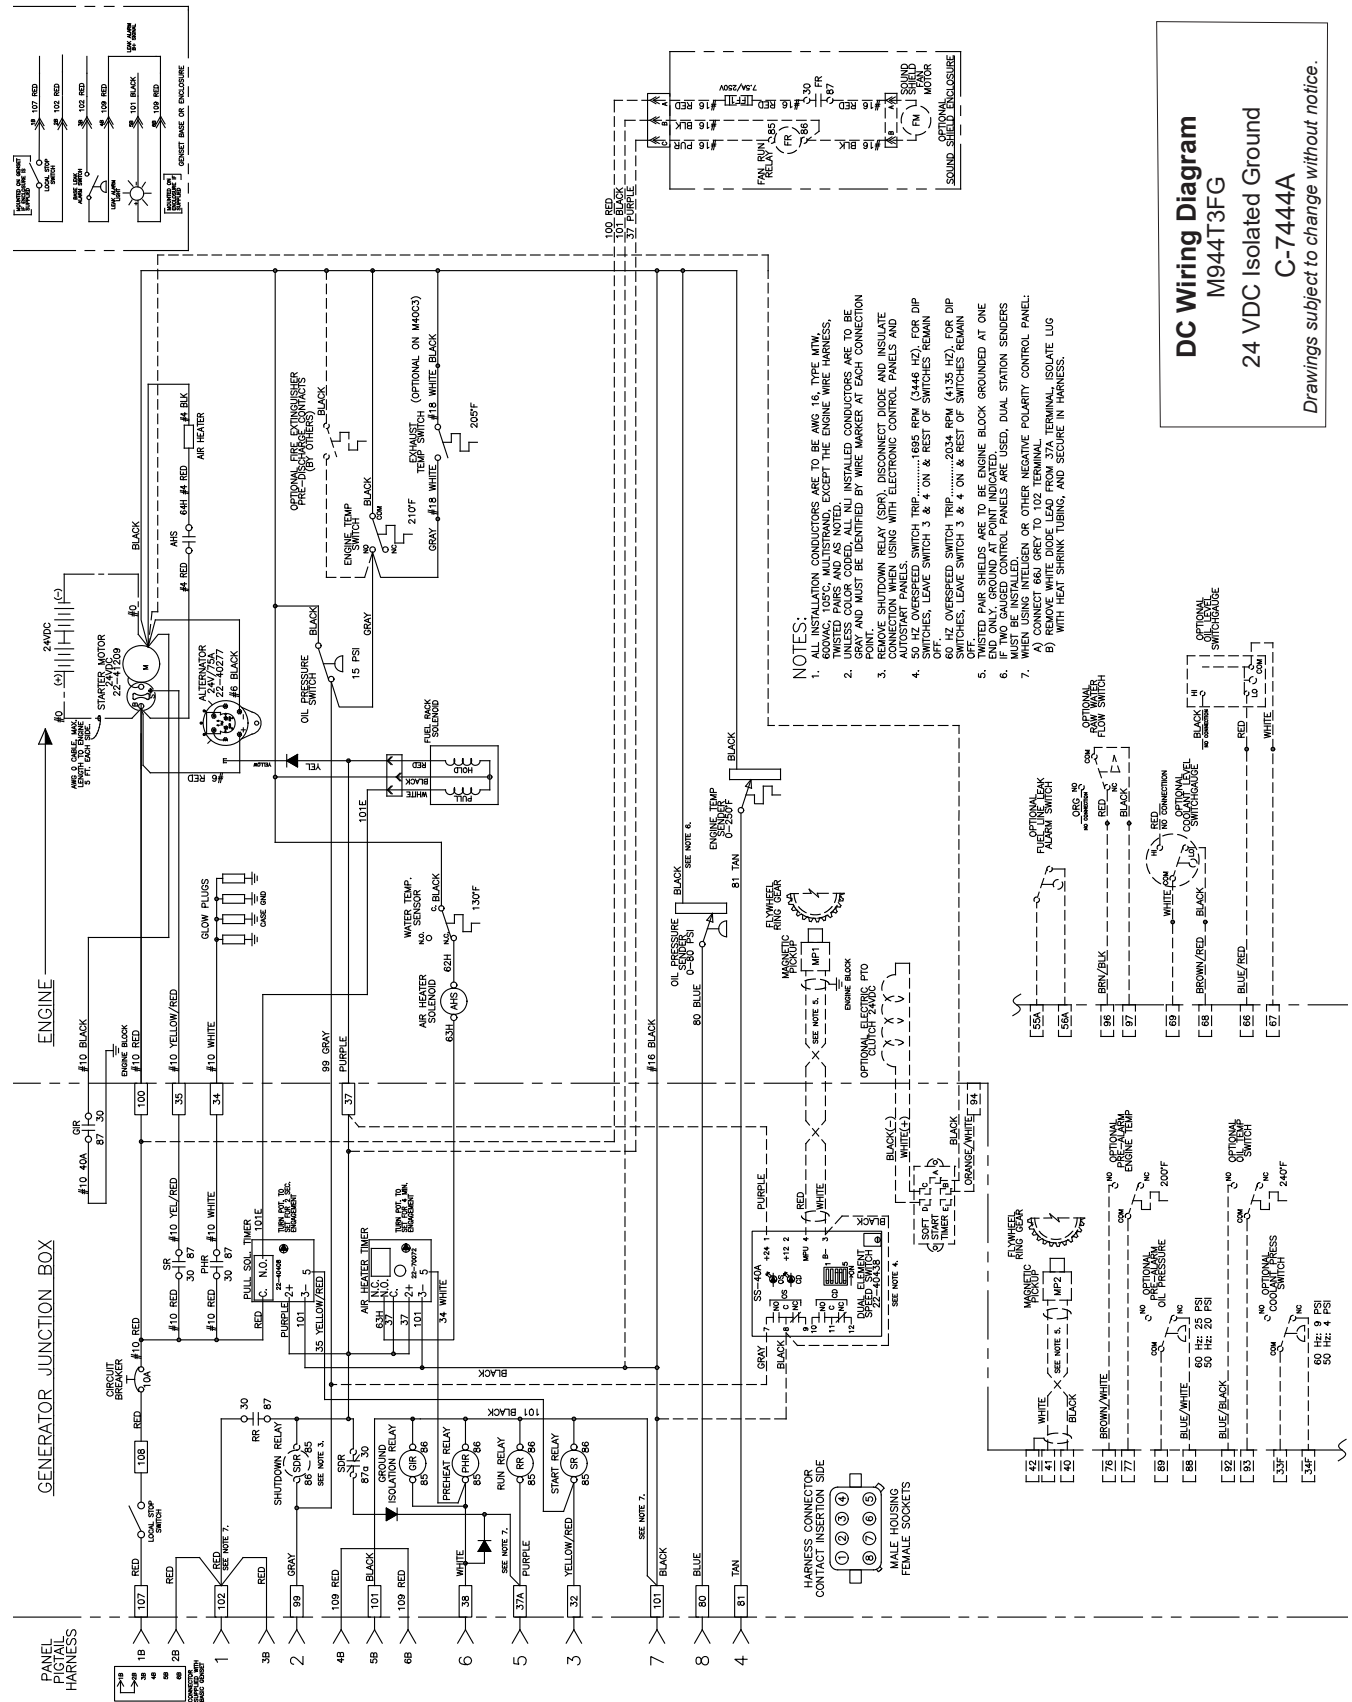


 

DC Wiring Diagram

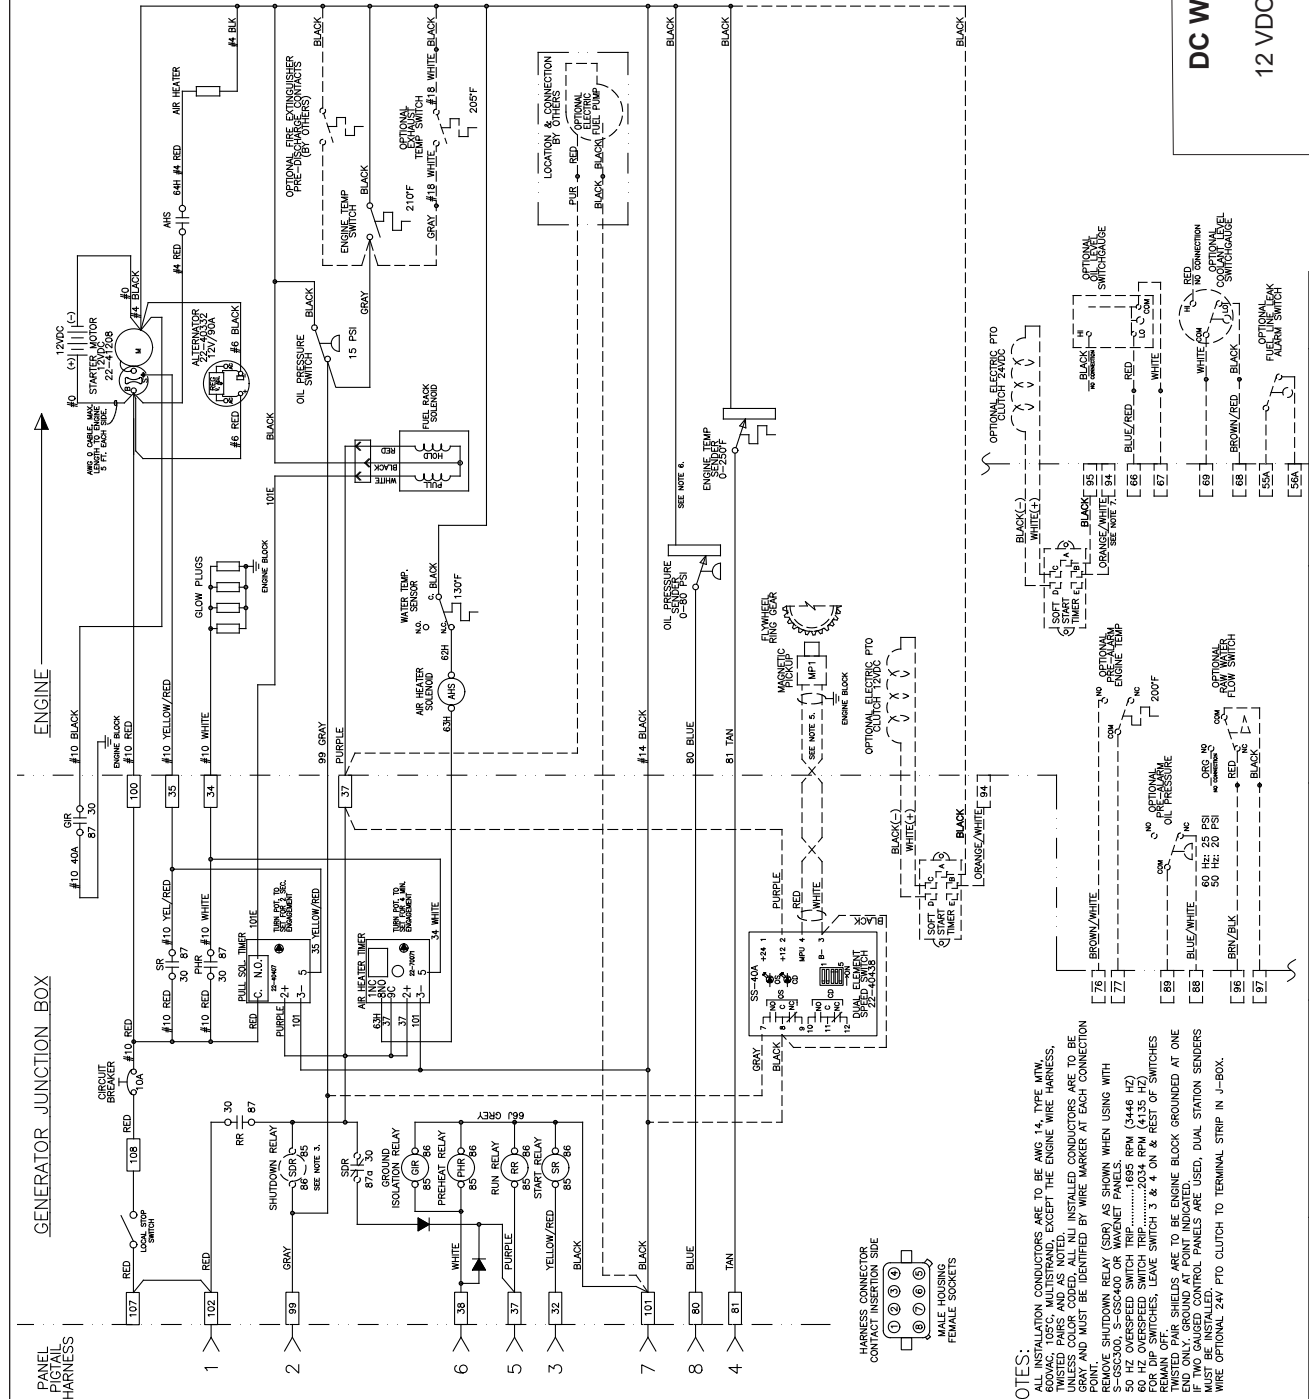

DC Wiring Diagram
M38C3F
 12 VDC Isolated Ground
 C-7492
Drawings subject to change without notice.

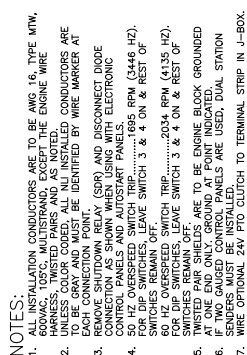

DC Wiring Diagram

24 VDC Standard Ground


C-7493

Drawings subject to change without notice.



Panel Wiring Diagram

CONTROL PANEL – B+ CONTROL

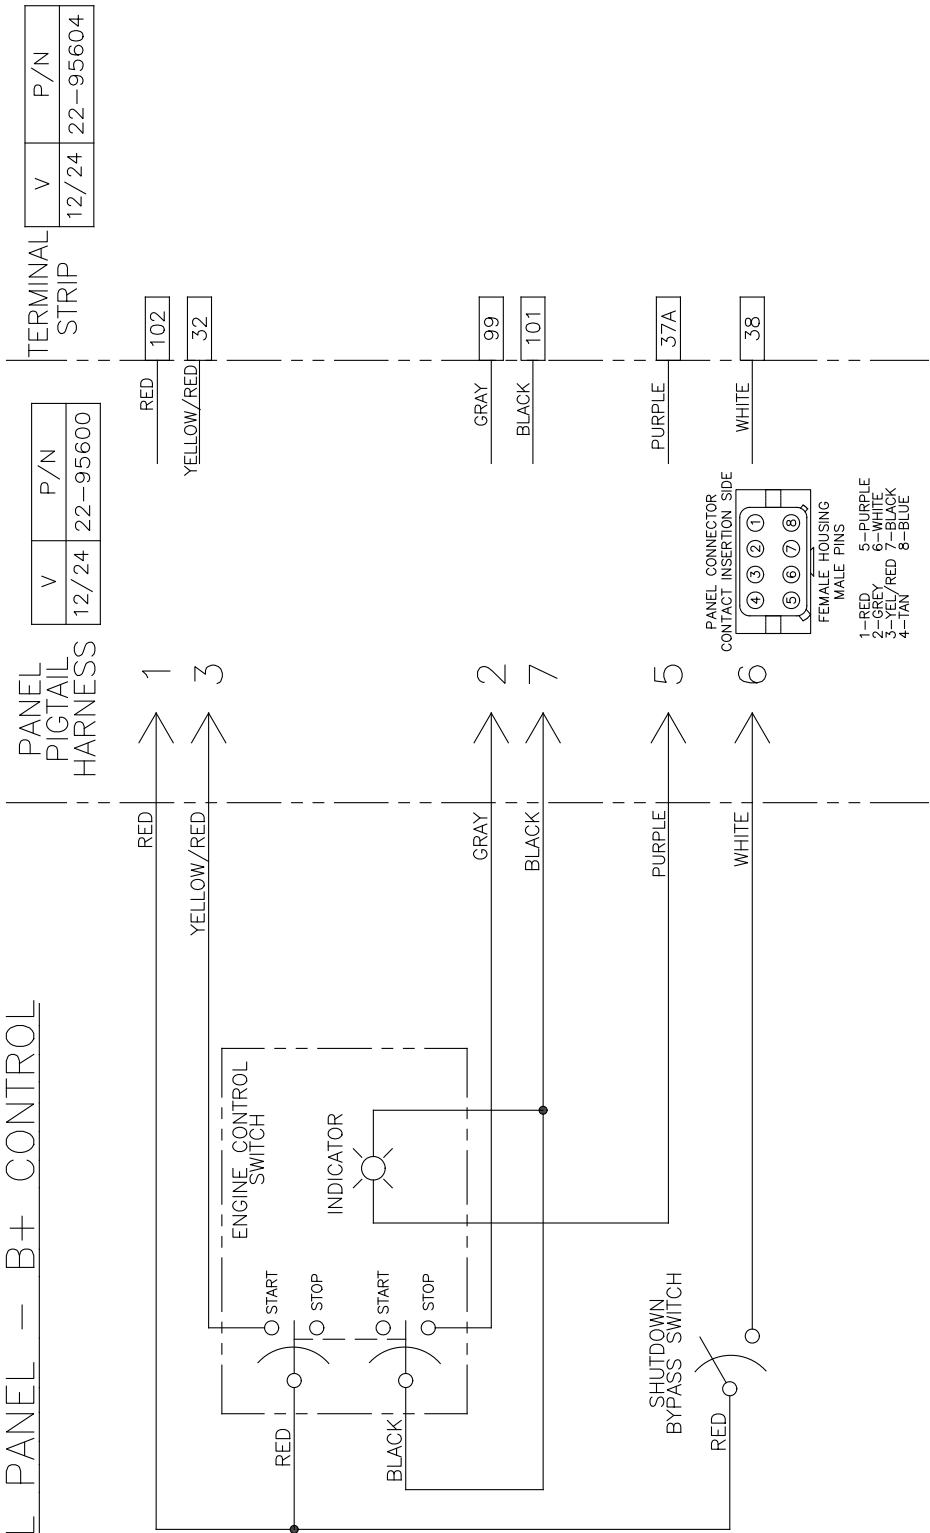


Panel Wiring Diagram
S-1 Panel, B+
A-12798B


CONTROL PANEL – B+ CONTROL

PANEL
PIGTAIL
HARNESS

P/N	
22-95605	12/24v
22-95910	MTU
22-95603	DIGITAL HOURMETER

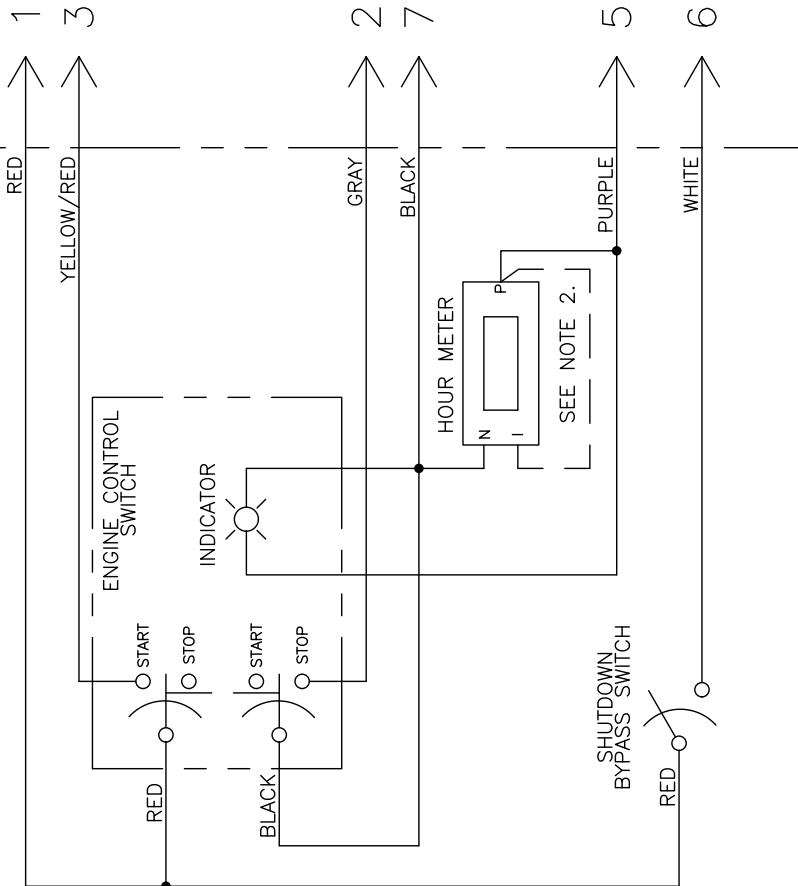

Panel Wiring Diagram

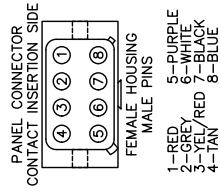


Panel Wiring Diagram
S-1B, B+ Deutsch
A-12791C


NOTES:

- ALL INSTALLATION CONDUCTORS ARE TO BE AWG 16, TYPE MTW, 600VAC, 105°C, STRANDED, EXCEPT AS NOTED.
- FOR 22-95603, WIRE TERMINAL 1 ON DIGITAL HOURMETER TO TERMINAL P. (REFERENCE A-12570)

CONTROL PANEL – B+ CONTROL

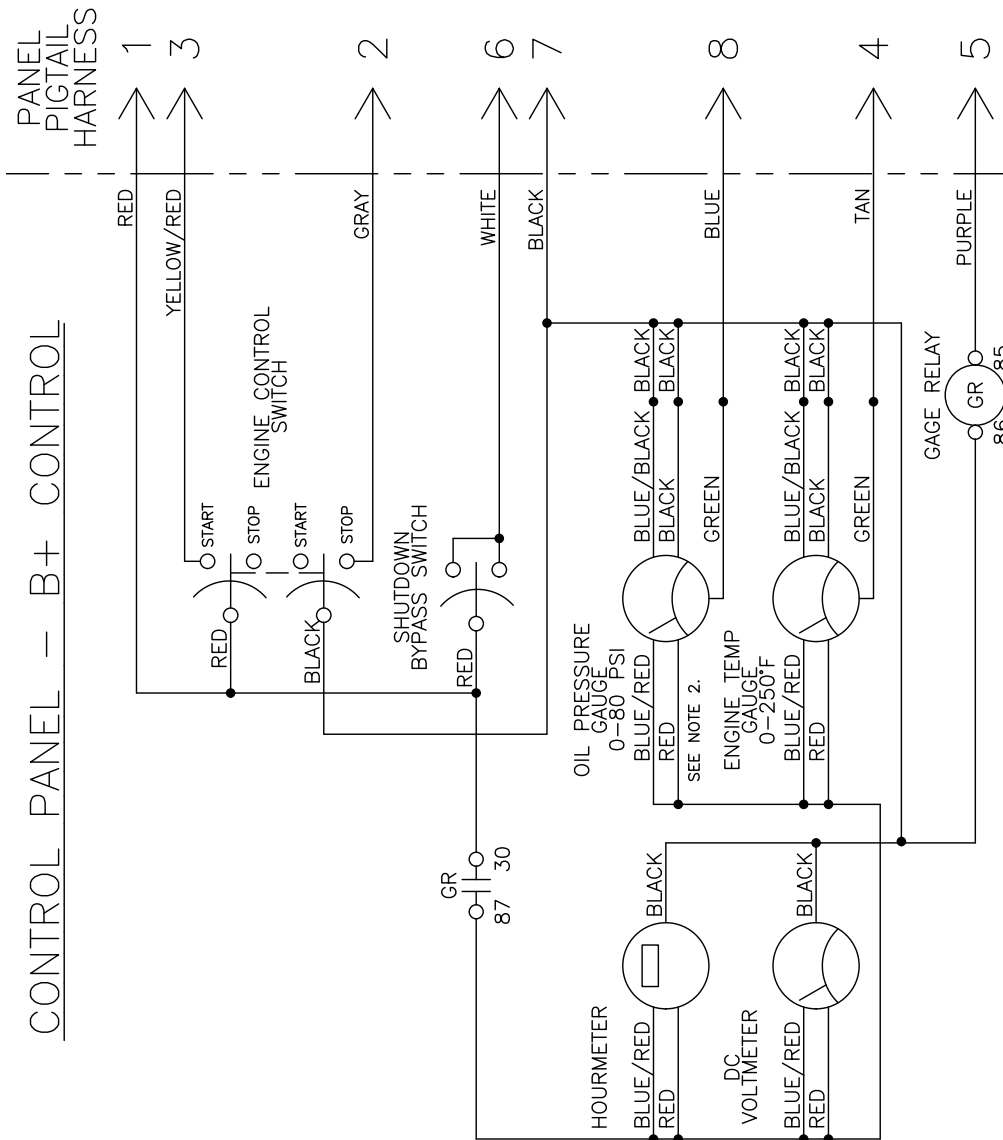

P/N'S
12V 22-95611
24V 22-95612
864 12V 22-98731
864 24V 22-98732

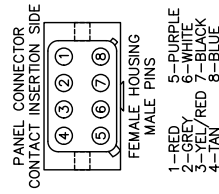

NOTES:

- ALL INSTALLATION CONDUCTORS ARE TO BE AWG 16, TYPE MTW, 600VAC, 105°C, STRANDED, EXCEPT AS NOTED.
- OIL PRESSURE GAUGE IS TO BE 0-150 PSI ON PANELS 22-98731 & 22-98732.

Panel Wiring Diagram
S-3B/S-3C Panel, B+
A-12790D


Panel Wiring Diagram

PANEL P/N		
	864	OTHER
12V	22-98733	22-95621
24V	22-98734	22-95622

NOTES:


1. 3-S-A CONTROL PANEL CONDUCTORS ARE TO BE AWG #18, TYPE MTW, 600VAC, 105°C, STANDED, EXCEPT TWISTED PAIR AND AS NOTED.
2. UNLESS COLOR CODED, ALL NLI INSTALLED CONDUCTORS ARE TO BE GRAY AND MUST BE IDENTIFIED BY WIRE MARKER AT EACH CONNECTION POINT.
3. TWISTED PAIR SHIELDS ARE TO BE ENGINE BLOCK GROUNDED AT THE END ONLY. ONLY STANDARD GROUND UNITS ARE GROUNDED AT THE AUTOSTART MODULE.
4. AUTOSTART MODULE SETTINGS:
CRANK CYCLE.....10 SECONDS
CRANK DISCONNECT.....500 RPM (SEE CHART)
OVERSPED.....(SEE CHART)
OIL PRESSURE.....10 SECONDS
CRANKING ATTEMPTS.....3 MARINE (5 INDUSTRIAL)
5. CUSTOMER SUPPLIED REMOTE START CONTACTS:
WITH THE ENGINE CONTROL SWITCH IN THE AUTO POSITION, CLOSE CONTACTS TO START UNIT, OPEN CONTACTS TO STOP UNIT.
6. WHEN USED WITH AN S-3CR CONTROL PANEL, THE S-3A ENGINE CONTROL SWITCH MUST BE IN THE AUTO POSITION TO ENABLE THE START/STOP FUNCTIONS.
7. RELABEL TERMINAL 37 TO 37G WHEN LIGHTING FUSE IS USED. REFER TO DC WIRING DIAGRAM.
8. WIRE NUMBERS ARE TO INCREASE BY ONE HUNDRED FOR SETS OF UNITS; E.G. 137, 237, 337. SEE APPLICATION SPECIFIC DC DRAWINGS.
9. OIL PRESSURE GAGE 0-150 PSI FOR 864, 0-80 PSI FOR OTHER UNITS.
10. INSULATE HARNESS WIRE #2(GREY) AND SECURE INTO HARNESS.
11. FOR M944T UNIT, DO NOT CONNECT DIGITAL HARNESS.

ENGINE/TEETH	AUTOSTART MODULE SETTINGS			
	CRANK/ DISCONNECT	500 RPM	1500 RPM	OVERSPEED
673-843-844/109T		1695 RPM		2034 RPM
773/96T		773 Hz		395 Hz
844/126T		1030 Hz	3712 Hz	395 Hz
864/108T		800 Hz	3560 Hz	4372 Hz
864/110T		900 Hz	3051 Hz	3661 Hz
844/113T		942 Hz	3432 Hz	3635 Hz
844/115T		942 Hz	3432 Hz	3635 Hz


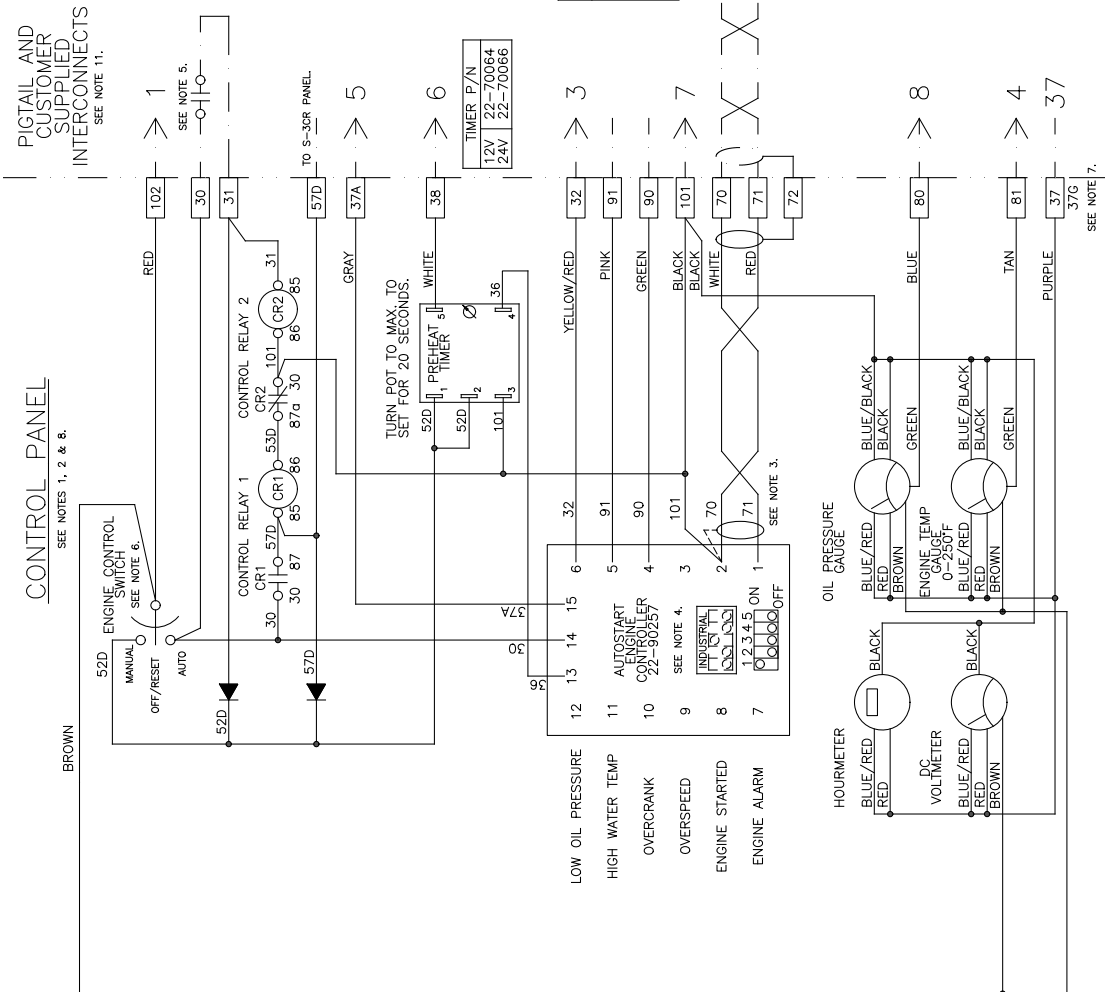


Panel Wiring Diagram

AC Wiring Diagram

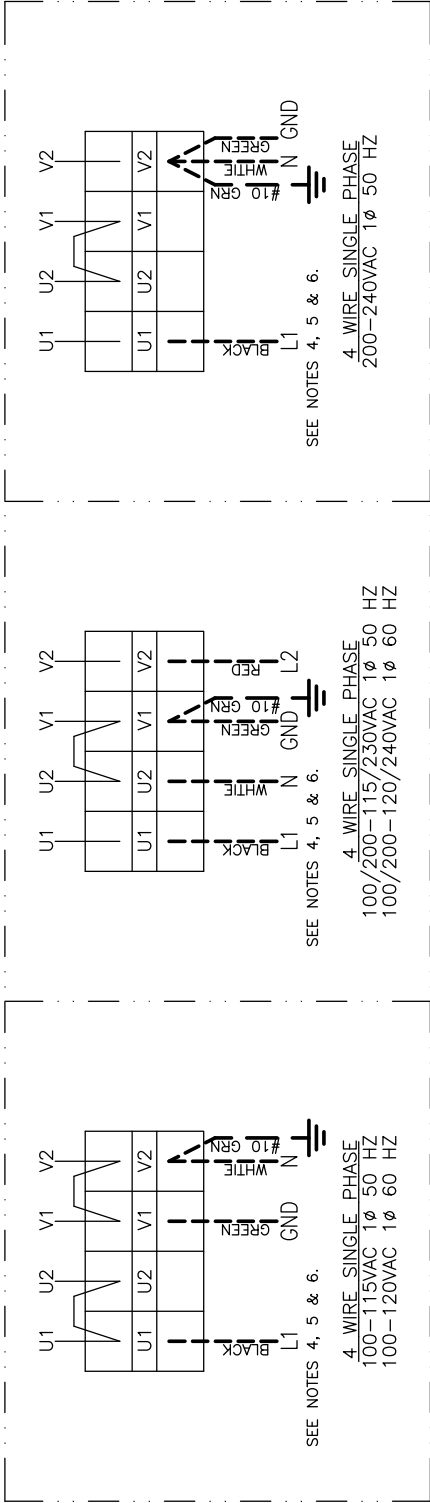


OPTIONAL BLOCK HEATER
SEE NOTE 8.

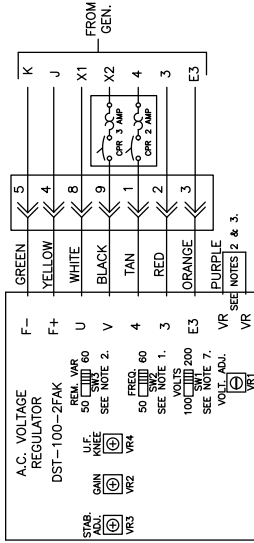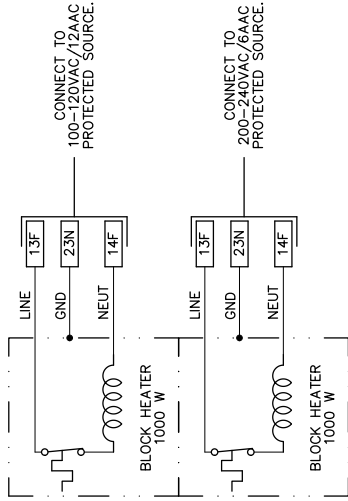

- NOTES:**
1. SET SW2 FOR CURRENT APPLICATION, (50 OR 60 HZ.)
 2. SET SW3 PER APPLICATION IF REMOTE VOLTAGE ADJUST RHEOSTAT IS USED.
 3. FOR REMOTE VOLTAGE ADJUST RHEOSTAT CUT JUMPER AND SPLICE INTO PURPLE LEADS.
 4. TERMINAL BLOCKS WILL NOT ACCOMMODATE LARGER GAUGE CONDUCTORS. IF REQUIRED, REMOVE AFFECTED LEADS FROM TERMINAL BLOCK(S) AND MAKE CONNECTIONS USING BOLT, LOCK WASHER AND NUT. ISOLATE BY WRAPPING WITH ELECTRICAL TAPE.
 5. MARINE GENSETS ARE GROUNDED BY CUSTOMER. AT CUSTOMER'S DISCRETION, INDUSTRIAL GENSETS ARE TO BE GROUNDED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ANY APPLICABLE LOCAL CODES.
 6. HIDDEN (DASHED) LINES INDICATE CUSTOMER SUPPLIED AND CONNECTED MAIN OUTPUT CONDUCTORS. SIZING TO BE DETERMINED PER INSTALLATION.
 7. AVR INPUT SENSING SWITCH SW1 IS TO BE SET TO THE 200V POSITION FOR ALL VOLTAGES EXCEPT 100-120VAC APPLICATIONS.
 8. DO NOT ENERGIZE HEATER WHEN UNIT IS IN OPERATION.

AC Wiring Diagram
4-wire PX300K2
w/ DST-100-2FAK AVR
B-9724

AC Wiring Diagram

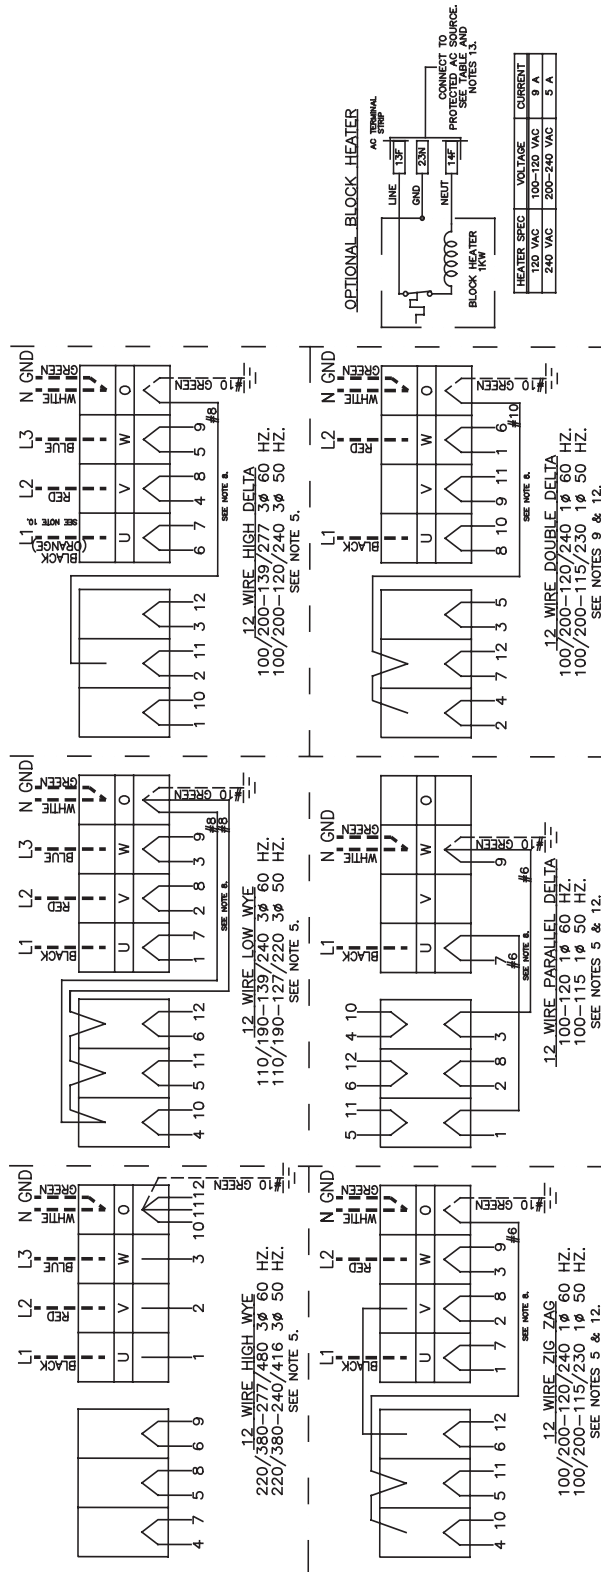


NOTES:

1. ALL NU INSTALLED CONDUCTORS ARE TO BE TYPE MTW, 105°C, STRANDED, 600VAC.
2. SET SW2 FOR CURRENT APPLICATION, (50 OR 60 HZ).
3. SET SW2 PER APPLICATION, (REMOTE VOLTAGE ADJUST, REHEAT/STAT IS USED).
4. SET SW3 FOR CURRENT APPLICATION, (50 OR 60 HZ).
5. DELETE NEUTRAL CONDUCTOR (AND JUMPER IF PRESENT), IF LOWER VOLTAGE IS NOT REQUIRED.
6. MARINE GENSETS ARE GROUNDED BY CUSTOMER, AT CUSTOMER'S DISCRETION. INDUSTRIAL GENSETS ARE TO BE GROUNDED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ANY APPLICABLE LOCAL CODES.
7. SIZING TO BE DETERMINED PER INSTALLATION.
8. NEUTRAL CONDUCTORS SIZED FOR 30KW UNITS AT THE LOWEST LISTED VOLTAGE. CONSULT N.E.I. ENGINEERING FOR SIZING REQUIREMENTS.
9. THE DOUBLE DELTA CONFIGURATION REQUIRES THE AIR TO BE REMOVED AS FOLLOWS: DISCONNECT LEADS 3, AND 4 FROM AVR. CONNECT LEAD 3 TO AIR TERM. 4 (THROUGH C.B.), CONNECT LEAD 4 TO AIR TERM. 3. DISCONNECT LEAD E3 FROM AVR AND ISOLATE. CONNECT AIR TERMINAL E3 TO MAIN OUTPUT BLOCK TERM. "W".
10. LINE ONE (HIGH LEAD) TO BE MARKED ORANGE WHEN NEUTRAL IS PRESENT, IN ACCORDANCE WITH ARTICLE 215-8 OF THE NATIONAL ELECTRIC CODE.
11. AVR INPUT SENSING SWITCH SW1 IS TO BE SET TO THE 200V POSITION FOR ALL VOLTAGES EXCEPT 240VAC.
12. THE 1Ø WIRING OPTIONS ARE FOR MODEL M20DRW3 ONLY.
13. DO NOT ENERGIZE HEATER WHEN UNIT IS IN OPERATION.


AC Wiring Diagram
M944W3 and M30CW3
12-wire
B-9723D

DC Wiring Diagram

DC Wiring Diagram
M944W3 and M30CW3
12 VDC Standard Ground
C-6855A

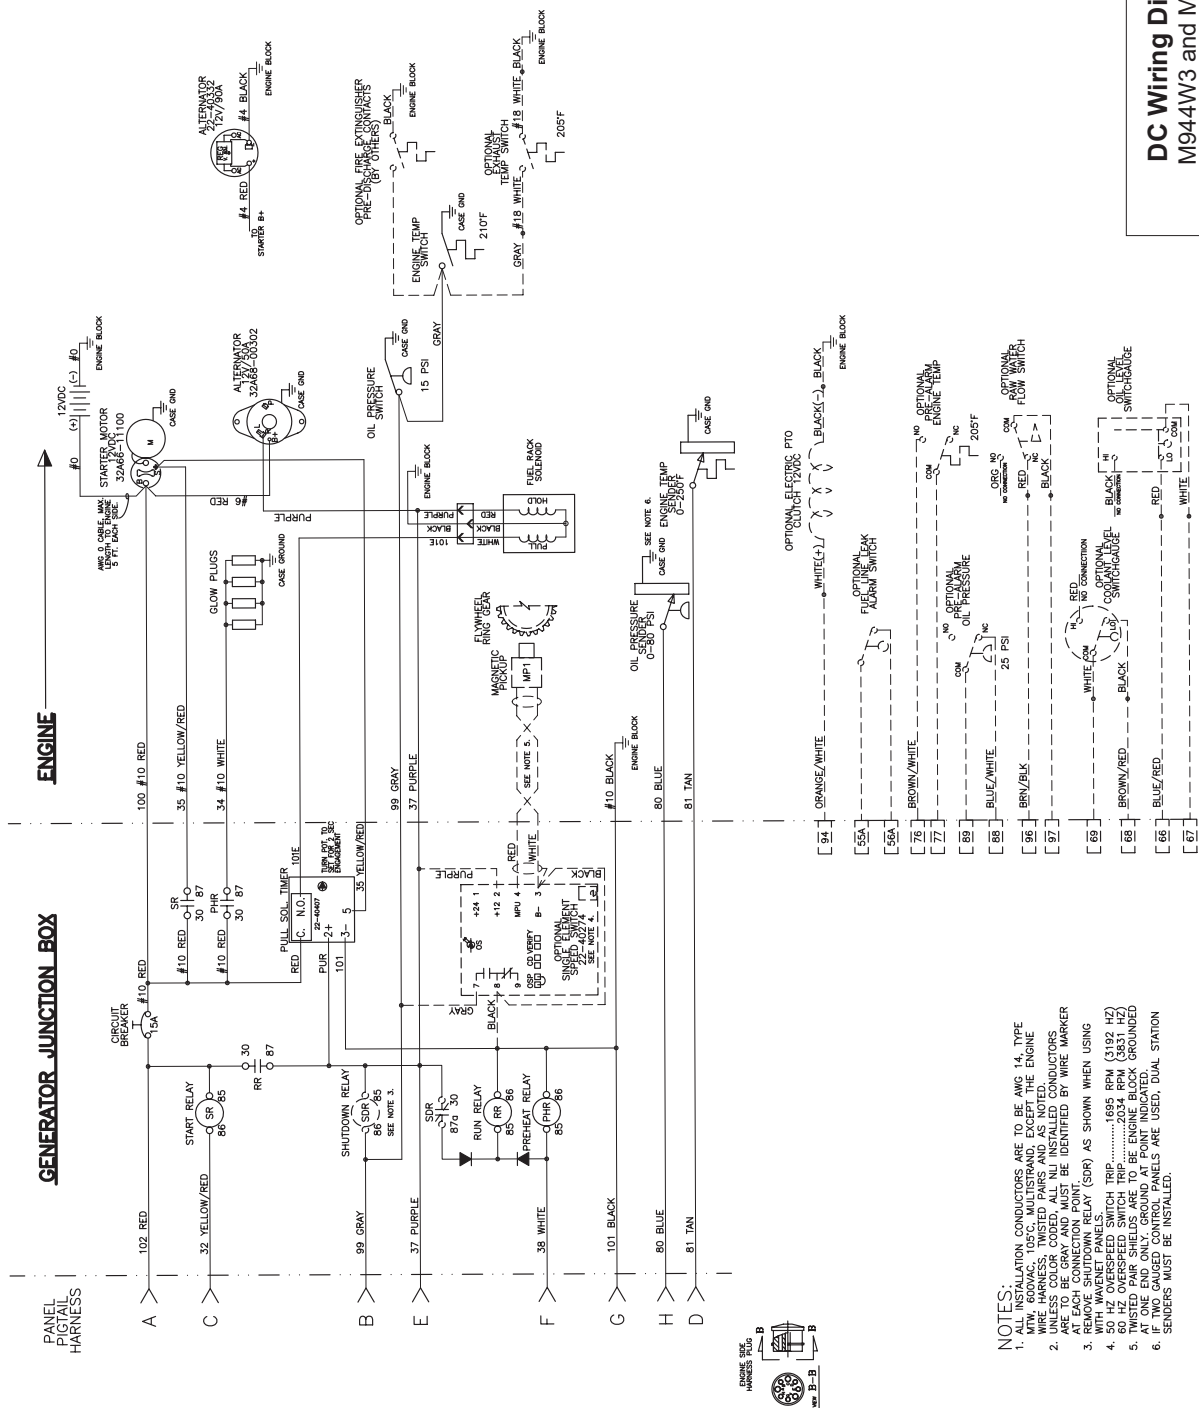


DC Wiring Diagram

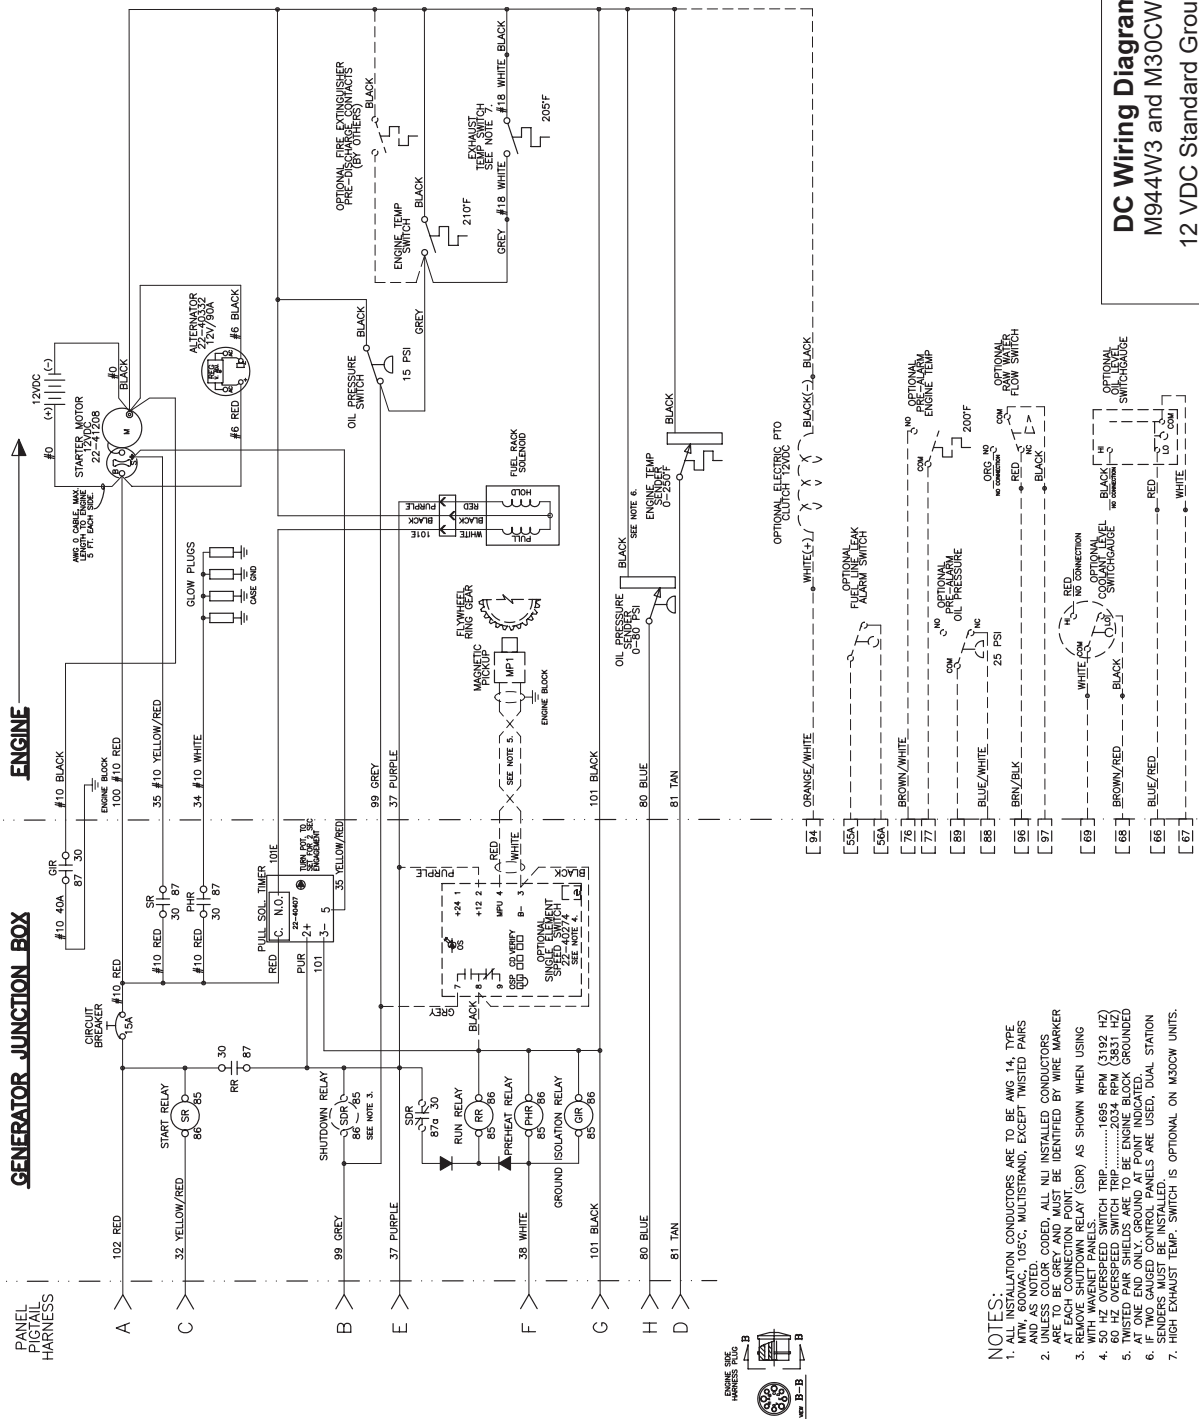

DC Wiring Diagram
M944W3 and M30CW3
12 VDC Standard Ground
C-6839A

DC Wiring Diagram

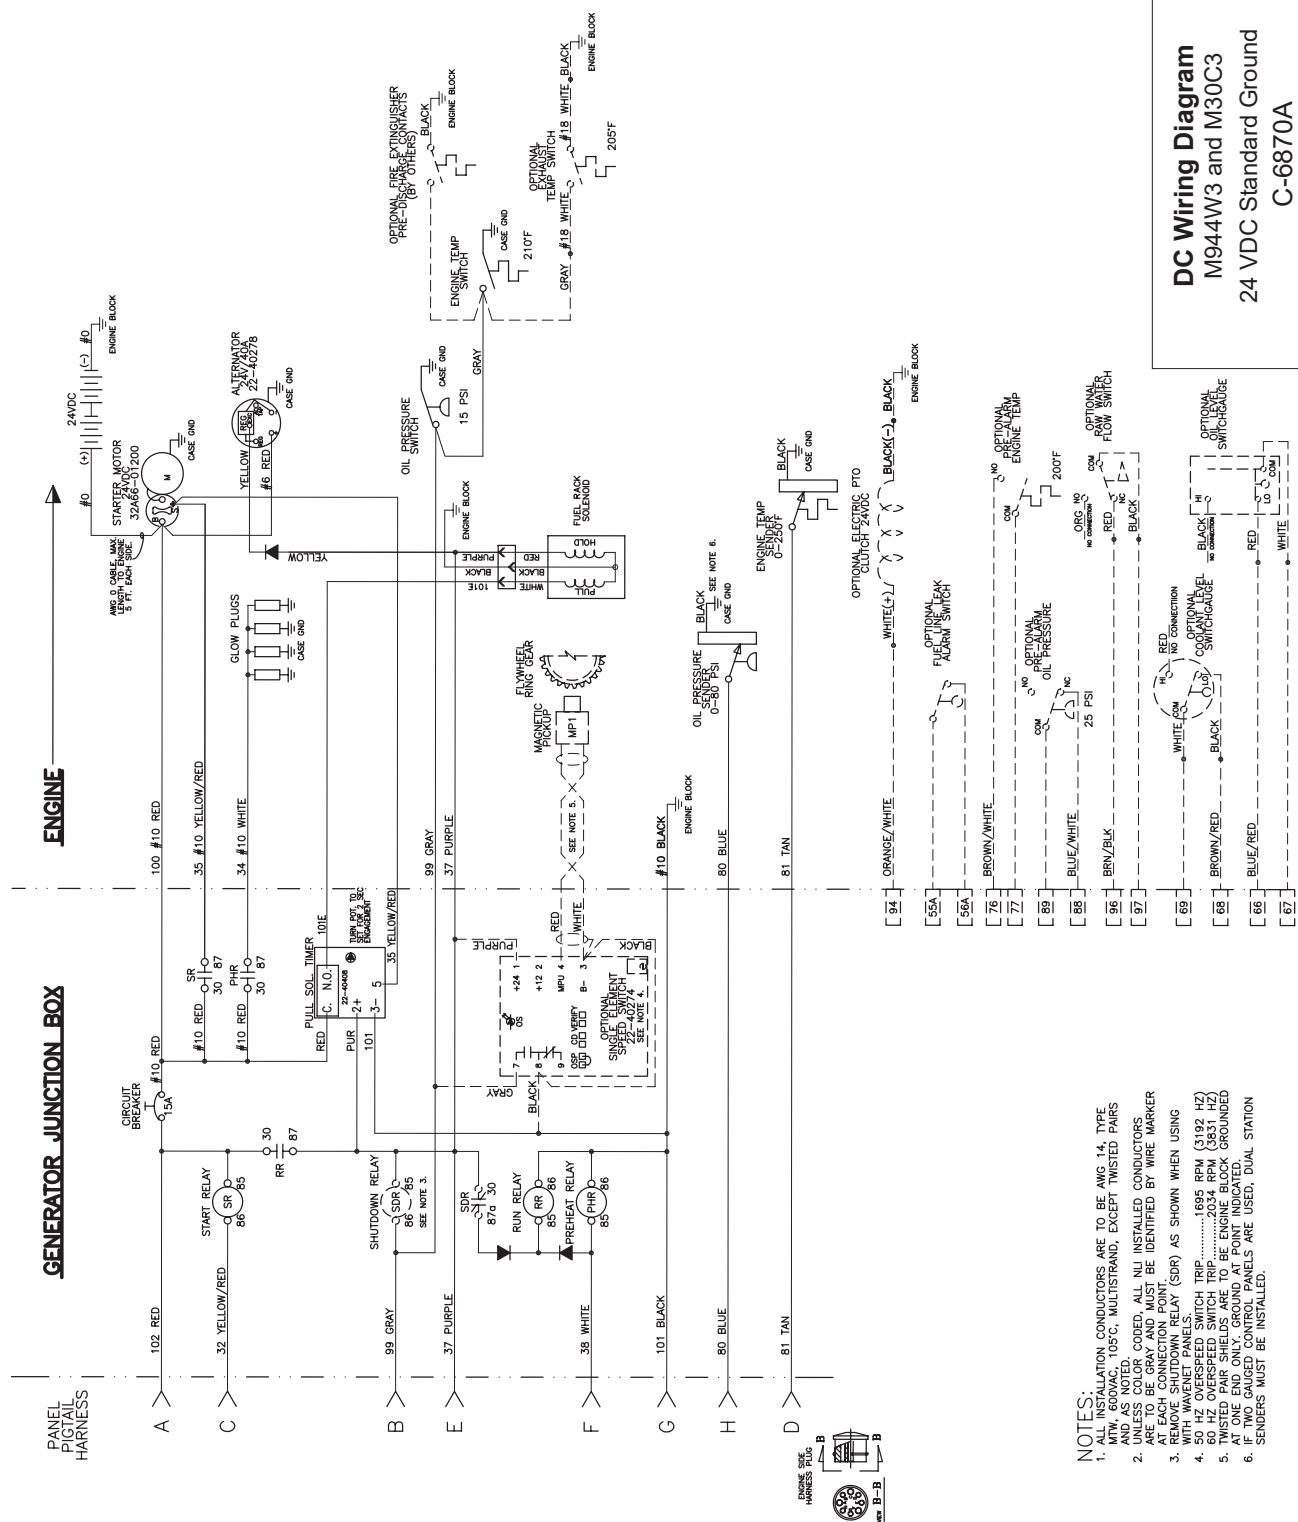

DC Wiring Diagram
M944W3 and M30C3
24 VDC Standard Ground
C-6870A

NOTES:

1. ALL INSTALLATION CONDUCTORS ARE TO BE AWG 14, TYPE THHN, 100% C, MULTISTRAND, EXCEPT TWISTED PAIRS AND AS NOTED.
2. UNLESS CODED, ALL INSTALLED CONDUCTORS ARE TO BE GREEN. PAIR #1 MUST BE IDENTIFIED BY WIRE MARKER AS TO BE GROUNDING.
3. REMOVE SHUTDOWN RELAY (SDR) AS SHOWN WHEN USING WITH WAGENET PANELS.
4. 120VAC OVERCURRENT SWITCH TRIP 1600 RPM (1180 Hz)
5. 60 HZ OVERCURRENT SWITCH TRIP 2034 RPM (3331 Hz)
6. TWISTED PAIR SHIELDS ARE TO BE ENGINE BLOCK GROUNDED AT ONE END ONLY, GROUND AT POINT INDICATED.
7. SENDERS MUST BE INSTALLED.


NON-CURRENT MODEL




NOTES:

1. ALL INSTALLATION CONDUCTORS ARE TO BE AWG 14, TYPE THHN, UNLESS OTHERWISE NOTED.
2. ALL WIRE HARNESS SHALL BE IDENTIFIED BY WIRE MARKER.
3. UNLESS CORD OR POINT, ALL INSTALLED CONDUCTORS SHALL BE IDENTIFIED BY WIRE MARKER.
4. AT EACH CONNECTION, ALL WIRE SHALL BE IDENTIFIED BY WIRE MARKER.
5. REMOVE SHUTDOWN RELAY (SOR) AS SHOWN WHEN USING WIRE WITH WAVENET PANELS.
6. 1500 RPM TACH TIP 1695 RPM (1512 HZ)
7. 60 HZ OVERSPEED SWITCH TRIP 2034 RPM (3631 HZ)
8. TWISTED PAIR SHIELDS ARE TO BE ENGINE BLOCK GROUNDED TO THE CHASSIS.
9. ALL WIRE HARNESS SHALL BE GROUNDED TO THE CHASSIS.
10. IF TWO HAILED CONDUCTOR PANELS ARE USED, DUAL SENDER MUST BE INSTALLED.

Panel Wiring Diagram

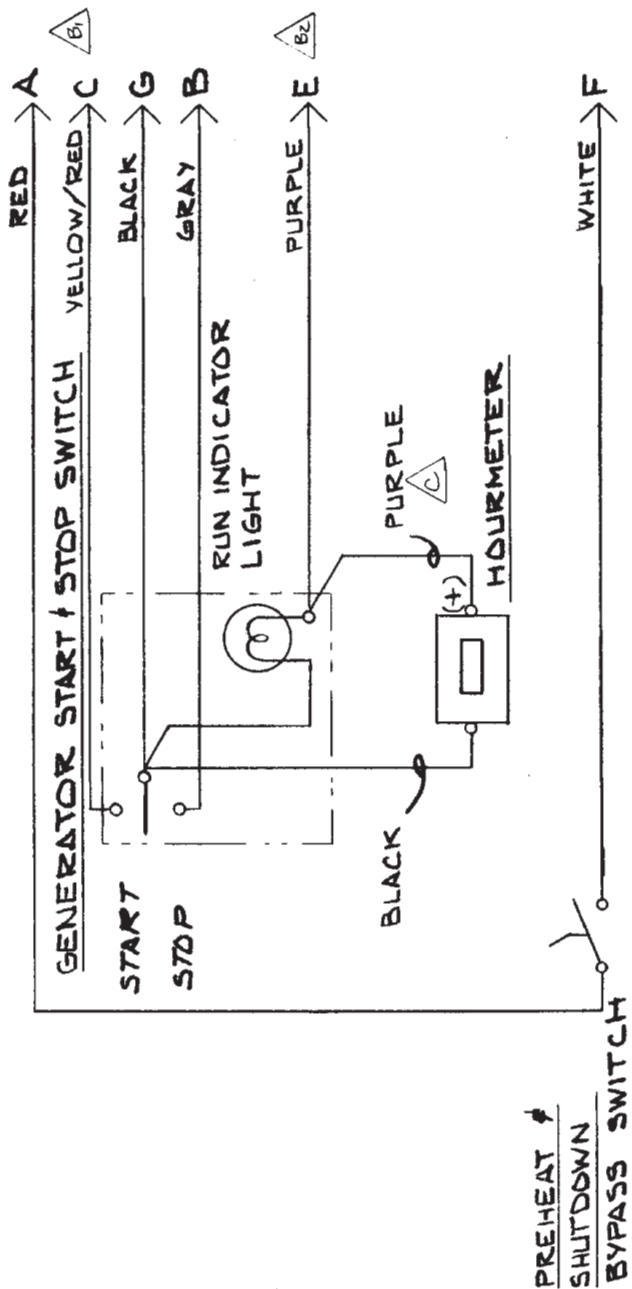

Panel Wiring Diagram
S-1B
12 Volt
Drawing A-3170

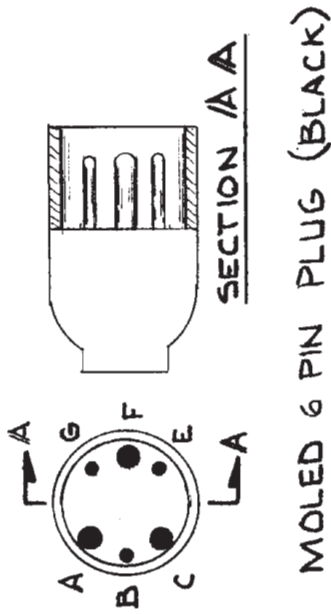


Panel Wiring Diagram



1. ALL INSTALLATION CONDUCTORS ARE TO BE AWG 14, TYPE MTW, 600VAC, 105°C, STRANDED, EXCEPT AS NOTED.
2. OIL PRESSURE GAUGE IS TO BE 0-150 PSI ON PANELS 22-98708 & 22-98709.

Panel Wiring Diagram
S-1B
24Volt
Drawing A-4792

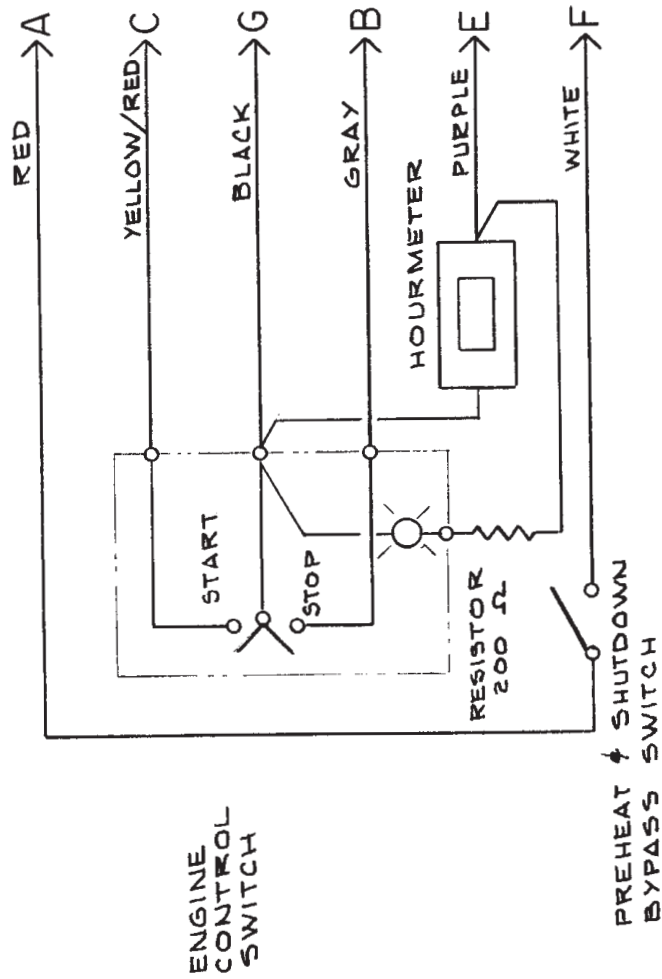

BOM A-4791



4420 14th Ave. NW., Seattle WA 98107

Tel: (206) 789-3880 • 1-800-762-0165 • www.northern-lights.com

Northern Lights and Lugger are registered trademarks of Northern Lights, Inc.

© 2021 All rights reserved. Litho USA.