



MODELS 740, 3050, 81495, 82393 HIGH PRESSURE CONTROL VALVE 7,500 PSI RATED©

OWNER/OPERATOR MANUAL

OWNER/OPERATOR RESPONSIBILITY

It is the owner/operator responsibility to properly use and maintain this equipment.

The instructions and warnings contained in this manual shall be read and understood by the owner/operator prior to operating this equipment.

If an owner/operator does not understand English, the contents of this manual shall be explained in the owner/operator native language to assure the owner/operator comprehends.

It is the owner/operator responsibility to maintain the legibility of all warning and instruction labels.

The owner/operator shall retain this manual for future reference to Important warnings, operating and maintenance instructions.

DESCRIPTION

The control valve is designed to control the flow of lubricant from high pressure lubricant pumps.

OPERATION

Before using the valve, always make sure the air pressure is set correctly to operate the lubrication pump. Only a small pressure on the control valve handle is required to obtain lubricant flow from the nozzle.

The control valve dispenses lubricant when the handle (45788) is depressed and the pull rod (11362) and ball retainer (11363) move up, compressing the friction spring (55029), allowing lubricant pressure to unseat the steel ball (66255) and lubricant to flow through the control valve. The ball retainer (11363) limits the travel of the steel ball (66255) and the lubricant flow rate is determined by the distance the handle is depressed.

When the handle (45788) is released, the friction spring (55029) returns the handle to its normal position and causes the ball retainer (11363) to seat the steel ball (66255) against the check seat (11364) stopping the lubricant flow through the control valve.

WARNING

FAILURE TO HEED THE FOLLOWING WARNINGS MAY RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE.

- ALWAYS determine the correct air pressure to operate the lubrication pump.

Some air pressure operated pumps can develop pressure over 11,000 psi. This control valve and nozzle extension only are rated at 7,500© psi and should not be operated above that pressure©. When this control valve is used with a whip hose, the pressure rating is further reduced to the rating of the whip hose. The supply hose rating and any fittings to the control valve must also be considered. To determine the air pressure to operate the lubrication pump at, simply divide the rated pressure of the lowest rated component on the down stream side of the pump by the lubricant to air pressure ratio of the pump.

EXAMPLE: If a whip hose is attached to the control valve is the lowest rated component and has a rating of 4,500 psi and if the lubrication pump is a 50:1© pump, divide 4,500 psi by 50 to determine the correct air pressure setting (4,500 / 50=90 psi). Set the air regulator that controls the air to the 50:1© pump to 90 psi or less

- NEVER point the dispensing valve at any part of the body or at another person.
- NEVER try to stop or deflect material from the dispensing valve, leaking connection or component with your hand.
- ALWAYS relieve pressure from the system before servicing.
- AVOID contact with the nozzle.
- ALWAYS attach the spring guarded end of a whip hose to the grease coupling and the non-spring guarded end to the control valve or gun.

MAINTENANCE

If lubricant continues to flow from the coupler after the handle is released, the steel ball (66255) is not seating against the check seat (11364).

Remove and Inspect the check seat (11364) and the steel ball (66265). If the steel ball is not perfectly smooth, replace it. The check seat has a ball seat on both sides. If the ball seat being used is rough, worn or pitted, invert the check seat and reassemble the control valve. If both sides of the check are damaged, replace the check seat and the steel ball.

See Figure (1) After assembly, the adjustment nuts at the top of the control valve should be adjusted. To prevent damage to the check seat, do not adjust for less than 1/32" pull rod travel.

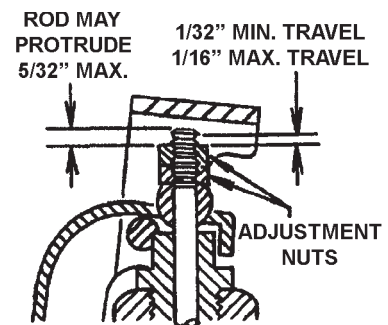


FIGURE 1

**RETAIN THIS INFORMATION
FOR FUTURE REFERENCE**

© Indicates change



One Lincoln Way
St. Louis, MO 63120-1578
(314)679-4200


Copyright 2008
Printed in U.S.A.
website: www.lincolnindustrial.com

SERVICE PARTS

PART	QUAN	DESCRIPTION
5834	1	Hydraulic coupler
5845	1	Hydraulic coupler
10181	1	Nozzle adapter
11356	1	Control valve body
11362#	1	Pull rod
11363	1	Ball retainer
11364#	1	Check seat
11837	1	Toggle pivot screw
12826	1	Packing gland
12828	1	Pivot bar
35007#	1	Valve stem packing
45788	1	Handle
45820	1	Toggle link
48218#	1	Packing washer
51043	3	Locknut
55029	1	Friction spring
62028	1	Nozzle extension
66177	1	Toggle pin
66255#	1	Steel ball

#Included in Repair Kit 82157

MODEL	COUPLING NUT	INLET
82393	12869	1/4" NPTF
81495	11396	3/8" NPTF

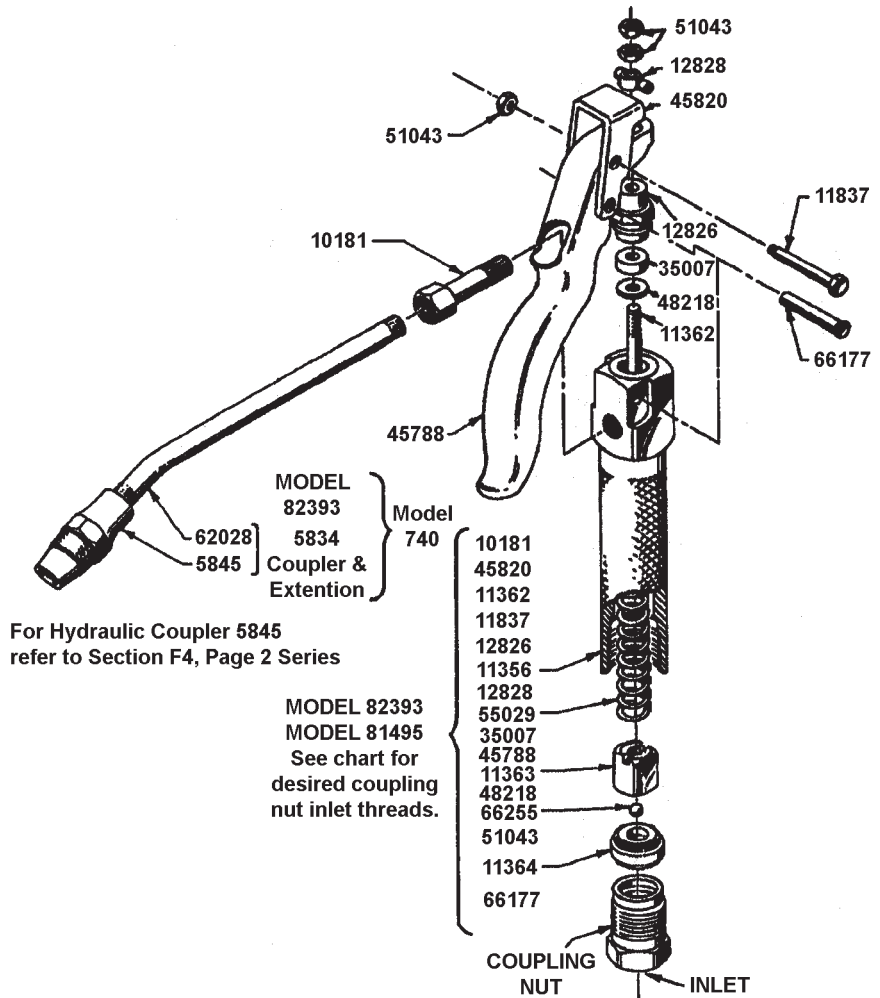

Lincoln Industrial Standard Warranty

LIMITED WARRANTY

Lincoln warrants the equipment manufactured and supplied by Lincoln to be free from defects in material and workmanship for a period of one (1) year following the date of purchase, excluding there from any special, extended, or limited warranty published by Lincoln. If equipment is determined to be defective during this warranty period, it will be repaired or replaced, within Lincoln's sole discretion, without charge.

This warranty is conditioned upon the determination of a Lincoln authorized representative that the equipment is defective. To obtain repair or replacement, you must ship the equipment, transportation charges prepaid, with proof of purchase to a Lincoln Authorized Warranty and Service Center within the warranty period.

This warranty is extended to the original retail purchaser only. This warranty does not apply to equipment damaged from accident, overload, abuse, misuse, negligence, faulty installation or abrasive or corrosive material, equipment that has been altered, or equipment repaired by anyone not authorized by Lincoln. This warranty applies only to equipment installed, operated and maintained in strict accordance with the written specifications and recommendations provided by Lincoln or its authorized field personnel.

THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

In no event shall Lincoln be liable for incidental or consequential damages. Lincoln's liability for any claim for loss or damages arising out of the sale, resale or use of any Lincoln equipment shall in no event exceed the purchase price. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, therefore the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights that vary by jurisdiction.

Customers not located in the Western Hemisphere or East Asia: Please contact Lincoln GmbH & Co. KG, Walldorf, Germany, for your warranty rights.

Lincoln Industrial Contact Information

To find Lincoln Industrial's Nearest Service Center call 314-679-4200, or you may also use our website www.lincolnindustrial.com

D**GB****F****I**

**EG-Konformitätserklärung
im Sinne der EG-Richtlinie
Maschinen 98/37/EG,
Anhang II A**

**EC declaration of conformity
as defined by machinery directive
98/37/EEC
Annex II A**

**Déclaration "CE" de
conformité conformément à
la directive "CE" relative aux
machines 98/37/CEE Annexe II A**

**Dichiarazione CEE di
conformità ai sensi della
direttiva CEE 98/37 relativa a
macchinari, Appendice II A**

Hiermit erklären wir, daß die
Bauart von

Herewith we declare that the
model of

Par la présente, nous déclarons,
que le modèle fourni de nous

Si dichiara che il modello fornito
da noi

Produkt: High Pressure Control Valve, Model 740

in der von uns gelieferten
Ausführung den Bestimmungen
der oben genannten Richtlinie
– einschließlich deren zum
Zeitpunkt der Erklärung geltenden
Änderungen - entspricht.

in the version supplied by us,
complies with the provisions
of the directive 98/37/EEC –
including all modifications of this
directive valid at the time of the
declaration.

correspond aux dispositions de
la directive, libellé 98/37/CEE y
comprises toutes les modifications
en vigueur à la date de la
déclaration.

è conforme alle disposizioni della
direttiva CEE 98/37 Appendice I
relativa a macchinari – comprese
tutte le rettifiche di questa
direttiva al momento della
dichiarazione.

*Angewendete harmonisierte
Normen, insbesondere*

*Applied harmonized standards
in particular*

*Normes harmonisées
utilisées, notamment*

*Norme armonizzate applicate
in particolare*

Normen: EN 12100-1; EN 12100-2; EN 809



St. Louis, MO USA, 06/24/08, Avzik Grach, Manager, Product Engineering

(Datum / Unterschrift)

(date / signature)

(date / signature)

(data/firma)

Americas:
One Lincoln Way
St. Louis, MO 63120-1578
USA
Phone +1.314.679.4200
Fax +1.800.424.5359

Europe /Africa/Middle East
Lincoln GmbH
Heinrich-Hertz-Str. 2-8
69190 Walldorf - Germany
Phone/Fax +49.6227.33-0/-259
www.lincolnindustrial.de

Asia/Pacific:
51 Changi Business Park
Central 2
#09-06 The Signature
Singapore 486066
Phone +65.6588.0188
Fax +65.6588.3438

© Copyright Lincoln Industrial
Corp. 2008
Printed in USA

Web site:
www.lincolnindustrial.com

<i>GR</i>	<i>E</i>	<i>P</i>	<i>NL</i>	<i>DK</i>
Δηλώσεις ανταποκρίσης σύμφωνα με τις προδιαγραφές για μηχάνες, αρ. 98/37/ΕΟΚ, παρ. ΙΙΑ	<i>Declaración CE de conformidad de acuerdo con la Directiva CE sobre máquinas 98/37/CEE, Anexo II A</i>	<i>Declaração CE de conformidade segundo directiva CE 98/37/CEE, Anexo II A</i>	<i>EG-verklaring van overeenstemming inzake de richtlijn betreffende machines (98/37/EEG, bijlage II A)</i>	<i>EF-overensstemmelses-erklæring i henhold til EF-lovgivning om maskiner 98/37/EEF bilag II a</i>
Δια του παρόντος σας γνωστοποιούμε, ότι ο τύπος κατασκευής του προϊόντος	Por la presente, declaramos que el modelo suministrado	Com a presente, declaramos que o modelo fornecido da	Hiermede verklaren wij, dat de in de handel gebrachte machine	Hermed erklæres, at produkttypen
Produkt: «Produkt»				
στην κατάσταση που παραδόθηκε από εμάς και που ανταποκρίνεται στις ανωθεν αναφερόμενες προκαθορισμένες προδιαγραφές χρήσεως (συμπεριλαμβανομένων των αλλαγών που ισχύουν κατά τον χρόνο της δηλώσεως).	satisface las disposiciones pertinentes de la directiva en su redacción 98/37/CEE – incluso las modificaciones de la misma vigentes a la hora de la declaración.	na versão fornecida por nós, em conformidade com as provisões da directiva 98/37/EEC incluindo todas as modificações desta directiva válida desde a emissão desta declaração.	beantwoordt aan de bepalingen van de richtlijn 98/37/EEG – ingesloten de tot dit tijdstip geldende veranderingen van deze richtlijn.	er i overensstemmelse med alle bestemmelser, inkluderet alle ændringer gældende på deklarationstidspunktet. EF-lovgivningen om maskiner 98/37/EEF.
Ιδιαίτερες εφαρμοσμένες εναρμονισμένες προδιαγραφές	<i>Normas establecidas y utilizadas en particular</i>	<i>Normas harmonizadas utilizadas, em particular</i>	<i>Gebruikte geharmoniseerde normen, namelijk</i>	<i>Harmoniserede standarder, der blev anvendt, i særdeleshed</i>

Normen: «Normen»	«Datum» «Name»
(ημερομηνία / υπογραφή)	(fecha / firma)
	(Data / assinatura)
	(Datum/ handtekening)
	(dato underskrift)