

TITAN 2000

Bagless Vacuum Cleaner



14



15



16



17



1

2

3

4

5

6

7

8

9

10

11

12

13



Titan 2000

Congratulations on the purchase of your new Titan 2000 vacuum cleaner. There are many useful features built into your vacuum cleaner. We recommend that you carefully read this instruction manual for the best results.

Features:

1. Hose
2. Filter Release
3. Dust Bin
4. Dust Release Button
5. Air Inlet
6. Handle
7. Air Relief Valve
8. Rod
9. Cable Rewind Button
10. Bin Release Button
11. On/Off Button
12. Power Cable (not shown)

Accessories:

13. Turbo Floor Tool
14. Combination Floor Tool
15. Accessories Holder
16. Dusting Brush
17. Crevice Tool

Specifications:

Maximum Power: 1700W

Dust Bin Capacity: 2L

Power Cable Length: 4.4m

Weight: 4.95kg

***Please contact Godfreys Customer Care 1800 815 270,
NZ 0800 282 288 to find your local spare parts provider.***

Before You Begin

This cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring, walls and fabrics. This cleaner is not fit to be used as an industrial cleaner and will void the manufacturer's warranty if used inappropriately.

Please read these instructions thoroughly. This will ensure you obtain full benefit from your new cleaner. Keep this Instruction Manual in a convenient and safe place for future reference.

Important

Always switch the cleaner off and remove the power plug from the electricity supply before cleaning your appliance, when not in use, or attempting any maintenance task. The cleaner must only be connected to an AC power supply at the voltage shown on the rating plate. This cleaner should only be used for its intended purpose as described in these instructions.

Precautionary Measures:



1. **Do not** operate the vacuum cleaner too close to heaters, radiators, or other hot surfaces.



2. Before inserting the power plug into the power supply, make sure your hands are dry.



3. Before turning on the vacuum cleaner, remove any large objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to pull the power plug from the power supply, **do not** use the power cable, gently pull the power plug from the power socket.



5. Do not use the vacuum cleaner to pick up water or liquids.

Safety Precautions & Warnings

IMPORTANT! Always switch off the cleaner and remove the plug from the electricity power supply before cleaning your appliance, when not in use or attempting any maintenance task. The cleaner must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. Never operate the vacuum cleaner without filters.

When using your vacuum cleaner, basic precautions should always be observed, including the following;

1. This appliance is **not** intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they **do not** play with the vacuum cleaner.
3. Keep ends of the hose, telescopic tube and other openings away from your face and body.
4. **Do not** operate the vacuum cleaner too close to heaters, radiators or other hot surfaces.
5. **Do not** use the appliance to pick up flammable items or combustible liquids (i.e. petrol, hot ashes, cigarettes, matches, explosive materials or anything burning) or use in areas where such substances or items may be present.
6. **Do not** use the appliance to pick up toxic materials (i.e. chlorine, bleach, ammonia).
7. Before vacuuming, remove any large objects from the floor or cleaning surface in order to prevent damage to the filter.
8. Always check the power cord before use.
9. The power cord and the power plug should be in a good condition and must not be damaged. If the power supply cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
9. **Do not** extend the power cable beyond the yellow mark.
10. **Do not** pull or carry the appliance by the power cable, use the power cable as a handle or pull the power cable around edges or corners. Avoid running the appliance over the power cable.
11. Ensure the appliance is switched off before unplugging.
12. **Do not** unplug by pulling on the power cord. To unplug, grasp the power plug not the power cord and gently pull the power plug from the power socket. Use only Australian and New Zealand electrical safety approved extension cords.
13. Hold the power plug when rewinding the power cord. To prevent accidental injury **do not** allow the power plug to whip when rewinding.
14. **Do not** handle or operate the appliance with wet hands. Follow electrical safety precautions at all times.

15. To prevent electrical shock, **do not** immerse the appliance, power cord or power plug into water or any other liquids.
16. **Do not** use the machine to vacuum water or liquids, this vacuum is for dry household use only.
17. To prevent electrical shock, **do not** use the vacuum cleaner outdoors or on wet surfaces.
18. Extreme caution should be exercised when using the appliance on stairs.
19. **Never** clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
20. **Do not** attempt to change the attachments while the appliance is plugged into the mains power supply. First switch off and remove the power plug from mains power supply. Use only the manufacturer's recommended accessories.
21. Ensure the appliance is disconnected from the mains power supply before connecting the hose to the unit.
22. **Do not** operate or use the appliance without the dust bag and/or filters in place.
23. If the air inlet, floor head or the telescopic tube is blocked, switch off the cleaner straight away and disconnect the power plug from power supply. First clear the blocked object before attempting to start the cleaner again.
24. **Do not** leave the appliance unattended when it is connected to a mains power supply.
25. Before carrying out any maintenance service or cleaning the filters, always switch off the vacuum cleaner and disconnect the power plug from power supply.
26. **Do not** use the vacuum cleaner if it is damaged or breaks down. Check the electrical components regularly for defects. If connection cables, electrical hoses, electrical contacts and electric tubes are damaged, have them replaced immediately.
27. **Never** attempt to make any modifications to the vacuum cleaner.
28. Always store the appliance indoors, in a cool, dry place.
29. Damage caused by improper use or by not observing the instructions in this manual will void the warranty.

Assembling

IMPORTANT! Always remove the power plug from the power supply before fitting or removing accessories!



1. Flexible Hose

Fitting:

Insert the flexible hose into the air inlet of the vacuum. Turn clockwise until it locks into place.

Removing:

To remove, turn the flexible hose anticlockwise and gently pull to release the flexible hose.



2. Handle

a. Gently insert the handle into the rod and push until it is secured into place.



b. Insert the opposite end of the rod into the Floor Tool.



3. Accessory Holder

Install the accessory holder onto the rod as shown. The dusting brush and the crevice tool can be stored onto the accessory holder for convenient access.

Instructions for Use

IMPORTANT! Do not exceed the red mark when extending the power cord. The red mark on the power cable indicates the ideal cable length.



Turning On/Off the Cleaner

1. Unwind a sufficient length of cable. The red mark on the power cable shows the ideal cable length.
DO NOT extend the cable beyond the red mark.
2. Insert the power plug into the power supply.
3. Press the On/Off button to turn the vacuum on or off.



Rewinding the Power Cable

1. Press the On/Off Button to turn off the vacuum.
2. Unplug the power cable from the power supply.
3. To rewind the power cable, press the Cable Rewind Button with one hand and guide the power cable with the other hand to ensure that it does not whip.

Accessories

IMPORTANT! Always remove the power plug from the power supply before fitting or removing accessories.

Combination Floor Tool



Carpet



Hard Floors

Ideal for daily cleaning on carpets and hard floors.

Note: The combination floor tool may be difficult to move on some carpeted surfaces, adjust the Air Relief Valve to reduce the suction pressure.

Turbo Floor Tool



Deeply cleans carpets by effectively lifting and removing embedded dust and dirt.

Note: not recommended for use on hard floors.

WARNING! Seek advice from carpet manufacturers before using the turbo floor tool on woollen or delicate carpets.

Accessories (continued)



Dusting Brush

For multi-surface cleaning.



Crevice Tool

Perfect for eliminating dust from hard to reach places.

Maintenance

WARNING! Ensure that the cleaner is disconnected from the mains power supply when performing any maintenance.

Emptying and Cleaning the Dust Bin



1. Gently remove the dust bin by pressing the Bin Release Button.

Note: the dust bin should be emptied before dust and debris reaches the “MAX” line.



2. Hold the dust bin over a rubbish bin and press the Dust Release Button to empty the dust bin.
3. Reinsert the dust bin into cleaner ensuring that it clicks into place.

Cleaning the Cyclone Separator



1. Remove the dust bin from the cleaner. To detach the dust bin, turn the dust bin to the unlock position as shown.



2. To detach the cyclone separator, turn the cyclone separator to the unlock position as shown. The cyclone separator can be cleaned using lukewarm water. Please ensure that the cyclone separator has completely dried before reinstalling.

Maintenance (continued)

Replacing the Dust Bin Filter

IMPORTANT! Always remove the power plug from the power supply before performing any maintenance.



1. Remove the dust bin from the cleaner. Lift the Filter Release to access the dust bin filter.



2. The dust bin filter can now be replaced.

Note: It is recommended to replace the filter every 6 months or when it becomes visibly dirty.

Replacing the Pre-Motor Filter

IMPORTANT! Always remove the power plug from the power supply before performing any maintenance.



1. Remove the dust bin from the cleaner to access the pre-motor filter.

Note: It is recommended to replace the filter every 6 months or when it becomes visibly dirty.

Cleaning and Replacing the Exhaust Filter

WARNING! Ensure that the cleaner is disconnected from the mains power supply when performing any maintenance.



1. The rear motor filter is installed behind the Exhaust Grill. Press the Exhaust Grill Buttons to access the exhaust filter. The filter can be cleaned using lukewarm water. Alternatively, the filter can be replaced with a new filter.

Note: It is recommended to replace the filter every 6 months or when it becomes visibly dirty.



Cleaning the Turbo Floor Head

WARNING! Ensure that the cleaner is disconnected from the mains power supply when performing any maintenance.



1. Remove the brush cover by sliding the release buttons, as shown.



2. Clean the roller brush and use a pair of scissors to remove hair wrapped around the roller brush.



3. Reinstall the brush cover and lock back into place.

Troubleshooting

Problems and solutions

If you come across a problem, please use the checklist of troubleshooting tips before contacting Godfreys Customer Care on 1800 815 270 (AU), 0800 282 288 (NZ).

Fault	Solutions
The cleaner will not turn on.	Check that the power cable is inserted into the power supply securely; remove from the power supply and then reinsert into the power supply. Check that the On/Off button is in the "ON" position.
The vacuum performance is deteriorating.	Check the appliance to ensure there are no blockages. Check that the dust bin filter is not dusty.
The cleaner makes an abnormal sound when switched on.	Turn off the cleaner immediately. Check the appliance to ensure that there are no blockages.

Spare Parts

Please contact Godfreys Customer Care: 1800 815 270, NZ: 0800 282 288 to find your local spare parts provider.

Part	Part Number
Filter Set	32201642
Hose	31220910
Rod	31300282
Combination Floor Tool	31155469



TITAN 2000

Bagless Vacuum Cleaner

Conditions of warranty

Your Titan 2000 cleaner, in the case of domestic use, has a one year parts and labour warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty commences from the original date of purchase and is not transferable; please retain your original proof of purchase for any warranty claims. This warranty is valid only in the country where the cleaner is purchased.

The cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring and fabrics. This cleaner is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials in these circumstances may be harmful to your cleaner and may void the manufacturer's warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

When properly used and cared for, your cleaner will render excellent service; refer to the instruction manual for further details, as misuse or failure to follow the instructions makes this warranty void.

In the event of service or advice being needed, please contact Electrical Home-Aids Pty Ltd, Level 1, Building 3 Brandon Business Park, 530 Springvale Road, Glen Waverley Victoria 3150, or on 1800 815 270 (AUS), 0800 282 288 (NZ), Monday-Friday 9am-5pm EST. The decision to repair or replace the cleaner is at the sole discretion of Electrical Home-Aids Pty Ltd. If Electrical Home-Aids Pty Ltd decide to repair or replace the cleaner, it will do

so at its own cost.

Electrical Home-Aids Pty Ltd is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Godfreys Service Agent or from the use of non-genuine parts. If any part is no longer available or manufactured, Electrical Home-Aids Pty Ltd will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the product due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage. Any transportation costs involved in the repair of defective parts shall be borne by the claimant.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable.

The repair of the cleaner under this warranty does not extend the original period of warranty.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act and other State and Territory laws.

“Our goods come with guarantees that cannot be excluded in the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.”

Call Godfreys Customer Care
with any product queries

Australia **1800 815 270**

New Zealand **0800 282 288**

To find out more about our range,

visit: www.godfreys.com.au

www.godfreys.co.nz

email: customerservice@godfreys.com.au