



Whynter 37 Quart Compact Portable Freezer Refrigerator with 12v DC Option

Model # : FMC-350XP

INSTRUCTION MANUAL



Congratulations on your new Whynter product. To ensure proper operation, please read this Instruction Manual carefully before using this product. Keep this manual in a safe place for future reference.

Table of Contents

| | PAGE |
|-----------------------------------|----------------|
| Safety Precautions | 3 - 4 |
| Parts and Accessories | 5 |
| Product Features / Technical Data | 6 |
| Installation | 7 - 8 |
| Operation and Controls | 9 - 10 |
| Cleaning and Maintenance | 11 - 12 |
| Troubleshooting | 13 - 14 |
| Warranty Information | 15 |

Safety Precautions

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY WHEN USING YOUR PORTABLE FREEZER, FOLLOW THESE BASIC PRECAUTIONS:

- Read all instructions before using the appliance.
- Never clean appliance parts with flammable fluids. The fumes can create a fire hazard. Do not use an excessively wet cloth, industrial solvents, and oil-based products to clean this appliance.
- To clean the freezer, use only mild detergents. Never use harsh chemicals or solvents.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard.
- Do not abuse, sit on, or stand on the appliance.
- This appliance is not intended for use by persons (including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure the freezer is unplugged before cleaning or if not in use.
- If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Use the portable freezer only for its intended function. This appliance is designed for household, non-commercial use only. Any other use will void the warranty.
- Do not plug this portable freezer into the power source before setup is completed.
- An empty portable freezer can be dangerous for children and small animals. If disposing of the portable freezer, remove gaskets, latches, lids, and the entire freezer door from your unused appliance so that children or small animals cannot be trapped inside.
- The portable freezer is an electrical appliance. To avoid serious injury from electrical shock, do not operate the freezer with wet hands, while standing on a wet surface, or while standing in water.
- To avoid the risk of shock, the product should never be used in bathrooms, shower rooms, or in any other steamy or wet areas.
- During installation, the power supply must not be excessively or dangerously bent or flattened.
- Do not tamper with controls.
- Make sure the power plug is placed fully and firm into the power source. If the wall receptacle you intend to use is not adequately grounded or protected by a time delay fuse or circuit breaker, have a qualified electrician install an outlet that is appropriate to local electrical codes and requirements.
- Do not use multiple socket or an extension cord as it may overheat and become a risk of fire. Please ensure that the freezer is plugged directly into the electrical outlet.
- The cord should be secured behind the unit and should not be left exposed or dangling.
- Make sure the power plug is clean before usage.
- Make sure hands are dry when connecting the power plug. The appliance is equipped with a three-prong grounded plug on the power cord for your protection. Never modify, remove or attempt to repair the power plug yourself.
- Never pull the power cord to disconnect the unit from an outlet. Grasp the plug directly and pull it from the outlet.
- Never lift or carry the freezer by the power cord.
- Keep the power cord away from heated surfaces.
- Do not repair, disassemble and/or modify the appliance by yourself.
- Always turn off the appliance when cleaning or transporting.
- Transport the appliance in an upright position only.
- Always place the appliance on even and hard and level surface.

Safety Precautions

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY WHEN USING YOUR PORTABLE FREEZER, FOLLOW THESE BASIC PRECAUTIONS:

- When positioning the portable freezer, ensure that there is at least a 6" clearance at the sides of the portable freezer. This will allow for adequate ventilation of heat from the back of the freezer.
- Close the freezer lid immediately after putting in any items to maintain the internal temperature of the unit.
- Avoid placing the freezer near external heat sources or direct sunlight.
- Do not expose this appliance to rain or excessive moisture.
- Make sure the freezer is placed on a flat, level, and solid surface.
- Place your appliance on a hard and level floor that is strong enough to support it when it is fully loaded.
- Do not turn the portable freezer upside down, on its side, or 45° or more off level.
- Do not move this portable freezer without securing the lid in a closed and latched position.
- Performance may vary based on operational and ambient conditions.

ELECTRICAL CONNECTION

The appliance should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating label on the appliance. The cord should be secured behind the appliance and not left exposed or dangling to prevent accidental injury. Following the instructions listed in this manual will assure best performance and help prevent overloading and overheating the wiring circuits which could cause a fire hazard. Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle. Repair or replace all power cords that have become frayed or otherwise damaged immediately. Do not use a cord that shows cracks, abrasion or damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.


EXTENSION CORD

Because of potential safety hazards, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL/CUL-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 15 amperes and 115 volts. Failure to follow these instructions can result in fire, electric shock, or death.

THE MANUFACTURER DISCLAIMS ANY RESPONSIBILITY IF THE ABOVE INSTRUCTIONS ARE NOT FOLLOWED.

Parts and Accessories

Your Whynter portable freezer is supplied with all the accessories you need to enjoy refrigeration almost anywhere. Below is an image of the freezer features and standard accessories.

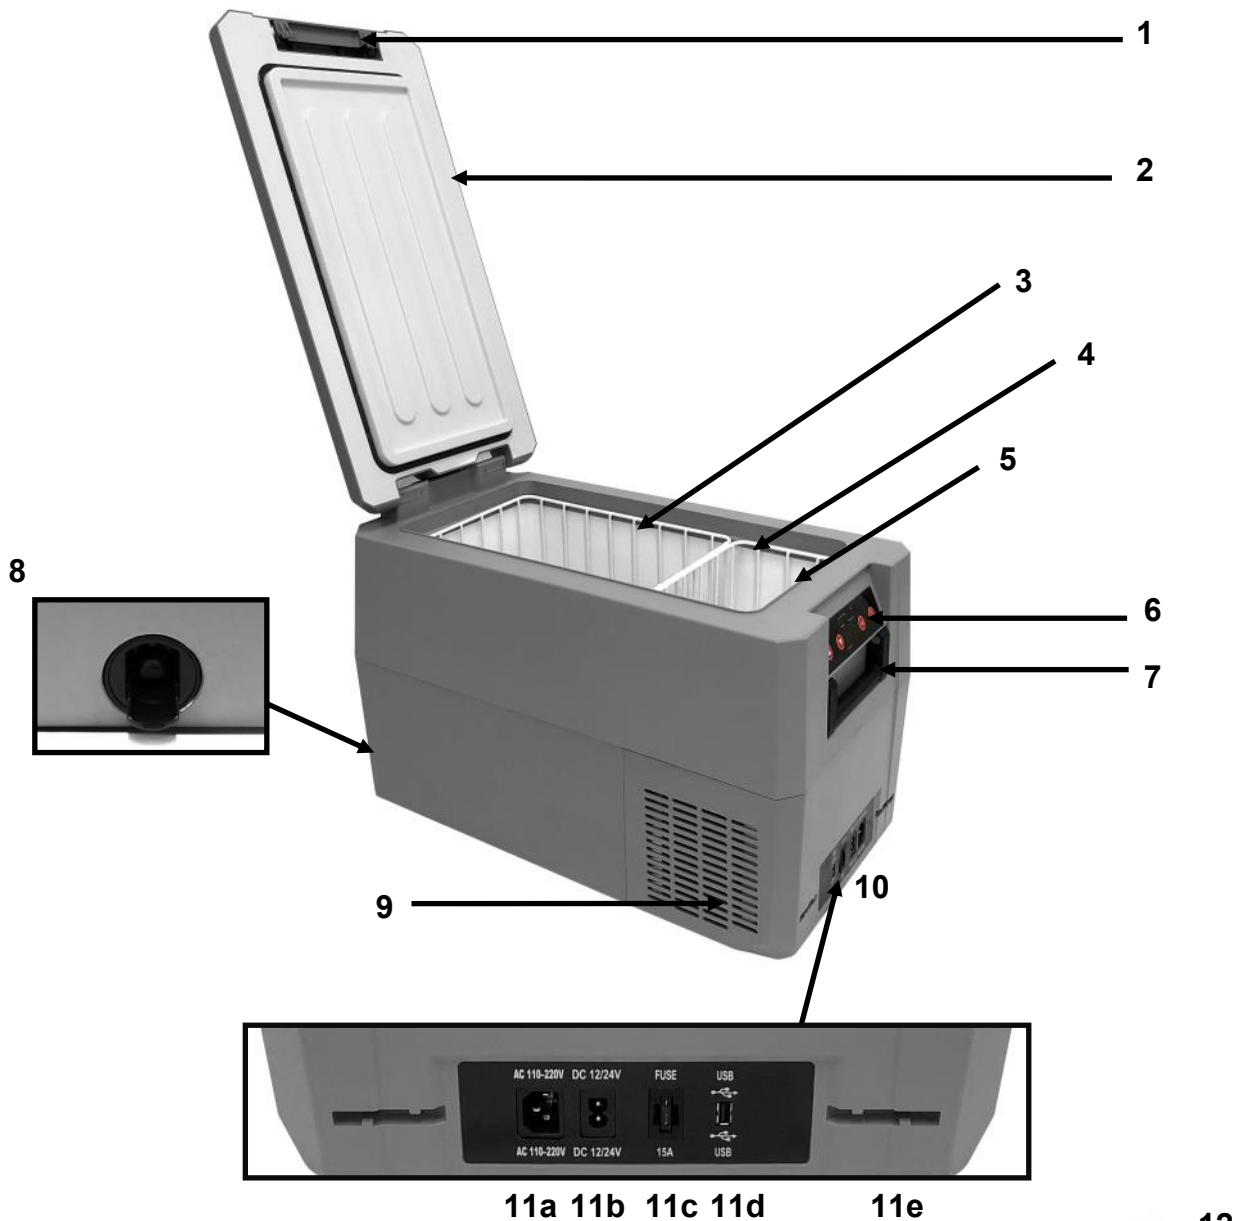

| | |
|-------------------|--------------------------|
| 1. Door latch | 10. Cable port access |
| 2. Freezer door | 11a. AC power inlet |
| 3. Large basket | 11b. DC power inlet |
| 4. Small basket | 11c. Fuse |
| 5. Interior Light | 11d. USB output port |
| 6. Control panel | 11e. DC cord tuck access |
| 7. Door handle | 12. Rubber mat |
| 8. Drain outlet | 13. 8' AC power cord |
| 9. Air vent | 14. 10' DC power cord |

Product Features / Technical Data

This Whynter Portable Fridge / Freezer offers premium quality and innovative design to your frozen/refrigerated needs. This freezer is great for RVs, boats, campsites, fishing trips and truly portable so you can take your fridge / freezer anywhere! All you need is either a standard household 110 Volt outlet or a 12 Volt power source, like an automotive battery.

Whether on a day trip or major expedition, you can easily keep your food and beverages chilled, or frozen with this benchtop freezer. The Whynter portable freezers should not to be confused with less effective 12 volt novelty and beverage type "coolers", the Whynter portable freezer fridge is a true freezer/refrigerator which cools between -8°F to 50°F . A cost effective and mobile solution for your recreational and critical freezing requirements.

- Operates as a refrigerator or freezer
- Compressor Cooling System
- 8' AC power cord and 10' DC power cord are included
- USB port outlet
- "Fast Freeze" mode rapidly cools to -8°F
- LED temperature display
- Open-door warning system
- Mode indicator lights
- Insulated lid and walls
- Large(1) and small(1) removable wire baskets
- Non-slip rubber mat that maintains grip on the surface of the portable freezer to prevent drinks from spilling or sliding
- Side handles for easy mobility
- Functions even when tilted 30°
- Tough and solid outer casing
- ETL approved

TECHNICAL DATA

| | |
|---------------------------|--|
| MODEL : | FMC-350XP |
| Capacity | 37 quarts |
| Voltage | 115V/60Hz |
| Voltage Power | AC (110V/60Hz - 1.0A) DC (12V/24V - 5.2A/2.6A Car Lighter Socket) |
| Input Power | 70W |
| Temperature Control Range | -8°F to 50°F |
| Net Weight | 42 lbs |
| Unit Dimensions | 14" W x 25" L x 16" H |
| Internal Dimensions | 10" W x 20" L x 12" H |
| Packaging Dimensions | 17" W x 28" H x 19" D |
| Refrigerant | R134a |
| UPC | 852749006917 |

Installation

BEFORE USING YOUR APPLIANCE

- Remove the exterior and interior packing.
IMPORTANT: Do not remove any permanent instruction labels or the data label on your freezer
- To remove any remaining tape or glue, rub the area briskly with your thumb. Tape or glue residue can also be easily removed by rubbing a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.
- Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your freezer.
- Before connecting the appliance to the power source, let it stand upright for approximately 4 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.

PROPER LOCATION

- The appliance is designed for free standing installation.
- The normal operation of the freezer depends on heat radiation from the condenser. Allow at least 6 inches of space between the back and sides of the appliance, which allows the proper air circulation to cool the compressor and condenser. The air vent at the front and side of the appliance must never be covered or blocked in any way.
- Do not install the appliance near an oven or other heating source. Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. For best performance, do not install the appliance behind a cabinet door or block the air vents.
- This portable freezer is suitable for vehicle use and camping. However, the appliance should never be exposed to rain.
- Avoid locating the appliance in area that may be exposed to excessive moisture.

MOVEMENT AND INSTALLATION OF YOUR APPLIANCE

- Position the freezer in a dry and well-ventilated place. Keep the freezer away from direct sunlight, heaters, and corrosive gases or chemicals.
- Clean the interior surface with lukewarm water using a soft cloth.
- Place your appliance on a hard and level floor that is strong enough to support it when it is fully loaded.
- We do not recommend installing the appliance on carpet.
- To level your appliance, install fixed legs at the bottom of the appliance if needed.
- When inserting the AC power-cord into the power socket, make sure the power socket is a grounded 115V~AC / 60Hz socket. Also, make sure that the unit's grounding prong has not been tampered with. NOTE: When inserting the DC power-cord, make sure the input is a 12V~DC / 24V power source. Do not tamper or modify the controls or the power cords. The power cords should never be hardwired to a battery/ power source.

TEST RUN

DC INPUT POWER

- When powering your portable freezer with a standard 12 V socket, the unit will not work if socket has a voltage of less than 10.4 V. The unit will restart when the voltage is 11.8V or greater.
- When powering your portable freezer into a standard 24 V socket, the unit will not work if the socket has a voltage of less than 22.5 V. The unit will restart when the voltage is 24.2 V or greater.

Operation and Controls

CONTROL PANEL GUIDE

To obtain the best possible results for your freezer, it is important that you operate it properly. Your freezer uses a digital control system for adjusting the thermostat.



1. Power / Mode Button

Press and hold the Mode button to turn on the portable freezer. To turn off, press and hold the Mode button for 4 seconds. When the portable freezer is in operation, press the Mode button to select Auto, High, or Low Speed Operation.

2. Set Button

Press the Set Button to select desired temperature. Temperature setting cannot be changed unless Set button is pressed.

3. Run Indicator Light

The Run indicator light will illuminate a green light when the freezer is in operation.

4. Mode Indicator Lights

High - The high indicator will illuminate a red light and display FF when the freezer is running on Fast Freeze mode (See 8. Fast Freeze).

Auto - The auto indicator will illuminate an orange light when the freezer is running on Auto Mode. In this mode, the unit operates in a fully automatic operation that ensures hassle-free operation while automatically maintaining the set temperature. The temperature can be set between -8°F to 50°F . The freezer measures the temperature inside the freezer cabinet and automatically adjusts the appropriate temperature setting for optimal operation.

Low - The low indicator will illuminate a green light the freezer is running on Low Speed Mode. In this mode, the portable freezer operates at the lowest fan speed while automatically maintaining the set temperature. The temperature can be set between -8°F to 50°F . The unit switches to lower activity level, fan speed and compressor operation are reduced and the energy consumption is minimized.

5-6 . Temperature Control Buttons

The temperature setting can be set within a range of -8°F to 50°F in 1°F increments. Press the Set button to choose your desired temperature setting. Press the Down button to decrease the set temperature by 1°F . Press the Up button to increase the set temperature by 1°F . Once the desired temperature is set, the temperature display will flash 4 times confirming the chosen temperature and then it will revert back to current internal temperature. The set temperature can be check by pressing the Set Button again.

7. Temperature Display

The LED display shows the actual temperature inside the portable freezer. When setting the desired temperature, the LED display shows the set temperature level from -8°F to 50°F .

8. Fast Freeze

Press the Mode button and select High to run the freezer on the Fast Freeze (FF) mode. The Fast Freeze mode rapidly cools the unit to -8°F . The portable freezer will then maintain this temperature.

Note: Do not run the unit on Fast Freeze (FF) mode for more than four hours, as this might adversely affect the refrigeration system.

9. AC / DC indicator

If a 115 Volt connection is active and the AC Cord is plugged in, the LED Display will display "AC". If 12 Volt connection is active and the DC Cord is plugged in, the LED Display will display the current running voltage.

10. Battery indicator

The battery icon will be displayed only when connected to a DC power source. The battery icon symbolizes the remaining battery source voltage.

Operation and Controls

LED LIGHT

This portable freezer comes equipped with energy saving LED light, which helps in lighting up the interior effectively. This LED light comes on automatically when the freezer door is opened. The LED light will shut off once the freezer door is completely closed.

AC POWER CONNECTION

To start AC powered operation, plug the AC power cord into the AC power inlet on the appliance and then plug the other end of the power cord into the AC supply.

DC POWER CONNECTION

To start DC powered operation, plug the DC power cord into the DC power inlet on the appliance and then plug the other end of the power cord into the DC supply.

FUSE

This portable freezer refrigerator is supplied with a 15A fuse. This fuse comes pre-installed and can be located in the control panel.

USB PORT

This portable freezer refrigerator is equipped with a USB port for charging small electronic devices like smartphone and cameras.

NORMAL SOUNDS

Your new freezer may make sounds that are not familiar to you. Hard surfaces like the floor, walls can make the sounds seem louder than they actually are. The following describes the kinds of sounds that might be new to you and what may be making them.

- Rattling noises may come from the flow of the refrigerant or the water line, items stored on top of the freezer can also make noises.
- The surface temperature of the compressor can reach 158 - 194°F when running.
- The high efficiency compressor may make a pulsating or high-pitched sound.
- The noise emitted by the cooling fan on the condenser is a normal function.
- It is normal for the fan in the power supply to run all the time.
- As each cycle ends, you may hear a gurgling sound due to the refrigerant flowing in your freezer.

OPEN-DOOR WARNING SYSTEM

This portable freezer has an Open-door warning system feature which alarms if the freezer door is left unopened for more than 1 minute. Close the freezer door to turn the alarm off.

STORING FROZEN FOOD

When using the freezer for the first time or after defrosting, turn the temperature setting to set “-8°F” for at least two hours before introducing the food to be stored.

- All frozen food products purchased should be placed in the freezer as soon as possible to avoid the frozen food from defrosting.
- Storage recommendation printed on the packaging of frozen food by the manufacturers should be always be followed.

Operation and Controls / Cleaning and Maintenance

FREEZING FRESH FOOD

Ensure that your freezing operations are carried out under the most hygienic conditions as freezing alone does not sterilize the food.

- It is advisable to freeze the food by packing it into separate meal portions and not in bulk form. Never put hot or warm food into the freezer.
- Prior to storing the frozen food, pack it in plastic bags, aluminum sheets or freezing containers and place into the freezer.
- Fresh foods should not be stored together with frozen foods.
- When the temperature is set below 32°F, do not keep glass-bottled drinks such as beer and juice or soda cans, as the glass and cans may burst.
- Do not use this portable freezer as a refrigerator when the ambient temperature is 41°F as food can become frozen.

Note: For best performance, leave enough space inside the freezer compartment for air to circulate around the packages.

DEFROSTING AND DRAINING

WARNING: Before proceeding with cleaning and maintenance operations, make sure the power line of the unit is disconnected. Do not touch the power plug when your hands are wet. Never unplug the unit by pulling on the plug.

To avoid damaging the freezing compartment wall, never use a sharp or metallic instrument to scrape off frost or separate the frozen food.

Moisture contained in food and air may form a layer of frost inside the unit after a period of use. We highly recommend that the unit gets defrosted when frost becomes ¼" thick. The defrosting process for this unit is operated manually.

For complete defrosting:

1. Unplug the unit from its power source
2. Remove all food and place it in boxes, insulated bags, a picnic cooler, etc. Use towels and newspaper for insulation as needed.
3. With the door open, use hot water to speed the loosening of the frost. Remove large pieces of before they melt.
4. Remove the clear drain plug from the inside base cabinet and the black drain plug from the side of the freezer to drain water.
5. Sponge excess water from the bottom of the freezer.
6. After defrosting, clean the inside and dry with a soft cloth to wipe away the remaining ice and water.

Once the compartment is wiped and dry, replace the drain plugs and plug in the freezer. Return the temperature value to its previous setting and return food to the freezer.

NOTE: Do not use mechanical devices or other means to accelerate the defrosting process. DO NOT pour hot water directly into compartment or heat with hair dryer while defrosting.

CLEANING

Outside/Exterior

Wipe with a clean cloth lightly dampened with appliance polish wax or mild liquid dishwashing detergent. Dry and polish with a clean, soft cloth. Do not wipe the freezer with a soiled dishwashing cloth or wet towel. Do not use scouring pads, powdered cleaners, bleach, or cleaners containing bleach.

Inside

Use warm water and baking soda solution—about a tablespoon of baking soda to a quart of water. Rinse thoroughly with water and wipe dry. Do not use cleaning powders or other abrasive cleaners. An open box of baking soda in the freezer will absorb stale freezer odors. Change the box every three months.

Cleaning and Maintenance

PROLONGED OFF PERIODS

If the freezer is not to be used for a long period of time, disconnect freezer from main power supply. Clean and dry the inside as instructed. Leave the freezer door open to prevent any mold and mildew growth.

Usage Tips:

- Keep the freezer's door closed as much as possible. Try not to open the door too frequently, especially when weather is hot and humid
- Ensure that the unit has sufficient clearance for ventilation
- For normal household use, it is recommended to set the thermostat in the middle setting.
- Before loading the freezer with an item, make sure they are cooled to ambient temperature.
- Ice and frost layer increase energy consumption, defrost when frost is 3-5 mm thick.

PREPARING FOR VACATION

To maintain freezer in operation during vacations, be sure your house power is not turned off. For extended vacations or absences, you may prefer to move your frozen foods to a separate freezer temporarily. If your freezer is to be left empty, disconnect power cord plug from power source. To prevent formation of odors, place open box of baking soda in freezer and leave freezer door open.

IN CASE OF EXTENDED POWER FAILURE

Keep freezer door/lid closed. Your freezer will keep food frozen for 24 hours provided warm air is not admitted. If freezer is out of operation for 24 hours or more, add dry ice. Leave ice in large pieces. Add more ice as required

NOTE: Handling of dry ice can cause freezing of the hands—gloves or other protection is recommended. If dry ice is not available, move food to a separate freezer/ refrigerator temporarily—until power is restored.

ENERGY SAVING TIPS

The freezer should be located in the coolest area of the room, away from heat-producing appliances or heating ducts, and out of direct sunlight. Let hot foods cool to room temperature before placing in the freezer. Overloading the freezer forces the compressor to run longer. Foods that freeze too slowly may lose quality or spoil. Be sure to wrap foods properly, and wipe containers dry before placing them in the freezer. This cuts down on frost buildup inside the freezer

Freezer shelves should not be lined with aluminum foil, wax paper or paper toweling. Liners interfere with cold air circulation, making the freezer less efficient. Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

Troubleshooting

Many common portable freezer problems are easily resolved. Try the troubleshooting suggestions below to see if the problems can be resolved before having to contact the service department.

| Problem | Possible Causes | Solutions |
|--|---|--|
| The machine won't operate | <ul style="list-style-type: none"> • The freezer is unplugged • The voltage is not in the correct range • Too many appliances running from the same power circuit | <ul style="list-style-type: none"> • Push the plug completely into the power source • Make sure that the freezer runs on a dedicated power source that can support the maximum power consumption of the freezer • Run the freezer on a dedicated power source |
| Noise during operation | <ul style="list-style-type: none"> • The legs are not leveled • Certain sounds are normal | <ul style="list-style-type: none"> • Make sure legs are properly installed • See "Normal Sounds" |
| The compressor runs for 1 to 5 minutes and stops | <ul style="list-style-type: none"> • The voltage is not in the correct range | <ul style="list-style-type: none"> • Unplug and restart when the power is normal |
| The compressor runs but the inner liner does not get very cold | <ul style="list-style-type: none"> • The ambient temperature is too high • The system is blocked | <ul style="list-style-type: none"> • If temperature is higher than 90°F, the unit need longer to cool to the set temperature • Contact Whynter Service Department via email at service@whynter.com |
| The freezer does not cool sufficiently | <ul style="list-style-type: none"> • Freezer door being opened frequently • Freezer door left open for a while • Not enough adequate clearance • Freezer is overfilled • Ambient temperature is too high | <ul style="list-style-type: none"> • Refrain from opening the freezer door recurrently • Make sure to close freezer door • Follow recommended clearance measurements • If temperature is higher than 90°F, the unit need longer to cool to the set temperature |
| The compressor does not run | <ul style="list-style-type: none"> • The controller is faulty (the power indicator is not on) • The thermostat is set too high and the ambient temperature is too low | <ul style="list-style-type: none"> • Contact Whynter Service Department via email at service@whynter.com • Set the freezer to a lower temperature |
| Foods defrosting | <ul style="list-style-type: none"> • Freezer is unplugged • Freezer door being opened frequently • Freezer door left open for a while | <ul style="list-style-type: none"> • Push the plug completely into the power source • Replace fuse or reset the breaker • Check to see if an object is holding the door open |
| Excessive frost buildup | <ul style="list-style-type: none"> • Door/lid left open too frequent or too long door openings • High humidity | <ul style="list-style-type: none"> • Check to see if an object is holding the door open |

Troubleshooting

Many common portable freezer problems are easily resolved. Try the troubleshooting suggestions below to see if the problems can be resolved before having to contact the service department.

| Problem | Possible Causes | Solutions |
|--|---|--|
| Freezer external surface is warm | <ul style="list-style-type: none">• The external freezer walls can be as much as 30°F warmer than room temperature | <ul style="list-style-type: none">• This is normal while the compressor works to transfer heat from inside the freezer cabinet |
| Moisture forms on inside freezer walls | <ul style="list-style-type: none">• Weather is hot and humid, which increases internal rate of frost buildup• Door may not be seating properly• Door is kept open too long, or is opened too frequently | <ul style="list-style-type: none">• This is normal• Check door installation• Open the door less often |
| Odors in freezer | <ul style="list-style-type: none">• Interior needs to be cleaned• Food with strong odors are in the freezer | <ul style="list-style-type: none">• Clean interior with sponge, warm water, and baking soda |

ONE YEAR LIMITED WARRANTY

This Whynter appliance is warranted, to the original owner within the 48 continental states, for one year from the date of purchase against defects in material and workmanship under normal use and service. When making a warranty claim, please have the original bill or invoice of purchase with purchase date available. Should your Whynter appliance prove defective within one year from the date of purchase, return the defective part or unit, freight prepaid (within two months of purchase; after two months to one year, customer will be responsible for freight cost to Whynter's service department), along with an explanation of the claim to Whynter LLC. A return authorization number issued by Whynter is required for all warranty claims and returns. Please package your Whynter appliance carefully in its original packaging material to avoid damage in transit. The original box and packaging material should be retained, as Whynter is not responsible for the cost of replacement packaging. Under this warranty, Whynter will repair or replace any parts found defective at our discretion. This warranty is not transferable. After the expiration of the warranty, the cost of labor and parts will be the responsibility of the original owner of the unit.

THIS WARRANTY DOES NOT COVER:

- Acts of God, such as fire, flood, hurricanes, earthquakes and tornadoes.
- Improper power supply such as power surge, low voltage, defective household wiring or inadequate fuses.
- Use in commercial or industrial applications
- Damage, accidental or otherwise, to the Whynter appliance while in the possession of a consumer not caused by a defect in material or workmanship;
- Damage caused by consumer misuse, tampering, or failure to follow the care and special handling provisions in the instructions.
- Damage to the finish of the case, or other appearance parts caused by wear.
- Damage caused by repairs or alterations to the product by anyone other than authorized by the manufacturer.
- Removal, Replacement Packaging, Freight and Insurance cost for the warranty service.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. WHYNTER SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

**Please retain the original proof of purchase in order to obtain warranty services.
Warranty begins from the original date of purchase.**

To obtain service or information, contact
Whynter LLC via email at service@whynter.com or call
866-WHYNTER.

Product contents and specifications may change without notice.

Copyright © 2019 Whynter LLC
WWW.WHYNTER.COM