



# Model TA502A

Zero Two Series Generic  
Trip Amplifier Module



The information and technical data disclosed in this document may be used and disseminated only for the purposes and to the extent specifically authorized in writing by General Monitors.

**Instruction Manual**

**08/14**

General Monitors reserves the right to change published specifications and designs without prior notice.

**MANTA502A**

Part No.  
Revision

MANTA502A  
J/08-14

This page is intentionally left blank.

## Warranty Statement

General Monitors warrants the Model TA502A to be free from defects in workmanship or material under normal use and service within two (2) years from the date of shipment. General Monitors will repair or replace without charge any equipment found to be defective during the warranty period. Full determination of the nature of, and responsibility for, defective or damaged equipment will be made by General Monitors' personnel. Defective or damaged equipment must be shipped prepaid to General Monitors' plant, or the representative from which shipment was made.

In all cases, this warranty is limited to the cost of the equipment supplied by General Monitors. The customer will assume all liability for the misuse of this equipment by its employees or other personnel. All warranties are contingent upon proper use in the application for which the product was intended and do not cover products which have been modified or repaired without General Monitors' approval or which have been subjected to neglect, accident, improper installation or application, or on which the original identification marks have been removed or altered.

Except for the express warranty stated above, General Monitors disclaims all warranties with regard to the products sold, including all implied warranties of merchantability and fitness and the express warranties stated herein are in lieu of all obligations or liabilities on the part of General Monitors for damages including, but not limited to, consequential damages arising out of or in connection with the use or performance of the product.



### Warning

All Zero Two Series Modules contain components that can be damaged by static electricity. Special care must be taken when wiring the system to ensure that only the connection points are touched.

Installation and maintenance must be carried out by suitably skilled and competent personnel only.

Toxic, combustible, and flammable gases and vapors are very dangerous. Extreme caution should be used when these hazards are present.

## System Integrity Verification

General Monitors' mission is to benefit society by providing solutions through industry leading safety products, services and systems that save lives and protect capital resources from the dangers of hazardous flames, gases and vapors.

The safety products you have purchased should be handled carefully and installed, calibrated and maintained in accordance with the respective product instruction manual. Remember these products are for your safety. To ensure operation at optimum performance, General Monitors recommends that certain maintenance items be performed.

### Commissioning Safety Systems

Before power up, verify wiring, terminal connections and stability of mounting for all integral safety equipment including, but not limited to:

- Power supplies
- Control modules
- Field detection devices
- Signaling / output devices
- Accessories connected to field and signaling devices

After the initial application of power (and any factory specified warm-up period) to the safety system, verify that all signal outputs, to and from devices and modules, are within the manufacturers' specifications. Initial calibration, calibration checking, and testing should be performed per the manufacturers' recommendations and instructions. Proper system operation should be verified by performing a full, functional test of all component devices of the safety system, ensuring that the proper levels of alarming occur.

Fault/Malfunction circuit operation should be verified.

### Periodic Testing/Calibration of Field Devices

Periodic testing/calibrating should be performed per the manufacturers' recommendations and instructions. Testing/Calibrating procedures should include, but not be limited to:

- Verify zero reading
- Apply a known concentration of gas, or a simulated test device provided by the manufacturer
- Verify integrity of all optical surfaces and devices
- For flame detectors, use the appropriate test lamp

When testing produces results outside of the manufacturers' specifications, re-calibration or repair/replacement of the suspect device(s) should be performed as necessary. Calibration intervals should be independently established through a documented procedure, including a calibration log maintained by plant personnel or third party testing services.

# Table of Contents

|                                                     |             |
|-----------------------------------------------------|-------------|
| <b>MODEL TA502A .....</b>                           | <b>1</b>    |
| <b>WARRANTY STATEMENT .....</b>                     | <b>III</b>  |
| Warning .....                                       | iii         |
| <b>SYSTEM INTEGRITY VERIFICATION .....</b>          | <b>IV</b>   |
| Commissioning Safety Systems .....                  | iv          |
| Periodic Testing/Calibration of Field Devices ..... | iv          |
| <b>TABLE OF CONTENTS .....</b>                      | <b>VI</b>   |
| <b>LIST OF FIGURES .....</b>                        | <b>VIII</b> |
| <b>LIST OF TABLES .....</b>                         | <b>IX</b>   |
| Mount and Wire the Card and Card Rack .....         | x           |
| Wire Field Devices .....                            | xi          |
| Rear Terminal Designations .....                    | xii         |
| Wire Outputs of Model TA502A .....                  | xiii        |
| Apply Power .....                                   | 1           |
| <b>1.0 INTRODUCTION.....</b>                        | <b>2</b>    |
| 1.1 General Description .....                       | 2           |
| 1.2 Features & Benefits.....                        | 3           |
| 1.3 Applications.....                               | 4           |
| <b>2.0 INSTALLATION.....</b>                        | <b>5</b>    |
| 2.1 Upon Receipt of Equipment.....                  | 5           |
| 2.2 Control Module Installation .....               | 5           |
| 2.3 Rear Terminal Connections .....                 | 6           |
| 2.3.1 Rear Terminal Designations .....              | 7           |
| 2.4 Applying Power .....                            | 12          |
| <b>3.0 OPERATION.....</b>                           | <b>13</b>   |
| 3.1 General Maintenance.....                        | 13          |
| 3.2 Electrical Inputs.....                          | 13          |
| 3.3 Electrical Outputs.....                         | 13          |
| 3.4 Accepting Alarm Conditions.....                 | 14          |
| 3.5 Resetting Latched Alarms.....                   | 15          |
| 3.6 CAL Open Collector .....                        | 15          |
| 3.7 Card Test Feature.....                          | 15          |
| 3.8 Beam Block Feature.....                         | 16          |
| 3.9 Operating Modes.....                            | 16          |
| 3.10 Fault Diagnostics.....                         | 17          |
| 3.11 Communications .....                           | 18          |

|                                                                      |           |
|----------------------------------------------------------------------|-----------|
| <b>4.0 USER INTERFACES .....</b>                                     | <b>19</b> |
| 4.1 Types of User Interfaces .....                                   | 19        |
| 4.2 Setup Check & Setup Modes .....                                  | 19        |
| 4.3 Setup Mode Selection Table .....                                 | 21        |
| 4.4 Entering the Setup Check Mode .....                              | 22        |
| 4.4.1 Entering the Password .....                                    | 22        |
| 4.4.2 Entering the Inhibit Mode .....                                | 23        |
| 4.4.3 Operating mode .....                                           | 24        |
| 4.4.4 Sensor range .....                                             | 24        |
| 4.4.5 Display Multiplier Option .....                                | 24        |
| 4.4.6 A2 Alarm Options .....                                         | 26        |
| 4.4.7 A1 Alarm Options .....                                         | 27        |
| 4.4.8 Fault / Inhibit Option .....                                   | 29        |
| 4.4.9 Card Test Options .....                                        | 30        |
| 4.4.10 Password Option .....                                         | 32        |
| 4.5 Inhibit Mode Description .....                                   | 33        |
| <b>5.0 APPENDIX.....</b>                                             | <b>34</b> |
| 5.1 Engineering & Technical Drawings .....                           | 34        |
| 5.1.1 Reference Drawing #11271, Outline & Terminal Connections ..... | 34        |
| 5.1.2 Reference Drawing #11270-1, Final Assembly .....               | 35        |
| 5.2 Specifications .....                                             | 36        |
| 5.2.1 System Specifications .....                                    | 36        |
| 5.2.2 Mechanical Specifications .....                                | 36        |
| 5.2.3 Electrical Specifications .....                                | 36        |
| 5.2.4 Environmental Specifications .....                             | 37        |
| 5.2.5 Engineering Specifications .....                               | 37        |
| 5.3 Ordering Information .....                                       | 38        |

## List of Figures

|                                                                  |      |
|------------------------------------------------------------------|------|
| Figure 1: Rack & Panel Mounting.....                             | x    |
| Figure 2: Control Module Coding Strip .....                      | x    |
| Figure 3: Outline Drawing.....                                   | xi   |
| Figure 4: Wire Strip Length.....                                 | xi   |
| Figure 5: Rear Terminal Designations.....                        | xii  |
| Figure 6: TA502A Inter-Connections .....                         | xii  |
| Figure 7: Relay Protection Circuits.....                         | xiii |
| Figure 8: External Test Circuits for Open Collectors .....       | xiii |
| Figure 9: Power Connections Rear Chassis .....                   | 1    |
| Figure 10: Model TA502A.....                                     | 2    |
| Figure 11: Control Module Coding Strip .....                     | 6    |
| Figure 12: Wire Strip Length.....                                | 6    |
| Figure 13: Rear Terminal Designations.....                       | 7    |
| Figure 14: Relay Protection for AC and DC Loads.....             | 9    |
| Figure 15: TA502A Inter-Connections .....                        | 10   |
| Figure 16: External Test Circuits for Open Collectors .....      | 10   |
| Figure 17: Card Test Switch Wiring.....                          | 11   |
| Figure 18: Analog Signal Connections .....                       | 11   |
| Figure 19: Power Connections Rear Chassis .....                  | 12   |
| Figure 20: Front Panel Display .....                             | 19   |
| Figure 21: Entering the Setup & Setup Check Modes.....           | 22   |
| Figure 22: Entering the Password .....                           | 23   |
| Figure 23: Entering the Inhibit Mode .....                       | 23   |
| Figure 24: Display Multiplier Option.....                        | 25   |
| Figure 25: A2 Energized/De-Energized Alarm Option.....           | 26   |
| Figure 26: A2 Latching/Non-Latching Alarm Option.....            | 26   |
| Figure 27: A2 Alarm Set Point Option .....                       | 27   |
| Figure 28: A1 Energized/De-Energized Alarm Option.....           | 28   |
| Figure 29: A1 Latching/Non-Latching Alarm Option.....            | 28   |
| Figure 30: A1 Alarm Set Point Option .....                       | 29   |
| Figure 31: Fault / Inhibit Option .....                          | 30   |
| Figure 32: Entering Card Test Options.....                       | 30   |
| Figure 33: Card Test Ramp Time, 1 / 3 / 10.....                  | 31   |
| Figure 34: Alarm Output Option during a Card Test, AC / nA ..... | 31   |
| Figure 35 Password Enabled / Disabled Option.....                | 32   |
| Figure 36: Entering a New Password .....                         | 32   |
| Figure 37: Outline & Terminal Connections .....                  | 34   |
| Figure 38: Final Assembly Drawing.....                           | 35   |

## List of Tables

|                                                                      |    |
|----------------------------------------------------------------------|----|
| Table 1: A2 Alarm .....                                              | 7  |
| Table 2: A2 Alarm Relay Contacts .....                               | 8  |
| Table 3: A1 Alarm .....                                              | 8  |
| Table 4: A1 Alarm Relay Contacts .....                               | 8  |
| Table 5: Fault Alarm .....                                           | 8  |
| Table 6: Un-accept output .....                                      | 9  |
| Table 7: Calibration Output.....                                     | 9  |
| Table 8: Field Transmitter Connections .....                         | 9  |
| Table 9: Card Test Input.....                                        | 11 |
| Table 10: Analog Signal Output.....                                  | 11 |
| Table 11: TA502A Operating Modes .....                               | 16 |
| Table 12: TA502A Ultrasonic Gas leak Detectors Operating Modes ..... | 17 |
| Table 13: Setup Mode Selection Table .....                           | 21 |
| Table 14: Cable Lengths .....                                        | 36 |

## Mount and Wire the Card and Card Rack.

A rack or panel mounted chassis will be required when installing any Zero Two Series Module. The chassis should be mounted in non-hazardous, weather-protected locations and should be subjected to minimal shock and vibrations. The rack and panel mounted chassis are available in 2-, 4-, 8-, and 16-channel sizes. Multiple 16-channel chassis may be connected to each other to form larger systems.

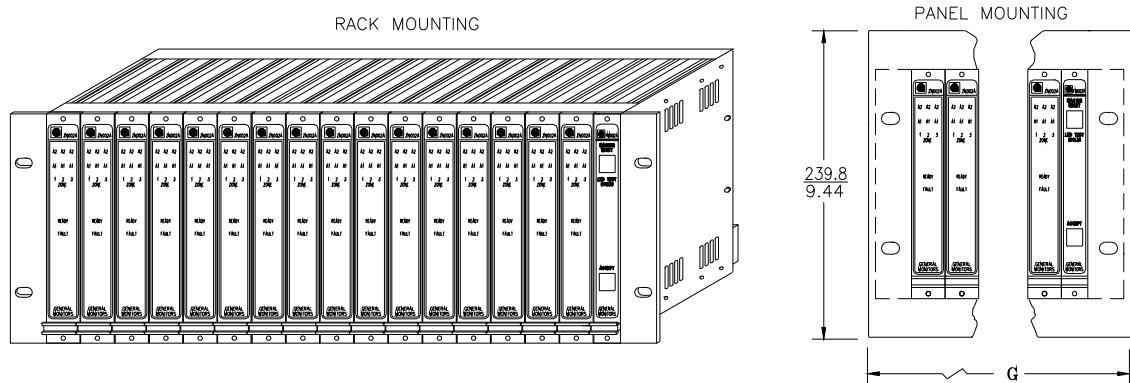


Figure 1: Rack & Panel Mounting

In installations where two or more module types are to be mixed in the same chassis, ensure that the individual coding strips match the channel application. The coding-strips are pre-configured at the factory and the male portion is already on each module. The female portion, if un-mounted, must be fastened into position on the mounting strip of the desired chassis channel to mate with its counterpart on the module (see Figure 2 below).


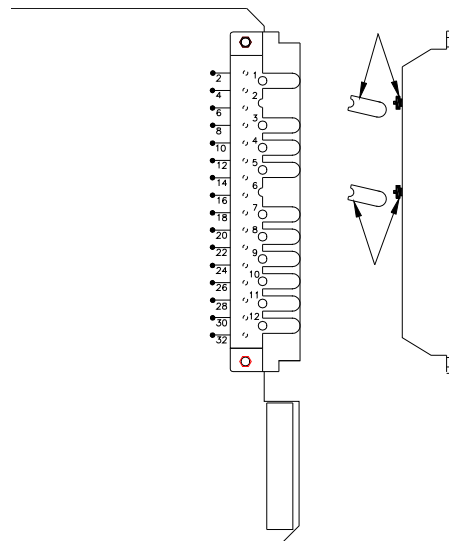


Figure 2: Control Module Coding Strip

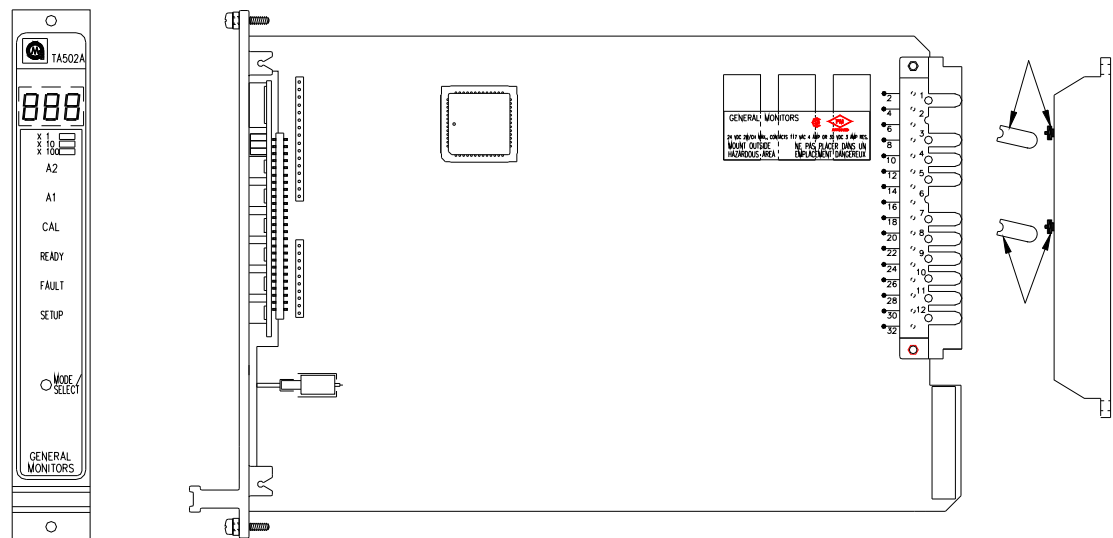


**Figure 3: Outline Drawing**

Zero Two series modules require air circulation to avoid excessive heat build-up. If chassis are stacked vertically within an enclosure, forced air circulation may be required. The Trip Amplifier Modules are, largely, immune to electromagnetic interference (EMI). However, they should not be mounted in close proximity to radio transmitters or similar equipment.

### Wire Field Devices

All wire connections to the Model TA502A are made to the terminal block located at the rear of the chassis. The terminal block accepts 16 AWG to 20 AWG, stranded or solid-core wire. 14 AWG wire may be used if it is properly stripped as shown in Figure 4.

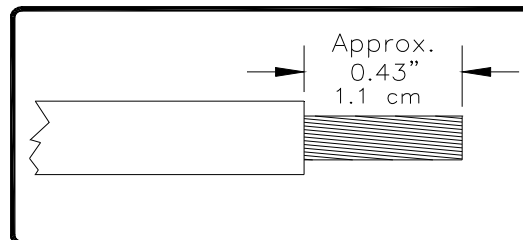


**Figure 4: Wire Strip Length**

Contact with PC Board components should be avoided in order to prevent damage by static electricity.

To connect wires to the terminal block on the Model TA502A, loosen the desired screw, insert the stripped end of the wire, and tighten. Gently tug on the wire to ensure it is securely fastened.


## Rear Terminal Designations

For the rear terminal designations refer to Figure 5 below:

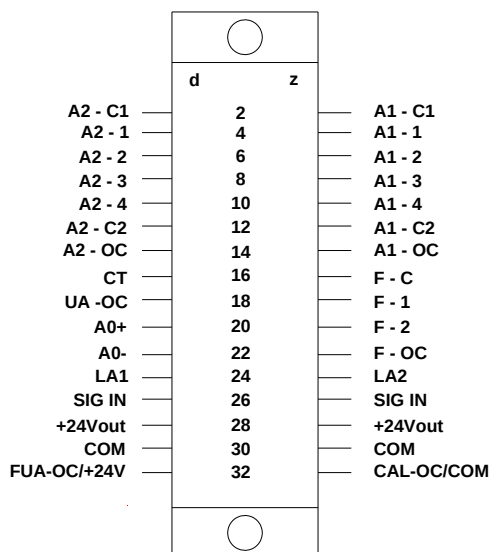

**Figure 5: Rear Terminal Designations**

Figure 6 illustrates the inter-connections for the TA502A & various types of Field Transmitters.

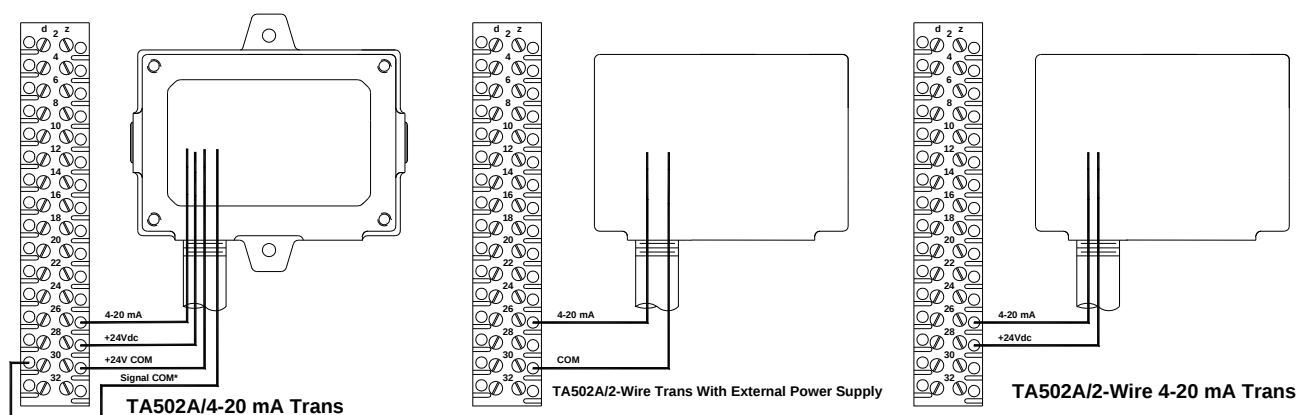

**Figure 6: TA502A Inter-Connections**

**NOTE:** Only one Field Transmitter may be connected to a Model TA502A. 4-conductor cable is recommended if cable length is greater than 400 ft. See Device Instruction Manual for connecting other Field Devices.

**NOTE:** Many new devices have HART installed. For these devices the HART option should be disabled (see individual device manual for instruction) when interfacing with the TA502A.

## Wire Outputs of Model TA502A

Inductive loads (bells, buzzers, relays, etc.) on dry relay contacts must be clamped down. Unclamped inductive loads can generate voltage spikes in excess of 100 volts. Spikes of this magnitude may cause false alarms and contact damage. Figure 7 shows the recommended relay protection circuits for AC and DC loads, respectively.

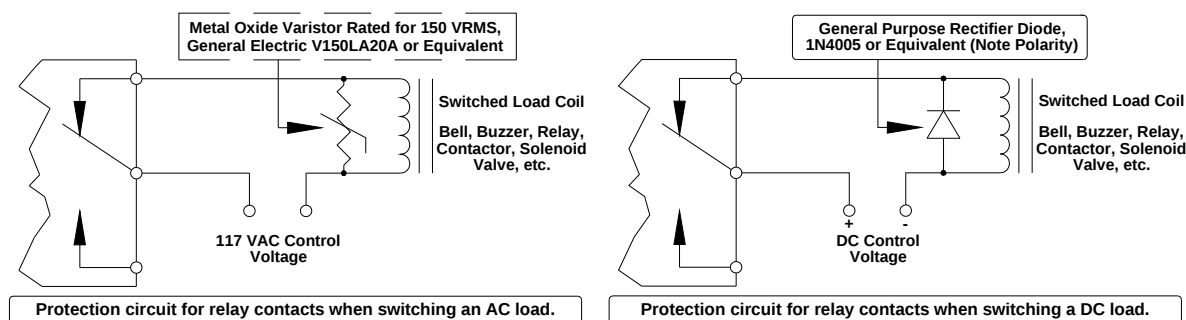


Figure 7: Relay Protection Circuits

The electrical rating for all open collector outputs is 100 mA @ 35 VDC. Figure 8 illustrates some typical open-collector external circuits.


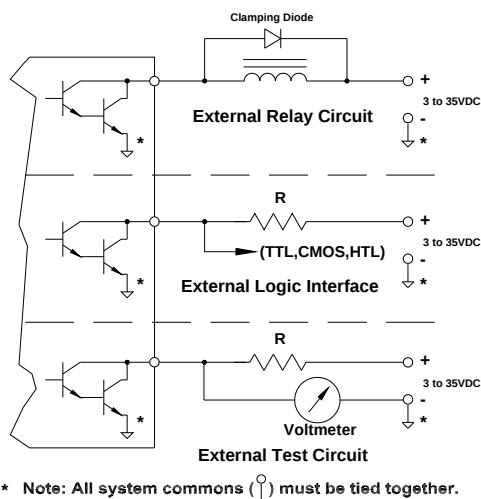


Figure 8: External Test Circuits for Open Collectors

## Apply Power

Zero Two Series Modules do not have an ON/OFF power switch. Each module in the Zero Two Series operates from 24 VDC. Power requirements will vary according to the number and type of modules in the system, as well as the number and type of field devices.

**NOTE:** If the application of power does not turn the Model TA502A 'ON', check Fuse F1.

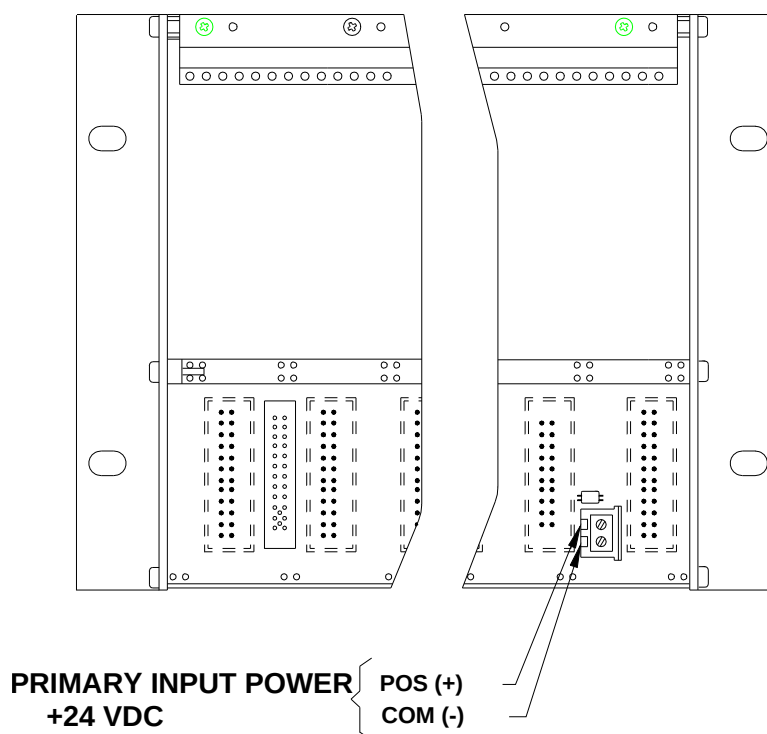

**Figure 9: Power Connections Rear Chassis**

Figure 9 indicates where the power connections for the chassis are made.

**NOTE:** The instrument is now ready to operate. Please consult the manual for more information on the instrument's many features. If you have any problems in the set-up or testing of the detector, please refer to the "Trouble Shooting Section", or call the factory direct.

# 1.0 Introduction

This chapter provides a brief description of the Model TA502A, its features and benefits and a list of some of its applications. More detailed information on the features and benefits listed in Section 1.2 will be presented in later chapters.

## 1.1 General Description

The General Monitors Model TA502A (see Figure 10) is a single channel Generic Trip Amplifier designed for use in Zero Two Series Gas and Flame Detection Systems. This Module connects to a field mounted 4-20 mA transmitter.

The Model TA502A is electrically and physically compatible with the other gas detection, flame detection, and system modules in the Zero Two Series. It is distinguished from the other modules by its gray border and "TA502A" in the upper right corner of the front panel. The Model TA502A is designed for use in non-hazardous environments.



Figure 10: Model TA502A

## **1.2 Features & Benefits**

### **Microprocessor Based Electronics**

Monitors fault conditions; field device inputs and provides outputs in the form of display codes, analog signal, relay contacts, and open collector activation.

### **Communications Capabilities**

Provides status and fault information as well as the ability to change set up parameters via the CC02A Communications Module. The CC02A can interface with up to 100 02A cards and interfaces with the customers PLC or DCS system using standard Modbus interface.

### **Setup Mode**

Allows the user to set parameters such as, alarm output options, test options, sensor range, display multiplier, etc. These parameters are viewed on the display during the Setup Mode.

### **Password Option**

Prevents unauthorized alteration of the setup parameters (can be disabled).

### **Setup Check Mode**

Allows the user to view the parameters that have been set by the factory and/or an operator.

### **LED Test**

Tests the integrity of each front panel LED, and each segment of the digital display.

### **Card Test**

Tests the functionality of the card, through the microprocessor, ramping up the signal from 0 to full-scale.

### **Live Insertion/Removal**

Allows the user to insert or remove a module, while power is applied to the system, without damage to any of the components in the system.

### **Ultrasonic Gas Leak Detectors Mode**

Allows the TA502A to be used with the Gassonic Observer-Series and Surveyor Ultrasonic Gas Leak Detectors.

**TS400 Mode**

Allows the TA502A to be used with the Model TS400 Toxic Gas Detector.

**TS420 Mode**

Allows the TA502A to be used with the Model TS420 Oxygen Deficiency Gas Detector.

## **1.3 Applications**

The General Monitors Model TA502A is a Generic Trip Amplifier designed for use with the Zero Two Series. Below is a partial list of applications:

- Chemical plants
- De-sulfurization facilities
- Drilling platforms and rigs
- Gas and oil production platforms
- Gas collection facilities
- Oil well logging operations
- Refineries
- Sewage disposal and treatment plants
- Sulfur recovery plants

## 2.0 Installation

This chapter discusses what to do when a Model TA502A is received, the terminal connections and designations, field-device location considerations, and what to be aware of when applying power.

### 2.1 Upon Receipt of Equipment


All equipment shipped by General Monitors is packaged in shock absorbing containers, which provide considerable protection against physical damage. The contents should be carefully removed and checked against the packing slip. If any damage has occurred or if there is any discrepancy in the order, notify General Monitors as soon as possible. All subsequent correspondence with General Monitors must specify the equipment part and serial numbers.

Each Model TA502A is inspected at the factory; however, a complete assessment is necessary upon initial installation and start-up to ensure system integrity.

### 2.2 Control Module Installation

A rack or panel mounted chassis will be required when installing any Zero Two Series Module. These chassis should be mounted in non-hazardous, weather-protected locations and should be subjected to minimal shock and vibrations. The rack and panel mounted chassis are available in 2-, 4-, 8-, and 16-channel sizes. Multiple 16-channel chassis may be connected to each other to form larger systems.

In installations where two or more module types are to be mixed in the same chassis, ensure that the individual coding strips match the channel application. The coding-strips are pre-configured at the factory and the male portion is already on each module. The female portion, if un-mounted, must be fastened into position on the mounting strip of the desired chassis channel to mate with its counterpart on the module (see Figure 11).

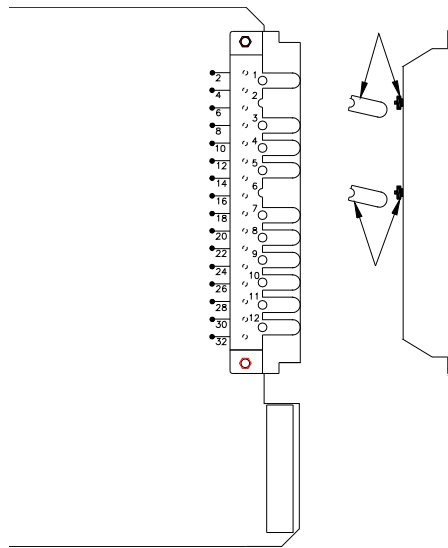


**Figure 11: Control Module Coding Strip**

Zero Two series modules require air circulation to avoid excessive heat build-up. If chassis are stacked vertically within an enclosure, forced air circulation may be required. The Trip Amplifier Modules are largely immune to electromagnetic interference (EMI). However, they should not be mounted in close proximity to radio transmitters or similar equipment.

## 2.3 Rear Terminal Connections

All wire connections to the Model TA502A are made to the terminal block located at the rear of the chassis. The terminal block accepts 16-AWG to 20-AWG, stranded or solid-core wire. 14-AWG wire may be used if it is properly stripped as shown in Figure 12.

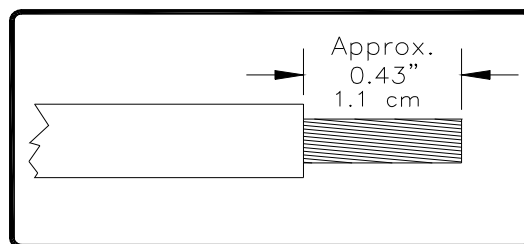

**Figure 12: Wire Strip Length**




**WARNING:** Contact with PC Board components should be avoided in order to prevent damage by static electricity.

**NOTE:** To connect wires to the terminal block on the Model TA502A, loosen the desired screw, insert the stripped end of the wire and tighten.

### 2.3.1 Rear Terminal Designations

For the rear terminal designations refer to Figure 13 below:

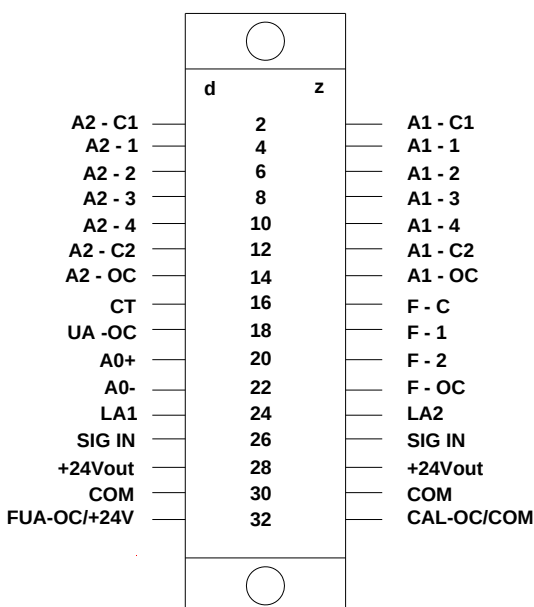

**Figure 13: Rear Terminal Designations**

The terminal designations for the **A2** alarm outputs are:

| Label | Term | Description          |
|-------|------|----------------------|
| A2-C1 | 2d   | Relay Common (1 & 2) |
| A2-1  | 4d   | Relay Contact        |
| A2-2  | 6d   | Relay Contact        |
| A2-3  | 8d   | Relay Contact        |
| A2-4  | 10d  | Relay Contact        |
| A2-C2 | 12d  | Relay Common (3 & 4) |
| A2-OC | 14d  | Open Collector (OC)  |
| LA2   | 24z  | OC Logic for A2 LED  |

**Table 1: A2 Alarm**

The A2 alarm outputs are DPDT (Double Pole Double Throw) relay contacts, one open collector output (A2-OC) that follows the logic of the relays and one open collector output (LA2) that follows the blinking pattern of the front panel LED. The A2-C1 designation is common for A2-1 & A2-2. The A2-C2 designation is common for A2-3 & A2-4. The normally open (NO) and normally closed (NC) contacts depend on a user selectable option (see Section 4.0).

The following table refers to the proper open and closed A2 alarm relay contacts while the unit is powered:

| User Selected Relay State | Normally Open                 | Normally Closed               |
|---------------------------|-------------------------------|-------------------------------|
| Normally Energized        | A2-C1 & A2-1,<br>A2-C2 & A2-4 | A2-C1 & A2-2,<br>A2-C2 & A2-3 |
| Normally De-Energized     | A2-C1 & A2-2,<br>A2-C2 & A2-3 | A2-C1 & A2-1,<br>A2-C2 & A2-4 |

**Table 2: A2 Alarm Relay Contacts**

The terminal designations for the **A1** Alarm outputs are:

| Label | Term | Description                |
|-------|------|----------------------------|
| A1-C1 | 2z   | Relay Common (1 & 2)       |
| A1-1  | 4z   | Relay Contact              |
| A1-2  | 6z   | Relay Contact              |
| A1-3  | 8z   | Relay Contact              |
| A1-4  | 10z  | Relay Contact              |
| A1-C2 | 12z  | Relay Common (3 & 4)       |
| A1-OC | 14z  | Open Collector (OC)        |
| LA1   | 24d  | OC Logic for <b>A1</b> LED |

**Table 3: A1 Alarm**

The **A1** Alarm outputs are DPDT relay contacts, one open collector output (A1-OC) that follows the logic of the relays and one open collector output (LA1) that follows the blinking pattern of the front panel LED. The A1-C1 designation is common for A1-1 & A1-2. The A1-C2 designation is common for A1-3 & A1-4. The normally open (**NO**) and normally closed (**NC**) contacts depend on a user selectable option (see Section 4.0).

The table below refers to the proper open and closed **A1** alarm relay contacts while the unit is on power:

| User Selected Relay State | Normally Open                 | Normally Closed               |
|---------------------------|-------------------------------|-------------------------------|
| Normally Energized        | A1-C1 & A1-1,<br>A1-C2 & A1-4 | A1-C1 & A1-2,<br>A1-C1 & A1-3 |
| Normally De-Energized     | A1-C1 & A1-2,<br>A1-C2 & A1-3 | A1-C1 & A1-1,<br>A1-C2 & A1-4 |

**Table 4: A1 Alarm Relay Contacts**

The terminal designations for the **FAULT** outputs are:

| Label  | Term | Description         |
|--------|------|---------------------|
| F-C    | 16z  | Relay Common        |
| F-1    | 18z  | Relay Contact (NO)  |
| F-2    | 20z  | Relay Contact (NC)  |
| F-OC   | 22z  | Open Collector (OC) |
| FUA-OC | 32d  | Open Collector (OC) |


**Table 5: Fault Alarm**

The Fault outputs are SPDT (Single Pole Double Throw) relay contacts, one open collector output (F-OC) that follows the logic of the relays and one open collector output (FUA-OC) dedicated to new fault indications. With the Backwards Compatibility option, the FUA-OC will not be present (pin 32d will be for +24VDC). The Fault outputs are always normally energized when power is applied to the module.

The contact ratings for the **A2** & **A1** alarm and **Fault** relays are 4A @ 250 VAC, 3A @ 30 VDC, Resistive, maximum.

### 2.3.1.1 Field Connections

Inductive loads (bells, buzzers, relays, etc.) on dry relay contacts must be clamped down. Unclamped inductive loads can generate voltage spikes in excess of 100 volts. Spikes of this magnitude may cause false alarms and contact damage. Figure 14 shows recommended relay protection circuits for AC and DC loads, respectively.

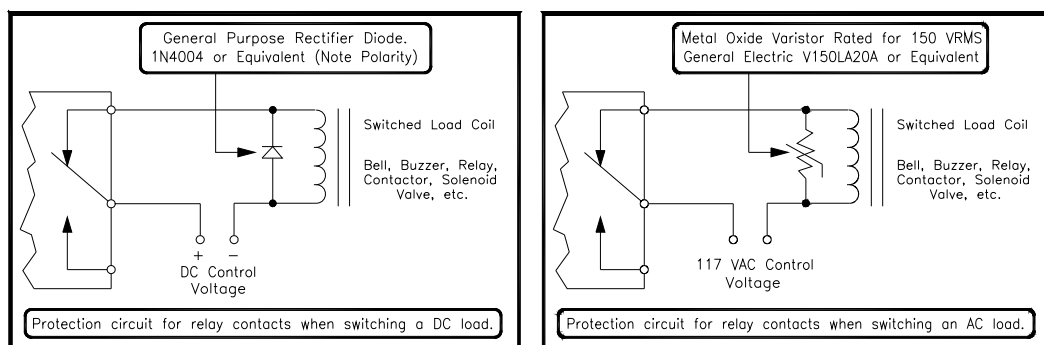

**Figure 14: Relay Protection for AC and DC Loads**

The terminal designation for the **Un-accept** output is:

| Label | Term | Description           |
|-------|------|-----------------------|
| UA    | 8d   | Open Collector Output |

**Table 6: Un-accept output**

The terminal designation for the Discrete **Calibration** Output is:

| Label  | Term | Description           |
|--------|------|-----------------------|
| CAL-OC | 32z  | Open Collector Output |

**Table 7: Calibration Output**

If the Backwards Compatible configuration is ordered, the CAL-OC will not be present (pin 32z will be for the COM).


The terminal designations for the **Field Transmitter** connections are:

| Term    | Description               |
|---------|---------------------------|
| 26 d, z | Signal IN (Analog Signal) |
| 30 d    | Signal IN Common *        |
| 28 d, z | VDC Out (+24Vdc)          |
| 30 z    | DC Common                 |

**Table 8: Field Transmitter Connections**

**NOTE:** Only one Field Transmitter may be connected to a Model TA502A. 4-conductor cable is recommended if cable length is greater than 400 ft.


Figure 15 illustrates the inter-connections for the TA502A & various types of Field Transmitters.

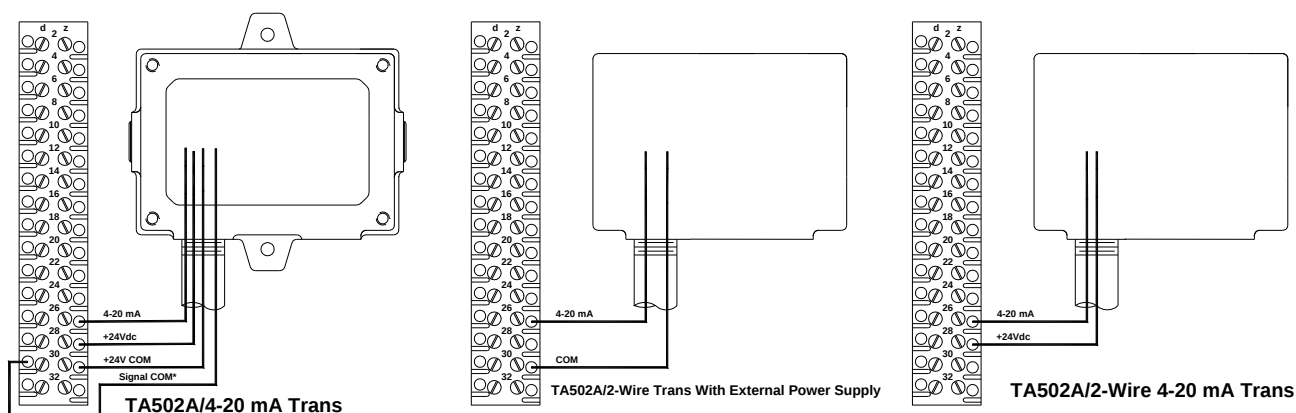

**Figure 15: TA502A Inter-Connections**

The electrical rating for all open collector outputs is 100 mA @ 35 VDC.

Figure 16 illustrates some typical open-collector external circuits.

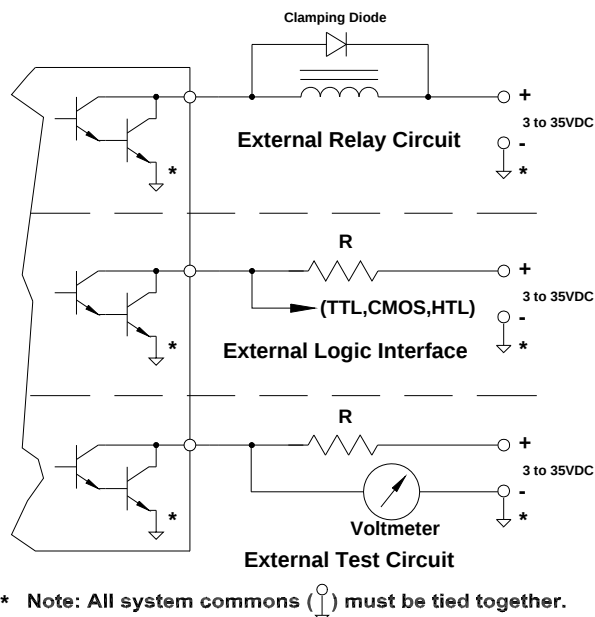


**Figure 16: External Test Circuits for Open Collectors**

The terminal designation for the Card Test Input is:

| Label | Term | Description       |
|-------|------|-------------------|
| CT    | 16d  | Switch Connection |

**Table 9: Card Test Input**

The Card Test Input is provided so that the user can access the Card Test feature remotely. One end of a normally open SPST (Single Pole Single Throw) switch is connected to this termination and the other end is connected to system common. To activate the feature, simply press and hold the switch for as long as the test time is to be run (minimum runtime is 3 or 10 seconds, software selectable). Figure 17 is a block diagram that shows the switch connections for the Card Test feature.

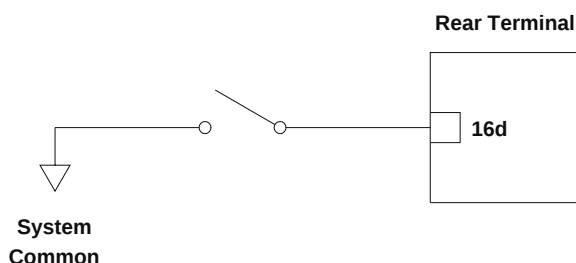

**Figure 17: Card Test Switch Wiring**


The terminal designations for the **Analog Output Signal** are:

| Label | Term | Description           |
|-------|------|-----------------------|
| AO+   | 20d  | Analog Signal (plus)  |
| AO-   | 22d  | Analog Signal (minus) |

**Table 10: Analog Signal Output**

**NOTE:** If the Analog Signal is not used, a jumper must be placed between 20d & 22d.

Figure 18 is a diagram of the Analog Signal connections.

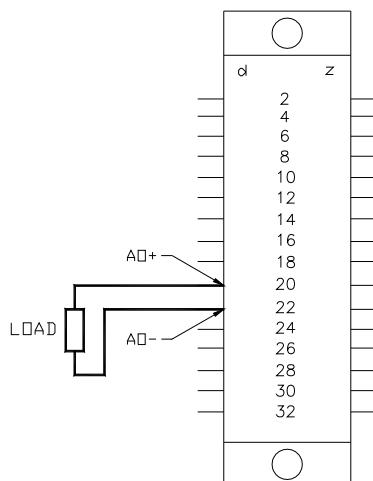

**Figure 18: Analog Signal Connections**

Figure 19 indicates where the power connections for the chassis are made.

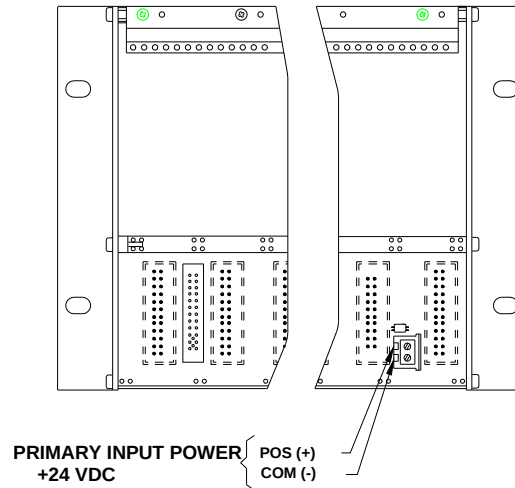


Figure 19: Power Connections Rear Chassis

## 2.4 Applying Power

Zero Two Series Modules do not have an ON/OFF power switch. Each module in the Zero Two Series operates from 24 VDC. Power requirements will vary according to the number and type of modules in the system, as well as the number and type of field devices.

**NOTE:** If the application of power does not turn the Model TA502A 'ON', check Fuse F1.

## 3.0 Operation

This chapter discusses what general maintenance to perform. It also describes the electrical inputs, outputs, accepting and resetting of alarms, calibration, fault conditions, and fault diagnostics.

### 3.1 General Maintenance

Once the Model TA502A has been installed, very little maintenance is required other than periodic checks to verify the integrity of the system.

- A functional test of the system should be performed at least once each year. This test should include full operation of stand-by systems or back up power for the prescribed period.
- The power, field device, and output wiring should be checked for tightness, verifying that all of the components and devices are connected correctly. Verify that the fuses (F1, F2, & F3) are operational.
- If the “**Password**” is disabled, periodic checks of the setup parameters should be performed.

### 3.2 Electrical Inputs

There are two electrical inputs to the Model TA502A. They are the Field Device and the Card Test input. Both of these input connections (field device and card test) are made to the rear terminal block (see Section 2.0 for more detailed installation information).

- The Field Transmitter input consists of a standard three lead connection, such as, (Black = Common, White = Signal, Red = +24 VDC). See Figure 19.
- The Card Test input consists of a single termination for remote testing of the Model TA502A's functions. For detailed information on the Card Test, refer to Figure 21.

### 3.3 Electrical Outputs

The electrical outputs on the Model TA502A consist of relay contacts, open collectors, and an analog current signal.

The following outputs have rear terminal relay contacts:

- A1 Alarm - DPDT relay contacts
- A2 Alarm - DPDT relay contacts
- Fault - SPDT relay contacts

All of the relay contacts on the Model TA502A have a maximum rating of:

- 4A @ 250 VAC, 3A @ 30 VDC resistive

The following outputs have rear terminal open collectors:

- A1 Alarm & LED Mimic
- A2 Alarm & LED Mimic
- Fault
- UA - Unaccepted Alarm
- FUA - Unaccepted Fault
- CAL - Calibration Mode

All of the open collector outputs on the Model TA502A have a maximum rating of:

- 100 mA @ 35 VDC

The Analog Output Signal is used for sending field transmitter readings and status information to remote devices. The TA502A has input impedance of 30 ohms. The rear termination labeled “**Signal IN**” is part of the overall analog loop. The analog signal is generated by the field device and passes through the Model TA502A. This signal is a 0 to 21.7 mA current-signal with 4 to 20 mA being proportional to 0 to 100% of full-scale. When the field device is placed in calibration mode, the TA502A will indicate **CA** if the current is 1 to 1.8 mA. (Standard Mode Only)

### 3.4 Accepting Alarm Conditions

Whenever a new alarm condition occurs, the front panel LED and open collector associated with that alarm (**LA1** or **LA2**) will flash. In addition, the associated alarm outputs and the unaccepted outputs (TA502A, UA open collector & FM002A, UA relay) will activate, unless they are already activated. The flashing front-panel alarm LED and rear terminal open collector indicate that a new alarm has been activated.

New alarms should be acknowledged or accepted. This is accomplished with the Master Accept Button located on the Facilities Module. Pressing the Master Accept Button de-activates the UA outputs and causes the associated front-panel alarm LED and rear terminal open collector to stop flashing and energize.

---

**NOTE:** Alarms that latch, must be Accepted before they can be reset (see Section 3.5).

---

There is a unique situation, which may occur with some frequency in certain applications. An alarm may occur and the operator will accept this alarm by pressing the Master Accept Button. If the alarm output is latching and the condition at the sensor returns to normal (safe), the alarm output will need to be reset. If the alarm output is accepted but not reset and that alarm set point is exceeded again, the front

panel LED, the associated mimic open collector, and the un-accept outputs will re-flash or re-activate. This gives the operator an indication of a new alarm condition that must be re-accepted.

The fault alarm can be accepted similarly with the **A1 & A2** alarms. The front panel fault LED will flash and the fault un-accept (FUA) open collector will energize when a fault is detected. If the operator presses the accept button, the FUA output will de-energize and the **Fault** LED will stop flashing but stay illuminated until the fault condition is corrected.

### 3.5 Resetting Latched Alarms

The user may select a “**latching**” or “**non-latching**” alarm output for **A1** and/or **A2**. If an alarm output activates and the condition that caused that activation is no longer present, a non-latching alarm output will reset automatically, whereas a latched alarm output will need to be reset manually. Resetting latched alarm outputs is accomplished with the Master Reset Button located on the Facilities Module (FM002A). Pressing the Master Reset Button will reset any latched conditions that are no longer valid. Latched alarm conditions cannot be reset until they have been accepted.

The Master Reset Button performs another function. If the operator presses and holds the Master Reset Button for two or more seconds, all of the LED's and LED segments in the digital display will illuminate for as long as the operator presses the button. This is called the LED Test. The LED test cannot be performed while the unit is in alarm, or fault, or during a Card Test.

### 3.6 CAL Open Collector

There is an open collector that will energize anytime the Field Device is placed in the Calibration Mode. This open collector output is referenced to the system's ground/common. Energizing this output merely provides a path to ground, as is the case with all energized open collector outputs. De-energized, this output will be in a high impedance state.

### 3.7 Card Test Feature

The Card Test Input is provided so that the user can access the Card Test feature remotely. One end of a normally open SPST switch is connected to this terminal and the other end is connected to system common (see Figure 19).

To activate the Card Test feature, simply press and hold the switch for at least three seconds. The front panel LED's and digital display will begin ramping-up at the start of the card test. They will continue to ramp-up for the software-selectable ramp-time specified by the operator (1, 3 or 10 seconds) during the Setup Mode (see Section 4.4). Each alarm level (**A1 & A2**) will trip when the alarm set point is exceeded. At the conclusion of the Card Test, the **A1 & A2** outputs will automatically reset (overriding any latching option). A Card Test cannot be initiated if the unit is in alarm, or fault, or during an LED Test.

**NOTE:** The relays (**A1** & **A2**) and open collector outputs are active and will trip during the Card Test, unless the user-specified option disabling these outputs is selected during the Setup Mode. This should be treated as a functional test of a Zero Two System.

### 3.8 Beam Block Feature

Some IR combustible gas detectors, such as the General Monitors Model IR5500 and IR400, output a 2 mA signal when the optical path is blocked. When the TA502A, in standard mode, receives a signal between 1.8 and 2.5 mA, the display indicates **bb** to acknowledge this condition.

### 3.9 Operating Modes

The TA502A has several different operating modes to allow proper operation with different General Monitors' field devices. The standard mode ("**std**") allows operation with devices such as the Model IR400 or IR5500, which provide the standard 0 – 20 mA output. The ultrasonic gas leak detectors are also supported. See Section 4.4.3 for details. The TS400 mode ("**400**") allows operation with the full-range of Model TS400 product. The TS420 mode ("**420**") allows operation with the Model TS420 Oxygen Deficiency Detector.

During startup mode, both the TS400 and TS420 will output 3.6mA. The TA502A will display "SU" at this time. During calibration mode both models will output 3.75mA. The TA502A will display "CA" at this time. If a fault occurs at the detector, the TA502A will display "F4". See Section 3.10 for a description of Fault diagnostics.

For TS420 operating modes, alarms occur when the O<sub>2</sub> concentration falls **below** the alarm set points. Tables below summarize the operating modes.

| Input from field device | Standard "std"        | TS400 "400"           | TS420 "420"           |
|-------------------------|-----------------------|-----------------------|-----------------------|
| 0 mA                    | F4                    | F4                    | F4                    |
| 1.5 mA                  | CA                    | F4                    | F4                    |
| 3.5 mA                  | -3                    | F4                    | F4                    |
| 3.6 mA                  | -2                    | SU                    | SU                    |
| 3.75 mA                 | -1                    | CA                    | CA                    |
| 4 mA                    | 0                     | 0                     | 0                     |
| 8 mA                    | 25% FS                | 25% FS                | 25% FS                |
| 12 mA                   | 50% FS                | 50% FS                | 50% FS                |
| 16 mA                   | 75% FS                | 75% FS                | 75% FS                |
| 20 mA                   | 100% FS               | 100% FS               | 100% FS               |
| 22 mA                   | 100% FS               | 100% FS               | 100% FS               |
| Alarms                  | Input above set point | Input above set point | Input below set point |

Table 11: TA502A Operating Modes

| Input from field device | Gassonic Observer     | Gassonic Surveyor     | Observer-I Classic mode | Observer-I EAO1 mode |
|-------------------------|-----------------------|-----------------------|-------------------------|----------------------|
| 0mA                     | F4                    | F4                    | F4                      | F4                   |
| 3mA                     | Inhibit               | Inhibit               | Inhibit                 | Inhibit              |
| 4mA                     | < 58 dB               | < 44 dB               | < 40 dB                 | < 40 dB              |
| 8mA                     | 69 dB                 | 59 dB                 | 60 dB                   | 80 dB                |
| 12mA                    | 81 dB                 | 74 dB                 | 80 dB                   | 120 dB               |
| 16mA                    | 92 dB                 | 89 dB                 | 100 dB                  | Low alarm            |
| 20mA                    | 104 dB                | 104 dB                | 120 dB                  | High alarm           |
| 22mA                    | > 104 dB              | > 104 dB              | > 120 dB                | High alarm           |
| Alarms                  | Input above set point | Input above set point |                         |                      |

**Table 12: TA502A Ultrasonic Gas leak Detectors Operating Modes**

### 3.10 Fault Diagnostics

In addition to the Fault LED on the front panel, the Model TA502A provides a fault code on the digital display whenever a fault condition occurs. If the unit is not **ON**, check fuse, F1.

The Fault Codes that can appear on the digital display are summarized below:

#### **F1, F2, F5 & F9**

Are not used at this time. These codes have been reserved for future use.

#### **F3: Program checksum error**

This fault occurs during initial power-up of the unit. If this fault occurs, remove and reapply power to the unit. If the fault continues to occur, replace the unit and consult your GM Representative or the factory.

#### **F4: Field device error**

Make sure the wires running to and from the Trip Amplifier and the Field Device are connected properly. Check for opens and shorts across the field wiring. Make sure the analog signal is returned to the field device or common (jumper AO+ & AO- if unused). Possibly a 0 mA Calibration Current from the Field Transmitter. Check fuses F2 & F3.

For Observer series device, F4 can be removed by pressing ACCEPT on the FM002A module if the fault is due to Acoustic Test Fault.

#### **F6: Low supply voltage**

Make sure the supply voltage level at the chassis is 24VDC.

#### **F7: EEPROM verification failure**

This fault will occur if the microprocessor cannot store calibration or setup information in the EEPROM. If this fault occurs, consult the factory or your GM Representative.

**F8: Failed to complete setup**

This fault may occur during or immediately after the Setup Mode. If this fault occurs, consult the factory or your GM Representative.

In each of the fault cases listed, when the fault occurs the FUA output is activated. Pressing the ACCEPT button on the Facilities Module (FM002A) will acknowledge the fault, de-activate the FUA output and the fault LED will stop flashing and remain ON until the fault is corrected.

**3.11 Communications**

By using a General Monitors Model CC02A Communications Module as a communications bridge, the Model TA502A can communicate to a PLC or DCS system using a RS-485 Modbus interface. This allows remote access to data, such as: gas concentration at the remote gas detector, fault and alarm status, and operating mode. It also simplifies setups and modification of user selectable options, such as, alarm settings and card test settings. Please see the Model CC02A Instruction Manual for the details of this interface.

## 4.0 User Interfaces

This chapter discusses the user interfaces, the Setup Mode, the Setup Check Mode, and the Inhibit Mode.

### 4.1 Types of User Interfaces

User interfaces are provided so that the operator may interpret and direct the Model TA502A in the performance of its various functions. User interfaces (Figure 20) consist of a digital display, status indicators, and a Mode/Select switch.

The digital display provides the user with the gas concentration at the sensor site, fault diagnostic codes, and setup parameters. The status indicators provide the user with an indication of the current mode of operation (alarm, fault, ready, calibration, and setup). The Mode/Select switch provides the user access to the Setup Check, Setup, and Inhibit modes.

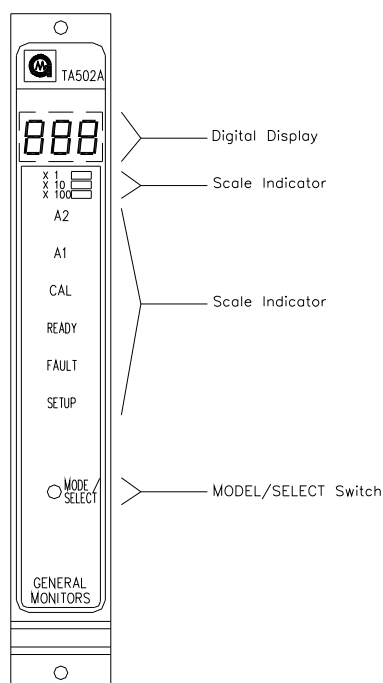


Figure 20: Front Panel Display

### 4.2 Setup Check & Setup Modes

The Setup Check Mode allows the operator to view the selected options for the module without allowing any changes to be made. Once this mode has been entered, the module will automatically display each of the selected options for a short period of time. The Setup Mode allows the operator to change the operating parameters by making choices for selected options.

The Setup Check and Setup Modes display identical information with the following exceptions:

- The Setup Check Mode allows the user to view the operating parameters of the Model TA502A, whereas the Setup Mode allows the user to change these parameters.
- Entering the optional Password is only available in the Setup Mode.
- The Inhibit Mode may only be entered from the Setup Mode. If the Inhibit Mode is entered, the unit will remain in the Inhibit Mode until the Mode/Select switch is pressed.
- After the Setup Mode is complete, the TA502A will enter the Setup Check Mode to view the selected parameters.

---

**NOTE:** The Setup and Setup Check Modes cannot be entered if the unit is in alarm or fault. If the field device is in calibration, calibration check, or test gas mode, the Setup and Setup Check Mode cannot be entered.

---

During the Setup Mode, the operator will be allowed to select options. The selection procedure is the same for most of the options. Pressing the Mode/Select switch toggles the available choices. When the display has indicated a choice for five consecutive seconds without the operator pressing the Mode Select switch, the Setup routine will accept that selection and move on to the next option available. These modes will activate the **SETUP** LED, the **CAL-OC** output, and the **CALBUSS**.

---

**NOTE:** Before entering the Setup Mode to make changes, the user should become familiar with the block diagram on the following page. Filling out the form will aid the user during the selection process in the Setup Mode.

---

Section 4.3 is provided to aid the operator in selecting during the Setup Mode. It is recommended that the operator fill-in the selections in the proper blanks and then use this page as a reference while programming the Model TA502A. The option entry indicates the order of options in the Setup Mode. To the right of the option entry is a description of the choices that are available for that option. More information about making each selection is provided in the pages that follow.

### 4.3 Setup Mode Selection Table

| OPTION                    | DESCRIPTION                                                                                                                                          | ENTER SELECTION           |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|
| <b>Password</b>           | Enter the Password, if the Password is enabled                                                                                                       | _____                     |
| <b>Inhibit Mode</b>       | Enter the Inhibit Mode, if Desired                                                                                                                   | _____                     |
| <b>Operating Mode</b>     | See section <b>4.4.3</b>                                                                                                                             | _____                     |
| <b>Set Display Range</b>  | Display will indicate “ <b>Sr</b> ” then select the Sensor Range 0-1.0, 0-2.0, 0-5.0, 0-10.0... Up to 0-100 (In increments of 5 units, 0-200, 0-500. | _____                     |
| <b>Display Multiplier</b> | Display will indicate “ <b>dis</b> ” then select the Display Multiplier X 1, x 10, or x 100.                                                         | _____                     |
| <b>A2 Alarm</b>           | Set the Energized (En) / De-Energized (dE) Option                                                                                                    | _____                     |
|                           | Set the Latching (LA) / Non-Latching (nL) Option                                                                                                     | _____                     |
|                           | Set the High alarm set point                                                                                                                         | _____                     |
| <b>A1 Alarm</b>           | Set the Energized (En) / De-Energized (dE) Option                                                                                                    | _____                     |
|                           | Set the Latching (LA) / Non-Latching (nL) Option                                                                                                     | _____                     |
|                           | Set the Low alarm set point                                                                                                                          | _____                     |
| <b>Fault/Inhibit</b>      | Set the fault to Activate (Ac) or not (nA) during Inhibit Mode                                                                                       | _____                     |
| <b>Card Test</b>          | The Display will indicate “ <b>ct</b> ” for 5 seconds                                                                                                | _____                     |
| <b>Password Options</b>   | Set the Password to be Disabled (Pd) or Enabled (PE)                                                                                                 | _____                     |
|                           | If the Password option to be changed from Disabled to Enabled:                                                                                       | _____                     |
|                           | Set the password digits                                                                                                                              | Left _____<br>Right _____ |
| <b>Setup Check Mode</b>   | After all of the options have been selected, the TA502A will enter the Setup Check Mode.                                                             |                           |

**Table 13: Setup Mode Selection Table**

**NOTE:** The Password, the A1 & A2 Alarm set points, the sensor range, and the display multiplier options offer the operator more than two choices. While these options are being selected, pressing the Mode/Select Switch will sequence the display to the next available choice for that option.

## 4.4 Entering the Setup Check Mode

To Enter the Setup Check Mode or the Setup Mode, press and hold the Mode/Select switch until the **SETUP** LED begins flashing (about ten seconds). When the **SETUP** LED is flashing, release the Mode/Select switch to enter the Setup Check Mode (Figure 25). Continuing to press and hold the Mode/Select switch until the **SETUP** LED stops flashing (about fifteen seconds) will allow the operator to enter the Setup Mode. When the **SETUP** LED stops flashing (remains lit), release the Mode/Select switch and the unit will enter the Setup Mode (Figure 21).

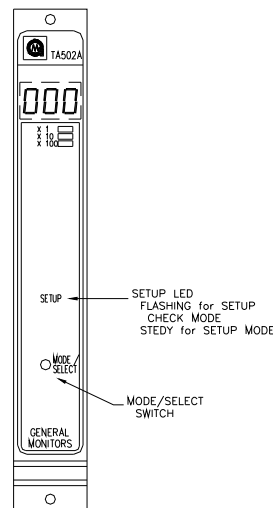


Figure 21: Entering the Setup & Setup Check Modes

### 4.4.1 Entering the Password

This option applies to the Setup Mode only: If the password option is enabled, the right digit of the display will be blank and a “-” will appear in the left digit on the display (Figure 22).

Press the Mode/Select switch until the correct number is displayed, then wait until the TA502A accepts the first digit (approx. 5 seconds). The left digit of the display will now be blank and a “-” will appear in the right digit on the display (Figure 22). Press the Mode/Select switch until the correct number is displayed, then wait for password acceptance. If the password is correct the user will proceed with the inhibit option.

If the password is incorrect the user will not be able to proceed and the unit will return to the normal operating mode. Once in the operating mode the user may attempt to re-enter the Setup Mode. The factory default password is **00**.

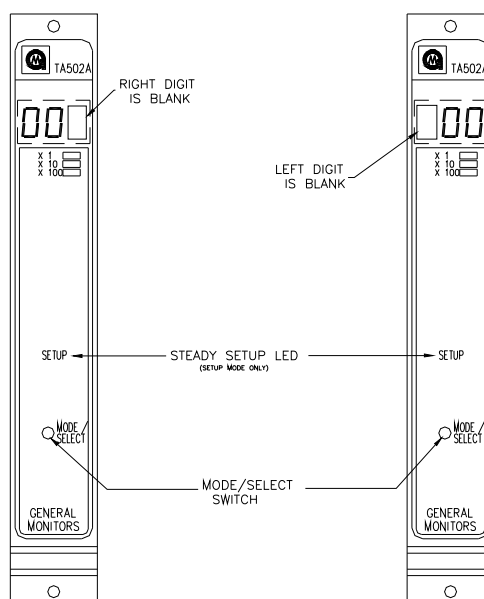


Figure 22: Entering the Password

#### 4.4.2 Entering the Inhibit Mode

This option applies to the Setup Mode only: If the password option is disabled, or after the correct password has been entered, the display will indicate **In** for five seconds (Figure 23). Pressing the Mode/Select switch while **In** is displayed will cause the unit to enter the Inhibit mode by inhibiting the alarm outputs. After the Model TA502A has entered the Inhibit Mode, pressing the Mode/Select switch causes the unit to return to normal operation (see Section 4.4). If it is desired to enter the Setup Mode, do not press the Mode/Select switch for the five seconds that **In** is displayed.

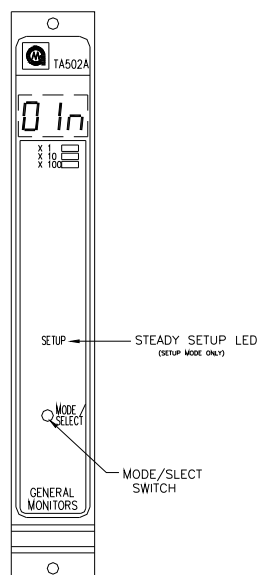


Figure 23: Entering the Inhibit Mode

#### 4.4.3 Operating mode

When the operating mode is selected, the display will indicate the current selection (“Std”, “400”, “420”, “720”, “Obs”, “Sur”, “Obc” or “Ob1”). Press the Mode/Select switch until the desired operating mode is displayed. The factory default is “Std” Mode.

**Std:** standard 4 – 20 mA field devices (IR400, IR5500, etc).

**400:** TS400 device.

**420:** TS420 device.

**720:** S720 device.

**Obs:** Observer and observer-H devices.

**Sur:** Gassonic Surveyor device.

**Obc:** Observer-I device in the classic mode.

**Ob1:** Observer-I device in the EAO1 mode.

#### 4.4.4 Sensor range

Press the Mode/Select switch until the desired sensor range is displayed. Some of the devices have a fixed range which cannot be changed.


---

**NOTE:** If the Sensor Range is changed, the alarm set points (**A1** & **A2**) will be reset to the default values.

---

#### 4.4.5 Display Multiplier Option

Next, the user will select the Display Multiplier (Figure 24). The display will indicate **dI**, and the x **1**, x **10** or x **100** LED will be lit. Press the Mode/Select Switch until the desired LED is illuminated. The factory default for this selection is x **1**.

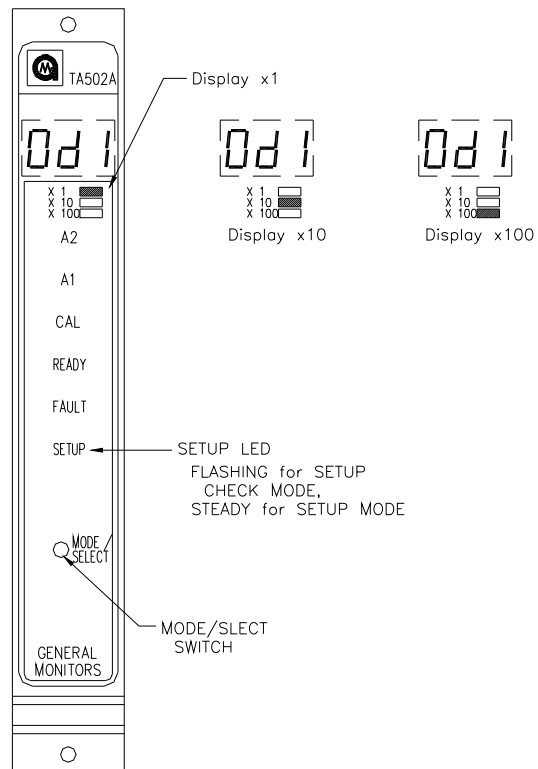

**Figure 24: Display Multiplier Option**

#### 4.4.6 A2 Alarm Options

After the Sensor Range option has been selected, the **A2** LED on the front panel will be flashing while the Energized/De-Energized option is displayed (Figure 25). The display will indicate the current selection, (**En**, or **dE**). **De-Energized** is the factory default for this selection.

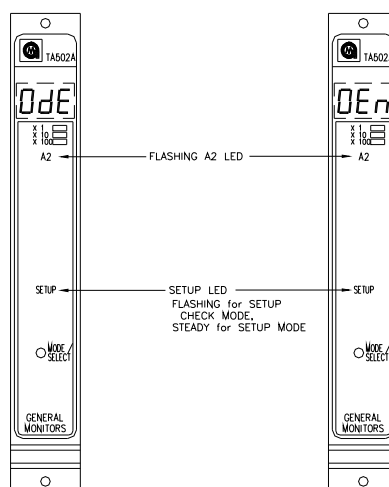


Figure 25: A2 Energized/De-Energized Alarm Option

The **A2** LED on the front panel will be flashing while the Latching/Non-latching option is displayed (Figure 26). The display will indicate the current selection, (**nL**, or **LA**). **Latching** is the factory default for this selection.

The last **A2** alarm option to appear on the display will be the alarm set point (trip level). The **A2** set point cannot be set lower than the current **A1** set point. To accomplish this, the operator must set the **A1** set point lower than the desired **A2** set point, then re-enter the Setup Mode, and select the desired **A2** set point.

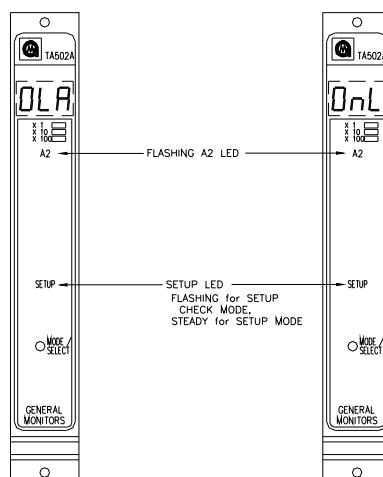


Figure 26: A2 Latching/Non-Latching Alarm Option

If the set point is reached or exceeded, the **A2** alarm outputs will activate. The display will indicate the current **A2** alarm set point (Figure 27). Press the Mode/Select switch repeatedly until the desired **A2** alarm set point appears on the display. **60** is the factory default for this selection.

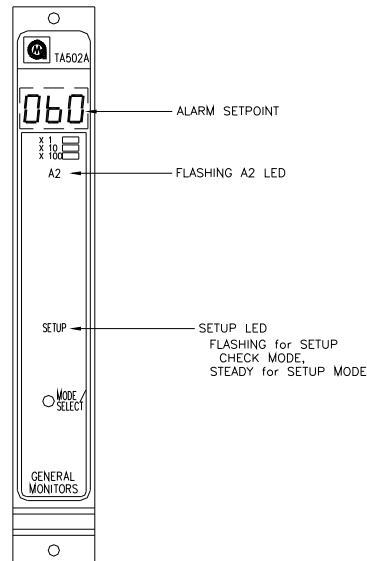


Figure 27: A2 Alarm Set Point Option


For Observer-I in the EAO1 mode the alarm set points are fixed by the device and cannot be changed. In this case the display will show **NA**.

For the acoustic gas leak detectors Observer, Observer-H, Surveyor, and Observer-I in the classic mode there is one additional option. That is the **A2** alarm relay delay. The display will indicate the **A2** relay delay by the letters **dL** followed by the current delay time in seconds. The factory default value is 0 seconds. Pressing the Mode/Select switch will increase the delay time by 10 seconds. The maximum value allowed is 600 seconds and pressing the switch again will set the delay to 0 seconds.

#### 4.4.7 A1 Alarm Options


Next, the **A1** LED on the front panel will be flashing while the Energized/De-Energized option is displayed (Figure 28).

The display will indicate the current selection, (**En** or **dE**). **De-Energized** is the factory default for this selection.

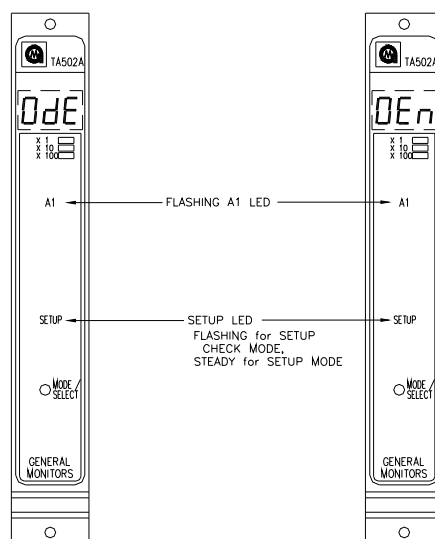


**Figure 28: A1 Energized/De-Energized Alarm Option**

The **A1** LED on the front panel will be flashing while the latching/non-latching option is displayed (Figure 29). The display will indicate the current selection, (**nL** or **LA**). **Non-Latching** is the factory default for this selection.

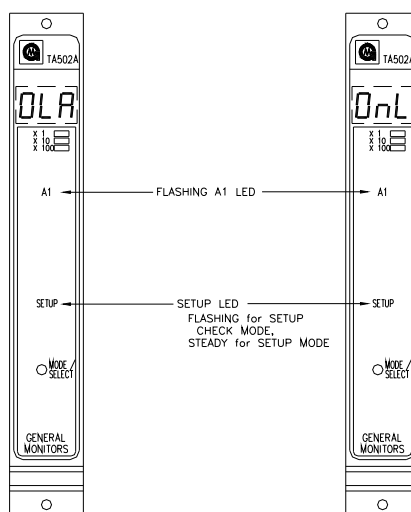

**Figure 29: A1 Latching/Non-Latching Alarm Option**

The last **A1** alarm option to appear on the display will be the alarm set point (trip level). The **A1** set point cannot be set higher than the current **A2** set point. If this level is reached or exceeded the **A1** alarm outputs will activate. The display will indicate the current **A1** alarm set point (Figure 30). Press the Mode/Select switch repeatedly, until the desired **A1** alarm set point appears on the display. The factory default for this selection is **30**.

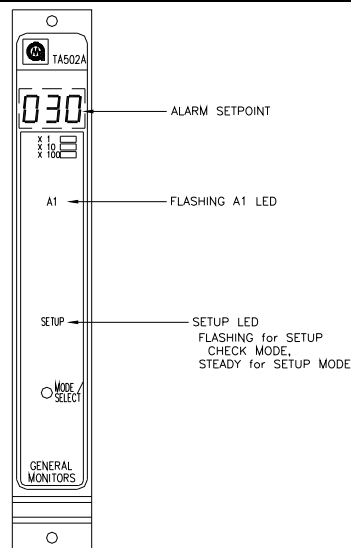

**Figure 30: A1 Alarm Set Point Option**

For Observer-I in the EAO1 mode the alarm set points are fixed by the device and cannot be changed. In this case the display will show **NA**.

For the acoustic gas leak detectors Observer, Observer-H, Surveyor, and Observer-I in the classic mode there is one additional option. That is the **A1** alarm relay delay. The display will indicate the **A1** relay delay by the letters **dL** followed by the current delay time in seconds. The factory default value is 0 seconds. Pressing the Mode/Select switch will increase the delay time by 10 seconds. **A1** alarm relay delay cannot be longer than that of **A2**.

#### 4.4.8 Fault / Inhibit Option

After the **A1** alarm options have been selected, the user will select the Fault/Inhibit option. The FAULT LED on the front panel will be flashing while the display indicates **Ac** or **nA** (Figure 31). An **Ac** selection specifies that the Model TA502A will activate the Fault circuit while the unit is in the Inhibit Mode. A **nA** selection specifies that the Model TA502A will not activate its Fault circuit when the unit is placed in the Inhibit Mode (see Section 4.3). A **nA** selection will not disable the Fault circuit; therefore, if a Fault occurs during the Inhibit Mode, the unit will activate the Fault circuit. **Not Active** is the factory default for this selection.

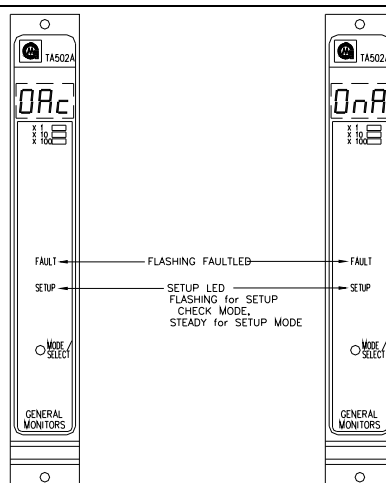


Figure 31: Fault / Inhibit Option

#### 4.4.9 Card Test Options

After the Fault/Inhibit option has been selected, the user will select the ramp time (**1**, **3** or **10** seconds) and whether or not the alarm outputs will activate during a Card Test. The display will indicate **ct** for about five seconds (Figure 32).

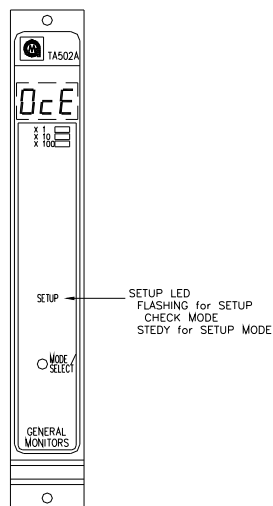


Figure 32: Entering Card Test Options

Following **ct**, the ramp-up time (**1**, **3** or **10**) during the card test (Figure 33) will be displayed. **3** as the factory default for this selection.

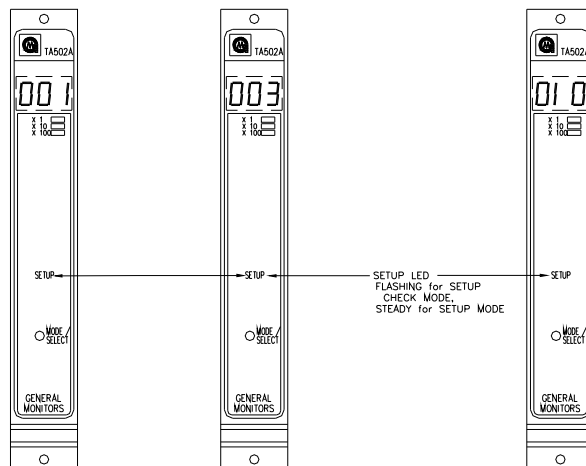


Figure 33: Card Test Ramp Time, 1 / 3 / 10

Next, the display will indicate the alarm output option during a Card Test as either **Ac**, active or **nA**, not active (Figure 34). **Not Active** is the factory default for this selection.

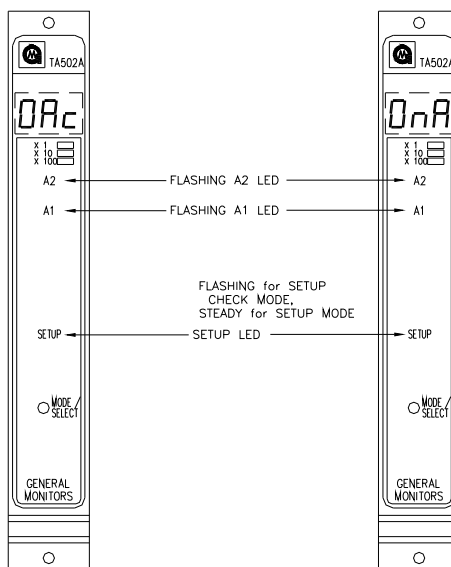


Figure 34: Alarm Output Option during a Card Test, AC / nA

**NOTE:** Selecting the **nA** option for the Card Test will not inhibit the Fault or **A1/A2** alarm circuits in case of a malfunction or gas condition during normal operation.

#### 4.4.10 Password Option

Once the Card Test options have been selected, the user will either enable or disable the password option (Figure 35). The display will indicate either **PE** for enabled or **Pd** for disabled. **Password Disabled** is the factory default for this selection.

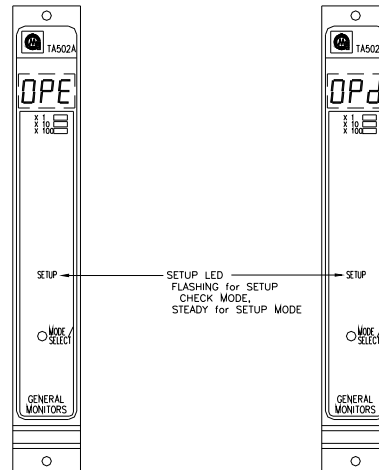


Figure 35 Password Enabled / Disabled Option

##### 4.4.10.1 Entering a New Password

This option applies to the Setup Mode only. If the Password is disabled, the unit will automatically enter the Setup Check mode. If the Password is enabled, the user will be able to enter a new password. The unit will display the left digit of the Password on the display. The right digit will be blank until the left digit has been selected. Once the left digit is selected, wait for five seconds. Next, the right digit will be displayed and the left digit will be blank until the right digit has been selected. Once the right digit has been selected, wait for five seconds (Figure 36).

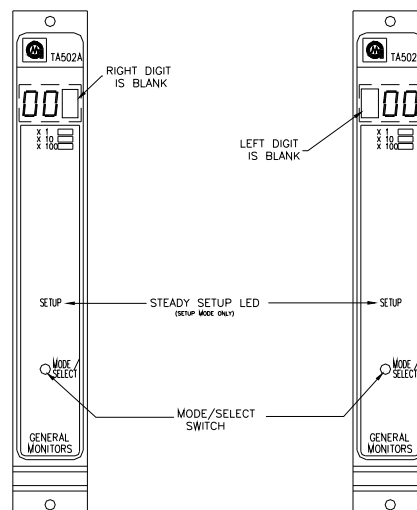


Figure 36: Entering a New Password

When the Setup Mode is complete, the Model TA502A will automatically enter the Setup Check Mode. This allows the operator to view the newly selected options. The unit will return to normal operation after completing the Setup Mode and the Setup Check Mode.

## 4.5 Inhibit Mode Description

Whenever the Inhibit Mode is entered (see Section 5.2), the **A1** and **A2** rear terminal alarm outputs are inhibited. The front panel **A1** and **A2** LED's will still function normally.

If the password option is disabled, or after the correct password has been entered, the display will indicate **In** for five seconds (Figure 27). Pressing the Mode/Select switch while **In** is displayed will cause the unit to enter the Inhibit mode by inhibiting the alarm outputs. After the Model TA502A has entered the Inhibit mode, pressing the Mode/Select switch causes the unit to return to normal operation. If it is desired to enter the Setup Mode, do not press the Mode/Select switch for the five seconds that **In** is displayed.

---

**NOTE:** Any latched alarms must be reset before exiting the Inhibit Mode.

---

There is a user selectable option that will place the unit in Fault every time the Inhibit Mode is entered. If the operator does not select this option, the Fault circuits will function normally during the Inhibit Mode (i.e. they will not be inhibited).

While the unit is in the Inhibit mode, the display will indicate **In** for 5 seconds, then the field device input level will be displayed for 5 seconds. This sequence will repeat for as long as the unit is in the Inhibit mode.

The Inhibit Mode is provided so that the operation of the Model TA502A can be verified without tripping external devices that are connected to the **A1** and **A2** outputs. This type of verification usually occurs during "Initial Start-Up" and/or "Commissioning".

---

**NOTE:** The Calibration Mode is accessed at the field device. Refer to the Instruction Manual of the specific field device for entering and using the Calibration Mode.

---

## 5.0 Appendix

### 5.1 Engineering & Technical Drawings

#### 5.1.1 Reference Drawing #11271, Outline & Terminal Connections

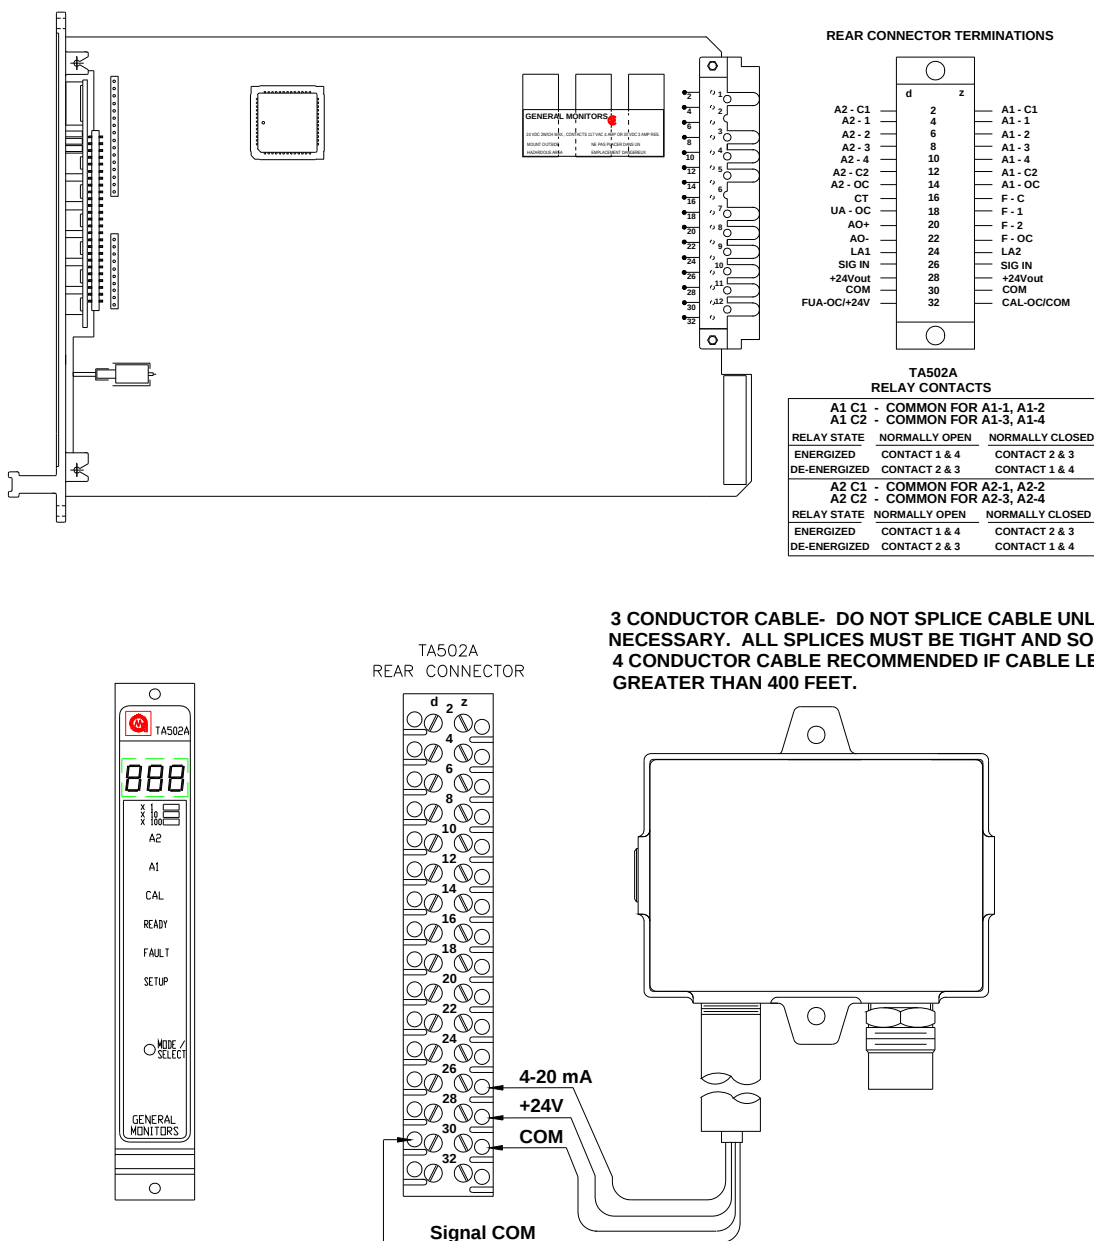


Figure 37: Outline & Terminal Connections

### 5.1.2 Reference Drawing #11270-1, Final Assembly

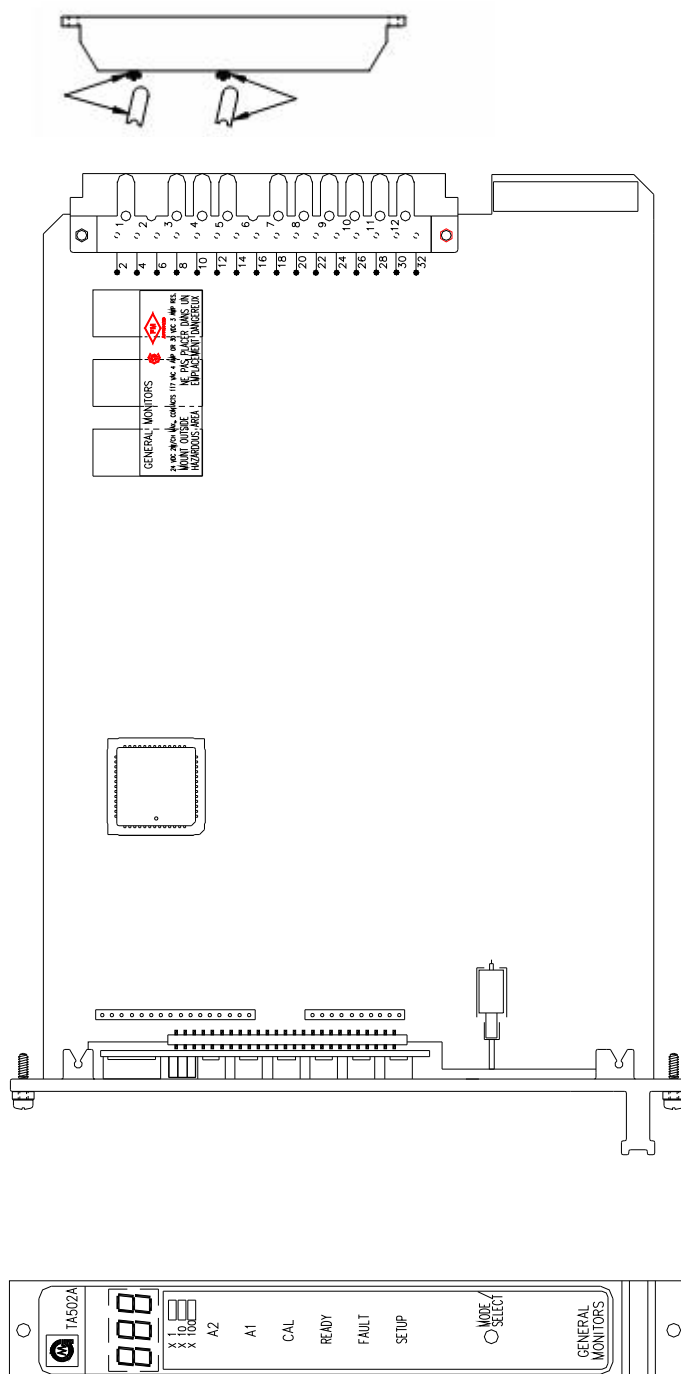


Figure 38: Final Assembly Drawing

## 5.2 Specifications

### 5.2.1 System Specifications

|                      |                                                                                                                                                                                                                                                                  |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Application:         | Generic 4-20 mA input module                                                                                                                                                                                                                                     |
| Device Type:         | Any 4-20 mA field-transmitter.                                                                                                                                                                                                                                   |
| Sensor Ranges:       | Allows many different sensor outputs to be displayed properly. Ranges include 0-1, 0-2, 0-5 and 0-10. Up to 0-100, 0-200, 0-500 (in increments of 5 units). Used in conjunction with the Display Multiplier Option to provide a wide variety of display options. |
| Display Multipliers: | Three multiplier LED's on front panel x1, x10 or x100.                                                                                                                                                                                                           |
| Approvals:           | CSA, CE, GOST, SIL                                                                                                                                                                                                                                               |
| Warranty:            | Two years.                                                                                                                                                                                                                                                       |
| Performance          |                                                                                                                                                                                                                                                                  |
| Accuracy:            | ±1% of input signal.                                                                                                                                                                                                                                             |

### 5.2.2 Mechanical Specifications

|         |                     |
|---------|---------------------|
| Weight: | 11.2 oz (318 grams) |
| Length: | 9.9 inches (251 mm) |
| Height: | 6.8 inches (173 mm) |
| Width:  | 1.0 inch (25 mm)    |

### 5.2.3 Electrical Specifications

|                        |                                                                                                                                                                                         |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Input Power            |                                                                                                                                                                                         |
| Requirement:           | 20 to 36Vdc @ 300 mA max. (24Vdc, 7W nominal).                                                                                                                                          |
| Electrical             | The Model TA502A is designed for use in non-hazardous environments.                                                                                                                     |
| Classification:        |                                                                                                                                                                                         |
| Relay Contact Rating:  | 4A @ 250Vac, 3A @ 30Vdc resistive max. DPDT for A1 & A2, SPDT for Fault. 4A @ 30V rms 42.4V PK                                                                                          |
| Open Collector Rating: | 100 mA @ 35 VDC for A1, A2, Fault, UA, FUA, CAL, LA1 & LA2.                                                                                                                             |
| Cable Parameters:      | 3-wire shielded recommended (4 wire shielded when cable length >400 ft). Maximum cable lengths allowable between module and the Field Device with 24Vdc nominal at the sensor/detector: |

| AWG | FEET | METERS |
|-----|------|--------|
| 14  | 4500 | 1372   |
| 16  | 2250 | 685    |
| 18  | 1600 | 488    |
| 20  | 1100 | 335    |
| 22  | 750  | 228    |

**Table 14: Cable Lengths**

|                |                                                                          |
|----------------|--------------------------------------------------------------------------|
| Analog Output: | 30 Ohm input impedance.                                                  |
| Analog Signal: | Standard Mode<br>Acoustic Leak Detector Mode<br>TS400 Mode<br>TS420 Mode |

## **5.2.4 Environmental Specifications**

Operating Temperature Range: 0°F to +150°F (-18°C to +66°C)  
Storage Temperature Range: -40°F to +150°F (-40°C to +66°C)  
Operating Humidity Range: 5 % to 100 % Relative Humidity  
Non-condensing

## **5.2.5 Engineering Specifications**

### **5.2.5.1 Zero Two System**

Each system shall utilize modules capable of monitoring gas sensing elements or a 0 to 21.7 mA analog signal from field detection transmitters. The system chassis shall be available in 2, 4, 8 or 16 channels. Each chassis shall contain a bus for the following independent signals: A1 Alarm, A2 Alarm, Fault, Master Reset, Master Accept, Unaccept, CAL, +24Vdc, and System Common. Module signals shall be capable of being bussed from one chassis to another, so that up to 100 modules can comprise a single system. The detection modules shall be electrically and physically compatible and capable of being used in the same chassis to form combined fire and gas detection systems. The system shall consist of Zero Two Series component modules as manufactured by General Monitors, Lake Forest, California, U.S.A. or General Monitors, Galway, Ireland.

### **5.2.5.2 TA502A Trip Amplifier Module**

The trip amplifier module has an interface panel, a mode/select switch, and the following indications:

- 2 discrete alarm threshold level indicators
- Fault or malfunction indicator
- Ready indicator
- Calibration mode indicator
- Setup mode indicator and
- 3-digit LED display

All alarm parameters and user options are software selectable. A power on self-test (POST) automatically is performed each time the trip amplifier module is powered-up. A functional card test and a front panel LED test are switch capable without interrupting normal on-line services.

The trip amplifier module is capable of insertion and removal during power 'on' conditions without damage to any component module in the system. The trip amplifier module generates display codes associated with fault conditions whenever a fault or malfunction occurs. A mode/select switch provides the operator with front panel access to a setup check mode, a setup mode, and an inhibit mode. The trip amplifier module has a password protected setup routine capable of having the password disabled.

### 5.3 Ordering Information

The standard configuration for the Model TA502A is:

**A B C D E F G**  
☐ ☐ ☐ ☐ ☐ ☐ ☐

**TA502A - 2 - 1 - 0 7 - 1 - 1 - 1 - 1**

|                                           |        |                                                     |  |
|-------------------------------------------|--------|-----------------------------------------------------|--|
| <b>TRIP AMPLIFIER:</b>                    |        |                                                     |  |
| <input checked="" type="checkbox"/> (Std) | TA502A | TRIP AMPLIFIER                                      |  |
| <b>A. RELAYS/OUTPUT:</b>                  |        |                                                     |  |
| 1- <input type="checkbox"/>               |        | NO RELAYS                                           |  |
| 2- <input type="checkbox"/> (Std)         |        | RELAYS                                              |  |
| <b>B. RELAY-STATE-NC:</b>                 |        |                                                     |  |
| 1- <input type="checkbox"/> (Std)         |        | LATCH AL (A2)/NON-LATCH WARN (A1), DE-ENERGIZED     |  |
| 2- <input type="checkbox"/>               |        | LATCH AL (A2)/NON-LATCH WARN (A1), ENERGIZED        |  |
| 3- <input type="checkbox"/>               |        | LATCH AL (A2)/LATCH WARN (A1), DE-ENERGIZED         |  |
| 4- <input type="checkbox"/>               |        | LATCH AL (A2)/LATCH WARN (A1), ENERGIZED            |  |
| 5- <input type="checkbox"/>               |        | NON-LATCH AL (A2)/NON-LATCH WARN (A1), DE-ENERGIZED |  |
| 6- <input type="checkbox"/>               |        | NON-LATCH AL (A2)/NON-LATCH WARN (A1), ENERGIZED    |  |
| 7- <input type="checkbox"/>               |        | NON-LATCH AL (A2)/LATCH WARN (A1), DE-ENERGIZED     |  |
| 8- <input type="checkbox"/>               |        | NON-LATCH AL(A2)/LATCH WARN (A1), ENERGIZED         |  |
| <b>C. MODE/DISPLAY-RANGE:</b>             |        |                                                     |  |
| 01- <input type="checkbox"/>              |        | 0-2 / STANDARD MODE                                 |  |
| 02- <input type="checkbox"/>              |        | 0-5 / STANDARD MODE                                 |  |
| 03- <input type="checkbox"/>              |        | 0-10 / STANDARD MODE                                |  |
| 04- <input type="checkbox"/>              |        | 0-20 / STANDARD MODE                                |  |
| 05- <input type="checkbox"/>              |        | 0-25 / STANDARD MODE                                |  |
| 06- <input type="checkbox"/>              |        | 0-50 / STANDARD MODE                                |  |
| 07- <input type="checkbox"/> (Std)        |        | 0-100 / STANDARD MODE                               |  |
| 08- <input type="checkbox"/>              |        | 0-2 / TS400 MODE                                    |  |
| 09- <input type="checkbox"/>              |        | 0-5 / TS400 MODE                                    |  |
| 10- <input type="checkbox"/>              |        | 0-10 / TS400 MODE                                   |  |
| 11- <input type="checkbox"/>              |        | 0-20 / TS400 MODE                                   |  |
| 12- <input type="checkbox"/>              |        | 0-25 / TS400 MODE                                   |  |
| 13- <input type="checkbox"/>              |        | 0-50 / TS400 MODE                                   |  |
| 14- <input type="checkbox"/>              |        | 0-100 / TS400 MODE                                  |  |
| 15- <input type="checkbox"/>              |        | 0-500 / TS400 MODE                                  |  |
| 16- <input type="checkbox"/>              |        | 0-25 / TS420 MODE                                   |  |
| 17- <input type="checkbox"/>              |        | OBSERVER MODE                                       |  |
| 18- <input type="checkbox"/>              |        | SURVEYOR MODE                                       |  |
| <b>D. DISPLAY-MULTIPLIER:</b>             |        |                                                     |  |
| 1- <input type="checkbox"/> (Std)         |        | 1 = X 1, (3 Digit)                                  |  |
| 2- <input type="checkbox"/>               |        | 2 = X 10, (3 Digit)                                 |  |
| 3- <input type="checkbox"/>               |        | 3 = X 100, (3 Digit)                                |  |

| <b>E. CARD-TEST/RAMP-TIME:</b> |                          |       |  |                                 |  |
|--------------------------------|--------------------------|-------|--|---------------------------------|--|
| 1-                             | <input type="checkbox"/> | (Std) |  | INHIBITED RLYS-3 SEC RAMP TIME  |  |
| 2-                             | <input type="checkbox"/> |       |  | INHIBITED RLYS-10 SEC RAMP TIME |  |
| 3-                             | <input type="checkbox"/> |       |  | ACTIVATE RLYS-3 SEC RAMP TIME   |  |
| 4-                             | <input type="checkbox"/> |       |  | ACTIVATE RLYS-10 SEC RAMP TIME  |  |
| 5-                             | <input type="checkbox"/> |       |  | INHIBITED RLYS-1 SEC RAMP       |  |
| 6-                             | <input type="checkbox"/> |       |  | ACTIVATE RLYS-1 SEC RAMP        |  |



### ADDENDUM Product Disposal Considerations

This product may contain hazardous and/or toxic substances.

EU Member states shall dispose according to WEEE regulations. For further General Monitors' product WEEE disposal information please visit:

**[www.generalmonitors.com/faqs](http://www.generalmonitors.com/faqs)**

All other countries or states: please dispose of in accordance with existing federal, state and local environmental control regulations.