



**DR-MV150B**  
**DVD VIDEO RECORDER**  
**Basic Operation**

**QUICK  
 START  
 GUIDE**

 
**Need Help? Please call the JVC Customer Service**  
**TOLL FREE CUSTOMER CARE HOTLINE: 1(800)252-5722**  
**<http://www.jvc.com>**

**Connections**


INSTRUCTIONS  
 →pg. 10

**1** Connect the Antenna, Cable TV, Cable Box

**Basic-1 : Antenna or Wall Jack (Cable TV)**

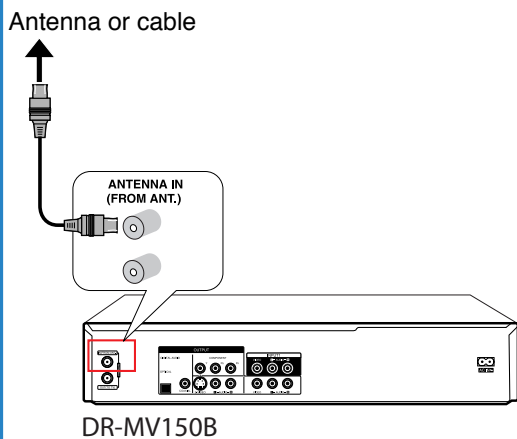

**Basic-2 : Cable or Satellite Box**

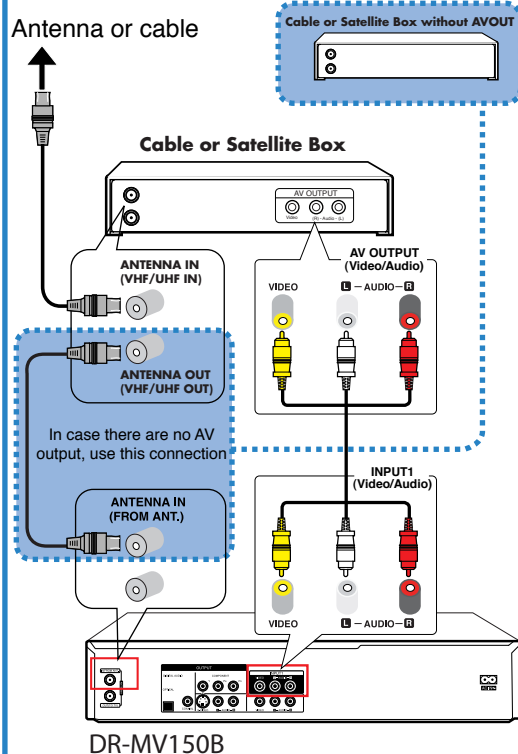 

**Included Accessories**

 
- Remote control
- "AAA" battery x 2 (For remote control)
- RF cable
- Video cable
- Audio cable

## Basic-3 : Connecting To TV

INSTRUCTIONS  
→ pg. 11


**2** Connect with your TV

**3** AC Outlet

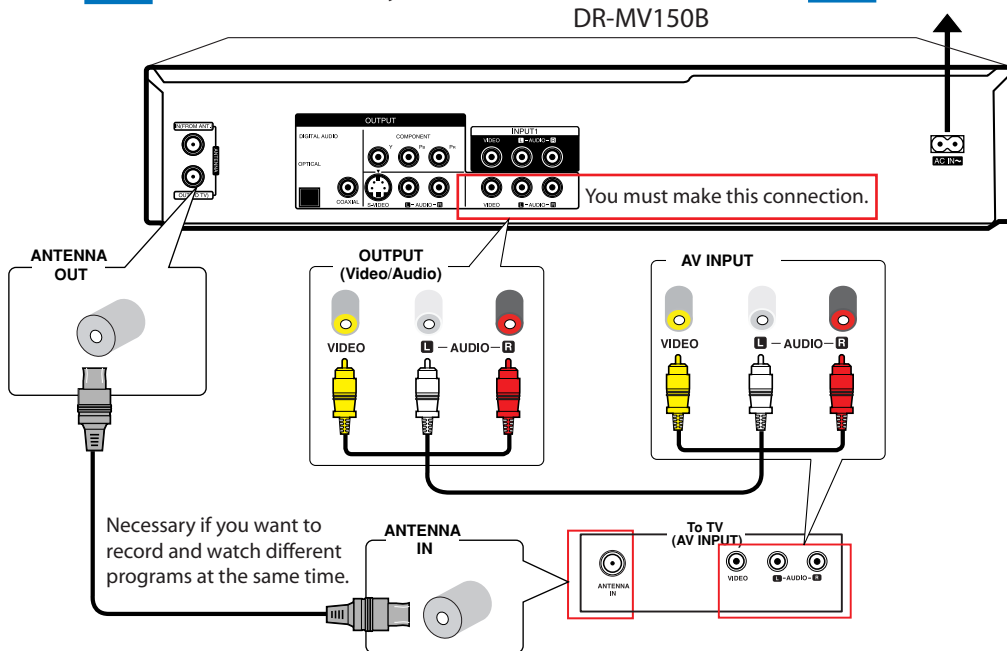

The TV must be set to EXT-Video, Aux, Video 1, or etc to watch DVD, VCR or Tuner.

## Basic-4 : If your TV has Antenna In Jack only.

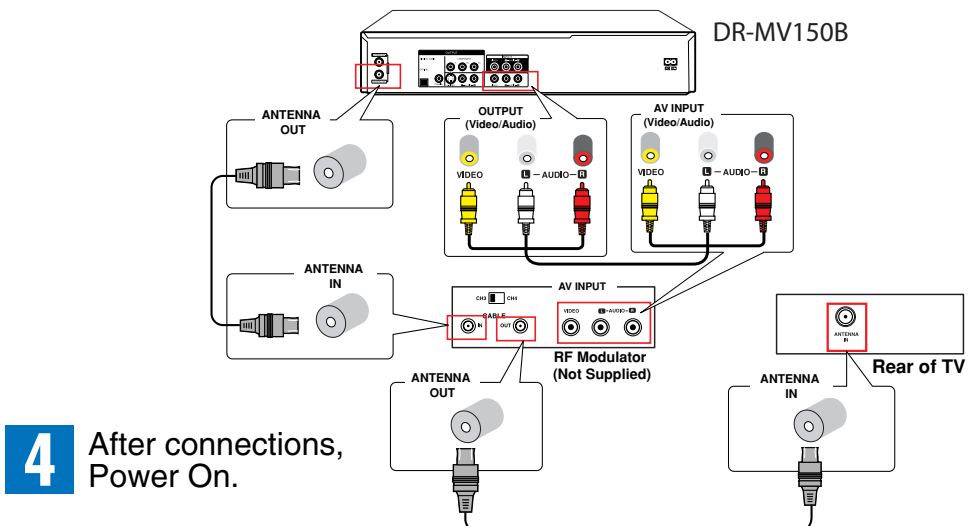 


The TV must be set to the same channel as the output of the RF Modulator.

# Initial Setup Wizard

 
INSTRUCTIONS

→ pg. 15

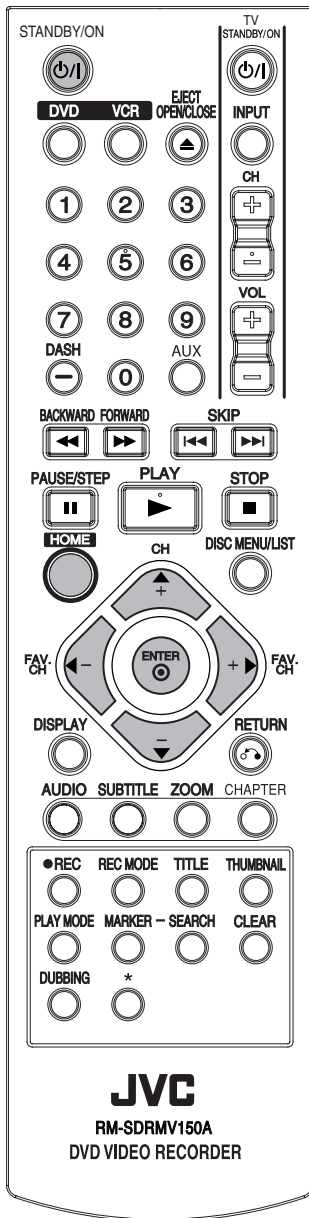


## Select Language

 2

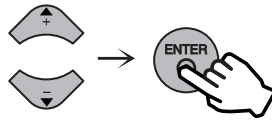


## Move next step

 3

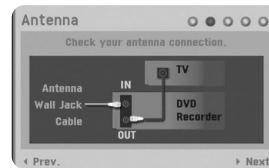


## Select "Tuning Band"

 4





## Press "ENTER"

 5

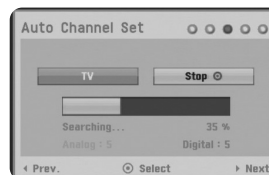

## Set the "Date, Year and Time"

  6

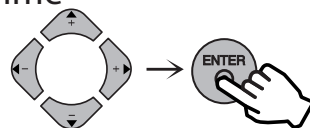

Moves the cursor to the previous or next column.



Changes the setting at the current cursor position.

## Press "STANDBY/ON"

1

 
STANDBY/ON



## Press "ENTER"

Finish

7

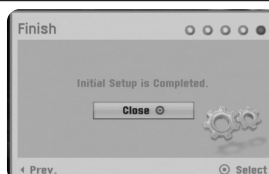

The Remote code must be set correctly. Refer to page 8 of the Instruction.

# BASIC PLAYBACK

INSTRUCTIONS  
→ pg. 25

DVD

 
Select "DVD"



Start Playback




Stop Playback

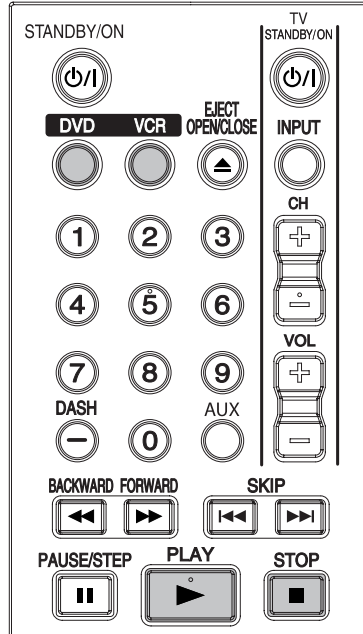

VHS

 
Select "VCR"



Start Playback



 Stop Playback




Playable Discs: DVD-Video, DVD-R, DVD+R, DVD-RW, DVD+RW, DVD-RAM, CD-R, CD-RW, Video CD, Audio CD, DVD+R DL


# BASIC RECORDING (One-Touch Recording)

 INSTRUCTIONS → pg. 34



Select "DVD or VCR"




Select Input  
(AV1, AV2, DV IN or Ch)

 


Select Mode

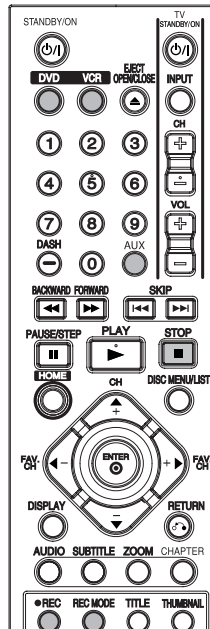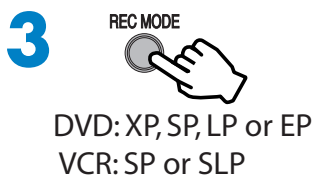  

Start Recording

 

Stop Recording

 

Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 22)

Recordable Discs: DVD-R, DVD+R, DVD-RW, DVD+RW, DVD-RAM

# TIMER RECORDING (Manual Timer Programming)

INSTRUCTIONS

 
→ pg. 35

1 Select "HOME"



2 Select "Timer Record"

2

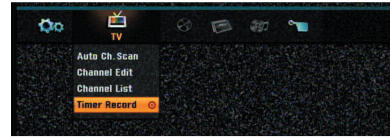


3 Press "ENTER"




4 Select "NEW" and Press "ENTER"



 
5

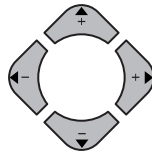

 
Enter the necessary information for you timer recording(s).



 Changes the setting at the current cursor position.

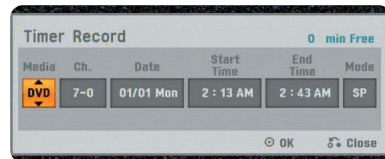

 6 Press "ENTER" to check on the Timer Record List

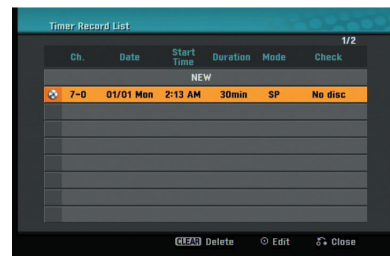


7 Press "RETURN" Finish



Note:

 To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 22)

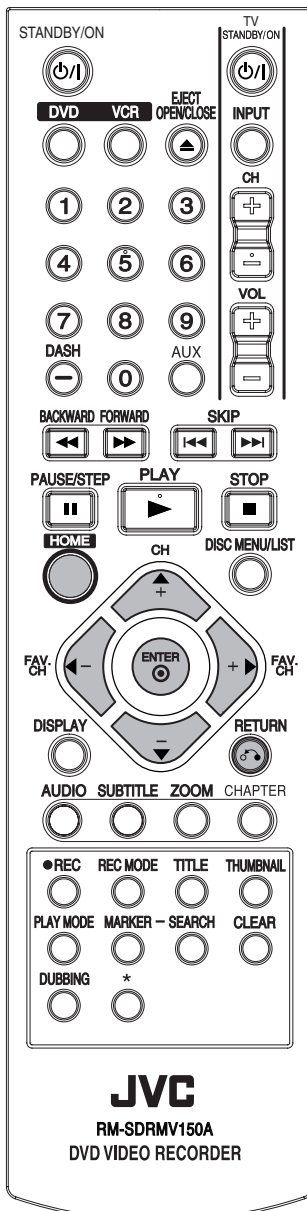

# Dubbing from VCR to DVD

 
INSTRUCTIONS  
→ pg. 37




You can copy the contents of a VHS tape to a DVD using the DUBBING button. This allows you to archive your old VHS tapes to DVD.

Preparation : • Set the resolution to 480i using the OUTPUT STATUS button before dubbing.  
• Press VCR button to set the VCR mode.


**1** Insert Blank Disc and Cassette

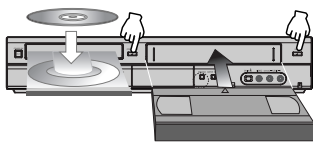

 
**2** Find the place on the VHS tape from which you want to start dubbing.

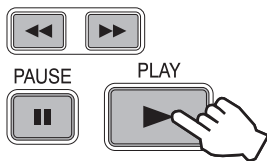

**3** Access the Dubbing menu screen.

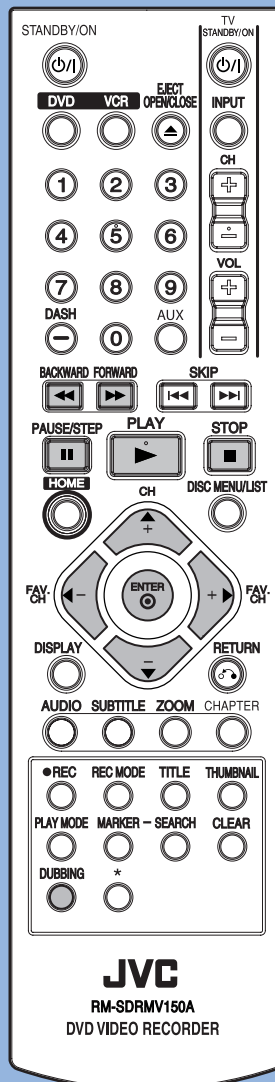 


**4** Select the desired Record Mode.

 

Select XP, SP, LP or EP

 **5** Select [Dubbing].

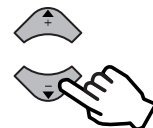

**6** Start Dubbing.



**7** Stop Dubbing.



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 22)