

**Alcatel-Lucent Enterprise  
OmniPCX Enterprise Purple  
Communication Server  
Alcatel-Lucent 4059 IP Attendant Console  
User Manual**



Release 100.0 - October 2021

3EU19877ENBA Ed. 1



## Legal notice

<http://www.al-enterprise.com> The Alcatel-Lucent name and logo are trademarks of Nokia used under license by ALE. To view other trademarks used by affiliated companies of ALE Holding, visit: [www.al-enterprise.com/en/legal/trademarks-copyright](http://www.al-enterprise.com/en/legal/trademarks-copyright). All other trademarks are the property of their respective owners. The information presented is subject to change without notice. Neither ALE Holding nor any of its affiliates assumes any responsibility for inaccuracies contained herein. © Copyright 2021 ALE International, ALE USA Inc. All rights reserved in all countries.

---

## Disclaimer

While efforts were made to verify the completeness and accuracy of the information contained in this documentation, this document is provided “as is”. To get more accurate content concerning Cross Compatibilities, Product Limits, Software Policy and Feature Lists, please refer to the accurate documents published on the Business Partner Web Site.

In the interest of continued product development, ALE International reserves the right to make improvements to this documentation and the products it describes at any time, without notice or obligation.

---

The CE mark indicates that this product conforms to the following Council Directives:

- 2014/53/EU for radio equipment
- 2014/35/EU and 2014/30/EU for non radio equipment (including wired Telecom Terminal Equipment)
- 2014/34/EU for ATEX equipment
- 2011/65/EU (RoHS)
- 2012/19/EU (WEEE)



# *Alcatel-Lucent 4059 IP Attendant Console*

## **Chapter 1**

### **Introduction to the 4059 Attendant console**

<b>1.1</b>	<b>Introduction.....</b>	<b>8</b>
<b>1.2</b>	<b>System Architecture.....</b>	<b>8</b>
<b>1.3</b>	<b>The 4059 IP Keyboard.....</b>	<b>9</b>
1.3.1	Switchover Key.....	10
1.3.2	Call Handling Keys.....	10
1.3.3	Audio Keys.....	11
1.3.4	Specific LEDs.....	11
1.3.5	Standard Keys Used for Call Handling.....	11
<b>1.4</b>	<b>Attendant Set Characteristics in IP or Mixed IP Configurations .....</b>	<b>11</b>
1.4.1	Set Types.....	12
1.4.2	Set Audio Devices.....	12
1.4.3	Selection between Handset and Headset Mode.....	12
1.4.4	Bluetooth Bonding Sequence.....	12
1.4.5	Bluetooth Call Recovery Sequence.....	13
1.4.6	Audio Device Keys.....	13
1.4.7	Set Incompatible Features.....	13
<b>1.5</b>	<b>The Call Window.....</b>	<b>14</b>
1.5.1	On-line Help.....	14
1.5.2	Title and Menu Bars.....	14
1.5.3	Information Display Field.....	15
1.5.4	Status Bar.....	18
1.5.5	Call Handling Fields.....	19
1.5.6	Function Keys.....	22
1.5.7	Date and Time.....	22

# *Alcatel-Lucent 4059 IP Attendant Console*

## **Chapter 2**

### **IP Attendant activation/deactivation**

<b>2.1</b>	<b>Modifying the 4059 IP Attendant.....</b>	<b>24</b>
<b>2.2</b>	<b>Deleting the 4059 IP Attendant.....</b>	<b>24</b>
<b>2.3</b>	<b>Viewing the Associated Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set.....</b>	<b>25</b>
<b>2.4</b>	<b>Modifying the Associated Alcatel-Lucent 8 series / Alcatel-Lucent 9 series Set.....</b>	<b>25</b>
<b>2.5</b>	<b>Deleting the Associated Alcatel-Lucent 8 series / Alcatel-Lucent 9 series Set.....</b>	<b>25</b>

## **Chapter 3**

### **Attendant console operation**

<b>3.1</b>	<b>Opening a Session.....</b>	<b>26</b>
<b>3.2</b>	<b>Implementing the Console (Status).....</b>	<b>26</b>
<b>3.3</b>	<b>Methods for Calling a Number.....</b>	<b>26</b>
3.3.1	Direct Dialing.....	26
3.3.2	Call Using the Set Directory.....	26
3.3.3	Call Using Programmed Key.....	27
3.3.4	Dial by Name.....	27
3.3.5	Call by Speed Dialing.....	29
<b>3.4</b>	<b>Call to an Internal User.....</b>	<b>29</b>
3.4.1	Reserving (locking) an Internal User Set (Attendant Control).....	29
3.4.2	The Called Set is Free.....	29
3.4.3	The Called Set is Busy.....	30
3.4.4	Special Cases: Sets Forwarding or Cannot Be Reached.....	31
<b>3.5</b>	<b>External Calls.....</b>	<b>32</b>

# *Alcatel-Lucent 4059 IP Attendant Console*

<b>3.6</b>	<b>Answering Calls.....</b>	<b>33</b>
3.6.1	Selecting the Answer Type: Automatic or Manual.....	33
3.6.2	Choosing which Call to Answer First.....	34
3.6.3	Answering an Internal Call.....	34
3.6.4	Answering an External Call.....	34
3.6.5	The Attendant Does not Answer Immediately.....	34
<b>3.7</b>	<b>Holding a Call.....</b>	<b>35</b>
<b>3.8</b>	<b>Redial Function: Redialing a Number.....</b>	<b>35</b>
<b>3.9</b>	<b>Consultation Call.....</b>	<b>35</b>
<b>3.10</b>	<b>Broker Call.....</b>	<b>36</b>
<b>3.11</b>	<b>Barge-In.....</b>	<b>36</b>
<b>3.12</b>	<b>Call Transfer (Routing).....</b>	<b>37</b>
3.12.1	Selecting the Transfer Type: Automatic or Manual.....	37
3.12.2	Manual Transfer without Presentation.....	38
3.12.3	Transfer to a Call Put on Hold.....	38
<b>3.13</b>	<b>Transfer to a Meet Me Conference.....</b>	<b>39</b>
3.13.1	Adding the First Party.....	40
3.13.2	Adding other Participants.....	40
3.13.3	Adding Participants into a Conference in Progress.....	40
<b>3.14</b>	<b>Text Messaging.....</b>	<b>40</b>

## **Chapter 4** Additional features

<b>4.1</b>	<b>Overview.....</b>	<b>42</b>
<b>4.2</b>	<b>S Keys.....</b>	<b>42</b>
4.2.1	Chained Call.....	42
4.2.2	Charged Call.....	42
4.2.3	Release Ctrl.....	42
4.2.4	Frwrld Attnd.....	42

# *Alcatel-Lucent 4059 IP Attendant Console*

4.2.5	DTMF.....	42
4.2.6	Record.....	43
4.2.7	Rotary.....	43
4.2.8	Flash.....	43
4.2.9	Auto Forward.....	43
4.2.10	Malicious.....	43
<b>4.3</b>	<b>Programmable Keys.....</b>	<b>43</b>
4.3.1	Call Presentation.....	44
4.3.2	Directory No Supervision.....	45
4.3.3	Speed Dialing Number.....	45
4.3.4	Individual Routing.....	45
4.3.5	Network/Network Transfer.....	45
4.3.6	Trunk Group Supervision.....	45
4.3.7	Out of Service Trunk Supervision.....	45
4.3.8	Individual Hold.....	45
4.3.9	Transfer with Privilege.....	46

## **Chapter 5**

### **Management from the attendant console**

<b>5.1</b>	<b>Secret code of the set.....</b>	<b>47</b>
<b>5.2</b>	<b>Connection history.....</b>	<b>47</b>
<b>5.3</b>	<b>Customizing user interface.....</b>	<b>47</b>
5.3.1	Choice of Language.....	48
5.3.2	Ringing - melody - volume level.....	48
5.3.3	Ringing - present or absent.....	49
5.3.4	Window appearance and display.....	50
5.3.5	Displaying the date and time.....	50
5.3.6	Background color.....	50
<b>5.4</b>	<b>Programming the individual directory.....</b>	<b>51</b>
<b>5.5</b>	<b>Configuring the directories.....</b>	<b>52</b>
5.5.1	Adding and configuring an external directory.....	52
5.5.2	Selecting directories to use for the dial by name option.....	52

<b>5.6</b>	<b>Appointment reminder.....</b>	<b>53</b>
<b>5.7</b>	<b>Creating text messages in advance.....</b>	<b>54</b>
<b>5.8</b>	<b>Assigning programmable keys and supervision icons.....</b>	<b>55</b>
5.8.1	Programmable keys.....	55
5.8.2	Supervision icons.....	56
<b>5.9</b>	<b>Reserving a trunk group.....</b>	<b>57</b>
5.9.1	Reserving trunk groups.....	58
5.9.2	Trunk group auto reservation.....	58
5.9.3	Direct Seize.....	58
<b>5.10</b>	<b>Changing the status of the attendant group sets or the entity....</b>	<b>59</b>
5.10.1	Programming the attendant group status.....	59
5.10.2	Programming the entity status.....	59
<b>5.11</b>	<b>Overflow between attendants (mutual aid).....</b>	<b>60</b>
5.11.1	Enabling overflow between attendants.....	60
5.11.2	Defining the overflow threshold.....	60
<b>5.12</b>	<b>Managing users.....</b>	<b>61</b>
<b>5.13</b>	<b>Metering (charging).....</b>	<b>62</b>
5.13.1	Counter.....	63
5.13.2	Financial report.....	63
5.13.3	Monitoring users.....	63
<b>5.14</b>	<b>Decommissioning a defective external line.....</b>	<b>65</b>
<b>5.15</b>	<b>Date - Time.....</b>	<b>66</b>
<b>5.16</b>	<b>Configuring DECT/PWT mobile (cell) phones.....</b>	<b>66</b>

# *Introduction to the 4059 Attendant console*

## **1.1 Introduction**

The 4059 IP also called SBC (Screen Based Console), is integrated into the OmniPCX Enterprise. This application provides the maximum level of comfort and user friendliness. It is used when there is just a single attendant set for a system. It may also form part of a team of attendants when telephone requirements mean that several dedicated sets are necessary.

The Alcatel-Lucent 4059 IP can be set up in one of the two configurations:

- an IP configuration using the IP network, where the terminal is referred to as Alcatel-Lucent 4059 IP and the attendant set is an Alcatel-Lucent 8 series set.
- a mixed IP configuration using the TDM and IP network, where the terminal is referred to as Alcatel-Lucent 4059 IP and the attendant set is an Alcatel-Lucent 9 series set.

The Alcatel-Lucent 4059 IP is used to optimize call management: to reply to and easily direct incoming calls, to manage internal calls and, if necessary, to connect internal sets to recipients outside the system.

This console also allows the attendant to take some responsibility for system management. The following operations, among others, are available to the attendant:

- Switching over the system from standard operation to a status configured for reduced activity (at night, for example)
- Reserving external lines for a specific use
- Controlling the use of internal and external lines by the users
- Selecting automatic connection of calls
- Programming the date and time of the system, the checking of call costs, etc.

You are advised to read this user manual before using the console.

## **1.2 System Architecture**

All attendants must be part of an attendant group, consisting of up to 50 attendant sets/consoles (the maximum number of attendants in an attendant group depends on the product software version).

The attendants within a group can use different sets/consoles, but all the terminals of the group must be on the same node and the same IP network. An attendant terminal can only belong to one group.

The 4059 IP application runs on a PC with one of the following operating systems:

- Microsoft Windows XP Professional SP3 (minimum)
- Windows 7 (as of release 5.2.3)
- Windows 8 Professional Edition (32 or 64-bits Editions) (as of release 5.4.1)
- Windows 8.1 Professional Edition (32 or 64-bits Editions) (as of release 5.4.1)
- Windows 10 (as of release 5.5.x)


The 4059 IP application environment includes a software, a specific keyboard, and an Alcatel-Lucent 8 series or Alcatel-Lucent 9 series set.





Figure 1.1: 4059 IP Attendant Console (IP or Mixed IP Configuration)

### 1.3 The 4059 IP Keyboard

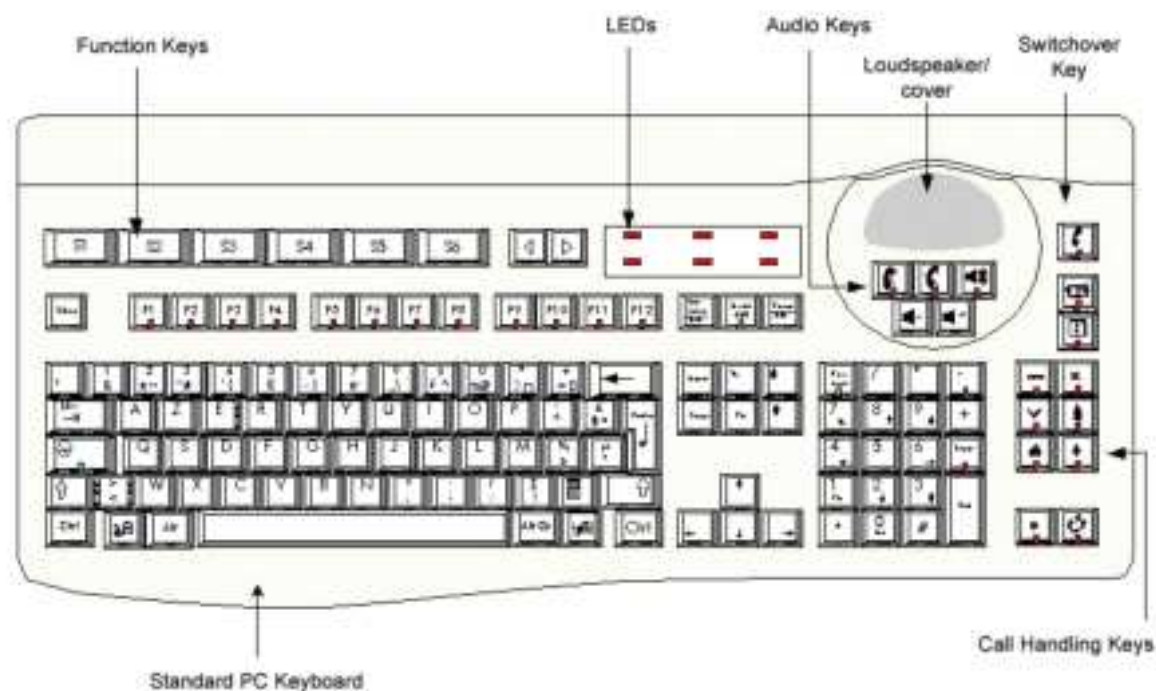


The USB Telephonic keyboard has specific keys for call handling and other telephone functions. With an IP or a mixed IP configuration, the loudspeaker is replaced by a cover as the audio features are provided by the Alcatel-Lucent 8 series or Alcatel-Lucent 9 series set.

On this keyboard, all keys which are not identical to those on a standard PC keyboard are used by the 4059 application. These keys are used for immediate call handling, even when using another application or when the application and/or the PC are off.










A LED is associated with each keyboard key dedicated to call handling. A lit LED informs the attendant that the corresponding key is available for any operation.

Certain standard PC keys can also be used for call handling.

### 1.3.1 Switchover Key

	<p>This key is also called the application switchover key. When the 4059 application started on the PC, the key is used to switch from the 4059 window to another PC application (and vice versa).</p> <p><i>Note:</i> Ensure that in the display configuration, the 4059 activation option: By Application switch key is selected (see <a href="#">Window appearance and display</a> on page 50)</p>
---	---
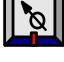
### 1.3.2 Call Handling Keys

	<p>Opens the personal directory of the console (to configure it, see <a href="#">Programming the individual directory</a> on page 51)</p>
	<p>Release: ends the attendant intervention on a call.</p>
	<p>Answer an internal call.</p>
	<p>Redial a number from the list of the last 10 outgoing calls.</p>
	<p>Broker call.</p>
	<p>Place on hold/transfer: places a call on hold (or transfers a call).</p>
	<p>Cancel the consultation call: returns to the main call.</p>
	<p>Call: calls the selected set.</p>
	<p>Answer an external call: displays the list of incoming calls.</p>








External trunk: displays the list of calls routed or placed on hold.

### 1.3.3 Audio Keys







*Note:*

*For IP or mixed IP configurations, the following keys activate/deactivate the audio functions on the associated Alcatel-Lucent 8 series or Alcatel-Lucent 9 series set.*

	Activate/deactivate the hands-free function
	Mute
	Activate/deactivate the loudspeaker
	Lower the volume
	Raise the volume

### 1.3.4 Specific LEDs

Six specific LEDs provide information on the system status.

		
Night forwarding	Auto answer	Auto transfer
		
Trunk reservation	Mail	System message

*Note:*

*The System message LED light is not on even if the attendant receives a message.*

### 1.3.5 Standard Keys Used for Call Handling

These keys are located on the numeric keypad of the keyboard.

0 to 9	To dial a number
#	To indicate the end of dialing
-	To seize a trunk on the same trunk group without having to dial

## 1.4 Attendant Set Characteristics in IP or Mixed IP Configurations

All the audio features of the 4059 IP attendant are provided by the Alcatel-Lucent 8 series or Alcatel-Lucent 9 series set. Audio keys and icons are disabled on the set. The USB Telephonic keyboard audio keys or corresponding 4059 application audio menu are used instead.

### 1.4.1 Set Types

The 4059 IP attendant set can be one the following types:

- in IP configurations: Alcatel-Lucent IP Touch 4008 Phone, Alcatel-Lucent IP Touch 4018 Phone, Alcatel-Lucent IP Touch 4028 Phone, Alcatel-Lucent IP Touch 4038 Phone, or Alcatel-Lucent IP Touch 4068 Phone
- in mixed IP configurations: 4009, Alcatel-Lucent 4019 Digital Phone, Alcatel-Lucent 4029 Digital Phone, or Alcatel-Lucent 4039 Digital Phone

### 1.4.2 Set Audio Devices

#### 1.4.2.1 Audio Devices

The following device can be used on the associated set:

- Corded Handset
- Corded Handset **AND** Jack Headset
- Bluetooth Handset (with associated Alcatel-Lucent IP Touch 4068 Phone only)
- Handset **AND** Bluetooth headset (with associated Alcatel-Lucent IP Touch 4068 Phone only)

*Note:*

*The bounding sequence is not available when the set is associated to 4059 IP. There is no display/information on the bounded devices on the 4059 IP attendant application.*

#### 1.4.2.2 Icons

- There is no handset icon.
- When a headset is detected by the set, the associated set displays a headset icon (there is no headset icon on the PC).

### 1.4.3 Selection between Handset and Headset Mode

When the headset is in service, the attendant is automatically in Headset mode.

Possible audio modes are:

heaset, headset and loudspeaker, hands-free, mute or not.

When the headset is out of service, the attendant is automatically in Handset mode.

Possible audio modes are:

handset, Group listening, hands-free, mute or not.

### 1.4.4 Bluetooth Bonding Sequence

The bounding sequence is only possible when the 4059 IP is in plugged-out state.

There is no display or information about the bound devices on the 4059 IP attendant application.

### 1.4.5 Bluetooth Call Recovery Sequence

Bluetooth handset:

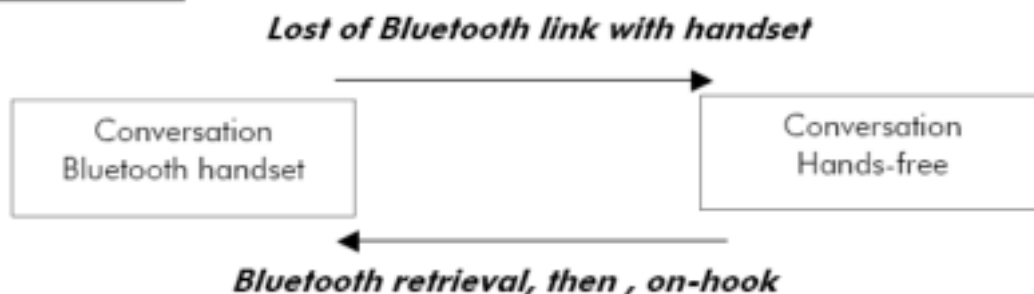


Figure 1.2: Bluetooth Handset:

Bluetooth headset:

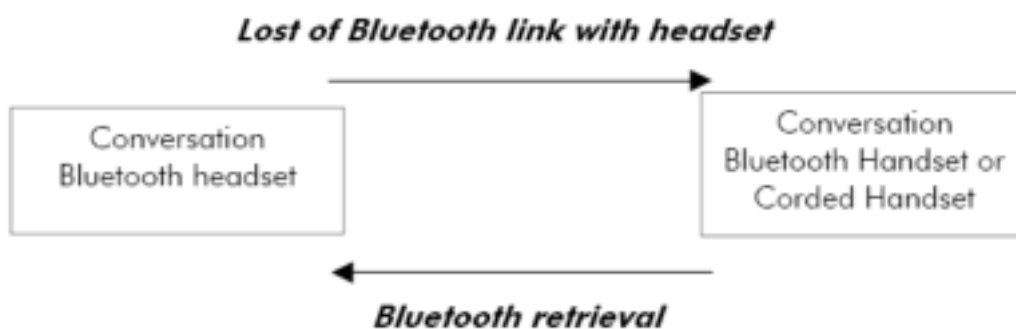


Figure 1.3: Bluetooth Headset

**Caution:**

*The associated sets will take a few seconds (about 20 seconds, Alcatel-Lucent IP Touch 4068 Phone characteristics) before it detects the loss or retrieval of the Bluetooth link.*

### 1.4.6 Audio Device Keys

The keys on the Bluetooth handset have no effect. The On/Off key on the handset can switch on/off the handset.

The keys on the Bluetooth headset have no effect. The On/Off key on the headset can switch on/off the headset.


The key located on the Jack headset has no effect on the attendant.

### 1.4.7 Set Incompatible Features

The 4059 IP attendant set cannot support the following features:

- Multiline (for example: boss-secretary, twin set, supervisor)
- ACD
- Hotel (except administrative set)
- Pickup group or hunt group
- Alarm set
- 4980 application software
- Subdevice S0 or Z

## 1.5 The Call Window

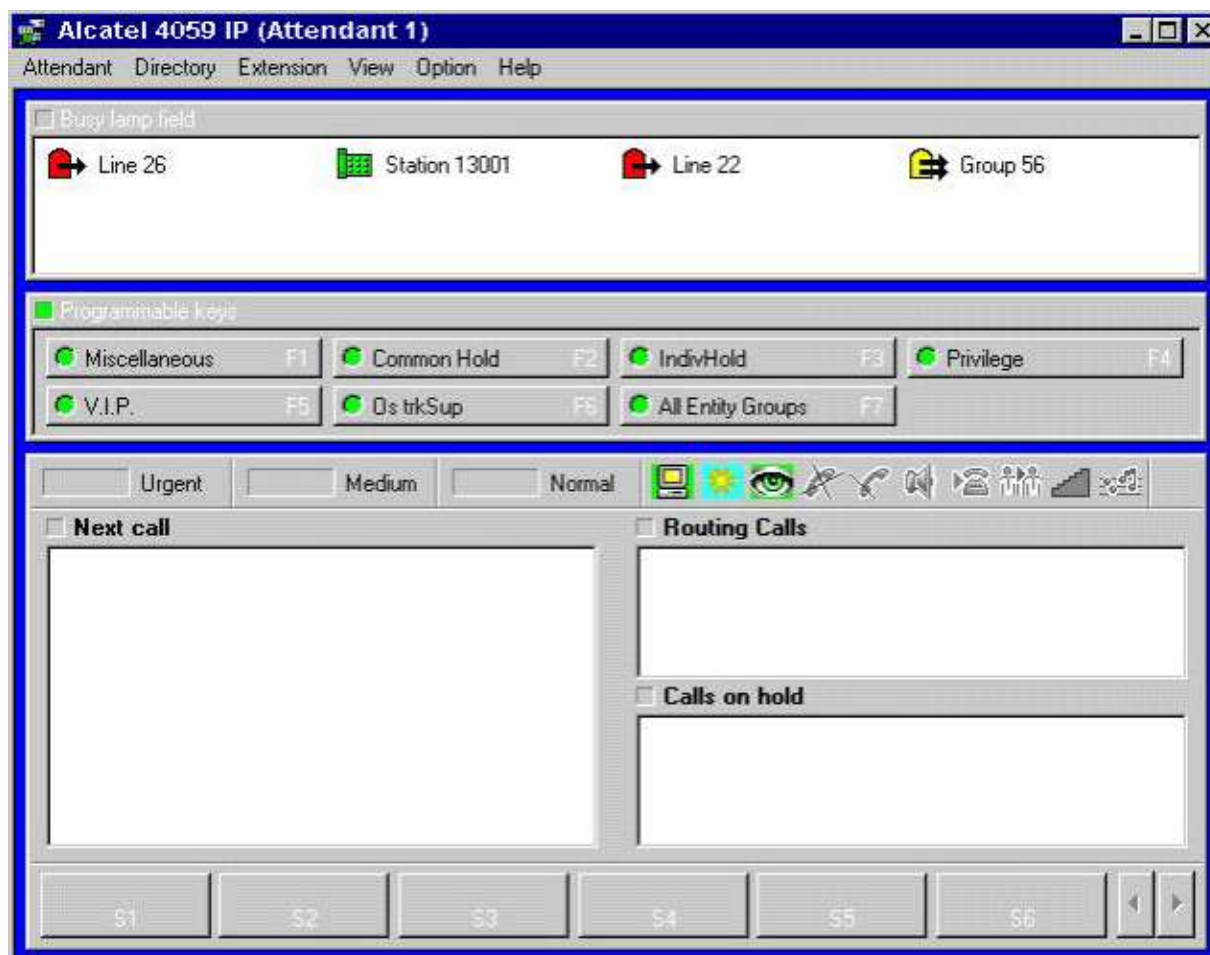

Note:

There may sometimes be differences in the display and the terms used:

- Depending on the country the system is in, the application may designate certain functions using a different name.
- Depending on the configuration carried out by the system administrator, this display may show calls on hold in a **Routing calls** frame.

### 1.5.1 On-line Help

The **Help** menu in this window allows you to access:

- This user manual
- Help on interactions between the **4059** application and Assisted Telephony
- A reminder on the meaning of the USB Telephonic keyboard keys
- An **About** window giving the **4059** version used and the identity of the attendant

### 1.5.2 Title and Menu Bars

The standard Windows title bar is located at the top of the window. It gives the name of the application and the name of the authorized user: Alcatel-Lucent 4059 IP ("attendant login").

The menu bar is found directly below the title bar. It is used to access the different functions of the application. For example:



### 1.5.3 Information Display Field

The display field occupies the top part of the window. It contains two fields: the first is **Busy lamp field**, the second is **Programmable keys**.

The windows of these fields may be re-sized and re-positioned in order to better organize the screen (see the [Window appearance and display](#) on page 50).

The color of the individual title bar for these two fields indicates whether they are active.


You can pass from one sub-window to the other using the mouse or using the **Tab** key on the keyboard.

Within a single field, if there are too many icons or programmable keys to be displayed, several pages are created. You can use the **Page Up** or **Page Down** keys to move between pages.

#### 1.5.3.1 Busy Lamp Field


To configure the supervision icons in the busy lamp field, see the [Supervision icons](#) on page 56.

The supervision icons indicate the status of sets, trunks, and trunk groups. A maximum of eight supervision icons can be displayed on a single console. To display more icons, install the 4059 BLF application.

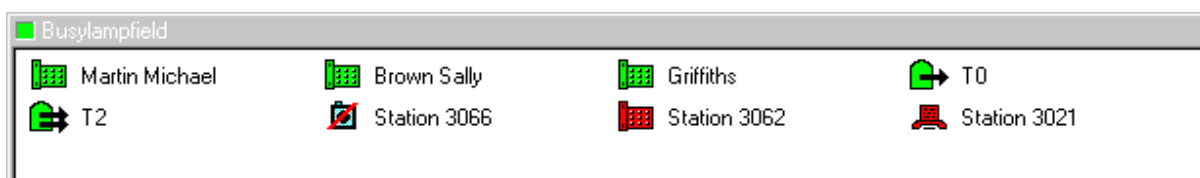

Double-click on an icon to activate it. To find out the function and status of an icon (and display a help field), point the cursor at the icon.

Equipment which is not configured in the Alcatel-Lucent OmniPCX (or located on a different OmniPCX

node to the attendant console) is represented by the icon . The meaning of the other icons is given below.

The attendant console only supervises the equipment located on the same node as itself.

##### 1.5.3.1.1 Digital Sets



Set free (icon green)

Set out of service (icon red)



Set inaccessible (icon yellow)

Set positioned to Do Not Disturb (icon gray)



Set busy (internal party)



Set busy (external party)



Set busy without conversation (icon yellow)



Set absent (having left an absence (apology) message)

#### 1.5.3.1.2 Analog Sets



Set free (icon green)

Set out of service (icon red)



Set inaccessible (icon yellow)

Set positioned to Do Not Disturb (icon gray)



Set busy (with an internal party)



Set busy (with an external party)



Set off-hook



Set absent (having left an absence (apology) message)

#### 1.5.3.1.3 Attendant sets (and consoles)



Set free (icon green)

Set out of service (icon red)



Set busy



Set not connected



Attendant absent



#### 1.5.3.1.4 Fax



Available (icon green)

Busy (icon yellow)

Out of service (icon red)

#### 1.5.3.1.5 Hunt Groups

A hunt group consists of two or more sets. These sets share the same directory number so that calls can be answered by any one of them.



Hunt group free (icon green)

Hunt group busy (icon yellow)

Hunt group partly busy (icon green at front and yellow at back).

#### 1.5.3.1.6 Trunks

A trunk is a telephone line between two systems. It connects two Alcatel-Lucent OmniPCX or an Alcatel-Lucent OmniPCX and another PBX.



Trunk free (icon green)

Trunk busy (icon yellow)

Trunk placed out of service for Hardware or Software (icon red).

#### 1.5.3.1.7 Trunk Groups

A trunk group is a group of trunks of the same type, all configured identically.




Trunk group free (icon green)

Trunk group busy (icon yellow)

Trunk group partly busy (icon green at top and yellow at bottom)

Trunk group out of service for Hardware or Software (icon red)

#### 1.5.3.2 Programmable Keys

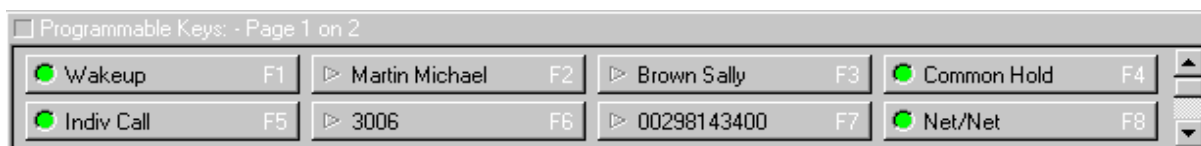

Point the cursor to a programmable key to display help for this function. The status of the key is indicated by a LED (green=active). These keys are programmed by the system administrator or by the attendant (see the [Programmable Keys](#) on page 43).

To select a function, double-click on the key or press the key directly on the USB keyboard (**F1** to **F8**) which corresponds to the function required.

If there are more than eight functions programmed, use the **Page Up** or **Page Down** keys on the keyboard to display the other programmable keys.

*Note:*

*For each new page, although the keys displayed present different functions, their order corresponds to the keys F1 to F8 on the keyboard.*

### 1.5.4 Status Bar

This display field, which is located directly above the call handling field, is divided into several parts:

- Call waiting counters
- Status icons
- Dialing area

#### 1.5.4.1 Call Counters

This field indicates the number of incoming calls. Each call is represented by a colored rectangle:

- Red: urgent calls on hold (Urgent)
- Yellow: average calls on hold (Medium)
- Green: incoming calls on hold (Normal)

**Example:**



#### 1.5.4.2 Status Icons

The status of the attendant set is indicated by a row of icons in the status bar.

**Example:**



If the icon is grayed out, the corresponding function is not active.

Each icon has a specific meaning:



In use/activated



Attendant absent. When a console is not used and the attendant has not replied to calls for a certain amount of time, the console automatically changes to absent mode.



Day service



Night service



Status of the supervision icons (activated or deactivated)



Hands-free mode



Mute deactivated - micro activated



Loudspeaker



Automatic answer



Automatic transfer



Loudspeaker volume



Rotary dialing (deactivated)



 
Service mode



Guide mode


#### 1.5.4.3 Dialing Area

The dialing area only appears (in place of the status icons) for the time it takes to dial the number.



### 1.5.5 Call Handling Fields


#### 1.5.5.1 Console Idle

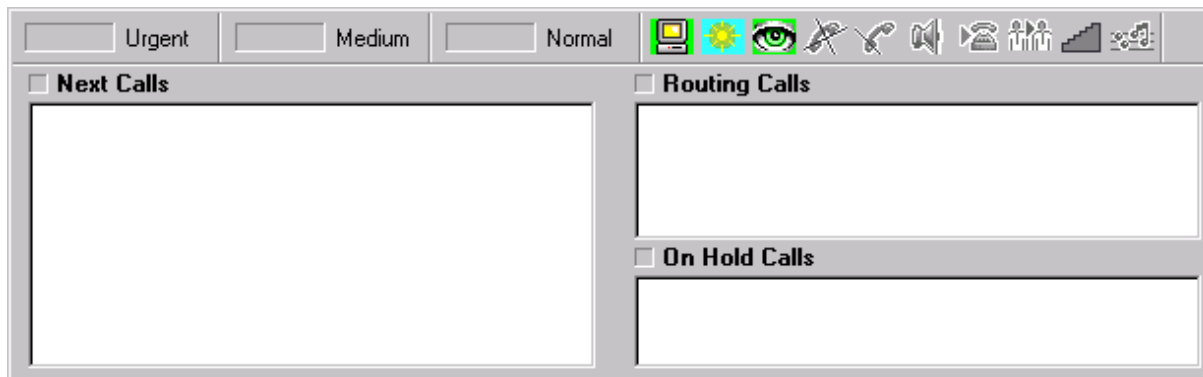

When idle, the fields displayed are:

- The field identifying the calls to be handled
- The field for routing calls or on hold calls
- The call waiting counters (see [Call Counters](#) on page 18)

### 1.5.5.1.1 Incoming Calls (Next Calls)

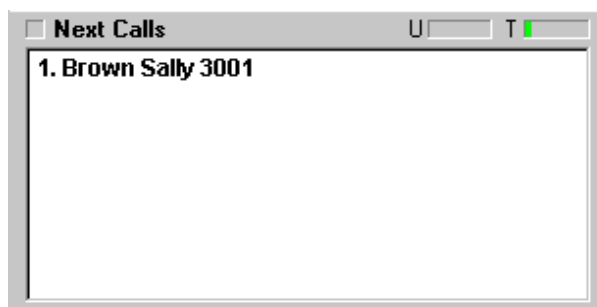

The following information is displayed for each caller:

- Caller identity (surname-first name)
- Directory number
- Entity
- If the caller is a VIP guest

*Note:*

*The system administrator can configure a different display and unique ringing tone for calls from VIP guests.*

*The VIP feature is special to hotels and hospitals.*

Additional information appears when the attendant takes the call.

### 1.5.5.1.2 On Hold Calls

The following information is displayed for each caller:

- Caller identity (last name-first name)
- Directory number
- Entity

### 1.5.5.2 Active Console


The active window of the Alcatel-Lucent **4059** offers a user-friendly display of the calls in progress.

*Note:*

*The console is active when a call is sent or received by the attendant.*

On the active console, the Next calls and Routing calls fields detail:

- The main call
- The call on hold (information on a consultation call)

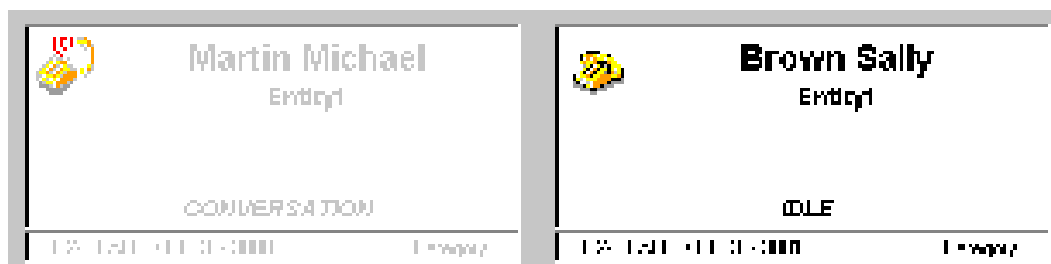

### 1.5.5.2.1 Main Call



This field displays:

- An icon corresponding to the call status
- The caller's last name and first name
- Entity
- If the caller is a VIP guest
- The status of the calling set
- Directory number
- Telephone facilities class of service (category)

*Note:*

*The icon displays the status of the user set. The information displayed changes according to the call handling.*

Meaning of the icons showing the status of the set to be called:



Idle (on-hook)



Set rung



Set placed on hold (or transfer)



Set busy or in conversation



Wrong number (or set out of service, or access prohibited)

### 1.5.5.2.2 On Hold Call

This field displays information concerning an internal or external consultation call initiated by the attendant (to transfer the main call, for example).

It gives the name, the directory number called, the class of service for the connection (to the public network) of the set, the nature of the call and the entity to which the set belongs.

*Note:*





*The information field for the call in progress is in color; the field for the main caller is grayed out.*

### 1.5.6 Function Keys

There are six function keys available to the attendant. These functions, relating to call handling, are only carried out using the keys numbered **S1** to **S6** (on the window or on the USB keyboard).



The functions associated with keys **S1** to **S6** depend on the status of the call in progress.

The  and  keys on the keyboard correspond to the  and  keys on the screen. They are used to move from one page to another if more than six functions are programmed.

### 1.5.7 Date and Time

This field, located at the bottom of the **4059** window, gives the PC date and time.

*Note:*

*The attendant can change the date and time on their PC. They must have authorization from the system administrator to modify them on the OmniPCX Enterprise. If there is a difference between the time on the PC and the time on the Alcatel-Lucent OmniPCX, when starting the application, a dialog box prompts the attendant to contact the system administrator to rectify the problem.*

The IP attendant features are activated only when all of the following actions are completed:

- the PC is connected to the TCP/IP network
- the 4059 IP application is running
- the attendant is activated (refer to module Alcatel-Lucent 4059 attendant console - Introduction to the 4059 Attendant console / Call window)

Once the IP Attendant features are activated, the associated Alcatel-Lucent 8 series or Alcatel-Lucent 9 series set is dedicated to the attendant audio features and cannot be used as a standard set. Any call to this set is forwarded to the attendant.

When the IP Attendant features are not activated, the Alcatel-Lucent 8 series or Alcatel-Lucent 9 series set can be used as a non-attendant dedicated set and no attendant features are available. Refer to module Alcatel-Lucent 4059 attendant console / Introduction to the 4059 Attendant console / Attendant set in IP or mixed IP configurations for the incompatible set features.

Interactions with other features are detailed in the following table:

Feature	IP attendant activated	IP attendant deactivated
<b>Message</b>	All signalization about mail is disabled on the set (the LED is off)	All message features that are standard on the set are provided  The set retrieves mail signalization and features
<b>Forward</b>	Associated Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set is immediately forwarded:  Attendant checked-in, all the calls to Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set reach the attendant.  A set XXX is immediately forwarded to the associated Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set:  Attendant checked-in, all the calls to the XXX set reach the attendant.	Associated Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set is immediately forwarded:  Attendant checked-out, all the calls to Alcatel-Lucent 8 series / Alcatel-Lucent 9 series follow the forward.  A set XXX is immediately forwarded to the associated Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set:  Attendant checked-out, all the calls to the XXX set reach the associated Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set.
<b>Overflow</b>	Same as Forward	Same as Forward
<b>DND</b>	Same as Forward	Same as Forward
<b>Call back</b>	<ul style="list-style-type: none"> <li>• The set is protected against call back</li> <li>• The set cannot request a call back</li> </ul>	The set is protected against call back

Feature	IP attendant activated	IP attendant deactivated
<b>PRS</b>	Same as out of service set (if the attendant is plugged-in)	
<b>Wakeup</b>	<p>When the attendant is unplugged, a wake up can be set on the associated set, an icon is displayed on the set when the wake up is programmed.</p> <p>When the attendant is plugged-in with a wake-up to come, the wake-up icon is erased.</p> <p>When the attendant is unplugged again, with a wake-up to come, the wake-up icon is displayed again.</p> <p>When the wake-up occurs, there is a first try.</p> <p>If the attendant is unplugged, the wake-up can occur.</p> <p>If the attendant is plugged-in, the set is out of service, the wake-up cannot occur and there will be a second try (the last one) 2 minutes later.</p> <p>Wake-up second try:</p> <p>If the attendant is unplugged, the wake-up can occur.</p> <p>If the second try fails, an incident is generated. This incident reports the wake-up cannot take place. This is the common working way of wakes-up.</p>	
<b>Night forward</b>	<p>The associated Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set can be a night forward set</p> <p>If the attendant is plugged-in, the calls to the night forward set are diverted to the attendant.</p>	
<b>CDT</b>	The set can be a distribution table	
<b>Prefix</b>	Cannot be dialed on the set as the set keyboard is disabled	Can be dialed
<b>Substitution</b>	<ul style="list-style-type: none"> <li>total substitution is not possible on Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set</li> <li>partial substitution is possible</li> </ul>	

## 2.1 Modifying the 4059 IP Attendant

If the 4059 IP Attendant is in plug-in state

- It is forbidden to modify the Associated Set
- It is forbidden to modify the Terminal Ethernet Address

## 2.2 Deleting the 4059 IP Attendant


- The 4059 IP Attendant must be unplugged (with Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set).



- Delete the 4059 IP Attendant termination (the Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set is no longer associated with the 4059 IP).

## 2.3 Viewing the Associated Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set

You can view the QMCDU of the 4059 IP in the data of the associated Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set but you cannot modify it.

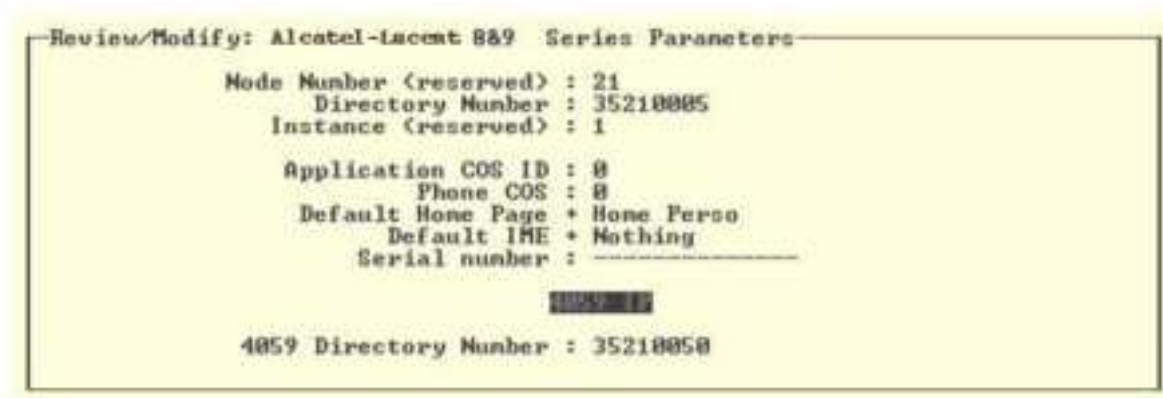

## 2.4 Modifying the Associated Alcatel-Lucent 8 series / Alcatel-Lucent 9 series Set

It is forbidden to modify the Terminal Ethernet Address if the 4059 IP attendant is plugged-in.

Every modification must follow restrictions.

## 2.5 Deleting the Associated Alcatel-Lucent 8 series / Alcatel-Lucent 9 series Set


- The 4059 IP attendant must be unplugged (with Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set).
- Dissociate the Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set from the 4059 IP (in the Operator configuration).
- Delete the Alcatel-Lucent 8 series / Alcatel-Lucent 9 series set termination.


## 3.1 Opening a Session

When the PC has been started up, you can either:

- Double-click on the Alcatel-Lucent **4059** icon on the desktop
- Click on Start > Programs > Alcatel-Lucent **4059**.


## 3.2 Implementing the Console (Status)

When the console is first powered on, it initializes in inactive mode (unplugged position). This is indicated on the screen by the  icon (grayed out) in the status bar.

To bring the console into operation, select the **Sign on** option in the **Attendant** menu. The console becomes active, as shown by the change in color of the  icon.

*Note:*

For a full description of the icons in the status bar, see the [Status Bar](#) on page 18.

To use the USB keyboard and its specific keys, press the  key. The red LED of the key should be lit.

*Note:*


For a full description of the specific keys on the keyboard, see the [The 4059 IP Keyboard](#) on page 9.

## 3.3 Methods for Calling a Number

### 3.3.1 Direct Dialing

Dial the number directly on the numeric keypad of the keyboard.

To reach an external number, first dial the external line seize prefix, then the external number.

To set up the call: once the number has been dialed, press the  key.


### 3.3.2 Call Using the Set Directory


The personal directory (which can be programmed from the 4059 console, see the [Programming the individual directory](#) on page 51) is used to select a user directly via a key, without having to dial their number on the keyboard.

*Note:*


The number called may be an internal, external, or speed dialing number.

Calls using the personal directory can be made with the attendant set in the idle state or being used for a consultation call.

To access the directory, press the  key.

Select the name to be called and click on **Redial**. Press the  key.

### 3.3.3 Call Using Programmed Key

When a key is programmed with a directory number, click on this key (or press the corresponding **F** key on the keyboard, then the  key).

*Note:*

*These keys (see the [Programmable Keys](#) on page 17) are either programmed by the system administrator or programmed from the console (see the [Programmable keys](#) on page 55).*

### 3.3.4 Dial by Name

This feature allows you to call an internal (or external) user without having to dial their directory number. Dial by name can be requested either from the idle state or during a consultation call.

When a dial by name request is made, the system carries out an internal search in the available directories. These directories can be the personal directory for the set, the system directory, or a standardized LDAP or ODBC directory. They are managed by the system administrator. To determine which directories are used to dial by name, see the [Selecting directories to use for the dial by name option](#) on page 52.

#### 3.3.4.1 Call Via the Keyboard


1. On the keyboard, type the first two letters of the name to be called.

*Note:*

*Pressing any key on the alphabetical keyboard switches the console to Dial by name mode.*




2. Enter the following letter(s).
3. The application searches for a match in all the directories selected for the search by name (see [Selecting directories to use for the dial by name option](#) on page 52).

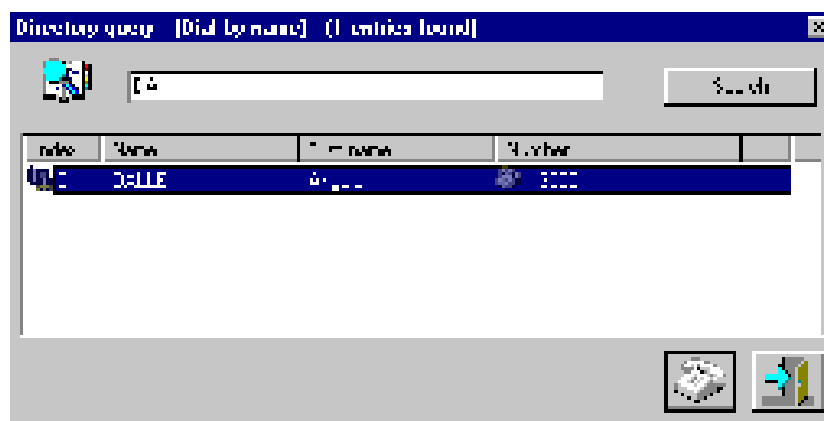


4. If the result does not correspond to the name required, enter one or more additional letters.

5. If several names appear, select the required name.

6. Click on  to dial the selected number. This closes the directory search window.

To close the search window without dialing a number, click on .


7. To start dialing, press the  key.

### 3.3.4.2 Dial by Name Using the Directories

This option is used to search by last name, by last name + first name, or by initials.

The **Directory** menu contains the **Multi-Directory Search** option, as well as a configured directory option.


1. Select the required option in the **Directory** menu.

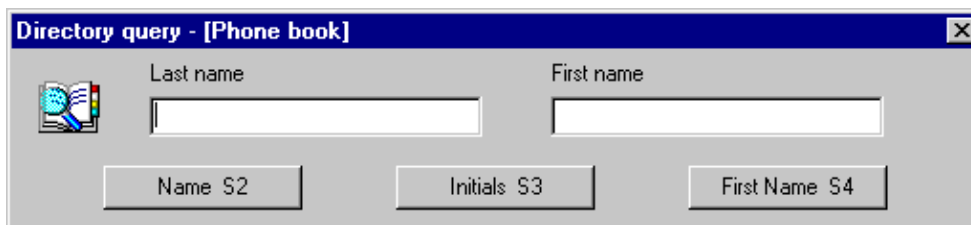

2. For a search by initials, enter the initials of the last name and first name, then click on **Initials S3** or press the S3 key on the keyboard.

For a search by last name, enter the first letters of the last name, then click **Name S2** or press the S2 key on the keyboard.

For a search by last name and first name, enter the first letters of the last name and the first name, then click **First Name S4** or press the S4 key on the keyboard.

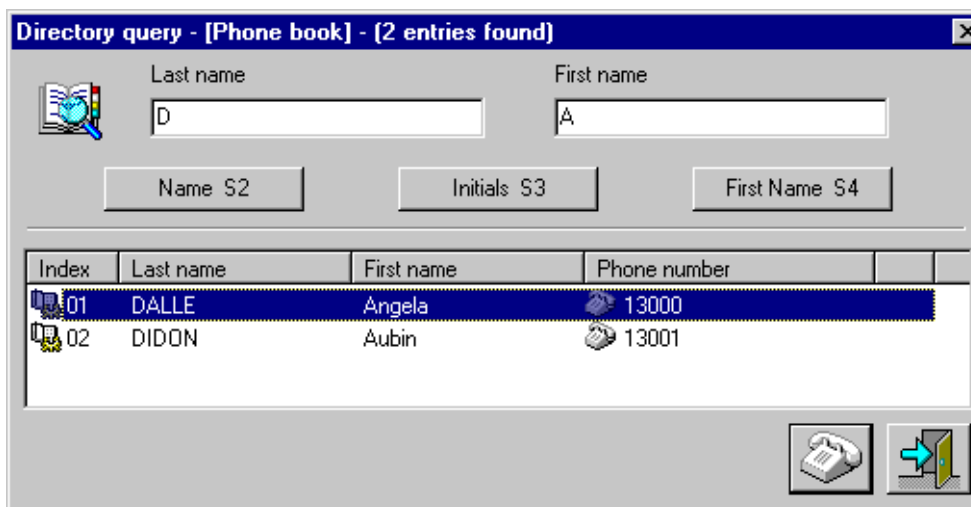


Index	Last name	First name	Phone number
01	DALLE	Angela	13000
02	DIDON	Aubin	13001


To move from one field to another, use the mouse or the **Tab** key on the keyboard.

3. If several names appear, select the required name. If the required name does not appear, enter one or more additional letters. The vertical arrows of the keyboard can be used to select one of the names displayed. The right (horizontal) arrow can be used to display additional details concerning a

party (as entered in the LDAP and ODBC directories). Click on the heading to each column to sort the users by alphabetical order or by phone number.

4. Click on  (or press Enter on the keyboard) to dial the selected number. This closes the directory search window.

To close the search window without dialing a number, click on .

5. To start dialing, press the  key.

### 3.3.5 Call by Speed Dialing

To dial an abbreviated number, you can either:


- Dial the direct call prefix
- Dial the access prefix followed by the row of the abbreviated number

Speed dialing is most often used for external dialing only. Once the dialed number has been analyzed by the system, the procedure is then the same as for an ordinary call.


## 3.4 Call to an Internal User

To call an internal user:

1. Dial the set number. The status of this set (free, busy, other) is shown in the call handling field (see the [Active Console](#) on page 20).

2. If the set is free (on-hook), press the  key.


Depending on the status of the set, the function keys are used to send a specific message or to run another function on the called set (see the [Function Keys](#) on page 22).


3. To end the call, press the  key.

### 3.4.1 Reserving (locking) an Internal User Set (Attendant Control)

When an internal user number is dialed, the user set, if free, is reserved by the attendant. The user can no longer dial a number or access another service.

This attendant control is indicated on the user set:

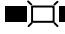- By the  symbol on the resource keys (multiline set)
- By the deletion of any entry on the screen



The user set does not ring until the attendant presses the  key.

This special console feature allows the called user to be reached at all times. If the user picks up the receiver, they hear the hold music (or the corresponding tone), indicating that the set is reserved and that all outgoing calls are denied.

### 3.4.2 The Called Set is Free

The call handling field displays:



- The  key rings the set.
- The  key releases the call.
- The **Call Back** function key sends a call back request to the called set (see [Sending a Call Back Request](#) on page 31).
- The **Text Mail** function key is used to send a text message to the called set (see [Text Messaging](#) on page 40).

### 3.4.3 The Called Set is Busy



#### 3.4.3.1 The Set Is Multiline

If the user set is a multiline set, it is not locked and can make calls. However, a set resource is used for the incoming call from the attendant set.

The call handling field displays:



The attendant can use:

- The  key to ring the set.
- The  key to release the call.


The procedure to be followed after this screen is the same as the procedure described for calling a free set.

#### 3.4.3.2 The Set Is a Single Line Set

The call handling field displays:



The attendant can use:

- The  key to release the call.
- The **Break In** function key to barge in to a conversation in progress (see [Barge-In](#) on page 36)
- The **Call Back** function key to activate a call back request (see [Sending a Call Back Request](#) on page 31).
- The **Display Mail** function key to display a message on the user set
- The **Text Mail** function key to leave a text message (see [Text Messaging](#) on page 40)


#### 3.4.3.3 Sending a Call Back Request

When a set is busy, the attendant console can send a call back message by clicking on the **Call Back** function key. The user is notified of the arrival of a message during the call (LED flashing).

By reading this message, the user can activate the call back to the attendant. This call is handled like a standard incoming call.


### 3.4.4 Special Cases: Sets Forwarding or Cannot Be Reached

The call handling field gives the status of the called set.

If this set cannot be reached, is out of service, or is not authorized, press the  key to release the call.

#### 3.4.4.1 The User Is Absent (Apology Message)

When a user can leave an absent (apology) message because he or she cannot answer, the attendant can read the message when the user is selected.

To call the set despite the user request, press the  key.



#### 3.4.4.2 The Set Is Forwarding to Another Set

##### 3.4.4.2.1 The Set Is in Immediate Forwarding Mode

The call handling field shows the forwarding destination and the entity to which it belongs, then the set called (set initiating the forward) and its number. It also gives the status of the set to which the called set is forwarded:



The attendant can use:



- The  key to ring the set (forwarding destination).
- The  key to release the call.
- The **Override** function key, to override the forward and call the initial set
- The **Call Back** function key to activate a call back request
- The **Text Mail** function key to leave a text message

#### 3.4.4.2.2 The Set Is Forwarding on No Answer

The call handling field shows the set called (set initiating the forward), then the forwarding destination and its number. It also gives the status of the set to which the called set is forwarded:



The attendant can use:

- The  key to ring the set.
- The  key to release the call.
- The **Forward** function key to reserve the forwarding destination

*Note:*

*The attendant can then either ring the forwarding destination or use the **Override** (to return to the initial destination) or **Text Mail** (to send a text message to the forwarding destination) function keys.*

- The **Call Back** function key to activate a call back request
- The **Text Mail** function key to leave a text message




## 3.5 External Calls

Dial the trunk group seize prefix: the call handling field displays the name of the trunk group. Then dial the number of the external party.

Once the length of the number is recognized by the system, the trunk is reserved.



Use:




- The  key to send the dialing (when the length of the number is not recognized by the system).
- The  key to release the call and seize the same trunk again (to make another external call).
- The  key to release the call.


### 3.6 Answering Calls

When a call is presented on the console, it is indicated by:

- A ringing (depending on the system configuration)
- The lighting of the LEDs on the  and/or  line seize keys
- The appearance of an icon in the call counters (see the [Call Counters](#) on page 18)

The call handling field gives information on the nature (or even the party) for this call (see the [Call Handling Fields](#) on page 19).

To answer a call when it arrives, press the  key.

To release the call, press the  key.

#### 3.6.1 Selecting the Answer Type: Automatic or Manual

This operating mode is used to automatically connect the console to any incoming call or call on hold.

1. In the **Extension** menu, select the **Guide mode** option, or press F11 on the keyboard.
2. Double-click on Auto answer, or click on Auto answer and then press Enter on the keyboard.




3. Select **Enable** to activate automatic answering of incoming calls by the console.

Select **Disable** to manually answer calls.

4. Select **Apply** to save the changes.
5. Click on **Close** to close the window.



### 3.6.2 Choosing which Call to Answer First

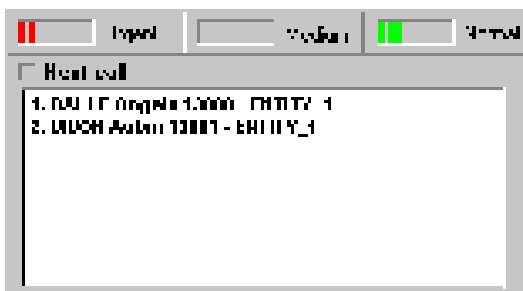All incoming calls are displayed in the call handling field. When several calls are presented, it is possible to select a specific call to answer first.



The call can be selected from any of the lists given in the call handling fields.

If the list cannot be seen on the screen, do one of the following:

- Press Shift and the  key simultaneously to display the list of incoming calls.
- Press Shift and the  key simultaneously to display the list of calls on hold.

*Note:*

*The list of calls on hold is displayed according to the system configuration.*


By default, the first call is selected. If necessary, use the **Page Up** and **Page Down** keys to display the call to be answered as a priority.

To answer this call, double-click on it or use the keyboard as follows:



1. Select the call.
2. Press Enter, or press the key corresponding to the number of the call in the list.

### 3.6.3 Answering an Internal Call

Proceed as in [Answering Calls](#) on page 33.

If a call is for the attention of an attendant group (when several attendants handle calls on the same system), the  key lights up.

To answer this call, do one of the following:

- Press the  key (which allows you to answer group calls as a priority).
- Press the  key.


### 3.6.4 Answering an External Call



Proceed as in [Answering Calls](#) on page 33.

### 3.6.5 The Attendant Does not Answer Immediately

If the attendant does not answer immediately, the call changes to medium, then to urgent (see the [Call Counters](#) on page 18).

The console signals this urgent call on hold by:


- A ringing on the attendant console
- Lighting up the LED of the  line seize key
- Displaying **Call on Hold** in the next calls field
- Increasing the value on the counter

If the attendant still does not answer, they are considered by the system to be absent. The  icon is replaced by the  icon on the status bar.


Incoming calls are then handled as if the console were in night mode.

To bring the console back into service, proceed as in [Implementing the Console \(Status\)](#) on page 26.

### 3.7 Holding a Call

Use the  key to place a call on hold. The call counter is automatically increased. The user hears the hold music or the corresponding tone.


If the attendant console is not in conversation and the call is not taken before the end of the timer, ringing is activated to indicate that the call is returned. The call waiting counter changes to Urgent.

To return to the first call placed on hold, press the  key.

To return to another call placed on hold, proceed as in [Choosing which Call to Answer First](#) on page 34.

### 3.8 Redial Function: Redialing a Number

The Redial function is used to redial a previously dialed number.


1. In the **Attendant** menu, select the **Redial** option or press the  key.
2. In the list that displays, select one of the last ten called parties.
3. Double-click on the name or click on **Redial** to dial the number.

### 3.9 Consultation Call




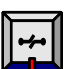
The consultation call is activated when a console is already involved with a first call.

Dial a number using the numeric keypad on the keyboard or use another method (see [Methods for Calling a Number](#) on page 26) to call a second party.

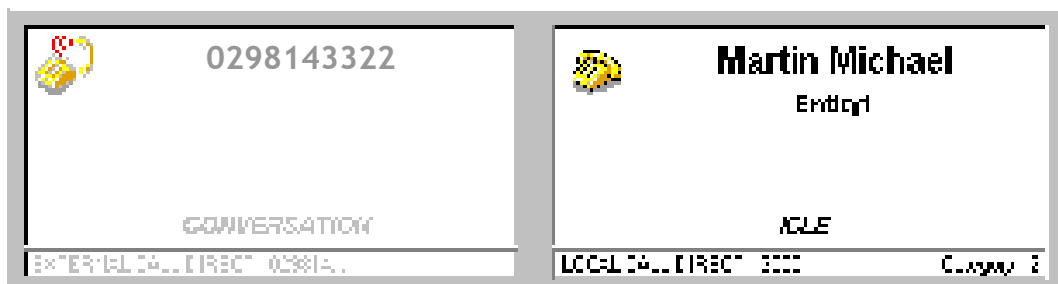The first call is in conversation. The second call (if it is an internal call) is reserved (see [Reserving \(locking\) an Internal User Set \(Attendant Control\)](#) on page 29).



Use the following keys:



-  To call the second party
-  To cancel the consultation call and return to the main call
-  To transfer the main call to the second call
-  To release the call in progress and the reservation of the second party (if internal)

At the bottom of the screen, use the following keys:

- |                  |   |
|------------------|---|
| <b>Call Back</b> | To activate a call back request on the second party's set |
| <b>Text Mail</b> | To leave a text message on the second party's set.        |

### 3.10 Broker Call

The broker call is used to move rapidly from one party to another during a consultation call.

1. Press the  key. The first party is placed on hold. The second is in conversation with the console.
2. Press the  key again to place the second party on hold. The first party is in conversation with the console.


This operation can be repeated as often as necessary.



### 3.11 Barge-In

Barge-in (or intrusion) allows the attendant to interrupt a conversation between two users.

After dialing, the console indicates that the user is busy.



At the bottom of the screen, the  **Break In** function key is used to barge into a conversation. Press this key, or the corresponding S key on the keyboard.

The  **Break In** key becomes  **Break In**. The two users are informed of the presence of the attendant by a beep.

To end this barge-in, press the  **Break In** key or the corresponding S key on the keyboard.

## 3.12 Call Transfer (Routing)

The console is in conversation with a user (internal or external user). To transfer a call to a user, use the consultation call function (see [Consultation Call](#) on page 35).

*Note:*

*For an external call made by the attendant and transferred to an internal set, the charge units are charged to the attendant console when it is the last set to be involved in the call (in the case of no answer to a transfer, for example).*


You can then either:

- Directly transfer the call (transfer without presentation)
- Orally present the call to the second user before the transfer (transfer with presentation)

### 3.12.1 Selecting the Transfer Type: Automatic or Manual

Automatic transfer is used to transfer a call to a free user immediately after the dialing by the user, without the need for any further action.

1. In the **Extension** menu, select the **Guide mode** option, or press F11 on the keyboard.
2. Double-click on Auto transfer, or click on Auto transfer and then press Enter on the keyboard.

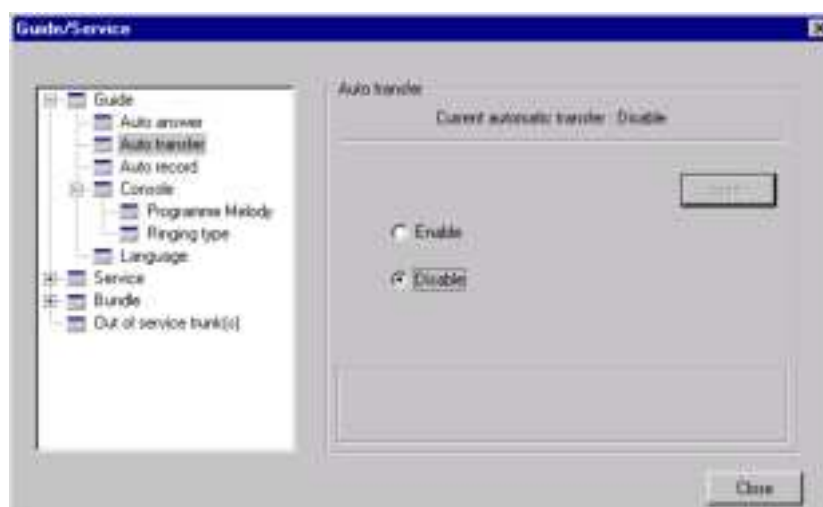

3. Select **Enable** to activate the automatic transfer.

Select **Disable** to deactivate the automatic transfer.

4. Select **Apply** to save the changes.


5. Click on **Close** to close the window.

If the console is configured to automatically transfer calls, a specific call in progress can be transferred manually:

1. In conversation with the first party, click **✗ Auto Forward** (or press the corresponding S key on the keyboard).
2. Dial the number of the second party.
3. Trigger the dialing.

4. Present the call before pressing the  key.

### 3.12.2 Manual Transfer without Presentation

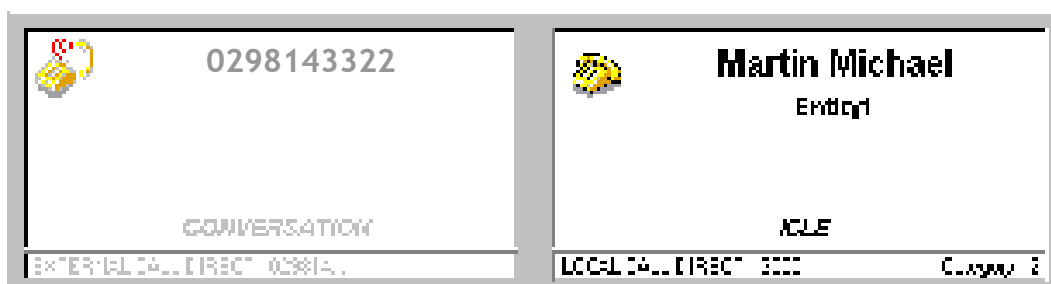


Press the  key. The two parties are in conversation and the attendant console is released.

This type of transfer can be carried out on a free or a busy set. If the set receiving the transfer does not take the call after a certain time, this call is directed back to the attendant console.


### 3.12.3 Transfer to a Call Put on Hold

As of OmniPCX Enterprise R11.0 and release 5.3.5 of the application, a call, whether outgoing or incoming, can be transferred to a call put on hold by the attendant.

When in conversation with a party, a **Call on hold** can be selected by the attendant.

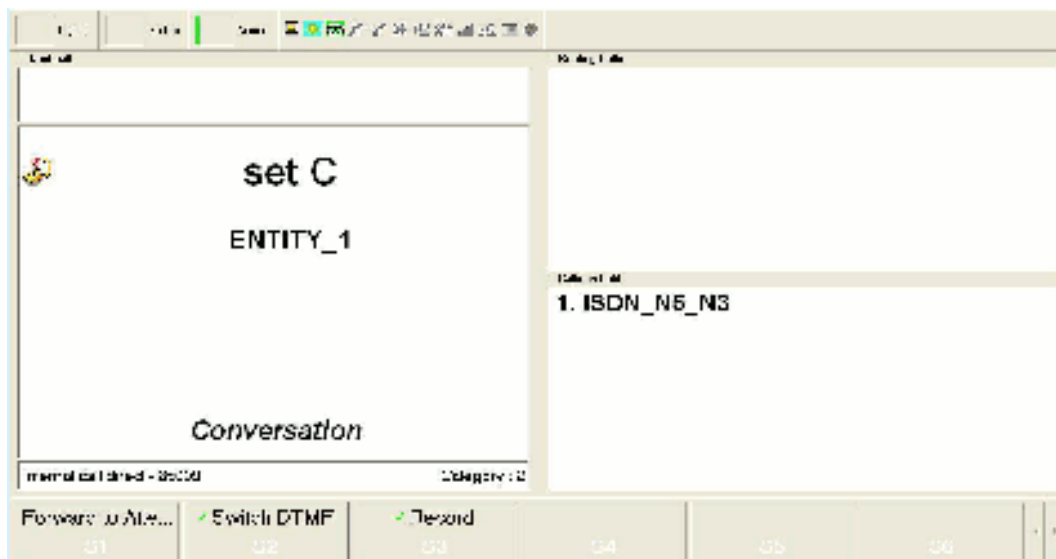

If a call on hold is selected, all the operations detailed: [Consultation Call](#) on page 35 are available.

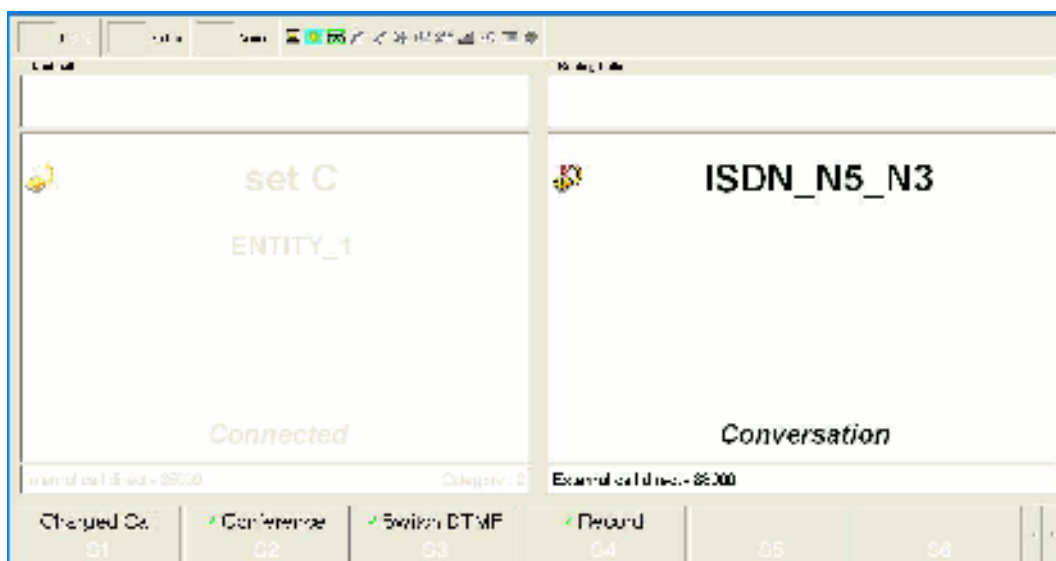

Press the  key to place the call back on hold.

*Reminder:*

*In a standard consultation call, press this key to release the call.*

This type of transfer is not available for camped-on, barged-in and reserved call on a set in the **do not disturb** state.

### 3.13 Transfer to a Meet Me Conference

The attendant (who cannot take part in a programmed conference) can add a party if the conference circuit is not saturated. The attendant can also reserve a conference circuit to add different parties (up to 29) to this Meet Me conference (also called an N party conference).

During these conference transfer operations, the attendant can no longer answer internal or external calls. However, the normal and urgent call waiting counters are updated by incoming calls.

If an external party is alone in the conference, they are forwarded to the attendant console after a timer. However, if another party joins the conference, this timer is canceled and the conference begins.

### 3.13.1 Adding the First Party

In conversation:

1. Click the **MeetMeCf** button (or press the corresponding S key on the keyboard).
2. Enter the code assigned to the conference. The first participant is connected. All the time this participant is alone, the hold music or the corresponding tone is heard.

### 3.13.2 Adding other Participants

With the conference circuit still reserved, dial the number of the following participant in consultation call mode and activate this call.

When the user answers, press the **CfProg** key to connect them to the conference.

Repeat this operation for the following participants.

### 3.13.3 Adding Participants into a Conference in Progress


To add other participants into a conference in progress, proceed as in [Adding the First Party](#) on page 40.

## 3.14 Text Messaging

The attendant console can send text messages to all authorized internal sets equipped with an alphanumeric keyboard.

To send a text message:

1. Dial the internal set number. The set is reserved (see [Reserving \(locking\) an Internal User Set \(Attendant Control\)](#) on page 29).
2. Press the **Text Mail** function key (or press the corresponding S key on the keyboard).

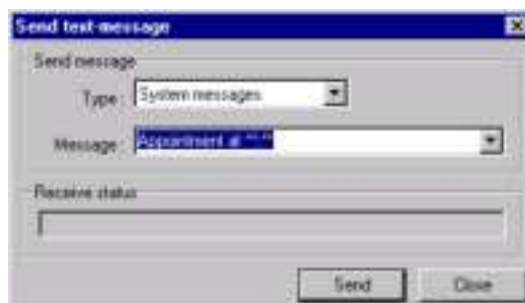

3. In the **Type** field, select **System messages** to send a pre-recorded message from the Alcatel-Lucent OmniPCX, or select **Attendant text-messages** to send a message programmed on the console (see the [Creating text messages in advance](#) on page 54).
4. Select the message to be sent, or complete the message of your choice using the keyboard. To send a message other than a pre-programmed one, enter the message directly in place of the displayed message.



*Note:*

*The message should not exceed 127 characters.*

**5.** Click on **Send**.

**6.** The **Receive status** field indicates whether the message has been sent correctly.

## **4.1 Overview**

This chapter details:


- The additional functions offered on the S keys (from the window and the USB keyboard)
- The operation of the keys pre-programmed by the system administrator

## **4.2 S Keys**

During call handling, additional functions (presented on the S keys) can be used for the following operations:

*Note:*



*The  keys are used to change page.*

### **4.2.1 Chained Call**

Routing with chained release.

Routing with chained release allows the attendant to transfer an external call to an internal set. The external party is rerouted to the attendant set as soon as the internal user has on-hooked.

The same call can therefore be routed to several sets in succession.

### **4.2.2 Charged Call**

Routing with charged release.

During the routing of an external outgoing call to an internal user, the charged release activates the call back to the attendant set when the internal set on-hooks. Answering the call back displays the identity of the set and the number of charge units charged to this set.

### **4.2.3 Release Ctrl**

Routing with release control.

During the routing of an external call to a busy internal set, the attendant can put the call on hold with release control. When the internal user on-hooks, their set is not rung, but the external call returns to the attendant set. The attendant can then route it to the called user.

### **4.2.4 Frwrd Attnd**

Forwarding between attendants.

The attendant can forward an internal or external call to another attendant (or attendant group) whose set is in service and available. The attendant can thus successively route the same call to several user sets.

### **4.2.5 DTMF**

Voice frequency/DTMF.

Also called transparent dialing, or over dialing (DTMF), this function is used to resend additional dialing to the same party on the line.

#### 4.2.6 Record

Records the current conversation.

To end recording, press the **✖ Record** key again.

#### 4.2.7 Rotary

Sends decimal rotary dialing to send a number to the current party.

#### 4.2.8 Flash

Sends a calibrated pulse, also called cut-off or flashing.

This operation is used to activate a service for the recipient of a call (to another PCX or any other flash-compatible communication system). This is used to:

- Send additional numbers
- Call back a service (a remote attendant, for example)

#### 4.2.9 Auto Forward

Deletes automatic transfer for a specific call (see the [Selecting the Transfer Type: Automatic or Manual](#) on page 37).

#### 4.2.10 Malicious

Malicious call (not available in the USA).

Indicates a malicious call, to the system administrator for an internal call, or to the telephone operator for external calls.

*Note:*

*For external calls to be indicated as malicious, you must have a subscription for this service with the telephone operator.*

### 4.3 Programmable Keys

The programmable keys can be programmed by the attendant (see the [Programmable keys](#) on page 55). These keys can also be pre-programmed by the system administrator.


*Note:*

*All keys presented here do not necessarily appear on a console. Contact the system administrator for an additional configuration or further information.*

To find out the function of the pre-programmed keys, right-click in the Programmable keys window (see the [Programmable Keys](#) on page 17).

This dialog box is used to select a key from the list of programmable keys, to program the associated type of element, and to give comments.

*Example:*

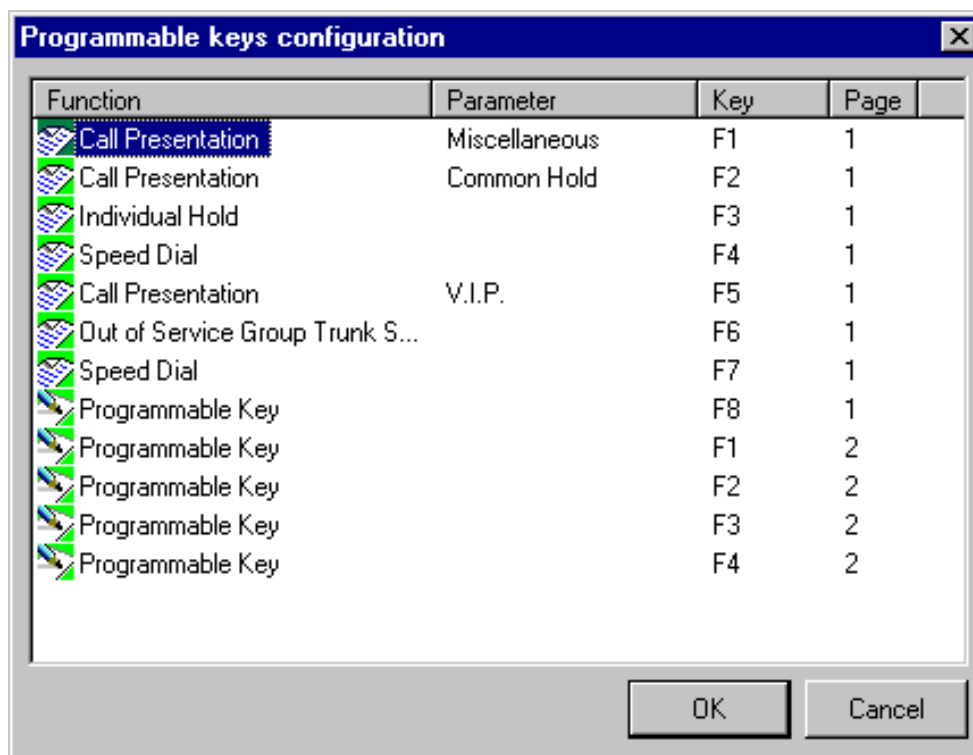

### 4.3.1 Call Presentation

This feature is used to assign the waiting queue operating mode. One or more traffic flows can be associated with one or more keys. By pressing a key, the attendant takes the waiting call with the highest priority from the traffic flow(s) served by the key.

Several presentation keys can be configured by the system administrator to present only the following calls:

- Non DDI entities (trunk group call all entities)
- Public entities (public DDI call all entities)
- Private entities (private DDI/internal call, all entities)
- Deb DDI entities (non answered DDI call all entities)
- Internal calls (private network)
- External calls (public network)
- VIP
- VIP2
- Call back (attendant)
- Transfer between attendants
- Other (misc.)
- General hold
- Chained call
- Charged release
- Individual call

Key 1 is pre-programmed by default as a call presentation (Miscellaneous) key. This cannot be modified. This allows the attendant to take the call with the highest priority from those on hold resulting from traffic flow(s) indicating an external party (external call, call back, return from chaining, etc.).

### 4.3.2 Directory No Supervision

Press the key to lock the supervised internal set.

The attendant can configure a supervision icon (see the [Busy Lamp Field](#) on page 15) so that this icon shows the status of the supervised set in real time (see the [Supervision icons](#) on page 56).

### 4.3.3 Speed Dialing Number

Press the key to call the corresponding number.

The attendant can also configure a key with a speed dialing number.

### 4.3.4 Individual Routing

Individual routing allows the attendant to route an external (supervised) call without placing it in the queue.

### 4.3.5 Network/Network Transfer

This feature is used to inter-connect two external parties via the system, with the possibility of releasing the connection.

Following an incoming call, the attendant makes an outgoing call to a party and is in conversation. Pressing the key connects the two trunks and supervision is activated.

Pressing the key again allows the attendant to barge in. Pressing the key again exits the barge-in and restarts supervision.

### 4.3.6 Trunk Group Supervision

This function allows the attendant to monitor the occupation level of a trunk group. If there are still trunks free, pressing this key corresponds to an ordinary seizure without dialing of an external trunk from this supervised trunk group.

The attendant can configure a supervision icon (see the [Supervision icons](#) on page 56) so that this icon shows the status of the supervised trunk group in real time.

### 4.3.7 Out of Service Trunk Supervision

This feature warns the attendant of a trunk malfunction (no tone on seizure). When this key is pressed, the display shows the number of the defective termination(s).

The termination can be isolated from the trunk group (see the [Decommissioning a defective external line](#) on page 65).

The attendant can configure a supervision icon (see the [Supervision icons](#) on page 56) so that this icon shows the status of the supervised trunk group in real time.

### 4.3.8 Individual Hold

Individual hold puts an external outgoing or incoming party on hold on a specific circuit. Pressing the key connects the party to this individual circuit connected to the hold music.

Several keys can be programmed for individual hold, according to the size of the system.

The party can only be retrieved from the idle state. If the attendant console switches to idle mode, calls on hold are redistributed after a timer.

#### **4.3.9 Transfer with Privilege**


This feature lets the attendant transfer an external outgoing trunk to a user set if the corresponding direct seize prefix is programmed on this key. The user will then dial the external party number as a call in direct seize.

## Management from the attendant console

### 5.1 Secret code of the set


The system administrator can use a secret code to authorize, prohibit, or control access to several facilities (including bringing the set into service: see the [Implementing the Console \(Status\)](#) on page 26).

The secret code of the console can only be modified by the system administrator.

Certain functions are only accessible after entering the code for the console. The  icon indicates the functions which require this code.

Once the attendant requests access to the facility which the administrator has set to **Allowed with Attendant Code**, a window displays requesting the password.

A dialog box requests the input of the password. If it is correct, the function is automatically activated.

Inaccessible functions are indicated by the  icon.

### 5.2 Connection history

When the console of a PC is shared between several attendants, it may be helpful to check the history of the latest connections.

In the **Option** menu, select **Login history**.




The window shows the PC username and the start and end dates and times of the connections to a **4059** console session.

Click on **Close** to close the window.

### 5.3 Customizing user interface

The console interface can be configured (and checked). In the **Extension** menu, select the **Guide mode** option, or press F11 on the keyboard.

*Example:*

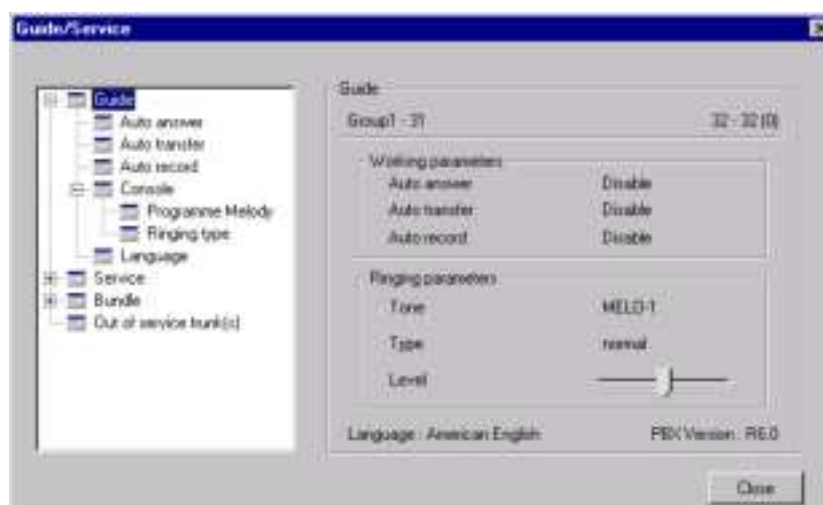


All modifications described here are taken into account immediately. The application does not have to be restarted.

### 5.3.1 Choice of Language

The system administrator chooses the languages available for the whole system. For the attendant to have access to a particular language, their choice must be one of the languages programmed by the administrator.

1. In the **Extension** menu, select the **Guide mode** option, or press F11 on the keyboard.
2. Double-click on **Language**, or click on **Language** and then press Enter on the keyboard.

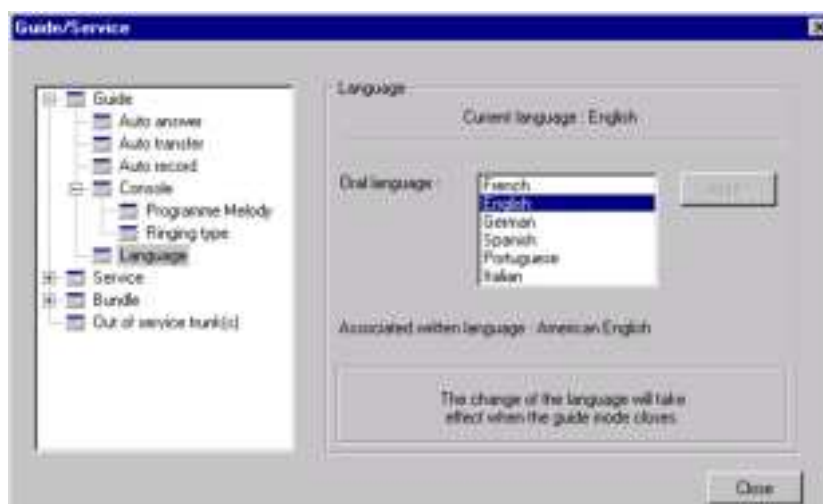

3. Select the language to use.
4. Select **Apply** to save the changes.
5. Click on **Close** to close the window.


### 5.3.2 Ringing - melody - volume level

The call ringing melody on the associated Alcatel-Lucent 8 series or Alcatel-Lucent 9 series set can be selected from 16 available melodies. Each melody has seven different volume levels.

1. In the **Extension** menu, select the **Guide mode** option, or press F11 on the keyboard.



2. Click on Console, then double-click on Program Melody, or click on Program Melody and then press Enter on the keyboard.

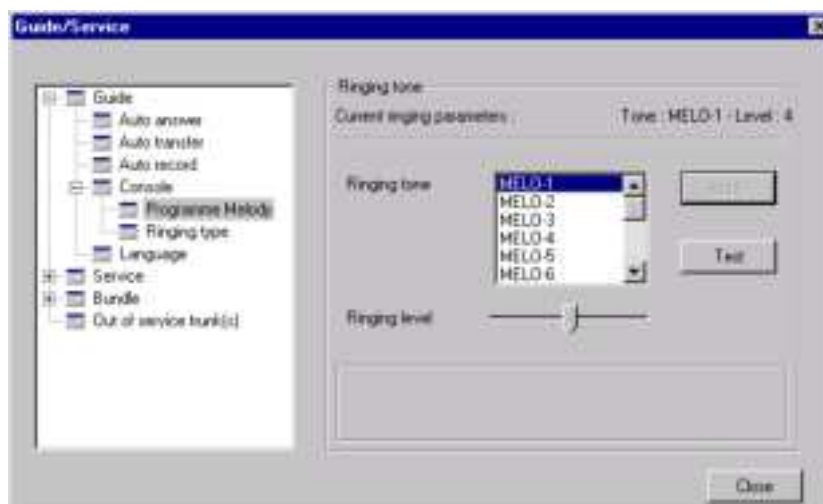


3. Select the melody to use.
4. Set the ringing level for the melody by moving the corresponding cursor.
5. To hear the reconfigured ringing, click on **Test**.
6. Select **Apply** to save the changes.
7. Click on **Close** to close the window.

### 5.3.3 Ringing - present or absent

By default, the ringing on the associated Alcatel-Lucent 8 series or Alcatel-Lucent 9 series set is programmed in normal mode: ringing starts on presentation of a call on the attendant set.

1. In the **Extension** menu, select the **Guide mode** option, or press F11 on the keyboard.
2. Click on Console, then double-click on Ringing type, or click on Ringing type and then press Enter on the keyboard.

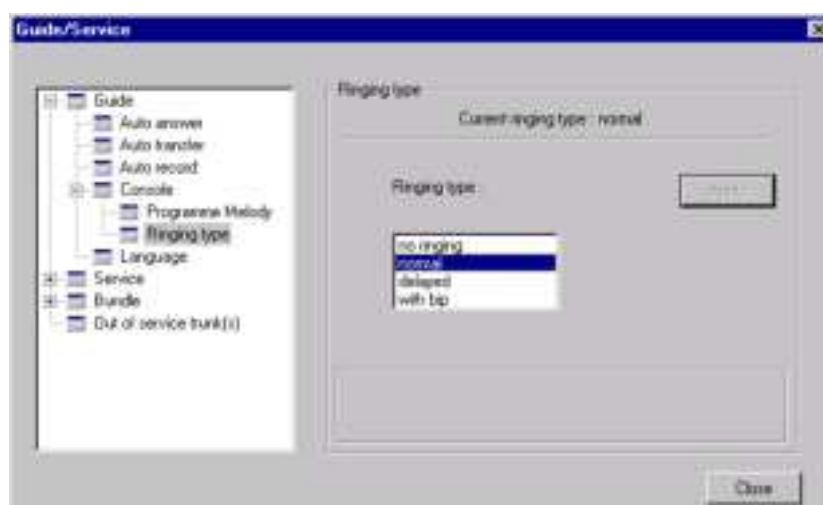


3. Select the ringing type to be used.
4. Select **Apply** to save the changes.

5. Click on **Close** to close the window.

### 5.3.4 Window appearance and display

- In the **View** menu, select **Configuration...**

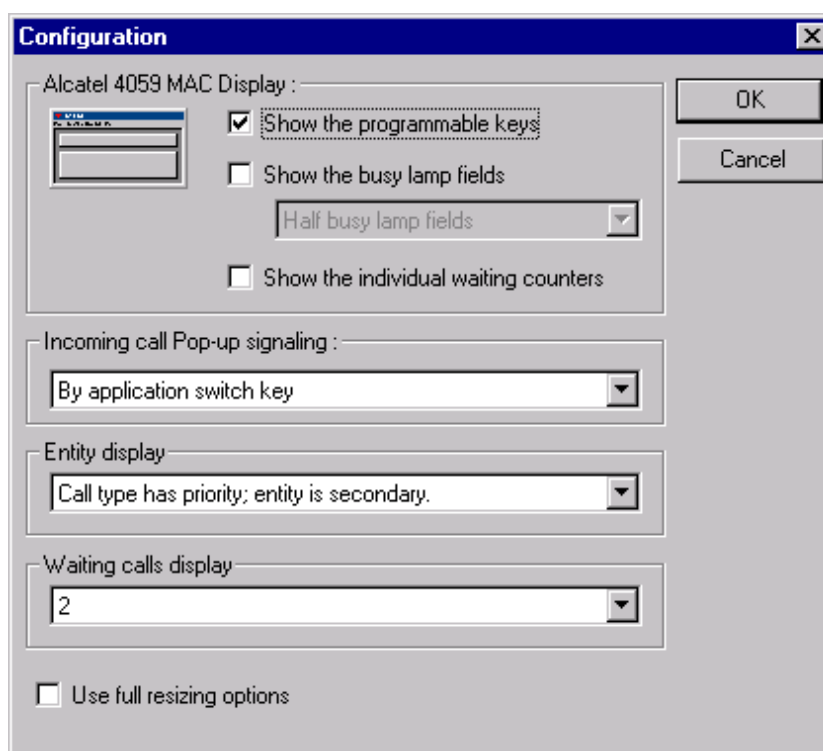

This dialog box offers the following options:

- Show or hide the programmable keys
- Show or hide the busy lamp fields (supervision icons)
- Define two sizes for the busy lamp fields when the programmable keys are not displayed
- Show or hide the individual call waiting counters
- Select the **4059** activation mode when the user is in another application
- Define the priority for call seizure when entity calls and other calls are received
- Modify the layout of the different windows on the screen when the **Use full resizing options** mode is selected.


Click on **OK** to save the changes and close the window.

### 5.3.5 Displaying the date and time

1. In the **View** menu, select **Status Bar**.
2. If the date and time were already displayed, they disappear. If they were not already displayed, they appear at the bottom of the window.

### 5.3.6 Background color

1. In the **View** menu, select **Background color...**

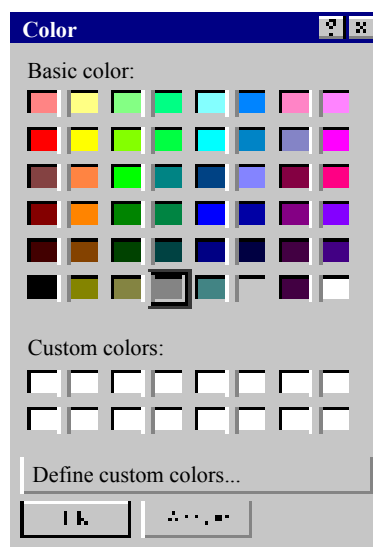

2. Select a basic color or click on **Define custom colors**.
3. Once you have chosen the color, click on **OK**.

## 5.4 Programming the individual directory

The attendant has an individual directory which can be configured, in addition to the system directory and any external directories.


This directory can contain up to 3000 entries.

*Note:*

*The individual directory is stored in the file Alcabc32/store.dat. If the console is uninstalled, it is deleted. Save it before any new installation.*

To access the console directory:

1. In the **Attendant** menu, select **Store and Redial**.

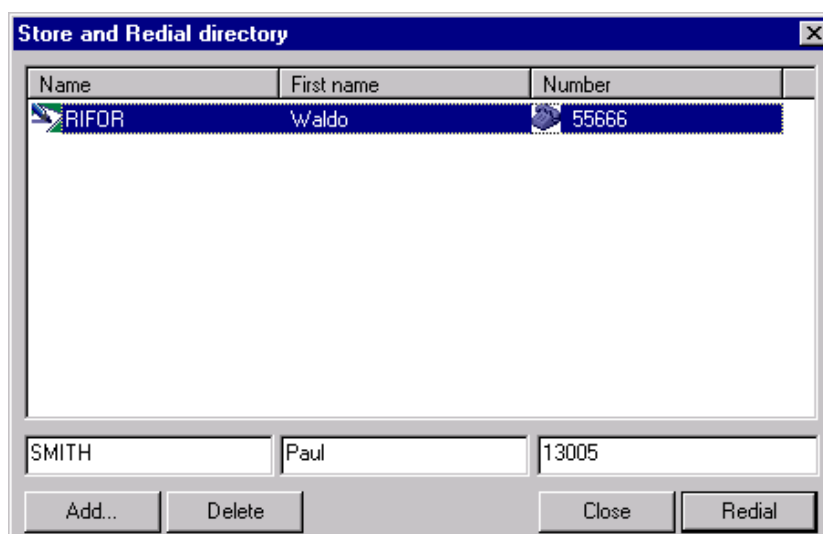

2. Enter the last names, first names, and the number of the directory entry to be stored.
3. Click on **Add**.

To modify the last name (or the first name or the number) of a directory entry, double-click on it to retype it using the keyboard.

Click on **Delete** to delete the selected name from the individual directory.

Click on **Redial** to dial the number of the selected user and close the window.

Click on **Close** to close the window without redialing a number.


## 5.5 Configuring the directories

### 5.5.1 Adding and configuring an external directory

One or more external directories (several ODBC directories and one LDAP directory) can be used by the attendant console.

For more information on configuring external directories, contact the system administrator.

In the **Options** menu, select **Directory**, then **Directory configuration**:

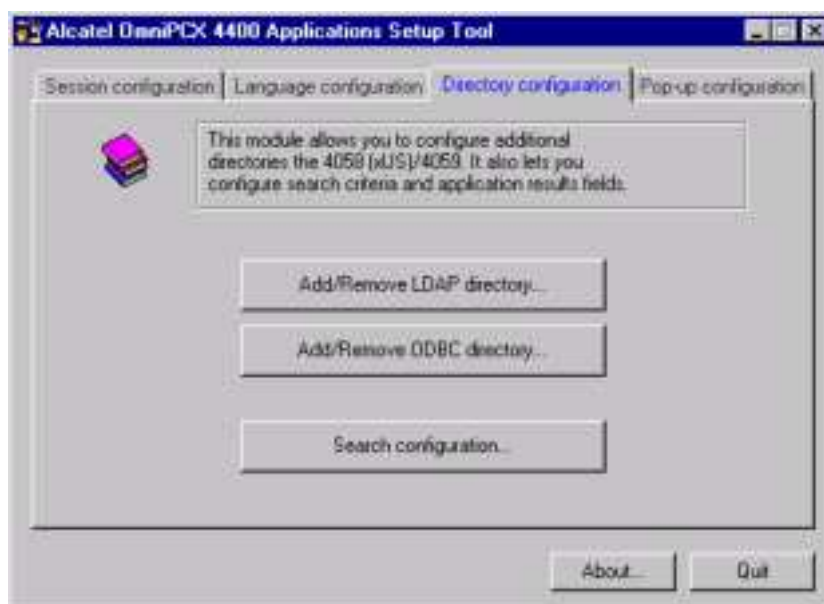


This dialog box allows you to program the different directory configuration parameters:

- **Add/Remove LDAP directory...**: To add, modify or remove an LDAP type directory
- **Add/Remove ODBC directory...**: To add, modify or remove an ODBC type directory
- **Search configuration...**: To modify the existing LDAP and/or ODBC directory parameters


### 5.5.2 Selecting directories to use for the dial by name option

This option is used to define the directories used when searching via the keyboard (see the [Call Via the Keyboard](#) on page 27).

In the **Options** menu, select **Directory**, then **Dial by name**:

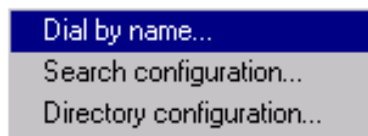

Click on **Dial by name...**:

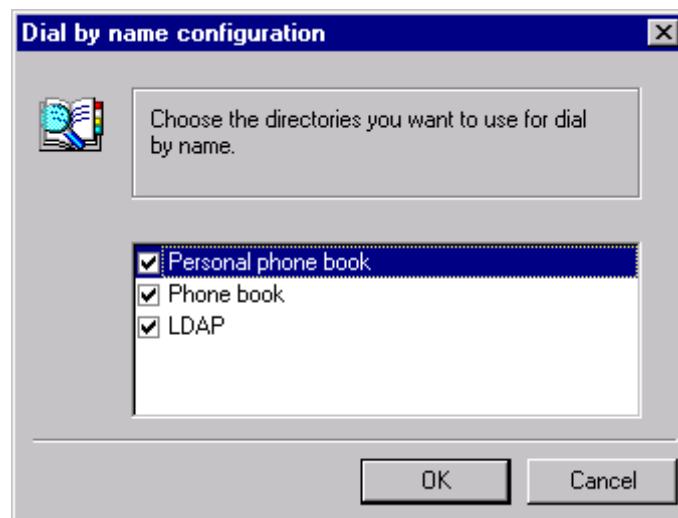

Check the check boxes to include or remove the directory for a search by name.

**OK**

Validates the selection

**Cancel**


Cancels the selection and closes the dialog box

## 5.6 Appointment reminder

From the attendant console, appointment reminders can be programmed on system internal sets.

At the specified time, the internal set is rung and a voice guide informs the user that this is an appointment reminder.

In the **Extension** menu, click on **Appointment reminder**:

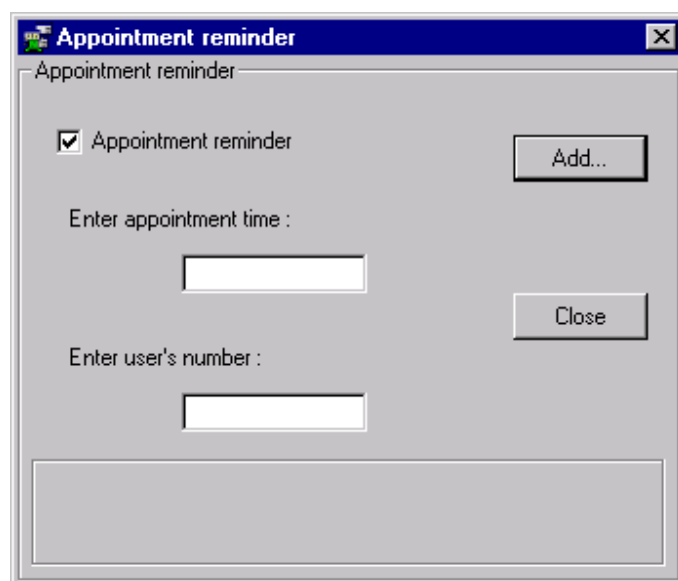

1. Enter the time in the format **HH:mm**.

The time format depends on computer configuration:

- If the computer uses format **hh:mm:ss AM/PM**, enter **hh:mm AM/PM**, e.g. **01:00 PM** or **01:00:00 PM**
- If the computer uses format **hh:mm:ss**, enter **hh:mm**, e.g. **13:00** or **13:00:00**

2. Enter the telephone number of the internal set to be called.
3. Click on **Add**.

If no appointment is already programmed for this user, a dialog box confirms that the appointment has been programmed. Otherwise, a dialog box indicates that an appointment is already programmed.

To delete an appointment programmed on the console:

1. Uncheck the Appointment reminder box.
2. Enter the number of the internal set on which the appointment is to be deleted.
3. Click on **Delete**.
4. Click on **Close** to close the window.


## 5.7 Creating text messages in advance

The attendant can send text messages to internal users. A certain number of messages are stored by default in the system.

To send a text message, see the [Text Messaging](#) on page 40.

To create specific messages in advance and send them with a single click:

1. In the **Options** menu, select **Attendant text-messages**.

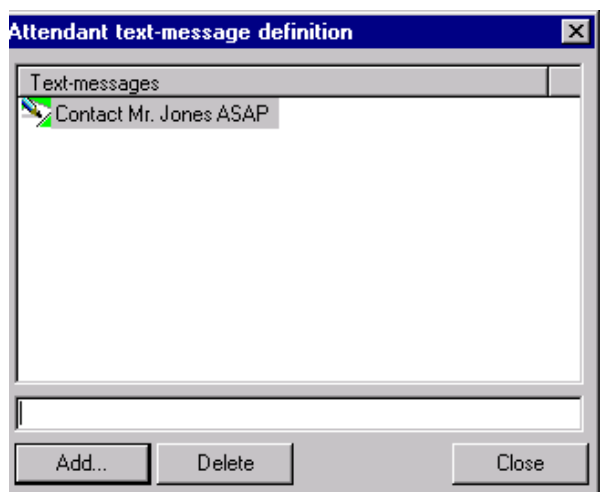

2. Enter up to 127 characters for a new message.

Click on **Add...** to add this message to the list.

Click on **Delete** to delete the selected message from the list.

Click on **Close** to save and close the window.

## 5.8 Assigning programmable keys and supervision icons


### 5.8.1 Programmable keys

The programmable keys (see the [Programmable Keys](#) on page 17) are programmed by the system administrator (see the [Programmable Keys](#) on page 43) and/or by the attendant.

The keys programmed by the administrator cannot be modified from the console.

In the **Option** menu, click on **Programmable keys** (or place the cursor in the programmable keys window, right-click, and select **Configuration**).

*Example:*

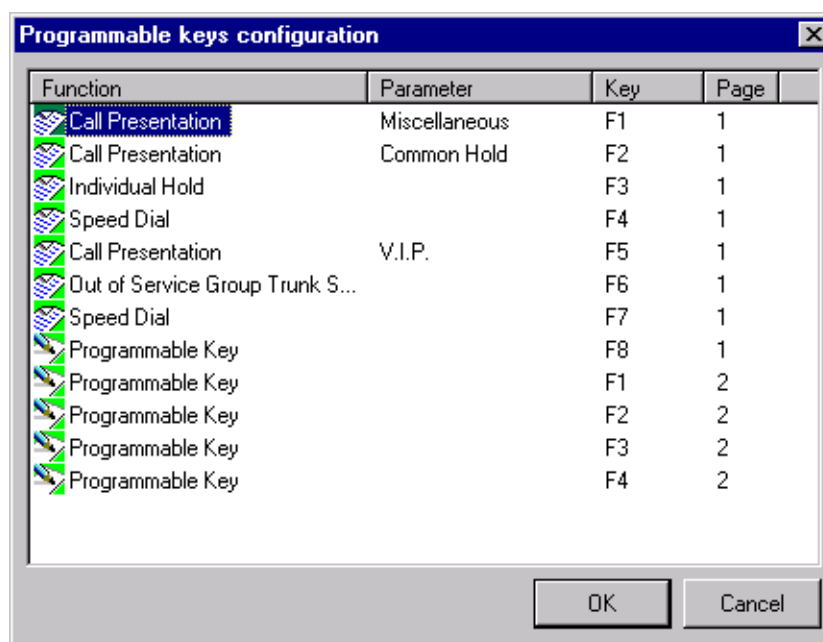

To modify the content of a programmable key:

1. Select the programmable key: a box at the bottom of the window allows you to assign a call number to it.
2. Enter the directory number to be dialed when this key is pressed.
3. Confirm the entry by clicking on **OK**.

If the system directory recognizes the number, the key displays the user's name.

To exit the menu, press **Cancel**.

### 5.8.2 Supervision icons


The supervision icons can be programmed from the 4059 console (the meaning of the icons is described in the [Busy Lamp Field](#) on page 15).

In operation other than the BLF application, up to eight icons can be programmed from the console.

In the **Option** menu, click on **Busy lamp field** (or place the cursor in the busy lamp field window, right-click, and select **Configuration**).

*Example:*



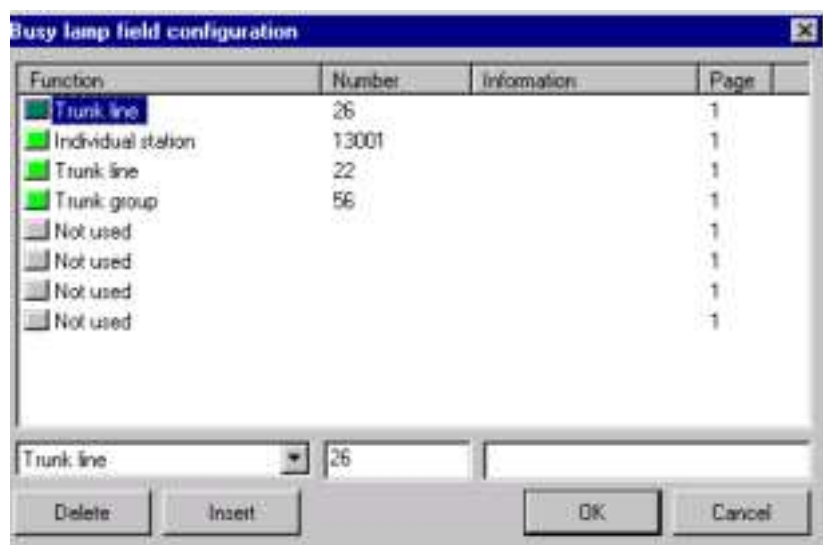

To create or modify the content of a supervision icon:

1. Select the icon to be created/modified: the fields at the bottom of the window are used to configure this icon.
2. Select the type of supervision (individual station, trunk line, trunk group). Free indicates that the icon has not yet been configured.
3. In the next field, enter the number of the object to be supervised.

The third field (optional) is used to enter additional information. This information, if entered, displays in place of the number entered in the second field.

4. For a new icon, click on **Insert**. Otherwise click on **OK**.


To delete an existing icon, select it from the list, then click on **Delete**.

To exit the menu, click on **Cancel**.

## 5.9 Reserving a trunk group

The attendant console can reserve one or more (analog) trunk groups so as to always have an outside access.

In the **Extension** menu, select **Service mode** (or press the F10 key). Then double-click on Trunk groups.

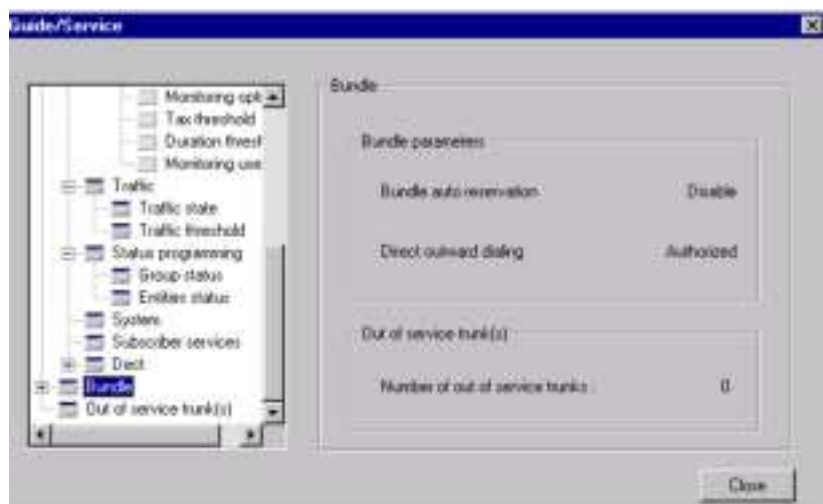

This option authorizes:

- The reservation of one or more trunk groups by the console (to allow the attendant to call an outside line when nearly all the available lines are being used by internal sets)
- The automatic reservation of a trunk group (if a trunk group is out of service, then brought back into service, the reservation remains active)
- The direct seizing of a trunk group (which prohibits the seizing of trunk groups by internal users)

### 5.9.1 Reserving trunk groups

This window displays all trunk groups. Each trunk group in the list is described by:

- A reservation indicator (an icon if reserved, otherwise blank)
- The trunk group name
- An automatic reservation indicator ("yes" if the bundle can be auto reserved, otherwise blank)

When the user selects a trunk group, the name of the button changes according to the reservation status of the trunk group:

- If the button says **Free**, the selected trunk group is reserved.
- If the button says **Reserved**, the selected trunk group is free.

To release or reserve a trunk group, the attendant must select the trunk group and press the **Free** or **Reserved** button. The change is made automatically.

### 5.9.2 Trunk group auto reservation

This window is used to enable or disable the automatic reservation. If enabled, the attendant reserves all system trunk groups that have been declared as automatically reservable.

Click on **Apply**.

### 5.9.3 Direct Seize

This window is used to authorize or refuse public network access for all sets on the system.

Click on **Apply**.

## 5.10 Changing the status of the attendant group sets or the entity

The system administrator configures the call routings for the whole system in one of four states (night, day, Forward1, Forward2).


The attendant console is used to change:

- The status of the attendant group to which it belongs
- The status of one or more entities in the system

In the **Extension** menu, select **Service mode** (or press the F10 key). Select Status programming.

### 5.10.1 Programming the attendant group status


In the Status programming option, select Group status.

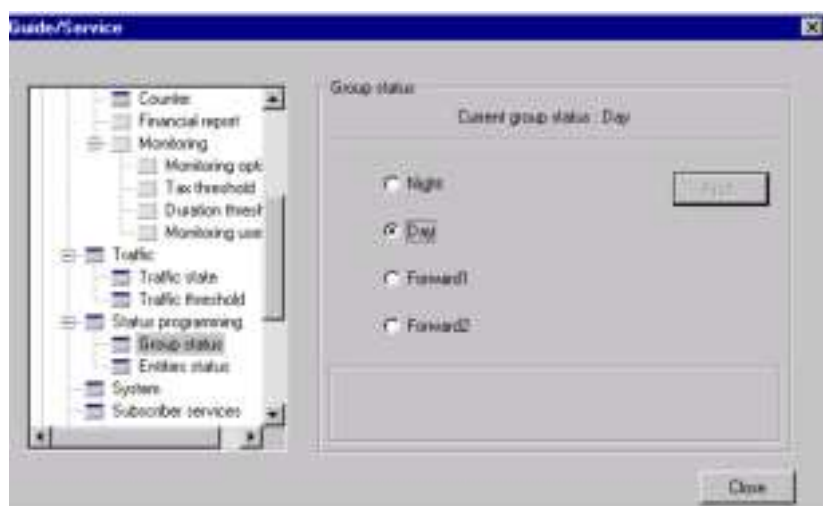

1. Select one of the available options.
2. Click on **Apply**.
3. Click on **Close** to close the window.

### 5.10.2 Programming the entity status

In the Status programming option, select Entities status.

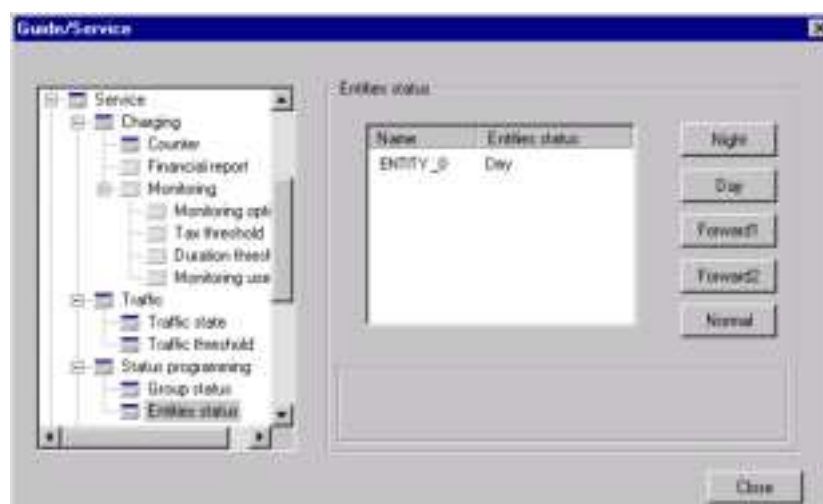

1. Select the entity to be modified.
2. Select one of the available options.

*Note:*

*The Normal option assigns the entity the same status as the attendant group.*

3. Click on **Apply**.
4. Click on **Close** to close the window.

## 5.11 Overflow between attendants (mutual aid)

The overflow between attendants function allows other attendants to handle calls when there are too many on one console.

The **4059** console allows you to enable this function and to choose how many calls there must be on a console before overflow to the other attendants takes place.

In the **Extension** menu, select **Service mode** (or press the F10 key). Select Traffic.

### 5.11.1 Enabling overflow between attendants


In the Traffic option, select Traffic state.



1. Select **Enable** to implement overflow between attendants.  
Select **Disable** to stop overflow to other attendants.
2. Click on **Apply**.
3. Click on **Close** to close the window.

### 5.11.2 Defining the overflow threshold


In the Traffic option, select Traffic threshold.

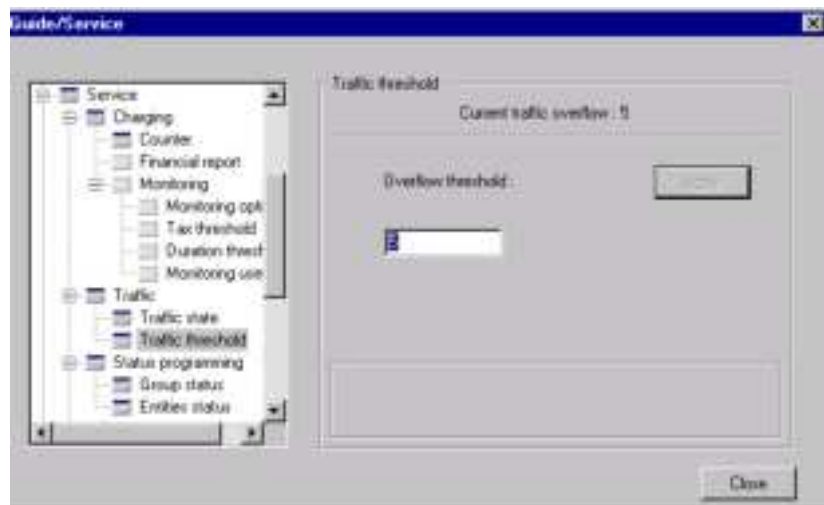

1. In the Overflow threshold field, enter the number of calls there must be on a console before overflow to other attendants takes place.
2. Click on **Apply**.
3. Click on **Close** to close the window.

## 5.12 Managing users

Double-clicking on this function opens the following window:

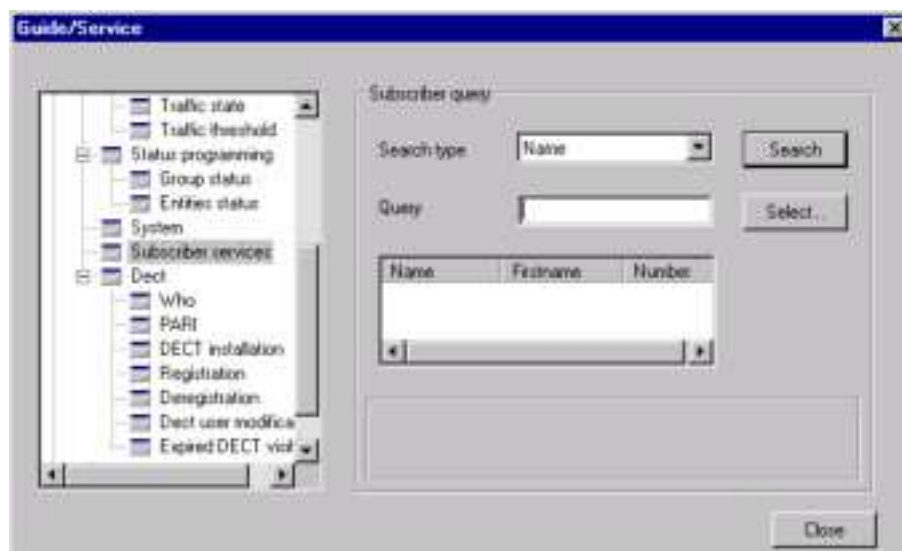

1. Select the search type.
2. Enter the information to search for.
3. Click on **Search**.  
A list of users displays.
4. Select a user.
5. Click on **Select....**



The name and the number of the user appear at the top right.

6. Click on one of the tabs to access the corresponding service.

The modifications made to each service take effect once the attendant selects a new service or clicks on **Apply**.

- **Info**: displays information on the user, their cost center, operating class of service (category), metering (charging) parameters, etc.
- **DND**: enables the Do Not Disturb function on the user's set.
- **Passwd**: resets the password on the user's set.
- **Forward**: used to program certain forwards on the user's set:
  - **no forwarding**
  - **unconditional forwarding**
  - **forwarding on busy**
  - **forwarding on no answer**
  - **forwarding on busy and no answer**

*Note:*

*The main line forwarding and secondary line forwarding functions are only available for multiline sets.*

Enter the number of the set to which calls are to be forwarded.

To delete a forward, choose **No forwarding** in the list or press **Reset**.

Click on **Apply** to store the changes.

Click on **Close** to close the window.

### 5.13 Metering (charging)

Configuration of the tracking of costs is the system administrator's responsibility. On the **4059** console, the metering (charging) function is used to configure the charge counters for the users, send a financial report, and monitor user calls.

In the **Extension** menu, select **Service mode** (or press the F10 key). Select **Charging**.


*Note:*

*When the call has been transmitted via a QSIG network, the application can only display the number of charging units, not the actual call cost.*

### 5.13.1 Counter

The counter is used to obtain call costs per set and per system node. Since this information is of a sensitive nature, it is advisable for the system administrator to limit access to it using a password.

Double-click on Counter:

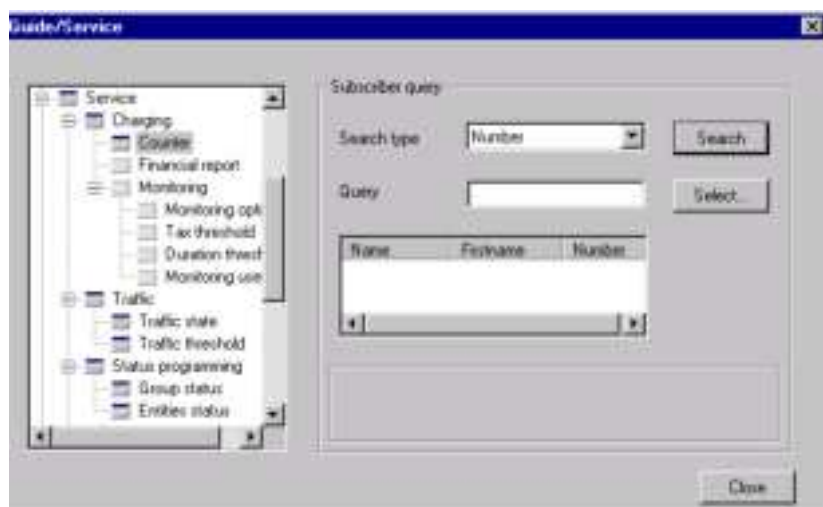

1. Select the search type (by name or by number).
2. Enter the information to search for (user name or number).
3. Click on **Search**.

A list of users displays.

4. Select a user.
5. Click on **Select...**
6. Once the information is obtained, click on:
  - **Reset** to reset the counters.
  - **Search** to return to the previous screen and carry out a new search.

### 5.13.2 Financial report

The financial report is used to search for and classify user metering (charging) data. Since this information is of a sensitive nature, it is advisable for the system administrator to limit access to it using a password.

Double-click on Financial report.

In the relevant fields, enter the start and end dates of the report to be created.


Click on **Print** to print the report.

### 5.13.3 Monitoring users

This function is used to create filters to monitor costs generated by certain sets. Monitoring can be carried out by user or by groups of users. Certain specific calls (exceeding a duration x or a cost y) can also be monitored.

### 5.13.3.1 Monitoring options

Double-click on Monitoring options.

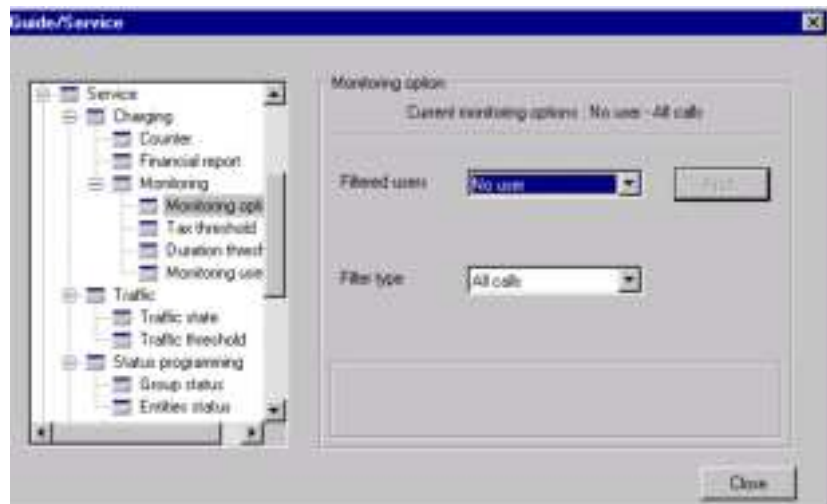

To put a filter in place, select:

- **No user:** no internal set is monitored.
- **All users:** all users are monitored.
- **Users in list:** users in the list defined by the attendant are monitored.

Then select:

- **By duration:** to monitor calls according to their duration.
- **By cost:** to monitor calls according to their cost.
- **By cost and duration:** to monitor calls according to their cost and duration.
- **All calls:** to monitor all calls.

Confirm your choices by pressing the **Apply** button.

### 5.13.3.2 Tax threshold

This function is only available if the filter defined in [Monitoring options](#) on page 64 is **By cost** or **By cost and duration**.



1. Enter the minimum value of the cost to take into account in the reports.



2. Click on **Apply**.

#### 5.13.3.3 Duration threshold

This function is only available if the filter defined in [Monitoring options](#) on page 64 is **By duration** or **By cost and duration**.



1. Enter the minimum value of the duration of calls to take into account in the metering (charging) reports.
2. Click on **Apply**.

## 5.14 Decommissioning a defective external line

In the **Extension** menu, select **Service mode** (or press the F10 key). Select Out of service trunk(s).




The list of out of service trunks displays.

The same window can be accessed via a programmable key, as long as the system administrator has programmed it.

### 5.15 Date - Time

In the **Extension** menu, select **Service mode** (or press the F10 key). Select **System**.

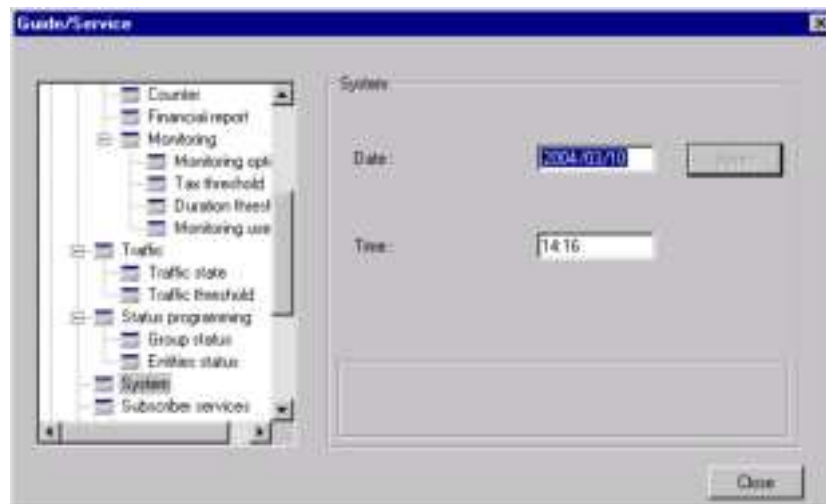

1. Modify the date and time used by the Alcatel-Lucent OmniPCX.
2. Click on **Apply**.
3. Click on **Close** to close the window.

### 5.16 Configuring DECT/PWT mobile (cell) phones

This function is used to display and configure the users of DECT/PWT mobile (cell) phones on the system. This function is obsolete.

