

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**TIGER**  
ELECTRONICS

**FurReal**friends.com  
Questions? Call 1-800-844-3733



Product and colors may vary.  
®\* and/or TM\* & © 2012 Hasbro. All Rights Reserved.  
TM & ® denote U.S. Trademarks. U.S. Pat. Nos.  
6811461, 7641535 & 7695341.

**FurReal**  
friends

AGES 4+



Pony colors  
may vary.

*Baby*  
**Butterscotch**  
My Magical Show Pony

CARE GUIDE



**x4** 1.5V C

**ALKALINE BATTERIES REQUIRED**  
**DEMO BATTERIES INCLUDED**

**NOTE:** Before playing with your pony, replace demo batteries with fresh 4 x 1.5V C size alkaline batteries.



The switch is currently in TRY ME position. Please slide to **ON** position to activate your toy's play features.

Your **BABY BUTTERSCOTCH** pony comes with a brush and toy carrot.




**NOTE:** Do not ride or sit on pony.

## About Your Pony

Your **BABY BUTTERSCOTCH** pony has 9 sensors that respond to touch and sound:

1. forehead (touch)
2. nose (touch)
3. mouth (press)
4. left cheek (touch)
5. right cheek (touch)
6. microphone (sound)
7. back (press button)
8. left side of body (touch)
9. right side of body (touch)

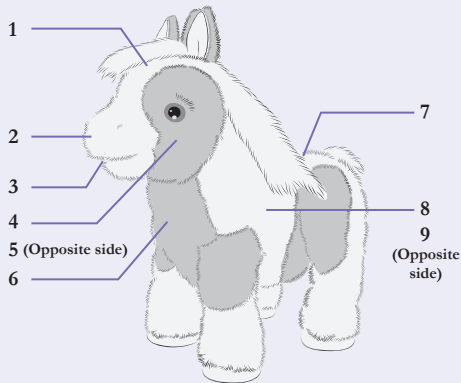


## Playing With Your Pony

To activate your **BABY BUTTERSCOTCH** pony, slide the **ON/OFF/TRY ME** switch to the **ON** position and press the button on her back. She will wake up and be ready to play with you!



- A. When you pet your **BABY BUTTERSCOTCH** pony on her muzzle, she will move her head toward your touch! She loves when you pet her, and will make cute pony sounds to say hello!
- B. When you cuddle with your pony, she will nuzzle her head right into you. Cuddling is her favorite thing!
- C. Just touch noses with your pony or pet her nose. She'll give you a sniff or maybe move her head to give you a sweet Pony Kiss! So cute!
- D. When you press her back, she will move her head and make real pony sounds!
- E. When you pet your pony's left or right side, she will move her head in that direction.
- F. When you speak to your pony, she will whinny to talk back to you! (If there is a lot of background noise, your pony may not respond.)
- G. If your **BABY BUTTERSCOTCH** pony is left alone for a while, she will move her head and whinny to get your attention! She will do this a few times then go into Sleep Mode if you do not pet or talk to her.

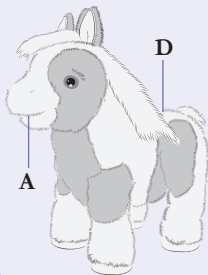


## Sleep Mode

After resting for a few minutes, your pony will go into "power save" mode. In this mode, she will sleep with her eyes open. If you want your pony to "sleep" with her eyes closed, just press and hold the button sensor on her back for approximately 5 – 10 seconds. When you want to play with your **BABY BUTTERSCOTCH** pony again, just press her back to "wake" her!

**NOTE:** When your pony is not in use, slide the **ON/OFF/TRY ME** switch to the **OFF** position to conserve battery life.

## Grooming Your Pony

Brush your **BABY BUTTERSCOTCH** pony with her special grooming brush to keep her coat and mane healthy and soft.

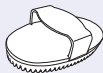

To clean your pony, gently brush her with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- To prevent staining, wipe off dirt immediately.
- Do not get wet; to remove stains, use only a slightly damp cloth.
- Do not use detergent or stain removers.
- If pony gets wet, remove batteries and let dry; once pony is completely dry, replace batteries.
- Do not throw or kick the pony.
- Do not leave pony in direct sunlight or near a heat source; high temperatures will destroy the mechanism.

## Feeding Your Pony

When you give your pony her carrot, she will move her mouth to chew and make crunching sounds.

**NOTE:** Never give real food to your pony.



## Posing Your Pony

Posing your **BABY BUTTERSCOTCH** pony is easy! Just move her hind legs forward and keep her front legs standing for a sitting pose; **or** move her front and hind legs forward to have her lie down.

**NOTE:** **Do not** move your pony's front or hind legs backward.



## Troubleshooting


- If your **BABY BUTTERSCOTCH** pony is turned **ON** but doesn't respond to your touch or sound, she might be taking a "nap." Just press her back to "wake" her up.
- If your **BABY BUTTERSCOTCH** pony doesn't whinny or snort when you talk to her, try speaking in a louder voice. You might also need to press the button on her back once to encourage her to "talk."
- If your **BABY BUTTERSCOTCH** pony still doesn't function properly, restart her by moving the **ON/OFF/TRY ME** switch to the **OFF** position for a few seconds, then back to the **ON** position and press the button on her back. If she doesn't move or make sounds after that, it may be time to change the batteries.

## To Replace Batteries

Phillips/cross head screwdriver (not included) needed to replace batteries.

1. Locate battery compartment on your pony's tummy.
2. Loosen screw on battery door.
3. Remove and discard old batteries.
4. Replace with fresh 4 x 1.5V C size alkaline batteries.
5. Replace door and tighten screw.

**NOTE:** When not in use, slide the **ON/OFF/TRY ME** switch to **OFF** to conserve battery life.

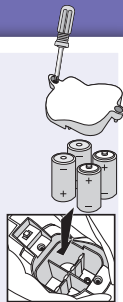

## IMPORTANT: BATTERY INFORMATION



### CAUTION:

1. **TO AVOID BATTERY LEAKAGE**
  - a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
  - b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
  - c. Remove exhausted or dead batteries from the product.
  - d. Remove batteries if product is not to be played with for a long time.
  - e. Do not short-circuit the supply terminals.
  - f. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**
2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.