

READ ME FIRST!



SKUs: 593539, 593546, 593621

PROPELLER

CHARGING SOCKET

SMART SENSOR

POWER SWITCH

DO'S AND DONT'S

- TURN SWITCH TO ON (I) POSITION
-
- MOVE THE SWITCH TO THE ON (I) POSITION.
- TAP
- LIGHT
-
-
- DO NOT TOUCH, WAIT 2 SECONDS
-
-

OR

- AFTER 1 MINUTE OF PLAY THE RED LIGHT WILL FLASH.
- USE A BOOK OR THICK, FLAT ITEM TO PRESS THE TIP OF THE PROPELLER.

CHARGING YOUR FLYER

- Before charging, wait 15 minutes or more to let battery cool down.
- Charge your flyer for 25-30 minutes, or until light turns off.
- You will get approx 4 minutes of play time per every charge.



1. TURN OFF FLYER.

2. PLUG CHARGING CABLE INTO THE FLYER AND A USB PORT.

3. UNPLUG THE CHARGING CABLE AFTER THE LIGHT TURNS OFF.

THIS TOY IS ONLY TO BE CONNECTED TO EQUIPMENT BEARING EITHER OF THE FOLLOWING SYMBOLS:

 OR 



0623-0-E/INT