

BASIC

	SD	HD
ABC - KTXS	12	212
CBS - KTAB	32	232
Circle	99	
Create	110	
CW - KTXS	52	
FOX - KXVA	15	215
HSN	65	265
NBC - KRBC	9	209
OETA	108	
PBS - KERA	8	
QVC	67	267
SRTV - Remote User Guide	1	
SRTV - Weather Central	100	
Telemundo - KTAB	93	
World Channel	109	

SANTA ROSA ULTRA

	SD	HD
A&E	70	270
Animal Planet	20	220
BET	69	269
Boomerang	22	
Bravo	53	253
Cartoon Network	11	
CBS Sports	83	283
CMT Music	49	249
CNBC	78	278
CNN	37	
CNN Headline News	38	
Cowboy Channel	51	251
Discovery	21	221
Discovery Life	43	243
Disney	16	216
Disney XD	17	217
E! Entertainment	71	271
ESPN	29	229
ESPN Classic	28	
ESPN2	30	230
ESPNU	27	
EWTV	77	
Food Network	66	266
Fox Business News	41	241
FX Movie Channel	82	282
Fox News	42	242
Fox Sports 1	36	236
Fox Sports SW	31	231
Freeform	19	219
FX	40	240
FXX	84	284
FYI	79	279
GAC	54	254
Game Show Network	59	259
Golf Channel	33	233
Hallmark	46	246
Hallmark Drama	91	245
Hallmark Movies & Mysteries	58	258
HGTV	61	261
History Channel	64	264
Investigation Discovery	89	289

	SD	HD
Lifetime	23	223
Lifetime Movie Network	56	291
Longhorn Channel	88	288
MSNBC	39	239
MTV	47	247
Nat Geo Wild	81	281
National Geographic	24	224
NBC Sports Network	25	225
NFL Network	55	255
Nickelodeon	13	213
Olympic Channel	74	
Outdoor Channel	34	234
OWN	90	290
Oxygen	57	257
Paramount Network	76	276
RFD TV	45	250
SEC Network	86	286
SEC Network Overflow	87	287
SyFy Channel	72	272
TBN	85	285
TBS	94	
The Weather Channel	60	
TLC	63	263
TNT	75	
Travel Channel	62	262
TV Land	26	226
USA	73	273
VH1	48	248
WGN	92	

PREMIUM

	SD	HD
HBO	150	
HBO 2	151	
HBO Comedy	148	
HBO Family	147	
HBO Latino	146	
HBO Signature	152	
HBO Zone	149	
STARZ	160	360
STARZ Cinema	163	363
STARZ Edge	161	361
STARZ ENCORE	153	353
STARZ ENCORE Action	154	354
STARZ ENCORE Black	158	358
STARZ ENCORE Classic	157	357
STARZ ENCORE Family	159	
STARZ ENCORE Suspense	156	356
STARZ ENCORE Westerns	155	
STARZ in Black	164	364
STARZ Kids & Family	162	362
TVN - Event TV	170	

MUSIC CHOICE

400 - 449



(888)-886-2217

ask@srcaccess.net

srcaccess.net

CONTROL YOUR REMOTE

TV SETUP AND SET TOP BOX SETUP



1. **TV, AUD, DVD, VCR, STB:** Use one remote to control multiple devices.
2. **POWER:** Turn on/off a selected device.
3. **SETUP:** Use for programming sequences of devices controlled by the remote.
4. **LIVE:** Return to watching live TV.
5. **LIST:** Display a list of recorded shows on your PVR/DVR set-top box.
6. **REW, PLAY, FFWD, STOP, PAUSE:** In STB mode, these control the DVR/PVR functions. In other modes, these can control a VCR, DVD Player or PVR.
7. **INFO:** Display the current channel and program information. Press again for more detail.
8. **MENU:** Displays applications including the configuration menu.
9. **ARROW KEYS/OK:** Navigate and select on screen choices.
10. **GUIDE:** Opens the Interactive Program Guide.
11. **EXIT:** Exit the current screen.
12. **DAY +/-:** Jump ahead or back one day in the Interactive Program Guide.
13. **PAGE +/-:** Page up or down in menu screens & Interactive Program Guide.
14. **RED, GREEN, YELLOW, BLUE:** Access additional features on your set-top box.
15. **CHANNEL +/-:** Changes to the next higher or lower channel.
16. **VOL +/-:** Raise or lower the volume.
17. **ON DEMAND:** Access video on demand services.
18. **MUTE:** Turn the sound off or on.
19. **FAV:** View your favorite channels.
20. **LAST:** Recall the last channel you were watching.
21. **NUMBER KEYS (0-9):** Directly select a channel.
22. **INPUT:** In TV control mode, would change the input of the device you are controlling.

** If available*

TV Setup

Follow each step to configure your remote.

1. Install batteries correctly
2. Turn on your TV
3. On remote control, press TV button
4. Press and hold SETUP until TV button blinks twice
5. Aim remote at TV and press 9 9 1 then press POWER
6. Press and release CH + (Channel up) button continuously until your TV turns off
7. **If you go past code you can press CH - (channel down) to go back*
8. Press SETUP button to lock in code

Set Top Box Setup

1. Press STB button
2. Press and hold SETUP until STB button blinks twice
3. Press 9 9 5 then press POWER, press TV, press POWER, then press STB
4. Press and hold SETUP until STB blinks twice
5. You have successfully programmed your new remote control

VERNON OFFICE
7110 US Highway 287 E
Vernon, TX 76384
(940) 886-2217
(888) 886-2217

HASKELL OFFICE
113 N Ave. D
Haskell, TX 79521
(940) 863-1125
(888) 863-1125

SEYMOUR OFFICE
310 W California
Seymour, TX 76380
(940) 889-1125
(877) 889-1125

CHILDRESS OFFICE
903 Avenue F NW
Childress, TX 79201
(940) 938-7500
(855) 938-7500

SANTA ROSA
C O M M U N I C A T I O N S