

SIM Card Installation

To Install the SIM Card

Make sure the device is turned off and the front facing down. Hold the firmly and use the notch at the bottom corner to loosen the cover. Use material with a hard, thin edge such as your fingernail or a credit card to corefully run along the seam to loosen, then lift the cover until it detaches completely.





Installation Guide. 3. To turn on/off a SIM card go to Settings > SIM management, then slide the SIM card sliders. To turn on/off a SIM card 's data connection, go to Settings > SIM management, click on the "Data connection" option, and select a SIM card that has 4G capability.

Kevs/Touch Points

Power Key: To power on/off it, press and hold power key for a few seconds. When it is ON, press the power key once to activate or deactivate the screen.

Options key(): In home screen, touch the key to set wallpaper, manage apps, and to access system settings. Touch wallpaper, manage apps, it to view menu options.

Back key (<): Touch to go back to the previous menu

Charging battery

Charging Your battery

ease charge the battery using the following methods: Charge the phone by connecting it to a computer via the USB able.

Connect the USB cable to the phone and the AC adapter. Plug the C adapter into an electrical outlet to start charging.



Note: For safely, the battery will stop charging if in danger of over

Turn on sleep mode to save your battery power.

1. On the home screen, touch "App Menu" & select "Settings".

2. Select "Display".

creen Lock

On the home screen, touch the "APP Menu" & select "Settings". Select "Security and location" then select "Screen lock". Select the desired type of lock & follow the prompts to set up.

Description Icons

Icons Descriptions I
Shows the phone's network signal strength.

Call on hold

Phone Features

From the home screen, swipe up to open APP Drawer & select "Settings", Go to "Sound" and change the audio settings by Changing Sound levels and change your ring tones.

Intelligent keyboard

Audio Profile/Sleep Mode



Main Menu & Its Functions

Select to enter the main menu...
Allow you to view a list of features available in your phone

Clock Allow you to set the Alarm from Clock.

Browser
Browse the internet. Search engine- default set as Google.

. Calculator Ilow you to make tedious calculations quickly.

5. Camera Allow you to click pictures anytime you want. Your Nitro 5C has a 5,0 MP High Definition camera with LED Flash supporting many special features like Face Detection which ensures you to take good quality of pictures and stores them in the Gallery. In Camera, easily choose Camcorder

fou have unread SMS

USB storage Turned on.
Flight Mode

Bluetooth ON

To see your list of Contacts. Access your digital phonebook through this function. <mark>7. Email</mark> Allows you set up your POP/IMAP email accounts

Phone Features

8. Gallery go
Gallery Go. Gallery Go is a light, fast and easy to use offline gallery
9. Google Play
Google Play is your entertainment unbound. It brings together
all of the entertainment you love and helps you explore it in new
ways, anytime, anywhere.



4. MAX SIM KIT his service is provided by the operator. It provides phone plan information.

Phone calls/Texting

Maxwest

mitru 5C

Composing text messages

Maxwest automatically corrects and suggests words as you type.



Cut. Copy and Paste Touch and hold text content to bring up the magnifying glass, and then slide your finger to move the insertion points. Then choose to cut. copy, or paste. It is very easy to copy text from web pages, email, or text messages.

WLAN

Turn on WLAN

Maxwest supports WLAN Direct which allows Android 11 (Go edition) or later devices with the appropriate hardware to connect directly to each other via Wi-Fi without an intermediate access point. Using the APIs, you can discover and connect to other devices, if each device supports Wi-Fi Direct, then communicate over a speedy connection across distances much longer than a Bluetooth connection. This is useful for applications that share data among users, such as a multiplayer game or file sharing.



a. Enter "Settings">> Click "NETWORKS & internet ">> Select "Wi-Fi">> Select "Wi-Fi">> Select "Wi-Fi Preference ">>> Select "Advanced ">> Then click "Wi-Fi direct " to access Wi-Fi direct feature. b. After click "Search" at the bottom and it will display the available devices.

c. Click "Android_7e33" (in this case specifically) and it will give d. Click "Connect" to connect and it will pop up an interface to confirm like below.





e. Click "OK" and the devices will be connected


Capture images or record videos and share with family and friends!



Log into your e-mail accounts

Connecting to E-mails File Transfer

access your e-mails.
From the Home screen select Application "Gmail" and then Enter your email address, password and tap "Next".
Select which type of email account you are setting up and enter the proper settings. (POP3 / IMAP / Microsoft Exchange Account) Accounty You will need to enter your user name, password, and server information depending on the type of email account or you can change the settings by tapping "Manual setup" at the top right corner screen. Tap "Next" and select "OK" to

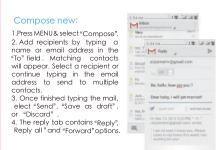

Delete message:

Go to Inbox to display messages.
 Touch & hold the message you want to delete.
 Select "Delete".

Connecting Smartphone to PC

Connect the USB cable to your smartphone and computer. Once connected successfully, on your phone, slide the top menu down and click on "Android System", then, press "Transfer Files" and the control of the control o

button.

A new storage named Nitro 5C will appear on your PC file

"My Computer". Click on it to review files in the smartphone and
/or to transfer documents between devices. When finished, press
Disconnect device from PC.

Note: Photos taken with the camera will be saved under the "DCIM"
folder. Screenshots captured will be saved under "Pictures" folder.
Put Music files in the "Music" folder for the files to be played property.



creen Capture

