

# FURUNO

## OPERATOR'S MANUAL

### *GPS/WAAS COLOR CHART PLOTTER*

Model **GP-3700**

---

(Product Name: GPS PLOTTER)



**ECF**

(Elemental Chlorine Free)

The paper used in this manual  
is elemental chlorine free.

**FURUNO ELECTRIC CO., LTD.**

9-52 Ashihara-cho,  
Nishinomiya, 662-8580, JAPAN

• FURUNO Authorized Distributor/Dealer

All rights reserved. Printed in Japan

Pub. No. OME-44910-B4

(ETMI ) GP-3700

A : APR. 2017

B4 : FEB. 17, 2020



0 0 0 1 9 1 1 5 4 1 1

# IMPORTANT NOTICES

---

## General

- This manual has been authored with simplified grammar, to meet the needs of international users.
- The operator of this equipment must read and follow the descriptions in this manual. Wrong operation or maintenance can cancel the warranty or cause injury.
- Do not copy any part of this manual without written permission from FURUNO.
- If this manual is lost or worn, contact your dealer about replacement.
- The contents of this manual and equipment specifications can change without notice.
- The example screens (or illustrations) shown in this manual can be different from the screens you see on your display. The screens you see depend on your system configuration and equipment settings.
- Save this manual for future reference.
- Any modification of the equipment (including software) by persons not authorized by FURUNO will cancel the warranty.
- The following concern acts as our importer in Europe, as defined in DECISION No 768/2008/EC.
  - Name: FURUNO EUROPE B.V.
  - Address: Ridderhaven 19B, 2984 BT Ridderkerk, The Netherlands
- All brand and product names are trademarks, registered trademarks or service marks of their respective holders.

## How to discard this product


Discard this product according to local regulations for the disposal of industrial waste. For disposal in the USA, see the homepage of the Electronics Industries Alliance (<http://www.eiae.org/>) for the correct method of disposal.

## How to discard a used battery

Some FURUNO products have a battery(ies). To see if your product has a battery, see the chapter on Maintenance. Follow the instructions below if a battery is used. Tape the + and - terminals of battery before disposal to prevent fire, heat generation caused by short circuit.


### In the European Union

The crossed-out trash can symbol indicates that all types of batteries must not be discarded in standard trash, or at a trash site. Take the used batteries to a battery collection site according to your national legislation and the Batteries Directive 2006/66/EU.

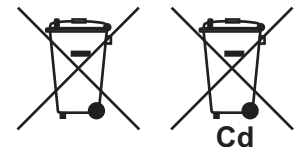

### In the USA

The Mobius loop symbol (three chasing arrows) indicates that Ni-Cd and lead-acid rechargeable batteries must be recycled. Take the used batteries to a battery collection site according to local laws.

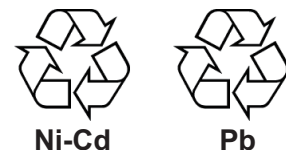

### In the other countries

There are no international standards for the battery recycle symbol. The number of symbols can increase when the other countries make their own recycle symbols in the future.



# SAFETY INSTRUCTIONS

The operator must read the safety instructions before attempting to operate the equipment.



## WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



## CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.



Warning, Caution



Prohibitive Action



Mandatory Action



## WARNING



### Do not open the equipment.

The equipment uses high voltage that can cause electrical shock. Refer any repair work to a qualified technician.



### If water leaks into the equipment or something is dropped into the equipment, immediately turn off the power at the switchboard.

Fire or electrical shock can result.



### If the equipment is giving off smoke or fire, immediately turn off the power at the switchboard.

Fire or electrical shock can result.



### If you feel the equipment is acting abnormally or giving off strange noises, immediately turn off the power at the switchboard and contact a FURUNO service technician.



## WARNING



### Do not disassemble or modify the equipment.

Fire, electrical shock or serious injury can result.



### Make sure no rain or water splash leaks into the equipment.

Fire or electrical shock can result if water leaks into the equipment.



### Do not place liquid-filled containers on or near the equipment.

Fire or electrical shock can result if a liquid spills into the equipment.





### Do not operate the equipment with wet hands.




Electrical shock can result.



### Use the proper fuse.

Use of the wrong fuse can cause fire or electrical shock.

 <b>CAUTION</b>
 <b>Do not depend on one navigation device for the navigation of the vessel.</b>
<p>Always check your position against all available aids to navigation, for the safety of vessel and crew.</p>

 <b>CAUTION</b>
 <b>Do not disconnect the power cable while the system is powered.</b>
<p>Damage to the equipment can result.</p>
 <b>Do not bend cables in cold weather (0°C(32°F) or less).</b>
<p>The cables will break.</p>

### About the TFT LCD

The TFT LCD is constructed using the latest LCD techniques, and displays 99.99% of its pixels. The remaining 0.01% of the pixels may drop out or blink, however this is not an indication of malfunction.

### Caution Label

Do not remove the label. If the label is missing or damaged, contact a FURUNO agent or dealer about replacement.

**Do not remove cover.**  
**No user-serviceable parts inside.**

サービスマン以外の方はカバーを開けないで下さい。

请不要打开盖子。  
内部无用户可以维修的器件。

Name: Caution Label  
Type: 20-035-1003-0  
Code No.: 100-386-200-10

# TABLE OF CONTENTS

---

<b>FOREWORD</b> .....	<b>viii</b>
<b>SYSTEM CONFIGURATION</b> .....	<b>x</b>
<b>1. OPERATIONAL OVERVIEW</b> .....	<b>1-1</b>
1.1 Controls.....	1-1
1.1.1 Display unit.....	1-1
1.1.2 Trackball control unit RCU-030 (option).....	1-3
1.2 How to Turn the Power On/Off.....	1-3
1.3 How to Adjust the Brilliance of the Display and Panel .....	1-4
1.4 How to Select and Set a Display.....	1-5
1.4.1 How to select a display .....	1-5
1.4.2 How to change a display's setting.....	1-5
1.4.3 How to skip a display .....	1-7
1.4.4 How to set the navigation/destination information.....	1-8
1.4.5 How to switch the active screen.....	1-9
1.5 Menu Overview .....	1-9
1.6 MOB Operations .....	1-11
1.7 Function Keys .....	1-12
1.7.1 How to operate a function key.....	1-12
1.7.2 How to set up a function key.....	1-12
1.8 Demo Mode.....	1-13
1.9 How to Install Charts .....	1-14
<b>2. PLOTTER DISPLAY OVERVIEW</b> .....	<b>2-1</b>
2.1 Plotter Display .....	2-1
2.1.1 Plotter display layout.....	2-1
2.1.2 NAV information box .....	2-2
2.1.3 Compass display.....	2-3
2.1.4 Satellite status/location display .....	2-4
2.1.5 Tide graph display.....	2-5
2.2 How to Use the Cursor.....	2-6
2.3 How to Change the Chart Scale (Zoom In, Zoom Out).....	2-6
2.4 Orientation Mode.....	2-7
2.5 How to Shift the Display .....	2-8
2.6 How to Measure the Range and Bearing Between Two Points .....	2-9
2.7 How to Change the Cursor Configuration .....	2-10
2.8 Chart Icons.....	2-12
<b>3. TRACK</b> .....	<b>3-1</b>
3.1 How to Show/Hide Track.....	3-1
3.1.1 How to show/hide own ship track.....	3-1
3.1.2 How to show/hide other ship's tracks and symbols.....	3-3
3.1.3 How to show/hide the current vector.....	3-3
3.1.4 How to show/hide drift vector.....	3-4
3.2 How to Record Own Ship's Track .....	3-4
3.2.1 How to stop/restart recording of track .....	3-4
3.2.2 How to show track while track plotting is stopped.....	3-5
3.2.3 How to connect track after restarting plotting.....	3-5
3.3 How to Change Track Color.....	3-6
3.3.1 How to change track color for own ship .....	3-6
3.3.2 How to automatically change track color for own ship with water temperature.....	3-6

3.3.3	How to automatically change track color for own ship with depth .....	3-8
3.3.4	How to change track color for other ship .....	3-9
3.4	How to Change Track Line Type .....	3-9
3.4.1	How to change track line type for own ship .....	3-9
3.4.2	How to change track line type for other ship .....	3-10
3.5	How to Select Track Plotting Method, Interval .....	3-10
3.5.1	How to select the track plotting method for own ship .....	3-10
3.5.2	How to set the track plotting intervals for own ship .....	3-10
3.5.3	How to set the track plotting intervals for other ship .....	3-11
3.6	How to Erase Own Ship Track .....	3-11
3.7	How to Edit Own Ship Track .....	3-13
3.8	How to Display Own Ship Information .....	3-14
3.8.1	Simple information .....	3-14
3.8.2	Detailed information .....	3-15
3.9	How to Display Other Ship Information .....	3-15
3.10	How to Change the Size of the Target Number .....	3-17
3.11	How to Erase Other Ship Track .....	3-18
<b>4.</b>	<b>MARKS, LINES .....</b>	<b>4-1</b>
4.1	How to Set Default Mark Appearance .....	4-1
4.1.1	How to set mark color .....	4-1
4.1.2	How to set mark size .....	4-2
4.1.3	How to set line type .....	4-2
4.1.4	How to set fish type for marks .....	4-3
4.2	How to Enter Marks .....	4-3
4.2.1	How to enter marks at own ship position .....	4-3
4.2.2	How to enter marks at the cursor position .....	4-4
4.2.3	How to enter marks by manually entering latitude and longitude position .....	4-4
4.3	How to Enter Lines .....	4-5
4.4	How to Erase Marks, Lines .....	4-6
4.5	How to Edit Marks, Lines .....	4-7
4.6	How to Undo or Redo Mark/line Operation .....	4-8
4.7	How to Show Mark Information .....	4-9
4.8	Mark Filter .....	4-10
<b>5.</b>	<b>WAYPOINTS .....</b>	<b>5-1</b>
5.1	How to Enter Waypoints .....	5-1
5.1.1	How to enter waypoints at own ship position .....	5-1
5.1.2	How to enter waypoints at the cursor position .....	5-1
5.1.3	How to enter waypoints by manually entering latitude and longitude position .....	5-2
5.1.4	How to enter waypoints by range and bearing .....	5-4
5.1.5	How to enter waypoints by Loran A or Loran C LOPs .....	5-5
5.1.6	How to enter waypoints by Decca LOPs .....	5-6
5.2	How to Edit Waypoints .....	5-7
5.3	How to Erase a Waypoint .....	5-8
5.4	How to Search Waypoints .....	5-8
5.5	How to Set Speed to Use in TTG Calculation .....	5-9
5.6	How to Display Waypoint Information .....	5-9
5.7	How to Change Waypoint Mark Size .....	5-10
5.8	How to Mark Radar Target Position .....	5-10
<b>6.</b>	<b>ROUTES .....</b>	<b>6-1</b>
6.1	How to Create Routes .....	6-1
6.1.1	How to create routes with existing waypoints .....	6-1
6.1.2	How to create track-based routes using own ship position .....	6-3

## TABLE OF CONTENTS

6.1.3	How to create routes with selected tracks.....	6-4
6.2	How to Edit Routes .....	6-5
6.2.1	How to insert waypoints .....	6-5
6.2.2	How to delete waypoints from routes .....	6-6
6.3	How to Delete Routes .....	6-6
6.4	How to Search Routes .....	6-6
6.5	How to Set the Speed to Use in TTG Calculation .....	6-7
<b>7.</b>	<b>DESTINATION .....</b>	<b>7-1</b>
7.1	How to Go to a Quick Point.....	7-1
7.2	How to Set a Waypoint as Destination.....	7-4
7.3	How to Follow Routes .....	7-6
7.4	How to Stop Navigation.....	7-8
<b>8.</b>	<b>ALARMS .....</b>	<b>8-1</b>
8.1	How to Turn the Audio Alarm On/Off .....	8-2
8.2	Arrival, Anchor Watch Alarm .....	8-3
8.3	Route Alarm .....	8-4
8.4	XTE, Border Alarm .....	8-4
8.5	Intrusion Point Alarm.....	8-5
8.6	Ship Speed Alarm .....	8-5
8.7	Trip Range Alarm .....	8-6
8.8	Water Temperature Alarm.....	8-6
8.9	Shear Alarm .....	8-7
8.10	Depth Alarm .....	8-8
<b>9.</b>	<b>OTHER FUNCTIONS .....</b>	<b>9-1</b>
9.1	[COAST LINE SETTING] Menu .....	9-1
9.1.1	[COAST LINE DETAIL SETTING] menu.....	9-1
9.1.2	How to display depth contour in detail .....	9-4
9.2	[PLOTTER DISPLAY SETTING] Menu.....	9-5
9.2.1	How to set TD display .....	9-5
9.2.2	How to set range for plotter display.....	9-8
9.3	[DISPLAY FORMAT] Menu.....	9-8
9.4	[NAVIGATOR SETUP] Menu .....	9-15
9.5	[INPUT/OUTPUT PORT SETTING] Menu .....	9-18
9.5.1	How to set the output 1, 2 or 3 .....	9-18
9.5.2	How to set the Ethernet.....	9-20
9.5.3	How to set the FA-30 .....	9-21
9.5.4	How to display the information for NMEA2000 equipment.....	9-22
9.5.5	How to set the NMEA2000 PGN .....	9-22
9.6	[TEST & MEMORY CLEAR] Menu .....	9-23
9.6.1	How to set or change the password.....	9-23
9.6.2	How to disable the password .....	9-24
9.6.3	How to set the trackball sensitivity .....	9-24
9.7	LINE MONITOR .....	9-25
<b>10.</b>	<b>HOW TO RECORD, PLAY BACK DATA .....</b>	<b>10-1</b>
10.1	Data Recording .....	10-1
10.2	Internal Memory .....	10-1
10.2.1	How to save the data to the internal memory.....	10-1
10.2.2	How to display the data stored in the internal memory .....	10-3
10.2.3	How to play back data from the internal memory.....	10-4
10.2.4	How to delete data from the internal memory .....	10-5
10.3	USB Flash Memory Operations .....	10-5
10.3.1	How to insert a USB flash memory .....	10-5



10.3.2	How to safely remove a USB flash memory .....	10-6
10.3.3	How to save the data to a USB flash memory .....	10-6
10.3.4	How to play back the data from the USB flash memory .....	10-7
10.3.5	How to transfer the data from the USB flash memory .....	10-8
10.4	Backup Data .....	10-9
10.4.1	How to backup the data automatically .....	10-9
10.4.2	How to backup the data manually .....	10-10
10.4.3	How to load the backup data .....	10-11
10.5	Screenshot (Screen Capture).....	10-12
10.6	How to Load the Data from Other Equipment .....	10-13
<b>11.</b>	<b>AIS OPERATIONS.....</b>	<b>11-1</b>
11.1	AIS Symbols .....	11-1
11.2	How to Activate/Sleep Targets .....	11-2
11.3	AIS Tracks .....	11-3
11.3.1	How to show/hide AIS tracks.....	11-3
11.3.2	How to change the AIS symbol/track color or track line type .....	11-3
11.3.3	How to stop/restart recording of AIS track.....	11-3
11.4	AIS Target Data.....	11-4
11.4.1	How to display the individual AIS target data .....	11-4
11.4.2	How to display the AIS list.....	11-5
11.5	AIS Alarm .....	11-6
11.5.1	How to automatically activate targets.....	11-6
11.5.2	How to activate the AIS proximity alarm.....	11-6
11.5.3	How to set the CPA/TCPA alarm .....	11-7
11.5.4	How to set the lost alarm.....	11-7
11.5.5	How to set the external AIS alarm.....	11-8
<b>12.</b>	<b>MAINTENANCE, TROUBLESHOOTING .....</b>	<b>12-1</b>
12.1	Maintenance .....	12-1
12.2	Replacement of Fuse .....	12-2
12.3	Consumable Parts .....	12-2
12.4	Trackball Maintenance .....	12-2
12.5	Troubleshooting.....	12-3
12.6	Unit Information .....	12-4
12.7	Operation/Alarm Log .....	12-5
12.8	Diagnostics .....	12-6
12.8.1	Memory I/O test.....	12-6
12.8.2	Keyboard test .....	12-7
12.8.3	Test pattern .....	12-7
12.9	How to Clear the Memory.....	12-8
12.9.1	How to restore the settings.....	12-8
12.9.2	How to delete all screenshot data .....	12-8
12.9.3	How to delete user data .....	12-9
	<b>APPENDIX 1 MENU TREE .....</b>	<b>AP-1</b>
	<b>APPENDIX 2 ICONS .....</b>	<b>AP-10</b>
	<b>APPENDIX 3 TIME DIFFERENCES .....</b>	<b>AP-11</b>
	<b>APPENDIX 4 WHAT IS SBAS? .....</b>	<b>AP-12</b>
	<b>APPENDIX 5 ALARM LIST.....</b>	<b>AP-13</b>
	<b>SPECIFICATIONS .....</b>	<b>SP-1</b>
	<b>INDEX .....</b>	<b>IN-1</b>

# FOREWORD

---

Congratulation on your choice of the FURUNO GPS PLOTTER GP-3700. We are confident you will see why the FURUNO name has become synonymous with quality and reliability.

Since 1948, FURUNO Electric Company has enjoyed an enviable reputation for innovative and dependable marine electronics equipment. This dedication to excellence is furthered by our extensive global network of agents and dealers.

The equipment is designed and constructed to meet the rigorous demands of the marine environment. However, no machine can perform its intended function unless installed, operated and maintained properly. Please carefully read and follow the recommended procedures for operation and maintenance.

## Features

The GP-3700 is a fully integrated GPS receiver and color video plotter. The system consists of a display unit and antenna unit.

The main features of the GP-3700 are as follows:

- Combination displays (plotter, navigation data, compass) in various split screen configurations.
- Easily sort and display marks according to the sort conditions.
- Simple drift calculation provides a graphic presentation of surface water flow.
- Alarms: Arrival, anchor watch, XTE, border, speed, trip, AIS, CPA/TCPA, temperature, shear, depth.
- Capture (screenshot) function.
- Display AIS targets and TT targets.
- Undo and Redo functions.

## Software used in this product

This equipment uses the following open source software.

- Ubiquitous QuickBoot Copyright© 2015 Ubiquitous Corp. All rights reserved.
- Portions of this software are copyright© 2016 The Free Type Project ([www.freetype.org](http://www.freetype.org)). All rights reserved.
- This product includes software to be licensed under the GNU General Public License (GPL) version 2.0, GNU Lesser General Public Software License (LGPL) version 2.0, Apache, BSD and others. The program(s) is/are free software(s), and you can copy it and/or redistribute it and/or modify it under the terms of the GPL version 2.0 or LGPL version 2.0 as published by the Free Software Foundation. Please access to the following URL if you need source codes: [https://www.furuno.co.jp/en/contact/cnt\\_oss\\_e01.html](https://www.furuno.co.jp/en/contact/cnt_oss_e01.html).

## About future use

Functions labeled as “future use” are currently unavailable.

## **Program No.**


1451468-02.\*\*

\*\* denotes minor modifications.

## **CE declaration**

With regards to CE declarations, please refer to our website ([www.furuno.com](http://www.furuno.com)), for further information about RoHS conformity declarations.

# SYSTEM CONFIGURATION

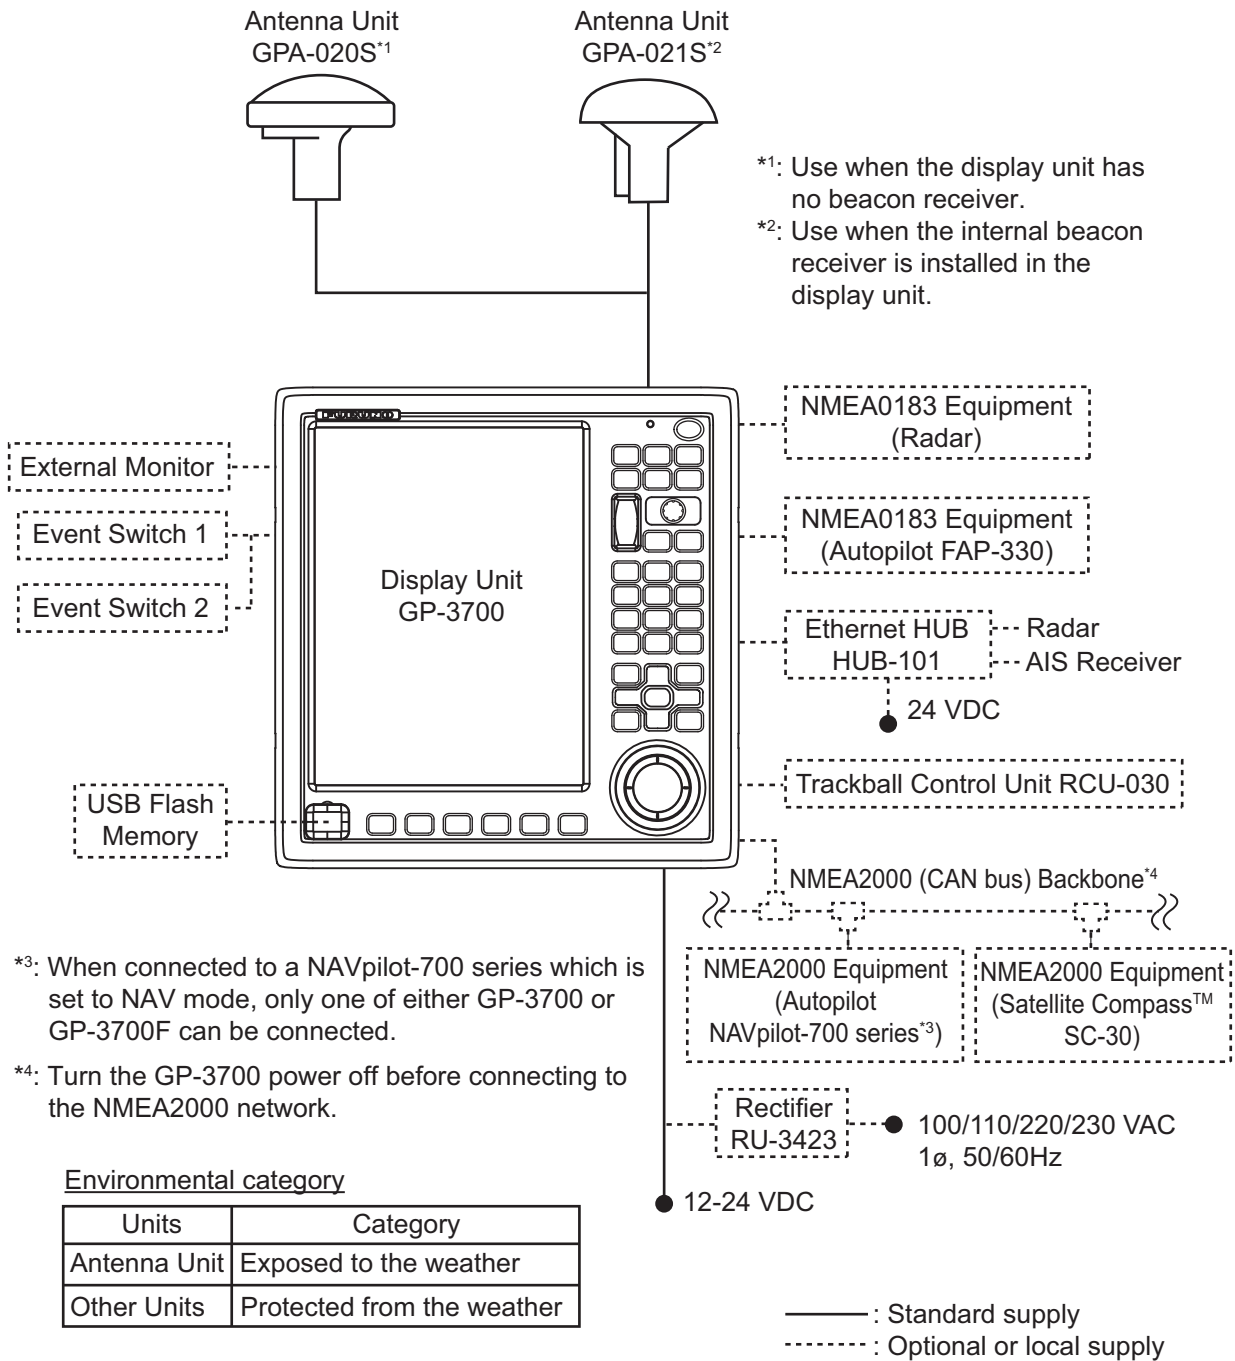


# 1. OPERATIONAL OVERVIEW



## 1.1 Controls

### 1.1.1 Display unit

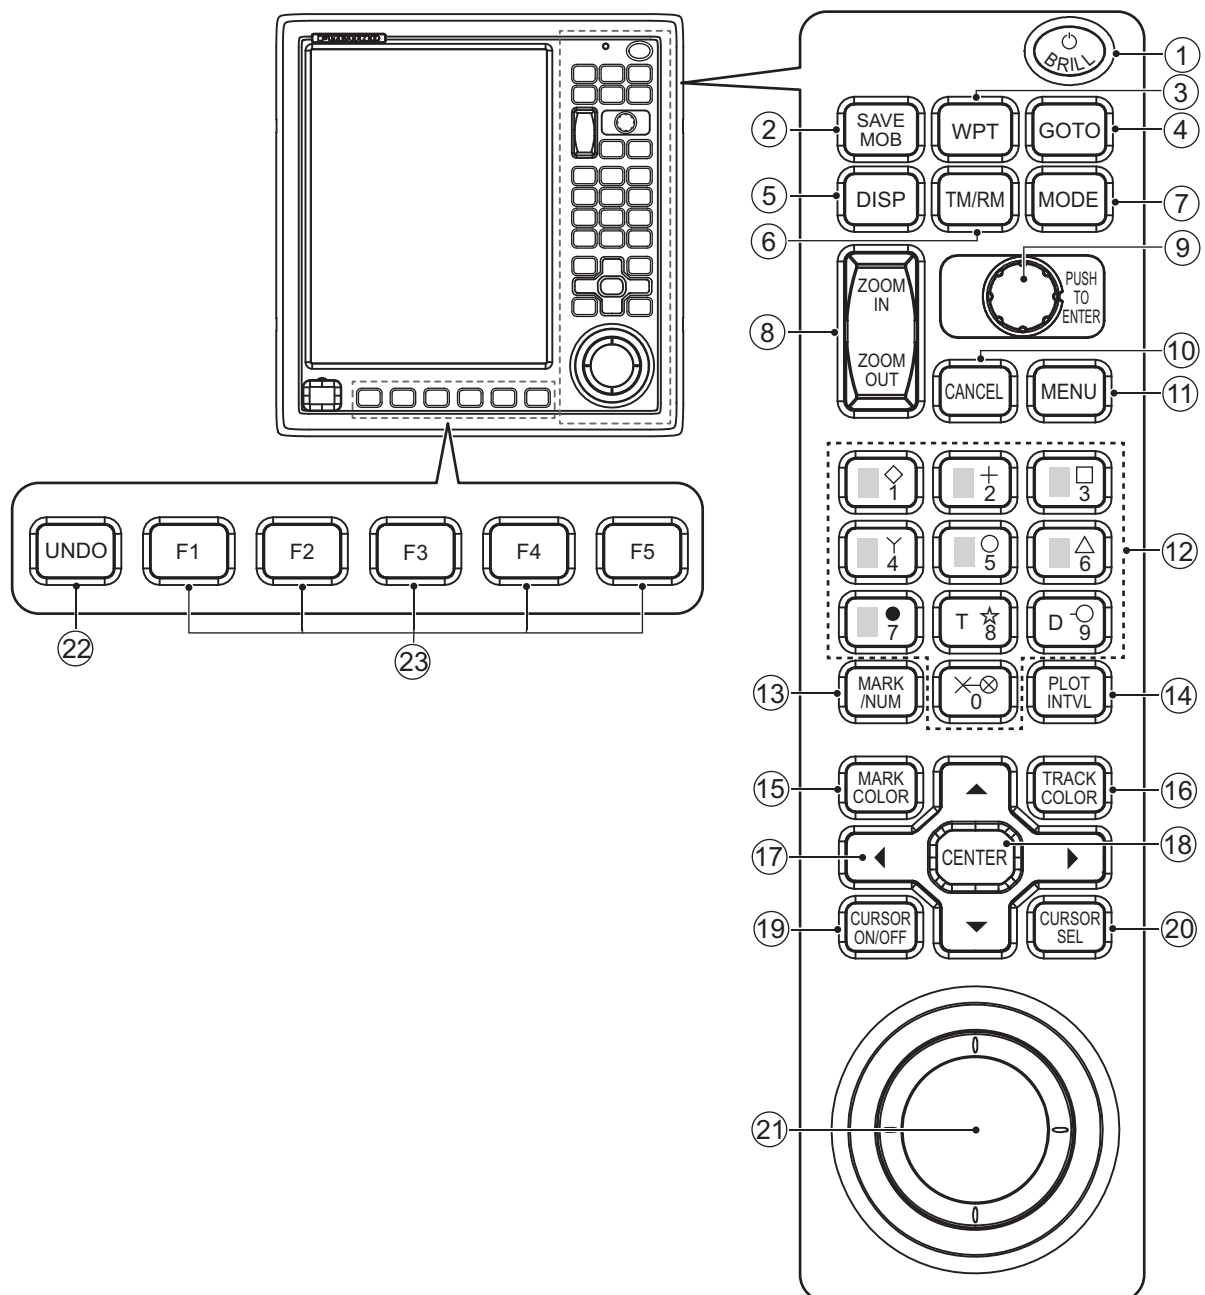When you correctly execute an operation, the display unit generates a beep. Invalid operation causes the unit to emit two beeps. If you do not need the key beep, deactivate the beep sound (see section 9.3).




## 1. OPERATIONAL OVERVIEW

No.	Key, control	Description
1	 POWER/BRILL	<ul style="list-style-type: none"> <li>• Short press at power-off: Turns the power on.</li> <li>• Short press at power-on: Opens the [BRILL] window.</li> <li>• Long press while powered: Turns the power off.</li> </ul>
2	MOB	Marks a man overboard position at own ship position or cursor position.
3	WPT	Opens the [WAYPOINTS LIST] window.
4	GOTO	Sets, releases destination.
5	DISP	<ul style="list-style-type: none"> <li>• Cycles through displays (basic screen: plotter, compass).</li> <li>• Returns to the basic screen with menu or window open.</li> </ul>
6	TM/RM	<p>Alternately selects true motion (TM) and relative motion (RM) displays.</p> <p>TM: The own ship mark moves along with own ship position.</p> <p>RM: The chart moves along with own ship position. The relative position for own ship mark on the screen is fixed.</p>
7	MODE	Changes the orientation mode.
8	ZOOM IN, ZOOM OUT	Zooms the chart display range in or out.
9	ENTER knob	<ul style="list-style-type: none"> <li>• Rotate: Changes numeric data, selects menu items.</li> <li>• Push: Confirms alphanumeric data entry or an operation.</li> </ul>
10	CANCEL	<ul style="list-style-type: none"> <li>• Silences the audio alarm.</li> <li>• Erases marks and waypoints.</li> <li>• Clears alphanumeric data.</li> </ul>
11	MENU	<ul style="list-style-type: none"> <li>• Opens/closes the main menu.</li> <li>• With the menu open, goes back one layer in selected menu.</li> <li>• Closes the window.</li> </ul>
12	Numeric keys 0 to 9	<ul style="list-style-type: none"> <li>• Enters numeric data.</li> <li>• 1 to 8: Enters corresponding mark labeled on the key.</li> <li>• Selects menu items.</li> <li>• 0: Measures range and bearing between two points.</li> <li>• 9: Enters the same mark as the last entered one then connects them. This function is not available when no mark is entered since power-on.</li> </ul>
13	MARK/NUM	Selects mark input format, mark symbol or numeric.
14	PLOT INTVL	Starts, stops plotting of own ship track.
15	MARK COLOR	Opens the [CHANGE MARK COLOR] window.
16	TRACK COLOR	Opens the [CHANGE TRACK COLOR] window.
17	 (CursorPad)	<ul style="list-style-type: none"> <li>• Moves the cursor.</li> <li>• Selects menu items.</li> </ul>
18	CENTER	<ul style="list-style-type: none"> <li>• Cursor shown: Moves cursor to the screen center.</li> <li>• Cursor not shown: Moves own ship position to the screen center or the position one-third from the bottom of the screen depending on the orientation mode.</li> <li>• Confirms alphanumeric data entry or an operation on the menu.</li> </ul>
19	CURSOR ON/OFF	<ul style="list-style-type: none"> <li>• Turns on/off the cursor.</li> <li>• Switches + to - and vice versa.</li> <li>• Switches N to S, E to W and vice versa.</li> <li>• Long press: Switches control between plotter split screen displays.</li> </ul>
20	CURSOR SEL	Selects cursor configuration among circle, parallel or diamond.
21	Trackball	Moves the cursor.
22	UNDO	Undoes previous mark/line input, edit or deletion operation.
23	F1, F2, F3, F4, F5	Activates assigned program.

### 1.1.2 Trackball control unit RCU-030 (option)


The optional trackball control unit RCU-030 can be used to control most features of this equipment.

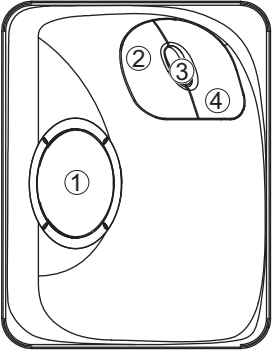	No.	Description
	1	<b>Trackball:</b> Moves the cursor.
	2	<b>Left button:</b> Confirms alphanumeric data entry or an operation.
	3	<b>Scrollwheel:</b> <ul style="list-style-type: none"> <li>• Rotate upward: Zooms in the chart display range.</li> <li>• Rotate downward: Zooms out the chart display range.</li> <li>• Push with cursor shown: Moves cursor to the screen center in the plotter display.</li> <li>• Push with cursor not shown: Moves own ship position to the screen center or the position one-third from the bottom of the screen depending on the orientation mode in the plotter display.</li> </ul>
	4	<b>Right button:</b> <ul style="list-style-type: none"> <li>• Displays/erases the cursor.</li> <li>• Switches + to - and vice versa.</li> <li>• Switches N to S, E to W and vice versa.</li> <li>• Long press: Switches control between split screen displays other than compass display.</li> </ul>

## 1.2 How to Turn the Power On/Off

**Note:** Turn the NMEA2000 network power on before turning the GP-3700 power on.

Press the **POWER/BRILL** key at the top corner of the display unit to turn on the power. The unit then starts up in the sequence shown below.

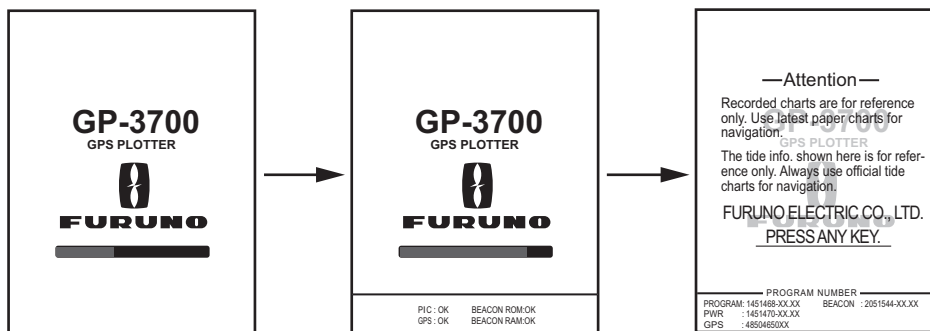

XX: Program version number

The start-up screen disappears then the last-used screen (e.g. plotter display) appears.

Your position is displayed approx. 90 seconds after the power on. Until your position is found, the message "NO FIX" is displayed at the bottom of the plotter display. After your position is found, the indication "2D" or "3D" appears depending on the position fix status.

Indication	Meaning	Indication	Meaning
GP-2D	2D GPS position fix	GP-S2D	2D GPS+SBAS position fix
GP-3D	3D GPS position fix	GP-S3D	3D GPS+SBAS position fix
GP-D2D	2D DGPS position fix	NO FIX	No position fix
GP-D3D	3D DGPS position fix		

## 1. OPERATIONAL OVERVIEW

To turn off the power, press and hold the **POWER/BRILL** key. The message "HOLDING THE POWER KEY WILL TURN THE GP-3700 OFF. POWER OFF IN 3 s." appears then the countdown until power-off is started. Press and hold the **POWER/BRILL** key until the indication "0 s" appears. The message "GP-3700 SHUTTING DOWN. PLEASE WAIT." appears then the power is turned off.

**Note:** Turn off the main power after the display goes blank.


### DGPS beacon receiver

The GP-3700 is available in two specifications, with DGPS beacon receiver and no DGPS beacon receiver. Only the beacon receiver equipped GP-3700 has DGPS capability. To get DGPS capability, install the optional internal DGPS beacon receiver (name: Beacon Receiver Set, type: OP14-80, code no.: 000-029-392).

## 1.3 How to Adjust the Brilliance of the Display and Panel

The brilliance of the display and panel dimmer can be adjusted from the [BRILL] window.

1. Press the **POWER/BRILL** key to show the [BRILL] window.

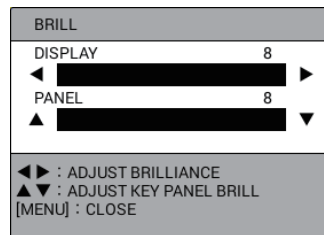

**Note:** The [BRILL] window closes automatically when there is no operation for five seconds.

2. To adjust the display brilliance, press ◀ or ▶, or rotate the **ENTER** knob (setting range: 1 to 8).
3. To adjust the panel brilliance, press ▲ or ▼, or push the **ENTER** knob (setting range: 1 to 8).
4. Press the **MENU** key to close the window.

**Note:** The brilliance of an external monitor cannot be adjusted from the display unit. Adjust it from the external monitor.



## 1.4 How to Select and Set a Display


### 1.4.1 How to select a display

Press the **DISP** key consecutively to cycle through all the active displays. Displays other than display 1 can be skipped. See section 1.4.3.


### 1.4.2 How to change a display's setting

Five basic screens are pre-prepared. You can change the configuration of each screen to meet your operational needs, as shown in the procedure below. For menu operation, see section 1.5.

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].

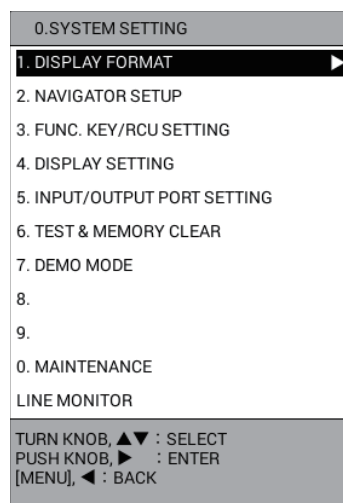


3. Select [4. DISPLAY SETTING].

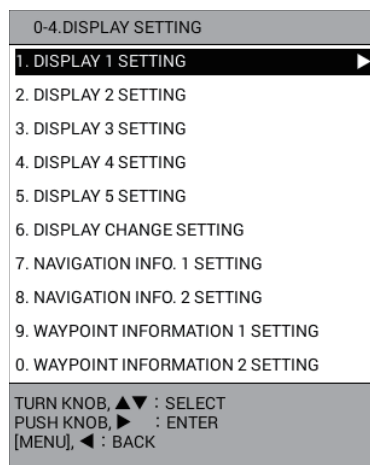

1. OPERATIONAL OVERVIEW


4. Select [1. DISPLAY 1 SETTING].

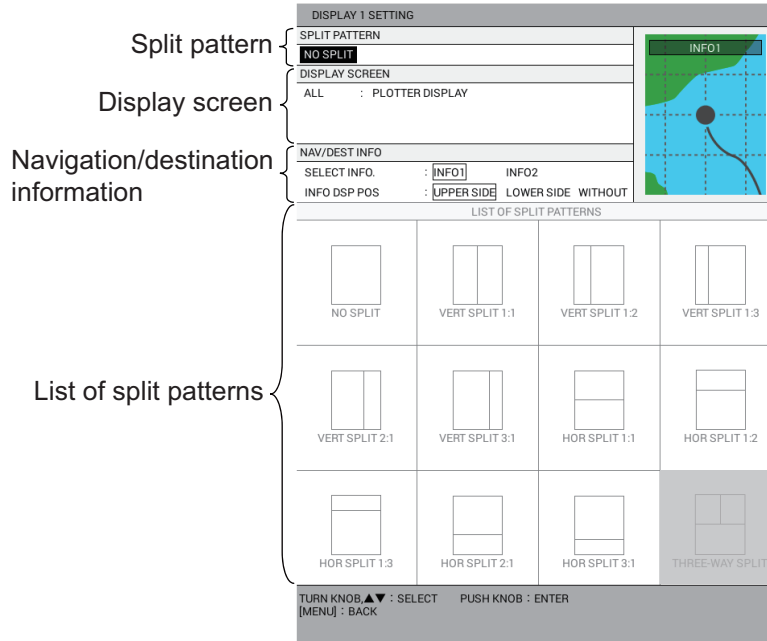

5. Select [SPLIT PATTERN].

6. Select the split pattern from [LIST OF SPLIT PATTERNS]. The following steps are for [HOR SPLIT 1:1] (horizontal split 1:1).

7. Select [UP] in [DISPLAY SCREEN].

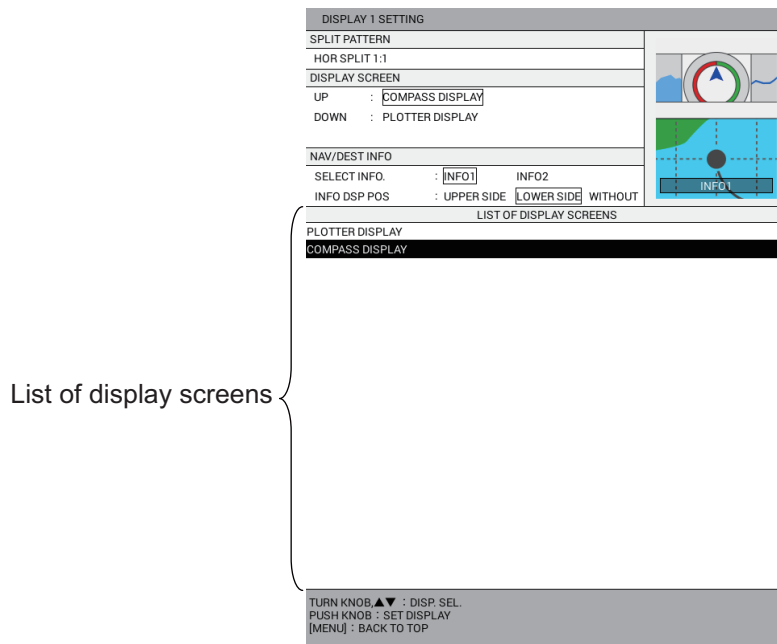

**Note:** The items in the list differ according to the split pattern selected at step 6.

8. Select the display screen from [LIST OF DISPLAY SCREENS].

**Note:** The plotter or compass can be selected as the upper display screen only in the horizontal split screen configuration ([HOR SPLIT 1:1]). Only the plotter display screen is available for other split patterns.

9. Set the down (lower) display screen in the same manner.

10. Select [SELECT INFO.] in [NAV/DEST INFO].

11. Select [INFO1] or [INFO2] to display nav data in the NAV information box (see section 2.1.1, section 2.1.2). You can select the data to show with destination set and with no destination set (see section 1.4.4).

	No destination set	With destination set
[INFO1]	Display the data set in the [NAVIGATION INFO. 1 SETTING] menu.	Display the data set in the [WAYPOINT INFORMATION 1 SETTING] menu.
[INFO2]	Display the data set in the [NAVIGATION INFO. 2 SETTING] menu.	Display the data set in the [WAYPOINT INFORMATION 2 SETTING] menu.

12. Select [INFO DSP POS] in [NAV/DEST INFO].
13. Select [UPPER SIDE] to display the navigation/destination information at the top of the screen, [LOWER SIDE] at the bottom of the screen. [WITHOUT] displays no navigation/destination information.
14. Set the displays 2 to 5 in the same manner.
15. Press the **DISP** key to close the menu.

### 1.4.3 How to skip a display

You may not require all five display screens. You can skip unnecessary ones as follows.

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [4. DISPLAY SETTING].
4. Select [6. DISPLAY CHANGE SETTING].

DISPLAY CHANGE SETTING		
DISPLAY 1	:	DISPLAY
DISPLAY 2	:	DISPLAY SKIP
DISPLAY 3	:	DISPLAY SKIP
DISPLAY 4	:	DISPLAY SKIP
DISPLAY 5	:	DISPLAY SKIP
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER		
[MENU] : BACK		

5. Select [DISPLAY 2] (or 3, 4, 5).
6. Select [DISPLAY] or [SKIP]. The displays which are set to [SKIP] are skipped when pressing the **DISP** key.  
**Note:** The display 1 can not be skipped.
7. Press the **DISP** key to close the menu.

# 1. OPERATIONAL OVERVIEW

## 1.4.4 How to set the navigation/destination information

To set the navigation/destination information, do the following:

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [4. DISPLAY SETTING].
4. Select [7. NAVIGATION INFO. 1 SETTING], [8. NAVIGATION INFO. 2 SETTING], [9. WAYPOINT INFORMATION 1 SETTING] or [0. WAYPOINT INFORMATION 2 SETTING].

When selecting [WAYPOINT INFORMATION 1 (or 2) SETTING], [WAYPOINT INFORMATION 1 (or 2) SETTING] and [DEST INFO1 (or 2)] are displayed.


5. Select the layout for the NAV information box from the pattern list.
6. Select a frame, then select the item to display in the frame from the navigation data list. The items in the list differ according to the frame selected. To leave a frame blank, select [UNASSIGNED].


Ex. 1: When selecting the frame for [OWN SHIP LATITUDE LONGITUDE]

Ex. 2: When selecting the frame for [SOG]

7. Press the **DISP** key to close the menu.

## 1.4.5 How to switch the active screen


In the plotter split screen, you can switch the active screen with the **CURSOR ON/OFF** key. Long-press the key to select the screen to make active. The active screen is circumscribed with an orange rectangle. The orange frame flashes three times then goes off. The icon  is displayed at the left top of the active screen.

**Note:** The icon  is displayed on the non-split screen. However, the icon can be difficult to see when the NAV information box is displayed at the top of the screen and the value for the transparency of the NAV information box is low.

## 1.5 Menu Overview

### Main menu

1. Press the **MENU** key to open the main menu.

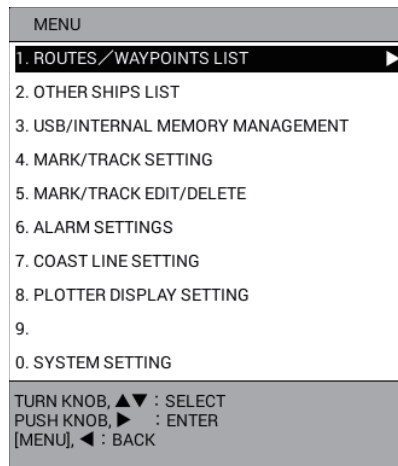

2. Rotate the **ENTER** knob to select a menu item, then push the knob to confirm your selection. Counterclockwise rotation moves the cursor downward or leftward; clockwise rotation moves the cursor upward or rightward. Selection can also be confirmed by pressing the **CENTER** key. Menu can also be selected by pressing the numeric key corresponding to the menu item number.

**Note:** The procedures in this manual, for sake of brevity, replace the “rotate” and “push” actions with “select”. For example, we write “Select [0. SYSTEM SETTING]” in place of “Rotate the **ENTER** knob to select the [0. SYSTEM SETTING] menu, then push the knob to confirm your selection”.

A menu that shows a right arrow (►) indicates additional sub menus.

3. If the menu has additional sub menus, repeat step 2 to select menu items on the sub menus. To go back one layer, press the **MENU** key or ◀.
4. Select required menu option, like in step 2.
5. Press the **DISP** key to close the menu.

## 1. OPERATIONAL OVERVIEW

### How to enter alphanumeric data

The character entry window appears when you are required to enter alphanumeric data. Press the **CURSOR ON/OFF** key to switch alphabet between upper case and lower case.

COMMENT :	<input type="checkbox"/>	-----	
<b>A</b> B C D E	F G H I J	K L M N O	SELECTIONS:
P Q R S T	U V W X Y	Z { }	1.
, . - ! ?	/ & = # _	1 2 3 4 5	2.
6 7 8 9 0	◀ ▶ Space	Delete	3.
ENTER			
ROTATE KNOB : INPUT CHARS. [CANCEL] : DELETE ALL			
[CURSOR ON/OFF] : SWITCH UPPER/LOWER CASE			
[1]~[5] : ABBR. SELECTIONS [MENU] : BACK			



Press the **CURSOR ON/OFF** key.

COMMENT :	<input type="checkbox"/>	-----	
<b>a</b> b c d e	f g h i j	k l m n o	SELECTIONS:
p q r s t	u v w x y	z { }	1.
, . - ! ?	/ & = # _	1 2 3 4 5	2.
6 7 8 9 0	◀ ▶ Space	Delete	3.
ENTER			
ROTATE KNOB : INPUT CHARS. [CANCEL] : DELETE ALL			
[CURSOR ON/OFF] : SWITCH UPPER/LOWER CASE			
[1]~[5] : ABBR. SELECTIONS [MENU] : BACK			

1. Rotate the **ENTER** knob or the trackball to select character then push the knob to confirm selection. Alternatively, you can use the Cursorpad to select a character then press the **CENTER** key to confirm selection.
2. Repeat step 1 to select all other characters.  
Delete a character: Select ◀ or ▶ to move the data input cursor to the character deleted then select [Delete].  
Suggest feature: This unit remembers five of the most frequently input character strings, and shows them in the [SELECTIONS] window. To select one, press the corresponding numeric key (1 to 5).
3. Select [ENTER] then push the **ENTER** knob.

### How to enter numeric data

 
Do one of the following:

- Press applicable numeric key.
- Rotate the **ENTER** knob to select numeric, then push the knob to confirm.

Unless noted otherwise, this manual uses the “numeric key” method.



## 1.6 MOB Operations

The MOB (Man OverBoard) mark denotes man overboard position. Press the **SAVE MOB** key to inscribe this mark should someone fall overboard. The following message appears.



Select [RUN] to set the MOB mark position as the destination.

You can inscribe a MOB mark at the own ship position or the cursor position (see page 9-14).


MOB mark	Mark position
	The mark is put at the own ship position at the moment you press the <b>SAVE MOB</b> key.
	The mark is put at the position selected with the cursor.

A light-blue line runs between the MOB position and own ship. This line is the shortest course from the current position to the MOB position. The arrows on the line point in the direction of course flow. The range and bearing from the own ship position to the MOB position are displayed at the left top of the screen.

Only one MOB mark can be put on the plotter display, and each time the **SAVE MOB** key is operated the previous MOB mark and its position data are written over.

### How to delete a MOB mark

 1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Use the trackball to put the cursor on the MOB mark.
3. Press the **CANCEL** key. The following message appears.



4. Select [RUN] to delete the MOB mark.

## 1.7 Function Keys

Some menu functions and menus can be assigned to the **F1** to **F5** keys. This allows one-touch access to the assigned function or menu.


### 1.7.1 How to operate a function key

Press the function key that corresponds to the function you want to use.

### 1.7.2 How to set up a function key

You can change the function assigned to a function key.

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [3. FUNC. KEY/RCU SETTING].

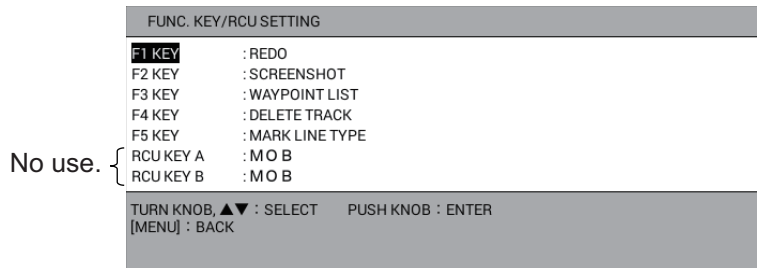

4. Select the item to change. For example, select [F1 KEY] when you change the function assigned to the **F1** key.
5. Referring to the table below, select a function.

Function	Description
[WAYPOINT LIST]	Opens [WAYPOINTS LIST].
[ROUTES LIST]	Opens [ROUTES LIST].
[SAVE USB MEMORY]	Opens the [USB MEMORY RECORDING] menu.
[READ USB MEMORY]	Opens the [USB MEMORY PLAYBACK] menu.
[INTERNAL MEMORY RECORDING]	Opens the [INTERNAL MEMORY RECORDING] menu.
[INTERNAL MEMORY PLAYBACK]	Opens the [INTERNAL MEMORY PLAYBACK] menu.
[TRF USB TO INT MEMORY]	Opens the [TRF USB TO INT MEMORY] menu.
[DISPLAY INTERNAL MEMORY]	Opens the [DISPLAY INTERNAL MEMORY] menu.
[MARK LINE TYPE]	Each press switches the line type in the following sequence. Solid line → Dotted line → Dot-dash line → Two dot-dash line → Solid line ...
[DISPLAY AIS TRACK]	Each press shows or hides AIS tracks alternately.
[DISPLAY CNSRT TRACK]	Each press shows or hides consort tracks alternately.
[DISPLAY TT TRACK]	Each press shows or hides TT tracks alternately.
[DISPLAY GPS BUOY TRK]	Each press shows or hides GPS buoy tracks alternately.
[EDIT MARK]	Opens the [EDIT MARK] window.
[DELETE MARK]	Opens the [DELETE MARK] window.
[INPUT MARK]	Opens the [INPUT MARK] window.



Function	Description
[EDIT TRACK]	Opens the [EDIT TRACK] window.
[DELETE TRACK]	Opens the [DELETE TRACK] window.
[DELETE ALL TRACK]	Deletes all own ship tracks.
[ALARM SETTING]	Opens the [ALARM SETTINGS] menu.
[NAV AIDS DISPLAY]	Each press shows or hides navigation data alternately.
[CONTOUR LINE DISPLAY]	Each press shows or hides depth contours alternately.
[RESET TRIP LOG]	Resets trip distance to zero.
[DELETE OTHER SHIPS' TRACK]	Opens the [DELETE OTHER SHIPS' TRACK] window.
[SCREENSHOT]	Saves screenshot data to the internal memory.
[REDO]	Redoes the last undo action for mark/line input, edit or deletion.
[CHANGE OPERATION DISPLAY]	Switches the active screen in the split screen.

6. Press the **DISP** key to close the menu.

## 1.8 Demo Mode

The demo mode provides simulated operation of this unit. All controls are operational. Use it in port or the like to acquaint yourself with the features of your unit.

When the demo mode is active, the indication [DEMO] appears at the top right of the display.

Own ship mark moves from the default position at the course and speed set.

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [7. DEMO MODE].

DEMO MODE		
<b>PLOTTER SIMULATION MODE</b>	: [T. POS.]	INTERNAL DEMO
SPEED SETTING	: 20.0 kn	
CRS BRG SETTING	: 000.0°	
LATITUDE SETTING	: 34° 44.000' N	
LONGITUDE SETTING	: 135° 21.000' E	
DATE SETTING	: 2015/01/01	
TIME SETTING	: 00:00:00	
COURSE SETTING	: [MOVE FORWARD]	FIGURE-8 TURN
MODE INDICATOR	: [S: SIMULATOR]	A: NORMAL POSITIONING
	D: DGPS POSITIONING	
	E: DEAD RECKONING	
	M: ENTER MANUAL	
	N: NO POSITIONING	
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER		
[MENU] : BACK		

4. Select [PLOTTER SIMULATION MODE].
5. Select [INTERNAL DEMO].
6. Select [SPEED SETTING].

 
## 1. OPERATIONAL OVERVIEW

7. Use the numeric keys to enter speed.
  8. Select [CRS BRG SETTING].
  9. Use the numeric keys to enter direction.
  10. Select [LATITUDE SETTING].
  11. Use the numeric keys to enter latitude. Use the **CURSOR ON/OFF** key to switch the coordinate between north and south and vice versa.
  12. Select [LONGITUDE SETTING].
  13. Use the numeric keys to enter longitude. Use the **CURSOR ON/OFF** key to switch the coordinate between east and west and vice versa.
  14. Select [DATE SETTING].
  15. Use the numeric keys to enter the start date.
  16. Select [TIME SETTING].
  17. Use the numeric keys to enter the start time, in 24-hour notation.
  18. Select [COURSE SETTING].
  19. Select [MOVE FORWARD] or [FIGURE-8 TURN].  
[MOVE FORWARD]: Track is traced according to the course set.  
[FIGURE-8 TURN]: Track is traced in figure-eight course.
  20. Select [MODE INDICATOR].
  21. Select one of the following:  
[S: SIMULATOR]: Use the position data provided with the built-in simulator.  
[A: NORMAL POSITIONING]: Use GPS position data.  
[D: DGPS POSITIONING]: Use DGPS position data.  
[E: DEAD RECKONING]: Use dead reckoning position data.  
[M: ENTER MANUAL]: Use manually entered position, course, etc.  
[N: NO POSITIONING]: Use no position data.
  22. Press the **DISP** key to close the menu.
- To stop the demo mode, select [T. POS.] at step 5.


## 1.9 How to Install Charts

**Note:** Save the chart data to a USB flash memory first. You do not need to create a folder.


1. Connect the USB flash memory with chart data to the USB drive.
2. Press the **MENU** key to open the main menu.
3. Select [0. SYSTEM SETTING].
4. Select [0. MAINTENANCE].
5. Select [3. UPDATE CHART]. The following message appears.



6. Select [RUN]. The message "PROCESSING. PLEASE WAIT." appears, then the [CHART ADMINISTRATION] menu appears.

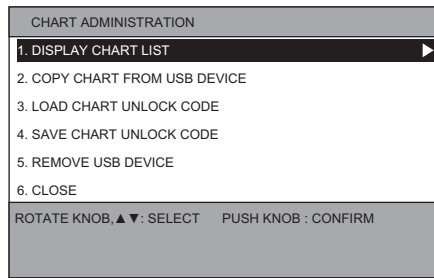

7. Select [2. COPY CHART FROM USB DEVICE] to display the list for data in the USB flash memory.

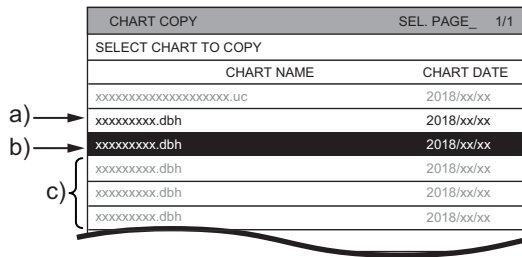

- a) Selected file (The letters are displayed in the color selected on the [BKGD/ LETTER COLOR] menu.)
  - b) Current selected position (The background is displayed in the reverse color to that selected on the [BKGD/LETTER COLOR] menu.)
  - c) Non-selected file
8. Select all charts to be installed.
  9. Select [SELECT CHART TO COPY]. The confirmation message appears.
  10. Select [RUN] to start copying the charts. The estimate of the copying time is approx. 13 minutes 30 seconds at approx. 10 GB.
  11. Push the **ENTER** knob.
  12. Do one of the following methods to unlock the chart data.

How to unlock the chart data automatically

**Note:** Save the unlock code to the USB flash memory first. The file extension is "uc".

- 1) Select [3. LOAD CHART UNLOCK CODE] in the [CHART ADMINISTRATION] menu to display the list for data in the USB flash memory.
- 2) Select the file for the unlock code. The confirmation message appears.
- 3) Select [RUN]. The message "UNLOCK CODE VERIFIED." appears.
- 4) Push the **ENTER** knob.

How to unlock the chart data manually

- 1) Select [1. DISPLAY CHART LIST] in the [CHART ADMINISTRATION] menu to display the chart list.
- 2) Select the locked chart data (displayed with red letters), then press the **CURSOR ON/OFF** key to display the character entry window.

## 1. OPERATIONAL OVERVIEW

- 3) Set the unlock code as described below.  
Rotate the **ENTER** knob to select a character, then push the knob to confirm selection. Repeat this step to select all other characters. Select [ENTER] then push the knob.  
The message "UNLOCK CODE VERIFIED." appears.
- 4) Push the **ENTER** knob.
13. When unlocking the chart data automatically, select [5. REMOVE USB DEVICE].  
The message "USB DEVICE CAN BE SAFELY REMOVED." appears. Push the **ENTER** knob then remove the USB device.
14. Select [6. CLOSE]. The confirmation message appears.
15. Select [RUN]. The system restarts.


# 2. PLOTTER DISPLAY OVERVIEW

The plotter display can be shown on the full screen with or without the NAV information box, or in a two-way horizontal split screen with the compass display.

## 2.1 Plotter Display

### 2.1.1 Plotter display layout


The plotter display shows chart data, tracks, waypoints, marks, etc. Use it to monitor ship's progress toward a destination.

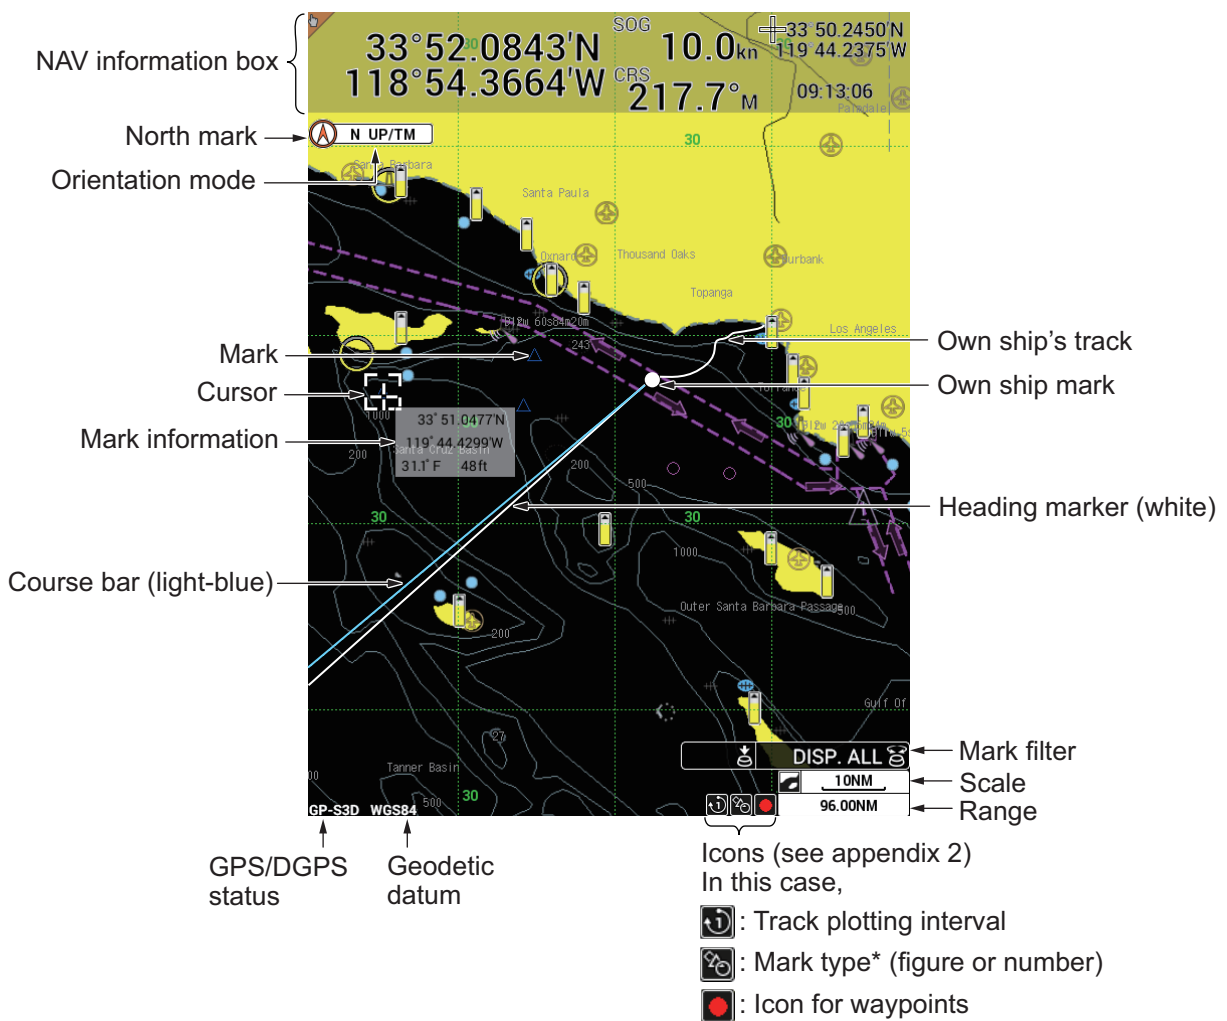


\*: The maximum number of display points on the screen is 3,000. The excess points are thinned out (culled). During the culling process, the icon for the mark type changes from white to yellow.

### 2.1.2 NAV information box

The NAV information box is displayed at the top or bottom of the screen. You can select the data to show both when a destination is set and no destination set (see section 1.4.2, section 1.4.4).

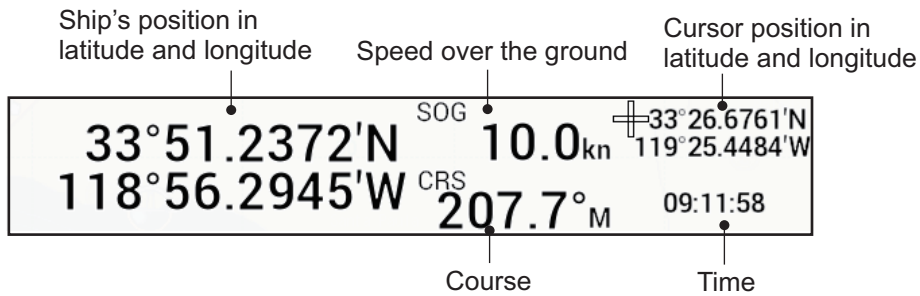


Example for navigation information (no destination set)

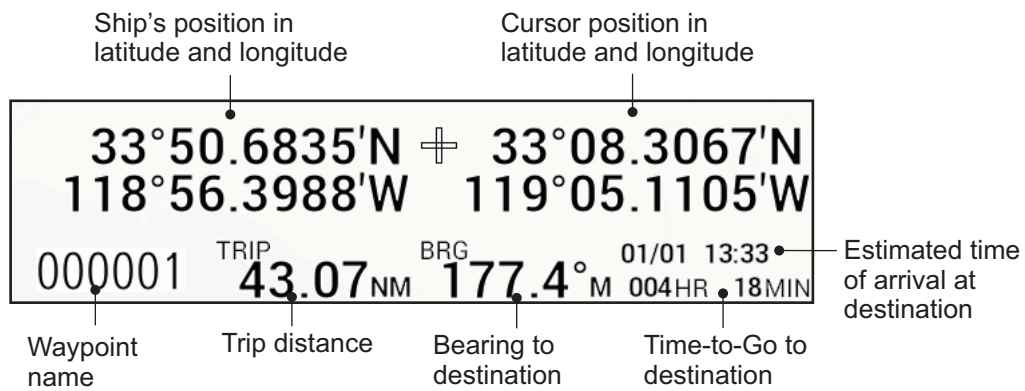

Example for destination information (with destination set)

### 2.1.3 Compass display

The compass display, displayed at the top of the screen in a horizontal split 1:1 screen, provides steering information toward a destination.

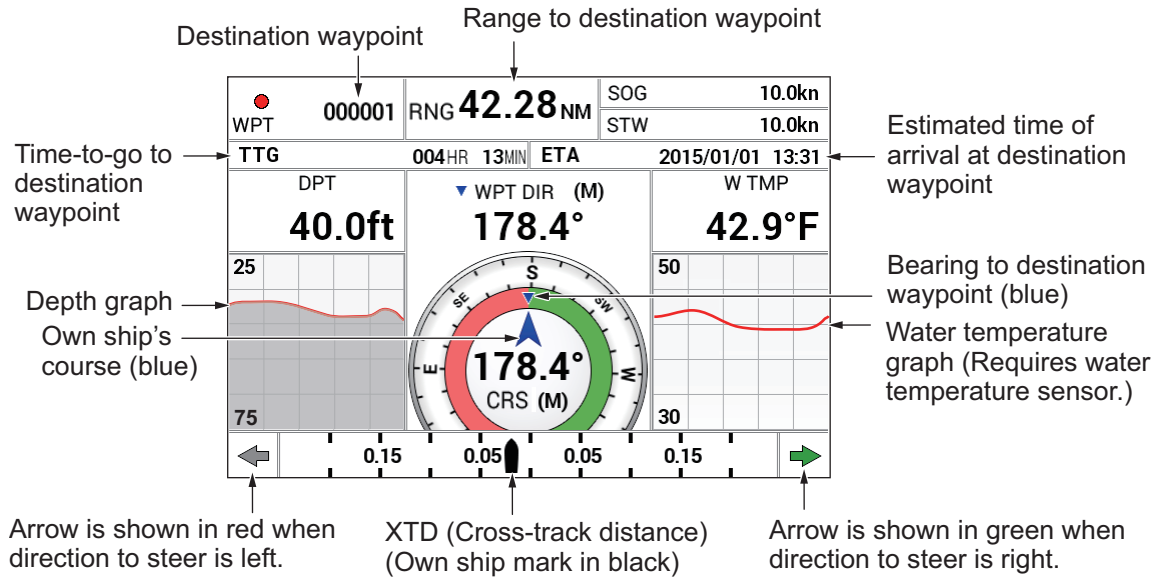

#### Compass indicator

The blue inverted triangle ( ▼ ) shows the bearing to the destination waypoint, and the blue arrow ( ▲ ) shows own ship course.

**Note:** The course means the direction of own ship's movement, not the direction of heading. The course includes the affect of current and wind.

#### Depth and water temperature graphs

The depth and water temperature graphs, which require appropriate sensors, show the latest 10 minutes of depth and water temperature data. The range of the depth graph is 50 feet and it is automatically adjusted with depth.


#### XTD (Cross track distance) monitor

The own ship mark ( ● ) shows ship's cross-track distance from the intended course. The mark is shown in black when the amount of cross-track distance is within the XTD monitor range, and hollow when it is over. An arrow appears at the right or left side of the XTD monitor and it shows the direction to steer to return to the intended course. The arrow points left and is red when you should steer left, and points right and is green when you should steer right. To maintain course, steer the vessel so the own ship mark stays at the center of the XTD monitor.


### 2.1.4 Satellite status/location display

The satellite status/location display provides data about the GPS satellites and GEO satellite (for WAAS). To display the satellite status/location display, do the following:

1. Press the **MENU** key to open the main menu.
2. Select [8. PLOTTER DISPLAY SETTING].

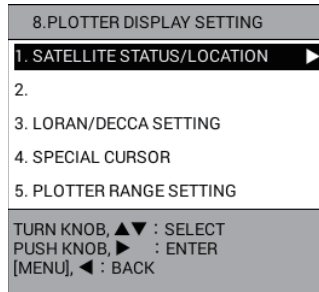

3. Select [1. SATELLITE STATUS/LOCATION] to display the satellite status/location display.

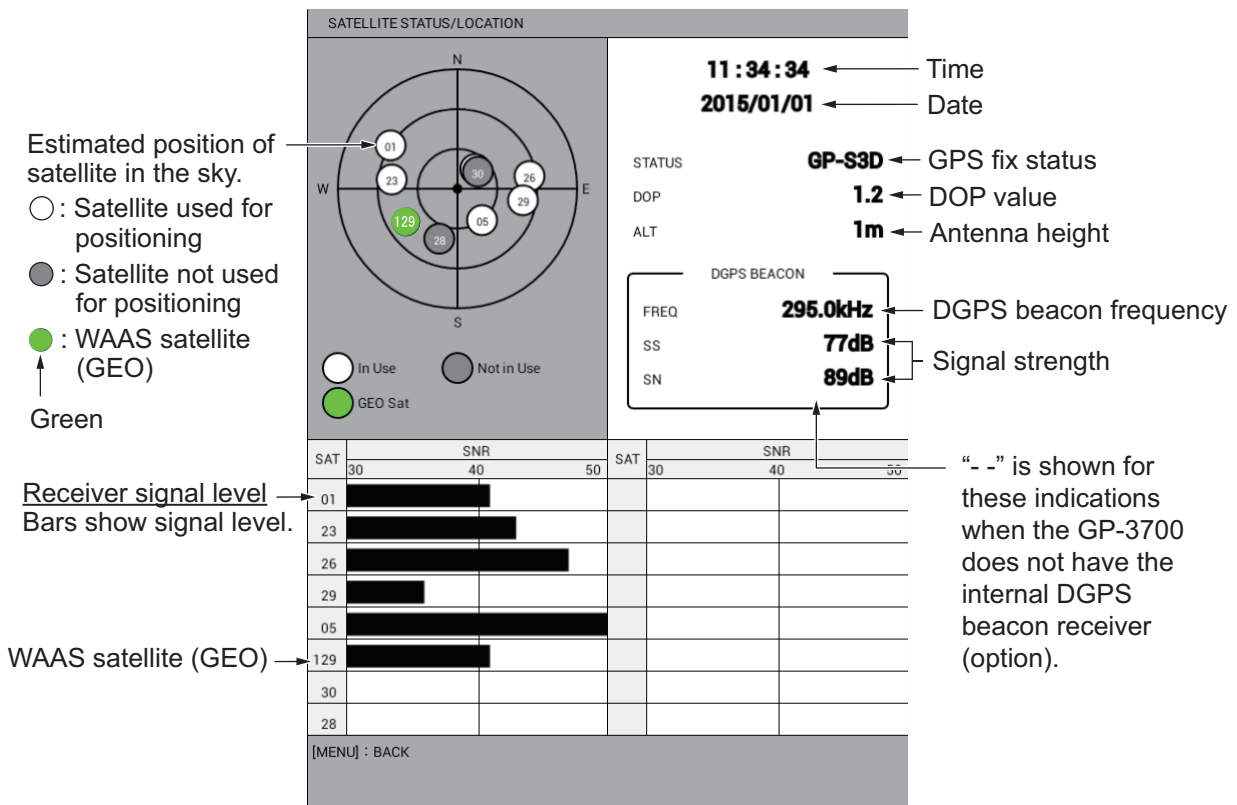

**DOP:** DOP stands for Dilution of Precision and is an indication of the quality of the satellite constellation. The smaller value means the higher accuracy. (For your reference, the positioning accuracy is approx. 10 m when the value is less than "4".)


**SS:** SS (Signal Strength) displays a numeric representation of electrical field strength of the received signal on the selected frequency. The higher the number the stronger the received signal, and a figure above 60 is normal.


**SN:** SN (Signal-to-Noise) ratio displays the ratio between the desired signal and unwanted noise on the selected frequency. The higher the SN ratio the better the quality of the signal, and a figure above 21 is normal.

4. Press the **DISP** key to close the satellite status/location display and the menu.




### 2.1.5 Tide graph display

To display the tide graph, put the cursor on the tidal station icon (  ) then push the **ENTER** knob.

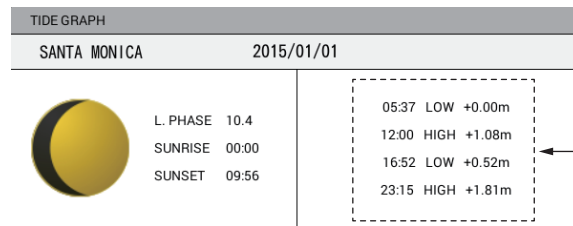

Tide height for the mean sea surface at the tidal station


Tide height at the selected time → +0.75m 70% UP 09:30

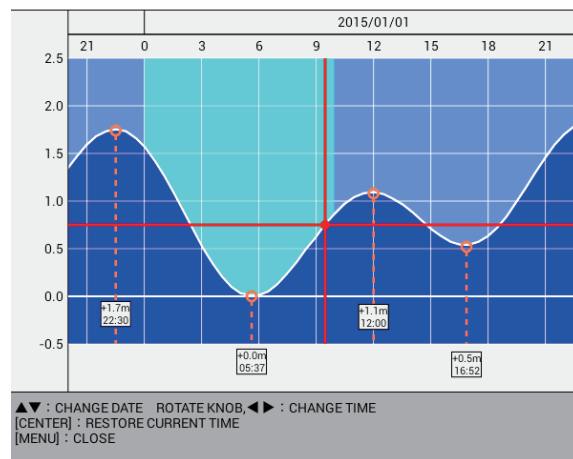

- The information is mostly accurate under moderate weather conditions. However, storms and weather fronts can influence forecasted tide times and heights.
- To change the date, press ▲ or ▼ key.
- To change the tide prediction time, rotate the **ENTER** knob or press ◀ or ▶ key to move the vertical red line on the graph.
- To restore the display to the current time, press the **CENTER** key.
- To quit the tide graph display and return to the plotter display, press the **MENU** key (or the **DISP** key).


#### Tidal station icon

The arrow on the tidal station icon is up when the tide is rising; down when the tide is receding. The icon is gray and yellow according to the tide state. The icon is all yellow when the tide is high. The horizontal line appears in the center of the icon when there is no change in tide.

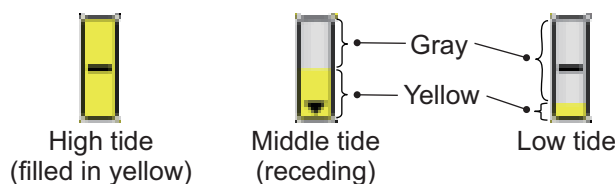

## 2.2 How to Use the Cursor

The cursor functions to select position for marks and waypoints, find position of an object, etc. You can select the cursor shape from crossing line and cross-hair.

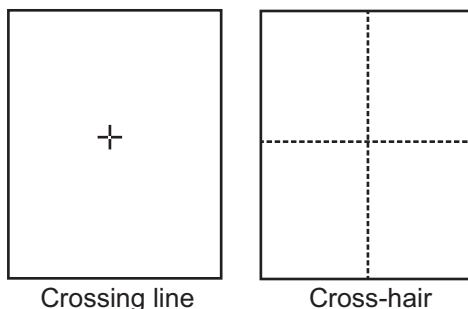

To use the cursor, do the following:

1. Press the **CURSOR ON/OFF** key to turn on the cursor. Each press of this key turns the cursor on and off.
 

**Note:** You can change the shape or color for the cursor in the [DISPLAY FORMAT] - [CURSOR SHAPE] or [CURSOR COLOR] menus (see page 9-13).
2. Do one of the following to move the cursor.
  - Rotate the trackball. The cursor moves in the direction of trackball rotation.
  - Press ▲, ▼, ◀, or ▶ (CursorPad). The cursor moves in the direction of the arrow operated. You can hold down an arrow pad to move the cursor faster. To move the cursor at a slant angle, press the appropriate arrow pads together. For example, to move the cursor in the left-up direction (approx. 315°), press ▲ and ◀ together.

The procedures in this manual, for sake of brevity, replace the “rotate” and “press” actions with “move the cursor”.

When the cursor reaches an edge of the screen, the display is scrolled in the opposite direction. When the cursor is turned on, the cursor position is displayed in the NAV information box when [CURSOR LATITUDE, LONGITUDE] is set as the navigation/destination information (see section 1.4.4).

3. To put the cursor at the center of the screen, press the **CENTER** key.

## 2.3 How to Change the Chart Scale (Zoom In, Zoom Out)

It can be useful to change the chart scale to

- show destination on the display (when it is currently off the screen)
- find how close you are to your destination
- view ship’s tracks around a fishing ground

Press the **ZOOM IN** key to increase the chart scale, or the **ZOOM OUT** key to decrease the chart scale.

When the cursor is OFF: When own ship mark is displayed on the screen, the range scale is enlarged or shrunk with own ship position kept on the screen. When own ship mark is not displayed on the screen, the range scale is enlarged or shrunk with the middle of the screen as center.

When the cursor is ON: The range scale is enlarged or shrunk with the cursor position as center.


The current range appears at the bottom right of the screen. The range value shows the distance between the left-side and right-side edges of the screen.

*Range (Unit: NM)*


0.025	0.05	0.075	0.10	0.125	0.25	0.50	0.75	1.00
1.50	2.00	3.00	4.00	6.00	8.00	12.0	16.0	24.0
32.0	48.0	72.0	96.0	128	256	512	1024	

**Note 1:** You can select what ranges to use. See section 9.2.2.

 
**Note 2:** The width of the screen can be shown in scale or distance (default). You can also turn off the width indication. See page 9-11.



Range (distance)

 

Scale

 

No indication

## 2.4 Orientation Mode

The display orientation for the plotter display can be selected to the following six modes. Press the **MODE** key to change the orientation mode.

**North up:** True north (0°) is at the top of the screen. When the heading changes, own ship mark moves according to heading or COG. This mode is for long-range navigation.

**Head up:** Displays the chart with the current compass heading of own ship at the top of the screen. When the heading changes, own ship mark remains fixed, and the chart picture rotates according to the heading.

**AC up:** The course is at the top of screen at the moment the auto course-up mode is selected. When the course changes more than the set angle, the picture resets to display the course at the moment at the top of the screen (see page 9-18).

**Course up:** The set course to the destination is at the top of the screen when the destination is set.

**Goto up:** The destination is at the top of the screen when the destination is set.

**Specified direction up:** The specified direction set in the menu is at the top of the screen. To set the specified direction, do the following:

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].

## 2. PLOTTER DISPLAY OVERVIEW

### 3. Select [2. NAVIGATOR SETUP].

NAVIGATOR SETUP		SEL. PAGE 1/2	
SELECT NAV SOURCE	: INTERNAL	GPS	LORAN C
		ALL	
TIME DIFFERENCE	: +09:00		
NMEA TIME DIFFERENCE	: +00:00		
DATUM	: WGS-84	TOKYO	
POSITION SMOOTHING	: 000		
SPEED SMOOTHING	: 000		
SPEED AVERAGING	: 060		
NMEA SPEED AVERAGING	: 060		
LATITUDE OFFSET	: 0.000° N		
LONGITUDE OFFSET	: 0.000° E		
DISABLE SATELLITE(GPS)	: ---		
ANTENNA HEIGHT	: 05 m		
GPS FIX MODE	: 2D	2D/3D	
DGPS/SBAS	: DGPS	SBAS	AUTOMATIC
		NO	
DGPS/SBAS ALARM	: ON	OFF	

TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER  
[0]~[9] : NO. OF PAGE    ◀▶ : MOVE PAGE  
[MENU] : BACK

[NAVIGATOR SETUP] menu: Page 1

Press ▶.

Press ◀.

NAVIGATOR SETUP		SEL. PAGE 2/2	
DGPS BEACON STATION	: AUTOMATIC	MANUAL	
FREQUENCY SETTINGS	: 320.5 kHz		
DGPS BAUD RATE	: 50	100	200
SBAS SATELLITE SEL.	: AUTOMATIC	MANUAL	
SBAS MAN. SAT. SET.	: 134		
DISABLE SATELLITE(SBAS)	: ---		
DISABLE SATELLITE(QZSS)	: ---		
COURSE UP REDRAW ANGLE	: 22.5°	(20.0 to 60.0)	
FREE UP ANGLE	: 000°		
COURSE SMOOTHING	: 000		
ROLLOVER	: 2015		
RTE SENTENCE	: LEGACY	DNV	

TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER  
[0]~[9] : NO. OF PAGE    ▶ : MOVE PAGE  
[MENU] : BACK

[NAVIGATOR SETUP] menu: Page 2

4. Select [FREE UP ANGLE] on page 2.
5. Use the numeric keys to enter angle.
6. Press the **DISP** key to close the menu.

## 2.5 How to Shift the Display

The display can be shifted on the plotter display.


1. If the cursor is displayed, press the **CURSOR ON/OFF** key to turn off the cursor.
2. Operate the trackball. The display shifts in the direction in which the trackball is rolled.
3. Press the **CENTER** key.
  - In north up or specified direction up mode, own ship mark is returned to the center of the screen.
  - In head up, AC up, course up or goto up mode, own ship mark is shifted to a position that is 1/3 the distance from the bottom to the top of the screen.

**Note:** When own ship reaches an edge of the screen, the own ship mark is automatically shifted sternward so there is some distance between the bow of the mark and the edge of the screen.


## 2.6 How to Measure the Range and Bearing Between Two Points

You can measure the range and bearing between any two points on the plotter display.

1. If the cursor is displayed, press the **CURSOR ON/OFF** key to turn off the cursor.
2. Press the **0** key. A dashed circle appears with the red "X" mark at its center and a dashed line extends from the "X" mark to the cursor. The [BTWN] data box appears at the top left of the screen.

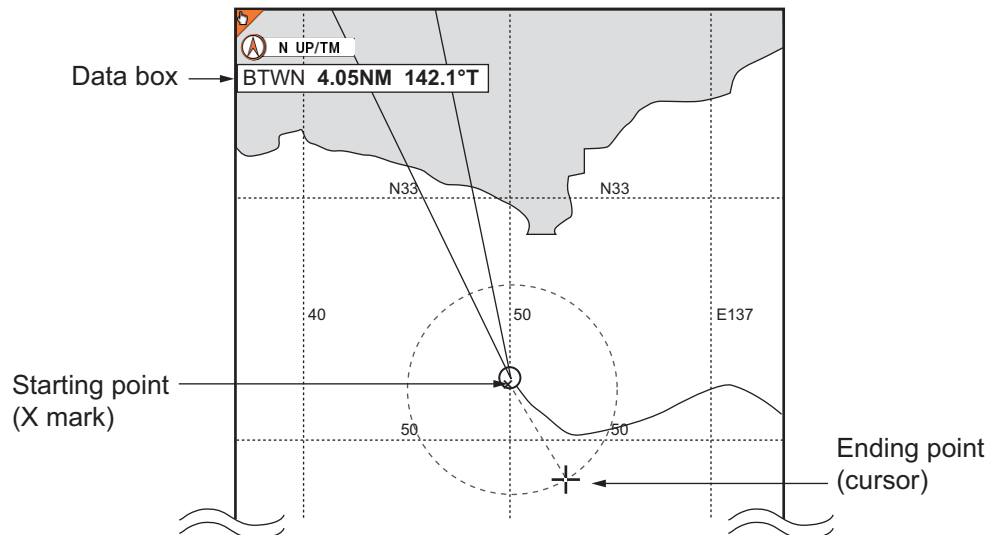


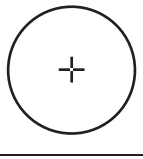
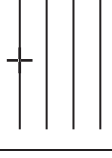

3. Use the trackball to put the cursor on the starting point.
4. Push the **ENTER** knob then the "X" mark moves to the cursor position.
5. Use the trackball to put the cursor on the ending point. The [BTWN] (Between) data box shows the range and bearing between the starting and ending points.

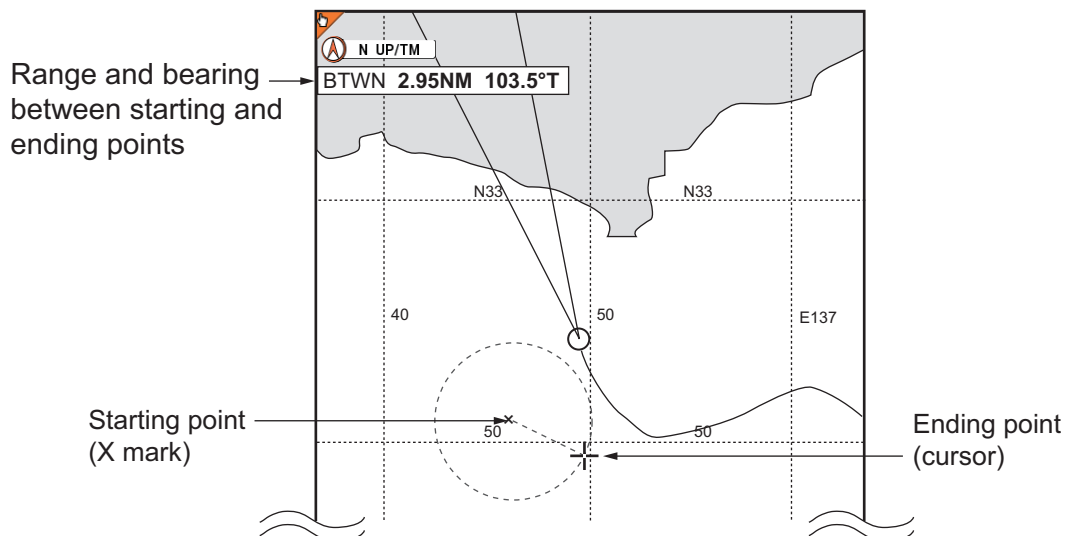

6. Press the **0** key to terminate the measurement and erase the dashed circle, line, and data box.

## 2.7 How to Change the Cursor Configuration

The cursor is available in four configurations; crossing line, circle, parallel index line, and diamond. When the cursor is turned on, the selected cursor is displayed with a focus on the cursor. When the cursor is turned off, the selected cursor is displayed with a focus on own ship mark. The configuration for the standard cursor in the table below is "crossing line".

Configuration	Appearance	Usage
Crossing line		General use. Select position for mark; select mark to erase; select target (TT, AIS) to display its data, etc.
Circle		Measure range between two objects (including own ship).
Parallel index line		Maintain distance between own ship and coastline, another vessel.
Diamond		Mark location of fishing net.

**Note:** Hereafter, "cursor" means the crossing line cursor, unless otherwise noted.

The **CURSOR ON/OFF** key shows or hides the cursor.

To change the cursor configuration, do as follows:

- Press the **CURSOR SEL** key to select the cursor to use.
 

**When crossing line or cross-hair cursor is displayed:** Each time you press the key, the cursor configuration changes as follows:  
Circle → Parallel index line → Diamond → Crossing line / cross-hair → circle → ...

**When crossing line or cross-hair cursor is not displayed:** Each time you press the key, the cursor configuration changes as follows:  
Circle → Parallel index line → Diamond → No indication → circle → ...

**Note 1:** You can disable unnecessary cursors except the crossing line/cross-hair cursor. See "How to disable unnecessary cursors" on page 2-11.

**Note 2:** When the cursor is not displayed, the selected cursor can move with the own ship mark.
- For the cursor other than the crossing line or cross-hair cursor, use the **ENTER** knob to adjust the selected cursor.
 

**Circle:** Rotate the knob to change the radius of the circle. Push the knob to anchor the circle. The radius of the circle is displayed at the top left of the screen.


**Parallel index line:** Rotate the knob to rotate the line(s), then push the knob. Rotate the knob to adjust the interval between index lines. Push the knob when finished. The orientation and interval for the index lines are displayed at the top left of the screen. You can select the number of parallel index lines to display and the orientation method (see "How to set the orientation method and the number of parallel index lines" on page 2-11).

**Diamond:** Rotate the knob to rotate the diamond. Push the knob to anchor the di-


amond. You can scale the diamond to match the size of your fishing net. The angles for casting net is displayed at the top left of the screen. To change the size of the diamond, see "How to change the size of the diamond cursor" on page 2-12.

**How to disable unnecessary cursors**

1. Press the **MENU** key to open the main menu.
2. Select [8. PLOTTER DISPLAY SETTING].
3. Select [4. SPECIAL CURSOR].

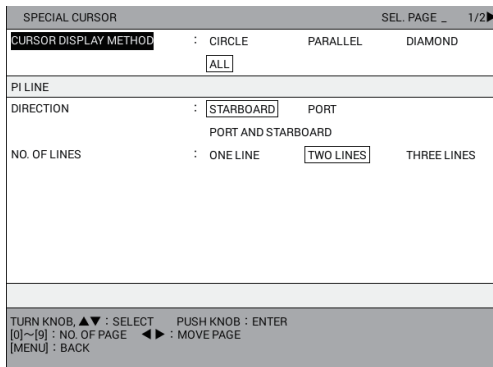

[SPECIAL CURSOR] menu: Page 1

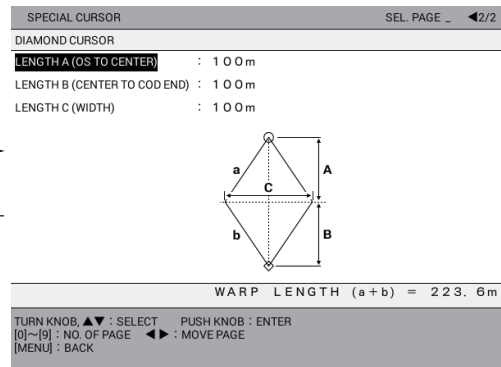


[SPECIAL CURSOR] menu: Page 2

4. Select [CURSOR DISPLAY METHOD] on page 1.
5. Select [CIRCLE], [PARALLEL], [DIAMOND] or [ALL]. Only the selected cursor is made available when pressing the **CURSOR SEL** key. For example, when selecting [CIRCLE], the cursor configuration changes as follows:  
Circle → Crossing line / cross-hair → Circle → ...  
Select [ALL] to turn on all cursor configurations.
6. Press the **DISP** key to close the menu.

**How to set the orientation method and the number of parallel index lines**

1. Press the **MENU** key to open the main menu.
2. Select [8. PLOTTER DISPLAY SETTING].
3. Select [4. SPECIAL CURSOR].
4. Select [DIRECTION] in [PI LINE] on page 1.
5. Select the orientation method.  
[STARBOARD]: Displays parallel index lines to starboard.  
[PORT]: Displays parallel index lines to port.  
[PORT AND STARBOARD]: Displays parallel index lines to port and starboard.
6. Select [NO. OF LINES] in [PI LINE] on page 1.
7. Select the number of parallel index lines.
8. Press the **DISP** key to close the menu.

Parallel index line cursor

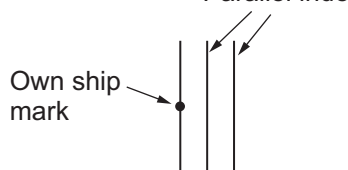

[DIRECTION]: [STARBOARD],  
[NO. OF LINES]: [TWO LINES]




[DIRECTION]: [PORT],  
[NO. OF LINES]: [THREE LINES]



[DIRECTION]: [PORT AND STARBOARD],  
[NO. OF LINES]: [ONE LINE]

**How to change the size of the diamond cursor**

1. Press the **MENU** key to open the main menu.
2. Select [8. PLOTTER DISPLAY SETTING].
3. Select [4. SPECIAL CURSOR].
4. Select [LENGTH A (OS TO CENTER)] in [DIAMOND CURSOR] on page 2.
5. Referring to the figure, use the numeric keys to set the distance from own ship to the center of the diamond.
6. Set [LENGTH B (CENTER TO COD END)] and [LENGTH C (WIDTH)] in the same manner.
7. Press the **DISP** key to close the menu.

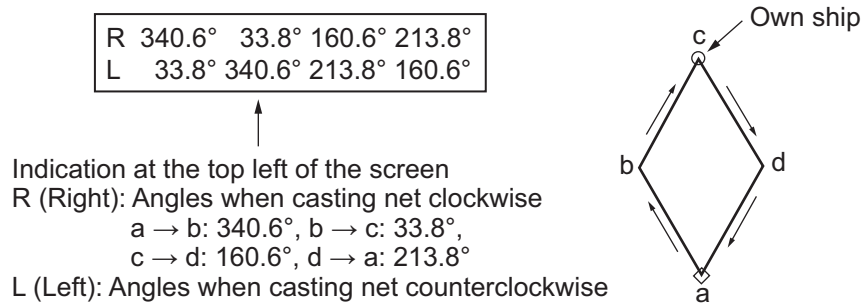


## 2.8 Chart Icons

The chart icon at the bottom right of the screen changes according to the state of the chart. See the table below.

Icon	Meaning
	Suitable chart scale.
	Unsuitable chart scale. Press the <b>ZOOM IN</b> or <b>ZOOM OUT</b> key to adjust the chart scale.
	No chart file.


The chart scale is displayed on the right side of the icon. The scale value and scale width change according to the selected range.

 



# 3. TRACK

Own ship track is plotted on the plotter display using position data fed from the built-in GPS receiver. When connecting with a ARPA-equipped radar or a TT-equipped radar, other ship's track can also be plotted.

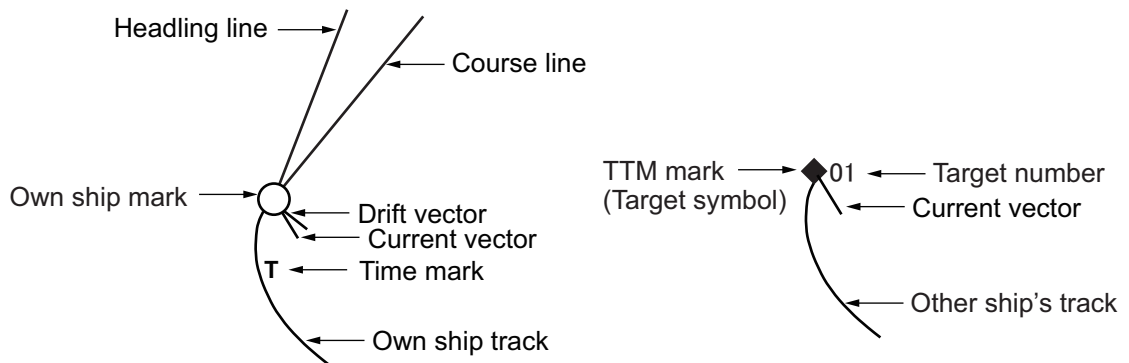


The own ship track or other ship's track can be saved as a route (see section 6.1.3).

## 3.1 How to Show/Hide Track

### 3.1.1 How to show/hide own ship track

Own ship track is shown by default.

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].

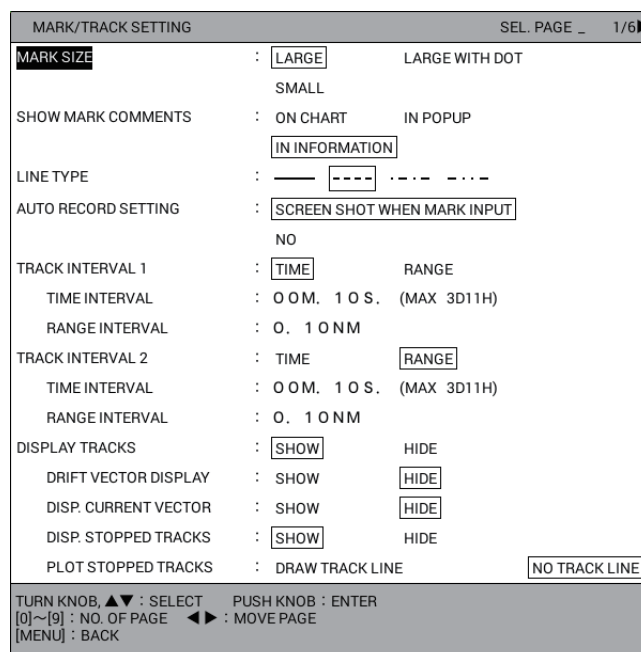


3. Select [DISPLAY TRACKS] on page 1.
4. Select [SHOW] to show own ship track or [HIDE] to hide own ship track.
5. Press the **DISP** key to close the menu.

**How to change the memory capacity for own track**

 The default memory capacity for track is 30,000 points. If you don't need to record that many track points, you can change the memory capacity as shown below. If the number of track points currently saved in the memory exceeds the track memory capacity, the oldest points over the capacity are erased. If you require the points, save them to an internal memory (see section 10.2.1) or a USB flash memory (see section 10.3.3).

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Select [OWN TRACK MAX POINTS] on page 2.
4. Press the numeric keys to enter the max. memory points for own track. The following confirmation message appears.




xxxx: Setting value

5. Select [RUN].
6. Press the **DISP** key to close the menu.

**Time mark**

The time marks “T” are displayed on the own ship track every hour on the hour by default (see the figure at the top left on page 3-1). To hide the time marks, do the following:

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Select [DISPLAY TIME MARK] on page 3.

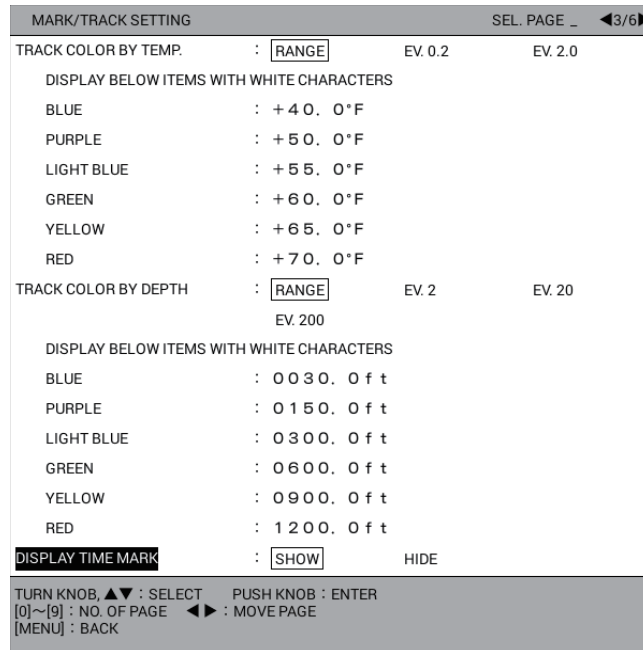


4. Select [HIDE].
5. Press the **DISP** key to close the menu.

### 3.1.2 How to show/hide other ship's tracks and symbols

Other ship's (AIS, TT, GPS BUOY) tracks and symbols are shown or hidden individually.

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Open the page 4. For other ship's tracks, select [DISPLAY AIS TRACK] (see section 11.3.1), [DISPLAY TT TRACK] or [DISPLAY GPS BUOY TRACK]. For other ship's symbols, select [DISPLAY AIS SYMBOLS], [DISPLAY TT SYMBOLS] or [DISPLAY GPS BUOY SYMBOLS].

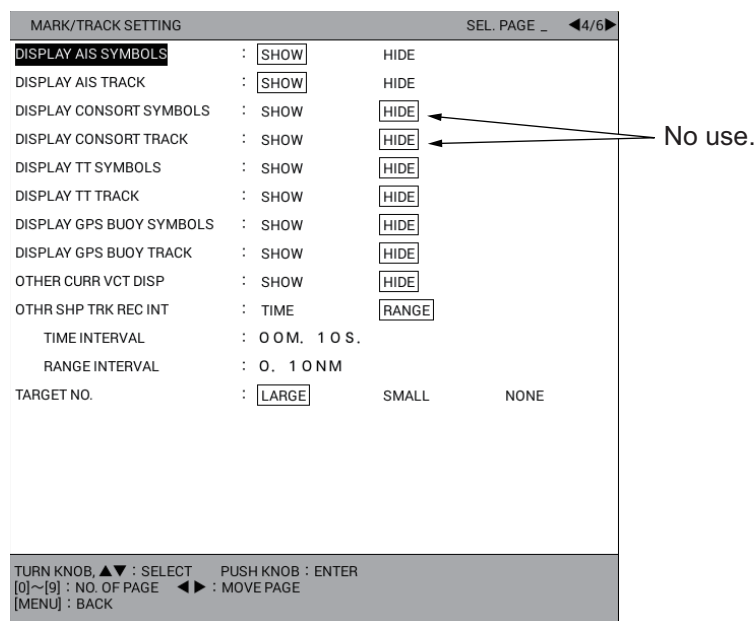

4. Select [SHOW] to show each track or symbol, or [HIDE] to hide each track or symbol.
5. Press the **DISP** key to close the menu.

### 3.1.3 How to show/hide the current vector

The current vector can be displayed at every memory point on own ship track.

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Select [DISP. CURRENT VECTOR] on page 1.
4. Select [SHOW] to show current vector on own ship track or [HIDE] to hide current vector.
5. Press the **DISP** key to close the menu.

**Note:** The current vector can be displayed on own ship mark. See [OS CURR. VECTOR DISP] on page 9-14.

### 3.1.4 How to show/hide drift vector

The drift vector (see "Simple calculation function for drift" on page 3-15) can be displayed at every memory point on own ship track.

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Select [DRIFT VECTOR DISPLAY] on page 1.
4. Select [SHOW] to show drift vector on own ship track or [HIDE] to hide drift vector.
5. Press the **DISP** key to close the menu.

**Note:** The drift vector can be displayed on own ship mark. See [DISPLAY OS DRIFT VECTOR] on page 9-14.

## 3.2 How to Record Own Ship's Track


### 3.2.1 How to stop/restart recording of track

When your boat is at anchor or returning to port, you probably won't need to record its track. You can stop recording the track, to conserve the track memory, as follows.

1. Press the **PLOT INTVL** key consecutively so the track plotting interval icon at the bottom of the screen shows **H** (hold) to stop recording the track. Each press of the key selects the track interval or stops track plotting as follows:

Track interval 1 (🕒) → Track interval 2 (🕒) → Stop of track plotting (H) → Track interval 1 → ...

When selecting [OWN TRACK PLOTTING INTERVAL] in the [DISPLAY SETTING] menu as the navigation/destination information, the current track interval is displayed in the NAV information box (see section 1.4.2). When track plotting is stopped, the own ship mark changes from ● to ○, and the track is not stored in the memory.

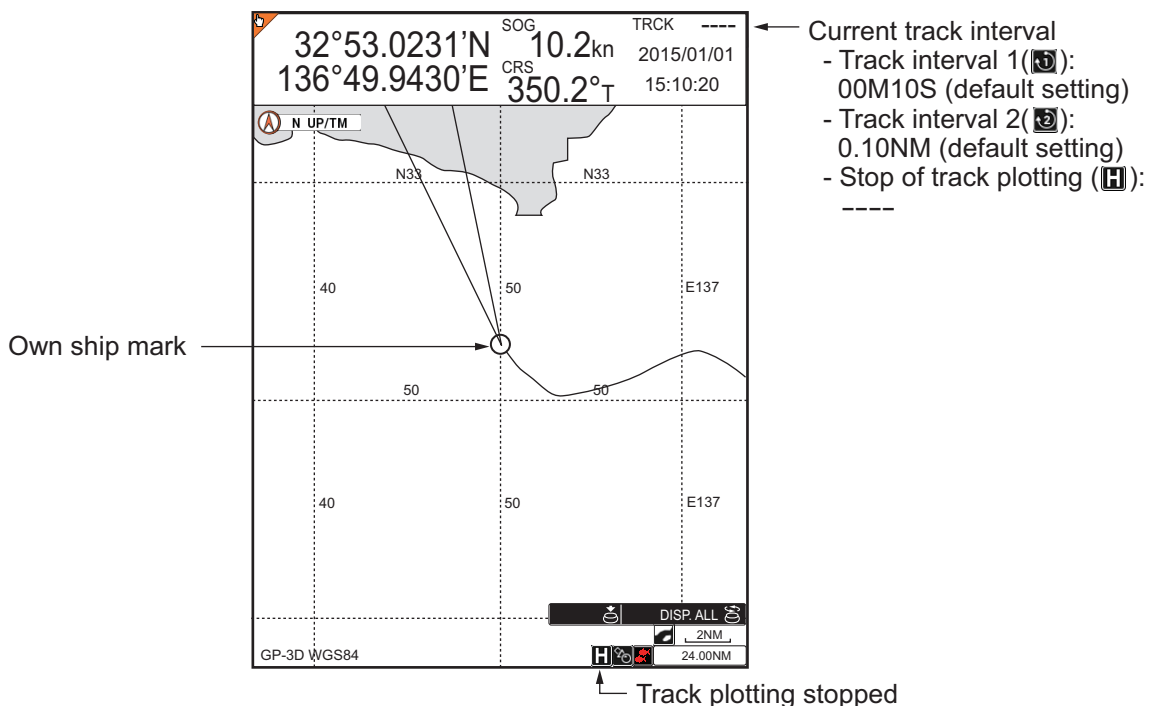

- To restart recording, press the **PLOT INTVL** key. The own ship mark changes from ○ to ●.

### 3.2.2 How to show track while track plotting is stopped


You can show or hide own ship track on the plotter display while track plotting is stopped.

- Press the **MENU** key to open the main menu.
- Select [4. MARK/TRACK SETTING].
- Select [DISP. STOPPED TRACKS] on page 1.
- Select [SHOW] or [HIDE].

[SHOW]: The own ship track is shown while track plotting is stopped. The own ship track is not recorded; the track is erased when it goes off screen or when the power is turned off. Also, the own ship track whose plotting is stopped is erased when its plotting is restarted or when the chart display is zoomed in or out, as shown in the right figure.

[HIDE]: The own ship track is not displayed while track plotting is stopped.

- Press the **DISP** key to close the menu.

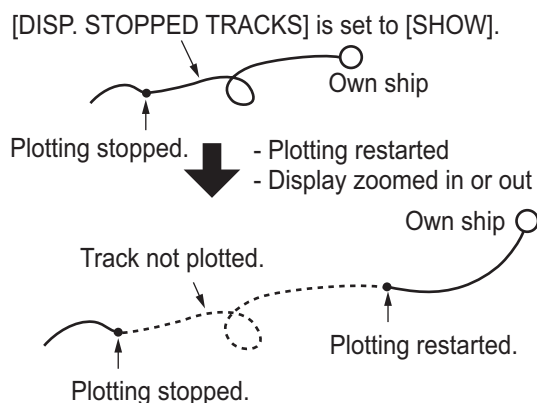

### 3.2.3 How to connect track after restarting plotting


When you restart plotting of track, the points where the plotting was stopped and restarted can be connected with a straight line.

- Press the **MENU** key to open the main menu.
- Select [4. MARK/TRACK SETTING].
- Select [PLOT STOPPED TRACKS] on page 1.
- Select [DRAW TRACK LINE] or [NO TRACK LINE].

[DRAW TRACK LINE]: Stopping and restarting points are connected with a straight line.

[NO TRACK LINE]: Stopping and restarting points are not connected.

- Press the **DISP** key to close the menu.

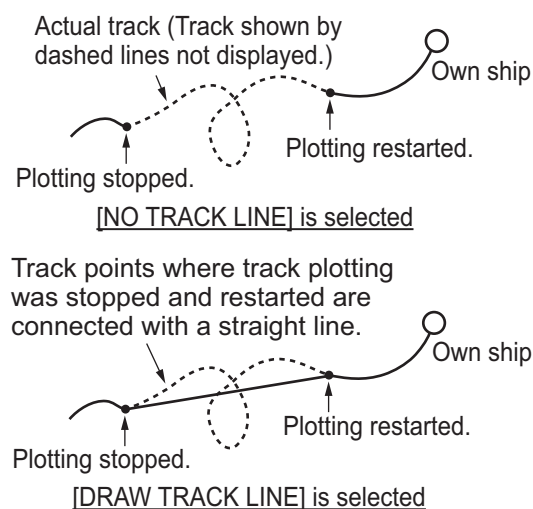


## 3.3 How to Change Track Color

Track color is available in red, yellow, green, light-blue, purple, blue, or white. It can be useful to change track color on a regular basis to discriminate between previous day's track, etc. The track color for own ship can be changed automatically according to water temperature or depth.

### 3.3.1 How to change track color for own ship

1. Press the **TRACK COLOR** key to show the [CHANGE TRACK COLOR] window.

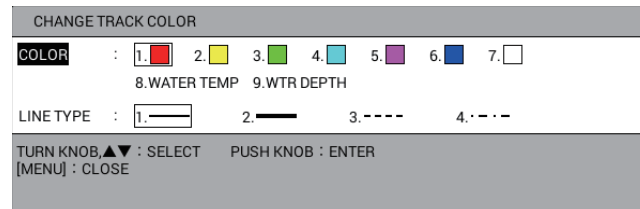

**Note:** This window automatically closes when there is no operation for 10 seconds.

2. Select [COLOR].
3. Press the applicable numeric key to select the color. The color changes at the moment a key is pressed.
  - 1 to 7: Track is colored according to the color shown on the numeric key pressed.
  - 8 [WATER TEMP]: Track color changes with water temperature. (Requires water temperature sensor.)
  - 9 [WTR DEPTH]: Track color changes with depth.
4. Press the **MENU** or **DISP** key to close the window.

**Note:** You can partly change track color in the [EDIT TRACK] menu (see section 3.7).

### 3.3.2 How to automatically change track color for own ship with water temperature

The track color for own ship changes with water temperature when selecting [8. WATER TEMP] at step 3 in section 3.3.1. There are two methods by which track color may be changed according to water temperature: by preset temperature range or temperature variation.

#### How to change track color by preset temperature range

The own ship track is displayed in the same color when the water temperature is within a preset range. For example, you can set up to paint the track yellow when the water temperature is between 63°F and 68°F.

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].

## 3. Select [TRACK COLOR BY TEMP.] on page 3.

MARK/TRACK SETTING		SEL. PAGE _ ◀3/6▶	
TRACK COLOR BY TEMP	: [RANGE]	EV. 0.2	EV. 2.0
DISPLAY BELOW ITEMS WITH WHITE CHARACTERS			
BLUE	: + 4 0. 0°F		
PURPLE	: + 5 0. 0°F		
LIGHT BLUE	: + 5 5. 0°F		
GREEN	: + 6 0. 0°F		
YELLOW	: + 6 5. 0°F		
RED	: + 7 0. 0°F		
TRACK COLOR BY DEPTH	: [RANGE]	EV. 2	EV. 20
	EV. 200		
DISPLAY BELOW ITEMS WITH WHITE CHARACTERS			
BLUE	: 0 0 3 0. 0 f t		
PURPLE	: 0 1 5 0. 0 f t		
LIGHT BLUE	: 0 3 0 0. 0 f t		
GREEN	: 0 6 0 0. 0 f t		
YELLOW	: 0 9 0 0. 0 f t		
RED	: 1 2 0 0. 0 f t		
DISPLAY TIME MARK	: [SHOW]	HIDE	
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER			
[0]~[9] : NO. OF PAGE    ◀▶ : MOVE PAGE			
[MENU] : BACK			


4. Select [RANGE].
5. Set the temperature range desired for each color. For example, to paint the track red when the water temperature is higher than 68°F, do the following:
  - 1) Select [RED].
  - 2) Press the **6, 8, 0** keys.
  - 3) Set ranges for other colors similarly.
 

**Note 1:** The temperature range should be set in ascending order from BLUE.

**Note 2:** The temperature less than the one set at BLUE is displayed in WHITE.
6. Press the **DISP** key to close the menu.

### How to change track color by temperature variation

This setting paints the track in up to five colors according to temperature variation selected. The setting [EV. 0.2], for example, paints the track red when the water temperature is between 65.0°F and 65.1°F; yellow when the water temperature is between 65.2°F and 65.3°F. Thus, the track color changes green, light-blue and purple in 0.2 degree steps. When the water temperature becomes 66.0°F, the track color returns to red (see the figure below).

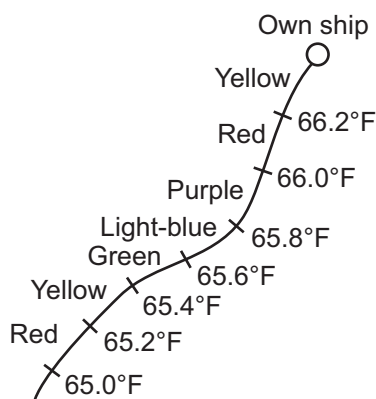

1. Press the **MENU** key to open the main menu.

### 3. TRACK

2. Select [4. MARK/TRACK SETTING].
3. Select [TRACK COLOR BY TEMP.] on page 3.
4. Select [EV. 0.2] or [EV. 2.0].
5. Press the **DISP** key to close the menu.

#### 3.3.3 How to automatically change track color for own ship with depth

The track color for own ship changes with depth when selecting [9. WTR DEPTH] at step 3 in section 3.3.1. There are two methods by which track color may be changed according to depth: by preset depth range or depth variation.

##### How to change track color by preset depth range

The own ship track is displayed in the same color when the depth is within a preset range. For example, you can set up to paint the track yellow when the depth is between 500 and 600 ft.


1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Select [TRACK COLOR BY DEPTH] on page 3.
4. Select [RANGE].
5. Set the depth range as desired. For example, to change track color to red when the depth is more than 1000 ft, do the following:
  - 1) Select [RED].
  - 2) Press the **1, 0, 0, 0, 0** keys.
  - 3) Set depths for other colors similarly.

**Note 1:** The depth should be set in ascending order from BLUE.

**Note 2:** The depth less than the one set at BLUE is displayed in WHITE.
6. Press the **DISP** key to close the menu.

##### How to change track color by depth variation

This setting paints the track in up to five colors according to depth variation selected. The setting [EV. 2], for example, paints the track red when the depth is between 600 and 602 ft; yellow when the depth is between 603 and 604 ft. Thus, the track color changes green, light-blue and purple in 2 ft steps. When the depth becomes 610 ft, the track color returns to red (see the figure below).

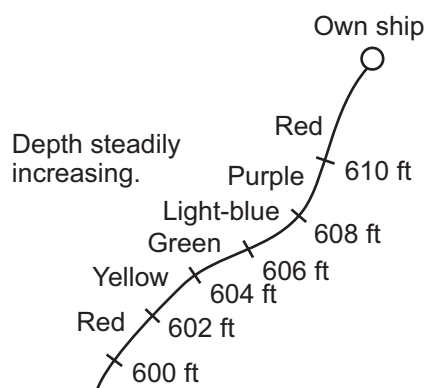




1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Select [TRACK COLOR BY DEPTH] on page 3.
4. Select [EV. 2], [EV. 20] or [EV. 200].
5. Press the **DISP** key to close the menu.

### 3.3.4 How to change track color for other ship

1. Put the cursor on the target symbol to change its track color. The selected target data (see section 3.9) is displayed.
2. While the selected target data is displayed, press the **TRACK COLOR** key to show the [CHANGE TRACK COLOR] window. The following figure is the example for TT symbol.

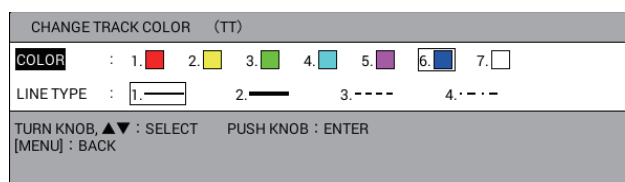

**Note:** The [CHANGE TRACK COLOR] window closes automatically when there is no operation for 10 seconds.


3. Select [COLOR].
4. Press the numeric key corresponding to desired color. The color changes at the moment a key is pressed.
5. Press the **MENU** or **DISP** key to close the window.

## 3.4 How to Change Track Line Type

Track may be traced on the display with a thin solid line ( — ), thick solid line ( — ), dotted line ( ---- ), or dot-dash line ( ·-·- ).

### 3.4.1 How to change track line type for own ship

1. Press the **TRACK COLOR** key to show the [CHANGE TRACK COLOR] window.

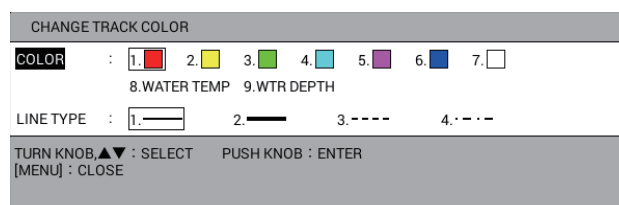


**Note:** The [CHANGE TRACK COLOR] window closes automatically when there is no operation for 10 seconds.

2. Select [LINE TYPE].
3. Press the numeric key corresponding to desired line type. The line type changes at the moment a key is pressed.
4. Press the **MENU** or **DISP** key to close the window.

**Note:** You can partly change track line type in the [EDIT TRACK] menu (see section 3.7).

### 3.4.2 How to change track line type for other ship

1. Put the cursor on the target symbol to change its track line type. The selected target data (see section 3.9) is displayed.
2. While the selected target data is displayed, press the **TRACK COLOR** key to show the [CHANGE TRACK COLOR] window. The following figure is the example for TT symbol.

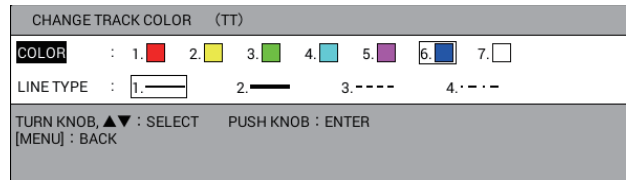

**Note:** The [CHANGE TRACK COLOR] window closes automatically when there is no operation for 10 seconds.

3. Select [LINE TYPE].
4. Press the numeric key corresponding to desired line type. The line type changes at the moment a key is pressed.
5. Press the **MENU** or **DISP** key to close the window.

## 3.5 How to Select Track Plotting Method, Interval

In drawing the track for own ship or other ship, position is stored into the unit's memory at an interval of time or distance. A shorter interval provides better reconstruction of the track, but the storage time of the track is reduced. When the track memory becomes full, the oldest track is erased to make room for the latest.

### 3.5.1 How to select the track plotting method for own ship

The own ship track is traced at an interval of time or distance. The default settings are 10 seconds for track interval 1, 0.1 NM for track interval 2.

Press the **PLOT INTVL** key consecutively to select the track plotting method. Each press of the key selects the track interval or stops track plotting as follows:

Track interval 1 → Track interval 2 → Stop of track plotting → Track interval 1 → ...

When selecting [OWN TRACK PLOTTING INTERVAL] in the [DISPLAY SETTING] menu as the navigation/destination information, the current track interval is displayed in the NAV information box (see section 1.4.2). Distance is useful for conserving the track memory, since no track is recorded when the vessel is stationary.

For how to set the track plotting intervals, see section 3.5.2.

### 3.5.2 How to set the track plotting intervals for own ship

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Select [TRACK INTERVAL 1] or [TRACK INTERVAL 2] on page 1.
4. Select [TIME] or [RANGE].
5. Select [TIME INTERVAL] or [RANGE INTERVAL].

6. Press the numeric keys to enter time or range value. The setting range is 00M. 00S. to 99M. 59S. for time; 0.00 NM to 9.99 NM for range. When set [TIME INTERVAL] and [RANGE INTERVAL] to 0, the track is traced at intervals of 1 second.
7. Press the **DISP** key to close the menu.

### 3.5.3 How to set the track plotting intervals for other ship

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Select [OTHR SHP TRK REC INT] on page 4.

MARK/TRACK SETTING		SEL. PAGE ◀4/6▶	
DISPLAY AIS SYMBOLS	: [SHOW]	HIDE	
DISPLAY AIS TRACK	: [SHOW]	HIDE	
DISPLAY CONSORT SYMBOLS	: SHOW	[HIDE]	
DISPLAY CONSORT TRACK	: SHOW	[HIDE]	
DISPLAY TT SYMBOLS	: SHOW	[HIDE]	
DISPLAY TT TRACK	: SHOW	[HIDE]	
DISPLAY GPS BUOY SYMBOLS	: SHOW	[HIDE]	
DISPLAY GPS BUOY TRACK	: SHOW	[HIDE]	
OTHER CURR VCT DISP	: SHOW	[HIDE]	
<b>OTHR SHP TRK REC INT</b>	: TIME	[RANGE]	
TIME INTERVAL	: 0 0 M. 1 0 S.		
RANGE INTERVAL	: 0. 1 0 NM		
TARGET NO.	: [LARGE]	SMALL	NONE

TURN KNOB, ▲▼ : SELECT      PUSH KNOB : ENTER  
 [0]~[9] : NO. OF PAGE      ◀▶ : MOVE PAGE  
 [MENU] : BACK

4. Select [TIME] or [RANGE].
5. Select [TIME INTERVAL] or [RANGE INTERVAL].
6. Press the numeric keys to enter time or range value. The setting range is 00M. 00S. to 99M. 59S. for time; 0.00 NM to 9.99 NM for range. When set [TIME INTERVAL] and [RANGE INTERVAL] to 0, the track is traced at intervals of 1 second.
7. Press the **DISP** key to close the menu.

## 3.6 How to Erase Own Ship Track

You can erase own ship track by color or by line type. There are five methods to select the erasing range as follows:


- [1. BTWN 2PTS.]: Erases all tracks between two points entered on the plotter display.
- [2. SET RNG]: Erases tracks, in selected color and line type, within an area you set.
- [3. WITHIN RNG]: Erases tracks, in selected color and line type, currently shown on the screen.
- [4. OUT OF RNG]: Erases tracks, in selected color and line type, currently not shown on the screen.
- [5. ALL]: Erases tracks, in selected color and line type, in the internal memory.

### 3. TRACK


**Note 1:** The erased tracks cannot be restored.

**Note 2:** The tracks in the internal memory that are set to [YES] on [DISPLAY OWN TRACK] in the [DISPLAY INTERNAL MEMORY] menu cannot be erased.


**Note 3:** If the track is being automatically colored according to depth or water temperature, and the color in use just before selecting [8. WATER TEMP] or [9. WTR DEPTH] is chosen for erasure, all depth- (or water temperature-) colored track from that point to the time of erasure will also be erased (see section 3.3.1).

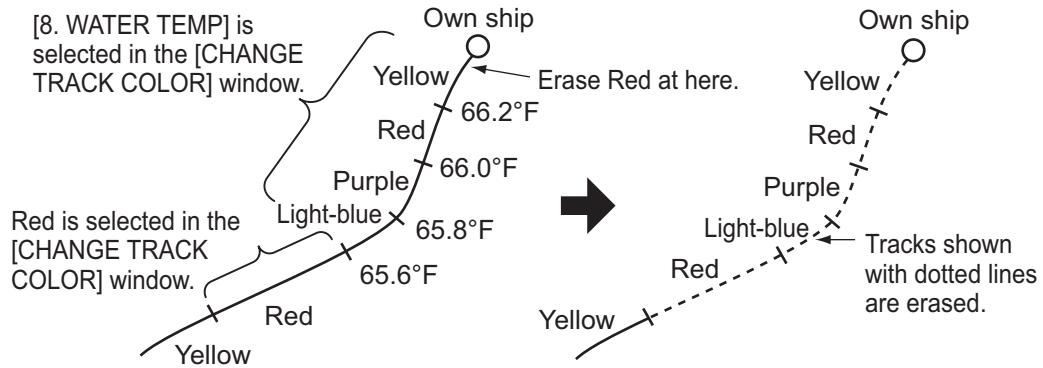

1. Press the **MENU** key to open the main menu.
2. Select [5. MARK/TRACK EDIT/DELETE].

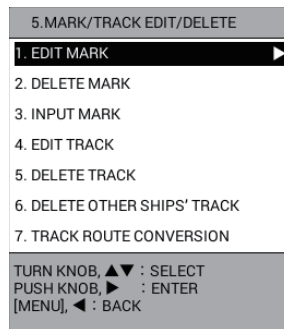


3. Select [5. DELETE TRACK].

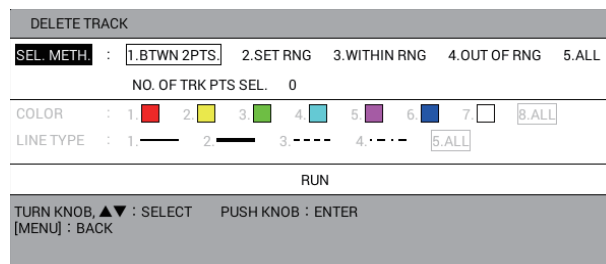


4. Select [SEL. METH.]
5. Press the applicable numeric key to select the method for erasing range. For [1. BTWN 2PTS.] or [2. SET RNG], go to step 6. For [3. WITHIN RNG], [4. OUT OF RNG], or [5.ALL], go to step 7.
6. Do one of the following:  
Squares (memory points) appear on the track.

- [1. BTWN 2PTS.]: Select the starting memory point to erase. Then select the ending memory point to erase. The tracks between two points are erased. Go to step 12.

**Note:** Both current track and playback track cannot be erased at the same time.

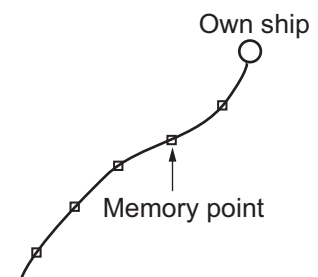

- [2. SET RNG]: Select the starting point of the area to erase. Then select the ending point of the area to erase. The selected area is framed in a white triangle with gray border. Go to step 7.

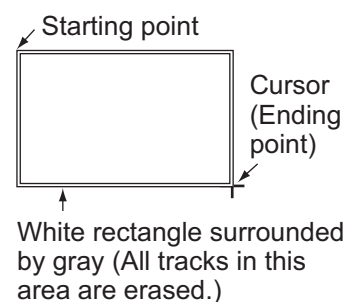

7. Select [COLOR].
8. Press the applicable numeric key to select the color to erase. Select [8. ALL] to erase tracks of all colors within the area you set.
9. Select [LINE TYPE].
10. Press the applicable numeric key to select the line type to erase. Select [5. ALL] to erase tracks of all line types within the area you set. The number of memory points selected for erasure is displayed in [NO. OF TRK PTS SEL.].
11. Select [RUN] to erase the own ship track you set.
12. Press the **DISP** key to close the menu.

## 3.7 How to Edit Own Ship Track

The color and line type of own ship track can be changed. For example, you may want to change the color and line of the track after returning to port, to distinguish previous and current track. Four methods of selecting range to edit are available:

- [1. BTWN 2PTS.]: Edits all tracks between two points entered on the plotter display. Both current track and playback track cannot be edited at the same time.
- [2. SET RNG]: Edits tracks within an area you set.
- [3. WITHIN RNG]: Edits tracks currently shown on the screen.
- [4. OUT OF RNG]: Edits tracks currently not shown on the screen.

**Note 1:** The tracks in the internal memory, set to [YES] on [DISPLAY OWN TRACK] in the [DISPLAY INTERNAL MEMORY] menu, cannot be edited.

**Note 2:** If the tracks are being automatically colored according to depth or water temperature, the tracks cannot be edited (see section 3.3.1).

1. Press the **MENU** key to open the main menu.
2. Select [5. MARK/ TRACK EDIT/DELETE].
3. Select [4. EDIT TRACK].

EDIT TRACK									
SEL. METH.	:	1. BTWN 2PTS.	2. SET RNG	3. WITHIN RNG	4. OUT OF RNG				
		NO. OF TRK PTS SEL. 0							
COLOR	:	1. <span style="color:red">■</span>	2. <span style="color:yellow">■</span>	3. <span style="color:green">■</span>	4. <span style="color:cyan">■</span>	5. <span style="color:purple">■</span>	6. <span style="color:blue">■</span>	7. <span style="color:white">■</span>	8. NO CHANGE
LINE TYPE	:	1. <span style="border-bottom: 1px solid black; width: 20px; display: inline-block;"></span>	2. <span style="border-bottom: 3px solid black; width: 20px; display: inline-block;"></span>	3. <span style="border-bottom: 1px dashed black; width: 20px; display: inline-block;"></span>	4. <span style="border-bottom: 1px dash-dot black; width: 20px; display: inline-block;"></span>	5. NO CHANGE			
RUN									
TURN KNOB, ▲▼		: SELECT		PUSH KNOB		: ENTER			
[MENU]		: BACK							

4. Select [SEL. METH.].
5. Press the applicable numeric key to select the method for editing range. For [1. BTWN 2PTS.] or [2. SET RNG], go to step 6. For [3. WITHIN RNG] or [4. OUT OF RNG], go to step 7.


### 3. TRACK

6. Do one of the following:  
Squares (memory points) appear on the track.
  - [1. BTWN 2PTS.]: Select the starting memory point to edit. Then select the ending memory point to edit.
  - [2. SET RNG]: Select the starting point of the area to edit. Then select the ending point of the area to edit.
7. Select [COLOR].
8. Press the applicable numeric key to select the new color. Select [8. NO CHANGE] to keep the color.
9. Select [LINE TYPE].
10. Press the applicable numeric key to select the new line type. Select [5. NO CHANGE] to keep the line type. The number of memory points selected for editing is displayed in [NO. OF TRK PTS SEL.].
11. Select [RUN] to edit the own ship track you set.
12. Press the **DISP** key to close the menu.

## 3.8 How to Display Own Ship Information

### 3.8.1 Simple information

1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on the own ship mark to display the simple information.

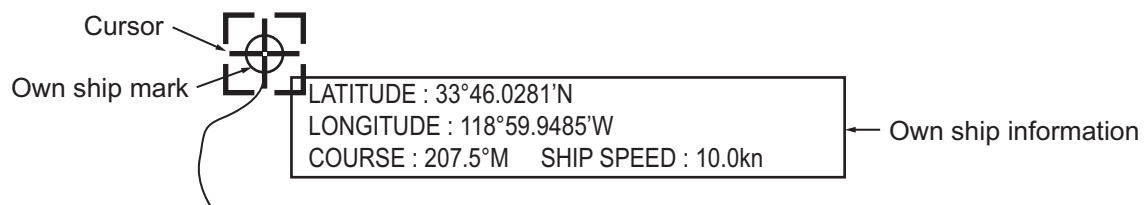

**Note:** If the own ship information does not appear when putting the cursor on the own ship mark, do the following:

- 1) Press the **MENU** key to open the main menu.
- 2) Select [0. SYSTEM SETTING].
- 3) Select [1. DISPLAY FORMAT].
- 4) Select [DISPLAY OWN SHIP] on page 5.
- 5) Select [SHOW].
- 6) Press the **DISP** key to close the menu.

### 3.8.2 Detailed information

1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on the own ship mark then push the **ENTER** knob to display the detailed information.

“- -” is displayed when no data is input.

When the current data is input from the external equipment, its data is displayed here.

SHIP INFO			
POSITION	: 33° 45.8365N, 119° 00.0598W		
COURSE	: 207.7°M	SHIP SPEED	: 10.0kn
DRIFT	:	2.0kn	207.7°M
CURRENT1	: LVR 1	--, -kn	--, °M
CURRENT2	: LVR 2	--, -kn	--, °M
CURRENT3	: LVR 3	--, -kn	--, °M
[MENU] : BACK			

The current direction and speed for each layer are displayed in [CURRENT1] to [CURRENT3]. The current direction and speed are set in [CURRENT DISPLAY 1] to [CURRENT DISPLAY 3] on page 5 of the [DISPLAY FORMAT] menu (see page 9-14). When the current data is input from the external equipment, its data is displayed. When [OS CURR. VECTOR DISP] on page 5 in the [DISPLAY FORMAT] menu is set to [SHOW], the current vector is displayed on the own ship mark on the plotter display. This is useful to see the deviation between set course and heading affected by current or wind.

#### Simple calculation function for drift

When no current data is input from the external equipment, drift is calculated using the data of COG (course over the ground) and STW\* (speed through the water). The calculated drift is displayed in [DRIFT]. When [DISPLAY OS DRIFT VECTOR] on page 5 in the [DISPLAY FORMAT] menu is set to [SHOW], the drift vector is displayed on the own ship mark on the plotter display (see page 9-14).

\*: Required data from external equipment.


3. Press the **MENU** or **DISP** key to close the [SHIP INFO] window.

## 3.9 How to Display Other Ship Information

You can display the information for other ship (AIS, TT, GPS BUOY).

#### How to display information individually

1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on the target symbol of other ship track to display the information. The following figure shows the TT information. “- -” is displayed when no data is input.

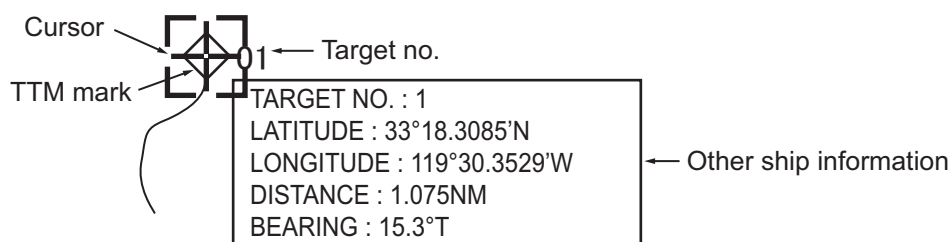

### 3. TRACK

**Note:** If other ship information does not appear when putting the cursor on the target symbol, do the following:

- 1) Press the **MENU** key to open the main menu.
- 2) Select [0. SYSTEM SETTING].
- 3) Select [1. DISPLAY FORMAT].
- 4) Select [OTHR SHIP INFO DISP.] on page 5.
- 5) Select [SHOW].
- 6) Press the **DISP** key to close the menu.

#### How to display the GPS buoy list

The GPS buoy list shows all the GPS buoys in your area. You can show the list as follows:

1. Press the **MENU** key to open the main menu.
2. Select [2. OTHER SHIPS LIST].
3. Select [4. GPS BUOY LIST] to display the GPS buoy list.

GPS BUOY LIST			SEL. PAGE _	1/2▶
ID	POSITION	DISTANCE	BEARING	
1	33° 52.7025N, 118° 55.1781W	0.140NM	47.0°M	
2	33° 52.6400N, 118° 55.1262W	0.164NM	74.5°M	
3	33° 52.5775N, 118° 55.0743W	0.214NM	92.2°M	
4	33° 52.5150N, 118° 55.0224W	0.276NM	102.6°M	
5	33° 52.4525N, 118° 54.9705W	0.344NM	109.0°M	
6	33° 52.3900N, 118° 54.9186W	0.414NM	113.3°M	
7	33° 52.3275N, 118° 54.8667W	0.486NM	116.4°M	
8	33° 52.2650N, 118° 54.8149W	0.560NM	118.6°M	
9	33° 52.2025N, 118° 54.7629W	0.634NM	120.3°M	
10	33° 52.1400N, 118° 54.7110W	0.708NM	121.7°M	

[CENTER] : CENTER TARGET  
 PUSH KNOB : SHOW DETAILS [TRACK COLOR] : CHANGE COLOR  
 [PLOT INTVL] : RECORD START/STOP [MENU] : BACK

When [TARGET SMART TRACK] is set to [ON], this indication changes as below (see page 9-15).

[CENTER] : SMART TRACK SELECTED TARGET

- ◀, ▶: Shifts the page.
- ▲, ▼, or rotation of the **ENTER** knob: Selects a GPS buoy.
- **CENTER** key: Centers the selected GPS buoy on the plotter display. When [TARGET SMART TRACK] is set to [ON] (see page 9-14) and [DISPLAY GPS BUOY SYMBOLS] is set to [SHOW] (see section 3.1.2), each press of the key centers the GPS buoy or own ship on the plotter display. For the GPS buoy, the indication as shown in the right figure appears at the top left of the screen.

ST MODE: BUOY  
 20

↑  
 Target no.


- **Note:** The orientation mode can not be changed during OS (other ship) mode.
- Pushing of the **ENTER** knob: Displays the detailed information for the selected GPS buoy.

GPS BUOY INFO	
ID	: 20
POSITION	: 33° 51.5150'N, 118° 54.1920'W
DISTANCE	: 27.74NM
BEARING	: 20.7°M
WATER TEMP	: 68.0° F
[MENU] : BACK	



**Note:** You can display the detailed information by putting the cursor on the GPS buoy symbol then pushing the **ENTER** knob.

- **TRACK COLOR** key: Displays the [CHANGE TRACK COLOR ID (XX)] window. Change the color and line type for the selected GPS buoy (see section 3.3 and section 3.4).

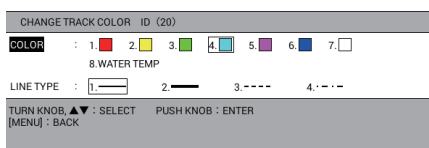


- **PLOT INTVL** key: Stops or restarts recording of track for the selected GPS buoy.

4. Press the **DISP** key to close the GPS buoy list and the menu.

## 3.10 How to Change the Size of the Target Number

You can change the size of the target number displayed beside the target symbol.

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Select [TARGET NO.] on page 4.

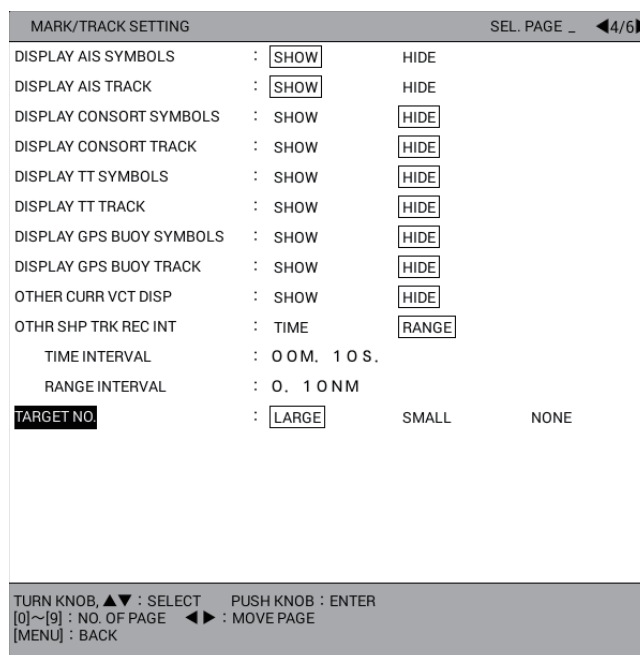

4. Select [LARGE], [SMALL], or [NONE]. [NONE] displays no target numbers.
5. Press the **DISP** key to close the menu.

## 3.11 How to Erase Other Ship Track

To erase other ship track, do the following:

1. Press the **MENU** key to open the main menu.
2. Select [5. MARK/TRACK EDIT/DELETE].
3. Select [6. DELETE OTHER SHIPS' TRACK].

DELETE OTHER SHIPS' TRACK	
SEL. METH. :	[1.SPECIFY TARGET] 2.ALL
NO. OF TRK PTS SEL. 0	
COLOR :	1. <span style="color: red;">■</span> 2. <span style="color: yellow;">■</span> 3. <span style="color: green;">■</span> 4. <span style="color: cyan;">■</span> 5. <span style="color: magenta;">■</span> 6. <span style="color: blue;">■</span> 7. <span style="color: white;">■</span> 8.ALL
LINE TYPE :	1. <span style="border-bottom: 1px solid black; display: inline-block; width: 20px;"></span> 2. <span style="border-bottom: 3px solid black; display: inline-block; width: 20px;"></span> 3. <span style="border-bottom: 1px dashed black; display: inline-block; width: 20px;"></span> 4. <span style="border-bottom: 1px dash-dot black; display: inline-block; width: 20px;"></span> 5.ALL
RUN	
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER [MENU] : BACK	

4. Select [SEL. METH.].
5. Press the applicable numeric key to select the erasure method.
  - [1. SPECIFY TARGET]: Erases tracks for the selected target. Go to step 6.
  - [2. ALL]: Erases tracks in the color selected at step 8 and the line type selected at step 10 among all recorded tracks for other ships. Go to step 7.
6. For [1. SPECIFY TARGET], select a track point for the target to erase.
7. Select [COLOR].
8. Press the applicable numeric key to select the color to erase. Select [8. ALL] to erase tracks of all colors within the area you set.
9. Select [LINE TYPE].
10. Press the applicable numeric key to select the line type to erase. Select [5. ALL] to erase tracks of all line types within the area you set. The number of track points selected for erasure is displayed in [NO. OF TRK PTS SEL.].
11. Select [RUN] to erase the tracks.
12. Press the **DISP** key to close the menu.

# 4. MARKS, LINES

---

Marks are useful for denoting important points such as a good fishing spot. 30,000 marks can be entered. Marks can be inscribed in 12 shapes or with a numeral, and seven colors. Marks can be connected with lines.


## 4.1 How to Set Default Mark Appearance

Before you enter a mark, you can set its color, size, fish type and line type.

### 4.1.1 How to set mark color

Marks can be inscribed in seven colors of red, yellow, green, light-blue, purple, blue and white.

1. Press the **MARK COLOR** key to show the [CHANGE MARK COLOR] window.

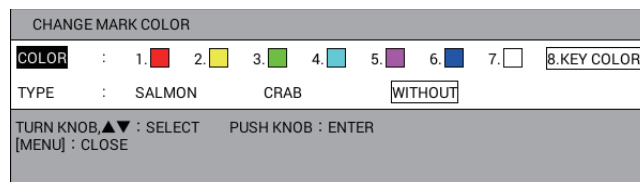

**Note:** This window automatically closes when there is no operation for 10 seconds.

2. Select [COLOR].
3. Press the applicable numeric key to select the color.  
**1 to 7:** The mark or line is entered at own ship's position (or cursor position) in the color selected.  
**8:** The mark is entered at own ship's position (or cursor position) in the color and shape (number or symbol) shown on the label of the numeric key.
4. Press the **MENU** or **DISP** key to close the window.

## 4. MARKS, LINES

### 4.1.2 How to set mark size

You can select the mark size as follows:

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Select [MARK SIZE] on page 1.

MARK/TRACK SETTING		SEL. PAGE	1/6▶
MARK SIZE	:	<input type="text" value="LARGE"/>	LARGE WITH DOT SMALL
SHOW MARK COMMENTS	:	<input type="text" value="ON CHART"/>	IN POPUP <input type="text" value="IN INFORMATION"/>
LINE TYPE	:	<input type="text" value="—"/>	<input type="text" value="----"/> <input type="text" value=".-.-"/> <input type="text" value="-.-."/>
AUTO RECORD SETTING	:	<input type="text" value="SCREEN SHOT WHEN MARK INPUT"/>	NO
TRACK INTERVAL 1	:	<input type="text" value="TIME"/>	RANGE
TIME INTERVAL	:	O O M. 1 O S. (MAX 3D11H)	
RANGE INTERVAL	:	O. 1 O N M	
TRACK INTERVAL 2	:	TIME	<input type="text" value="RANGE"/>
TIME INTERVAL	:	O O M. 1 O S. (MAX 3D11H)	
RANGE INTERVAL	:	O. 1 O N M	
DISPLAY TRACKS	:	<input type="text" value="SHOW"/>	HIDE
DRIFT VECTOR DISPLAY	:	SHOW	<input type="text" value="HIDE"/>
DISP. CURRENT VECTOR	:	SHOW	<input type="text" value="HIDE"/>
DISP. STOPPED TRACKS	:	<input type="text" value="SHOW"/>	HIDE
PLOT STOPPED TRACKS	:	DRAW TRACK LINE	<input type="text" value="NO TRACK LINE"/>
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER [0]~[9] : NO. OF PAGE    ◀▶ : MOVE PAGE [MENU] : BACK			

4. Select the mark size.



5. Press the **DISP** key to close the menu.

The size for currently displayed marks is changed to the size selected here.

### 4.1.3 How to set line type

There are four line types.

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Select [LINE TYPE] on page 1.
4. Select the line type.




5. Press the **DISP** key to close the menu.

The lines entered hereafter are displayed in the line type selected here.

### 4.1.4 How to set fish type for marks

Fish type can be assigned to marks. Marks can be shown or hidden depending on fish type with the mark filter function (see section 4.8).

1. Press the **MARK COLOR** key to show the [CHANGE MARK COLOR] window.

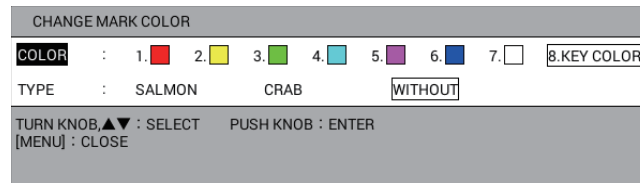

**Note:** This window automatically closes when there is no operation for 10 seconds.

2. Select [TYPE]. See section 4.8 how to enter fish type.
3. Select the fish type. [WITHOUT] does not set a fish type.
4. Press the **MENU** or **DISP** key to close the window.

The marks entered hereafter are set to the fish type selected here.

## 4.2 How to Enter Marks

There are three methods to enter marks as follows:

- Enter a mark at own ship position.
- Enter a mark at the cursor position.
- Enter a mark by manually entering latitude and longitude position.

**Note:** A mark can be entered with the symbol or the numeric labeled on the operated numeric key. Select the entry method with the **MARK/NUM** key, before entering the mark.

### 4.2.1 How to enter marks at own ship position

1. Press the **CURSOR ON/OFF** key to turn off the cursor.
2. Press a numeric key among **1** to **8**.

1 key: ◇	2 key: +	3 key: □	4 key: Y
5 key: ○	6 key: △	7 key: ·	8 key: ☆

The mark (or numeric) labeled on the operated key appears at own ship position. Marks are displayed in the color set in section 4.1.1. Water temperature and depth at the location are saved internally. (Requires water temperature and depth data.)

**Note:** When the item selected in section 4.1.1 is [8. KEY COLOR], the mark is entered in the same color as the most recently entered mark. If, after startup, the **8** key is operated the mark will be colored red.

### 4.2.2 How to enter marks at the cursor position

1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on the position where you want to enter a mark.
3. Press a numeric key among **1** to **8**.


1 key: ◇                      2 key: +                      3 key: □                      4 key: Y  
 5 key: ○                      6 key: △                      7 key: ·                      8 key: ☆

The mark (or numeric) labeled on the operated key appears at the cursor position. Marks are displayed in the color set in section 4.1.1.

**Note:** When the item selected in section 4.1.1 is [8. KEY COLOR], the mark is entered in the same color as the most recently entered mark. If, after startup, the **8** key is operated the mark will be colored red.


### 4.2.3 How to enter marks by manually entering latitude and longitude position

1. Press the **MENU** key to open the main menu.
2. Select [5. MARK/TRACK EDIT/DELETE].
3. Select [3. INPUT MARK].

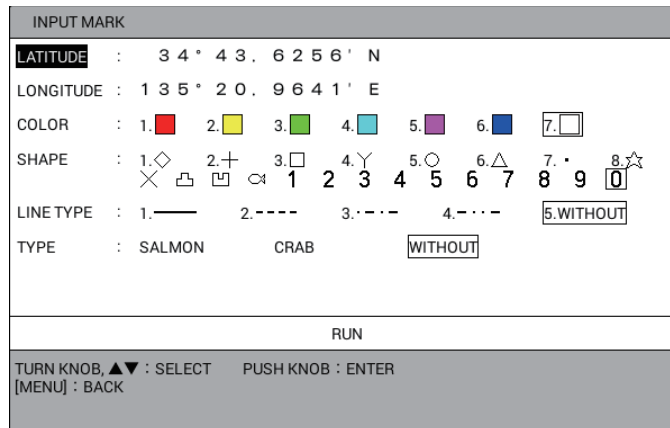

4. Select [LATITUDE].
5. Press the numeric keys to enter the latitude of the mark then push the **ENTER** knob. To switch the coordinate from North to South and vice versa, use the **CURSOR ON/OFF** key.
6. Select [LONGITUDE].
7. Press the numeric keys to enter the longitude of the mark then push the **ENTER** knob. To switch the coordinate from East to West and vice versa, use the **CURSOR ON/OFF** key. If you want to change the color, shape, fish type for mark, or the line type, select appropriate items and set the options by doing steps 8 to 15. If not, go to step 16.
8. Select [COLOR].
9. Press the applicable numeric key to select a color among red, yellow, green, light-blue, purple, blue, and white.
10. Select [SHAPE].

 11. Select a shape among 12 symbols and figures of 0 to 9.



Top: Use the numeric keys to set.  
Bottom: Use the **ENTER** knob to set.

12. Select [LINE TYPE].

13. Press the applicable numeric key to select a line type. When selecting 1, 2, 3 or 4, marks are connected with a line. [5. WITHOUT] does not connect marks with a line.

14. Select [TYPE].

15. Select the fish type. [WITHOUT] does not set a fish type.


16. Select [RUN].

17. Press the **DISP** key to close the menu.

## 4.3 How to Enter Lines

 Lines can be drawn on the screen to depict important locations such as fishing spots and danger areas. Lines can be connected with marks.

1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on the starting point for the line then press the numeric key (**1 to 8**).
3. Put the cursor on an intermediate point for the line then press the **9** key.
4. Repeat step 3 to complete the line.



### How to start a new line

To start a new line, press the numeric key (**1 to 8**) at the start point. For example, press one of numeric keys (**1 to 8**) at point D and the **9** key for points E and F.



## 4.4 How to Erase Marks, Lines

Marks can be erased directly on the screen or from the menu, and five methods of erasure are available from the menu:

- [1. CURSOR]: Erases mark, line selected with the cursor.
- [2. SET RNG]: Erases marks and lines, in selected color, shape, and fish type, within an area you set.
- [3. WITHIN RNG]: Erases marks and lines, in selected color, shape, and fish type, currently shown on the screen.
- [4. OUT OF RNG]: Erases marks and lines, in selected color, shape, and fish type, currently not shown on the screen.
- [5. ALL]: Erases saved marks and lines, in selected color, shape, and fish type, in the internal memory.

**Note:** The marks in the internal memory that are set to [YES] on [ADD MARK/LINE DISP.] in the [DISPLAY INTERNAL MEMORY] menu (see section 10.2.2) cannot be erased.

### How to erase individual marks, lines on the screen

1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on the mark to erase. When the cursor is correctly put on the mark, a frame appears around the cursor, the one shown below. To erase a line, put the cursor on the mark on the line.




3. Press the **CANCEL** key. The selected mark is erased from the screen. If lines are connected to the mark, the lines are erased.

**Note:** If the mark is not erased, several marks may be occupying the same position. In this case, press the **CANCEL** key as many times as necessary to erase the mark.

### How to erase marks, lines from the menu

1. Press the **MENU** key to open the main menu.
2. Select [5. MARK/TRACK EDIT/DELETE].
3. Select [2. DELETE MARK].

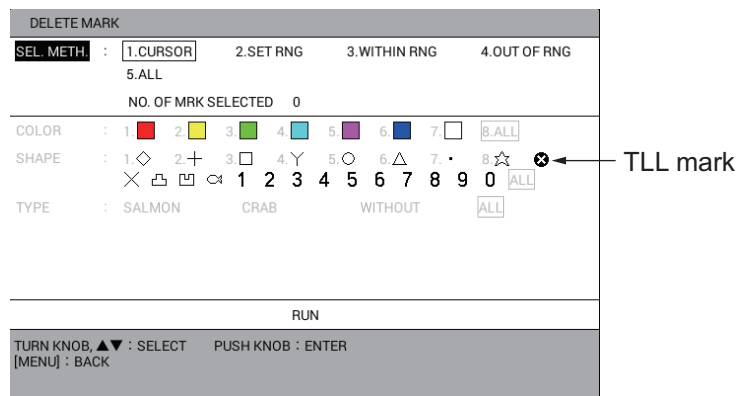

4. Select [SEL. METH.].



5. Press the applicable numeric key to select the method for erasing marks and lines. For [1. CURSOR] or [2. SET RNG], go to step 6. For [3. WITHIN RNG], [4. OUT OF RNG], or [5.ALL], go to step 7.
6. Do one of the following:
  - [1. CURSOR]: Select the mark to erase. To erase other marks, repeat this step. Go to step 14.
  - [2 SET RNG]: Select the starting point of the area to erase. Then select the ending point of the area to erase. The selected area is framed in a white triangle with gray border. Go to step 7.
7. Select [COLOR].
8. Press the applicable numeric key to select the mark color to erase. Select [8. ALL] to erase marks of all colors within the area you set.
9. Select [SHAPE].
10. Press the applicable numeric key or the **ENTER** knob to select the shape or figure to erase. Select [ALL] to erase marks of all shapes and figures within the area you set.
11. Select [TYPE].
12. Select the fish type to erase.  
 [WITHOUT]: Erases marks without fish type.  
 [ALL]: Erases any mark having fish type.  
 The number of target marks selected for erasure is displayed in [NO. OF MRK SELECTED].
13. Select [RUN] to erase the selected marks and lines.
14. Press the **DISP** key to close the menu.

## 4.5 How to Edit Marks, Lines

You can edit the marks and lines you have entered, and four methods of selecting range to edit are available:

- [1. CURSOR]: Edits mark, line selected with the cursor.
- [2. SET RNG]: Edits marks and lines within an area you set.
- [3. WITHIN RNG]: Edits all marks and lines currently shown on the screen.
- [4. OUT OF RNG]: Edits all marks and lines currently not shown on the screen.

**Note:** The marks in the internal memory that are set to [YES] on [ADD MARK/LINE DISP.] in the [DISPLAY INTERNAL MEMORY] menu (see section 10.2.2) cannot be edited.

1. Press the **MENU** key to open the main menu.
2. Select [5. MARK/TRACK EDIT/DELETE].

## 4. MARKS, LINES

### 3. Select [1. EDIT MARK].

EDIT MARK											
SEL. METH. :	1. CURSOR	2. SET RNG	3. WITHIN RNG	4. OUT OF RNG							
NO. OF MRK SELECTED		0									
COLOR :	1. [Red]	2. [Yellow]	3. [Green]	4. [Cyan]	5. [Purple]	6. [Blue]	7. [White]	8. NO CHANGE			
SHAPE :	1. [Diamond]	2. [Plus]	3. [Square]	4. [Y]	5. [Circle]	6. [Triangle]	7. [Dot]	8. [Star]	9. [Cross]	10. [X]	NO CHANGE
LINE TYPE :	1. [Solid]	2. [Dashed]	3. [Dotted]	4. [Dash-dot]	5. NO CHANGE						
TYPE :	SALMON	CRAB	WITHOUT	NO CHANGE							
COMMENT :	NO CHANGE										
RUN											
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER											
[MENU] : BACK											

4. Select [SEL. METH.].
5. Press the applicable numeric key to select the method for editing range. For [1. CURSOR] or [2. SET RNG], go to step 6. For [3. WITHIN RNG] or [4. OUT OF RNG], go to step 7.
6. Do one of the following:
  - [1. CURSOR]: Select the mark to edit.
  - [2. SET RNG]: Select the starting point of the area to edit. Then select the ending point of the area to edit. The selected area is framed in by the white rectangle surrounded by gray.
7. Select [COLOR].
8. Press the applicable numeric key to select the new color. Select [8. NO CHANGE] to keep the previous color.
9. Select [SHAPE].
10. Push the applicable numeric key or the **ENTER** knob to select the new shape or figure. Select [NO CHANGE] to keep the previous shape.
11. Select [LINE TYPE].
12. Press the applicable numeric key to select the new line type. Select [5. NO CHANGE] to keep the previous line type.
13. Select [TYPE].
14. Select the new fish type. Select [NO CHANGE] to keep the previous fish type.
15. Select [COMMENT].
16. If desired, enter (or change) the comment (see "How to enter alphanumeric data" on page 1-10). Select [NO CHANGE] to keep the previous comment.
17. Select [RUN].
18. Press the **DISP** key to close the menu.

## 4.6 How to Undo or Redo Mark/line Operation

You can undo previous mark/line input, edit or deletion operation by pressing the **UNDO** key. Up to 20 previous operations can be undone.


When assigning the REDO function to a function key (see section 1.7.2), press the function key to redo the last UNDO action for mark input, edit or deletion. Up to 20 UNDO actions can be redone.

## 4.7 How to Show Mark Information

Mark information can be shown on the screen.

### Simple information


1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on the mark to find its information. Data (latitude and longitude position, water temperature, depth) for the mark is shown on the screen. (Requires water temperature and depth data.)

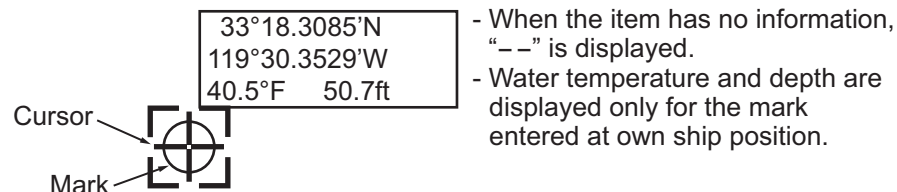

**Note:** If mark information does not appear, turn on [DISPLAY MARK INFO.] on page 3 of the [1. DISPLAY FORMAT] menu in the [0. SYSTEM SETTING] menu.

### Detailed information

1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on the mark to find its information then push the **ENTER** knob. The detailed data for the mark is shown on the screen.

MARK INFORMATION	
POSITION : 33° 48.7080'N	MARK
118° 57.7089'W	
DATE : 2015/01/01 09:33	SCREENSHOT
COMMENT : --	
FISH TYP : SALMON	
L.P. : --	
TIDE : +-.-ft-	
--	
TEMP : 38.5° F	
DEPTH : 32.7ft	
COMP : --	
DRIFT : 10.5° M 8.2kn	
T.C. LYR1 : 10.5° M 8.2kn	
[MENU] : CLOSE	

- When the item has no information, "--" is displayed.
- Water temperature, depth, drift and tidal current layer 1 are displayed only for the mark entered at own ship position.

**Note:** When entering a mark at own ship position (see section 4.2.1), you can take a screenshot then display it on the mark information window. To take a screenshot, do the following:

- 1) Press the **MENU** key to open the main menu.
  - 2) Select [4. MARK/TRACK SETTING].
  - 3) Select [AUTO RECORD SETTING] on page 1.
  - 4) Select [SCREEN SHOT WHEN MARK INPUT] or [NO].  
[SCREEN SHOT WHEN MARK INPUT]: Takes a screenshot when entering a mark at own ship position (default setting).  
[NO]: Turns off the screenshot function.
  - 5) Press the **DISP** key to close the menu.
3. Press the **MENU** or **DISP** key to close the window.

**How to select the display method for mark comments**


1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Select [SHOW MARK COMMENTS] on page 1.
4. Select the display method for mark comments.  
 [ON CHART]: Always displays a mark comment above the mark on the screen.  
 [IN POPUP]: Displays a mark comment at the bottom of the simple information when putting the cursor on the mark.  
 [IN INFORMATION]: Displays a mark comment in the comment line of the detailed information when putting the cursor on the mark then pushing the **ENTER** knob.
5. Press the **DISP** key to close the menu.

## 4.8 Mark Filter

Marks can be shown or hidden according to mark attribution.

**How to set object and content for the mark filter**

1. Push the **ENTER** knob. The mark filter at the bottom right of the screen is highlighted.

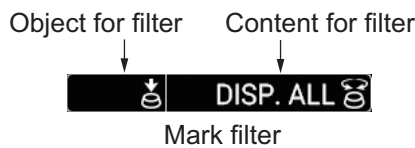

**Note 1:** The mark filter can be selected regardless of cursor state. When the cursor is on, push the **ENTER** knob to highlight the mark filter at the position where no target (e.g. a mark) is selected with the cursor.

**Note 2:** The settings for the mark filter are automatically undone when there is no operation for 10 seconds.

2. Push the **ENTER** knob to select the object to filter. Each push of the knob selects the object as follows:  
 No indication (no filter) → [TYPE] → [COLOR] → [SHAPE] → [DATE] → [TEMP] → [DEPTH] → [C. DIR] → [C. SPD] → [MULTI] → No indication (no filter) → ...  
 Each object can be shown or hidden on the mark filter box. For details, see "How to turn on or off an object to filter" on page 4-12.
3. Rotate the **ENTER** knob to select content to filter. The marks of selected object and content to filter are displayed on the screen.



**Example 1**  
 Object to filter: [COLOR]  
 Content to filter: [RED]



**Example 2**  
 Object to filter: [DEPTH]  
 Content to filter: [32.8ft]


Object for filter	Option of content to filter	Meaning
No indication	[DISP. ALL]	No filter. Displays all marks.
[TYPE]	[DISP. ALL], fish type set in the [MARK FILTER FISH TYPE SETTING] menu (up to 10 types)	Displays marks for the selected fish type. See "How to set the fish type for the mark filter" on page 4-12.
[COLOR]	[DISP. ALL], [RED], [YELLOW], [GREEN], [LIGHT BLUE], [PURPLE], [BLUE], [WHITE]	Displays marks for the selected color.
[SHAPE]	[DISP. ALL], [ $\diamond$ ], [+], [ $\square$ ], [ $\gamma$ ], [ $\circ$ ], [ $\triangle$ ], [ $\cdot$ ], [ $\star$ ], [ $\times$ ], [ $\square$ ], [ $\square$ ], [ $\square$ ], [1], [2], [3], [4], [5], [6], [7], [8], [9], [0]	Displays marks for the selected shape.
[DATE]	[DISP. ALL], [FRM 1 WEEK], [FRM 30DAYS], [FRM 1 YEAR], [THIS TERM], [THIS TIME], [AA/AA~BB/BB], [AA/AA TO NOW]	Displays marks entered at the selected date (period). For details, see "How to set the date for the mark filter" on page 4-13.
[TEMP]	[DISP. ALL], [32.0°F] to [86.0°F]	Displays marks with temperature $\pm 0.05^\circ\text{F}$ of the setting. When 32.0°F (minimum) is set, displays marks with temperature below 32.0°F. When 86.0°F (maximum) is set, displays marks with temperature above 86.0°F.
[DEPTH]	[DISP. ALL], [0.0ft] to [656 ft]	When setting depth under 328 ft, display marks with depth $\pm 8$ ft of the setting. When setting depth more than 328 ft, display marks with depth $\pm 16$ ft of the setting. When 0.0 ft (minimum) is set, displays marks with depth below 0.0 ft. When 656 ft (maximum) is set, displays marks with depth above 656 ft.
[L. P.]	[DISP. ALL], [0] to [30] (1 step)	Displays marks at the age of $\pm 1$ months for the setting.
[TIDE]	[DISP. ALL], [LOW TIDE], [30% UP], [50% UP], [70% UP], [HIGH TIDE], [30% LOW], [50% LOW], [70% LOW]	Displays marks for the selected tide level.
[C. DIR]	[DISP. ALL], [0.0°T (or °M)] to [350.0°T (or °M)] (10° step)	Displays marks with current direction $\pm 10^\circ$ of the setting.
[C. SPD]	[DISP. ALL], [0.0kn] to [5.0kn] (0.2 kn step)	Displays marks with current speed $\pm 0.1$ kn of the setting. When 5.0 kn (maximum) is set, displays marks with current speed over 5.0 kn.
[MULTI]	[MULTI DISP]	Displays marks fulfilled in all filter options set.

**Note:** The marks entered after setting the mark filter are not hidden.

#### 4. MARKS, LINES

##### How to turn on or off an object to filter

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Display [DISPLAY MARK FILTER] on page 5.


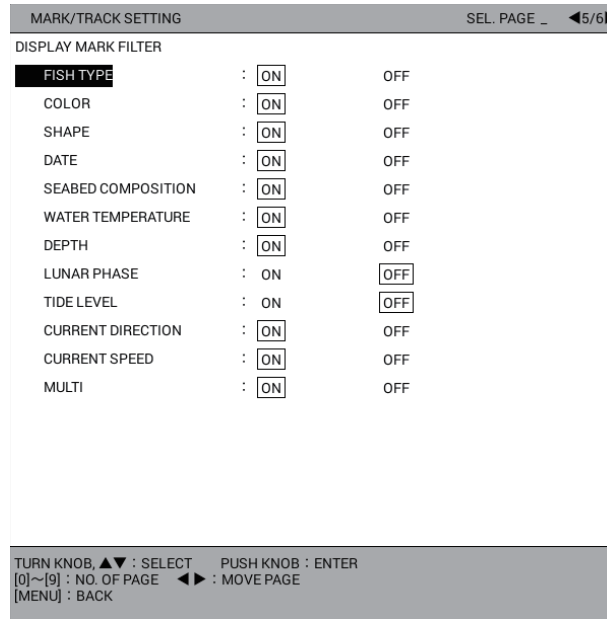


4. Select any one from [FISH TYPE] to [MULTI].
5. Select [ON] or [OFF]. The objects to filter which are set to [ON] are turned on when pushing the **ENTER** knob. (See step 2 at "How to set object and content for the mark filter" on page 4-10.)

##### How to set the fish type for the mark filter

You can set the option of content for [TYPE] (fish type).

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Display [MARK FILTER FISH TYPE SETTING] on page 6.
4. Select any one from [TYPE OF FISH 1] to [TYPE OF FISH 10] to display the character entry window.

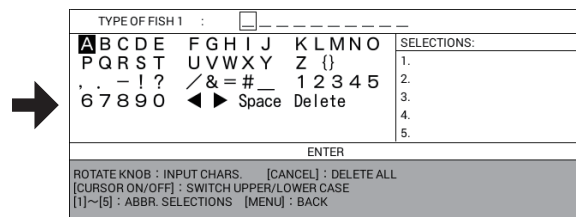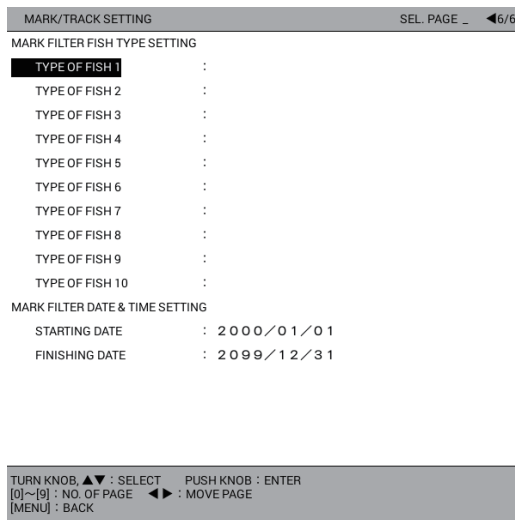

Character entry window for [TYPE OF FISH 1]

5. Set the fish type (see "How to enter alphanumeric data" on page 1-10). Select [ENTER] to go back to [MARK FILTER FISH TYPE SETTING] on page 6. The fish type set is displayed on the right side of the [TYPE OF FISH 1](to 10) item.
6. Press the **DISP** key to close the menu.

#### **How to set the date for the mark filter**

When selecting [DATE] as object for filter, each push of the knob selects the option of content as follows:

[DISP. ALL] → [FRM 1 WEEK] → [FRM 30DAYS] → [FRM 1 YEAR] → [THIS TERM] → [THIS TIME] → [AA/AA TO BB/BB] → [AA/AA TO NOW]

[THIS TERM]: Displays marks of plus or minus one month from the current date (regardless of year).

[THIS TIME]: Displays marks of plus or minus three hours from the current time (regardless of date).

To set the month and day for AA/AA or BB/BB, do the following:

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Display [MARK FILTER DATE & TIME SETTING] on page 6.
4. Select [STARTING DATE].
5. Set the starting date (AA/AA) with the numeric keys.
6. Select [FINISHING DATE].
7. Set the ending date (BB/BB) with the numeric keys.
8. Press the **DISP** key to close the menu.

4. MARKS, LINES

This page is intentionally left blank.



# 5. WAYPOINTS

In navigation terminology, a waypoint is a particular geographical location on a voyage whether it be a starting, intermediate or destination point. A waypoint is the simplest piece of information your equipment requires to get you to a destination, in the shortest distance possible.

 
## 5.1 How to Enter Waypoints


This unit has 3,500 waypoints into which you can enter position information. There are seven methods to enter a waypoint as follows:

- Enter a waypoint at own ship position.
- Enter a waypoint at the cursor position.
- Enter a waypoint by manually entering latitude and longitude position.
- Enter a waypoint by range and bearing.
- Enter a waypoint by Loran-C LOP.
- Enter a waypoint by Loran-A LOP.
- Enter a waypoint by Decca LOP.

### 5.1.1 How to enter waypoints at own ship position

1. Press the **SAVE MOB** key. The following message appears.




The MOB mark (  ) appears at own ship position and registered as a waypoint. This waypoint is automatically named "MOB" and saved in the [WAYPOINTS LIST].

2. Select [RUN] to set the waypoint as the destination, [CANCEL] to cancel the waypoint as the destination.

You can enter a waypoint at own ship position by pressing the **WPT** key when the cursor is off. See step 3 or after in section 5.1.2.

### 5.1.2 How to enter waypoints at the cursor position

1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on the position where you want to enter a waypoint.
3. Press the **WPT** key to show the [WAYPOINTS LIST] window.

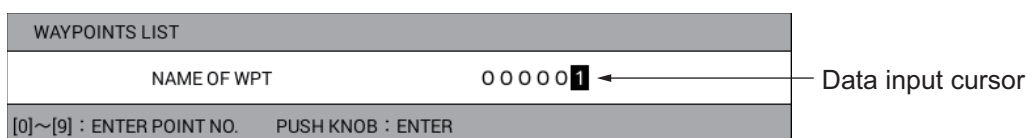

**Note:** The [WAYPOINTS LIST] window closes automatically when there is no operation for 10 seconds.

## 5. WAYPOINTS


4. Press the numeric keys to enter the name of the waypoint (six digits) then push the **ENTER** knob. The currently indicated waypoint number is the youngest number among the unused numbers. If you do not need to change the number, go to step 5. Each time a numeric key is pressed, the cursor jumps one place leftward. To set the number "000005", for example, press the **0, 0, 0, 0, 0, 5** keys in order.
5. Push the **ENTER** knob to save the waypoint. The currently selected shape and color for the waypoint mark is shown at the bottom right of the screen as the icon (default: circle in red).

**Note 1:** The waypoint icon may not be shown at the bottom right of the screen depending on the menu setting. If it is not shown, you can show it as follows:

- 1) Press the **MENU** key to open the main menu.
- 2) Select [0. SYSTEM SETTING], [1. DISPLAY FORMAT] in order.
- 3) Select [WAYPOINT STATUS] on page 3 then set to [SHOW].

**Note 2:** If above operation is done when the cursor is off, the waypoint is entered at own ship position.

 
**Note 3:** If the waypoint number set at step 4 is already used, the following message appears.



Select [RUN] to overwrite, or [CANCEL] to cancel then enter a different number.

### 5.1.3 How to enter waypoints by manually entering latitude and longitude position

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].

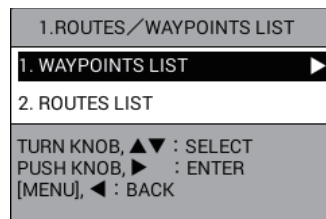

3. Select [1. WAYPOINTS LIST].


WAYPOINTS LIST				SEL. PAGE	1/1
SET DEST. : NO DEST.					
NAME	LATITUDE/LONGITUDE	INT. BAN	COMMENT		
SORT : ALPHA ORD		RNG ORDER			
MARK SHAPE		REG. ORDER			
SPD FOR TTG CALC : T.SHP SPD 10.0kn		ENT VALU : 0 0 . 0 kn			
SEARCH : _____		EST TIME OF ARR. ---/---/---		TIME TO GO ---Hrs --m	
<small>[0]~[9] : NO. OF PAGE   ◀▶ : MOVE PAGE                  [WPT] : NEW WAYPOINT   [GOTO] : SET DEST.                  [CANCEL] : DELETE DEST.   [MENU] : BACK</small>					

4. Press the **WPT** key or **ENTER** knob to show the [EDIT WPT NAME] window.  
**Note:** Push the **ENTER** knob after selecting a blank line.

EDIT WPT NAME	
NAME OF WPT	: 000001
LATITUDE	: 3 3 ° 5 1 . 5 1 8 1 ' N
LONGITUDE	: 1 1 8 ° 5 6 . 0 9 8 8 ' W
MARK COLOR	:
MARK SHAPE	:
MARK DISPLAY	: YES NO
COORDINATE	: LATITUDE/LONGITUDE RANGE/BEARING TIME DIFFERENCE
INT. BAN	: 0 . 0 0 NM
COMMENT	: 09:09 1501.01
RUN	
<small>TURN KNOB, ▲▼ : SELECT   PUSH KNOB : ENTER                  [MENU] : BACK</small>	

5. Select [COORDINATE].
6. Select [LATITUDE/LONGITUDE].
7. Select [LATITUDE].
8. Press the numeric keys to enter the latitude of the waypoint then push the **ENTER** knob. To switch the coordinate from North to South and vice versa, use the **CURSOR ON/OFF** key.
9. Select [LONGITUDE].
10. Press the numeric keys to enter the longitude of the waypoint then push the **ENTER** knob. To switch the coordinate from East to West and vice versa, use the **CURSOR ON/OFF** key.  
 To change waypoint name, mark color, mark shape, mark display, proximity radius and comment, go to step 11. If you do not need to change those items, go to step 23.
11. Select [NAME OF WPT].

## 5. WAYPOINTS

12. Set the waypoint name (see "How to enter alphanumeric data" on page 1-10).
13. Select [MARK COLOR].
14. Select the mark color.
15. Select [MARK SHAPE].
16. Select the mark shape.
17. Select [MARK DISPLAY].
18. Select [YES] or [NO].  
[YES]: Shows the waypoint mark on the plotter display.  
[NO]: Hides the waypoint mark on the plotter display. Waypoint marks selected to [NO] are grayed out in [WAYPOINTS LIST].
19. Select [INT. BAN].
20. Press the numeric keys to enter the intrusion ban alarm radius.  
[INT. BAN] is the alarm range that will be used for this waypoint when the intrusion point alarm is active. When the intrusion ban alarm radius is other than 0.00 NM, the waypoint marks on the plotter display and the waypoint list become  automatically. For how to set the intrusion point alarm, see section 8.5.
21. Select [COMMENT].
22. Enter the comment (see "How to enter alphanumeric data" on page 1-10).
23. Select [RUN] to close the [EDIT WPT NAME] window.
24. Press the **DISP** key to close the menu.


### 5.1.4 How to enter waypoints by range and bearing

This method is useful when you want to enter a waypoint by using range and bearing to a target found on the radar display.

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [1. WAYPOINTS LIST].
4. Press the **WPT** key or **ENTER** knob to show the [EDIT WPT NAME] window.  
**Note:** Push the **ENTER** knob after selecting a blank line.
5. Select [COORDINATE].

## 6. Select [RANGE/BEARING].

When selecting [RANGE/BEARING] in [COORDINATE], [DISTANCE] and [BRG] are displayed here.

EDIT WPT NAME	
NAME OF WPT	: 000001
DISTANCE	: 0 0 0 . 0 6 2 NM
BRG	: 0 1 7 . 8 °M
MARK COLOR	: <span style="color:red">■</span> <span style="color:yellow">■</span> <span style="color:green">■</span> <span style="color:cyan">■</span> <span style="color:purple">■</span> <span style="color:blue">■</span> <span style="color:white">■</span>
MARK SHAPE	: 
MARK DISPLAY	: <input checked="" type="checkbox"/> YES <input type="checkbox"/> NO
<b>COORDINATE</b>	: LATITUDE/LONGITUDE <b>RANGE/BEARING</b> TIME DIFFERENCE
INT. BAN	: 0 . 0 0 NM
COMMENT	: 09:10 1501.01
RUN	
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER [MENU] : BACK	

## 7. Select [DISTANCE].

8. Press the numeric keys to enter the range from own ship to the waypoint.

## 9. Select [BRG].

10. Press the numeric keys to enter the bearing from own ship to the waypoint.

11. Follow the procedure from step 11 in section 5.1.3.

### 5.1.5 How to enter waypoints by Loran A or Loran C LOPs

1. Press the **MENU** key to open the main menu.

2. Select [8. PLOTTER DISPLAY SETTING].

3. Select [3. LORAN/DECCA SETTING].

LORAN/DECCA SETTING	
<b>LORAN A STA. COMB.</b>	: 0 0 - 0 1
TIME OFFSET 1	: + 0 0 0 . 0 μ s
TIME OFFSET 2	: + 0 0 0 . 0 μ s
LORAN C STA. COMB.	: 0 0 : 1 1 - 2 9
TIME OFFSET 1	: + 0 0 0 . 0 μ s
TIME OFFSET 2	: + 0 0 0 . 0 μ s
DECCA CHAIN	: 0 1 R - G
OFFSET VALUE 1	: + 0 0 . 0 0 L A N E
OFFSET VALUE 2	: + 0 0 . 0 0 L A N E
TIME DIFF. DISP TYPE	: LORAN A <b>LORAN C</b> DECCA
LOP FORMULA	: <b>NEW</b> EARLIER
CH CODE LIST 00:1L0 01:1L1 02:1L4 03:1L5 04:1L6 05:1L7 06:1S1 07:1S2 08:1S3 09:1S4 10:1S6 11:2H3 12:2H4 13:2H5 14:2H6 15:2S0 16:2S1 17:2S2 18:2S3 19:2S4 20:2S5 21:2S6 22:2S7	
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER [MENU] : BACK	

4. Select [TIME DIFF. DISP TYPE].

5. Select [LORAN A] or [LORAN C].

6. Press the **MENU** key twice to return to the main menu.

7. Select [1. ROUTES/WAYPOINTS LIST].

## 5. WAYPOINTS

8. Select [1. WAYPOINTS LIST].
9. Press the **WPT** key or **ENTER** knob to show the [EDIT WPT NAME] window.  
**Note:** Push the **ENTER** knob after selecting a blank line.
10. Select [COORDINATE].
11. Select [TIME DIFFERENCE].

When selecting [TIME DIFFERENCE] in [COORDINATE], [TME ADJ1] and [TME ADJ2] are displayed here.

EDIT WPT NAME	
NAME OF WPT	: 000001
TME ADJ1	: 1 1 1 7 5 . 3
TME ADJ2	: 3 5 0 6 4 . 0
GRI	: 4990 11-29
MARK COLOR	: <span style="color:red">■</span> <span style="color:yellow">■</span> <span style="color:green">■</span> <span style="color:cyan">■</span> <span style="color:purple">■</span> <span style="color:blue">■</span> <span style="color:white">■</span>
MARK SHAPE	:
MARK DISPLAY	: <input checked="" type="checkbox"/> YES <input type="checkbox"/> NO
COORDINATE	: LATITUDE/LONGITUDE RANGE/BEARING <input checked="" type="checkbox"/> TIME DIFFERENCE
INT. BAN	: 0 . 0 0 NM
COMMENT	: 09:12 1501.01
RUN	
TURN KNOB,▲▼ : SELECT    PUSH KNOB : ENTER [MENU] : BACK	

12. Select [TME ADJ1].
13. Press the numeric keys to enter the time difference 1.
14. Select [TME ADJ2].
15. Press the numeric keys to enter the time difference 2.
16. Follow the procedure from step 11 in section 5.1.3.

### 5.1.6 How to enter waypoints by Decca LOPs

1. Press the **MENU** key to open the main menu.
2. Select [8. PLOTTER DISPLAY SETTING].
3. Select [3. LORAN/DECCA SETTING].
4. Select [TIME DIFF. DISP TYPE].
5. Select [DECCA].
6. Press the **MENU** key twice to return to the main menu.
7. Select [1. ROUTES/WAYPOINTS LIST].
8. Select [1. WAYPOINTS LIST].
9. Press the **WPT** key or **ENTER** knob to show the [EDIT WPT NAME] window.  
**Note:** Push the **ENTER** knob after selecting a blank line.
10. Select [COORDINATE].

## 11. Select [TIME DIFFERENCE].

When selecting [TIME DIFFERENCE] in [COORDINATE], [LANE 1] and [LANE 2] are displayed here.

EDIT WPT NAME	
NAME OF WPT	: 000001
LANE 1	: 1 G : 0 3 . 5 4
LANE 2	: 1 F : 3 3 . 7 4
CHAIN : 01 S BALTIC R-G	
MARK COLOR	: <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
MARK SHAPE	: <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
MARK DISPLAY	: <input checked="" type="checkbox"/> YES <input type="checkbox"/> NO
COORDINATE	: LATITUDE/LONGITUDE RANGE/BEARING <input checked="" type="checkbox"/> TIME DIFFERENCE
INT. BAN	: 0 . 0 0 NM
COMMENT	: 09:13 1501.01
RUN	
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER [MENU] : BACK	

## 12. Select [LANE 1].

## 13. Press the numeric keys to enter the value for [LANE 1]. Enter the alphabet of the lane by pressing applicable numeric key, referring to the following:

1 key: A	2 key: B	3 key: C	4 key: D
5 key: E	6 key: F	7 key: G	8 key: H
9 key: I	0 key: J		

To set "1F: 22.01", for example, press the **1, 6, 2, 2, 0, 1** keys in order.

## 14. Select [LANE 2].

## 15. Press the numeric keys to enter the value for [LANE 2].

## 16. Follow the procedure from step 11 in section 5.1.3.

## 5.2 How to Edit Waypoints


You can edit waypoints from the waypoints list.

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [1. WAYPOINTS LIST].
4. Select the waypoint to edit. The [EDIT WPT NAME] window appears.
 

**Note 1:** Waypoints can be sorted by alphanumeric order, distance to own ship, mark type, or registration order (see section 5.4).

**Note 2:** A waypoint's color or shape cannot be changed when its [INT. BAN] is other than 0.00 NM.

**Note 3:** The color and shape of the last-edited waypoint will be used hereafter for the waypoint entered at own ship position and cursor position.
5. Select the item to edit, then edit its attributes as required (see section 5.1.3).
6. Select [RUN] to show the following message.

	WAYPOINT XXXXXX ALREADY EXISTS. OVERWRITE?
RUN	<b>CANCEL</b>

 
7. Select [RUN].
8. Press the **DISP** key to close the menu.

## 5.3 How to Erase a Waypoint

A waypoint can be erased with the cursor or from the waypoints list.

### How to erase a waypoint with the cursor


1. Press the **CURSOR ON/OFF** key to display the cursor.
2. Put the cursor on the waypoint to erase.
3. Press the **CANCEL** key to show the following message.



4. Select [RUN] to erase the waypoint from the screen and the waypoints list.

### How to erase a waypoint from the waypoints list

 1. Press the **MENU** key to open to the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [1. WAYPOINTS LIST].
4. Select the waypoint to erase then press the **CANCEL** key. The following message appears.



5. Select [RUN] to erase the waypoint from the waypoints list and the screen.
6. Press the **DISP** key to close the menu.

## 5.4 How to Search Waypoints

You can search waypoints by sort method (alphanumeric order, distance to own ship, mark type, registration order), or waypoint name.

### How to search waypoints by search method

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [1. WAYPOINTS LIST].
4. Select [SORT].
5. Select the search method.
  - [ALPHA. ORD]: Sorts waypoints in order of MOB, numbers, alphabets.
  - [RNG ORDER]: Sorts waypoints in order of increasing distance to own ship.
  - [MARK SHAPE]: Sorts waypoints in order of MOB mark, proximity radius mark and other mark shapes (in order of indication on the [EDIT WPT NAME] window).
  - [REG. ORDER]: Sorts waypoints in order of registration. The last-registered waypoint is at the top of the list.
6. Press the **DISP** key to close the menu.



### How to search by waypoint name

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [1. WAYPOINTS LIST].
4. Select [SEARCH] to show the [SEARCH] window.
5. Enter the first three characters of the waypoint name (see "How to enter alphanumeric data" on page 1-10) then select [ENTER]. The waypoint that best matches the search criteria is displayed at the top of the waypoints list.
6. Press the **DISP** key to close the menu.

## 5.5 How to Set Speed to Use in TTG Calculation


Calculation of TTG is based on ship's speed data. Speed can be set manually or automatically.

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [1. WAYPOINTS LIST].
4. Select [SPD FOR TTG CALC].
5. Select [T. SHP SPD] or [ENT VALU].  
[T. SHP SPD]: Calculate TTG with the actual ship's speed. Go to step 7.  
[ENT VALU]: Calculate TTG with manually entered speed. Go to step 6.
6. Press the numeric keys to enter speed. TTG for the selected waypoint is calculated using the speed entered here.
7. Highlight the waypoint on the waypoints list to show its TTG ([TIME TO GO]) and ETA ([EST TIME OF ARR.]) at the bottom right of the screen.
8. Press the **DISP** key to close the menu.

## 5.6 How to Display Waypoint Information

You can show the latitude and longitude position and the comment for a waypoint

1. Press the **CURSOR ON/OFF** key to display the cursor.
2. Put the cursor on the waypoint to find its information. A window showing the latitude and longitude position and comment for the waypoint appears.

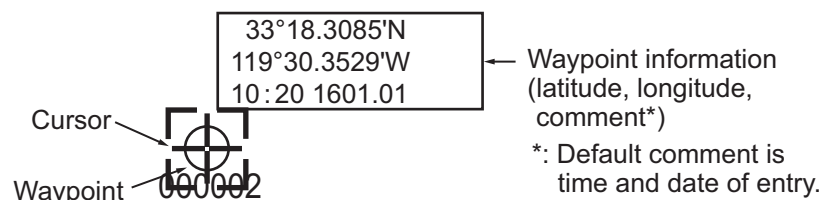


**Note:** The data window may not appear depending on menu setting. To show the window, set [WAYPOINT INFORMATION] to [SHOW] in the [1. DISPLAY FORMAT] menu.


## 5.7 How to Change Waypoint Mark Size

You can change the size of all waypoints to small or large, or turn them off.

1. Press the **MENU** key to open the main menu.
2. Select [7. COAST LINE SETTING].

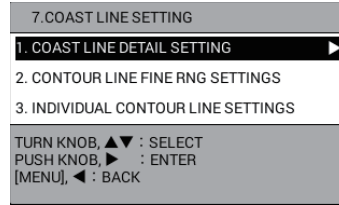


3. Select [1. COAST LINE DETAIL SETTING].

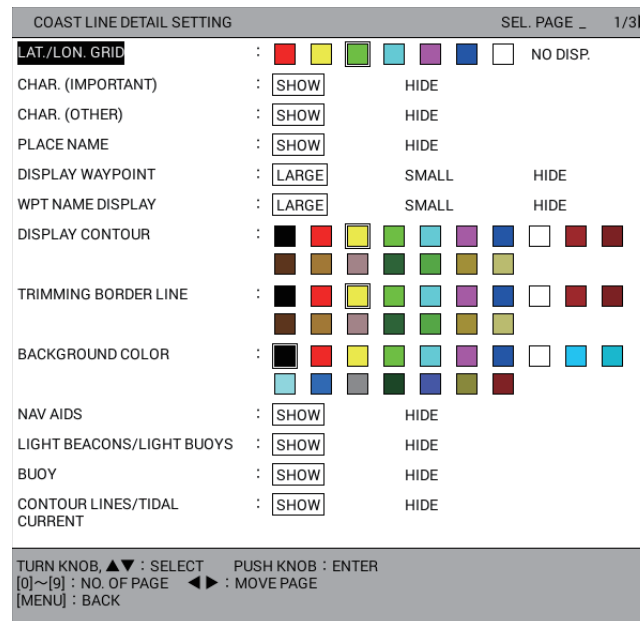

4. Select [DISPLAY WAYPOINT] on page 1.
5. Select [LARGE], [SMALL], or [HIDE].  
[LARGE]: Waypoints are shown in actual mark shape.  
[SMALL]: Waypoints are shown with an “x” regardless of mark shape selected.  
[HIDE]: All waypoints are turned off except the waypoint destination and route.
6. Press the **DISP** key to close the menu.

## 5.8 How to Mark Radar Target Position

With connection of a radar that supports TLL (Target Latitude and Longitude), a radar target's position can be output from the radar and marked on this plotter as the waypoint . For details, see the radar's operator's manual.



## 6. ROUTES

7. Select [COMMENT].
8. Enter the comment (see "How to enter alphanumeric data" on page 1-10).
9. Select [RUN] to show [RTE TRN PT LIST].

000001 RTE TRN PT LIST					SEL. PAGE _ 1/1	
	WPT		LATITUDE/LONGITUDE	DISTANCE	TTG	
1						
2						
3						
4						
5						
6						
7						
8						
9						
10						

WAYPOINTS LIST					SEL. PAGE _ 1/1	
NAME			LATITUDE/LONGITUDE	INT. BAN	COMMENT	
000001	●		33° 44.4762N 118° 00.7292W	0.00NM	10:00 1501.01	
000002	●		33° 43.7124N 118° 58.8938W	0.00NM	09:05 1501.01	
000003	●		33° 42.3050N 118° 57.3059W	0.00NM	09:05 1501.01	
000004	●		33° 40.5598N 118° 56.2006W	0.00NM	09:05 1501.01	
000005	●		33° 38.5330N 118° 55.2654W	0.00NM	09:05 1501.01	
000006	●		33° 36.9052N 118° 53.2233W	0.00NM	09:05 1501.01	
000007	●		33° 35.4199N 118° 50.9917W	0.00NM	09:05 1501.01	
000008	●		33° 33.1704N 118° 48.7842W	0.00NM	09:06 1501.01	
000009	●		33° 31.9381N 118° 44.6255W	0.00NM	09:06 1501.01	
000010	●		33° 29.3387N 118° 42.6100W	0.00NM	09:06 1501.01	

SORT		: [ALPHA. ORD]	RNG ORDER	
		MARK SHAPE	REG. ORDER	
SEARCH		: _____		

--NM    --.M

[0]~[9] : NO. OF PAGE    ◀ ▶ : MOVE PAGE  
 [CURSOR ON/OFF] : SKIP WPT  
 [CANCEL] : DELETE WPT    [MENU] : BACK

10. Push the **ENTER** knob to move the cursor to the waypoints list.

000001 RTE TRN PT LIST					SEL. PAGE _ 1/1	
	WPT		LATITUDE/LONGITUDE	DISTANCE	TTG	
1						
2						
3						
4						
5						
6						
7						
8						
9						
10						

WAYPOINTS LIST					SEL. PAGE _ 1/2▶	
NAME			LATITUDE/LONGITUDE	INT. BAN	COMMENT	
000001	●		33° 44.4762N 118° 00.7292W	0.00NM	10:00 1501.01	
000002	●		33° 43.7124N 118° 58.8938W	0.00NM	09:05 1501.01	
000003	●		33° 42.3050N 118° 57.3059W	0.00NM	09:05 1501.01	
000004	●		33° 40.5598N 118° 56.2006W	0.00NM	09:05 1501.01	
000005	●		33° 38.5330N 118° 55.2654W	0.00NM	09:05 1501.01	
000006	●		33° 36.9052N 118° 53.2233W	0.00NM	09:05 1501.01	
000007	●		33° 35.4199N 118° 50.9917W	0.00NM	09:05 1501.01	
000008	●		33° 33.1704N 118° 48.7842W	0.00NM	09:06 1501.01	
000009	●		33° 31.9381N 118° 44.6255W	0.00NM	09:06 1501.01	
000010	●		33° 29.3387N 118° 42.6100W	0.00NM	09:06 1501.01	

SORT		: [ALPHA. ORD]	RNG ORDER	
		MARK SHAPE	REG. ORDER	
SEARCH		: _____		

8.40NM    184.1'M

TURN KNOB ▲▼ : SELECT    PUSH KNOB : ADD WPT  
 [0]~[9] : NO. OF PAGE    ◀ ▶ : MOVE PAGE  
 [MENU] : BACK

← For multiple pages, press  
◀ or ▶ to switch the page.

← Preview for the selected  
waypoint

11. Select a waypoint from the waypoint list. The preview for the selected waypoint is displayed at the bottom right of the screen.
  - When 11 or more waypoints are registered, use ◀ or ▶ to switch the page.
  - Waypoints are sorted in order of the selected search method. Select [SORT] then select a search method (see "How to search waypoints by search method" on page 5-8).
12. Repeat step 11 to complete the route.

13. Press the **MENU** key twice to return to [ROUTES LIST]. The total distance, number of waypoints, ETA and TTG are shown.

ROUTES LIST		SEL. PAGE _ 1/1		
NAME	COMMENT	TTL DIST	WPT QTY	SET AS DEST.
000001		7.79NM	5	

Number of waypoints  
Total distance from first waypoint to final waypoint

Preview for final waypoint

Estimated time of arrival  
Time to go


BACK TRACK : DISTANCE TIME [NO]  
RNG LOG : 0 0 0 . 1 NM  
TIME LOG : 0 0 H 0 1 M  
SORT : ALPHA. ORD RNG ORDER  
REG. ORDER  
SPD FOR : T. SHP SPD 10.0kn  
TTG CALC : ENT VALU : 0 0 . 0 k n  
SEARCH : \_\_\_\_\_

PUSH KNOB : EDIT ROUTE [WPT] : NEW WAYPOINT  
[CURSOR ON/OFF] : REVERSE RTE [GOTO] : SET DESTINATION  
[CANCEL] : DELETE ROUTE [MENU] : BACK

To set the route as your destination, press the **GOTO** key. [DST: FW] is displayed in [SET AS DEST.]. To follow the route in reverse waypoint order, press the **CURSOR ON/OFF** key. The indication [DIREC: FWD] changes [DIREC: REV] and the waypoint set as first waypoint is displayed in the preview window as final waypoint.

14. Press the **DISP** key to close the menu.

### 6.1.2 How to create track-based routes using own ship position

You can create routes based on your ship's track, by entering waypoints at own ship position, either manually or automatically. Track-based routes can have a maximum of 100 points. For automatic entry, you need to set an interval of time or distance. This feature is useful when you wish to retrace a track. The SAVE icon (  ) appears at the bottom right of the screen when creating a track based route.

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [2. ROUTES LIST].
4. Select [RNG LOG] or [TIME LOG].
5. Press the numeric keys to enter range or time.
6. Select [BACK TRACK].
7. Select [DISTANCE] or [TIME]. Own ship position is automatically saved, at the interval selected, to use in creation of the route. The route name is automatically created.
8. Press the **DISP** key to close the menu.
9. To create the route manually, do the following:
  - 1) Press the **CURSOR ON/OFF** key to turn off the cursor.

## 6. ROUTES

- 2) Press the **WPT** key where you want to register the current own ship position as the waypoint. The message "ADDED WAYPOINT xxxxxx TO ROUTE XXXXXX." appears.
- 3) Press the **WPT** key where you want to change the course. The message same with the one in step 2 appears.

### How to stop creating track-based routes

Follow the procedure below to stop creating a track-based route. Creation is automatically stopped when 100 waypoints have been entered, with the message "REACHED MAX. NO. OF WPTS REGISTERED IN A RTE." shown on the screen. Push the **ENTER** knob.

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [2. ROUTES LIST].
4. Select [BACK TRACK].
5. Select [NO].
6. Press the **DISP** key to close the menu.

### 6.1.3 How to create routes with selected tracks

You can create routes with the selected tracks of own ship or other ships.

1. Press the **MENU** key to open the main menu.
2. Select [5. MARK/TRACK EDIT/DELETE].
3. Select [7. TRACK ROUTE CONVERSION] to show the [TRACK ROUTE CONVERSION] window. Memory points for tracks are displayed with little squares.


TRACK ROUTE CONVERSION	
SEL. METH.	: BTWN 2PTS.
FILTER SET	
DISTANCE	: 0 0 0 . 0 0 0 NM
ANGLE	: 0 0 0 . 0 *
RUN CONV.	
NO OF DST TO CONV :	0/100
PLACE CURSOR AT START OF TRACK CONVERSION. PRESS KNOB TO CONFIRM.	

4. Select start memory point (  ) to convert the route.
5. Select ending memory point (  ) to convert the route.
6. Select [DISTANCE] in [FILTER SET].
7. Press the numeric keys to set the distance in order to filter the memory points for the route. Memory points that meet both of the following conditions are registered as waypoints for the route.
  - The distance between two track memory points is farther than the distance set here.
  - The angle between two track memory points is larger than the angle set at step 9.
8. Select [ANGLE] in [FILTER SET].

9. Press the numeric keys to set the angle filtered.
10. Select [RUN CONV.]. The number of points converted to waypoints is displayed.

TRACK ROUTE CONVERSION	
SEL. METH.	: BTWN 2PTS.
FILTER SET	
DISTANCE	: 0 0 0 . 5 0 0 NM
ANGLE	: 0 1 0 . 0 °
RUN CONV.	
NO OF DST TO CONV :	3/100
[WPT] : CHANGE TRACK PT TO WPT [CANCEL] : REVERT WPT TO TRACK PT [MENU] : BACK PUSH KNOB : CONVERT TO ROUTE	

- **WPT** key: If you want to convert a filtered memory point to a waypoint, select the memory point then press the **WPT** key.
  - **CANCEL** key: If you want to convert a filtered waypoint to a memory point, select the waypoint then press the **CANCEL** key.
11. Push the **ENTER** knob to show the following message.

	CONVERT THE TRACK TO ROUTE. ARE YOU SURE?
RUN	<b>CANCEL</b>

12. Select [RUN]. The converted waypoints are displayed on the screen. The waypoints are numbered from the youngest waypoint number among unused waypoints and displayed on the waypoints list. The converted route is displayed on the routes list. The route number is the smallest number among the unused route numbers.
13. Press the **DISP** key to close the menu.

## 6.2 How to Edit Routes

### 6.2.1 How to insert waypoints

You can newly insert waypoints to a registered route.

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [2. ROUTES LIST].
4. Select the route to process, and the [ROUTE NAME/ENTER COMMENT] window appears.
5. Select [RUN] to show [RTE TRN PT LIST].
6. On the list, select where to insert the waypoint.
  - **Insert waypoint between existing waypoints:** Put the cursor on the waypoint which will follow the waypoint to be inserted.
  - **Insert waypoint at the end of route:** Select first blank line.

The cursor shifts to the waypoints list.
7. Select the waypoint to insert. The waypoint is inserted at the selected location.
 

**Note:** To correct an error, press the **MENU** key to move the cursor to [RTE TRN PT LIST]. Select the waypoint to remove, then press the **CANCEL** key.

## 6. ROUTES

 
8. Press the **DISP** key to close the menu.

### 6.2.2 How to delete waypoints from routes

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [2. ROUTES LIST].
4. Select the route to process, and the [ROUTE NAME/ENTER COMMENT] window appears.
5. Select [RUN] to show [RTE TRN PT LIST].
6. Select the waypoint to delete, then press the **CANCEL** key.
7. Press the **DISP** key to close the menu.

### 6.3 How to Delete Routes

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [2. ROUTES LIST].
4. Select the route to delete, then press the **CANCEL** key. The following message appears.



5. Select [RUN] to delete the route.
6. Press the **DISP** key to close the menu.

### 6.4 How to Search Routes

You can search routes by sort method (alphanumeric order, distance to own ship, registration order), or route name.

#### How to search routes by search method

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [2. ROUTES LIST].
4. Select [SORT].
5. Select the search method.
  - [ALPHA. ORD]: Sorts routes in order of numbers, alphabets.
  - [RNG ORDER]: Sorts routes in order of increasing distance to own ship.
  - [REG. ORDER]: Sorts routes in order of registration. The last-registered route is at the top of the list.
6. Press the **DISP** key to close the menu.



### How to search by route name

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [2. ROUTES LIST].
4. Select [SEARCH] to show the [SEARCH] window.
5. Enter the first three characters of the route name (see "How to enter alphanumeric data" on page 1-10) then select [ENTER]. The appropriate route is displayed at the top of the routes list.
6. Press the **DISP** key to close the menu.

## 6.5 How to Set the Speed to Use in TTG Calculation

Calculation of TTG is based on ship's speed data. Speed can be set manually or automatically.

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [2. ROUTES LIST].
4. Select [SPD FOR TTG CALC].
5. Select [T. SHP SPD] or [ENT VALU].  
[T. SHP SPD]: Calculate TTG with the actual ship's speed. Go to step 7.  
[ENT VALU]: Calculate TTG with manually entered speed. Go to step 6.
6. Press the numeric keys to enter speed.
7. Highlight the route on the routes list to show its TTG ([TIME TO GO]) and ETA ([EST TIME OF ARR.]) at the bottom right of the screen.
8. Press the **DISP** key to close the menu.

## 6. ROUTES

This page is intentionally left blank.

# 7. DESTINATION

This chapter shows you how to get to a desired destination, using “quick points,” waypoints, and routes.


## 7.1 How to Go to a Quick Point

The quick point feature allows you to navigate to point(s) without retaining the data in the internal memory. Each time a quick point is entered, previous quick points having the same numbers as newly entered ones are written over.

### How to select the quick point entry method

You can select the quick point entry method: single point or multiple points (up to 100 points).


1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [1. DISPLAY FORMAT].
4. Select [SET GOTO METHOD] on page 3.

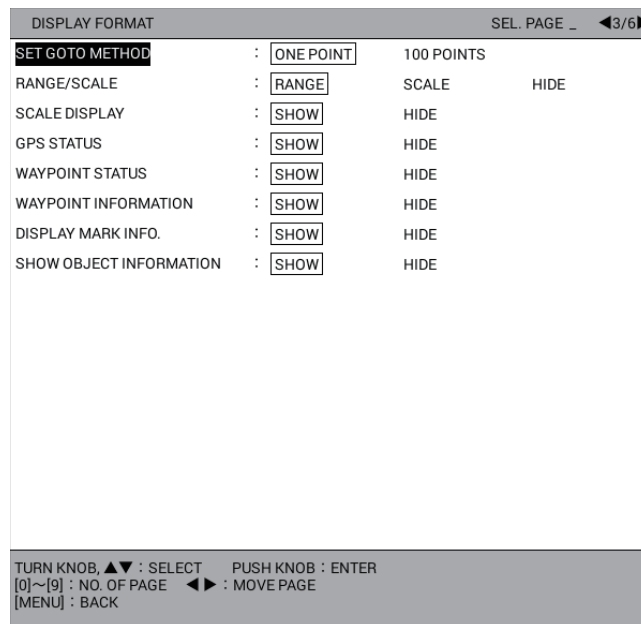

5. Select [ONE POINT] or [100 POINTS].  
[ONE POINT]: Sets a single quick point as a waypoint.  
[100 POINTS]: Sets multiple quick points (up to 100) as a route.
6. Press the **DISP** key to close the menu.

**How to navigate to a single quick point**

1. Set the quick point entry method to [ONE POINT], referring to "How to select the quick point entry method" on page 7-1.
2. Show the plotter display with NAV information (see section 1.4.2 and section 2.1.2).
3. Press the **CURSOR ON/OFF** key to turn on the cursor.
4. Put the cursor where you want to enter the quick point, then press the **GOTO** key.

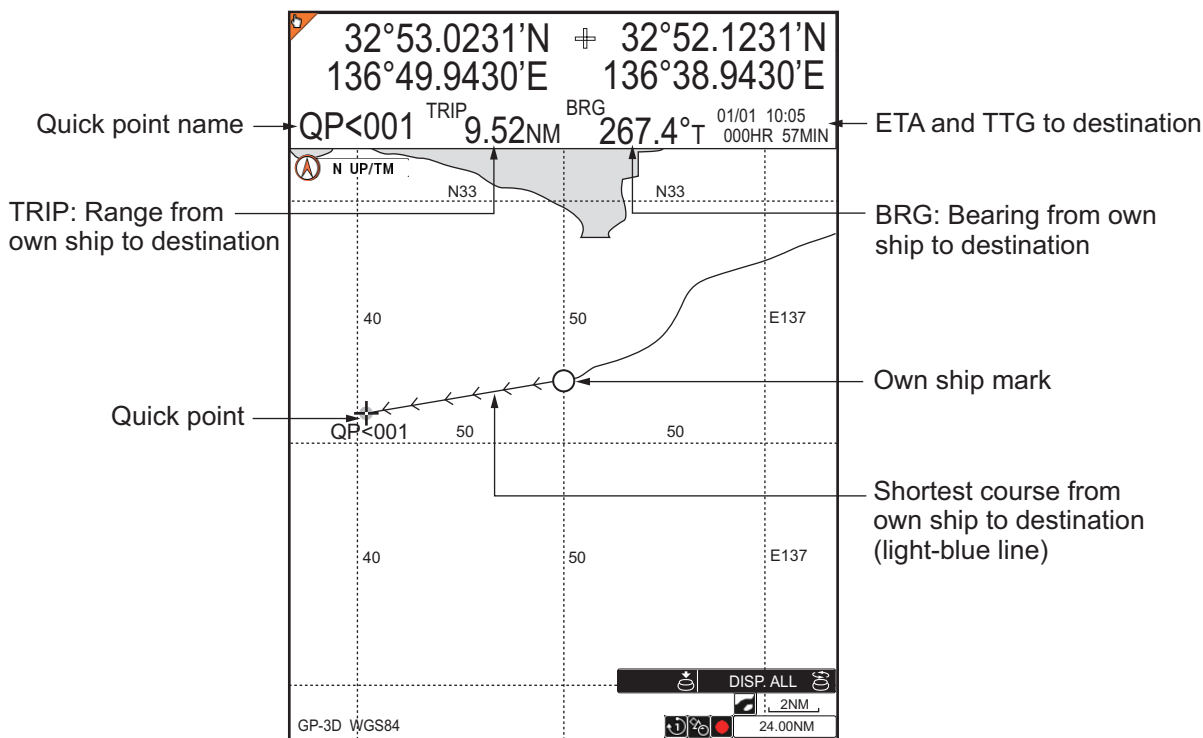


The quick point (destination) is marked and named "QP<001". A light-blue line connects the own ship with the destination, and the line shows the shortest course to the destination. Arrows on the line show the direction to follow to get to the destination. When selecting [DISTANCE TO WAYPOINT], [BEARING TO WAYPOINT], [WAYPOINT ETA, TTG] for destination information, range and bearing from own ship to the destination, ETA and TTG to the destination appear on the NAV information box. The location is saved to the waypoints list, under the name "QP<001".

**Note 1:** Each time a quick point is entered, previous quick points having the same numbers as newly entered ones are written over.

**Note 2:** If waypoint data (L/L position) is received from an external navigator while navigating to a quick point, the quick point is erased and the received waypoint becomes the destination.

### How to navigate a quick point route

1. Set the quick point entry method to [100 POINTS], referring to "How to select the quick point entry method" on page 7-1.
2. Show the plotter display with NAV information (see section 1.4.2 and section 2.1.2).
3. Press the **CURSOR ON/OFF** key to turn on the cursor.
4. Press the **GOTO** key to show the [CREATE QUICK ROUTE] window.
5. Put the cursor where you want to enter the first quick point (registered waypoint or new point), then push the **ENTER** knob. The symbol and name for the selected waypoint turn yellow. When entering a new point, it is named "QP<001".
6. Repeat step 5 to complete the route (up to 100 waypoints). A yellow line connects the selected waypoints each other. To delete the last-set waypoint, press the **CANCEL** key.
7. To complete the route, push the **ENTER** knob twice at the final quick point.

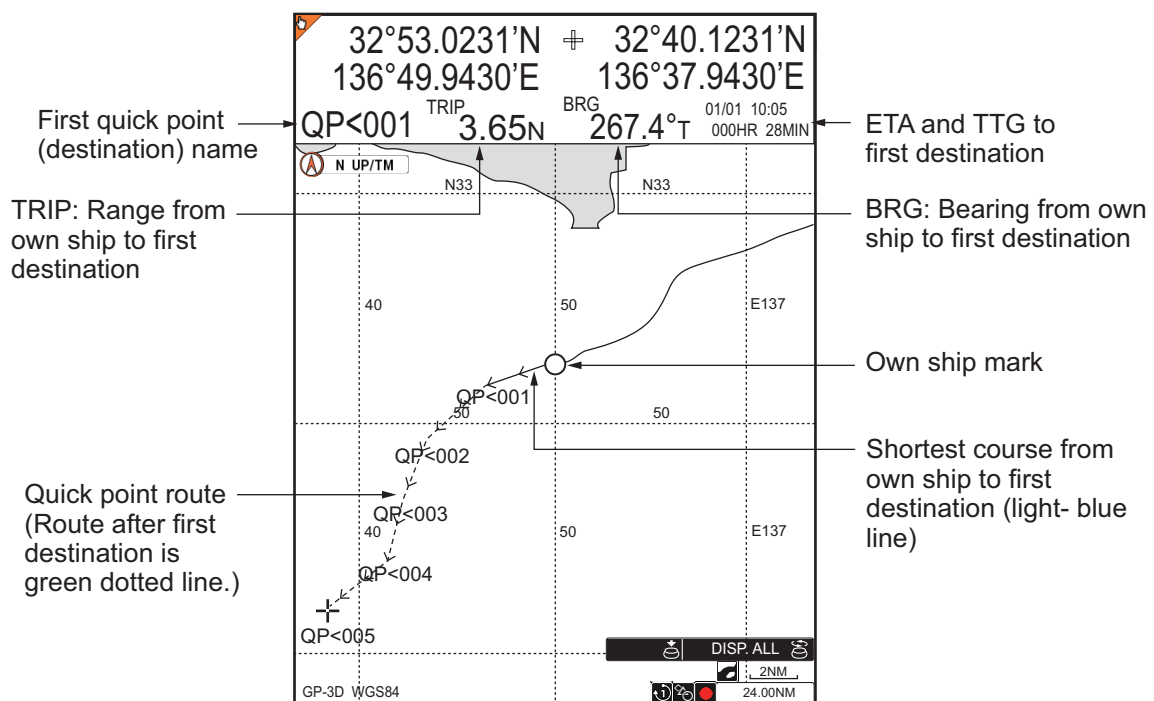

A light-blue line connects the own ship with the first destination, and green dotted lines connect between other waypoints. The line shows the shortest course to the destination. Arrows on the line show the direction to follow to get to the destination. When selecting [DISTANCE TO WAYPOINT], [BEARING TO WAYPOINT], [WAYPOINT ETA, TTG] for destination information, range and bearing from own ship to the first destination, ETA and TTG to the first destination appear on the NAV information box. The route is saved to the routes list, under the name "Q<RTE".

**Note:** Each time a quick point route is entered, previous quick point route is written over. When entering a new quick waypoint, "QP<001" is removed from the "Q<RTE".

## 7.2 How to Set a Waypoint as Destination

There are four methods to set a waypoint as destination.

- Set a waypoint as destination on the plotter display.
- Set a waypoint as destination from the waypoints list.
- Set a waypoint as destination with a waypoint number.
- Set a waypoint as destination from the waypoint log.

### How to set a waypoint as destination on the plotter display

1. Set the quick point entry method to [ONE POINT], referring to "How to select the quick point entry method" on page 7-1.
2. Show the plotter display with NAV information (see section 1.4.2 and section 2.1.2).
3. Press the **CURSOR ON/OFF** key to turn on the cursor.
4. Put the cursor on the waypoint to set as the destination, then press the **GOTO** key.

A light-blue line connects the own ship with the destination. When selecting [DISTANCE TO WAYPOINT] and [BEARING TO WAYPOINT] for destination information, range and bearing from own ship to the destination appear on the NAV information box.

### How to set a waypoint as destination from the waypoints list

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [1. WAYPOINTS LIST].
4. Select the waypoint to set as the destination, then press the **GOTO** key. The indication "SET DEST.: WPT XXXXXX" appears below the title [WAYPOINTS LIST].
5. Press the **DISP** key to close the menu.

A light-blue line connects the own ship with the destination. When selecting [DISTANCE TO WAYPOINT] and [BEARING TO WAYPOINT] for destination information, range and bearing from own ship to the destination appear on the NAV information box.

### How to set a waypoint as destination with a waypoint number

1. Press the **CURSOR ON/OFF** key to turn off the cursor.
2. Press the **GOTO** key to show the [SELECT WP] window.

[SELECT WP] window →

SELECT WP				
ENTER WP NO : 0 0 0 0 0 0				
WPT LOG				
NAME		LATITUDE/LONGITUDE	INT. BAN	COMMENT
000007	●	33° 35.4199N 118° 50.9917W	0.00NM	09:05 1501.01
000001	●	33° 44.4762N 119° 00.7292W	0.00NM	10:00 1501.01
TO SET A DESTINATION: ENTER POINT NO. OR ROTATE KNOB TO SELECT POINT THEN PRESS KNOB TO CONFIRM.				

**Note:** The [SELECT WP] window closes automatically when there is no operation for 10 seconds.

3. Press the numeric keys to enter the waypoint number to set as the destination then push the **ENTER** knob.

A light-blue line connects the own ship with the destination. When selecting [DISTANCE TO WAYPOINT] and [BEARING TO WAYPOINT] for destination information, range and bearing from own ship to the destination appear on the NAV information box.

### **How to set a waypoint as destination from the waypoint log**

Up to 10 waypoints last-set as destinations are registered on the waypoint log. To set a waypoint among these waypoints as the destination, do the following. When the waypoint log memory becomes full, the oldest waypoint is erased to make room for the latest.

1. Press the **CURSOR ON/OFF** key to turn off the cursor.
2. Press the **GOTO** key to show the [WP LOG] window.

[WP LOG] window →

SELECT WP			
ENTER WP NO : 000000			
WP LOG			
NAME		LATITUDE/LONGITUDE	INT. BAN COMMENT
000007	●	33° 35.4199'N 118° 50.9917'W	0.00NM 09:05 1501.01
000001	●	33° 44.4762'N 119° 00.7292'W	0.00NM 10:00 1501.01
TO SET A DESTINATION: ENTER POINT NO. OR ROTATE KNOB TO SELECT POINT THEN PRESS KNOB TO CONFIRM.			

**Note:** The [WP LOG] window closes automatically when there is no operation for 10 seconds.

3. Select the waypoint to set as the destination from the waypoint log.

A light-blue line connects the own ship with the destination. When selecting [DISTANCE TO WAYPOINT] and [BEARING TO WAYPOINT] for destination information, range and bearing from own ship to the destination appear on the NAV information box.

## 7.3 How to Follow Routes

### How to set a route as destination

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [2. ROUTES LIST].
4. Select the route to set as destination then press the **CURSOR ON/OFF** key to switch the direction to follow the route. The direction selected is indicated below the title [ROUTES LIST] as [DIREC: FWD] or [DIREC: REV].  
[DIREC: FWD]: Follow the route in the order its waypoints were entered.  
[DIREC: REV]: Follow the route in order of last waypoint to first waypoint.
5. Press the **GOTO** key to set the route as destination. The indication [DST: RV] or [DST: FW] appears in [SET AS DEST].

ROUTES LIST					SEL. PAGE _ 1/1
DIREC: FWD					
NAME	COMMENT	TTL DIST	WPT QTY	SET AS DEST.	
000001	ROUTE 1	21.23NM	5	DST: FW	

Forward order

ROUTES LIST					SEL. PAGE _ 1/1
DIREC: REV					
NAME	COMMENT	TTL DIST	WPT QTY	SET AS DEST.	
000001	ROUTE 1	21.23NM	5	DST: RV	


Reverse order

6. Press the **DISP** key to close the menu.

A light-blue line connects the own ship with the first destination, and green dotted lines connect between other waypoints. When selecting [DISTANCE TO WAYPOINT] and [BEARING TO WAYPOINT] for destination information, range and bearing from own ship to the first destination appear on the NAV information box.

### How to skip waypoints in a route

In some instances you may want to skip waypoints while following a route. In the figure below, for example, the vessel has decided to navigate from waypoint 05 to 03, skipping waypoint 04.

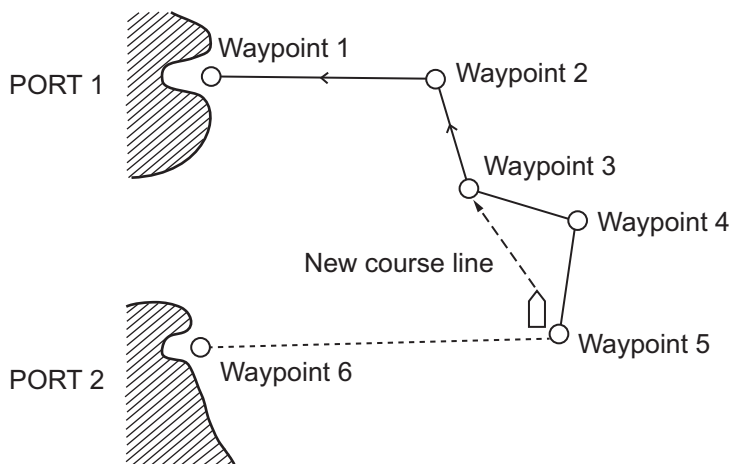

1. Press the **MENU** key to open the main menu.
2. Select [1. ROUTES/WAYPOINTS LIST].
3. Select [2. ROUTES LIST].



4. Select the route to change. The [ROUTE NAME/ENTER COMMENT] window appears.
5. Select [RUN] to display [RTE TRN PT LIST].
6. Select the waypoint to skip then press the **CURSOR ON/OFF** key. "-" appears in [DISTANCE], [TTG] and a field before [WPT].

000001 RTE TRN PT LIST				SEL. PAGE 1/1	
	WPT	LATITUDE/LONGITUDE	DISTANCE	TTG	
1	000001	33° 44.4762N 119° 00.7292W	0.00NM	00D00H00M	
2	000002	33° 43.7124N 118° 58.8938W	1.71NM	00D00H10M	
3	000007	33° 35.4199N 118° 50.9917W	--NM	--D--H--M	
4	000004	33° 40.5598N 118° 56.2006W	5.58NM	00D00H33M	
5	000005	33° 38.5330N 118° 55.2654W	7.76NM	00D00H46M	
6					
7					
8					
9					
10					

Waypoint to skip →

**Note:** To restore a waypoint, select it then press the **CURSOR ON/ OFF** key.


7. Press the **DISP** key to close the menu.

### How to select the waypoint switching method

When your vessel arrives at a waypoint, the waypoint is automatically switched to the next sequential waypoint. You can select the switching method from [WPT ON VERTICAL LINE] or [ARRIVE ALARM WITHIN RANGE].

[WPT ON VERTICAL LINE]: Automatically switches the waypoint to the next sequential waypoint when the vessel enters the arrival alarm area or the vessel passes an imaginary perpendicular line passing through the center of the destination waypoint. For how to set the arrival alarm area, see chapter 8.


[ARRIVE ALARM WITHIN RANGE]: Automatically switches the waypoint to the next sequential waypoint when your vessel is within the arrival alarm area.

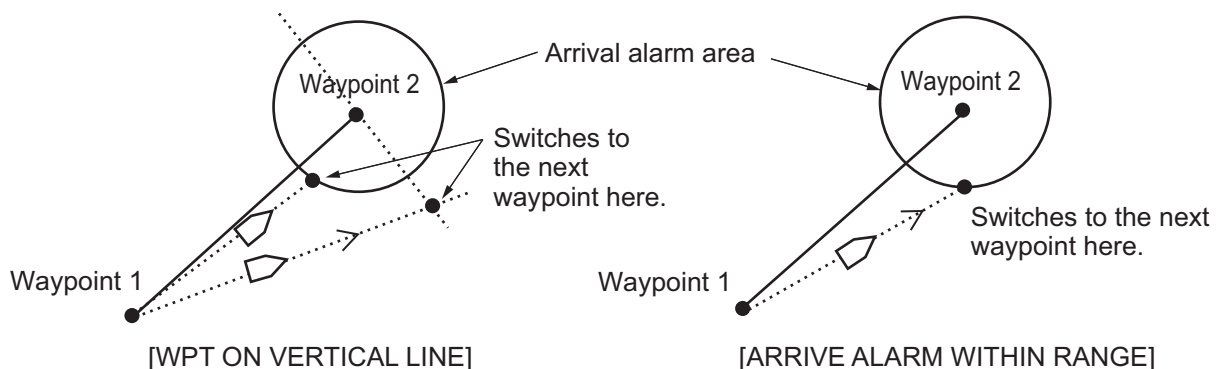

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [1. DISPLAY FORMAT].
4. Select [WPT.REFRESH SETTING] on page 2.
5. Select [WPT ON VERTICAL LINE] or [ARRIVE ALARM WITHIN RANGE].
6. Press the **MENU** key to close the menu.

## 7.4 How to Stop Navigation

 1. Press the **GOTO** key to show the following message.




2. Select [RUN] to stop navigation.

# 8. ALARMS

This unit has 16 alarms which alert you with audio and visual alarms.

- Arrival
- Cross-track error (XTE)
- Ship speed
- AIS proximity
- External AIS
- Depth
- Anchor watch
- Border
- Trip range
- CPA/TCPA
- Water temp.
- Route
- Intrusion point
- AIS auto activation
- AIS lost
- Shear

When an alarm setting is violated, the buzzer sounds and the alarm icon and alarm type appear at the bottom of the screen. You may silence the buzzer by pressing the **CANCEL** key. The icon remains on the screen until the cause of the alarm is removed or the alarm is deactivated. When an alarm setting occurs again, the buzzer sounds and the alarm icon appears.

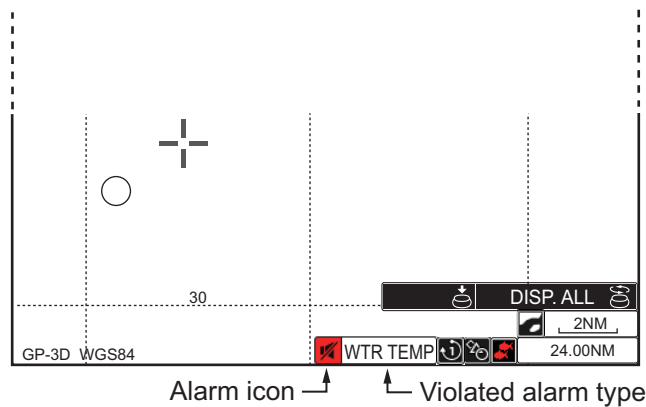

**Note:** When multiple alarms occur, violated alarm types alternately appear at the bottom of the display.

## 8.1 How to Turn the Audio Alarm On/Off

The audio alarm sounds whenever an alarm setting is violated. You can enable or disable the audio alarm as follows:


1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [ALARM PATTERN] on page 1.

ALARM SETTINGS		SEL. PAGE _ 1/3▶	
<b>ALARM PATTERN</b>	:	SHORT BEEP	LONG BEEP
		<input type="checkbox"/> CONTINUOUS BEEP	---
		RESET	
ARRIVAL ALARM	:	ON	<input type="checkbox"/> OFF
ALARM RANGE	:	0. 0 5 0 NM	
ANCHOR WATCH ALARM	:	ON	<input type="checkbox"/> OFF
ALARM RANGE	:	0. 0 5 0 NM	
ROUTE ALARM SETTING	:	ON	<input type="checkbox"/> OFF
XTE/BORDER ALARM	:	OFF COURSE	INTRUSION <input type="checkbox"/> OFF
ALARM RANGE	:	0. 0 5 0 NM	
INTRUSION POINT ALM	:	ON	<input type="checkbox"/> OFF
SHIP SPEED ALARM	:	WITHIN RANGE	OUT OF RANGE <input type="checkbox"/> OFF
MINIMUM SHIP SPEED	:	0 0 0. 0 k n	
MAXIMUM SHIP SPEED	:	0 3 0. 0 k n	
TRIP RANGE ALARM	:	ON	<input type="checkbox"/> OFF
ALARM RANGE	:	0 0 0 0. 1 NM	
TRIP RANGE RESET			
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER [0]~[9] : NO. OF PAGE    ◀▶ : MOVE PAGE [MENU] : BACK			


4. Select the audio alarm type.  
 [SHORT BEEP]: Three beeps sound.  
 [LONG BEEP]: Six beeps sound.  
 [CONTINUOUS BEEP]: Continuous beeps sound.  
 [RESET]: Audio alarm off.
5. Press the **DISP** key to close the menu.

## 8.2 Arrival, Anchor Watch Alarm

The **arrival alarm** informs you that your vessel is approaching a destination waypoint. The area that defines an arrival zone is that of a circle which you approach from the outside of the circle. The alarm will be released if your vessel enters the circle. When the arrival alarm is active, a red dashed circle marks the arrival alarm area.

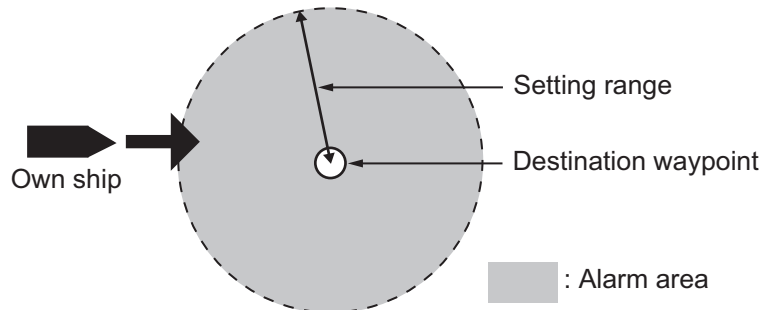

The **anchor watch alarm** informs you that your vessel is moving when it should be at rest. When the anchor watch is active, a orange dashed circle marks the anchor watch area.

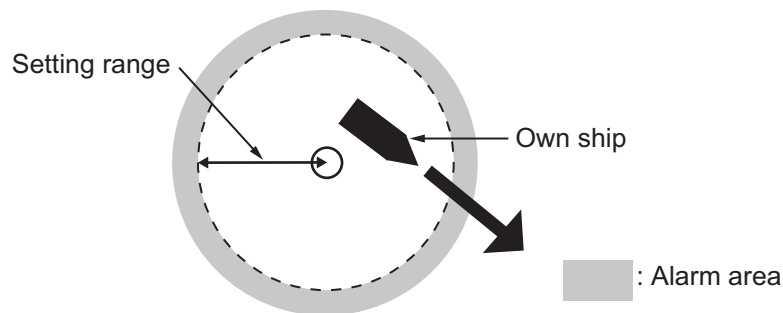

1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [ARRIVAL ALARM] or [ANCHOR WATCH ALARM] on page 1.
4. Select [ON].
5. Select [ALARM RANGE].
6. Press the numeric keys to set the alarm range (setting range: 0.001 to 9.999 NM).
7. Press the **DISP** key to close the menu.
8. For the anchor watch alarm, put the cursor on the own ship position or the location around own ship, then press the **GOTO** key. The orange dashed circle showing the alarm area appears. The alarm sounds when your vessel goes out of this area.

To deactivate an alarm, select [OFF] at step 4.

## 8.3 Route Alarm


The **route alarm** sets an anchor watch alarm on each route point (waypoint) in the route in use. When your vessel goes out of the anchor watch alarm range at a route point, the audio alarm sounds. To use this alarm, [ANCHOR WATCH ALARM] must be set to [ON] (see section 8.2).

1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [ROUTE ALARM SETTING] on page 1.
4. Select [ON]. When your vessel goes out of the alarm range at a route point, the audio alarm sounds. If selecting [OFF], the anchor watch alarm alerts you when your vessel goes out of the alarm range at the last waypoint in the route.
5. Press the **DISP** key to close the menu.


To deactivate an alarm, select [OFF] at step 4.

## 8.4 XTE, Border Alarm

The **XTE (cross track error) alarm** warns you when your vessel is off its intended course. When the XTE alarm is active, two red dashed lines mark the XTE alarm area.

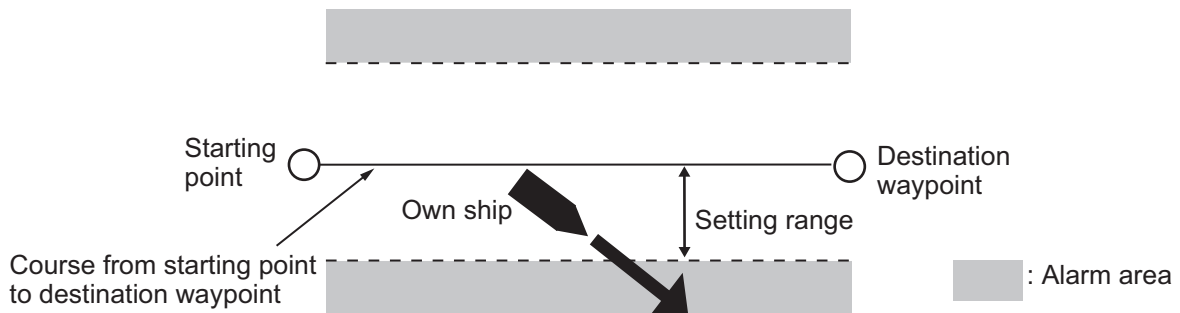

The **border alarm** marks an area, defined by two waypoints, which you do not want to cross. The audio and visual alarms will be released when your vessel crosses the area defined by the two waypoints. When the border alarm is active, the red dashed lines mark on either side of the setting line.

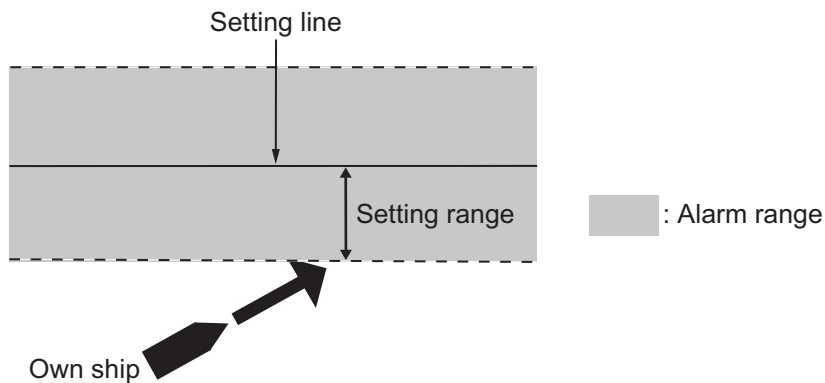

**Note:** The XTE and border alarm cannot be turned on together.


1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].

3. Select [XTE/BORDER ALARM] on page 1.
4. Select [OFF COURSE] or [INTRUSION].
5. Select [ALARM RANGE].
6. Press the numeric keys to set the alarm range (setting range: 0.001 to 9.999 NM).
7. Press the **DISP** key to close the menu.

To deactivate an alarm, select [OFF] at step 4.

## 8.5 Intrusion Point Alarm

The **intrusion point alarm** alerts you when your vessel nears a waypoint by the distance set for that waypoint on the waypoints list. The distance is called the intrusion ban alarm radius (see section 5.1.3). When the intrusion point alarm is active, a red dashed circle marks the intrusion ban alarm radius.

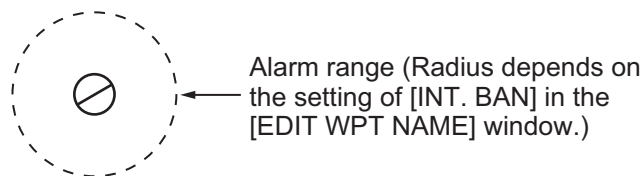

1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [INTRUSION POINT ALM] on page 1.
4. Select [ON].
5. Press the **DISP** key to close the menu.

To deactivate an alarm, select [OFF] at step 4.

## 8.6 Ship Speed Alarm

The ship speed alarm warns you when your boat's speed is within or over the speed range set.

1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [SHIP SPEED ALARM] on page 1.
4. Select [WITHIN RANGE] or [OUT OF RANGE].
5. Select [MINIMUM SHIP SPEED].
6. Press the numeric keys to enter the minimum ship speed (setting range: 0 to 999.9 kn).
7. Select [MAXIMUM SHIP SPEED].
8. Press the numeric keys to enter the maximum ship speed (setting range: 0 to 999.9 kn).
9. Press the **DISP** key to close the menu.

To deactivate an alarm, select [OFF] at step 4.

## 8.7 Trip Range Alarm

 
The trip range alarm informs you when you have traveled a certain distance.

1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [TRIP RANGE ALARM] on page 1.
4. Select [ON].
5. Select [ALARM RANGE].
6. Press the numeric keys to enter the alarm range (setting range: 0.1 to 9999.9 NM).
7. Press the **DISP** key to close the menu.

To deactivate an alarm, select [OFF] at step 4.

### How to reset the trip range

1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [TRIP RANGE RESET] on page 1 to show the following message.



4. Select [RUN] to reset the trip range.
5. Press the **DISP** key to close the menu.

## 8.8 Water Temperature Alarm

The water temperature alarm requires a water temperature sensor, and comes in two types: [WITHIN RANGE] and [OUT OF RANGE]. The [WITHIN RANGE] alarm sounds when the water temperature is within the range set, and the [OUT OF RANGE] alarm sounds when the water temperature is higher or lower than the range set.

1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].



3. Select [WATER TEMP. ALARM] on page 2.

ALARM SETTINGS		SEL. PAGE	◀2/3▶
AIS AUTO ACTIVATION	: ON	OFF	
ACTIVATION RANGE	: 0 2. 0 NM		
IGNORE MOORED SHIPS	: IGNORE	SHOW	
MAX. SPD FOR MOORED	: 0 1. 0 k n		
AIS PROXIMITY ALARM	: ON	OFF	
ALARM RANGE	: 0 1. 0 NM		
CPA/TCPA ALARM	: ON	OFF	
CPA ALARM RANGE	: 0 1. 0 NM		
TCPA ALARM RANGE	: 0 0 M. 3 0 S.		
AIS LOST ALARM	: ON	OFF	
LOST DEL. TIME	: 0 3 0 S.		
EXTERNAL AIS ALARM	: ON	OFF	
<b>WATER TEMP. ALARM</b>	: WITHIN RANGE	OUT OF RANGE	OFF
LOWEST WATER TEMP.	: + 3 0. 0 °F		
HIGHEST WATER TEMP.	: + 8 5. 0 °F		
SHEAR ALARM	: ON	OFF	
VARIATION RANGE	: 0 0. 2	(0.1 to 10.0)	
DETECTION INTERVAL	: 0 1 0 S.	(10 to 120)	
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER			
[0]~[9] : NO. OF PAGE    ◀▶ : MOVE PAGE			
[MENU] : BACK			

4. Select [WITHIN RANGE] or [OUT OF RANGE].
5. Select [LOWEST WATER TEMP.].
6. Press the numeric keys to enter the minimum temperature (setting range: -99.9 to +99.9°F).
7. Select [HIGHEST WATER TEMP.].
8. Press the numeric keys to enter the maximum temperature (setting range: -99.9 to +99.9°F).
9. Press the **DISP** key to close the menu.

To deactivate an alarm, select [OFF] at step 4.

## 8.9 Shear Alarm

The shear alarm, which requires a water temperature sensor, sounds when the water temperature goes higher or lower than the preset value within the interval time set.


1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [SHEAR ALARM] on page 2.
4. Select [ON].
5. Select [VARIATION RANGE].
6. Press the numeric keys to enter the gradient of temperature (setting range: 0.1 to 10.0).
7. Select [DETECTION INTERVAL].
8. Press the numeric keys to enter the interval (setting range: 10 to 120 seconds).
9. Press the **DISP** key to close the menu.

To deactivate an alarm, select [OFF] at step 4.

## 8.10 Depth Alarm

The depth alarm sounds when the bottom echo is within the alarm range set.

1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [DEPTH ALARM] on page 3.

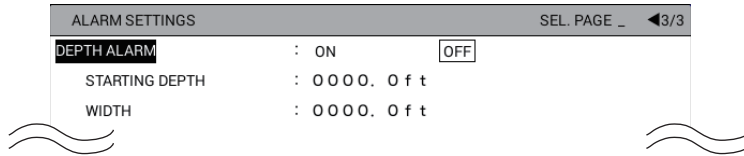

4. Select [ON].
5. Select [STARTING DEPTH].
6. Press the numeric keys to enter the start depth (setting range: 0 to 4000 ft).
7. Select [WIDTH].
8. Press the numeric keys to enter the alarm range (setting range: 0 to 4000 ft).
9. Press the **DISP** key to close the menu.

To deactivate an alarm, select [OFF] at step 4.

# 9. OTHER FUNCTIONS

This chapter describes the various options which allow you to set up your unit to suit your needs.


## 9.1 [COAST LINE SETTING] Menu

The [COAST LINE SETTING] menu has three menus: [COAST LINE DETAIL SETTING], [CONTOUR LINE FINE RNG SETTINGS] and [INDIVIDUAL CONTOUR LINE SETTINGS].

### 9.1.1 [COAST LINE DETAIL SETTING] menu

1. Press the **MENU** key to open the main menu.
2. Select [7. COAST LINE SETTING].
3. Select [1. COAST LINE DETAIL SETTING] which has three pages.
4. Select an item to change.
5. Select an option.
6. After setting all required items, press the **DISP** key to close the menu.

The description for each item is as shown below.

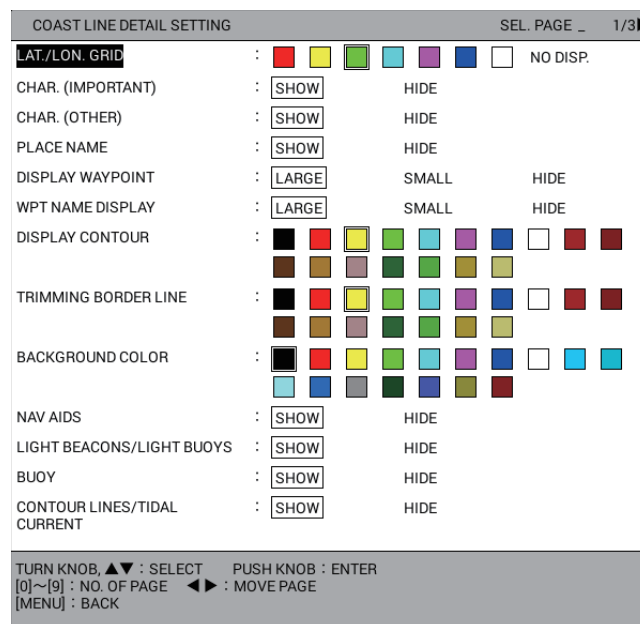

[COAST LINE DETAIL SETTING] menu: Page 1

[LAT./LON. GRID]: Turns latitude/longitude grid on or off and changes its color from seven colors.

[CHAR. (IMPORTANT)]: Turns important text on or off.

[CHAR. (OTHER)]: Turns other text on or off.

[PLACE NAME]: Turns geographical name on or off.

9. OTHER FUNCTIONS

[DISPLAY WAYPOINT]: Turns waypoint on or off and selects size to large or small (see section 5.7).

[WPT NAME DISPLAY]: Turns waypoint name on or off and selects size to large or small on the plotter display. The waypoint name is displayed in the color same as waypoint mark.


[DISPLAY CONTOUR]: Selects color for land from 17 colors.

[TRIMMING BORDER LINE]: Selects color for edge from 17 colors.

[BACKGROUND COLOR]: Selects color for background from 17 colors.

[NAV AIDS]: Displays the navigation data set to [SHOW] from [LIGHT BEACONS/LIGHT BUOYS] (on page 1) to [TIDAL STATION] (on page 3) when selecting [SHOW]. Displays no navigation data regardless of each setting when selecting [HIDE].



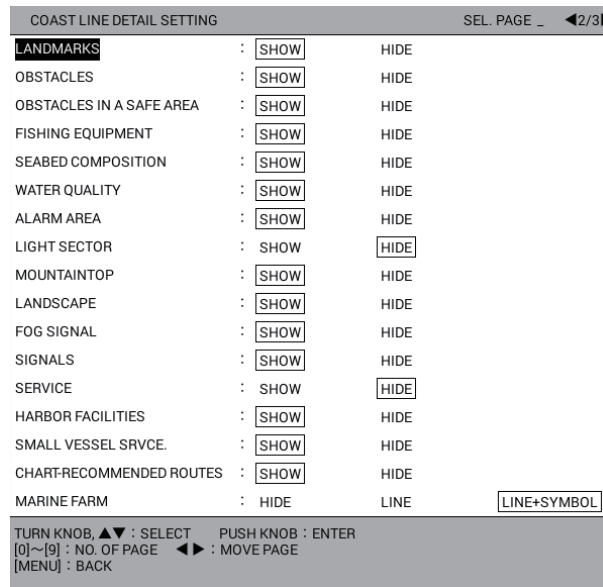

[LIGHT BEACONS/LIGHT BUOYS], [BUOY], [CONTOUR LINES/TIDAL CURRENT]: Turns each mark on or off.



[COAST LINE DETAIL SETTING] menu: Page 2

[LANDMARKS], [OBSTACLES], [OBSTACLES IN A SAFE AREA], [FISHING EQUIPMENT], [SEABED COMPOSITION], [WATER QUALITY], [ALARM AREA], [LIGHT SECTOR]\*<sup>1</sup>, [MOUNTAINTOP], [LANDSCAPE], [FOG SIGNAL], [SIGNALS], [SERVICE], [HARBOR FACILITIES], [SMALL VESSEL SRVCE.], [CHART-RECOMMENDED ROUTES], [MARINE FARM], [TIDAL STATION]\*<sup>2</sup>: Turns each mark on or off. See the table below. For [MARINE FARM], select [LINE] or [LINE+SYMBOL] to show its mark.

\*<sup>2</sup>: [TIDAL STATION] is on page 3.


Mark name	Display example	Mark name	Display example
LIGHT BEACONS/ LIGHT BUOYS		BUOY	
CONTOUR LINES/ TIDAL CURRENT		LANDMARKS	

Mark name	Display example	Mark name	Display example
OBSTACLES		OBSTACLES IN A SAFE AREA	
FISHING EQUIPMENT		SEABED COMPOSITION	Mud
WATER QUALITY		ALARM AREA	
MOUNTAINTOP		LANDSCAPE	
FOG SIGNAL		SIGNALS	
SERVICE		HARBOR FACILITIES	
SMALL VESSEL SERVICE		CHART-RECOMMENDED ROUTES	
MARINE FARM		TIDAL STATION	

**Note:** If text is displayed with a mark, the text can be difficult to see depending on the background.

\*1: The mark display for light sector differs according to the setting of light beacons/ light buoys. For details, see the table below.

	[LIGHT SECTOR]: Set to [SHOW].	[LIGHT SECTOR]: Set to [HIDE].
[LIGHT BEACON]: Set to [SHOW].	Light sector and lines for range are displayed (lines for range are long). 	Only light sector is displayed (lines for range are short). 
[LIGHT BEACON]: Set to [HIDE].	Light sector and lines for range are displayed (lines for range are long). 	Light sector is not displayed. 

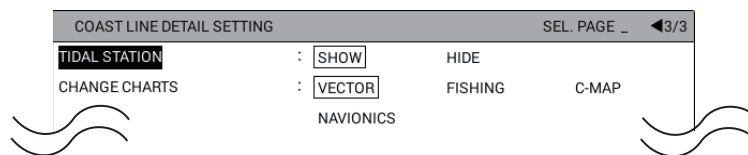

[COAST LINE DETAIL SETTING] menu: Page 3

[CHANGE CHARTS]: Selects chart type from among [VECTOR], [FISHING], [C-MAP], or [NAVIONICS].

[VECTOR]: MapMedia vector chart.

## 9. OTHER FUNCTIONS

[FISHING]: MapMedia fishing chart.


[C-MAP]: MapMedia navigational chart based on C-MAP data.

[NAVIONICS]: MapMedia navigational chart based on Navionics data.


### 9.1.2 How to display depth contour in detail

You can set the level of detail between depth contour lines by the distance between the contour lines.

1. Press the **MENU** key to open the main menu.
2. Select [7. COAST LINE SETTING].
3. Select [2. CONTOUR LINE FINE RNG SETTINGS].

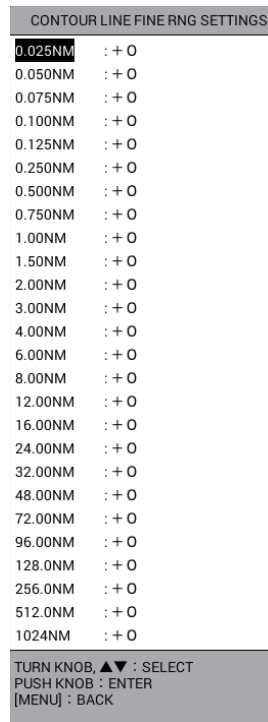

 4. Select the range which you want to display in detail. The chart display appears in the selected range and the following window appears.



5. Set the level for detailed contour display watching the chart display. The larger the setting, the more detailed the contour lines are displayed. However, chart drawing speed is slowed.

**Note:** Contour lines may not be affected by the setting, depending on the range.

6. Press the **DISP** key to close the menu.

## 9.2 [PLOTTER DISPLAY SETTING] Menu

This section describes the [PLOTTER DISPLAY SETTING] menu. See section 2.1.4 for the [SATTELITE STATUS/LOCATION] menu, section 2.7 for the [SPECIAL CURSOR] menu.

### 9.2.1 How to set TD display

To display own ship position in TDs in the NAV information box, follow the procedure below.

#### How to display position in Loran A TD

1. Press the **MENU** key to open the main menu.
2. Select [8. PLOTTER DISPLAY SETTING].
3. Select [3. LORAN/DECCA SETTING].

LORAN/DECCA SETTING			
LORAN A STA. COMB.	:	00-01	
TIME OFFSET 1	:	+000. 0μ s	
TIME OFFSET 2	:	+000. 0μ s	
LORAN C STA. COMB.	:	00:11-29	
TIME OFFSET 1	:	+000. 0μ s	
TIME OFFSET 2	:	+000. 0μ s	
DECCA CHAIN	:	01 R-G	
OFFSET VALUE 1	:	+00. 00 LANE	
OFFSET VALUE 2	:	+00. 00 LANE	
TIME DIFF. DISP TYPE	:	LORAN A	LORAN C DECCA
LOP FORMULA	:	NEW	EARLIER
CH CODE LIST			
00:1L0 01:1L1 02:1L4 03:1L5 04:1L6 05:1L7 06:1S1			
07:1S2 08:1S3 09:1S4 10:1S6 11:2H3 12:2H4 13:2H5			
14:2H6 15:2S0 16:2S1 17:2S2 18:2S3 19:2S4 20:2S5			
21:2S6 22:2S7			
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER			
[MENU] : BACK			

4. Select [LORAN A STA. COMB.].
5. Press the numeric keys to set the station combination referring to the [CH CODE LIST] at the bottom of the window. If necessary, follow the procedure from step 6 to enter offset Otherwise, go to step 11.
6. Select [TIME OFFSET 1].
7. Press the numeric keys to enter offset. To switch between + and -, press the **CURSOR ON/OFF** key.
8. Enter offset for [TIME OFFSET 2] in the same way.
9. Select [TIME DIFF. DISP TYPE].
10. Select [LORAN A].
11. Press the **DISP** key to close the menu.

#### How to display position in Loran C TD

1. Press the **MENU** key to open the main menu.
2. Select [8. PLOTTER DISPLAY SETTING].
3. Select [3. LORAN/DECCA SETTING].

9. OTHER FUNCTIONS

4. Select [LORAN C STA. COMB.].

LORAN/DECCA SETTING		
LORAN A STA. COMB.	:	00-01
TIME OFFSET 1	:	+000. 0μ s
TIME OFFSET 2	:	+000. 0μ s
<b>LORAN C STA. COMB.</b>	:	<b>00</b> :11-29
TIME OFFSET 1	:	+000. 0μ s
TIME OFFSET 2	:	+000. 0μ s
DECCA CHAIN	:	01 R-G
OFFSET VALUE 1	:	+00. 00LANE
OFFSET VALUE 2	:	+00. 00LANE
TIME DIFF. DISP TYPE	:	LORAN A <b>LORAN C</b> DECCA
LOP FORMULA	:	<b>NEW</b> EARLIER
GRI CODE LIST		
00:4990 01:7960 02:7980 03:8970 04:9940 05:9960		
06:9990 07:5930 08:5990 09:5970 10:9970 11:7930		
12:7970 13:7990 14:9980 15:7170 16:8990 17:7950		
18:8000 19:9610 20:8290 21:4991 22:8940 23:8930		
24:7270 25:6731 26:7001 27:7499 28:9007 29:8830		
30:7030		
TURN KNOB, ▲▼ : CHANGE VALUE    PUSH KNOB : ENTER		
[0]~[9] : ENTER VALUE    ◀▶ : MOVE CURSOR		
[CURSOR ON/OFF] : CHANGE MARK    [MENU] : BACK		

5. Press the numeric keys to set the GRI code referring to the [GRI CODE LIST] at the bottom of the window. For example, press the **1, 0** keys in order for GRI9970. [RCH CODE LIST] for GRI9970 is displayed at the bottom of the window.

LORAN/DECCA SETTING		
LORAN A STA. COMB.	:	00-01
TIME OFFSET 1	:	+000. 0μ s
TIME OFFSET 2	:	+000. 0μ s
<b>LORAN C STA. COMB.</b>	:	<b>10</b> : <b>1</b> 1-29
TIME OFFSET 1	:	+000. 0μ s
TIME OFFSET 2	:	+000. 0μ s
DECCA CHAIN	:	01 R-G
OFFSET VALUE 1	:	+00. 00LANE
OFFSET VALUE 2	:	+00. 00LANE
TIME DIFF. DISP TYPE	:	LORAN A <b>LORAN C</b> DECCA
LOP FORMULA	:	<b>NEW</b> EARLIER
GRI 9970 RCH CODE LIST		
11 30 55 81		
TURN KNOB, ▲▼ : CHANGE VALUE    PUSH KNOB : ENTER		
[0]~[9] : ENTER VALUE    ◀▶ : MOVE CURSOR		
[CURSOR ON/OFF] : CHANGE MARK    [MENU] : BACK		

6. Press the numeric keys to set the chain station combination from [RCH CODE LIST] at the bottom of the window. If necessary, follow the procedure from step 7 to enter offset. Otherwise, go to step 12.
7. Select [TIME OFFSET 1].
8. Press the numeric keys to enter offset. To switch between + and -, press the **CURSOR ON/OFF** key.
9. Enter offset for [TIME OFFSET 2] in the same way.
10. Select [TIME DIFF. DISP TYPE].
11. Select [LORAN C].
12. Press the **DISP** key to close the menu.



### How to display position in DECCA TDs

1. Press the **MENU** key to open the main menu.
2. Select [8. PLOTTER DISPLAY SETTING].
3. Select [3. LORAN/DECCA SETTING].
4. Select [DECCA CHAIN].
5. Press the numeric keys to enter chain number (01 to 48). [RCH LST] is displayed at the bottom of the window.

LORAN/DECCA SETTING	
LORAN A STA. COMB.	: 00-01
TIME OFFSET 1	: +000. 0μ s
TIME OFFSET 2	: +000. 0μ s
LORAN C STA. COMB.	: 00:11-29
TIME OFFSET 1	: +000. 0μ s
TIME OFFSET 2	: +000. 0μ s
<b>DECCA CHAIN</b>	: 01 <b>A</b> -G
OFFSET VALUE 1	: +00. 00 LANE
OFFSET VALUE 2	: +00. 00 LANE
TIME DIFF. DISP TYPE	: LORAN A      LORAN C <b>DECCA</b>
LOP FORMULA	: <b>NEW</b> EARLIER
RCH LST	
0:R 1:G	
TURN KNOB, ▲▼ : CHANGE VALUE      PUSH KNOB : ENTER [0]~[9] : ENTER VALUE      ◀▶ : MOVE CURSOR [CURSOR ON/OFF] : CHANGE MARK      [MENU] : BACK	

6. Press the numeric keys to set the chain station combination from [RCH LST] at the bottom of the window. If necessary, follow the procedure from step 7 to enter offset. Otherwise, go to step 12.
7. Select [OFFSET VALUE 1].
8. Press the numeric keys to enter offset. To switch between + and -, press the **CURSOR ON/OFF** key.
9. Enter offset for [OFFSET VALUE 2] in the same way.
10. Select [TIME DIFF. DISP TYPE].
11. Select [DECCA].
12. Press the **DISP** key to close the menu.

### How to set calculation method for TDs


The value for TDs on the display differ depending on datum type though own ship position is same.

1. Press the **MENU** key to open the main menu.
2. Select [8. PLOTTER DISPLAY SETTING].
3. Select [3. LORAN/DECCA SETTING].
4. Select [LOP FORMULA].
5. Select [NEW] or [EARLIER].  
 [NEW]: Displays position, calculated by WGS-84 datum, in TDs (or phase difference).  
 [EARLIER]: Displays position, calculated by TOKYO datum, in TDs (or phase difference).
6. Press the **DISP** key to close the menu.


### 9.2.2 How to set range for plotter display

You can select the plotter display ranges you wish to use. After selecting the ranges desired, change the range with the **ZOOM IN** or **ZOOM OUT** key to activate range settings. Note that more than two range settings must be set to [ON].

1. Press the **MENU** key to open the main menu.
2. Select [8. PLOTTER DISPLAY SETTING].
3. Select [5. PLOTTER RANGE SETTING].

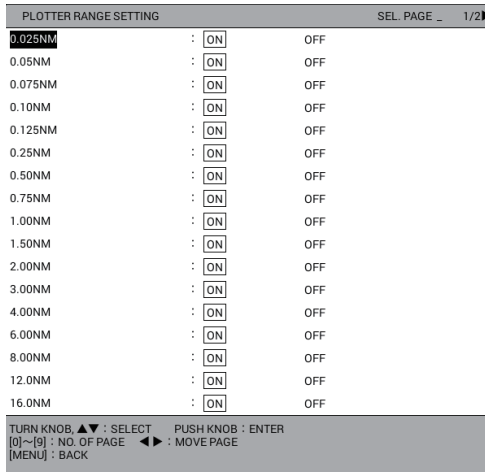

Page 1

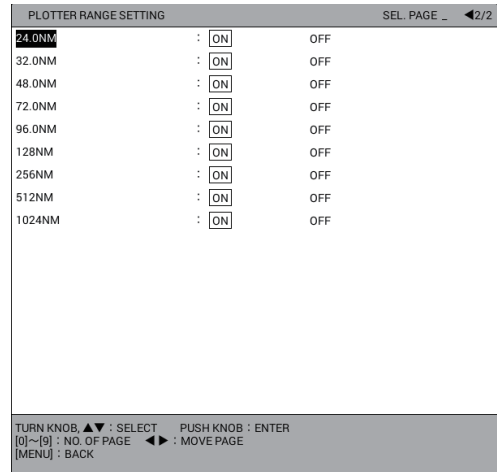

Page 2

4. Select the range to change.
5. Select [ON] or [OFF].
6. Press the **DISP** key to close the menu.

### 9.3 [DISPLAY FORMAT] Menu

The [DISPLAY FORMAT] menu contains items for setting up the display.

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [1. DISPLAY FORMAT] which has six pages.
4. Select an item to change.
5. Select an option or set a value.
6. After setting all required items, press the **DISP** key to close the menu.

The description for each item is as shown below.

DISPLAY FORMAT		SEL. PAGE _ 1/6▶	
LANGUAGE	:	English	中文 ภาษาไทย
KEY BEEP	:	BEEP ON	BEEP OFF
SPEED SENSOR	:	INTERNAL GPS	NMEA FOR SOG NMEA FOR STW FISH FINDER
NMEA SHIP SPD OFFSET	:	+ 0 0 %	(-50 to +50)
WATER TEMP. SENSOR	:	NMEA	FISH FINDER
NMEA WTR TEMP OFFSET	:	+ 0 0 . 0	(-40.0 to +40.0)
DEPTH SENSOR	:	NMEA	FISH FINDER
NMEA DEPTH OFFSET	:	+ 0 0 0 . 0 f t	(-15.0 to +100.0)
DRIFT AVERAGE TIME	:	0 0 0 0 S.	
SELECT AUTOPILOT	:	NMEA0183	NMEA2000 AUTOMATIC
SEL. BEARING SENSOR	:	NMEA0183	NMEA2000 AUTOMATIC
HEADING OFFSET	:	+ 0 0 0 °	
SBAS SET BY SC	:	USE	DO NOT USE
BEARING OFFSET	:	+ 0 0 0 °	
PITCH OFFSET	:	+ 0 0 °	
ROLL OFFSET	:	+ 0 0 °	
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER [0]~[9] : NO. OF PAGE    ◀▶ : MOVE PAGE [MENU] : BACK			

[FISH FINDER] is not available.

*[DISPLAY FORMAT] menu: Page 1*

[LANGUAGE]: Selects language to use.

[KEY BEEP]: Enables or disables the beep that sounds each time a key is operated.

[SPEED SENSOR]: Selects the source of speed data from [INTERNAL GPS], [NMEA FOR SOG] or [NMEA FOR STW]. For details, see the installation manual.

[NMEA SHIP SPD OFFSET]: An offset may be applied to NMEA speed data ([NMEA FOR SOG] or [NMEA FOR STW] at [SPEED SENSOR]). For details, see the installation manual.

[WATER TEMP. SENSOR]: Selects the source of water temperature data to [NMEA]. For details, see the installation manual.

[NMEA WTR TEMP OFFSET]: An offset may be applied to NMEA water temperature data. For details, see the installation manual.

[DEPTH SENSOR]: Selects the source of depth data to [NMEA]. For details, see the installation manual.

[NMEA DEPTH OFFSET]: An offset may be applied to NMEA depth data. For details, see the installation manual.

[DRIFT AVERAGE TIME]: Sets the time to average drift.

[SELECT AUTOPILOT]: Selects the source of autopilot data from [NMEA0183], [NMEA2000] or [AUTOMATIC]. For details, see the installation manual.

[SEL. BEARING SENSOR]: Selects the source of heading data from [NMEA0183], [NMEA2000] or [AUTOMATIC]. For details, see the installation manual.

[HEADING OFFSET]: Sets the offset value to correct the NMEA heading data. For details, see the installation manual.

[SBAS SET BY SC]: Use or do not use SBAS by Satellite Compass™, connected via NMEA2000. For details, see the installation manual.

[BEARING OFFSET]: Sets the offset value for heading.

## 9. OTHER FUNCTIONS

[PITCH OFFSET]: Sets the offset value for pitch.

[ROLL OFFSET]: Sets the offset value for roll.

DISPLAY FORMAT		SEL. PAGE ◀2/6▶	
LAT./LON. GRID	: DD°MM.MM'	DD°MM.MMM'	DD°MM.MMMM'
	: DD°MM'SS.S"		
RANGE/SPEED	: NM, kn	km, km/h	SM, mph
WIND SPEED	: kn	m/s	mph
DEPTH	: m	ft	fm
	HIRO		
HIRO SETTING	: 1. 5 1 5 2		
WATER TEMPERATURE	: °C	°F	
TIME	: 12 HOURS	24 HOURS	
BEARING MODE	: TRUE DIRECTION		MAGNETIC DIR.
MAGNETIC BRG OFFSET	: AUTOMATIC	MANUAL	
MANUAL MAG. VAR.	: 0 7. 0° W		
DISP. HDG MARKER	: SHOW	VECTOR	HIDE
DISP. COG MARKER	: SHOW	VECTOR	HIDE
WPT. REFRESH SETTING	: WPT ON VERTICAL LINE		
	ARRIVE ALARM WITHIN RANGE		
RNG & BRG MODE	: GREAT CIRCLE	RHUMBLINE	

TURN KNOB, ▲▼ : SELECT      PUSH KNOB : ENTER  
 [0]~[9] : NO. OF PAGE      ◀▶ : MOVE PAGE  
 [MENU] : BACK

[DISPLAY FORMAT] menu: Page 2

[LAT./LON. GRID]: Selects the display format for latitude and longitude from [DD°MM.MM'], [DD°MM.MMM'], [DD°MM.MMMM'], or [DD°MM'SS.S"].

[RANGE/SPEED]: Selects the unit for range and speed from [NM, kn], [km, km/h] or [SM, mph].

[WIND SPEED]: Selects the unit for wind speed from [kn], [m/s] or [mph].

[DEPTH]: Selects the unit for depth from [m], [ft], [fm] or [HIRO].

[HIRO SETTING]: Sets the value for 1 HIRO by meter.

[WATER TEMPERATURE]: Selects the unit for water temperature from [°C] or [°F].

[TIME]: Selects the format for time display from [12 HOURS] or [24 HOURS].

[BEARING MODE]: Selects how to calculate course and bearing, [TRUE DIRECTION] or [MAGNETIC DIR.]. True bearing is a bearing measured using true North as the reference direction, and it is calculated by the formula True Bearing = Magnetic Bearing + Magnetic Variation. Magnetic bearings are measured with magnetic north as the reference direction. Select [MAGNETIC DIR.] when using a magnetic compass, [TRUE DIRECTION] for using the gyrocompass.

[MAGNETIC BRG OFFSET]: Selects the method how to correct magnetic bearing, automatically or manually.

[MANUAL MAG. VAR.]: Sets the offset value for magnetic bearing when selecting [MANUAL] in [MAGNETIC BRG OFFSET]. The location of the magnetic north pole is different from the geographical north pole. This causes a difference between the true and magnetic north location. This difference is called magnetic variation, and varies with respect to the observation point on earth. Your unit is preprogrammed with all the earth's magnetic variations. However, you may wish to enter variation manually to refine accuracy.

[DISP. HDG MARKER]: Turns the heading marker on or off. (Heading data is required.) [SHOW] shows white heading marker to the edge of the screen. [VECTOR] shows white vector of the length proportional to speed. The length does not change when switching the chart scale. The heading marker points heading.

[DISP. COG MARKER]: Turns course marker on or off. [SHOW] shows light-blue course marker to the edge of the screen. [VECTOR] shows light-blue vector of the length proportional to speed. The length does not change if switching the chart scale.

[WPT. REFRESH SETTING]: Selects waypoint switching method from [WPT ON VERTICAL LINE] or [ARRIVE ALARM WITHIN RANGE]. See "How to select the waypoint switching method" on page 7-7.

[RNG & BRG MODE]: When you set a destination, the equipment displays the range, bearing and course to that destination. Range and bearing are calculated by the Great Circle or Rhumbline method. Route total distance is also calculated. Cross-track distance is only calculated in the Rhumbline method.

[GREAT CIRCLE]: This course line is the shortest course between two points on the surface of the earth, like stretching a piece of string between two points on earth. Because frequent course changes are required it is most suitable for long-range navigation.

[RHUMBLINE]: This method calculates the range and bearing between two points drawn on a nautical chart. Since the bearing is kept constant it is ideal for short-range navigation.

DISPLAY FORMAT		SEL. PAGE _ ◀3/6▶	
SET GOTO METHOD	: ONE POINT	100 POINTS	
RANGE/SCALE	: RANGE	SCALE	HIDE
SCALE DISPLAY	: SHOW	HIDE	
GPS STATUS	: SHOW	HIDE	
WAYPOINT STATUS	: SHOW	HIDE	
WAYPOINT INFORMATION	: SHOW	HIDE	
DISPLAY MARK INFO.	: SHOW	HIDE	
SHOW OBJECT INFORMATION	: SHOW	HIDE	

TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER  
 [0]~[9] : NO. OF PAGE    ◀▶ : MOVE PAGE  
 [MENU] : BACK

*[DISPLAY FORMAT] menu: Page 3*

[SET GOTO METHOD]: Selects the method by which to navigate to a quick point from [ONE POINT] or [100 POINTS]. See section 7.1.


[RANGE/SCALE]: Selects the method how to show the display width, [RANGE], [SCALE] or [HIDE].

[SCALE DISPLAY]: Turns the scale on or off on the plotter display.

[GPS STATUS]: Turns GPS status abbreviations on or off on the plotter display.

## 9. OTHER FUNCTIONS

[WAYPOINT STATUS]: Turns the waypoint status icon on or off on the plotter display.



This icon (default: ) shows the current shape and color of waypoints.

[WAYPOINT INFORMATION]: Turns the waypoint data on or off. When [SHOW] is selected, place the cursor on a waypoint to show the waypoint data box.

[DISPLAY MARK INFO.]: Turns the mark data (simple information) on or off. When [SHOW] is selected, place the cursor on a mark to show the mark data box.

[SHOW OBJECT INFORMATION]: Turns the chart object data (simple information\*) on or off. When [SHOW] is selected, place the cursor on a chart object to show the object data box.

\*: To show the detailed information for the chart object, place the cursor on the chart object then push the **ENTER** knob.

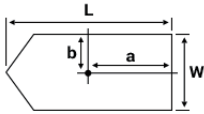DISPLAY FORMAT		SEL. PAGE _ ◀4/6▶	
OWN SHIP'S MARK	: LARGE	SMALL	SHAPE OF SHIP
SHIP'S LENGTH	: 1 0. 0 m	(0.1 to 99.9)	
SHIP'S WIDTH	: 0 2. 0 m	(0.1 to 99.9)	
ANTENNA POSITION V a	: 0 5. 0 m	(0.1 to 99.9)	
ANTENNA POS. SIDE b	: 0 1. 0 m	(0.1 to 99.9)	
			
WAYPOINT OVERWRITE	: CONFIRM	CANCEL	
COG HOLD (LOW SPD)	: YES (1 kn)	YES (0.2 kn)	NO
WPT NAME DISPLAY	: HIDE UNNECESSARY "0"		
	: DISPLAY ALL "0"		
SHIP'S DIRECTION	: COG	HEADING	
CURSOR SHAPE	: CROSSING LINE		CROSS HAIR
CURSOR COLOR	: 		
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER [0]~[9] : NO. OF PAGE    ◀▶ : MOVE PAGE [MENU] : BACK			

[DISPLAY FORMAT] menu: Page 4

[OWN SHIP'S MARK]: Selects the size of own ship mark from [LARGE], [SMALL] or [SHAPE OF SHIP]. [SHAPE OF SHIP] is selected to indicate the length and width of your vessel, with [SHIP'S LENGTH], [SHIP'S WIDTH], [ANTENNA POSITION V a] and [ANTENNA POS. SIDE b] below.

[SHIP'S LENGTH]: Sets the ship's length. (See the installation manual.)

[SHIP'S WIDTH]: Sets the ship's width. (See the installation manual.)

[ANTENNA POSITION V a], [ANTENNA POS. SIDE b]: Sets the antenna unit position. (See the installation manual.)

[WAYPOINT OVERWRITE]: Turns the confirmation message on or off when entering an existing waypoint name.


[COG HOLD (LOW SPD)]: Selects whether to update COG or not when ship's speed is under 1 kn or under 0.2 kn.

[YES (1kn)]: COG is not updated when speed is under 1.0 kn.

[YES (0.2kn)]: COG is not updated when speed is under 0.2 kn.

[NO]: COG is updated regardless of ship's speed.

[WPT NAME DISPLAY]: Shows or hides leading zero(es) in waypoint name, shown on the plotter display.

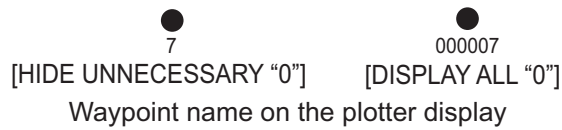

[SHIP'S DIRECTION]: Selects orientation of own ship mark when setting own ship mark configuration to [SHAPE OF SHIP] in [OWN SHIP'S MARK].


[COG]: The bow points in the direction of actual advancement.

[HEADING]: The bow points in the direction of heading. Requires heading data. If there is no heading data, the orientation of bow varies with situation as shown below.


- When there is no heading data from the time of startup, the bow points 0°.
- When heading data is interrupt at work, the bow points the direction of the last received heading data.

[CURSOR SHAPE]: Selects the configuration of the cursor from [CROSSING LINE] or [CROSS HAIR]. (See section 2.2.)

[CURSOR COLOR]: Selects the color of the cursor from seven colors.

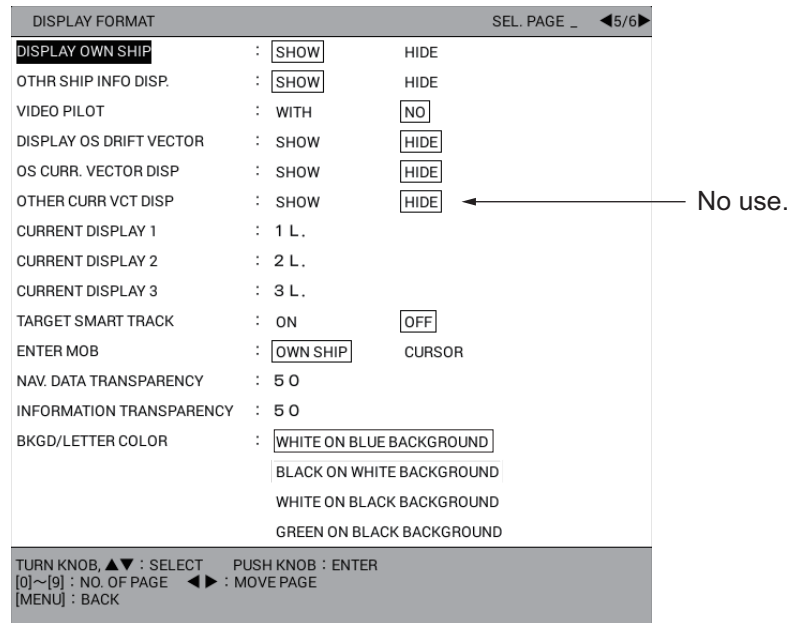

[DISPLAY FORMAT] menu: Page 5

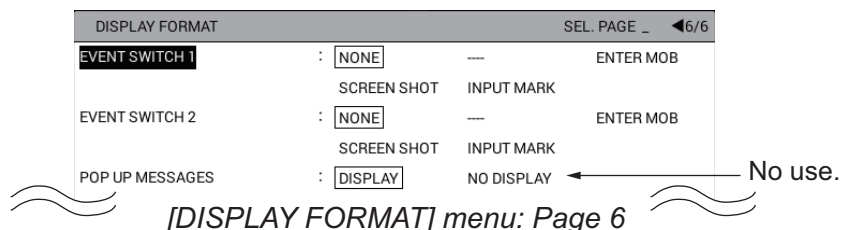

[DISPLAY FORMAT] menu: Page 6

[DISPLAY OWN SHIP]: Turns the own ship data on or off. When [SHOW] is selected, place the cursor on the own ship mark to show the own ship data box.

[OTHR SHIP INFO DISP.]: Turns other ship's data on or off. When [SHOW] is selected, place the cursor on other ship's mark (target symbol) to show other ship's data box.

## 9. OTHER FUNCTIONS

[VIDEO PILOT]: Selects whether to return to the previously set course when the NAV mode is changed in the following manner:

NAV → any mode other than NAV → NAV

 
[WITH]: Restarts the course from the position where NAV mode is restored.

[NO]: Does not restart the course, regardless of NAV mode.

**Note:** This function is available with connection of a FURUNO autopilot. See the Operator's Manual of the autopilot for details.

[DISPLAY OS DRIFT VECTOR]: Turns the drift vector on or off on the own ship mark (see "Simple calculation function for drift" on page 3-15).

[OS CURR. VECTOR DISP]: Turns the current vector on or off on the own ship mark. Requires current data received from NMEA0183.



[CURRENT DISPLAY 1], [CURRENT DISPLAY 2], [CURRENT DISPLAY 3]: Selects which layer to display for each current (1 L. to 5 L.).

[TARGET SMART TRACK]: [ON] moves the selected ship symbol to the screen center. (See "How to display the GPS buoy list" on page 3-16, section 11.4.2.) When selecting [OFF], see section 2.2 and section 2.5 about the **CENTER** key.

To center the selected ship symbol on the plotter display, do the following:

1. If the cursor is displayed, press the **CURSOR ON/OFF** key to turn off the cursor.
2. Press the **CENTER** key.
3. Within two seconds of completing step 2, press the numeric key corresponding to the target number which you want to center. Up to 10 other ships can be centered. For example, press the **0** key for the target number 10.

**Note 1:** If the selected ship moves off the screen it is automatically moved to the screen center.

**Note 2:** Press the **CENTER** key twice to move the own ship to the screen center.

[ENTER MOB]: Selects the inscribing position of MOB mark, own ship or cursor position, when pressing the **MOB** key.

[NAV. DATA TRANSPARENCY]: Adjusts the degree of transparency for the NAV information box. Use a large figure to increase the degree of transparency.

**Note:** Alpha blending technology is used for transparency effects.

[INFORMATION TRANSPARENCY]: Adjusts the degree of transparency for data windows of own ship, other ships and so on. Use a large figure to increase the degree of transparency.

**Note:** Alpha blending technology is used for transparency effects.

[BKGD/LETTER COLOR]: Selects the color combination for background of the menu screen, and characters in the menu screen and the NAV information box. [WHITE ON BLUE BACKGROUND], [BLACK ON WHITE BACKGROUND], [WHITE ON BLACK BACKGROUND] and [GREEN ON BLACK BACKGROUND] are available.

[EVENT SWITCH 1], [EVENT SWITCH 2]: Selects the function to run when pressing the event switch. [NONE], [ENTER MOB], [SCREEN SHOT] and [INPUT MARK] are available.

[POP UP MESSAGES]: No use.



## 9.4 [NAVIGATOR SETUP] Menu

The [NAVIGATOR SETUP] menu selects the source of navigation data and sets up the built-in GPS receiver.

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [2. NAVIGATOR SETUP] which has two pages.
4. Select an item to change.
5. Select an option or set a value.
6. After desired items were set, press the **DISP** key to close the menu.

The description for each item is shown as below.

NAVIGATOR SETUP		SEL. PAGE _ 1/2▶	
SELECT NAV SOURCE	: [INTERNAL]	GPS	LORAN C
		ALL	
TIME DIFFERENCE	: + 0 9 : 0 0		
NMEA TIME DIFFERENCE	: + 0 0 : 0 0		
DATUM	: [WGS-84]	TOKYO	
POSITION SMOOTHING	: 0 0 0		
SPEED SMOOTHING	: 0 0 0		
SPEED AVERAGING	: 0 6 0		
NMEA SPEED AVERAGING	: 0 6 0		
LATITUDE OFFSET	: 0 . 0 0 0' N		
LONGITUDE OFFSET	: 0 . 0 0 0' E		
DISABLE SATELLITE(GPS)	: -- -- --		
ANTENNA HEIGHT	: 0 5 m		
GPS FIX MODE	: 2 D	[2 D / 3 D]	
DGPS/SBAS	: DGPS	SBAS	AUTOMATIC
	[NO]		
DGPS/SBAS ALARM	: ON	[OFF]	
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER [0]~[9] : NO. OF PAGE    ◀▶ : MOVE PAGE [MENU] : BACK			

### [NAVIGATOR SETUP] menu: Page 1

[SELECT NAV SOURCE]: Selects the source of position data from [INTERNAL], [GPS], [LORAN C] or [ALL]. For details, see the installation manual. When selecting [GPS], [LORAN C] or [ALL], "EXT" appears at the bottom left of the plotter display.

[TIME DIFFERENCE]: GPS uses UTC time. If you would rather use local time, enter the time difference between local time and UTC time. Use the **CURSOR ON/OFF** key to switch from "+" to "-" and vice versa. The setting range is -13:30 to +13:30.

[NMEA TIME DIFFERENCE]: If the NMEA time data fed from external equipment is wrong and cannot be corrected at the external equipment, enter an offset here to correct it. Use the **CURSOR ON/OFF** key to switch from "+" to "-" and vice versa.

[DATUM]: Your unit is preprogrammed with most of the major chart systems of the world. Although the WGS-84 system, the GPS standard, is now widely used other categories of charts still exist. Select the chart system used, not the area where your boat is sailing. "WGS-84" or "TOKYO" appears at the bottom left of the plotter display.

[POSITION SMOOTHING]: When the DOP or receiving condition is unfavorable, the GPS fix may change, even if the vessel is dead in water. This change can be reduced by smoothing the raw GPS fixes. A setting between 000 to 999 is available. The higher


## 9. OTHER FUNCTIONS

the setting, the more smoothed the raw data, however too high a setting slows response time to change in latitude and longitude. This is especially noticeable at high ship's speeds. 000 is the normal setting; increase the setting if the GPS fix changes.

[SPEED SMOOTHING]: During position fixing, ship's velocity (speed) is directly measured by receiving GPS satellite signals. The raw velocity data may change randomly depending on receiving conditions and other factors. You can reduce this random variation by increasing the smoothing. Like with latitude and longitude smoothing, the higher the speed smoothing the more smoothed the raw data. If the setting is too high, however, the response to speed and course change slows. For no smoothing, enter all zeroes.

[SPEED AVERAGING]: Calculation of ETA and TTG is based on average ship's speed over a given period. If the period is too long or too short, calculation error will result. Change the setting accordingly if calculation error occurs.

[NMEA SPEED AVERAGING]: Speed averaging for the ship's speed data received from external equipment in NMEA format.

[LATITUDE OFFSET], [LONGITUDE OFFSET]: GPS-generated position may be off by some seconds because of various factors. In this case, you can apply an offset to GPS position to refine position accuracy. Calculate the error on a nautical chart. The L/L offset icon () appears at the bottom right of the plotter display.

[DISABLE SATELLITE(GPS)]: Every GPS satellite is broadcasting abnormal satellite number(s) in its Almanac, which contains general orbital data about all GPS satellites, including those which are malfunctioning. Using this information, the GPS receiver automatically eliminates any malfunctioning satellite from the GPS satellite schedule. However, the Almanac sometimes may not contain this information. If you hear about a malfunctioning satellite from another source, you can disable it manually. Enter satellite number (max. 3 satellites) in two digits.


[ANTENNA HEIGHT]: Enter the height of the antenna unit above sea surface.

[GPS FIX MODE]: Selects the position-fixing mode from 2D or 2D/3D. When selecting 2D/3D, 2D or 3D is automatically selected depending on the number of available satellites. (3D requires four or more satellites.)

[DGPS/SBAS]: Selects the position-fixing method from [DGPS], [SBAS] or [AUTOMATIC]. (For SBAS, see "WHAT IS SBAS?" on page AP-12.) The GP-3700 requires the optional DGPS beacon receiver to fix position by DGPS. [AUTOMATIC] fixes position by SBAS when DGPS correction data is not available. For normal GPS positioning, select [NO].

[DGPS/SBAS ALARM]: This alarm alerts you when the DGPS or SBAS signal is lost. [ON]: Alarm sounds when the position fixing method is switched from DGPS (or SBAS) to GPS. Alarm sounds until the position fixing method is restored to DGPS (or SBAS), or silencing the buzzer.

[OFF]: Alarm does not sound when the DGPS or SBAS signal is lost.

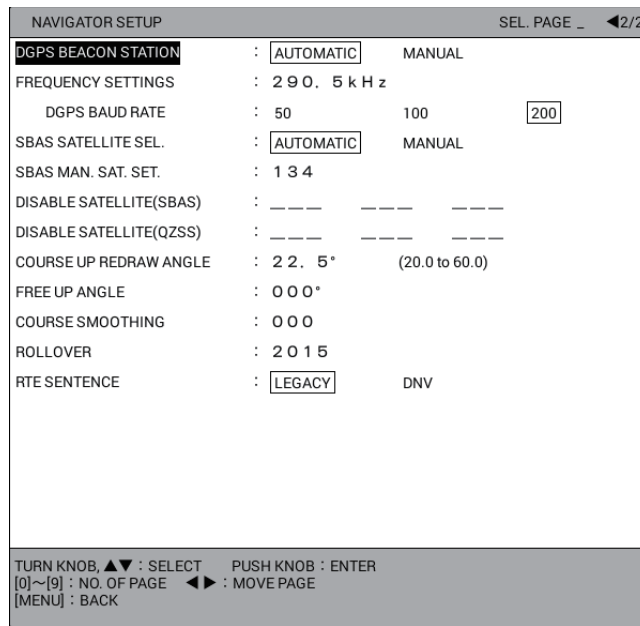

[NAVIGATOR SETUP] menu: Page 2

[DGPS BEACON STATION]: DGPS reference station can be searched automatically or manually. For manual search, select [MANUAL] here, and set the frequency of the DGPS reference station in the item [FREQUENCY SETTINGS].

[FREQUENCY SETTINGS]: When selecting [MANUAL] in [DGPS BEACON STATION], set the frequency of the DGPS reference station which is the nearest to own ship.

[DGPS BAUD RATE]: When selecting [MANUAL] in [DGPS BEACON STATION], select the transmission rate of the DGPS reference station nearest you, from [50], [100] or [200] (bps).

[SBAS SATELLITE SEL.]: Available GEO satellites are shown below.

Provider	Satellite type	Longitude	Satellite No.
WAAS	Intelsat Galaxy XV	133°W	135
	TeleSat Anik F1R	107.3°W	138
	Inmarsat-4-F3	98°W	133
EGNOS	Inmarsat-3-F2/AOR-E	15.5°W	120
	Inmarsat-4-F2	25°E	126
	SES-5	5°E	136
MSAS	MTSAT-1R	140°E	129
	MTSAT-2	145°E	137
GAGAN	GSAT-8	55°E	127
	GSAT-10	83°E	128

[AUTOMATIC]: Automatically search for the GEO satellite within your current position.  
 [MANUAL]: Enter appropriate GEO satellite number (120 to 138) manually in [SBAS MAN. SAT. SET.].

**Note:** Select [AUTOMATIC]. The SBAS position fix requires time for [MANUAL].

[SBAS MAN. SAT. SET.]: When selecting [MANUAL] in [SBAS SATELLITE SEL.], manually enter the GEO satellite number (120 to 138).

## 9. OTHER FUNCTIONS

[DISABLE SATELLITE(SBAS)], [DISABLE SATELLITE(QZSS)]: Every GPS satellite is broadcasting abnormal satellite number(s) in its Almanac, which contains general orbital data about all GPS satellites. Using this information, the GPS receiver automatically eliminates any malfunctioning satellite from the GPS satellite schedule. However, the Almanac sometimes may not contain this information. You can disable an inoperative satellite manually. Enter satellite numbers (up to three satellites each for SBAS or QZSS) in three digits.

[COURSE UP REDRAW ANGLE]: Sets the angle to redraw the course in the AC up mode (20 to 60°). See section 2.4.

[FREE UP ANGLE]: Sets the angle which points to the top of the screen in the Specified direction up mode. See section 2.4.

[COURSE SMOOTHING]: During position fixing, ship's course is directly measured by receiving GPS satellite signals. The raw course data may change randomly depending on receiving conditions and other factors. You can reduce this random variation by increasing the smoothing. Like with latitude and longitude smoothing, the higher the course smoothing the more smoothed the raw data. If the setting is too high, however, the response to speed and course change slows. For no smoothing, enter all zeroes.

[ROLLOVER]: No use.


[RTE SENTENCE]: Selects RTE sentence mode from [LEGACY] or [DNV].

## 9.5 [INPUT/OUTPUT PORT SETTING] Menu

This menu sets up the I/O ports, and is normally done at the installation. Be sure the ports are correctly set. Improper setting may prevent transfer of data between this unit and external equipment.

### 9.5.1 How to set the output 1, 2 or 3

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [5. INPUT/OUTPUT PORT SETTING].

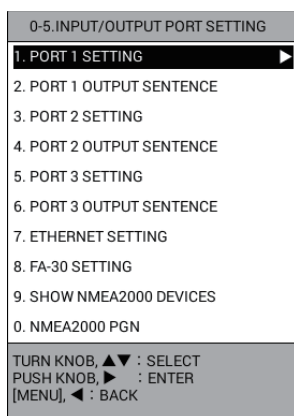

4. Select [1. PORT 1 SETTING], [3. PORT 2 SETTING] or [5. PORT 3 SETTING].

PORT 1 SETTING			
CONNECTED DEVICE	:	NORMAL	RADIO EQUIPMENT
		AIS	GPS BUOY    AUTO PILOT
		RTCM	
FORMAT	:	NMEA0183 ver1.5	
		NMEA0183 ver2.0	
		NMEA0183 ver3.0	
		NMEA0183 ver4.1	
BAUD RATE	:	4800	38400
ACCEPT TLL WITH NO.	:	ON	OFF
TLL OUTPUT	:	ON	OFF
LAT/LON FORMAT	:	DD°MM.MM'	DD°MM.MMM'    DD°MM.MMMM'
OUTPUT WAYPOINT	:	ON	OFF
OUTPUT CONSORT INFO.	:	ON	OFF
OUTPUT RADIO MESSAGE	:	ON	OFF
DATUM SELECTION	:	WGS-84	TOKYO
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER [MENU] : BACK			

5. Select an item to change.

[CONNECTED DEVICE]: Selects the device connected to the port 1 (or 2, 3) from [NORMAL], [RADIO EQUIPMENT], [AIS], [GPS BUOY], [AUTO PILOT] or [RTCM].

[FORMAT]: Selects [NMEA0183 ver1.5], [NMEA0183 ver2.0], [NMEA0183 ver3.0] or [NMEA0183 ver4.1] depending on the navigator connected.

[BAUD RATE]: Selects the baud rate (bps) from [4800] or [38400].

[ACCEPT TLL WITH NO.]: Select [ON] to register the TLL mark or the waypoint when receiving the TLL data with the target number from the connected radar.

[TLL OUTPUT]: Select [ON] to output L/L data, at the moment a mark is entered, to the navigator connected.

[LAT/LON FORMAT]: Selects the number of minute places to shown in latitude and longitude position, from hundredth, thousandth or ten thousandth.

[OUTPUT WAYPOINT]: Select [ON] to output the WPL and RTE sentences to the navigator connected when setting a route as destination.

**Note:** The RTE sentence is not output for the route which has only one waypoint (quick point).

[OUTPUT CONSORT INFO.]: Select [ON] to output the consort data to the navigator connected.

[OUTPUT RADIO MESSAGE]: Select [ON] to output the radio message to the navigator connected.

[DATUM SELECTION]: Selects the datum for the external equipment connected from [WGS-84] or [TOKYO].

6. Select an option.

7. Press the **MENU** key to return to the [5. INPUT/OUTPUT PORT SETTING] menu.

## 9. OTHER FUNCTIONS

8. Select [2. PORT 1 OUTPUT SENTENCE], [4. PORT 2 OUTPUT SENTENCE] or [6. PORT 3 OUTPUT SENTENCE].

PORT 1 OUTPUT SENTENCE		SEL. PAGE _ 1/2▶
OUTPUT AAM	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT APB	: <input type="button" value="OUTPUT"/>	<input type="button" value="NO OUTPUT"/>
OUTPUT BOD	: OUTPUT	<input type="button" value="NO OUTPUT"/>
BWR/BWC OUTPUT	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT DBT/DPT	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT DTM	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT GGA	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT GLL	: <input type="button" value="OUTPUT"/>	<input type="button" value="NO OUTPUT"/>
OUTPUT GTD	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT MTW	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT RMA	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT RMB	: <input type="button" value="OUTPUT"/>	<input type="button" value="NO OUTPUT"/>
OUTPUT RMC	: <input type="button" value="OUTPUT"/>	<input type="button" value="NO OUTPUT"/>
OUTPUT VHW	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT VTG	: <input type="button" value="OUTPUT"/>	<input type="button" value="NO OUTPUT"/>
OUTPUT WPL	: OUTPUT	<input type="button" value="NO OUTPUT"/>

TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER  
 [0]~[9] : NO. OF PAGE    ◀▶ : MOVE PAGE  
 [MENU] : BACK

Page 1

PORT 1 OUTPUT SENTENCE		SEL. PAGE _ ◀2/2
OUTPUT XTE	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT ZDA	: <input type="button" value="OUTPUT"/>	<input type="button" value="NO OUTPUT"/>
OUTPUT HDT	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT HDG	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT MWV	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT TTM	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT GNS	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT GSA	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT GSV	: OUTPUT	<input type="button" value="NO OUTPUT"/>
OUTPUT THS	: OUTPUT	<input type="button" value="NO OUTPUT"/>

TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER  
 [0]~[9] : NO. OF PAGE    ◀▶ : MOVE PAGE  
 [MENU] : BACK

Page 2

9. Select the sentence to change.
10. Select [OUTPUT] or [NO OUTPUT].
11. Press the **DISP** key to close the menu.

### 9.5.2 How to set the Ethernet

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [5. INPUT/OUTPUT PORT SETTING].
4. Select [7. ETHERNET SETTING].

ETHERNET SETTING	
IP ADDRESS	: 172. 031. 014. 006
SUBNET MASK	: 255. 255. 000. 000
DEFAULT GATEWAY	: 000. 000. 000. 000
FA-30 IP ADDRESS	: 172. 031. 024. 002


TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER  
 [MENU] : BACK

5. Select [IP ADDRESS].
6. Use the numeric keys to enter the IP address.
7. Select [SUBNET MASK].
8. Use the numeric keys to enter the subnet mask.
9. Select [DEFAULT GATEWAY].
10. Use the numeric keys to enter the default gateway.
11. Select [FA-30 IP ADDRESS].
12. Use the numeric keys to enter the IP address for the FA-30 connected.
13. Press the **DISP** key to close the menu.

### 9.5.3 How to set the FA-30

When a FURUNO FA-30 is connected to this equipment, you can set up the FA-30 from this equipment.

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [5. INPUT/OUTPUT PORT SETTING].
4. Select [8. FA-30 SETTING].

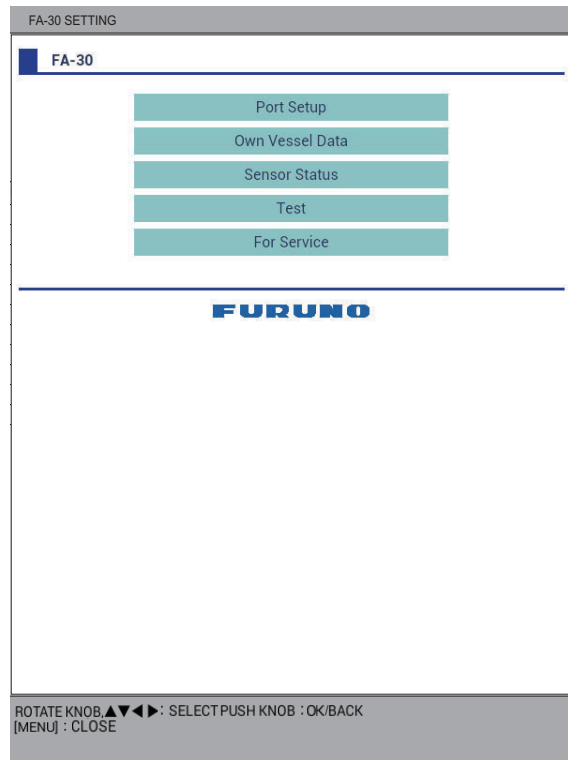


5. Set each item referring to the operator's manual of the FA-30.
6. Press the **DISP** key to close the menu.






4. Select [0. NMEA2000 PGN].

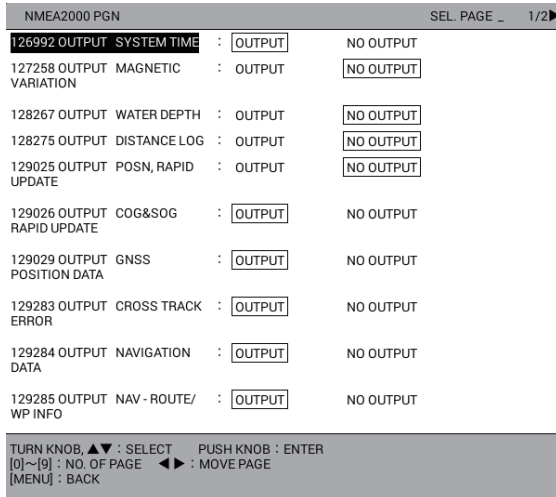

Page 1

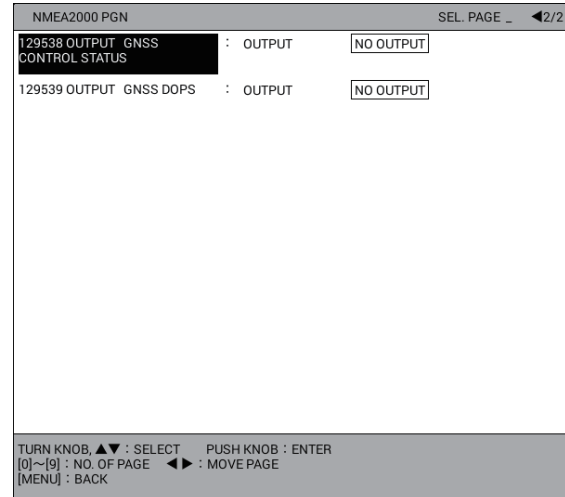

Page 2

5. Select a PGN to change.
6. Select [OUTPUT] or [NO OUTPUT].
7. Press the **DISP** key to close the menu.


## 9.6 [TEST & MEMORY CLEAR] Menu

This menu provides the diagnostic test, memory clearing, password setting, and trackball sensitivity. In this section, the password and trackball functions are described. For the diagnostic test, see section 12.8, the memory and user data clearing, see section 12.9.

### 9.6.1 How to set or change the password

You may use a password to prevent unauthorized operation of the equipment. The equipment cannot be operated unless the correct password is entered, at the powering of the equipment. Do not forget the password. If you forget the password, contact your dealer for advice. (The serviceman can reset the password; however, all way-points and marks will be erased.)

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [6. TEST & MEMORY CLEAR].

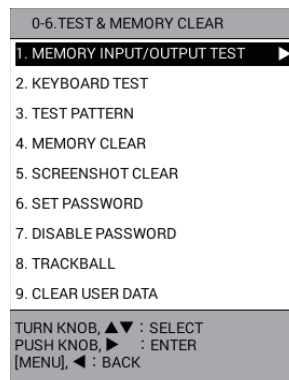

## 9. OTHER FUNCTIONS

4. Select [6. SET PASSWORD].

SET PASSWORD
PASSWORD : ■
SET A USER PASSWORD. ENTER FOUR DIGITS WITH NUMERAL KEYS

5. Use the numeric keys to enter the password with four digits.


CONFIRM PASSWORD SETTING
PASSWORD : ■
CONFIRM PASSWORD. ENTER FOUR DIGITS WITH NUMERAL KEYS

6. Enter the password set at step 5 again. The message "PASSWORD IS DECID-ED. THE PASSWORD WILL BE EFFECTIVE FROM NEXT TIME." appears.
7. Push the **ENTER** knob.
8. Press the **DISP** key to close the menu.

### 9.6.2 How to disable the password

To disable the password, do the following:

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [6. TEST & MEMORY CLEAR].
4. Select [7. DISABLE PASSWORD].

 DEACTIVATE PASSWORD. ARE YOU SURE?
RUN <b>CANCEL</b>

5. Select [RUN].
6. Press the **DISP** key to close the menu.

### 9.6.3 How to set the trackball sensitivity

You can set the sensitivity for the cursor movement when rotating the trackball.

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [6. TEST & MEMORY CLEAR].
4. Select [8. TRACKBALL].

TRACKBALL			
<b>TRKBALL SENSITIVITY</b>	:	<b>HIGH</b>	MEDIUM LOW
VIBRATION FILTER	:	0 0 0	
TERM. TIME	:	0 1 0 S.	
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER [MENU] : BACK			


5. Select [TRACKBALL SENSITIVITY].

6. Select [HIGH], [MEDIUM] or [LOW].  
 [HIGH]: The cursor responds quickly when rotating the trackball.  
 [MEDIUM]: The cursor responds at the intermediate speed between [HIGH] and [LOW].  
 [LOW]: The cursor moves slowly when rotating the trackball.  
 When the cursor moves because of the heavy hull vibration without rotating the trackball, select [MEDIUM]. If the cursor still moves, select [LOW].
7. Select [VIBRATION FILTER].
8. Use the numeric keys to set the vibration filter (setting range: 0 to 100). If the cursor moves without human intervention, because of hull vibration, increase this setting to lessen trackball sensitivity to vibration.  
**Note:** A large setting can affect cursor response, because minute operation of the trackball may be seen as vibration.
9. Select [TERM. TIME].
10. Use the numeric keys to set the release time. The vibration filter is deactivated within the setting time after the last cursor operation by the trackball.
11. Press the **DISP** key to close the menu.

## 9.7 LINE MONITOR

The data input/output from/to the serial ports can be monitored, and the data can be saved to a USB flash memory.

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [LINE MONITOR].

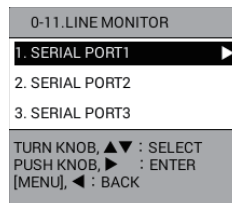

## 9. OTHER FUNCTIONS

4. Select a serial port to display RX/TX sentences. To stop showing the sentences, press the **0** key. The indication "PLAYING" at the top of the screen changes to "TEMP STOP DISP". To re-display the sentences, press the **0** key.

SERIAL PORT1		
38400bps	PLAYING	NO USB
RX		
TX		
\$GPVTG, T, 107.5, M, 10.000, N, 18.520, K		
\$GPZDA, 001125.01, 01, 2015, -09		
\$GPRMC, 001125.0, 3442.056, N, 13508.617, E, 10.0, 100.0, 010115.7, 5, W+4F		
\$GPGLL, 3442.056, N, 13508.617, E		
\$GPAPB, V, 0, 702, L, N, V, V, 121, 3, M, 1001, 114, 5, M, M		
\$GPRMB, V, 0, 70, L, 0000, 1001, 3440, 309, N, 13515, 561, E, 5, 984, 107, 0, 9, 9, V+28		
\$GPVTG, T, 107.5, M, 10.000, N, 18.520, K		
\$GPZDA, 001126.01, 01, 2015, -09		
\$GPRMC, 001126.0, 3442.055, N, 13508.619, E, 10.0, 100.0, 010115.7, 5, W+41		
\$GPGLL, 3442.055, N, 13508.619, E		
\$GPVTG, T, 107.5, M, 10.000, N, 18.520, K		
\$GPZDA, 001127.01, 01, 2015, -09		
\$GPRMC, 001127.0, 3442.055, N, 13508.621, E, 10.0, 100.0, 010115.7, 5, W+48		
\$GPGLL, 3442.055, N, 13508.621, E		
\$GPRMB, V, 0, 70, L, 0000, 1001, 3440, 309, N, 13515, 561, E, 5, 980, 107, 0, 9, 9, V+2C		
\$GPVTG, T, 107.5, M, 10.000, N, 18.520, K		
\$GPZDA, 001128.01, 01, 2015, -09		
\$GPRMC, 001128.0, 3442.054, N, 13508.623, E, 10.0, 100.0, 010115.7, 5, W+47		
\$GPGLL, 3442.054, N, 13508.623, E		
\$GPVTG, T, 107.5, M, 10.000, N, 18.520, K		
PUSH KNOB : RECORD START/STOP		
[0] PAUSE/RESUME		
[MENU] : BACK		

Example: [1. SERIAL PORT1]

To save the log data to a USB flash memory, go to step 5. Otherwise, go to step 9.

5. Connect a USB flash memory to the USB port (see section 10.3.1). The indication "NO USB" at the top of the screen changes to "STOPPED SAVING".
6. Push the **ENTER** knob to save the log data. The indication "STOPPED SAVING" at the top of the screen changes to "SAVING".
7. To complete the saving, push the **ENTER** knob. The indication "SAVING" at the top of the screen changes to "STOPPED SAVING".
8. Remove the USB flash memory (see section 10.3.2).
9. Press the **DISP** key to close the menu.


# 10. HOW TO RECORD, PLAY BACK DATA

This chapter provides information necessary for recording and playing back data, and uploading and downloading data to (from) a USB flash memory.

## 10.1 Data Recording

Data can be recorded in the “working memory”. The working memory stores data such as tracks, marks, lines, routes, waypoints, setting data. When it is full, earliest data are erased one by one to make room for new data. Thus it is good idea to save important data to a USB flash memory or the internal memory.

This unit’s memory configuration is as shown below.

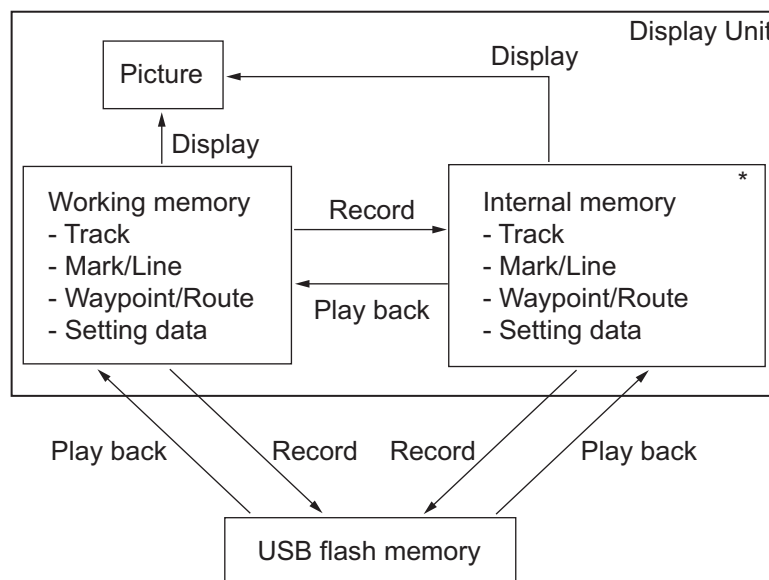

\*: There are 10 internal memory blocks. Up to 30,000 track points for own ship, 40,000 track points for other ship, 30,000 marks/lines, 3,500 waypoints, 200 routes with 100 route points each and setting data can be stored in each block.

## 10.2 Internal Memory

This equipment has 10 internal memories in which to store data. Data are saved and replayed between the working memory and internal memory.


### 10.2.1 How to save the data to the internal memory

Data in the working memory can be saved to the internal memories. Up to 30,000 track points for own ship, 40,000 track points for other ship, 30,000 marks/lines, 3,500 waypoints, 200 routes with 100 route points each and setting data can be stored in each internal memory block.


1. Press the **MENU** key to open the main menu.

10. HOW TO RECORD, PLAY BACK DATA

2. Select [3. USB/INTERNAL MEMORY MANAGEMENT].

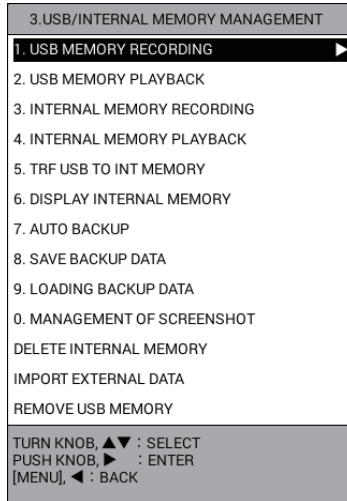

3. Select [3. INTERNAL MEMORY RECORDING].

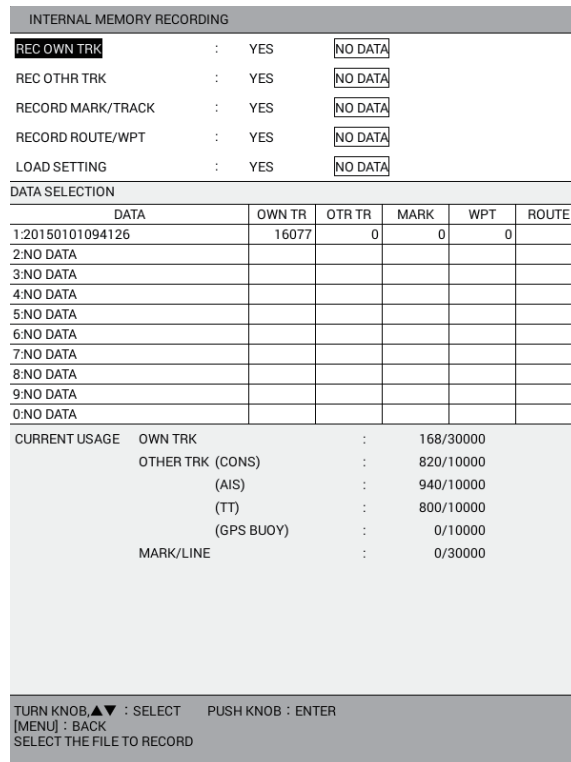

4. Select an item to save.
5. Select [YES].
6. Repeat steps 4 and 5 to save other items.
7. Select one of 10 memory blocks from [DATA SELECTION] to show the [COMMENT] window. The current date is automatically named as the comment. To change the comment, go to the next step. Otherwise, go to step 9.
8. Enter the comment (up to 15 characters) (see "How to enter alphanumeric data" on page 1-10) then select [ENTER]. The message "RECORD CURRENT DATA TO INTERNAL MEMORY. ARE YOU SURE?" appears.
9. Select [RUN] to save the data.
10. When the message of recording end appears, push the **ENTER** knob.
11. Press the **DISP** key to close the menu.

## 10.2.2 How to display the data stored in the internal memory

Tracks, marks and lines stored in the internal memory can be displayed on the screen.

1. Press the **MENU** key to open the main menu.
2. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
3. Select [6. DISPLAY INTERNAL MEMORY] which has three pages ([INT MEMORY 1] to [INT MEMORY 10]).

DISPLAY INTERNAL MEMORY		SEL. PAGE	1/3▶
<b>INT MEMORY 1</b>			
DISPLAY OWN TRACK	: YES	<input type="checkbox"/> NO	2150/30000
DISP OTHER TRCK (CONS)	: YES	<input type="checkbox"/> NO	500/40000
ADD MARK / LINE DISP.	: YES	<input type="checkbox"/> NO	1800/30000
<b>INT MEMORY 2</b>			
DISPLAY OWN TRACK	: YES	<input type="checkbox"/> NO	2000/30000
DISP OTHER TRCK (CONS)	: YES	<input type="checkbox"/> NO	480/40000
ADD MARK / LINE DISP.	: YES	<input type="checkbox"/> NO	1750/30000
<b>INT MEMORY 3</b>			
DISPLAY OWN TRACK	: YES	<input type="checkbox"/> NO	2300/30000
DISP OTHER TRCK (CONS)	: YES	<input type="checkbox"/> NO	650/40000
ADD MARK / LINE DISP.	: YES	<input type="checkbox"/> NO	2100/30000
<b>INT MEMORY 4</b>			
DISPLAY OWN TRACK	: YES	<input type="checkbox"/> NO	2700/30000
DISP OTHER TRCK (CONS)	: YES	<input type="checkbox"/> NO	850/40000
ADD MARK / LINE DISP.	: YES	<input type="checkbox"/> NO	2550/30000
TTL ADD DISP	OWN TRK	:	0/30000
	OTHER TRK (CONS)	:	0/10000
	(AIS)	:	0/10000
	(TT)	:	0/10000
	(GPS BUOY)	:	0/10000
	MARK / LINE	:	0/30000
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER			
[0]~[9] : NO. OF PAGE    ◀▶ : MOVE PAGE			
[MENU] : BACK			

4. Select [DISPLAY OWN TRACK], [DISP OTHER TRCK (CONS)] or [ADD MARK / LINE DISP.] in the internal memory block you want to load. The memory capacity and the number of currently recorded data are displayed to the right of each item.
5. Select [YES].
6. Repeat steps 4 and 5 to load other data.
7. Press the **DISP** key to close the menu. Selected data (tracks, marks, lines) appear on the screen. Note that these cannot be erased or edited.

To cancel the data display, select [NO] at step 5.

### 10.2.3 How to play back data from the internal memory

Data in the internal memory can be loaded to the working memory and played back on the screen. However, loaded waypoint/route and setting data will replace current data or add to current data, depending on play back method. For that reason, you may want to record the current display before replaying data.

1. Press the **MENU** key to open the main menu.
2. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
3. Select [4. INTERNAL MEMORY PLAYBACK].

INTERNAL MEMORY PLAYBACK						
REC OWN TRK	:	ADD				<input type="checkbox"/> NO
REC OTHR TRK	:	ADD				<input type="checkbox"/> NO
RECORD MARK/TRACK	:	OVERWRITE	ADD			<input type="checkbox"/> NO
RECORD ROUTE/WPT	:	OVERWRITE				<input type="checkbox"/> NO
LOAD SETTING	:	OVERWRITE				<input type="checkbox"/> NO
DATA SELECTION						
DATA	OWN TR	OTR TR	MARK	WPT	ROUTE	
1:20150101094126	2000	1500	1300	70	20	
2:20150101094127	2150	1650	1350	85	22	
3:20150101094128	2700	1900	1800	135	27	
4:20150101094129	2550	1800	1550	95	25	
5:20150101094130	2600	1850	1650	120	26	
6:NO DATA						
7:NO DATA						
8:NO DATA						
9:NO DATA						
0:NO DATA						
CURRENT USAGE	OWN TRK	:	12000/30000			
	OTHER TRK (CONS)	:	1600/10000			
	(AIS)	:	3100/10000			
	(TT)	:	2800/10000			
	(GPS BUOY)	:	1200/10000			
	MARK/LINE	:	7650/30000			
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER						
[MENU] : BACK						
SELECT THE FILE TO PLAY BACK						


4. Select an item to replay.
5. Select [ADD] or [OVERWRITE] depending on the item selected at step 4.  
[ADD]: Adds the selected data to the current display data.  
[OVERWRITE]: Overwrites the current display data.  
**Note:** When setting [RECORD MARK/TRACK] to [ADD], the selected data can not be added if the memory capacity is reached (30,000). For [REC OWN TRK] or [REC OTHR TRK], the oldest data is erased to make room for the latest. For example, when 25,000 track points for own ship are added to the current 10,000 track points, the old 5,000 track points of the current 10,000 track points are erased. Then 25,000 track points are added to the remaining 5,000 track points.
6. Repeat steps 4 and 5 to replay other data.
7. Select the data to replay from [DATA SELECTION]. The message "LOAD FILE. ARE YOU SURE? (THE SYSTEM WILL REBOOT WHEN THE FILE IS LOADED.)" appears.
8. Select [RUN] to replay the data.
9. When the message of loading end appears, push the **ENTER** knob.
10. Press the **DISP** key to close the menu.




## 10.2.4 How to delete data from the internal memory

To delete data from the internal memory, do the following:

1. Press the **MENU** key to open the main menu.
2. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
3. Select [DELETE INTERNAL MEMORY].

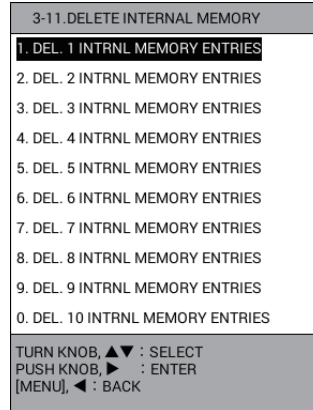

 4. Select the internal memory to delete from [1. DEL. 1 INTRNL MEMORY ENTRIES] to [0. DEL. 10 INTRNL MEMORY ENTRIES]. The following confirmation message appears.



x: Number of selected internal memory


5. Select [RUN] to delete the data.
6. Press the **DISP** key to close the menu.

## 10.3 USB Flash Memory Operations

**Note:** Keep water away from the unit when the USB flash memory is inserted. The USB port is not waterproof while its cover is removed.

### 10.3.1 How to insert a USB flash memory

1. Pull the tab on the USB drive cover from top down to open the USB drive.

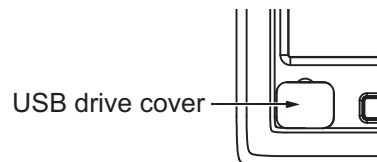

2. Connect a USB flash memory in the USB drive.

### 10.3.2 How to safely remove a USB flash memory

## ! CAUTION

Do the following when removing a USB connection device such as a USB flash memory.

The data stored in the USB flash memory may become corrupted if the memory is not removed correctly.

1. Press the **MENU** key to open the main menu.
2. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
3. Select [REMOVE USB MEMORY]. The message "USB DEVICE CAN BE SAFELY REMOVED." appears.
4. Push the **ENTER** knob.
5. Remove the USB flash memory, then close the cover.
6. Press the **DISP** key to close the menu.

### 10.3.3 How to save the data to a USB flash memory

Data in the working memory or the internal memory can be saved to a USB flash memory.

1. Connect a USB flash memory in the USB drive.
2. Press the **MENU** key to open the main menu.
3. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
4. Select [1. USB MEMORY RECORDING].

USB MEMORY RECORDING					
REC OWN TRK	:	YES			NO DATA
REC OTHR TRK	:	YES			NO DATA
RECORD MARK/TRACK	:	YES			NO DATA
RECORD ROUTE/WPT	:	YES			NO DATA
SEL DATUM	:	WGS-84		TOKYO	
LOAD SETTING	:	YES			NO DATA
DATA SELECTION					
DATA	OWN TR	OTR TR	MARK	WPT	ROUTE
RUN DATA	3500	2700	1850	95	45
1:20150101094126	2000	1500	1300	70	20
2:20150101094127	2150	1650	1350	85	22
3:INT MEMORY 3					
4:INT MEMORY 4					
5:INT MEMORY 5					
6:INT MEMORY 6					
7:INT MEMORY 7					
8:INT MEMORY 8					
9:INT MEMORY 9					
0:INT MEMORY 1 0					
CURRENT USAGE	OWN TRK	:	3500/30000		
	OTHER TRK (CONS)	:	600/10000		
	(AIS)	:	900/10000		
	(TT)	:	800/10000		
	(GPS BUOY)	:	400/10000		
	MARK/LINE	:	1850/30000		
TURN KNOB ▲▼ : SELECT    PUSH KNOB : ENTER					
[MENU] : BACK					
SELECT THE FILE TO RECORD					

5. Select an item to save.
6. Select [YES].
7. Repeat steps 5 and 6 to save other items.
8. Select [SEL DATUM].
9. Select [WGS-84] or [TOKYO].

- To save the data in the working memory, select [RUN DATA] from [DATA SELECTION]. To save the data in the internal memory, select one of [1:XXXXXXXXXX] to [0:XXXXXXXXXX] (XXXXXXXXXX: file name) from [DATA SELECTION]. The [FILE NAME] window appears. The current date is automatically named as the file name. To change the file name, go to the next step.
- Enter the file name (up to 15 characters) (see "How to enter alphanumeric data" on page 1-10) then select [ENTER] to show the following message.



xxxxxx: Working data or internal memory (1 to 10)

- Select [RUN] to save the data, which takes max. one minute. When the screenshot data is large, more time is necessary. For screenshot procedures, see section 10.5.  
**Note:** The time for the track data is saved in UTC.
- Push the **ENTER** knob.
- Press the **DISP** key to close the menu.

### 10.3.4 How to play back the data from the USB flash memory

Data in the USB flash memory can be loaded to the working memory and played back on the screen. However, loaded waypoint/route and setting data will replace current data or add to current data, depending on play back method. For that reason, you may want to record the current display before replaying data.

- Connect a USB flash memory in the USB drive.
- Press the **MENU** key to open the main menu.
- Select [3. USB/INTERNAL MEMORY MANAGEMENT].
- Select [2. USB MEMORY PLAYBACK].

USB MEMORY PLAYBACK					
REC OWN TRK	:	ADD			<input type="checkbox"/>
REC OTHR TRK	:	ADD			<input type="checkbox"/>
RECORD MARK/TRACK	:	OVERWRITE	ADD		<input type="checkbox"/>
RECORD ROUTE/WPT	:	OVERWRITE			<input type="checkbox"/>
SEL DATUM	:	WGS-84	TOKYO		
LOAD SETTING	:	OVERWRITE			<input type="checkbox"/>
DATA SELECTION					SEL. PAGE
FILE NAME	OWN TR	OTR TR	MARK	WPT	ROUTE
20150101130027.csv	2000	1500	1300	70	20
20150101130028.csv	2150	1650	1350	85	22
20150101130029.csv	2700	1900	1800	135	27
CURRENT USAGE					
OWN TRK	:				3500/30000
OTHER TRK (CONS)	:				700/10000
(AIS)	:				900/10000
(TT)	:				800/10000
(GPS BUOY)	:				500/10000
MARK/LINE	:				2000/30000
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER					
[MENU] : BACK					
SELECT THE FILE TO PLAY BACK					

- Select an item to replay.

**Note:** If replaying the setting data ([LOAD SETTING]) and others at the same time, others (tracks, marks, lines, routes, waypoints) may not be replayed. Replay others first, then the setting data.

## 10. HOW TO RECORD, PLAY BACK DATA

6. Select [ADD] or [OVERWRITE] depending on the item selected at step 5.  
 [ADD]: Adds the selected data to the current display data.  
 [OVERWRITE]: Overwrites the current display data.  
**Note:** When setting [RECORD MARK/TRACK] to [ADD], the selected data can not be added if the memory capacity is reached (30,000). For [REC OWN TRK] or [REC OTHR TRK], the oldest data is erased to make room for the latest. For example, when 25,000 track points for own ship are added to the current 10,000 track points, the old 5,000 track points of the current 10,000 track points are erased. Then 25,000 track points are added to the remaining 5,000 track points.
7. Repeat step 5 and step 6 to replay other data.
8. Select [SEL DATUM].
9. Select [WGS-84] or [TOKYO].
10. Select the file to replay from [DATA SELECTION]. The message "LOAD FILE. ARE YOU SURE? (THE SYSTEM WILL REBOOT WHEN THE FILE IS LOADED.)" appears.
11. Select [RUN] to replay the data, which takes max. one minute. When the screenshot data is large, more time is necessary. For screenshot procedures, see section 10.5.
12. Push the **ENTER** knob.
13. Press the **DISP** key to close the menu.

### 10.3.5 How to transfer the data from the USB flash memory

Data in the USB flash memory can be transferred to the internal memory.

1. Connect a USB flash memory in the USB drive.
2. Press the **MENU** key to open the main menu.
3. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
4. Select [5. TRF USB TO INT MEMORY].

TRF USB TO INT MEMORY						
REC OWN TRK	:	YES				NO DATA
REC OTHR TRK	:	YES				NO DATA
RECORD MARK/TRACK	:	YES				NO DATA
RECORD ROUTE/WPT	:	YES				NO DATA
SEL DATUM	:	WGS-84				TOKYO
LOAD SETTING	:	YES				NO DATA
DATA SELECTION			SEL. PAGE			1/1
FILE NAME	OWN TR	OTR TR	MARK	WPT	ROUTE	
20150101130027.csv	2000	1500	1300	70	20	
20150101130028.csv	2150	1650	1350	85	22	
20150101130029.csv	2700	1900	1800	135	27	
CURRENT USAGE	OWN TRK	:	3500/30000			
	OTHER TRK (CONS)	:	700/10000			
	(AIS)	:	900/10000			
	(TT)	:	800/10000			
	(GPS BUOY)	:	500/10000			
	MARK/LINE	:	2000/30000			
ROTATE KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER [MENU] : BACK SELECT FILE TO TRANSFER.						

5. Select an item to transfer.
6. Select [YES].
7. Repeat step 5 and step 6 to transfer other data.
8. Select [SEL DATUM].
9. Select [WGS-84] or [TOKYO].
10. Select the file to transfer from [DATA SELECTION]. The [COMMENT] window appears. The current date is automatically named as the file name. To change the file name, go to the next step.
11. Enter the file name (up to 15 characters) (see "How to enter alphanumeric data" on page 1-10) then select [ENTER]. The message "TRANSFER XXXXXX.csv TO INT MEMORY. ARE YOU SURE?" (XXXXXX: file name) appears.
12. Select [RUN] to transfer the data.
13. Push the **ENTER** knob.
14. Press the **DISP** key to close the menu.

## 10.4 Backup Data

### 10.4.1 How to backup the data automatically

This equipment can backup the data (tracks, marks/lines, routes/waypoints and setting data) automatically when turning the power on. There are two backup methods:

- Automatic backup by a USB flash memory
- Automatic backup by the internal memory

**Note:** The start-up sequence (until the normal display appears) may take longer when this function is active.

#### How to backup the data to a USB flash memory automatically

**Note:** To activate this function, connect a USB flash memory in the USB drive before turning the power on.

1. Press the **MENU** key to open the main menu.
2. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
3. Select [7. AUTO BACKUP].

AUTO BACKUP		
USB MEMORY	: YES	<input type="checkbox"/>
INTERNAL MEMORY	: YES	<input type="checkbox"/>
TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER		
[MENU] : BACK		

4. Select [USB MEMORY].
5. Select [YES].
6. Press the **DISP** key to close the menu. Whenever turning the power on, the data is automatically saved to the "Backup" folder in the USB flash memory.

**Note:** When setting [USB MEMORY] in the [AUTO BACKUP] menu to [YES], the backup starts after the "attention" screen disappears at the start-up. A message about "backup in progress" appears while backup is being done.

**How to backup the data to the internal memory automatically**

1. Press the **MENU** key to open the main menu.
2. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
3. Select [7. AUTO BACKUP].
4. Select [INTERNAL MEMORY].
5. Select [YES].
6. Press the **DISP** key to close the menu. Whenever turning the power on, the data is automatically saved to the internal memory.

**Note:** When setting [INTERNAL MEMORY] in the [AUTO BACKUP] menu to [YES], the backup starts after the “attention” screen disappears at the start-up. A message about “backup in progress” appears while backup is being done.


**10.4.2 How to backup the data manually**

There are two manual backup methods:


- Backup by a USB flash memory
- Backup by the internal memory

**How to backup the data to a USB flash memory manually**

1. Connect a USB flash memory in the USB drive.
2. Press the **MENU** key to open the main menu.
3. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
4. Select [8. SAVE BACKUP DATA].

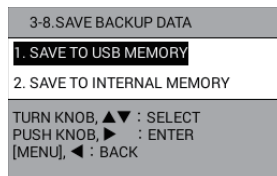

 5. Select [1. SAVE TO USB MEMORY]. The following message appears.




6. Select [RUN] to backup the data. The message "TRANSFERRING. PLEASE WAIT." appears.
7. After the message "TRANSFER COMPLETED" appears, push the **ENTER** knob.
8. Press the **DISP** key to close the menu.

**How to backup the data to the internal memory manually**

 1. Press the **MENU** key to open the main menu.
2. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
3. Select [8. SAVE BACKUP DATA].

4. Select [2. SAVE TO INTERNAL MEMORY]. The following message appears.



5. Select [RUN] to backup the data. The message "TRANSFERRING. PLEASE WAIT." appears.
6. After the message "TRANSFER COMPLETED" appears, push the **ENTER** knob.
7. Press the **DISP** key to close the menu.


### 10.4.3 How to load the backup data

There are two methods to load the backup data:


- Load the backup data from a USB flash memory
- Load the backup data from the internal memory

#### How to load the backup data from a USB flash memory

1. Connect a USB flash memory in the USB drive.
2. Press the **MENU** key to open the main menu.
3. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
4. Select [9. LOADING BACKUP DATA].

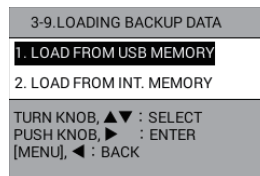

 
5. Select [1. LOAD FROM USB MEMORY]. The following message appears.



6. Select [RUN] to load the backup data. After two messages appears, the system restarts.

#### How to load the backup data from the internal memory

 1. Press the **MENU** key to open the main menu.
2. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
3. Select [9. LOADING BACKUP DATA].
4. Select [2. LOAD FROM INT. MEMORY]. The following message appears.




5. Select [RUN] to load the backup data. After two messages appear, the system restarts.


## 10.5 Screenshot (Screen Capture)

This system has a screen capture function. The screenshot data is saved in the internal memory. Also, you can transfer the data to a USB flash memory as follows:

1. Assign screenshot function to a function key (see paragraph 1.7.2). The default function for the **F2** key is screenshot.
2. Press the function key assigned the screenshot function (e.g. **F2** key) when the picture to copy is displayed. The message "SAVED SCREENSHOT" appears.  
**Note:** Do not operate any keys until the message disappears.
3. Connect a USB flash memory in the USB drive.
4. Press the **MENU** key to open the main menu.
5. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
6. Select [0. MANAGEMENT OF SCREENSHOT]. The preview for the highlighted file is displayed on the upper side of the screen.

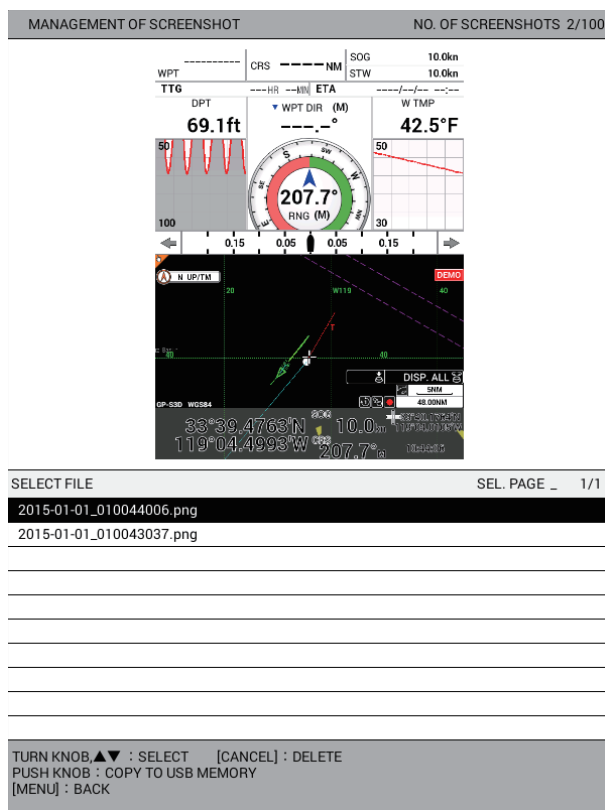

 7. Push the **ENTER** knob to show the following message.



8. Select [RUN] to transfer the screenshot data to the USB flash memory. The message "TRANSFERRING. PLEASE WAIT." appears.
9. After the message "TRANSFER COMPLETED" appears, push the **ENTER** knob.
10. Press the **DISP** key to close the menu.




## 10.6 How to Load the Data from Other Equipment

Data in other equipment can be loaded to the internal memory.

**Note 1:** Request a serviceman to load the data from other equipment. Contact your dealer.

**Note 2:** When using a commercial USB floppy drive, insert a floppy disk to the drive before connecting the drive to the GP-3700. When changing a floppy disk, reconnect the drive to the GP-3700.

1. Connect a USB device, in which the data to load are saved, in the USB drive.
2. Press the **MENU** key to open the main menu.
3. Select [3. USB/INTERNAL MEMORY MANAGEMENT].
4. Select [IMPORT EXTERNAL DATA].

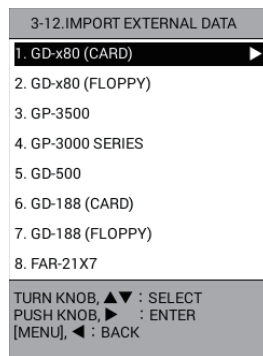

GD-x80: GD-280, GD-380,  
GD-680, GD-280BB

**Note:** [2. GD-x80 (FLOPPY)] and [7. GD-188 (FLOPPY)] are unavailable.

5. Select the model type to load.

GD-x80 (CARD)						
REC OWN TRK	:	YES				[NO DATA]
REC OTHR TRK	:	YES				[NO DATA]
RECORD MARK/TRACK	:	YES				[NO DATA]
RECORD ROUTE/WPT	:	YES				[NO DATA]
SEL DATUM	:	[WGS-84]				TOKYO
DATA SELECTION			SEL. PAGE _			
FILE NAME	OWN TR	OTR TR	MARK	WPT	ROUTE	
1:20150101094126	2000	1500	1300	70	20	
2:20150101094127	2150	1650	1350	85	22	
3:20150101094128	2700	1900	1800	135	27	
4:20150101094129	2550	1800	1550	95	25	
5:20150101094130	2600	1850	1650	120	26	
CURRENT USAGE						
OWN TRK	:	12000/30000				
OTHER TRK (CONS)	:	1600/10000				
(AIS)	:	3100/10000				
(TT)	:	2800/10000				
(GPS BUOY)	:	1200/10000				
MARK/LINE	:	7650/30000				
TURN KNOB,▲▼ : SELECT    PUSH KNOB : ENTER						
[MENU] : BACK						
SELECT FILE TO TRANSFER.						

*Example: [1. GD-x80 (CARD)]*

6. Select an item to load.
7. Select [YES].

## 10. HOW TO RECORD, PLAY BACK DATA

8. Repeat steps 6 and 7 to load other items.
9. Select [SEL DATUM].
10. Select [WGS-84] or [TOKYO].
11. Select the file to load from [DATA SELECTION]. The confirmation message appears.
12. Select [RUN] to load the data. The message "TRANSFERRING. PLEASE WAIT." appears.  
**Note:** It may take approx. 20 minutes to transfer the data according to the selected equipment.
13. After the message "TRANSFER COMPLETED" appears, push the **ENTER** knob.
14. Press the **DISP** key to close the menu.




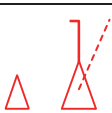
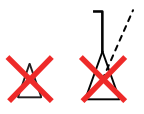





# 11. AIS OPERATIONS

With connection of an AIS transponder, up to 100 AIS targets (ship's name, position, navigation data) can be shown on the plotter display. The AIS operation requires WGS-84 geodetic datum.

**Note:** Set the datum for the port connected an AIS transponder to WGS-84 (section 9.6.1). It is dangerous to select the other datum because the position of an AIS target can not be displayed correctly.

## 11.1 AIS Symbols

AIS targets are marked with the appropriate AIS symbol, as shown in the table below.

Symbol	Status	Remarks
	Sleeping target	Denote sleeping AIS symbol. (Triangle is smaller than activated AIS symbol.)
	Activated target	Denote activated AIS symbol, with heading line and vector for course and speed.
	Turning target	Denote activated AIS symbol making a turn.
	Dangerous target	Target's CPA and TCPA are within the CPA and TCPA settings. Displayed in red.
	Lost target	Red "X" overlaid on an AIS symbol and is flashing.
	Physical (real) ATON (AIS aid to navigation)	
	Virtual ATON (AIS aid to navigation)	
	AIS base station	
	AIS aircraft	Lost time: 50 seconds
	AIS search and rescue transmitter (SART)	Lost time: 10 minutes

**Note:** AIS symbols are momentarily erased and the screen is redrawn after the heading is changed in the head up mode.

### How to show AIS symbols

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].


3. Select [DISPLAY AIS SYMBOLS] on page 4.



4. Select [SHOW] to show the AIS symbols, [HIDE] to hide the AIS symbols.
5. Press the **DISP** key to close the menu.

## 11.2 How to Activate/Sleep Targets

When you convert a sleeping target to an activated target, an activated target's course and speed are shown with a vector. You can easily judge target movement by monitoring the vector.

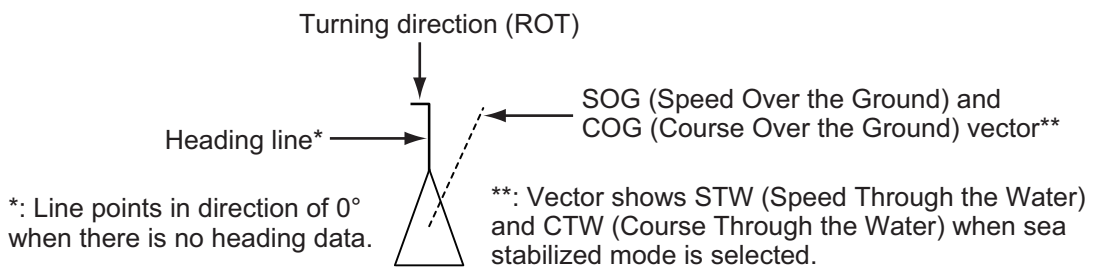

You can “sleep” an AIS target when the screen becomes filled with targets, which might prevent important radar and AIS displays from being identified. Dangerous targets cannot be “slept”. To activate or sleep targets, do the following:

1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on the target you wish to activate or sleep then push the **ENTER** knob to show the AIS detail data (see section 11.4.1).
3. Push the **ENTER** knob. Each push of the knob activates or sleeps the selected target alternately.
4. Press the **MENU** or **DISP** key to close the information window.


## 11.3 AIS Tracks

### 11.3.1 How to show/hide AIS tracks

1. Press the **MENU** key to open the main menu.
2. Select [4. MARK/TRACK SETTING].
3. Select [DISPLAY AIS TRACK] on page 4.
4. Select [SHOW] to show the AIS tracks, [HIDE] to hide the AIS tracks.
5. Press the **DISP** key to close the menu.

### 11.3.2 How to change the AIS symbol/track color or track line type

1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on an AIS symbol then press the **TRACK COLOR** key to display the [CHANGE TRACK COLOR (ALL AIS)] window.

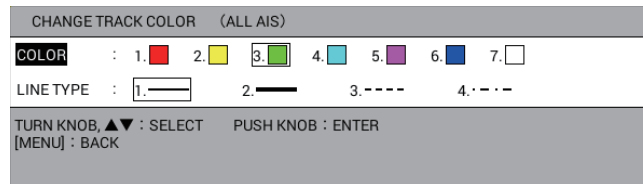

**Note:** This window automatically closes when there is no operation for 10 seconds.

3. Select [COLOR].
4. Select the color for the AIS symbol/track. All AIS symbols and tracks are displayed in the selected color from now.
5. Select [LINE TYPE].
6. Select the line type for the AIS track. AIS tracks are displayed with the selected line type from now.
7. Press the **MENU** or **DISP** key to close the window.

**Note:** The AIS symbol/track color or track line type can be changed on the AIS list (see section 11.4.2).

### 11.3.3 How to stop/restart recording of AIS track

You can stop recording the AIS track as follows.

1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on the AIS symbol to stop recording then press the **PLOT INTVL** key. The track for the selected AIS symbol is not recorded during stopping recording.
3. To restart recording, put the cursor on the AIS symbol to restart recording then press the **PLOT INTVL** key.

**Note:** You can stop or restart recording of AIS track from the AIS list (see section 11.4.2).

## 11.4 AIS Target Data

You can display the AIS target data.

### 11.4.1 How to display the individual AIS target data

#### Basic AIS target data

1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on the target you wish to display its data to show the basic AIS target data.

MMSI : 123456700
NAME OF SHIP : Ship_AIS_1
COURSE : 107.4°M SHIP SPEED : 10.0kn
APPR RNG : 1.783NM APPR TME : 34m10s
BEARING : 103.4°M DISTANCE : 1.784NM
SHIP WIDTH : -m SHIP LENGTH : -m

“- -” is displayed for the item without data.

#### Detailed AIS target data

1. Press the **CURSOR ON/OFF** key to turn on the cursor.
2. Put the cursor on the target you wish to display its data then push the **ENTER** knob to show the detailed AIS target data.

AIS DETAIL INFO			
SHIPNAME	: Ship_AIS_1		
CALL SIGN	: -		
MMSI NUMBER	: 123456700		
COURSE	: 107.4°M	SOG	: 10.0kn
APPR TME	: 34m10s	APPR RNG	: 1.783NM
RANGE	: 1.783NM	BRG	: 103.3°M
WAYPOINT	: -		
SHIP TYP	: not available		
SHIP COND	: Under way sailing		
ELAPSED	: 1s		
HDG BRG	: 107.4°M	ROT	: +0.0°/min
OS LEN.	: -m	OS WID.	: -m
DANGER	: -		
POSITION	: 34° 43.4040'N, 135° 24.3630'E		
PUSH KNOB : ACT./DEACT.			
[MENU] : CLOSE			

“- -” is displayed for the item without data.


3. Press the **MENU** or **DISP** key to close the window.

**Note 1:** You can display the detailed AIS target data from the AIS list (see section 11.4.2).

**Note 2:** When pushing the **ENTER** knob while the detailed data is displayed, you can activate or sleep the AIS target (see section 11.2).

### 11.4.2 How to display the AIS list

1. Press the **MENU** key to open the main menu.
2. Select [2. OTHER SHIPS LIST].

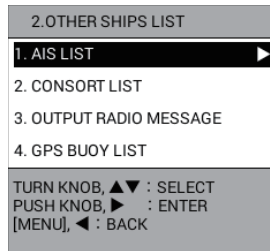

3. Select [1. AIS LIST] to show the AIS list.


AIS LIST				SEL. PAGE _ 1/2▶	
NAME OF SHIP	RNG	BEARING	APPR TME	APPR RNG	
Ship_AIS_20	2.400NM	130.7°M	47m32s	2.396NM	
Ship_AIS_19	2.402NM	128.9°M	48m05s	2.398NM	
Ship_AIS_18	2.407NM	127.1°M	49m16s	2.403NM	
Ship_AIS_17	2.414NM	125.3°M	50m35s	2.410NM	
Ship_AIS_16	2.423NM	123.5°M	52m07s	2.419NM	
Ship_AIS_15	2.435NM	121.8°M	53m27s	2.431NM	
Ship_AIS_14	2.448NM	120.0°M	54m58s	2.444NM	
Ship_AIS_13	2.464NM	118.3°M	56m05s	2.460NM	
Ship_AIS_12	2.483NM	116.6°M	57m35s	2.479NM	
Ship_AIS_11	2.503NM	114.9°M	58m23s	2.499NM	

[CENTER] : CENTER TARGET  
 PUSH KNOB : SHOW DETAILS [TRACK COLOR] : CHANGE COLOR  
 [PLOT INTVL] : RECORD START/STOP [MENU] : BACK

When [TARGET SMART TRACK] is set to [ON] (see page 9-15), this indication changes as below.

[CENTER] : SMART TRACK SELECTED TARGET

 - ◀ or ▶: Shifts the page.
- **CENTER** key: Centers the selected AIS target on the plotter display. When [TARGET SMART TRACK] (see page 9-14) is set to [ON] and [DISPLAY AIS TRACK] (see section 11.3.1) is set to [SHOW], each press of the key centers an AIS target or own ship alternately. For an AIS target, the indication shown in the figure below appears at the top left of the screen.



**Note:** The orientation mode for own ship can not be changed during OS MODE.

- **ENTER** knob: Press the **ENTER** knob to display the detailed data for the selected AIS target (see section 11.4.1).
  - **TRACK COLOR** key: Shows the [CHANGE TRACK COLOR (ALL AIS)] window (see section 11.3.2).
  - **PLOT INTVL** key: Stops or restarts recording of track for the selected AIS target (see section 11.3.3).
4. Press the **DISP** key to close the AIS list and the menu.

## 11.5 AIS Alarm

### 11.5.1 How to automatically activate targets

You can get automatic activation of a sleeping AIS target when it enters the alarm area with own ship in the center.

1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [AIS AUTO ACTIVATION] on page 2.

ALARM SETTINGS		SEL. PAGE _ ◀2/3▶
AIS AUTO ACTIVATION	: <input type="checkbox"/> ON	OFF
ACTIVATION RANGE	: 0 2. 0 NM	
IGNORE MOORED SHIPS	: <input type="checkbox"/> IGNORE	SHOW
MAX. SPD FOR MOORED	: 0 1. 0 k n	
AIS PROXIMITY ALARM	: ON	<input type="checkbox"/> OFF
ALARM RANGE	: 0 1. 0 NM	
CPA/TCPA ALARM	: ON	<input type="checkbox"/> OFF
CPA ALARM RANGE	: 0 1. 0 NM	
TCPA ALARM RANGE	: 0 0 M. 3 0 S.	
AIS LOST ALARM	: ON	<input type="checkbox"/> OFF
LOST DEL. TIME	: 0 3 0 S.	
EXTERNAL AIS ALARM	: ON	<input type="checkbox"/> OFF
WATER TEMP. ALARM	: WITHIN RANGE	OUT OF RANGE <input type="checkbox"/> OFF
LOWEST WATER TEMP.	: + 3 0. 0 °F	
HIGHEST WATER TEMP.	: + 8 5. 0 °F	
SHEAR ALARM	: ON	<input type="checkbox"/> OFF
VARIATION RANGE	: 0 0. 2	(0.1 to 10.0)
DETECTION INTERVAL	: 0 1 0 S.	(10 to 120)

TURN KNOB, ▲▼ : SELECT    PUSH KNOB : ENTER  
 [0]~[9] : NO. OF PAGE    ◀▶ : MOVE PAGE  
 [MENU] : BACK

4. Select [ON].
5. Select [ACTIVATION RANGE].
6. Press the numeric keys to set the alarm range (setting range: 0.1 to 99.9 NM).
7. Select [IGNORE MOORED SHIPS].
8. Select [IGNORE] or [SHOW]. When the screen becomes filled with activated targets, they might prevent important radar and AIS displays from being identified. In this case, the targets whose speeds are slower than set with [MAX. SPD FOR MOORED] will not be automatically activated by selecting [IGNORE].
9. Select [MAX. SPD FOR MOORED].
10. Press the numeric keys to set the speed (setting range: 0.1 to 99.9 kn). Any sleeping AIS target, whose speed is slower than this setting, will not be automatically activated.
11. Press the **DISP** key to close the menu.

### 11.5.2 How to activate the AIS proximity alarm


The proximity alarm alerts you when the range between an AIS target and own ship is within the preset setting.

1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [AIS PROXIMITY ALARM] on page 2.



4. Select [ON].
5. Select [ALARM RANGE].
6. Press the numeric keys to set the alarm range (setting range: 0.1 to 99.9 NM).
7. Press the **DISP** key to close the menu.

### 11.5.3 How to set the CPA/TCPA alarm

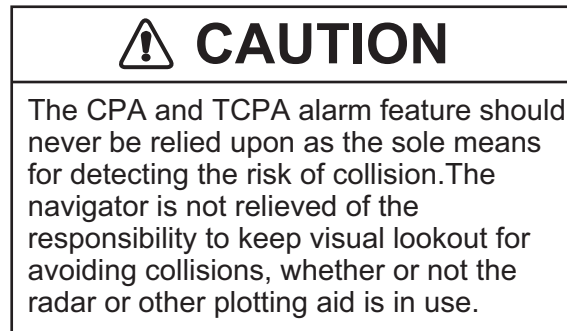

Set CPA (Closest Point of Approach) alarm range and TCPA (predicted Time to CPA) alarm time to alert you to targets that can be on a collision course. The settings are applied to TT targets. When CPA and TCPA of any AIS or TT target become less than the preset CPA and TCPA alarm settings, the audio alarm sounds. The target symbol changes to a dangerous target symbol (AIS: changed to red).

**Note:** CPA and TCPA ranges must be set up properly taking into consideration the size, tonnage, speed, turning performance and other characteristics of own ship.

1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [CPA/TCPA ALARM] on page 2.
4. Select [ON].
5. Select [CPA ALARM RANGE].
6. Press the numeric keys to set the alarm range (setting range: 0.1 to 99.9 NM).
7. Select [TCPA ALARM RANGE].
8. Press the numeric keys to set the alarm time (setting range: 30S. to 99M.59S.).
9. Press the **DISP** key to close the menu.

### 11.5.4 How to set the lost alarm

AIS targets not detected within the time specified become “lost targets”. Set the time as follows.

1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [AIS LOST ALARM] on page 2.
4. Select [ON].
5. Select [LOST DEL. TIME].
6. Press the numeric keys to set the alarm time (setting range: 3 to 999S.).
7. Press the **DISP** key to close the menu.

### 11.5.5 How to set the external AIS alarm

The external AIS alarm alerts you when something is wrong with the connected AIS unit.

1. Press the **MENU** key to open the main menu.
2. Select [6. ALARM SETTINGS].
3. Select [EXTERNAL AIS ALARM] on page 2.
4. Select [ON].
5. Press the **DISP** key to close the menu.

# 12. MAINTENANCE, TROUBLESHOOTING

This chapter contains maintenance and troubleshooting instructions to help you keep optimum performance and the longest possible life of the equipment. Before attempting any maintenance or troubleshooting procedure, please review the safety information below. If you cannot restore normal operation after following the troubleshooting procedures, do not attempt to check inside any unit; there are no operator-serviceable parts inside. Refer any repair work to a qualified technician.

## WARNING

**ELECTRICAL SHOCK HAZARD**  
Do not open the equipment.

Only qualified personnel are allowed to work inside the equipment.

## NOTICE

**Do not apply paint, anti-corrosive sealant or contact spray to coating or plastic parts.**


Those items contain organic solvents that can damage coating and plastic parts, especially plastic connectors.

## 12.1 Maintenance

Check the items shown in the table below regularly to prevent unnecessary trouble.

Check item	Check point	Remedy
Display unit	Dust or dirt on the display	Wipe it carefully to prevent scratching. For difficult to remove dirt or salt deposits, use a cloth made wet with water and neutral detergent (less than 1% detergent). Squeeze the cloth dry then clean the display. When the display is clean, gently wipe the display with a clean, soft, dry cloth, to prevent scratching.
Antenna unit	Loosened and corroded bolts	Tighten loosened bolts. Replace heavily corroded bolts.
Antenna cable	Connection point water-tightness	Replaced damaged parts.
	Connector tightness and corrosion	
	Cable damage	
Display unit connectors	Connector tightness	Re-tighten if necessary.
Ground terminal	Connection tightness and corrosion	Replaced if corroded.

## 12.2 Replacement of Fuse

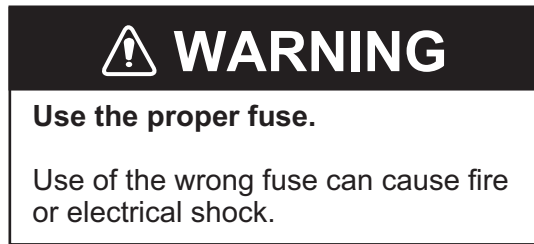

The fuse on the power cable protects the system from reverse polarity of the ship's mains and equipment fault. If the fuse blows, find the cause before replacing it. Use the correct fuse. Using the wrong fuse will damage the unit and void the warranty.

Name	Type	Code No.
Glass Tube Fuse	FGBO-A 125V 5A PBF	000-155-853-10

## 12.3 Consumable Parts

Consumable parts are used in this equipment. Contact your dealer to replace the part before its expected expiration.


### Life of trackball

The life of the trackball is approximately 21,000 hours at the temperature of 40°C. If the trackball (cursor) moves abnormally, ask your dealer about replacement of the trackball. See section 12.4 about trackball maintenance.

## 12.4 Trackball Maintenance


If the cursor moves abnormally, clean the trackball and inside the trackball housing (including the lens) as shown below:

1. Turn the retaining ring on the trackball module in the direction of the arrows (see figure below) to unlock it, then remove the retaining ring.

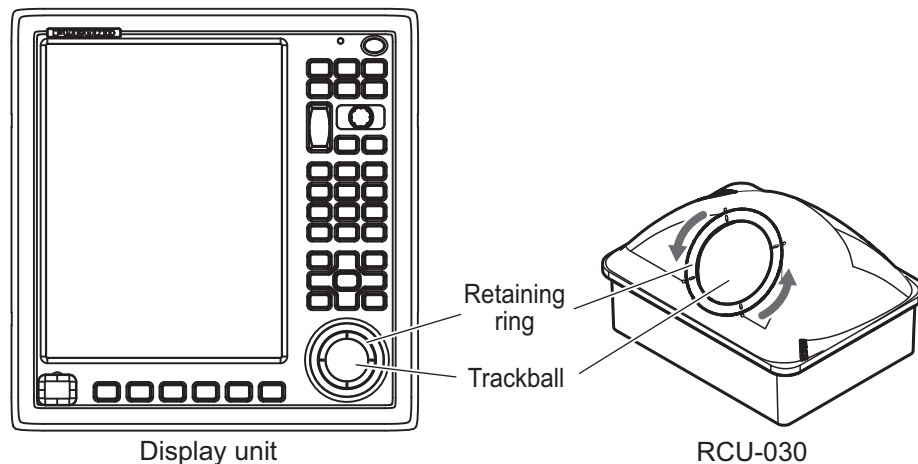

2. Use cellophane tape to remove the trackball from the trackball housing. Place the trackball and the retaining ring on a clean, soft cloth laid on a flat surface.

3. Clean the ball with a damp, soft cloth, then use a dry, lint-free cloth to carefully wipe the ball dry.
4. Use a swab, moistened with water, to carefully clean the inside of the retaining ring, the inside of the trackball housing, the supports and the lens. Change the swab regularly so that dirt and dust build-up is easily removed. Use a dry swab to wipe away moisture.

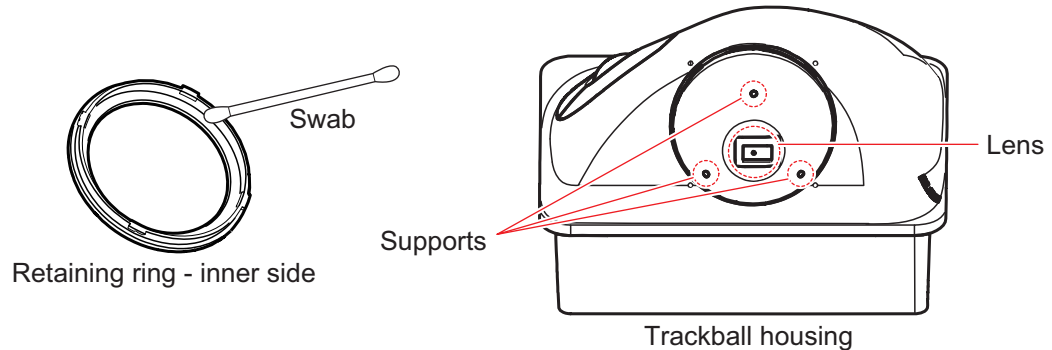

5. Re-set the ball and retaining ring. Be sure the retaining ring is not inserted reversely.

## 12.5 Troubleshooting

This section provides simple troubleshooting procedures which the user can follow to restore normal operation. If you cannot restore normal operation, do not attempt to check inside the unit. Any trouble should be referred to a qualified technician.


Symptom	Remedy
You cannot turn on the power.	<ul style="list-style-type: none"> <li>• Check for blown fuse.</li> <li>• Check that the power connector is firmly fastened.</li> <li>• Check for damaged power cable.</li> <li>• Check battery for proper voltage output.</li> <li>• Press the <b>POWER/BRILL</b> key a little harder.</li> </ul>
No picture appears.	Press the <b>POWER/BRILL</b> key to show the brilliance window. Adjust the brilliance.
There is no response when a key is operated.	Turn the power off by one of two methods below and on again. <ul style="list-style-type: none"> <li>• Long-press the <b>POWER/BRILL</b> key on the GP-3700 for 10 seconds.</li> <li>• Turn the main power off and on.</li> </ul>
Position is not fixed within 90 seconds.	<ul style="list-style-type: none"> <li>• Check if the antenna connector is firmly connected.</li> <li>• Check the number of satellites being received, on the satellite status/location display.</li> </ul>
Position is wrong.	<ul style="list-style-type: none"> <li>• Check that the correct geodetic chart system is selected on the [SYSTEM SETTING] - [NAVIGATOR SETUP] menu (on page 1).</li> <li>• Enter a position offset on the [SYSTEM SETTING] - [NAVIGATOR SETUP] menu (on page 1).</li> </ul>
Track for own ship is not plotted.	<ul style="list-style-type: none"> <li>• Check that [DISP. STOPPED TRACKS] in the [MARK/TRACK SETTING] menu is set to [SHOW].</li> <li>• Check that [DISPLAY TRACKS] in the [MARK/TRACK SETTING] menu is set to [SHOW].</li> </ul>

Symptom	Remedy
Loran (or Decca) TDs are not displayed.	Check the Loran or Decca chain number on the [PLOTTER DISPLAY SETTING] - [LORAN/DECCA SETTING] menu.
Loran (or Decca) TDs are wrong.	Correctly enter TD offset on the [PLOTTER DISPLAY SETTING] - [LORAN/DECCA SETTING] menu.
Bearing is wrong.	Check the [MANUAL MAG. VAR.] setting in the [SYSTEM SETTING] - [DISPLAY FORMAT] menu.
The ship's speed indication is not zero after the ship is stopped.	Try to decrease the setting for [SPEED AVERAGING] in the [SYSTEM SETTING] - [NAVIGATOR SETUP] menu.
Data from NMEA2000 equipment are not received.	Turn on the NMEA2000 network power first. If the GP-3700 power is turned on first, restart it.
AIS target without heading data points true north always.	Check the course by displaying the AIS target data (see section 11.4.1).


## 12.6 Unit Information

You can display information about this equipment from the menu.

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [0. MAINTENANCE].

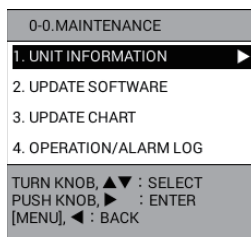

4. Select [1. UNIT INFORMATION].

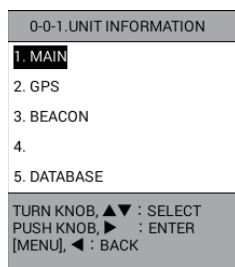

- Select [1. MAIN], [2. GPS], [3. BEACON] (an internal beacon receiver required) or [5. DATABASE].

GP-3700 MAIN BLOCK	
SERIAL NO.	: XXXX-XXXX
TYPE	
MAIN BOARD	: 14P0441
PANEL BOARD	: 14P0443
PROGRAM VER.	
Power Booter	: 1451469-XX.XX
Power Application	: 1451470-XX.XX
First Booter	: 1451465-XX.XX
Second Booter	: 1451466-XX.XX
Operation System	: 1451467-XX.XX
Application	: 1451468-XX.XX
Panel Ver.	: 1451481-XX.XX
NETWORK	
MAC ADDR (WIRED)	
	: 00:40:9D:7D:CC:1B
CAN ID	
	: C078AF00E7E0006F
RUNNING HOURS	
TOTAL OPERATION TIME (LCD)	: 173H
TOTAL OPERATION TIME (PCB)	: 173H

CONFIRM

MAIN

GPS BLOCK	
GPS BOARD	: 20P8211
OS	: 60000
FIRMWARE	: 17
CLIENT	: 48504650XX
ANTENNA CONNECTOR	: Normal
LATEST GPS DATE	: 2015/01/01 03:32:00

CONFIRM

GPS

BEACON BLOCK	
BEACON BOARD	: 20P8208
Booter	: 2051543-XX.XX
APPLICATION	: 2051544-XX.XX

CONFIRM

BEACON

DATABASE	
VOICE SYNTH.	: 1451478-XX.XX
PNG Symbols Ver.	: 1451491-XX.XX

CONFIRM

DATABASE

- Push the **ENTER** knob to close a window.
- Press the **DISP** key to close the menu.

## 12.7 Operation/Alarm Log

You can check the time when you turned the power on/off or an alarm occurred/ stopped.

- Press the **MENU** key to open the main menu.
- Select [0. SYSTEM SETTING].
- Select [0. MAINTENANCE].
- Select [4. OPERATION/ALARM LOG].

OPERATION/ALARM LOG		SEL. PAGE _ ◀3/4▶
NAME	TIME	DETAILS
ALARM16	01/01 10:35:30	STOP WATER TEMPERATURE ALARM
ALARM15	01/01 10:35:25	WATER TEMPERATURE ALARM
ALARM20	01/01 10:20:45	STOP DEPTH ALARM
ALARM19	01/01 10:20:42	DEPTH ALARM
ALARM16	01/01 10:01:10	STOP WATER TEMPERATURE ALARM
ALARM15	01/01 10:01:05	WATER TEMPERATURE ALARM
ALARM18	01/01 09:58:56	STOP TIDE ALARM
ALARM17	01/01 09:58:55	TIDE ALARM
ALARM20	01/01 09:54:50	STOP DEPTH ALARM
ALARM19	01/01 09:54:42	DEPTH ALARM
ALARM16	01/01 09:53:10	STOP WATER TEMPERATURE ALARM
ALARM15	01/01 09:53:08	WATER TEMPERATURE ALARM
ALARM06	01/01 09:50:38	STOP CROSS TRACK ERROR ALARM
ALARM05	01/01 09:50:37	CROSS TRACK ERROR ALARM
ALARM16	01/01 09:49:17	STOP WATER TEMPERATURE ALARM
ALARM15	01/01 09:49:11	WATER TEMPERATURE ALARM
ALARM20	01/01 09:48:40	STOP DEPTH ALARM
ALARM19	01/01 09:48:25	DEPTH ALARM
REC.03	01/01 09:00:11	TIME/DATE DATA RECEIVED
REC.01	--/--/--	STARTED GP-3700

[0]~[9] : NO. OF PAGE ◀▶ : MOVE PAGE  
[MENU] : BACK

- 0 to 9** keys: Enter the page number on [SEL. PAGE] to show the page desired. For example, press the **0, 5** keys in order, to show the page 5.
  - ◀, ▶**: Shifts the page.
- Press the **DISP** key to close the log list and menu.

## 12.8 Diagnostics

This section provides the procedures for testing the equipment for proper operation. Three tests are provided: memory I/O test, keyboard test, and test pattern.


### 12.8.1 Memory I/O test

The memory I/O test checks the memory and signal I/O circuits and displays the program numbers. The results for the circuit tests are shown as [OK] or [NG] (No Good). If [NG] appears, try the test again. If [NG] still appears, contact your dealer for advice.

**Note 1:** The test results of [SIO1] to [SIO3], checked using a dedicated connector at the factory, are normally displayed as "NG".

**Note 2:** The test result of [LAN (WIRED)], [CAN], [USB (FRNT)] or [USB (BACK)] is displayed as "NG" without connection to each port.

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [6. TEST & MEMORY CLEAR].

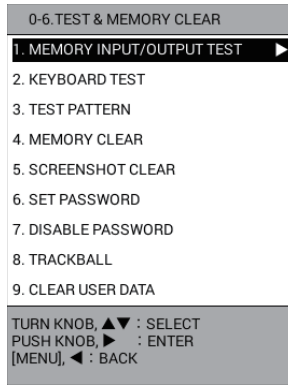

4. Select [1. MEMORY INPUT/OUTPUT TEST] to start the memory I/O test.

Test results of [SIO1] to [SIO3] are normally displayed as "NG". Test result of [LAN (WIRED)], [CAN], [USB (FRNT)] or [USB (BACK)] is displayed as "NG" without connection to each port.

MEMORY INPUT/OUTPUT TEST	
Start Time: 2015/01/01 12:33	Total Count: 1
<b>Main</b>	<b>Power</b>
SERIAL NUMBER	Bootloader Ver. 1451469-XX.XX
Application 1451468-XX.XX	Application Ver. 1451470-XX.XX
VOICE SYNTH. 1451478-XX.XX	SELF TEST RESULT OK(NG:0)
PNG Symbols Ver. 1451491-XX.XX	POWER SOURCE VOLTAGE 11.8volt
BOARD VERSION 14P0441.0	GPS
First Booter 1451465-XX.XX	OS Ver. 60000
Second Booter 1451466-XX.XX	Firmware Ver. 17
Operating System 1451467-XX.XX	PROGRAM VER. 4850465008
CPU 44000	BOARD VERSION 20P8211.1
SIO1 NG(1)	SELF TEST RESULT OK(NG:0)
SIO2 NG(1)	ANTENNA SHORT DETECTION TEST OK(NG:0)
SIO3 NG(1)	Beacon
LAN (WIRED) OK(NG:0)	Boot ver. 2051543-XX.XX
CAN OK(NG:0)	Application Ver. 2051544-XX.XX
USB(FRNT) OK(NG:0)	BOARD VERSION 20P8208.0
USB(BACK) OK(NG:0)	ROM TEST OK(NG:0)
INTERNAL MEMORY OK(NG:0)	RAM TEST OK(NG:0)
PNL BRILL OFF	ANTENNA SHORT DETECTION TEST OK(NG:0)
TOTAL LCD RUNNING HOURS 173h43m55s	ES
INT BUZZER OK(NG:0)	Boot ver. ---
SPEAKER OK(NG:0)	Application Ver. ---
RUNNING HOURS 3h33m15s	TOTAL KP TX COUNT ---
TOTAL RUNNING HOURS 173h43m59s	HF RECEIVED ECHO LEVEL ---
EVENT SWITCH1 OFF	LF RECEIVED ECHO LEVEL ---
EVENT SWITCH2 OFF	ROM TEST RSLT ---
BK OFF	RAM TEST RSLT ---
	Panel
	Panel Ver. 1451481-XX.XX
	BOARD VERSION 14P0443.0
[MENU] : END TEST AND GO BACK	

"- -" is displayed for non-DGPS specification.

"- -" is displayed because of N/A.

XX: Program version numbers


5. Press the **DISP** key to close the test screen and the menu.



## 12.8.2 Keyboard test

The keyboard test checks the controls on the display unit for proper operation.

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [6. TEST & MEMORY CLEAR].
4. Select [2. KEYBOARD TEST] to show the keyboard test screen.

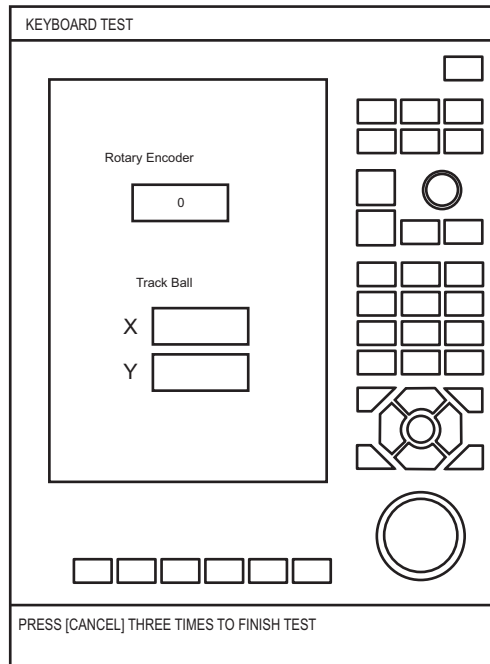


5. Operate each control on the display unit one by one.
  - A key is functioning correctly if its on screen location “fills” in light-blue when the key is pressed. Each press switches light-blue and white alternately.
  - The **ENTER** knob is functioning correctly if its on screen location “fills” in light-blue when the knob is pushed. Each push switches light-blue and white alternately. Rotate the **ENTER** knob clockwise to increase the value on [Rotary Encoder], counterclockwise to decrease the value.
  - Rotate the trackball to the right or down to increase the value on [Track Ball], to the left or up to decrease the value.
6. Press the **CANCEL** key three times to quit the test.
7. Press the **DISP** key to close the menu.

## 12.8.3 Test pattern

The test pattern checks the display colors.

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [6. TEST & MEMORY CLEAR].

4. Select [3. TEST PATTERN] to start the display test. Each push of the **ENTER** knob changes the LCD pattern in the sequence shown below.

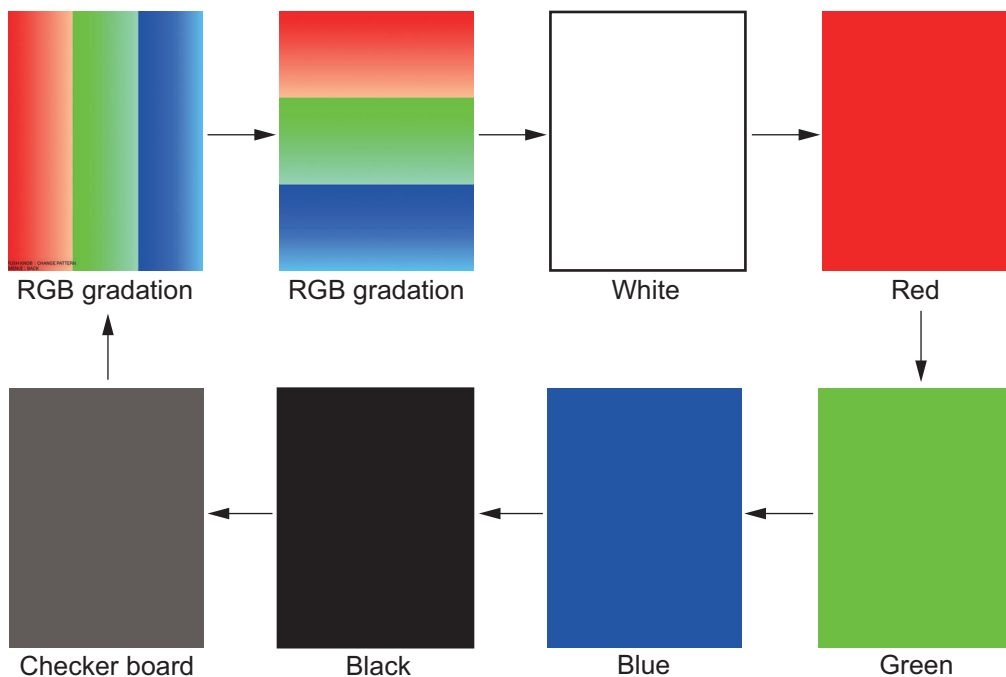

5. Press the **DISP** key to close the test screen and the menu.

## 12.9 How to Clear the Memory

The user settings can be cleared to restart operation with default settings. Also, you can delete user data (tracks, marks, waypoints and routes) or all screenshot data.

### 12.9.1 How to restore the settings

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [6. TEST & MEMORY CLEAR].
4. Select [4. MEMORY CLEAR] to show the following message.

 


5. Select [RUN] to restore the settings. The equipment automatically restarts.

### 12.9.2 How to delete all screenshot data

1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [6. TEST & MEMORY CLEAR].


4. Select [5. SCREENSHOT CLEAR] to show the following message.



5. Select [RUN] to delete all screenshot data. The message "DELETION COMPLETED" appears.
6. Push the **ENTER** knob.
7. Press the **DISP** key to close the menu.

### 12.9.3 How to delete user data

 1. Press the **MENU** key to open the main menu.
2. Select [0. SYSTEM SETTING].
3. Select [6. TEST & MEMORY CLEAR].
4. Select [9. CLEAR USER DATA] to show the following message.



5. Select [RUN] to delete the user data. The message "DELETION COMPLETED" appears.
6. Push the **ENTER** knob.
7. Press the **DISP** key to close the menu.


## 12. MAINTENANCE, TROUBLESHOOTING

This page is intentionally left blank.


# APPENDIX 1 MENU TREE


MENU key

**Bold italic:** Default

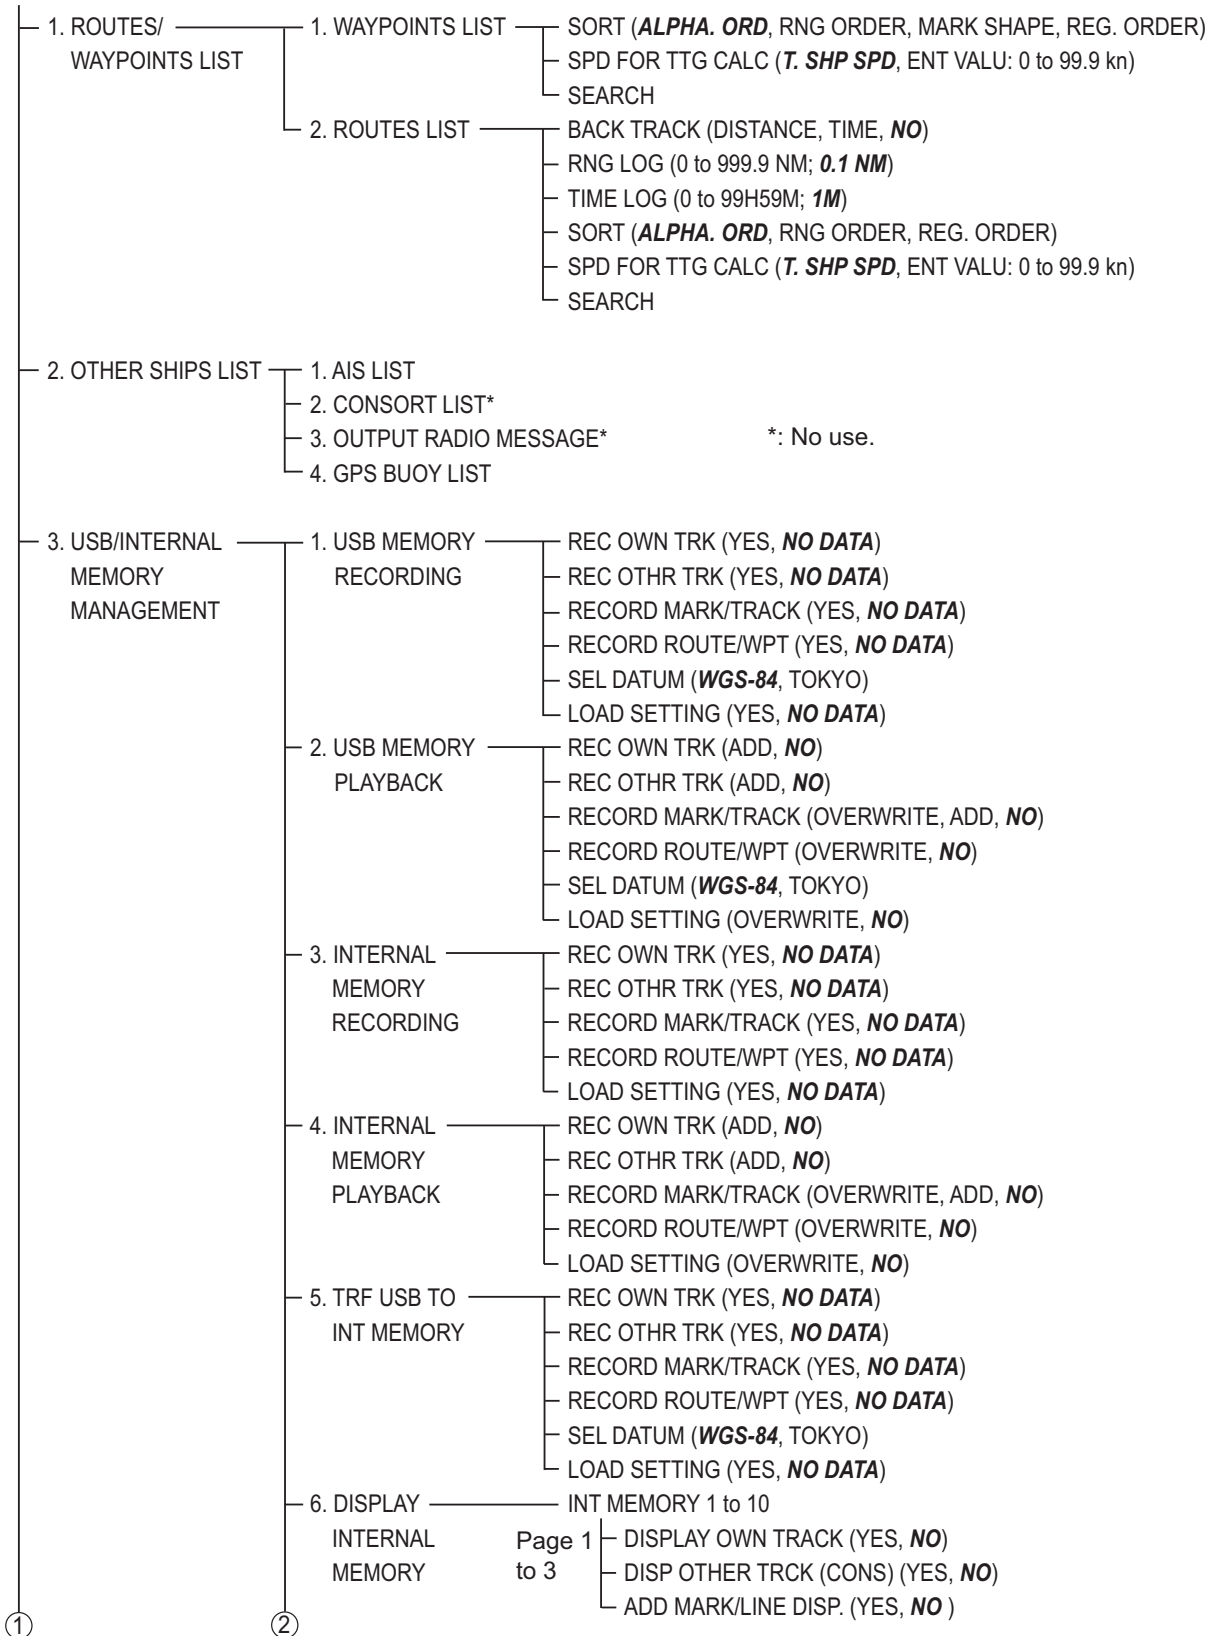


APPENDIX 1 MENU TREE

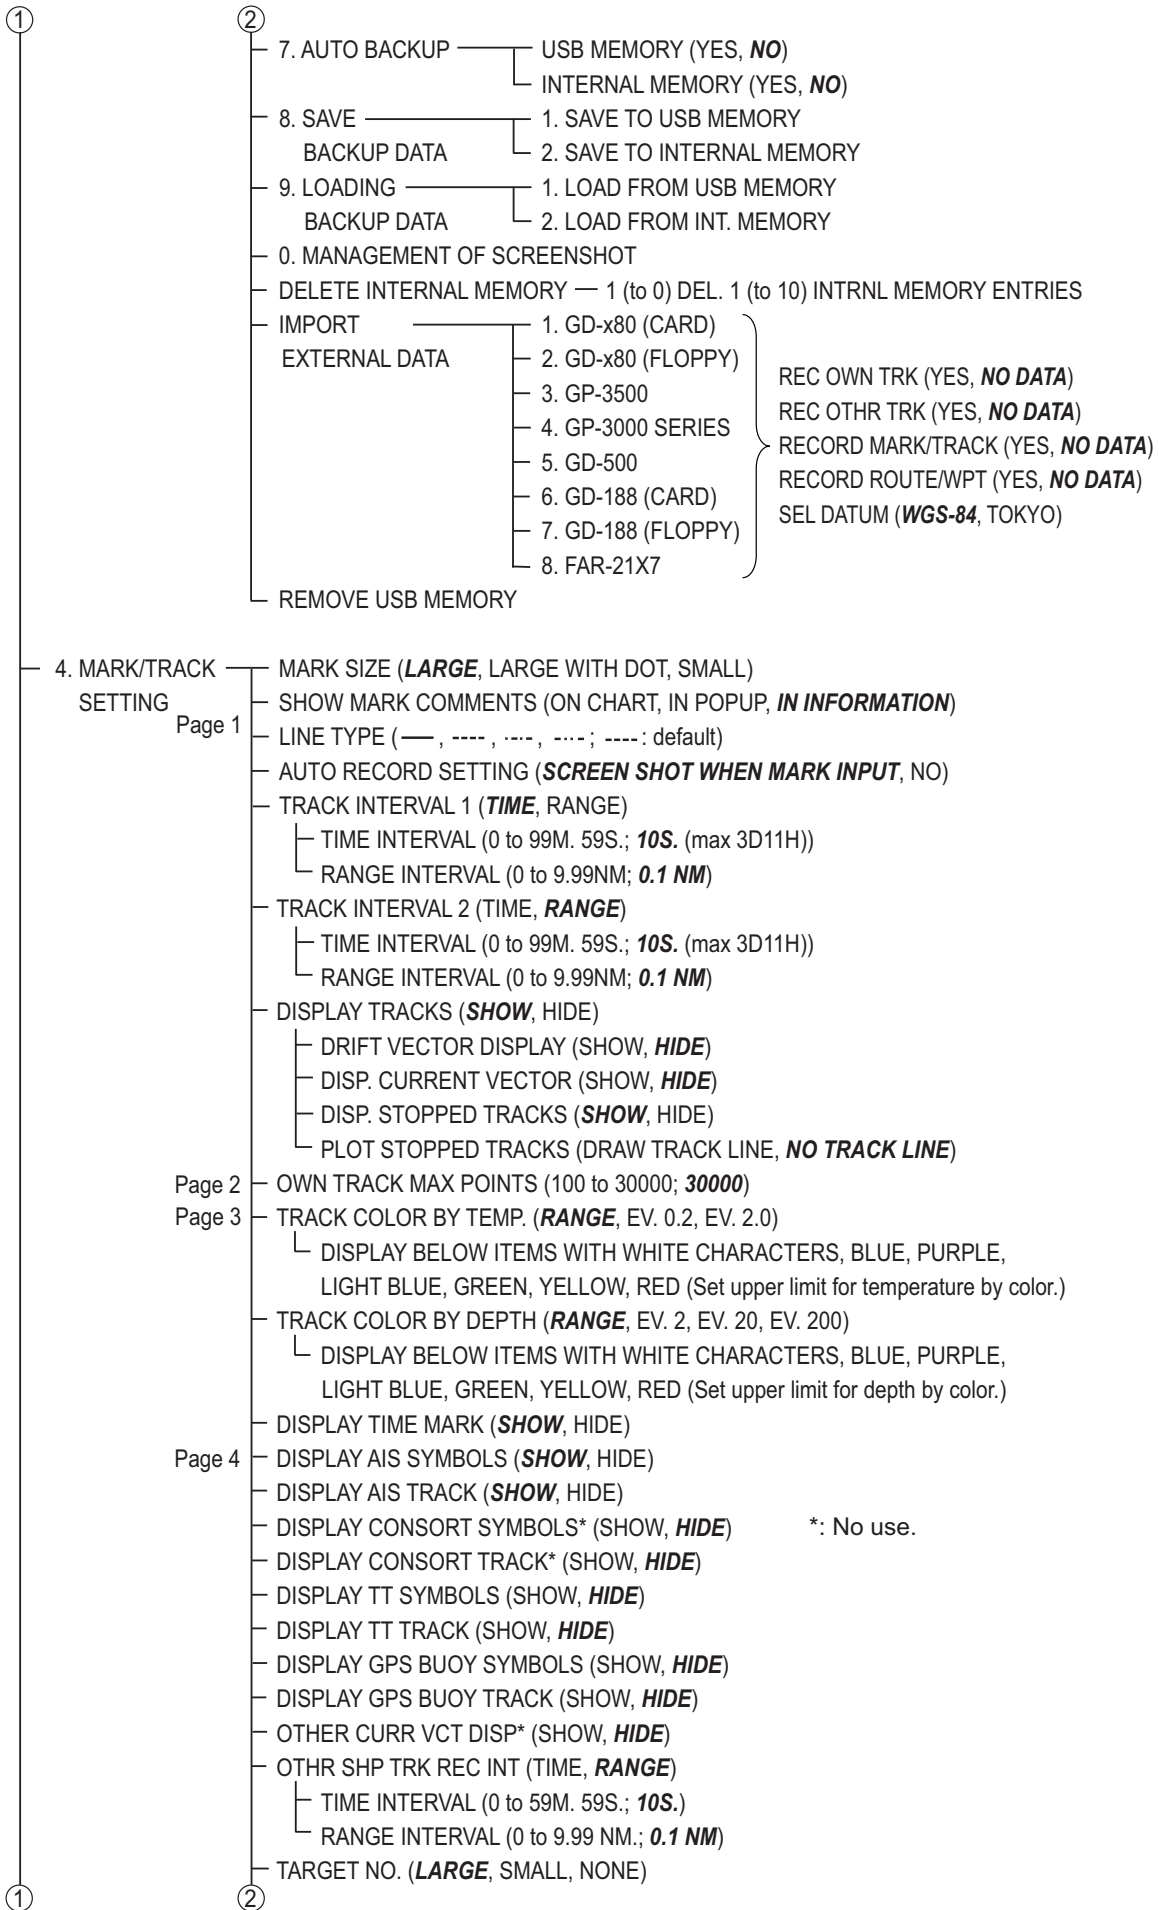


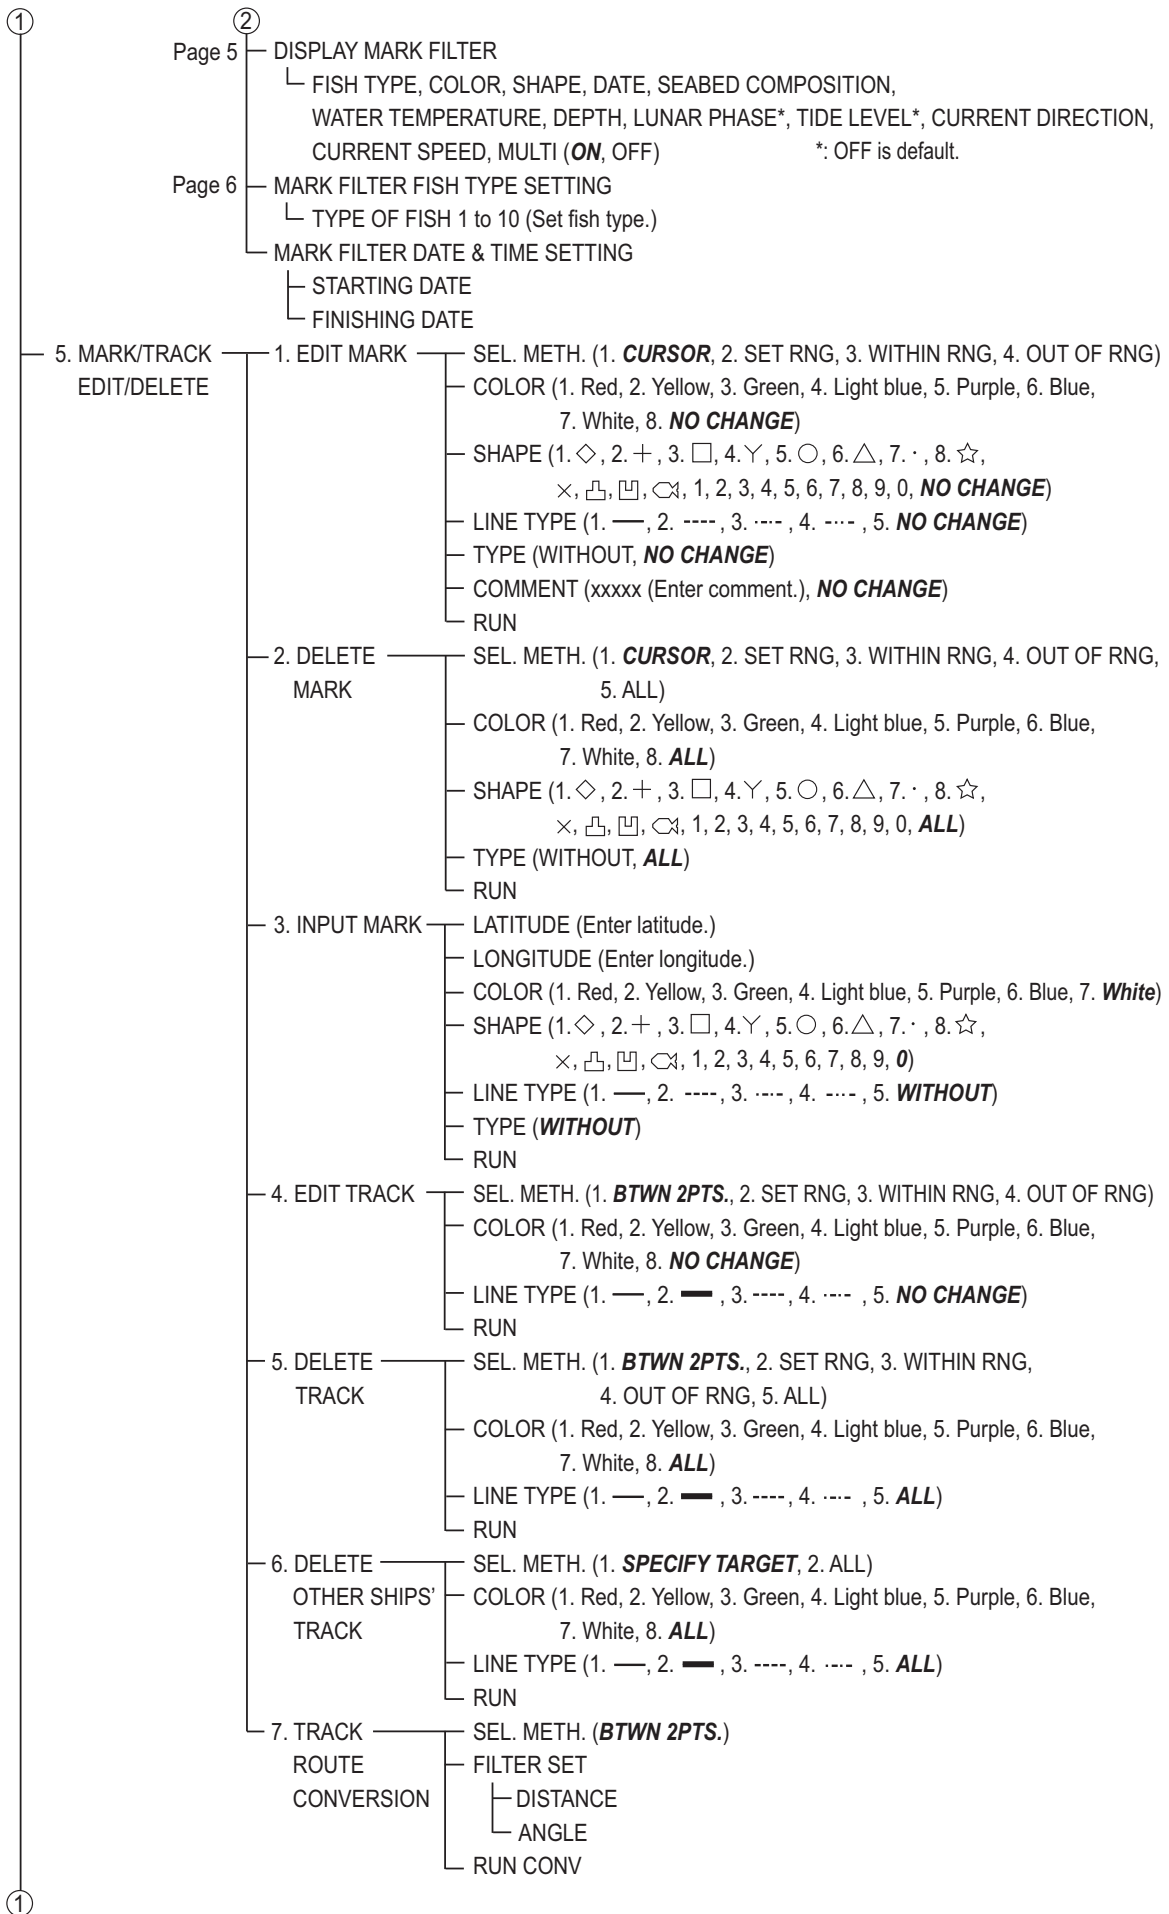


APPENDIX 1 MENU TREE

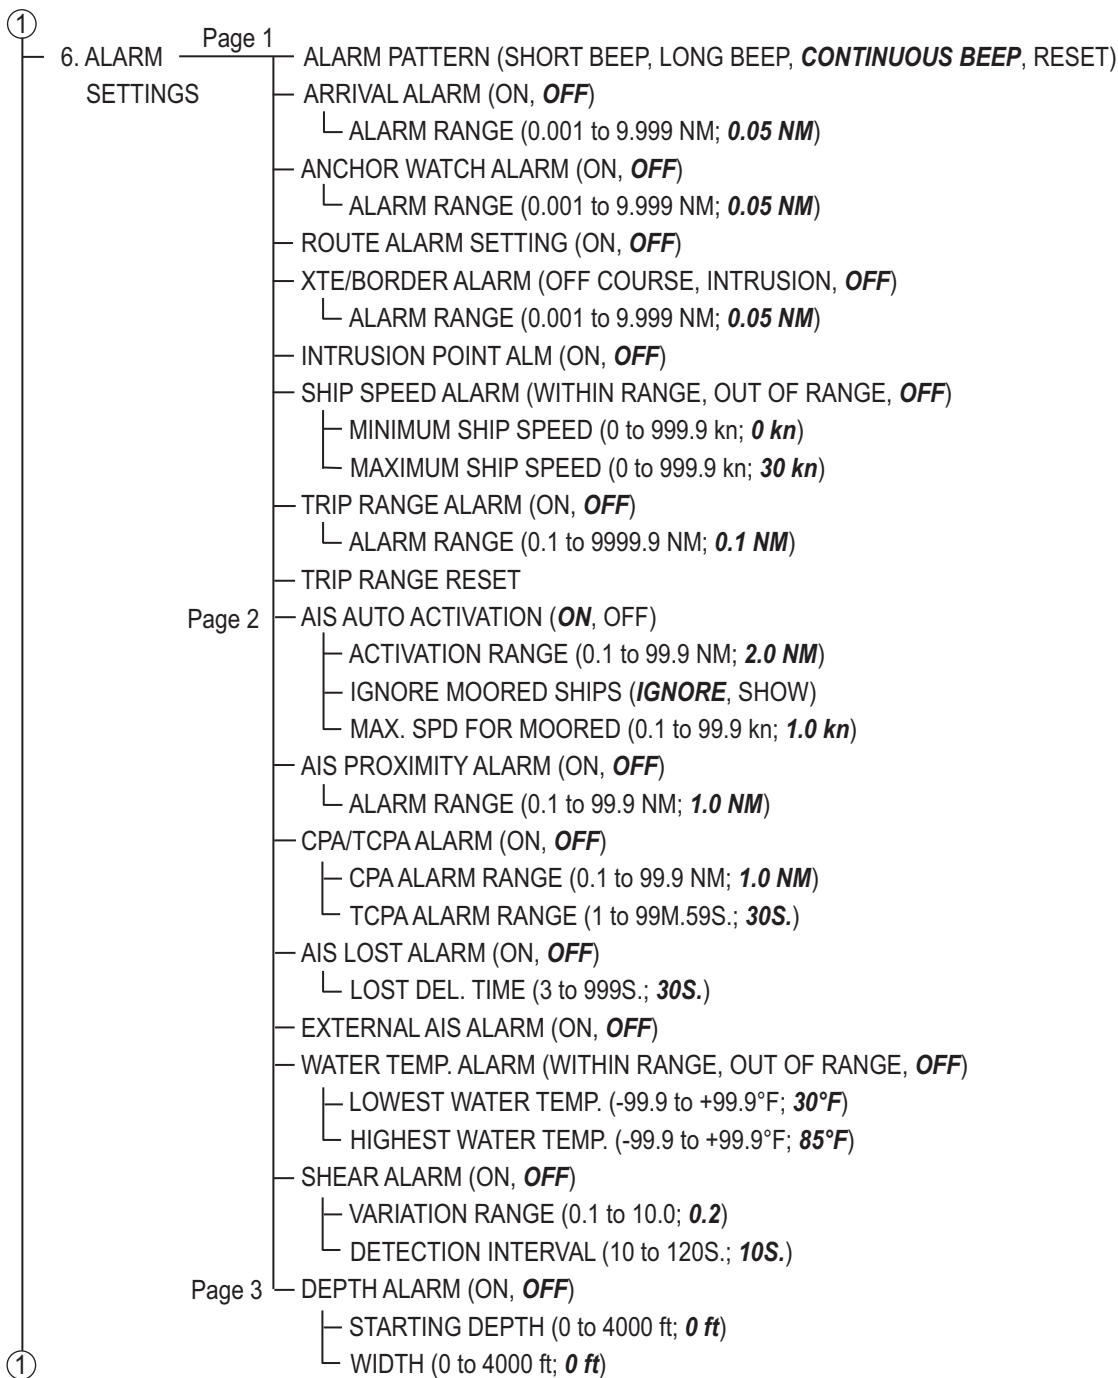




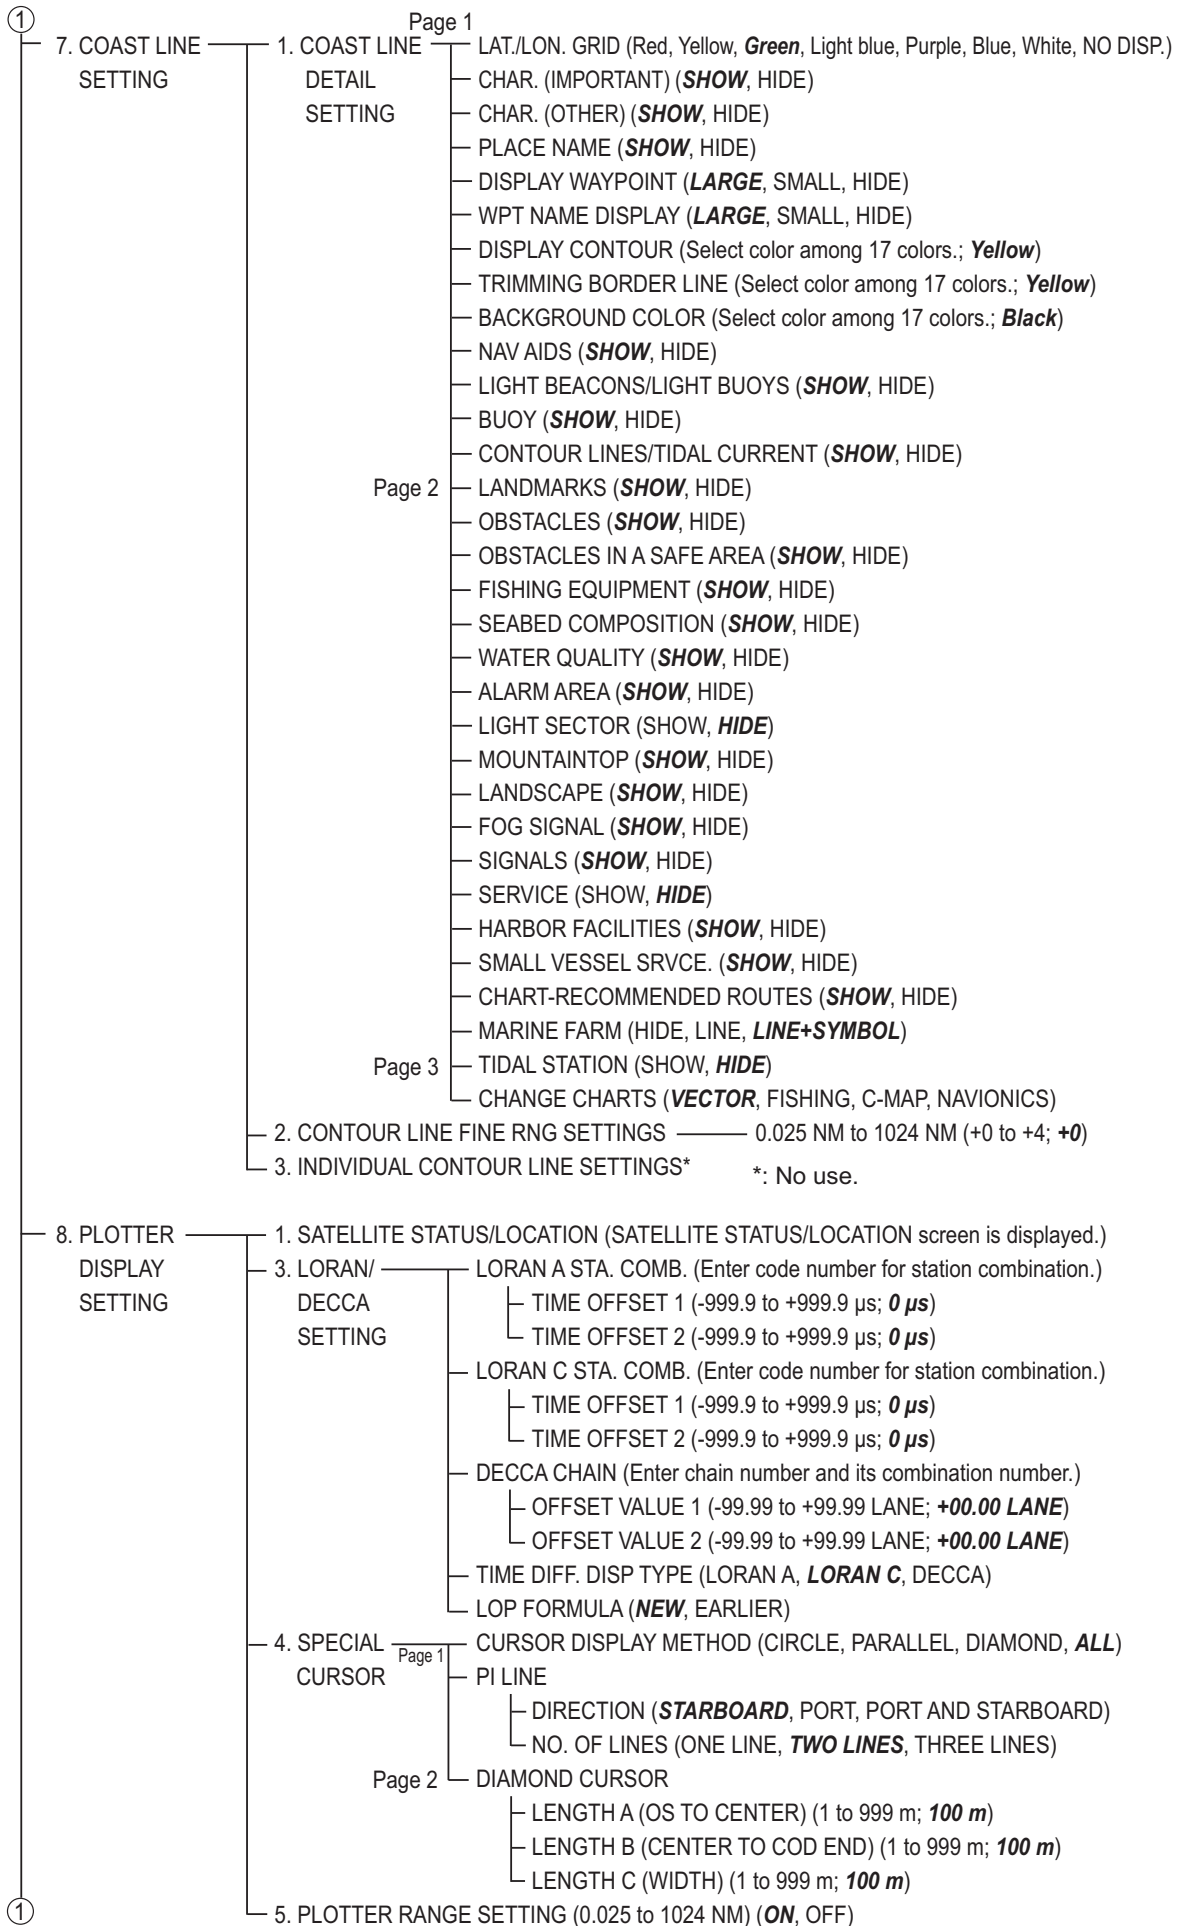



APPENDIX 1 MENU TREE

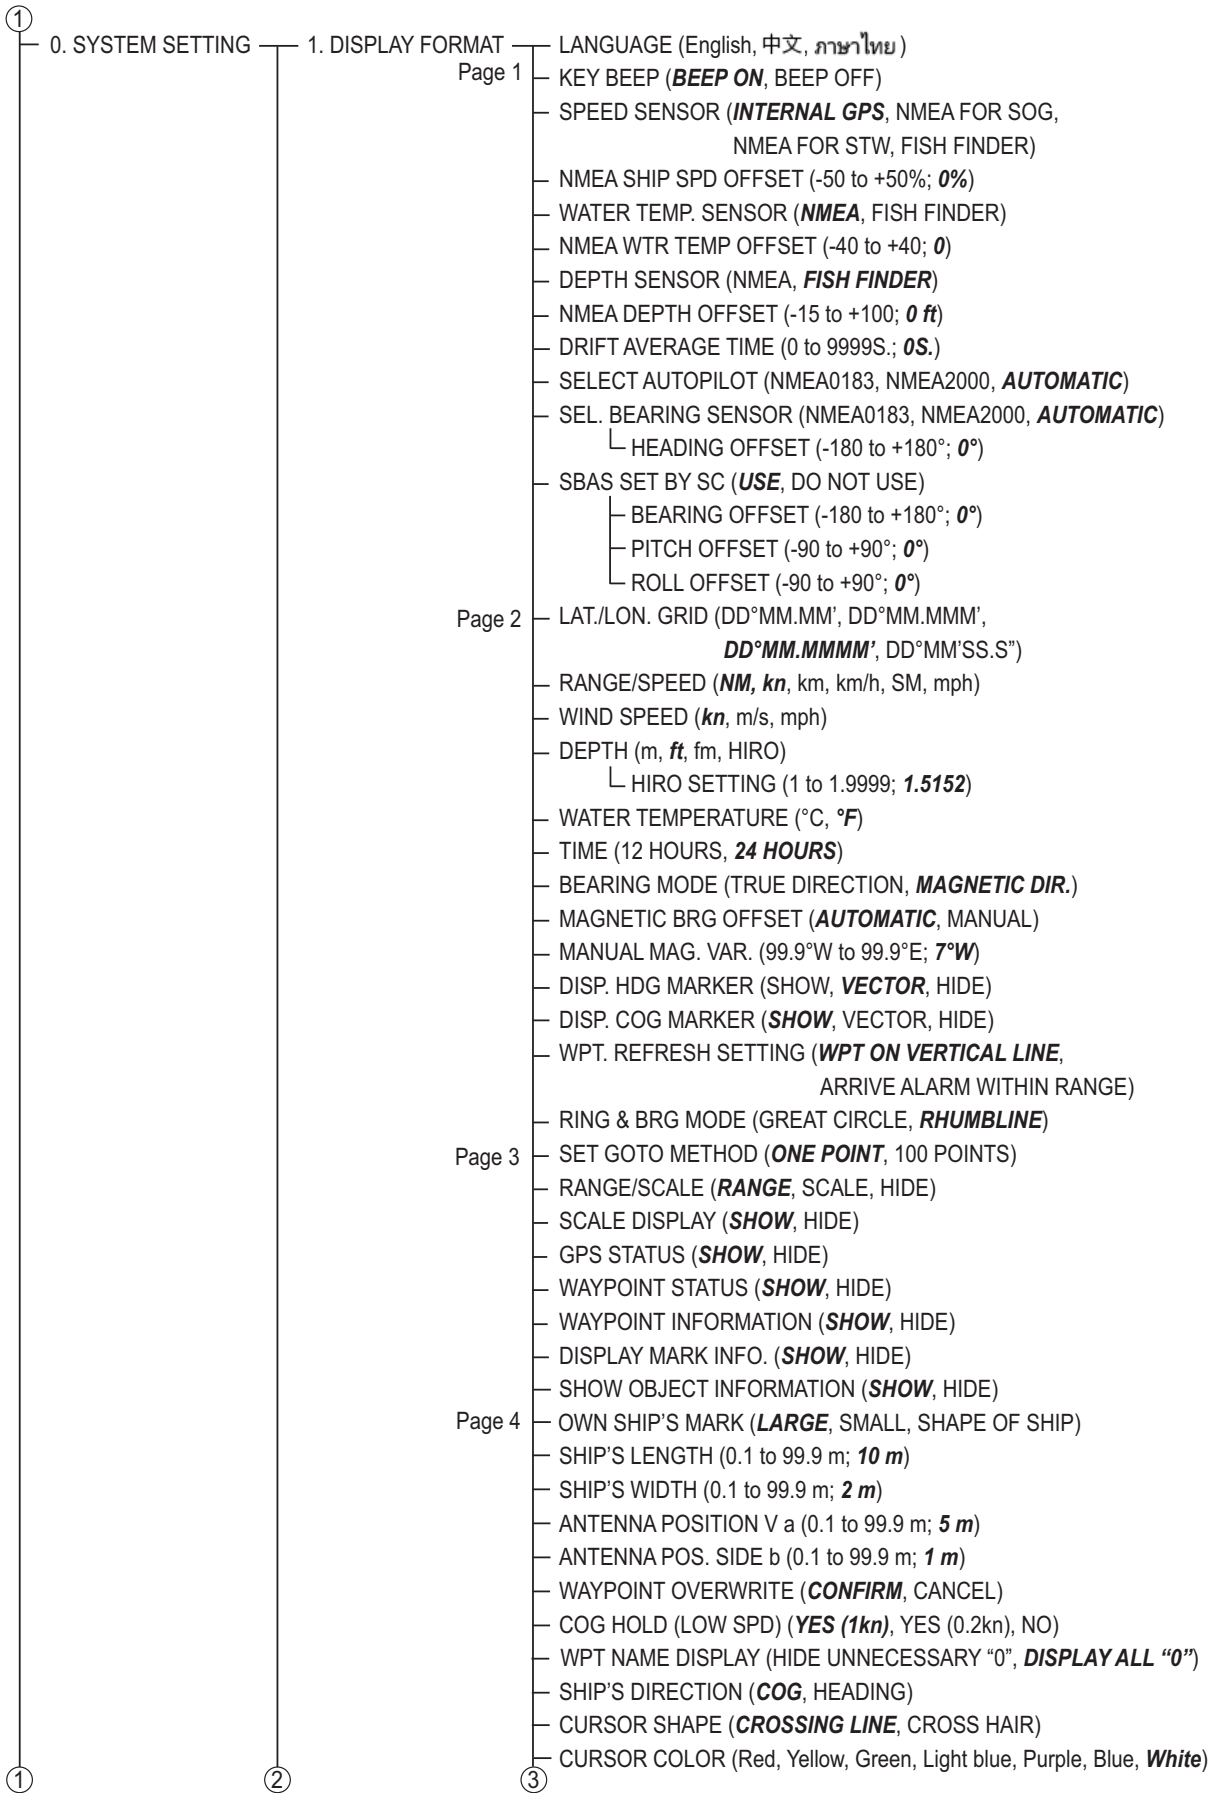


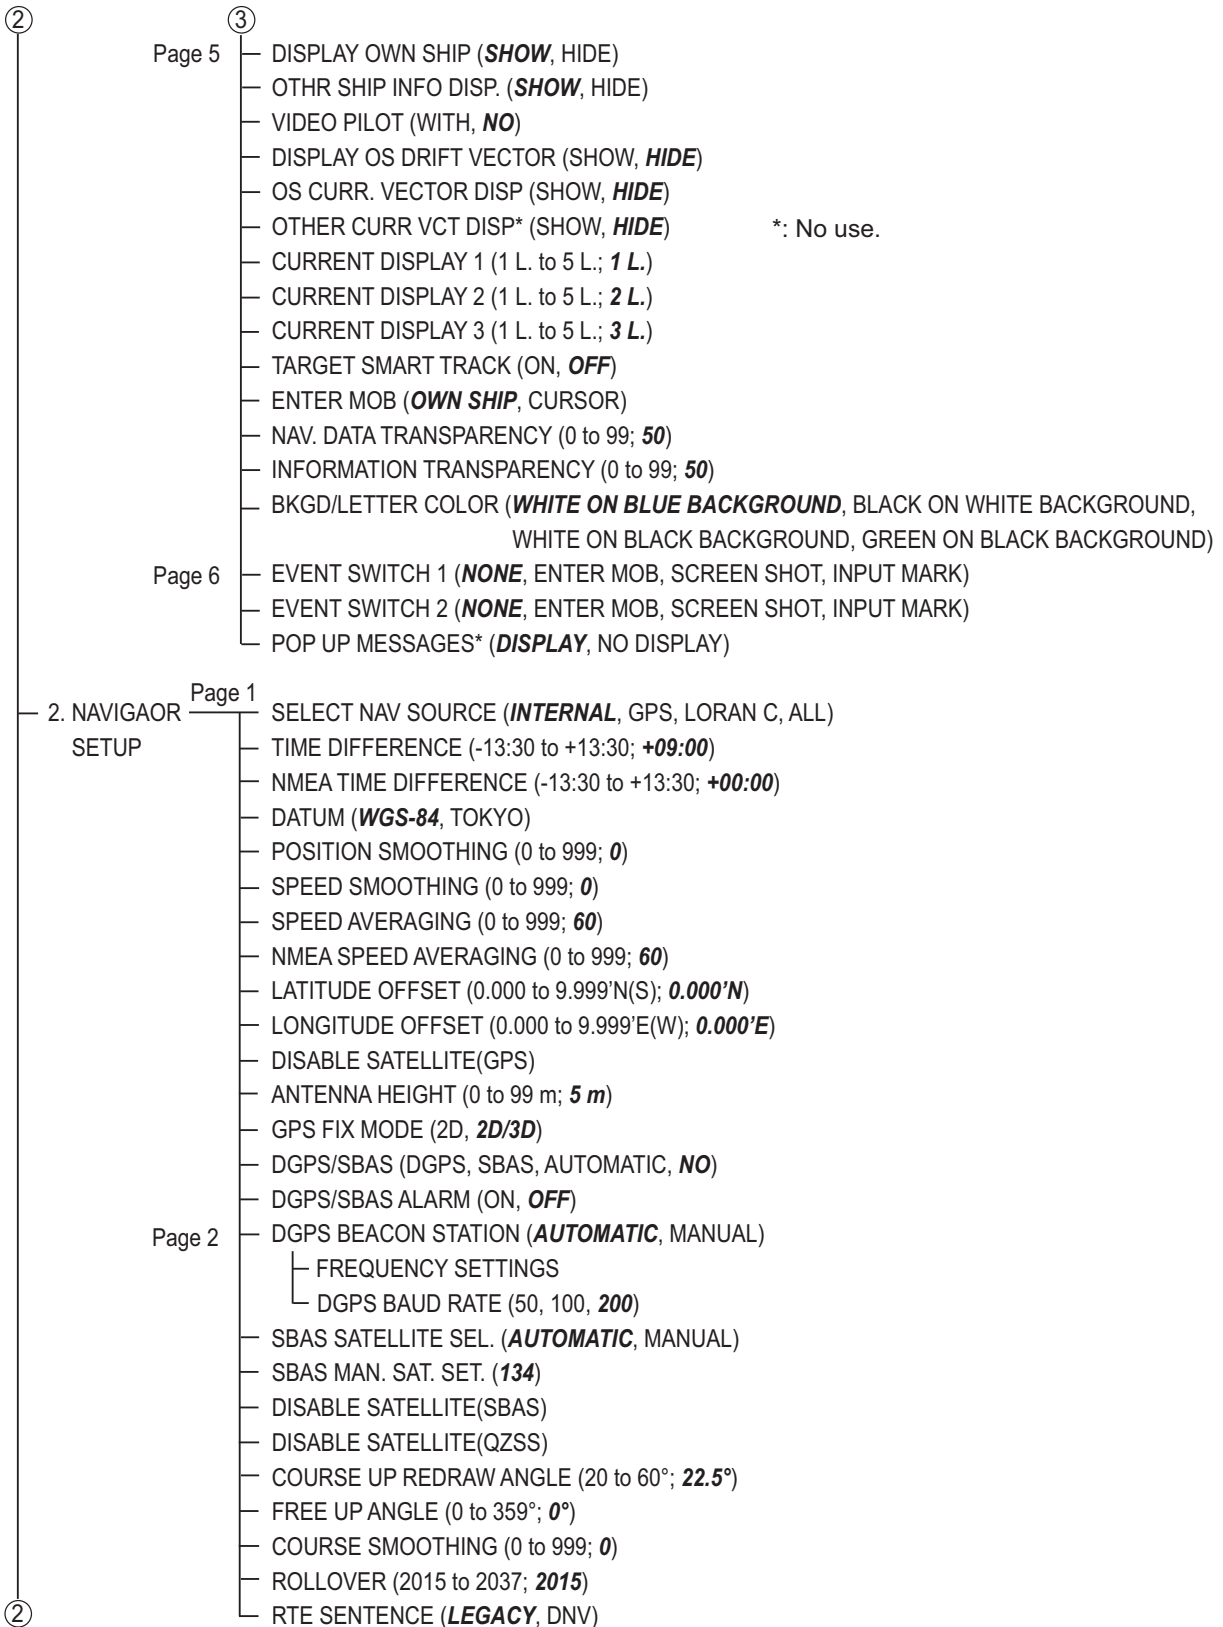




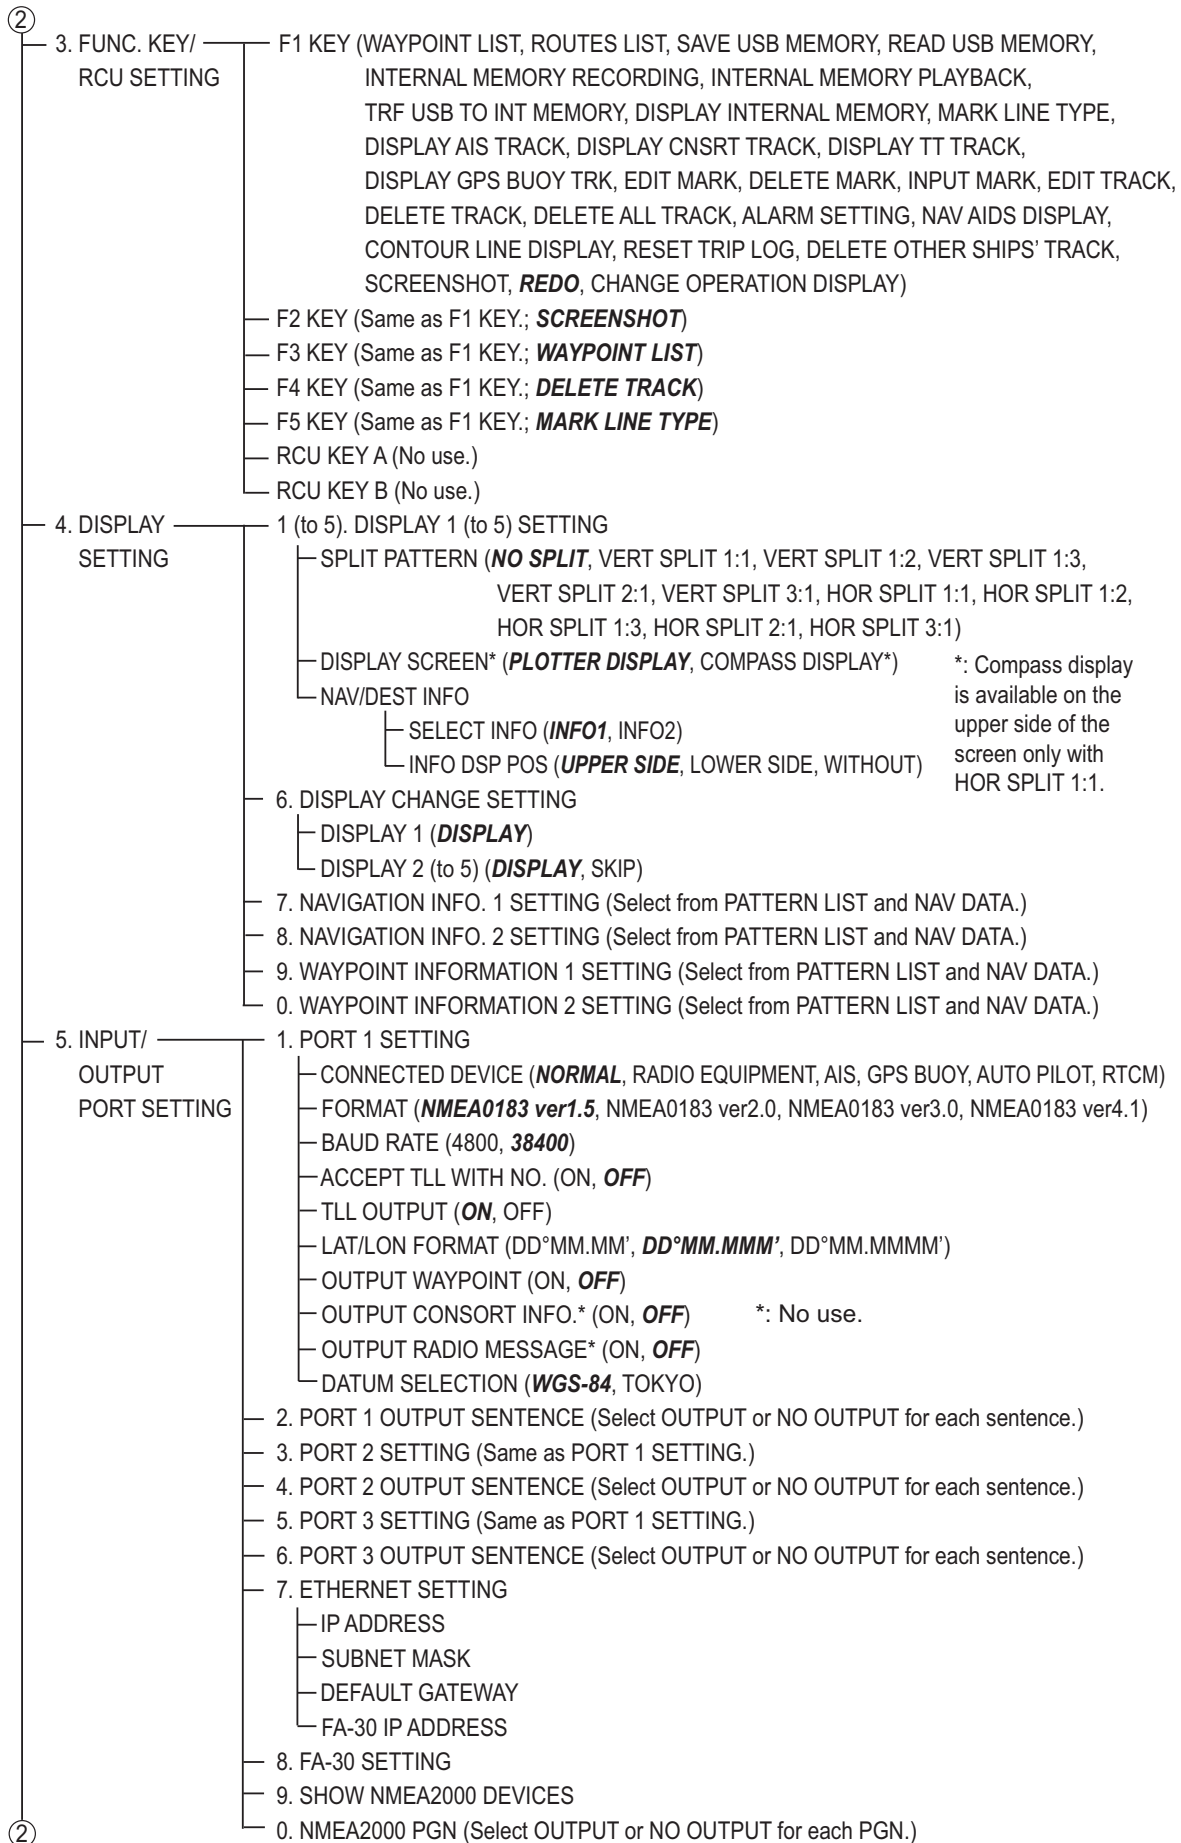

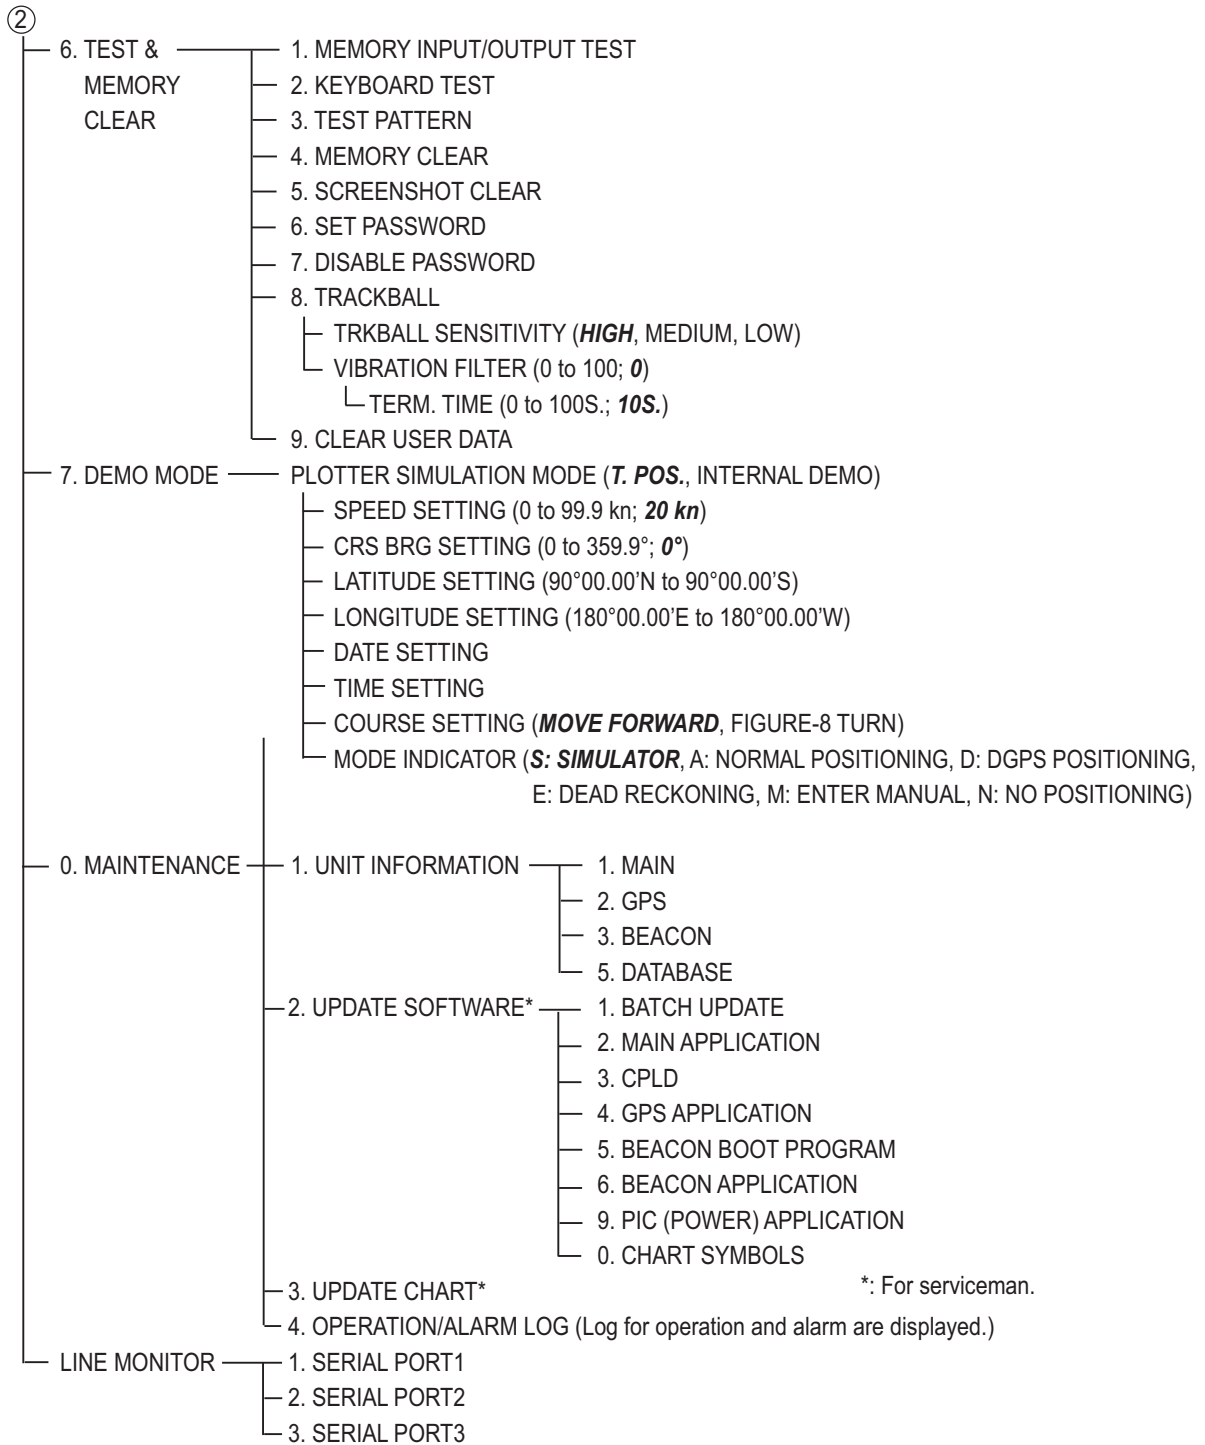



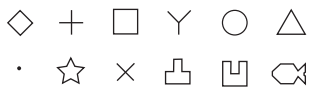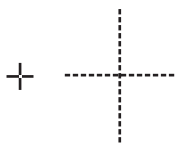








APPENDIX 1 MENU TREE






# APPENDIX 2 ICONS

Icon	Meaning
	Mark
	Cursor (left: crossing line, right: cross-hair)
	Own ship (during track recording: filled, during stopping track recording: empty)
	MOB (left: normal (own ship position), middle: small (own ship position), right: cursor position)
	North mark
	TLL symbol (as an waypoint)
	State of chart (left: suitable chart scale, middle: unsuitable chart scale, right: no chart file)
	Shape of mark (left: numeral, right: graphic) <b>Note:</b> When excess points are culled, the icon color changes from white to yellow (see page 2-1).
	Latitude and longitude position offset applied.
	Track is not being recorded.
	Voyage-based route is being created.
	Track interval
	Alarm
	Currently active screen
	Demo mode
	Wind direction
	Tidal station (Its appearance changes according to the tide height.)
	XTD (cross track distance) on the compass display
	Direction to steer on the compass display

# APPENDIX 3 TIME DIFFERENCES

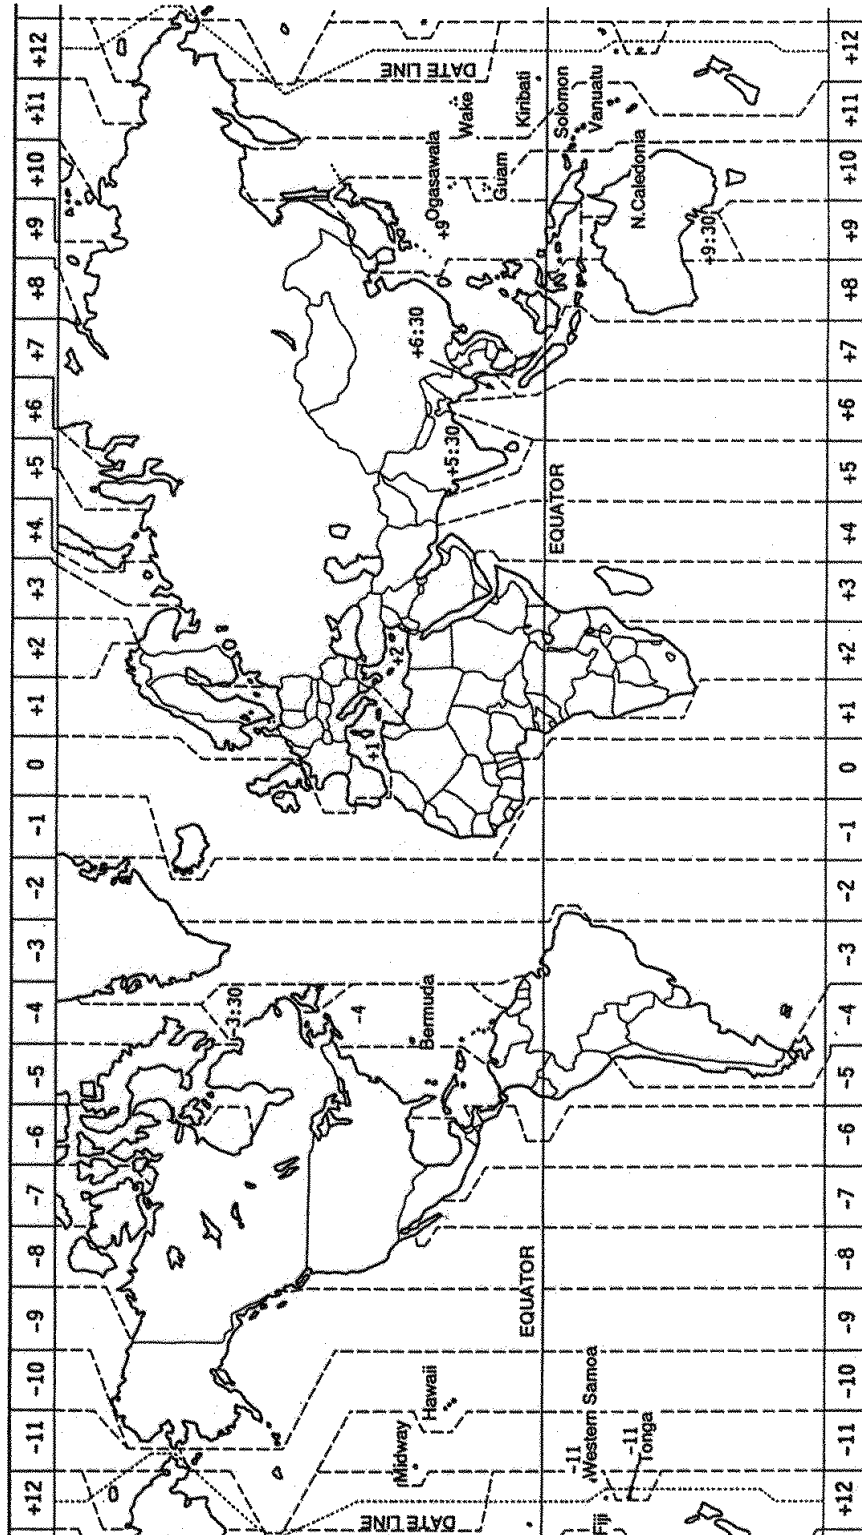


# APPENDIX 4 WHAT IS SBAS?

A satellite based augmentation system, or SBAS (Satellite Based Augmentation System), is an augmentation system that uses additional messages from satellite broadcasts to support regional and wide area augmentation. SBAS provides GPS signal corrections to SBAS users, for even better position accuracy, through the GPS error corrections that are widely broadcasted from the geostationary satellite.

SBAS is used in America, Europe, Japan and India.

- America: WAAS (Wide Area Augmentation System)
- Europe: EGNOS (Euro Geostationary Navigation Overlay Service)
- Japan: MSAS (Multi-Functional Satellite Augmentation System)
- India: GAGAN (GPS And GEO Augmented Navigation)

These four systems have interoperability. The illustration below shows the coverage area for each provider. This manual uses "SBAS" for these four providers generically.

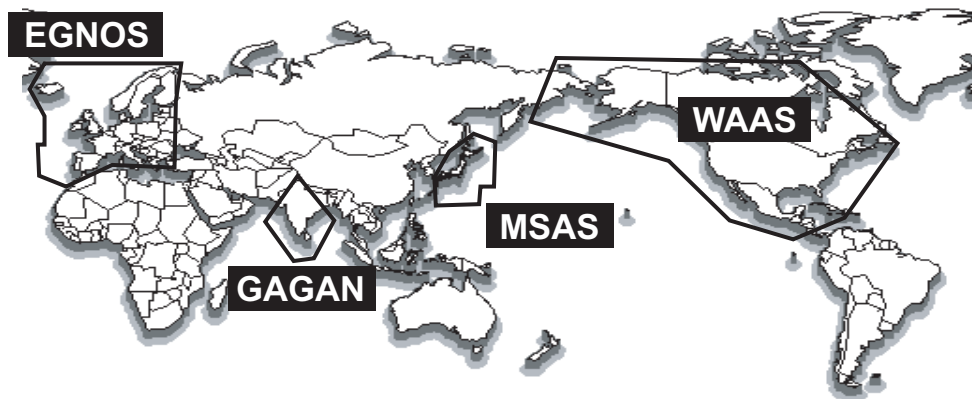

Provider	Satellite type	Longitude	Satellite No.
WAAS	Intelsat Galaxy XV	133°W	135
	TeleSat Anik F1R	107.3°W	138
	Inmarsat-4-F3	98°W	133
EGNOS	Inmarsat-3-F2/AOR-E	15.5°W	120
	Inmarsat-4-F2	25°E	126
	SES-5	5°E	136
MSAS	MTSAT-1R	140°E	129
	MTSAT-2	145°E	137
GAGAN	GSAT-8	55°E	127
	GSAT-10	83°E	128

As of March 6th, 2014



# APPENDIX 5 ALARM LIST

When an alarm occurs, the alarm icon and type appear at the bottom of the screen. When turning on the audio alarm, the buzzer sounds (see section 8.1). Also, when setting [ALARM] to display in the NAV information box, the alarm title appears in the box (see section 1.4.4 and section 2.1.2).

The table below shows the alarm title, meaning and remedy for each alarm. You may silence the buzzer by pressing the **CANCEL** key.

Title (indication in the information box)	Meaning	Remedy
POSN N/A	No calculation of position. The signal from GPS core is not received for three seconds.	Restart the GP-3700. If the alarm occurs again, contact your dealer.
NO FIX	No positioning data.	If the same state continues for five minutes, contact your dealer.
DGPSLOST	The positioning system turns from DGPS (or SBAS) to GPS (see [DGPS/SBAS ALARM] on page 9-16).	If this condition frequently occurs in the service area of the Beacon stations or the SBAS satellites, contact your dealer.
ARRIVAL	Your vessel is approaching a destination waypoint (see section 8.2).	-
DEPARTURE	Your vessel is moving when it should be at rest (see section 8.2).	Confirm own ship location and adjust as necessary.
XTE ERR	Your vessel is off its intended course (see section 8.4).	Check course and adjust as necessary.
INTRUSION	Your vessel crosses the area defined by the two waypoints (see section 8.4).	Check course and adjust as necessary.
SPEC OBJ	Your vessel nears a waypoint by the distance set for that waypoint on the waypoints list (see section 8.5 and section 5.1.3).	Confirm the proximity waypoint.
SPEED	Your boat's speed is within the speed range set (see section 8.6).	Check own ship's speed and adjust as necessary.
SPEED	Your boat's speed is over the speed range set (see section 8.6).	Check own ship's speed and adjust as necessary.
TRIP	You have traveled a certain distance (see section 8.7).	Reset the trip distance as necessary.
AIS PROX.	The range between an AIS target and your ship is within the preset setting (see section 11.5.2).	Confirm the location of the approximate AIS target.
CPA/TCPA	AIS/TT target is within CPA/TCPA threshold (see section 11.5.3).	Take evasive action if necessary. Adjust CPA/TCPA settings.
AIS LOST	AIS target is lost (see section 11.5.4).	Confirm the lost target and re-acquire it as necessary.
EXT. AIS	Something is wrong with the connected AIS unit (see section 11.5.5).	Check connection to AIS unit.
WTR TEMP	The water temperature is within the range set (see section 8.8),	-
WTR TEMP	The water temperature is higher or lower than the range set (see section 8.8).	-

APPENDIX 5 ALARM LIST

Title (indication in the information box)	Meaning	Remedy
CURRENT	The water temperature goes higher or lower than the preset value within the interval time set (see section 8.9).	-
DEPTH	The bottom echo is within the alarm range set (see section 8.10).	-

**SPECIFICATIONS OF COLOR GPS PLOTTER  
GP-3700**

**1 DISPLAY UNIT**

- 1.1 Display system 12.1-inch IPS color LCD, 246 x 184.5 mm
- 1.2 Resolution 800 x 600 (SVGA)
- 1.3 Brilliance 400 cd/m<sup>2</sup> typical
- 1.4 Projection Mercator
- 1.5 Usable area 85° latitude or below
- 1.6 Display mode Plotter, Compass, Satellite information, Tide graph

**2 GPS RECEIVER**

- 2.1 Receiving channels GPS: 12 channels, 12 satellite, parallel tracking  
SBAS: 2 channels  
QZSS: 2 channels
- 2.2 Rx frequency GPS: 1575.42 MHz
- 2.3 Rx code GPS/ SBAS: L1C/A
- 2.4 Position accuracy GPS: 10 m approx., 95% of the time, HDOP<4, 2 drms  
DGPS: 5 m approx., 95% of the time, 2 drms (optional kit required)  
SBAS: 7 m approx., 95% of the time, 2 drms
- 2.5 Tracking velocity 999 kn
- 2.6 Position-fixing time 90 s approx.
- 2.7 Position update interval 1 s
- 2.8 Beacon receiver (internal kit, option)
  - Frequency range 283.5 to 325.0 kHz
  - Channel interval 500 Hz
  - Baudrate 50, 100, 200 bps
  - Channel selection Auto or manual

**3 PLOTTER**

- 3.1 Effective projection area 0.025 to 1,024 NM (at equatorial area)
- 3.2 Track display Plot interval: by time (1s to 99m 59s) or distance (0.01 to 9.99 NM)
- 3.3 Memory capacity 1,100,000 points (recording memory 1 block + storage 10 block)
 

	<u>Number of point for one block</u>	<u>Maximum display points</u>
Own ship's track:	30,000 pts	3,000 pts
Mark/ line:	30,000 pts	3,000 pts
Other ship's track		
- Friend ship:	10,000 pts	1,000 pts
-TT:	10,000 pts	1,000 pts
-AIS:	10,000 pts	1,000 pts
-GPS buoy:	10,000 pts	1,000 pts
Waypoint	3,500 points with comment (QP 100 points)	
Route	200 routes and 1 simple route with 100 points each	
- 3.4 Alarms Arrival and Anchor watch, Cross track error and border, Point approach, Ship's speed in/out, Trip distance, Water temperature\*, Water depth\*, Tide\*, AIS approach/ vanishing, External AIS, CPA/TCPA, Differential positioning suspended  
\*: external data required
- 3.5 Electronic chart Mapmedia

- 3.6 Information display Ship's position (L/L), Ship's speed, Track color/type, Date and Time, Waypoint position, Range and bearing to destination waypoint, Cursor intersection L/L position, Range and bearing to cursor intersection, Water temperature and depth (sensor data required)

## 4 INTERFACE

- 4.1 Number of ports
- IEC61162-1 (NMEA) 3 ports, NMEA0183 V1.5/2.0/3.0/4.1, 4800/38400 bps
  - LAN 1 port, Ethernet, 100base-TX
  - USB 2 ports, USB2.0, Type-A (for control unit connection/ maintenance)
  - NMEA2000 1 port
  - External speaker 1 port, 5W/4 ohm (no use)
  - External video output 1 port, Analog VGA
  - Contact closure BK: 1 port, Event switch: 2 ports
- 4.2 Data Sentences
- Input ALR, BLV, CRQ, CUR, DBK, DBS, DBT, DPT, GGA, GLL, GNS, HDG, HDM, HDT, MSK, MTW, MWV, RMA, RMB, RMC, THS, TLL, TTM, VDM, VDR, VHW, VTG, VWR, VWT, ZDA
  - Output AAM, APB, BOD, BWC/BWR, DBT/DPT, DTM, GGA, GLL, GNS, GSA, GSV, GTD, HDG, HDT, MSK, MSS, MTW, MWV, RMA, RMB, RMC, RTE, THS, TLL, TTM, VHW, VTG, WPL, XTE, ZDA
- 4.3 Output proprietary sentences
- PFEC drcmd, pidat
- 4.4 NMEA2000 PGN
- Input 059392/904, 060928, 061184, 126208/464/720/996, 127237/250, 129538, 130577/816/817/818/819/820/821/827
  - Output 059392/904, 060928, 061184, 126208/464/720/992/993, 127258, 128267/275, 129025/026/029/033/283/284/285/538/539, 130822/823/827

## 5 POWER SUPPLY

12-24 VDC (10.8-31.2 V): 2.5-1.3 A

## 6 ENVIRONMENTAL CONDITIONS

- 6.1 Ambient temperature
- Antenna unit -25 °C to + 70 °C
  - Display unit -15 °C to + 55 °C
- 6.2 Relative humidity 93% or less (+40°C)
- 6.3 Degree of protection
- Antenna unit IP56
  - Display/ Control unit IP22
- 6.4 Vibration IEC 60945 Ed.4

## 7 UNIT COLOR

- 7.1 Antenna unit N9.5 (white)
- 7.2 Display unit N2.5

# INDEX

---

## A

- AC up mode angle ..... 9-18
- Active screen..... 1-9
- AIS
  - activated target..... 11-2
  - automatic activation ..... 11-6
  - CPA/TCPA alarm ..... 11-7
  - external AIS alarm..... 11-8
  - list..... 11-5
  - lost alarm..... 11-7
  - proximity alarm..... 11-6
  - recording track ..... 11-3
  - showing/hiding track..... 11-3
  - sleeping target..... 11-2
  - symbol color ..... 11-3
  - symbols ..... 11-1
  - target data ..... 11-4
  - track color..... 11-3
  - track line type ..... 11-3
- Alarm list ..... AP-13
- Alphanumeric data entry ..... 1-10
- Anchor watch alarm ..... 8-3
- Antenna height..... 9-16
- Arrival alarm ..... 8-3
- Audio alarm pattern..... 8-2
- Autopilot selection ..... 9-9

## B

- Background color ..... 9-2, 9-14
- Bearing mode..... 9-10
- Bearing offset..... 9-9
- Bearing sensor ..... 9-9
- Border alarm ..... 8-4
- Brilliance..... 1-4

## C

- Character display ..... 9-1
- Chart icons ..... 2-12
- Chart scale ..... 2-6
- Chart type..... 9-3
- Compass display ..... 2-3
- Controls
  - Display unit..... 1-1
  - Trackball control unit RCU-030 ..... 1-3
- Course marker ..... 9-11
- Course smoothing ..... 9-18
- Current display ..... 9-14
- Current vector
  - on own ship mark ..... 9-14
  - own ship track ..... 3-3
- Cursor
  - color ..... 9-13
  - Configuration ..... 2-10
  - operation ..... 2-6
  - shape ..... 9-13

## D

- Datum..... 9-15
- DECCA..... 9-7
- Demo mode..... 1-13
- Depth alarm..... 8-8
- Depth contour..... 9-4
- Depth sensor ..... 9-9
- Destination
  - quick point ..... 7-1
  - route ..... 7-6
  - skip waypoint..... 7-6
  - stop navigation ..... 7-8
  - waypoint ..... 7-4
  - waypoint switching method ..... 7-7
- Destination information ..... 1-8
- DGPS
  - baud rate ..... 9-17
  - beacon station ..... 9-17
- DGPS/SBAS
  - alarm ..... 9-16
  - position-fixing ..... 9-16
- Disable satellite
  - GPS..... 9-16
  - QZSS ..... 9-18
  - SBAS..... 9-18
- Display setting ..... 1-5
- Display shifting ..... 2-8
- Display skipping ..... 1-7
- Display switching..... 1-5
- Drift average time..... 9-9
- Drift vector
  - own ship track ..... 3-4
- Drift vector on own ship mark..... 9-14

## E

- Ethernet setting ..... 9-20
- Event switch ..... 9-14

## F

- FA-30 setting ..... 9-21
- Free up angle ..... 9-18
- Function keys ..... 1-12
- Fuse replacement ..... 12-2

## G

- GPS buoy list ..... 3-16
- GPS fix mode ..... 9-16

## H

- Heading marker..... 9-11
- Heading offset..... 9-9

## I

- Icon list ..... AP-10
- Internal memory
  - automatic backup ..... 10-10

## INDEX

- display ..... 10-3
- erasing ..... 10-5
- loading backup data ..... 10-11
- manual backup ..... 10-10
- playback ..... 10-4
- recording ..... 10-1
- Intrusion point alarm ..... 8-5
- K**
- Key beep ..... 9-9
- Keyboard test ..... 12-7
- L**
- Land color ..... 9-2
- Language ..... 9-9
- Latitude/longitude
  - display format ..... 9-10
  - grid ..... 9-1
  - offset ..... 9-16
- Letter color ..... 9-14
- Line
  - editing ..... 4-7
  - entering ..... 4-5
  - erasing ..... 4-6
  - type ..... 4-2
- Line monitor ..... 9-25
- Loading data from other equipment ..... 10-13
- Log (operation/alarm) ..... 12-5
- LOP formula ..... 9-7
- Loran A ..... 9-5
- Loran C ..... 9-5
- M**
- Magnetic bearing offset ..... 9-10
- Main menu overview ..... 1-9
- Maintenance ..... 12-1
- Mark
  - color ..... 4-1
  - editing ..... 4-7
  - entering ..... 4-3
  - erasing ..... 4-6
  - filter ..... 4-10
  - fish type ..... 4-3
  - information ..... 4-9
  - size ..... 4-2
- Measurement
  - range and bearing between two points ..... 2-9
- Memory clear ..... 12-8
- Memory I/O test ..... 12-6
- Menu tree ..... AP-1
- MOB operations ..... 1-11
- MOB position ..... 9-14
- N**
- NAV aids ..... 9-2
- NAV information
  - box ..... 2-2
  - setting ..... 1-8
- NMEA
  - depth offset ..... 9-9
- device information ..... 9-22
- PGN setting ..... 9-22
- speed averaging ..... 9-16
- speed offset ..... 9-9
- time difference ..... 9-15
- water temperature offset ..... 9-9
- Numeric data entry ..... 1-10
- O**
- Orientation mode ..... 2-7
- Other ship information ..... 3-15
- Other ship's symbol (showing/hiding) ..... 3-3
- Other ship's track
  - color ..... 3-9
  - erasing ..... 3-18
  - line type ..... 3-10
  - plotting intervals ..... 3-11
  - showing/hiding ..... 3-3
- Output setting ..... 9-18
- Own ship information ..... 3-14
- Own ship mark size ..... 9-12
- Own ship track
  - color ..... 3-6
  - editing ..... 3-13
  - erasing ..... 3-11
  - line type ..... 3-9
  - plotting intervals ..... 3-10
  - plotting method ..... 3-10
  - recording ..... 3-4
  - showing/hiding ..... 3-1
- P**
- Password
  - cancel ..... 9-24
  - change ..... 9-23
  - setting ..... 9-23
- Pitch offset ..... 9-10
- Place name display ..... 9-1
- Plotter display ..... 2-1
- Position data source ..... 9-15
- Position smoothing ..... 9-15
- Power on/off ..... 1-3
- R**
- Radar target position ..... 5-10
- Range (plotter display) ..... 9-8
- Range and bearing mode ..... 9-11
- Roll offset ..... 9-10
- Route
  - creating using own ship position ..... 6-3
  - creating with existing waypoints ..... 6-1
  - creating with selected tracks ..... 6-4
  - deleting ..... 6-6
  - editing ..... 6-5
  - searching ..... 6-6
  - speed for TTG calculation ..... 6-7
- Route alarm ..... 8-4
- RTE sentence ..... 9-18

**S**

Satellite display .....	2-4
SBAS.....	AP-12
SBAS satellite selection .....	9-17
Screenshot.....	10-12
Shear alarm.....	8-7
Ship speed alarm .....	8-5
Ship's direction.....	9-13
Ship's length.....	9-12
Ship's width .....	9-12
Simple calculation of drift .....	3-15
Speed averaging .....	9-16
Speed sensor .....	9-9
Speed smoothing .....	9-16

**T**

Target number.....	3-17
Target smart track .....	9-14
Test pattern .....	12-7
Time difference setting.....	9-15
Time differences.....	AP-11
Time display format.....	9-10
Trackball	
maintenance.....	12-2
replacement .....	12-2
sensitivity.....	9-24
Transparency	
information box.....	9-14
NAV data.....	9-14
Trimming border line .....	9-2
Trip range alarm.....	8-6
Troubleshooting .....	12-3

**U**

Unit	
depth .....	9-10
range .....	9-10
speed .....	9-10
water temperature .....	9-10
wind speed.....	9-10
Unit information .....	12-4
USB flash memory	
automatic backup .....	10-9
insert .....	10-5
loading backup data .....	10-11
manual backup.....	10-10
playback.....	10-7
recording .....	10-6
remove .....	10-6
transfer .....	10-8

**V**

Vlideo pilot .....	9-14
--------------------	------

**W**

Water temperature alarm .....	8-6
Water temperature sensor .....	9-9
Waypoint	
editing.....	5-7
entering at cursor position .....	5-1

entering at own ship position.....	5-1
entering by Decca LOPs .....	5-6
entering by latitude/longitude position .....	5-2
entering by Loran A/C LOPs .....	5-5
entering by range and bearing .....	5-4
erasing .....	5-8
information .....	5-9, 9-12
mark size.....	5-10
searching.....	5-8
speed for TTG calculation .....	5-9
Waypoint name display .....	9-2
Waypoint status.....	9-12

**X**

XTE alarm .....	8-4
-----------------	-----

# Declaration of Conformity

[GP-3700]

- Bulgarian (BG)** С настоящото Furuno Electric Co., Ltd. декларира, че гореспоменат тип радиосъоръжение е в съответствие с Директива 2014/53/ЕС.  
Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
- Spanish (ES)** Por la presente, Furuno Electric Co., Ltd. declara que el tipo de equipo radioeléctrico arriba mencionado es conforme con la Directiva 2014/53/UE.  
El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:
- Czech (CS)** Tímto Furuno Electric Co., Ltd. prohlašuje, že výše zmíněné typ rádiového zařízení je v souladu se směrnicí 2014/53/EU.  
Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
- Danish (DA)** Hermed erklærer Furuno Electric Co., Ltd., at ovennævnte radioudstyr er i overensstemmelse med direktiv 2014/53/EU.  
EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
- German (DE)** Hiermit erkläre die Furuno Electric Co., Ltd., dass der oben genannte Funkanlagentyp der Richtlinie 2014/53/EU entspricht.  
Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
- Estonian (ET)** Käesolevaga deklareerib Furuno Electric Co., Ltd., et ülalmainitud raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele.  
ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
- Greek (EL)** Με την παρούσα η Furuno Electric Co., Ltd., δηλώνει ότι ο προαναφερθέντας ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ.  
Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
- English (EN)** Hereby, Furuno Electric Co., Ltd. declares that the above-mentioned radio equipment type is in compliance with Directive 2014/53/EU.  
The full text of the EU declaration of conformity is available at the following internet address:
- French (FR)** Le soussigné, Furuno Electric Co., Ltd., déclare que l'équipement radioélectrique du type mentionné ci-dessus est conforme à la directive 2014/53/UE.  
Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
- Croatian (HR)** Furuno Electric Co., Ltd. ovime izjavljuje da je gore rečeno radijska oprema tipa u skladu s Direktivom 2014/53/EU.  
Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
- Italian (IT)** Il fabbricante, Furuno Electric Co., Ltd., dichiara che il tipo di apparecchiatura radio menzionato sopra è conforme alla direttiva 2014/53/UE.  
Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
- Latvian (LV)** Ar šo Furuno Electric Co., Ltd. deklarē, ka augstāk minēts radioiekārta atbilst Direktīvai 2014/53/ES.  
Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:



Lithuanian (LT)	Aš, Furuno Electric Co., Ltd., patvirtinu, kad pirmiau minėta radijo įrenginių tipas atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
Hungarian (HU)	Furuno Electric Co., Ltd. igazolja, hogy fent említett típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:
Maltese (MT)	B'dan, Furuno Electric Co., Ltd., niddikjara li msemmija hawn fuq-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:
Dutch (NL)	Hierbij verklaar ik, Furuno Electric Co., Ltd., dat het hierboven genoemde type radioapparaat conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
Polish (PL)	Furuno Electric Co., Ltd. niniejszym oświadczam, że wyżej wymieniony typ urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
Portuguese (PT)	O(a) abaixo assinado(a) Furuno Electric Co., Ltd. declara que o mencionado acima tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:
Romanian (RO)	Prin prezenta, Furuno Electric Co., Ltd. declară că menționat mai sus tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
Slovak (SK)	Furuno Electric Co., Ltd. týmto vyhlasuje, že vyššie spomínané rádiové zariadenie typu je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
Slovenian (SL)	Furuno Electric Co., Ltd. potrjuje, da je zgoraj omenjeno tip radijske opreme skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
Finnish (FI)	Furuno Electric Co., Ltd. vakuuttaa, että yllä mainittu radiolaitetyyppi on direktiivin 2014/53/EU mukainen. EU-vaatimusten mukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
Swedish (SV)	Härmed försäkrar Furuno Electric Co., Ltd. att ovan nämnda typ av radioutrustning överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

## Online Resource

[http://www.furuno.com/en/support/red\\_doc](http://www.furuno.com/en/support/red_doc)