

Speed Wi-Fi NEXT W07

Quick Start Guide

- The company names and product names appearing in this manual are trademarks or registered trademarks of their respective holders.
- For exemptions, refer to "Notes on Usage" available on the au homepage.

 
Preface

Thank you for buying the "Speed Wi-Fi NEXT W07" (simply called "the product" from here on).

Before using the product, read the "Quick Start Guide" (this manual), and "Notes on Usage", carefully for proper use.

Packaged Items

Before using the product, make sure that you have all the following packaged items with the product.





Main unit

SIM eject pin (sample)*

- 無線LAN初期設定 (Wireless LAN Initialization) sticker (Japanese)
- はじめてガイド (Quick Start Guide) (Japanese)
- ご利用にあたっての注意事項(保証書) (Notes on Usage (Warranty)) (Japanese)
- * Used to insert/remove the au Nano IC Card 04 LE.
- The following items are not included.
- · au Nano IC Card 04 LE

- AC adapter
- USB Type-C[™] cable
 Cradle
- Please purchase the specified charger (sold separately). For details, refer to "周辺機器" (Peripheral Devices) in the "取扱說明書 詳細版" (Full Instruction Manual) (Japanese).
 - O The battery is built into the product.
 - Illustrations in this manual are shown as examples. They may differ from the actual product.

About Descriptions

· Symbols representing keys in this manual are as below.



The following operations are abbreviated in this manual.

Description	Meaning
On the home screen → [Settings] → [Display].	From the home screen, tap "Settings". Then, tap "Display".
(也) (hold down for at least 2 seconds).	Hold (也) down for at least 2 seconds.

- * Tap refers to using your finger to lightly touch keys and icons displayed on the screen to select.
- In this manual, descriptions are based on the screen display and operations of the product with au Nano IC Card 04 LE installed.
- Illustrations and screens shown in this manual may look different from those on the actual product. In some cases, minor details or a part of a screen may be omitted.
- Menu items, hierarchies, and icons used in this manual may differ depending on the functions used and upon usage conditions.
- O In this manual, "au Nano IC Card 04 LE" is abbreviated to "au IC Card".
- © Company names and product names described in this manual are trademarks or registered trademarks of their respective companies. This manual may also omit marks such as ™ and ®.


What You Can Do with This Product

The product can be connected to multiple wireless LAN (Wi-Fi®)-supported devices such as PCs, smartphones, tablets, etc. via wireless LAN (Wi-Fi®) and connect a PC etc. using a USB Type-C cable (commercially available). Also, data communication using Internet access using WiMAX 2+, LTE or UMTS systems is available on devices connected to the product.

Connecting via Wireless LAN (Wi-Fi®)


You can connect wireless LAN (Wi-Fi®)-supported devices (such as PCs, smartphones, tablets, etc.) to this product to carry out data communications.

 Up to 10 devices supporting wireless LAN (Wi-Fi®) can be connected to the product at the same time.

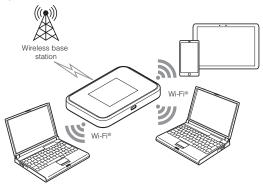

Connecting with USB Cable


You can connect this product to a PC with a USB Type-C cable (commercially available) for data communication. Additionally, you can also use the USB connection at the same time as Wi-Fi® connections.

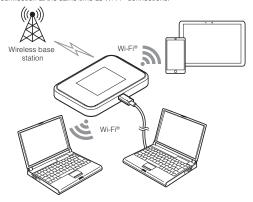

Connecting with the Specified Cradle (Sold Separately) by Using a LAN Cable (Commercially Available)

You can perform data communication by connecting the cradle (sold separately) to a PC or other device using a LAN cable (commercially available). You can also use the wired LAN connection at the same time as wireless LAN (Wi-Fi®) connections.

 Using the specified AC adapter (sold separately), plug the cradle (sold separately) into the outlet. For details on the specified AC adapter (sold separately), refer to "周卫機器" (Peripheral Devices) in the "取扱說明書 詳細 版" (Full Instruction Manual) (Japanese).

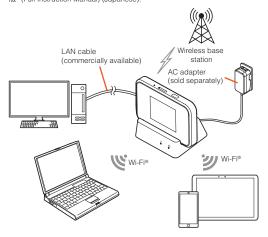

- Depending on radio wave reception, overloading of access points, or the volume of the content, normal communications may not be possible. Furthermore, depending on the connected devices, normal communications may not be possible.
- © Connection to the network automatically determines and selects the most suitable network at that time.
- The product will automatically connect to the Internet when it is turned on.

Support for au World Service

Using the au World Service, you can use your products that are used in Japan overseas as well. This product can be used on either UMTS or LTE networks depending on your destination.

- No special procedures for application or fixed monthly charges are required, with usage charges being combined with fees for usage within Japan, making payment easy.
 - Customers with new accounts can use these overseas from the day following purchase.
 However, customers who have purchased this product from an online shop can
- use it from 2 days after starting communications within Japan.

 Please check with the au website or Customer Center for details as to

countries in which this can be used, pricing, and other services.

Covered areas and charges

https://www.au.com/mobile/service/global/au-world-service/area-charge/

How to use data communications overseas, and applicable data communication charges

https://www.au.com/mobile/service/global/au-world-service/check/ (Japanese)

Customers using this product overseas

*Please read before traveling

https://www.au.com/information/notice_mobile/global/ (Japanese)

- © Various discount services as well as data communication charges/ discount services available within Japan cannot be used overseas.
- O Consumption tax is not added to usage fees for international services.

Setting Communication Mode

You can use the product to perform data communication with wireless base station via WiMAX 2+, LTE or UMTS systems. You can select from the following communication modes to use

	WiMAX 2+	LTE	UMTS*
High Speed Mode	0	-	-
High Speed Plus Area Mode	0	0	0


^{*} During international roaming

By default, the product is set to "High Speed Mode". Note that additional charges may be applied depending on your billing plan if you switch it to "High Speed Plus Area Mode".

Useful Functionality of This Product

Support for Mobile Charging

You can charge your smartphone, tablet or other device by connecting it to this product using a USB Type-C cable (commercially available). For details, refer to "Mobile Charging" (P.P.24).

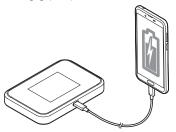

QR Codes and WPS Connection

You can easily connect your smartphone or other device to the product over wireless LAN (Wi-Fi®) by displaying a QR code on the product screen, and reading it with the camera on the smartphone or other device. WPS connections are also supported to allow you to connect your smartphone to the product via wireless LAN (Wi-Fi®), using a WPS key. If the wireless LAN (Wi-Fi®)-supported device supports the WPS push button method, you can easily set the SSID and security method required for the connection.

 For details on the connection method, refer to "Connecting by Using QR Code" (▶P.42) and "Connecting by Using WPS" (▶P.37).

About the Manuals

"Quick Start Guide" (this manual)

The "Quick Start Guide" (this manual) available on the au homepage describe basic operations of major functions.

https://www.au.com/english/support/manual/

"Full Instruction Manual" (Japanese)

You can check "取扱説明書 詳細版" (Full Instruction Manual) (Japanese) that describes detailed of various functions on the au homepage.

https://www.au.com/support/service/mobile/guide/manual/ (Japanese)



Mobile Consideration


Usage is prohibited in the following locations

 Since using the product on airplanes is restricted, follow the instructions given by the respective airlines.

■ Be very aware of people nearby

- When in town, do not use in locations that obstruct passers-by.
- Looking at your product screen while walking is very dangerous. Do not use this product while walking, or suddenly stop to use it.
- When using this product on the bullet train or in hotel lobbies, move to a location that will not bother other people.
- Crowded locations such as in full trains may have people using pacemakers nearby. Please turn off the product before entering these areas.
- Abide by instructions regarding prohibitions on usage or restrictions on bringing items in that have been put in place by hospitals and other medical institutions.

Part Names and Functions

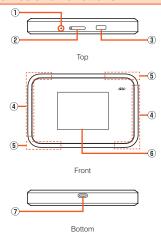

① RESET button

The product settings can be restored to the factory default settings by pressing this button with the SIM eject pin (sample) when the power to the product is on.

② au IC Card tray

③ ☐(付) Power key

Turn the screen on/off.
Hold down to turn the power on/off and to reboot.

(4) Internal antenna

5 Internal antenna/Wi-Fi® antenna

6 Display (Touch panel)

② External connection jack

Use when connecting with the TypeC Common AC Adapter 01/02 (sold separately), the specified cradle (sold separately), a USB Type-C cable (commercially available), and USB cable (commercially available) for connection with peripheral devices.

- The back cover of this product cannot be removed. Removing it forcibly may cause damage or a malfunction.
- Since the battery is built into the product, you cannot remove it by yourself. To forcibly turn the power off, refer to "Turning the Power Off Forcibly" (*P.25).

Internal antenna and Wi-Fi® antenna

The antenna is built into the product. Do not cover the antenna with your hand during use. Doing so may impact signal quality.

au IC Card

Pulling out or applying excessive force on the au IC Card tray may cause damage.


IMEI plate

A plate with the sticker (IMEI label) showing the IMEI number (International Mobile Equipment Identifier) is printed and inserted near the au IC Card tray slot. The IMEI number is required when requesting servicing or repairs. Do not pull out the plate. Also, do not remove the sticker.

Pulling out the IMEI plate

- ① Turn the display side up, pull out the au IC Card tray, and remove the au IC Card. (For details on pulling out the au IC Card tray, refer to the step

 1 and 2 of "Inserting the au IC Card" (▶P.15).)
- ② Turn the display side down, hook the tab on the rear of the au IC Card tray (side without text), and pull out the IMEI plate. (Do not fully pull out the IMEI plate.)

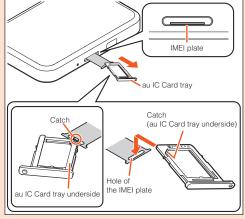

- Note that pulling out the IMEI plate forcibly or applying force to it may damage the plate.
- If the IMEI plate comes fully out, carefully return the IMEI plate while taking care not to insert it too far in.

Main Unit Keys and Buttons

Use keys and buttons on the main unit to carry out the following operations.

Power key

Power on	(也) (hold down for at least 2 seconds).
Power off	\bigcirc (\bigcirc) (hold down for at least 2 seconds) → [Power off].
Reboot	(b) (hold down for at least 2 seconds) → [Reboot].
Turn screen on	(少) while the screen is off.
Turn screen off	(少) while the screen is on.
Forcibly power off	(少) (hold down for at least 8 seconds).


RESET button

Reset the product to	Use the SIM eject pin (sample) to hold down for at
the factory default	least 2 seconds → [YES].

au IC Card (SIM Card)

Your phone number etc. is recorded in the au IC Card. The product is compatible with au Nano IC Card 04 LE.

 au Nano IC Card 04 I F



- Note the following points, otherwise handling the au IC Card may cause malfunction or damage.
 - . Do not touch the IC (metal) part of the au IC Card.
 - · Insert in the correct direction.
 - · Before inserting/removing the au IC Card, turn off the product .
 - · Do not forcefully insert or remove.
- An error message will be displayed if the au IC Card is not correctly inserted, or if the au IC Card has a malfunction.
- Be careful not to lose the au IC Card after it is removed.
- Also, do not insert an au IC Card that is inserted into a conversion adapter. Doing so might cause a malfunction.
- When inserting/removing the au IC Card, ensure that any USB Type-C plugs such as the TypeC Common AC Adapter 01/02 are removed from the product.
- The included SIM eject pin (sample) is required to insert and remove the au IC Card.
- Although the phone number is stored to the au IC Card, making/receiving calls etc. is not available with the product.

 
Inserting/Removing the au IC Card

Before inserting/removing the au IC Card, ensure you turn off the product. Insert/remove the card with the display side of the product turned up.

Inserting the au IC Card

Insert the tip of the SIM eject pin (sample) into the au IC Card tray hole.

Push the tool firmly straight in until the au IC Card tray comes out. Pushing this other than straight in may cause damage or malfunction.



Pull out the au IC Card tray.



3 Put the au IC Card into the au IC Card tray with the IC (metal) side facing down.

 
Check the direction of the au IC Card, and place it securely in the au IC Card tray.

Take care so that the au IC Card does not come out of the IC Card tray. Inserting the tray with the card not properly seated within may result in damage.



4 Insert the au IC Card tray fully into the product straight and horizontally with the display side facing up.

Push the areas indicated with O securely and make sure there is no space between the product and the au IC Card tray.



Inserting/removing the au IC Card tray

O Do not insert the au IC Card into the product directly. Place the au IC Card in the au IC Card tray, and then insert the whole tray into the product.

- O Do not misplace or damage the au IC Card tray once it is removed.
- When removing the au IC Card tray from the main unit, pull out the card tray slowly and horizontally with the display side facing up.
 - Pulling out the au IC Card tray forcefully or at an angle may cause damage.
 - When pulling out the au IC Card tray with the display side turned down or the product stood upright, the au IC Card will fall out of the au IC Card tray, and may be lost.
- When inserting the au IC Card tray into the main unit, insert the card tray slowly and horizontally with the display side facing up, and confirm that there are no space between the main unit and the au IC Card tray.
 - Do not insert the au IC Card tray the other way around. Doing so might cause damage to the au IC Card tray.

Removing the au IC Card

Using the SIM eject pin (sample), pull out the au IC Card tray.

When pulling this out, take care that the au IC Card does not come out of the IC Card tray and get lost.

2 Remove the au IC Card from the au IC Card tray.



Insert the au IC Card tray fully into the product straight and horizontally with the display side facing up.

Charging

Charging


The internal battery is not fully charged at the time of purchase. Charge the battery before using the product.

- While charging, the battery icon appears with superimposed.
 - The product may become warm during charging, but this is not a malfunction
 - The interior of the product may get warm or hot depending on operation methods and the environment in which it is used. If this happens, charging may stop for safety reasons.
 - Operating the product with the specified charger (sold separately) plugged in may result in repeated charge/discharge cycles in a short time. Frequent repeated charging shortens the internal battery life.
- © Do not charge for a long time with the power left turned on. If the product is left turned on after charging is complete, the internal battery charge level decreases.
 - In these cases, charge again with the specified charger (sold separately). However, depending on the time when the product is disconnected from the charger, the battery charge level may be low or the battery may only be usable for a short time.
- If the product is left for a long time even after the charging is completed, the battery capacity may decrease.
- If the battery empty alert is displayed and the power cannot be turned on, charge the battery for a while.
- When the battery becomes warm, charging may automatically stop even if the battery has not been fully charged. Charging automatically resumes after the temperature lowers to an appropriate temperature.

Charging with the Specified AC Adapter

This explains connecting the TypeC Common AC Adapter 02 (sold separately) and charging the product. For details on the specified AC adapter (sold separately), refer to the "取扱説明書 詳細版" (Full Instruction Manual) (Japanese).

- Insert the TypeC Common AC Adapter 02 (sold separately) power plug into an 100V AC outlet.
- Insert the USB Type-C plug of the TypeC Common AC Adapter 02 (sold separately) into the external connection jack of the product in the direction of the arrow.

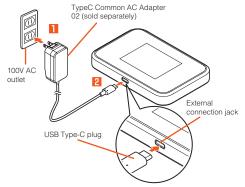

When charging is completed, pull out the USB Type-C plug of the TypeC Common AC Adapter 02 (sold separately) straight from the external connection jack of the product.

- 4 Remove the power plug of the TypeC Common AC Adapter 02 from the outlet.
- © Charging while the product is turned on will still charge the product, however charging will take longer.

Charging with the Specified Cradle (Sold Separately)

When charging using the cradle (sold separately), ensure you consult the instruction manual included with the cradle (sold separately).

This explains connecting the cradle (sold separately) and the TypeC Common AC Adapter 02 (sold separately) and charging the product. For details on the specified AC adapter (sold separately), refer to the "取扱說明書 詳細版" (Full Instruction Manual) (Japanese).

- Insert the TypeC Common AC Adapter 02 (sold separately) power plug into an 100V AC outlet.
- Insert the USB Type-C plug of the TypeC Common AC Adapter 02 (sold separately) horizontally into the power supply USB Type-C connection jack on the cradle (sold separately).

The power lamp on the cradle (sold separately) will illuminate.


TypeC Common AC Adapter 02 (sold separately) Power lamp USB Type-C connection jack for power supply 100V AC outlet

| With the external connection jack on the product facing down, connect the product straight onto the USB Type-C plug for charging on the cradle (sold separately).

USB Type-C plug

Check if the product and cradle (sold separately) are properly aligned. There may be damage if the product and cradle are not properly aligned when connecting and disconnecting the product.

 External connection jack



USB Type-C plug for charging

Cradle (sold separately)

 
- When charging is complete, remove the power plug of the TypeC Common AC Adapter 02 (sold separately) from the outlet.
- Remove the product straight from the USB Type-C plug for charging on the cradle (sold separately).
- Remove the USB Type-C plug of the TypeC Common AC Adapter 02 (sold separately) from the power supply USB Type-C connection jack on the cradle (sold separately).
- $\ensuremath{\bigcirc}$ Do not use a voltage converter for overseas travel to charge the battery.
- Note that inserting or removing the equipment forcibly may cause damage to the power supply USB Type-C connection jack and USB Type-C plug for charging, or result in a malfunction.
- If the power lamp is off, check if the cradle (sold separately) is correctly connected to the outlet with the specified AC adapter (sold separately).
- When placing the product in the cradle (sold separately), be careful that metal does not get stuck in between the product and cradle.

Charging with a PC

This explains how to charge the product by connecting this to a USB port on a PC that is capable of charging.

- Once the PC is fully started, connect the USB plug of the USB Type-C cable (commercially available) to the USB port on the PC.
- Connect the USB Type-C cable (commercially available) to the external connection jack on the product.

If the product is connected to the PC while the product is turned on, the USB connection function will start and the PC will automatically connect to the Internet. Note that data communications may result in charges being incurred.



- Charging over USB may take longer than when using the specified AC adapter (sold separately).
- If the USB Type-C cable (commercially available) is disconnected from the PC during data communications, data communications will be interrupted which may cause a malfunction or loss of data. Ensure care is taken.

Mobile Charging

You can charge your smartphone, tablet or other device by connecting it to this product using a USB Type-C cable (commercially available).

- On the home screen → [Mobile Charge].
- Scroll up.
- [50%]/[30%]. Charging will stop when the remaining battery capacity reaches the selected percentage.
- [Supply].
- You can charge your smartphone or other device by connecting it to this product using a USB Type-C cable (commercially available).

Turning the Power On/Off

Turning the Power On

(b) (hold down for at least 2 seconds) when the power is turned off.

Turning the Power Off

- | こしい (hold down for at least 2 seconds).
- [Power off].

Rebooting the Product

The product will turn off, and then restart.

- **一**(也) (hold down for at least 2 seconds).
- [Reboot].

Turning the Power Off Forcibly

Turn off the product forcibly when the screen becomes unresponsive, or will not turn off.

- **||** (hold down for at least 8 seconds).
- Note that settings and other content may be deleted if the power is turned off forcibly. Do not use this except when the product cannot be operated.

Locking/Unlocking the Screen

The product will turn off if you either press ((), or do not operate the product for a set period of time. When the screen is turned on, the lock screen is displayed.

Unlocking the screen

- | (也) while the screen is off.
- Slide to the right.

Configuring Initial Settings

When you turn on the power to the product for the first time, the initial settings screen is displayed when the screen is unlocked.

In "ソフトウェア更新" (Software Update), select [はい] (Yes) or [いいえ] (No) for "自動更新" (Auto Update).

The home screen appears.

 
Switching the Display Language to English

- On the home screen → [設定] (Settings).
- [Language Setting].
- [3] [English].

Resetting to Factory Defaults

You can restore the product to its factory default settings.

- Resetting the Product to Factory Defaults
- With the product powered on, insert the tip of the SIM eject pin (sample) into the RESET button hole.
- Page 2 Hold down the RESET button for at least 2 seconds.
- [YES].



Resetting the product will clear all settings (with the exception of the PIN code). Prior to resetting, we recommend that you back up all data of this product. For details on backing up, refer to the "取扱說明書 詳細版" (Full Instruction Manual) (Japanese).

Using the Touch Panel

The product uses a touch panel, operated with your finger.

- In the following cases, the touch panel may not work even if you touch it.
 These may also cause a malfunction.
 - Operation with a gloved finger
 - · Operation with the tip of a fingernail
 - · Operation with foreign object placed on the operation pad
 - · Operation with a protective film or sticker applied
 - · Operation with water droplets or condensation on the display
 - · Operation using wet or sweaty fingers

Тар

Touch the screen and immediately release your finger.

· Select items or icons displayed on the screen.



Slide/Swipe

Keep touching the screen, and move your finger to the desired direction or position.

 Scroll the screen or switch pages by tracing your finger in the desired direction.



Screen Display

The following information is shown on the home screen.



1) Status icon display area

2 Data Usage

Displays details of the amount of data used. Set the data usage display to show on the lock screen and home screen.

For details on data usage to show on the lock screen and home screen, refer to the "取扱説明書 詳細版" (Full Instruction Manual) (Japanese).

3 Client List

Check the number of devices currently connected to the product.

4 Wi-Fi Guide

Connect devices supporting wireless LAN (Wi-Fi®) to the product by following the instructions on the screen.

For details, refer to "Connecting via Wireless LAN (Wi-Fi®)" (▶P.36).

5 Mobile Charge

Configure settings for mobile charging.

. For details, refer to "Mobile Charging" (▶P.24).

6 About Device

Check information about the product.

Settings

Configure settings for each function of the product.

Data usage amounts are counted by the product main unit, and are to be used as a quide. Actual data usage may differ.

Icons

The status icon display area displays status icons to show product status, including signal status and remaining battery capacity.

Main Status Icons

Icon	Overview
T to	Signal strength (received signal) to a : Level - A small "R" is displayed at the upper left of the signal mark during international roaming.
HIII DESKA	High Speed Mode/High Speed Plus Area Mode I will be displayed to the right of the icon if the product is currently communicating. When there is no service, "OUT" is displayed. The network name is displayed to the right of the icon. When there is no au IC Card inserted, "No SIM" is displayed.
李 哈	Internet connection/disconnection indicator
13	Bridge Mode set
	Software update running
œ	DFS check indicator
₿-	Mobile charge indicator
to	Battery level status it to is Remaining capacity : Charging error While charging, the battery icon appears with superimposed. The remaining battery capacity is displayed with a percentage to the left of the battery mark.

Message Display

In this product, communication status and information regarding failures are notified using messages.

Label	Description	
The passcode doesn't match.	In "Screen Lock", the passwords entered in "Set a new passcode" and "Confirm passcode" do not match. Enter the correct passcode.	
Please insert USIM first.	Displayed when there is no au IC Card inserted.	
PUK Lock Free	Displayed when the PIN code is locked.	
Reach to max PUK retry. Please contact with customer service.	This message is displayed if the wrong PUK (PIN Unlock Key) code is input 10 times in a row.	
5GHz is not available because the device is not in Japan.	Displayed when switching to 5 GHz mode when overseas.	
The WiFi 5GHz is unavailable. Please turn to 2.4GHz	Displayed when 5 GHz mode cannot be used.	
The WiFi 5GHz is unavailable.	Displayed when 5 GHz mode cannot be used.	
5GHz is not available because no SIM detect.	Displayed when switching to 5 GHz mode when there is no au IC Card inserted.	
Connector is too hot. Please unplug the USB cable.	Displayed when the external connection jack becomes hot.	
Charging Error.	Displayed if an error occurs during mobile charging.	
The data usage reaches your limit!	Displayed when the set data usage amount is reached.	
Since radar is detected, 5GHz cannot be used for 30 minutes after the power is turned on.	Displayed when radar is detected when using the DFS function.	

Label	Description	
5GHz cannot be used for 30 minutes because the power was turned off while the radar was detected. When using 5GHz, set again after 30 minutes.	Displayed after turning the product on when radar is detected when using the DFS function.	
Communication is restricted because the device is hot. If the temperature continues higher, it may shut down.	Displayed when the main unit becomes hot.	
This process needs to be rebooted. Rebooting.	Displayed when the product needs to reboot.	

Basic Operation


■ To Return to the Previous Screen

Tap 🖷 at the top left of the screen.



■ To Return to the Home Screen

Tap n at the top right of the screen.

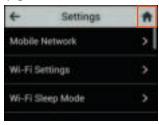

To Select Items

Tap the items to select.



If //// are displayed, tap /// to select.







Enter Numbers

The number keyboard is displayed depending on the entry field.



1) Entry field

Numbers can be entered at the position of the cursor.

② Keyboard

Keyboard for entering numbers.

3 Delete kev

Delete the number to the left of the cursor.

Connecting via Wireless LAN (Wi-Fi®)

Using Wireless LAN (Wi-Fi®)

This product is compliant with IEEE802.11a/b/g/n/ac wireless LAN (Wi-Fi®), and supports wireless LAN (Wi-Fi®) connection with wireless LAN (Wi-Fi®) devices (PCs, smartphones, tablets, etc.) for data communications.

Also, the product supports WPS (Wi-Fi Protected Setup), and if your wireless LAN (Wi-Fi®) device is compatible with the WPS function, wireless LAN (Wi-Fi®) connection is possible with a few simple steps.

Even wireless I AN (Wi-Fi®) devices port compatible with the WPS function can

Even wireless LAN (Wi-Fi®) devices not compatible with the WPS function can connect easily by inputting the SSID and security key (password) set on this product.

You can check the network names (SSID) and security key (password) for this product on the 無線LAN初期設定 (Wireless LAN Initialization) sticker (Japanese) included with the product, or using "SSID Information". Furthermore, the network names (SSID) set as the factory default for this product are indicated with "SPWN_S31_XXXXXX_a" and "SPWN_S31_XXXXXXX_b" (XXXXXXX are the last 6 characters of the MAC address). Unless this is changed by the customer, any other displayed networks are nearby wireless LAN (Wi-Fi®) networks, therefore do not connect to these.

SSIDs

This product supports multi-SSIDs, therefore it has two network names (SSID). The "SSID", "WPA Key", and "WEP Key" will differ depending on encryption methods.

For details on SSIDs, refer to the "取扱説明書 詳細版" (Full Instruction Manual) (Japanese).

Using 5 GHz

This product is legally required by the Radio Law to include DFS functionality in order to prevent radio interference in the wireless LAN (Wi-Fi®) 5-GHz band. The wireless LAN (Wi-Fi®) 5-GHz frequency band used by the product is also used by weather radars and other radio equipment, therefore depending where it is used, the product may interfere with these.

Accordingly, if weather radar or other similar frequencies are detected when this product is using the wireless LAN (Wi-Fi®) 5-GHz band, then the DFS function will operate and switch the product to use a different wireless LAN (Wi-Fi®) 5-GHz channel in order to prevent radio interference. For details on the 5-GHz band being used, refer to the "取扱說明書 詳細版" (Full Instruction Manual) (Japanese).

Connecting by Using WPS

If the wireless LAN (Wi-Fi®)-supported device supports the WPS push button method, you can easily set the SSID and security method required for the connection. Refer to the instruction manual for your wireless LAN (Wi-Fi®)-supported device to determine if it supports the WPS push button method.

• To use WPS, you must set "Security (Encryption Mode)" on the product to

To use WPS, you must set "Security (Encryption Mode)" on the product to "WPA2-PSK(AES)" or "WPAWPA2-PSK(AES/TKIP)".

■ Use on this product

- **I** (少)(power key) (for at least 2 seconds).
 - The product power will turn on. Wi-Fi® functionality will turn "ON", and will be displayed. The product will automatically connect to the Internet with the default settings. It will be displayed if the product successfully connects to the Internet.
- Use on wireless devices supporting wireless LAN (Wi-Fi®)
- Open the connection settings screen and set up the WPS connection as necessary.

Operating methods will differ depending on the device supporting wireless LAN (Wi-Fi®). For details, refer to the instruction manual for your device supporting wireless LAN (Wi-Fi®).

- Use on this product
- On the home screen → [Wi-Fi Guide] → [WPS].



[Start WPS].



■ Use on wireless devices supporting wireless LAN (Wi-Fi®)

- Push the WPS button.
 - Operating methods will differ depending on the device supporting wireless LAN (Wi-Fi®). For details, refer to the instruction manual for your device supporting wireless LAN (Wi-Fi®).
 - · It will take about two minutes until the setup procedures is completed.
 - The setup procedure is completed when "WPS connection successful" is displayed on the product.

Connecting to the Device by Searching for the Access Point

You can manually connect your device supporting wireless LAN (Wi-Fi®) to this product if it does not support WPS or if the WPS connection does not work.


■ Use on this product

The product power will turn on. Wi-Fi® functionality will turn "ON", and will be displayed. The product will automatically connect to the Internet with the default settings. Twill be displayed if the product successfully connects to the Internet.

2 On the home screen → [Wi-Fi Guide].



- [Manual Connection] → select SSID to connect.
 - The SSID, password, and security (encryption mode) of the product will be displayed.
 - . If using "SSID B", turn "Enabled" to "ON".

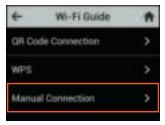

- Use on wireless devices supporting wireless LAN (Wi-Fi®)
- Open the connection settings screen and search for the access point.
 - If you turn "ON" the Wi-Fi® function on your device supporting wireless LAN (Wi-Fi®), and select the menu item with a label similar to "Connect to access point" or "Search", the list of nearby access points will be displayed.
 Operating methods will differ depending on the device supporting.
 - Operating methods will differ depending on the device supporting wireless LAN (Wi-Fi[®]). For details, refer to the instruction manual for your device supporting wireless LAN (Wi-Fi[®]).
- Select the item that displays the SSID of the product from the list of access points.

6 Enter the password and save the settings.

■無線LAN初期設定 (Wireless LAN Initialization) sticker (Japanese)

To connect the product to devices (PCs, smartphones, tablets, etc.) supporting wireless LAN (Wi-Fi®) (below: Wi-Fi® devices) via wireless LAN (Wi-Fi®), entry of the network name (SSID) and the security key (password) is required.*

The network name (SSID) and security key (password) are printed on the 無線 LAN初期設定 (Wireless LAN Initialization) sticker (Japanese) (default settings). The sticker is needed to connect the product to Wi-Fi® devices after you purchased the product or reset the product, therefore ensure this is kept safe.

* If using the WPS (Wi-Fi Protected Setup) function to connect the product to Wi-Fi® devices, then entry of the network name (SSID) and security key (password) is not required.

Connecting by Using QR Code

You can automatically connect devices supporting wireless LAN (Wi-Fi®) to this product by reading the QR code displayed on this product with the camera on the connecting device. Supported operating systems are Android™ 10 or later, and iOS 11 or later.

This example describes the procedure for Android 10.

Use on this product

| こしい (power key) (for at least 2 seconds).

The product power will turn on. Wi-Fi® functionality will turn "ON", and will be displayed. The product will automatically connect to the Internet with the default settings. We will be displayed if the product successfully connects to the Internet.


On the home screen → [Wi-Fi Guide] → [QR Code Connection].

A QR code will be displayed on the product.



- Operation on Android
- On the App list screen, [Settings]→[Network & internet]→[Wi-Fi].
- 4 Set "Use Wi-Fi" to ON.

5 Tap -.

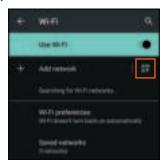

6 Read the QR code displayed on the product with the camera → Follow the instructions on the screen.

The device will be connected to the product.



Setting Tool

You can configure the various functions of the product using a web browser from a PC or mobile device connected to the product.

This example describes the procedure for connecting a PC via Wi-Fi®. The

when using the setting tool, turn off the screen of the product. If a screen
other than the touch panel lock screen is displayed when using the setting
tool, the settings may be canceled and you may be logged out of the setting
tool

Displaying the Setting Tool

- Start the PC and connect to the product.
- 2 Start a web browser and enter "http://(host IP address of the product)" or "http://web.setting" in the address bar.
 - The default setting for "Host IP Address" is "192.168.128.1".
 - . The setting tool "Home" screen will be displayed.
- Click "Login" → enter password → click "Login".
 - · Enter uppercase and lowercase characters correctly.
 - The default password is the last 6 digits of the IMEI information (international mobile equipment identity number).
 - You can check the IMEI information (international mobile equipment identity number) by operating the product as follows.
 On the home screen → [About Device].
 - When you use the last 6 digits of the IMEI information (international mobile equipment identity number) for the password, a message will be displayed asking you to change the password each time you log in. Follow the instructions on the screen to change the password, and keep the password secret. 8 to 32 single-byte upper- and lower-case alphanumeric characters/symbols can be set.
 - Log out: In the setting tool screen → click "Logout".

O You will be logged out automatically if no operations are performed for approximately 5 minutes. Be aware that any items that were entered will be deleted.

About Device

You can check information about the product, such as the phone number of the au IC Card inserted in the product and the IMEI information (international mobile equipment identity number).

On the home screen → [About Device].

Updating Software

This product supports updates to its software. To start update, use one of the following methods.

Updating the Software Automatically

The product will update its software automatically when it receives update information.

On the home screen → [Settings] → [Software Update] → [Auto Update], set to "ON".

To specify the time to update, tap "Update Time", and select the time to carry out the update.

Updating the Software Immediately

On the home screen → [Settings] → [Software Update] → [Software Update].

When the confirmation screen is displayed, check the content and select "OK".

- "No updates is available at this time." will be displayed if the software does not require updating.
- O You can also use the same operations to update the software from the setting tool. For details, refer to the "取扱説明書 詳細版" (Full Instruction Manual) (Japanese).

Cautions in Usage

- When connecting the product to the Internet for data communications, data charges will be incurred.
- Regardless of automatic update settings, the product will automatically check if its software is up to date at the following times.
 - · When starting the product
 - · During start-up of the product (periodic polling)
 - · When updating software

- When software update is required, you will be notified of this on the au
 website and through other means. For details, contact an au shop or
 Customer Center (call toll-free 157). Additionally, in order for optimal usage
 of the Speed Wi-Fi NEXT W07, au may send notifications to customers
 owning these informing them that updates are necessary.
- You are recommended to back up your setting contents before performing an update.
- Completion of software update requires that the product be restarted.
- If software update fails or is interrupted, perform software update again.
 If the software update fails, it may become impossible to operate the product. If this happens, bring it to an au shop or Toyota store (not accepted by some shops).
- Fully charge the battery before performing an update. Update will fail if the battery capacity is low or will drop to low levels during update.
- Check signal status. Software update may fail if performed in a location where the signal is weak.
- Even if a software update is performed, settings information registered on the product will be changed. However, please be aware that depending on product status (malfunction, damage, water, etc.), saving of data cannot be quaranteed.
- When used overseas, the software update function may not be available. Do not do the following during software update
- · During software update, do not move the product.

Troubleshooting

If this happens	Check this
Wi-Fi® doesn't connect	Is the Wi-Fi® signal strong enough? Has Wi-Fi® been set up? Check the product and the wireless LAN (Wi-Fi®)-supported device to determine that their Wi-Fi functionality have been turned "ON". Check if the correct password has been entered.
"OUT" is displayed	Is the signal strong enough? Are you outside of the service area? Is the correct au IC Card inserted?
The PC connected with a USB cable does not recognize the product	Check if the product is correctly connected to the PC with a USB Type-C cable (commercially available). Disconnect the USB Type-C cable (commercially available) from the PC, restart the PC, and then reconnect the cable. Make sure a USB hub or conversion plug is not used. Using a USB hub or conversion plug may prevent the product from working normally.
Operations are not possible on the keys/ touch panel	Has "Screen Lock" been set? Turn the power off, and turn it on again. Is the power on?
Operations on the touch panel are unreliable	Are you operating the product while wearing gloves? Are you using the tip of a fingernail, or while holding a foreign object? Reboot the product.

If this happens	Check this
Battery life is short	Is the product often used in areas when "OUT" is displayed? Has the internal battery reached the end of its service life? Check the battery status. Is the battery fully charged?
Cannot charge	Is the power plug of the specified charger (sold separately) properly inserted into the outlet? When using a USB Type-C cable (commercially available), is the PC powered on? If communications or other functions are performed for a long time while charging, the product may become warm and charging may stop. Charge again after the temperature of the product has dropped.
The product does not turn on	• Is the internal battery charged? • Has 二(也) been held down?
Operation not possible/ Screen frozen/Powering off not possible	 You can turn the power off forcibly by holding down (b) for at least 8 seconds. Turn on again after waiting briefly.
Power turns off unexpectedly.	Has the battery run out?
Display is dark	Has "Brightness" been set to dark?
Display illumination goes out quickly	Is "Display Timeout" set to a short amount of time?

^{*} For details on the other issues and for settings methods, refer to the "取扱説明書 詳細版" (Full Instruction Manual) (Japanese).

After-Sales Service

To Request Repairs

To request repairs, contact the Repair and Delivery Support Center.

During the	Repairs are covered in accordance with the stipulations
warranty period	for free repair detailed in the Warranty.
Outside the	If the product can be repaired, charged repairs will be
warranty period	carried out upon request.

* The warranty period for a new product is 1 year from the date of purchase.

0	Please note that contents of memory may be lost during the repair
	process. Note that the Company assumes no responsibility for any
	damages or lost profits resulting from altered or lost contents of the
	memory.

- When repairing, we may use recycled parts that fulfill our quality standards
- The au product that you have been using, and that has been collected by the replacement mobile phone delivery service will, after refurbishment and repair, be used as a replacement terminal. Furthermore, parts replaced in au after-sales service are collected and recycled by the Company. Accordingly, these parts cannot be returned to the customer.
- If the product has been processed, modified, or analyzed (including software modification or analysis (including rooting, etc.), reverseengineered, decompiled, or disassembled), or has had repairs performed at repair locations other than as designated by us, then this will not be covered by the Warranty, or repairs may be refused.
- The internal battery of the product is not covered by the free repair warranty, except where attributable to defects in the battery materials or manufacturing.
- O Accessories other than the main unit are not covered by the free repair warranty.

■ Replacement Parts

We guarantee availability of replacement parts for our Speed Wi-Fi NEXT W07 main unit and its peripheral devices for a period of 4 years after the end of production. Replacement parts are those required to maintain the functionality of the product.

Warranty

At the store at which you purchase the product, confirm that the Warranty has been filled in with the date of purchase and name of the store, read its contents carefully, and ensure that you keep the Warranty in a safe location.

Repair and Delivery Support

In order that you can use the au device with peace of mind for a long period of time, au provides an after-sales service called "Repair and Delivery Support" with a monthly subscription. This service provides compensation to cover a range of issues including damage, theft, and loss. For details on the monthly pricing and services provided, refer to the au website.

https://www.au.com/mobile/service/kosho-funshitsu/ (Japanese)

- Subscription to this service is only available at the time of purchase of an au device.
- If you cancel your subscription, recommencing subscription will not be possible until the next time you purchase an au device.
- If you change your device or increase the number of devices you own, then this service will only cover the most recently purchased au device.
- If ownership of the au device is transferred or otherwise passed on, then the membership of the Repair and Delivery Support will also be transferred or passed on.
- If you purchase a new au device, thus changing your device or increasing the number of devices you own, then the Repair and Delivery Support that applied to the previous au device will automatically be canceled.
- O Details of the service are subject to change without prior notice.

au IC Card

The au IC Card is lent to you by au. In case of loss or damage, the card will be replaced at your expense. When malfunction is suspected, or in case of theft or loss, contact an au shop or Tovota store.

Main specifications and peripheral devices

For details of main specifications and the peripheral devices, please refer to the "取扱説明書 詳細版" (Full Instruction Manual) (Japanese) on the au website.

https://www.au.com/support/service/mobile/guide/manual/ (Japanese)

Regulatory information

Hereby, SHARP CORPORATION declares that the radio equipment type SHD31 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://jp.sharp/k-tai/ (Japanese)

Manufacturer's Address:

SHARP CORPORATION,

1 Takumi-cho, Sakai-ku, Sakai-shi, Osaka 590-8522, Japan

Description of accessories

USB cable	For charging, peripherals, etc.
nano IC card	au Nano IC Card 04/non-au Nano IC Cards non-au Nano IC Cards can be used after SIM-unlocking the device.

Frequency range of supported bands in EU

WCDMA FDD I	Tx 1922.4 to 1977.6 MHz Rx 2112.4 to 2167.6 MHz
WCDMA FDD VIII	Tx 882.4 to 912.6 MHz Rx 927.4 to 957.6 MHz
LTE Band 1	Tx 1922.5 to 1977.5 MHz Rx 2112.5 to 2167.5 MHz
LTE Band 3	Tx 1710.7 to 1784.3 MHz Rx 1805.7 to 1879.3 MHz
LTE Band 8	Tx 880.7 to 914.3 MHz Rx 925.7 to 959.3 MHz
LTE Band 28	Tx 704.5 to 746.5 MHz Rx 759.5 to 801.5 MHz
WLAN 2.4 GHz	Tx/Rx 2412 to 2472 MHz (BW:20MHz) Tx/Rx 2422 to 2462 MHz (BW:40MHz)

· Maximum transmit power

WCDMA FDD I	+24 dBm (Power Class3)
WCDMA FDD VII	+24 dBm (Power Class3)
LTE Band 1	+23 dBm (Power Class3)
LTE Band 3	+23 dBm (Power Class3)
LTE Band 8	+23 dBm (Power Class3)
LTE Band 28	+23 dBm (Power Class3)
WLAN 2.4 GHz	+18.5 dBm

■ Battery - CAUTION

Use specified Charger only.

Non-specified equipment use may cause malfunctions, electric shock or fire due to battery leakage, overheating or bursting.

The battery is embedded inside the product. Avoid removing the embedded battery since this may cause overheating or bursting.

Do not dispose of the product with ordinary refuse. Take the product to an au Shop, or follow the local disposal regulations.

Charge battery in ambient temperatures between 5°C and 35°C; outside this range, battery may leak/overheat and performance may deteriorate.

■ European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR.The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device $\,$ when worn on the body is 0.90 W/kg*.

For body-worn operation, this mobile device has been tested and meets the RF exposure guidelines when used with an accessory containing no metal and positioning the device a minimum of 5 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines. As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile ohone away from the head.

FCC Notice

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.
- The device is electronically labeled and the FCC ID can be displayed in the About Device menu.

Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

^{*} The tests are carried out in accordance with international guidelines for testing.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient/relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

FCC RF Exposure Information

Your device is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the LLS. Government.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg

Highest SAR value:

Model	SHD31
FCC ID	APYHRO00274
On the Body	1.05W/kg

This device was tested for typical body-worn operations with the back of the device kept 1.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0 cm separation distance between the user's body and the back of the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model device is on file with the FCC and can be found at https://www.fcc.gov/oet/ea/fccid under the Display Grant section after searching on the corresponding FCC ID (see table above).

Additional information on Specific Absorption Rates (SAR) can be found on the FCC website at https://www.fcc.gov/general/radio-frequency-safety-0.

[Dear customers]

Thank you for buying the Speed Wi-Fi NEXT W07. We would like to announce the following change made to the content in Quick Start Guide of the Speed Wi-Fi NEXT W07.

■ Changes in Edition 1.1

"Screen Display" (P.29)

Change the home screen.

• "Screen Display" - "Icons" - "Main Status Icons" (P.30)

old) not listed

New)

Icon	Overview
B	Bridge Mode set
	•

"For inquiries, call:" (iv)

old) Corporate Customer Center (For corporate contractors) For general information (toll free)

Business hours: 9:00 to 19:00 (Weekday), 9:00 to 18:00 (Saturday, Sunday, Holiday) *Except during the year change period

From au mobile phones: From non-au mobile phones / general subscriber phones:

0077-7041
0120-925-041

New) Corporate Customer Center (For corporate contractors)
For general information (toll free)

Business hours: 9:00 to 18:00
*Except during the year change period

IN 0077-7041 / 0120-925-041

For inquiries, call:

Customer Center

For general information (7 days a week / toll free) Business hours: 9:00 to 20:00

From au mobile phones:

From non-au mobile phones / general subscriber phones:

157 area code not required 0077-7-111

In case above numbers are not available, call toll-free.

1 0120-977-033 (except Okinawa) 11 0120-977-699 (Okinawa)

In case of theft, loss, or malfunction (7 days a week / toll free) Business hours: 24 hours

From au mobile phones:

From non-au mobile phones / general subscriber phones:

113 area code not required 0077-7-113

In case above numbers are not available, call toll-free: 0120-925-314

Corporate Customer Center (For corporate contractors)

For general information (toll free)

Business hours: 9:00 to 18:00 *Except during the year change period

€ 0077-7041 / 0120-925-041

Repair and Delivery Support Center

For theft, loss, or malfunction (toll free)

Business hours: 9:00 to 20:00 (7 days a week)

From au mobile phones / non-au mobile phones / general subscriber phones:

0120-925-919



推薦業所、DUSのロサイクリにで始れた

Cell phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the (2) logo regardless of brand and manufacturer to protect the environment and reuse valuable resources



