

**GO!**

# STARTING UP

ENGLISH

Before using your tablet for the first time, completely charge the battery!

## Charging the Battery

1. Connect the supplied power cable to the tablet and to a wall outlet.
2. The tablet device will turn on and start charging.



## Installation Wizard

The first time you start up your tablet, the installation wizard will bring you through a few screens to help you set up the principal settings: language, country, time, etc.

# DESCRIPTION OF THE TABLET

1. **Power Button:** press and hold to switch on.
  - To switch off, when you press and hold on the Power button, “Power Off” > “Ok” to fully shut down your 3G
  - To put your device in standby, press the Power button once.
2. **Volume Buttons**
3. **Micro-USB port:** to connect your tablet to your computer, using the included USB cable  
(to transfer files) .
4. **SIM card slot:** Any standard SIM card can be inserted.
5. **Micro-SD card slot:** a Micro-SD card should be inserted in the device. It allows the device to be identified as a *removable storage* when connected to a PC.
6. **Loudspeakers**
7. **Headphone jack**



# CONNECTING TO A MOBILE NETWORK



Your tablet is equipped with a SIM card slot. Any standard SIM card can be inserted. There is no provider restriction. Note that the tablet will only have signal if you are in an area covered by your mobile network provider's network.

## Inserting your SIM card

**IMPORTANT:** Before inserting a SIM card, you must turn off the device.

1. Switch off the device.
2. Insert the SIM card in the SIM card slot.
3. Turn on the device.

A Pin number may be requested. Enter the SIM card pin number.

Your device will attempt to connect to the mobile network of your provider.

**NOTE:** If your device does not connect to your mobile network provider's network

1. Contact your mobile network provider to obtain the connection parameters.
2. On your device, tap the Menu icon, then settings.
3. Select Wireless & networks > Mobile networks.

In Network operators, select your operator.

In Access Point Names, select the correct access point name and enter the exact connection parameters.



# CONNECTING TO THE WIFI NETWORK



For this procedure to work, you need to be in a WiFi zone that will allow you to connect to it. Every time the tablet is in range of a network that you have already configured once, it will attempt to make a connection.


## How to configure a WiFi network

From the status bar, at the bottom right hand of the screen, you can access the WiFi settings quickly.

1. Touch the time in the status bar. The status dashboard is displayed.
2. Touch the time in the status dashboard. The setting dashboard is displayed below.
3. Touch WiFi to open the WiFi settings.
4. If the WiFi is off, slide the WiFi switch to the On position.  
Once the WiFi is on, the tablet will scan for available WiFi networks.  
Secured networks are indicated with a Lock icon. If the device finds a network that you connected to previously, it connects to it.
5. Touch the network you want to connect to.
6. Enter the required network information\* and touch Connect.  
We recommend that you select Show password in order to be able to see the characters you are typing.

Your tablet will attempt to establish a connection to that WiFi access point.

\* For free access WiFi points, there is no need to enter any special information. For secured networks, you will need a key (a series of numbers and/or letters) of the type WEP, WPA, or WPA2. To obtain the exact connection parameters required, contact the Internet service provider.

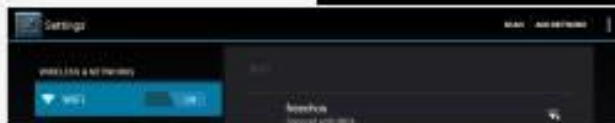



# THE ANDROID INTERFACE

Touch for text search

Your tablet device is equipped with a capacitive touch screen. Use your Fingertip to navigate.

These are default Android™ applications (Web Browser, EMail, etc.). Tap on an icon to open the corresponding application. You can customize the Home screen by adding/removing shortcuts and widgets, changing the wallpaper etc. See next page.



All apps button  
Tap on this icon to reveal all the Android™ applications and widgets installed on your tablet (games, various tools, etc.). You can copy them onto the Home screen. You can get more Android™ applications from AppsLib

The navigation bar displays the Back, Home and Recent Apps buttons.

The status bar displays notifications and system icons.

## Main Touch screen buttons



The Back button - to go back to your previous screen.



The Search button - to type terms to search your tablet and the web.



The Home button - to return to the main screen.



The All apps button - to find all your apps and widgets.



The Recent Apps button - to navigate among your apps.  
- to remove a thumbnail from the list, swipe it left or right.

# CUSTOMIZING YOUR TABLET

The extended Home screen  
Navigate between different home screen panels by swiping left and right.



Customizing the Home screen panels

- To change your wallpaper, hold your finger on the screen at an empty location, then choose from the list.

Arranging & working with apps

- To move a Home screen item, touch and hold your finger onto it until the positioning gridlines appear, then slide it to the desired location, and release your finger.
- To remove a Home screen item, touch and hold it, slide your finger towards the top of the screen and drop it over the Remove icon. Removing an item from the All apps screens will uninstall the item.

Zoom: In some apps (such as Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).



Creating application folders: you can combine several application icons in a folder. Drop one app icon over another on a Home screen and the two icons will be combined.



Changing the Settings

Tap on Settings and choose a menu among these categories: Wireless & networks, Device, Personal, System.

Adding more applications with APPSLIB : with the tablet connected to the Internet, tap on the AppsLib icon. This online library has thousands of applications to download and use.



# CUSTOMIZING YOUR TABLET

## Add widgets

Widgets are like windows into your apps. They're available from All Apps tab for you to move onto your Home screens.

To see your widgets:

1. Touch any apps on your menu screen.
2. Touch Widgets at the top of the screen.
3. From the main Widgets screen, you can:
  - move between screens: Swipe left or right.
  - drag a widget to a Home screen. Touch and hold the widget's icon, slide your finger where you want to place it and lift your finger.

You may be asked to make further choices before the widget activates. If there isn't room where you have dropped it, the widget won't be added to the Home screen.

## Use the lock screen

To protect personal information, you can adjust your tablet's lock settings:

1. From the Home or All Apps screen, touch the Settings icon .
2. Scroll down and touch Security.
3. Touch Screen lock.
4. Touch the type of lock you'd like to use.

After you set a lock here, a lock screen is displayed whenever your screen wakes up, requesting the pattern, PIN or other specified key.

## Extend the life of your battery

- If you aren't using WiFi, select the Settings app to turn it off.
- Turn down screen brightness and set a shorter Sleep timeout: Settings > Device > Display.
- If you don't need it, turn off automatic syncing for all apps: Settings > Personal > Accounts & sync. Note that this means you need to sync manually to collect messages, email, and other recent information, and won't receive notifications when updates occur.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- ◆ Reorient or relocate the receiving antenna.
- ◆ Increase the separation between the equipment and receiver.
- ◆ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ◆ Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



**Radiation Exposure Statement:**

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. \*Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

The highest SAR value for the model device as reported to the FCC when tested for use at the ear is 0.06 W/kg and when worn on the body, as described in this user guide, is 0.94 W/kg (Body-worn measurements differ among device models, depending upon available accessories and FCC requirements.)

For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

**FOR COUNTRY CODE SELECTION USAGE (WLAN DEVICES)**

Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.