

## Content

<b>1 Getting started .....</b>	<b>3</b>
1.1 Installing the SIM Cards and the Battery .....	3
1.2 Charging the Battery .....	3
1.3 Linking to the Network .....	4
<b>2 Input method.....</b>	<b>5</b>
2.1 To Shift Entry Methods .....	5
2.2 Numeric and English Input .....	5
2.3 Inserting a Symbol.....	5
<b>3 Using the Menus .....</b>	<b>5</b>
3.1 Call center.....	5
3.2 Messaging.....	6
3.3 Phonebook .....	6
3.4 Multimedia .....	6
3.5 Mobile TV .....	7
3.6 Bluetooth .....	7
3.7 File manager .....	7
3.8 Organizer .....	7
3.9 Settings .....	8
<b>4. FCC Statement.....</b>	<b>11</b>

## Phone Overview



## **1 Getting started**

### **1.1 Installing the SIM Cards and the Battery**

A SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PUK (PIN Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

### **1.2 Charging the Battery**

The lithium battery delivered with the mobile phone can be put into use immediately after being unpacked. Your mobile phone can monitor and display the battery state.

◆ Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.

◆ When the battery energy is insufficient, the mobile phone prompts "Battery low". If you have set an alert tone, an alert tone will be given off when the battery level is too low.

◆ A charging animation appears when the battery is being charged. When the charging is complete, the animation disappears.

◆ It is normal of the battery to become hot during the charging period.

◆ The battery icon does no longer flicker when the charging process ends.

◆ Use only the battery provided by the vendor. Otherwise, damages or even injuries could be caused during the charging.

◆ Power off the mobile phone before removing the battery.

◆ The charging process lasts a longer time for a new battery or a battery not in use for a long time. If the battery voltage is too low to enable the mobile phone to be powered on, charge the battery for a longer time.

◆ During the charging, ensure the battery is placed in a room temperature environment or in an environment close to room temperature.

Immediately stop using the battery if the battery produces odor, overheats, cracks, distorts or has other damage, or if the electrolyte leaks.

◆ The battery wears out with use. A longer charging time is required as the battery is put into use for a long time.

### **1.3 Linking to the Network**

After the SIM card and the mobile phone are successfully unlocked, the mobile phone automatically searches for an available network.

## 2 Input method

This mobile phone provides multiple input methods, including English input (both upper and lower case) and numeric input method.

### 2.1 To Shift Entry Methods

Press **alt** key and Options to switch between input methods.

### 2.2 Numeric and English Input

You can input numbers with the numeric input method. Press a number key to input the corresponding number. Switch to English input, press letter keys to input the English word.

### 2.3 Inserting a Symbol

Press the **sym** key to enter the **Select symbol** interface and select a symbol you want.

## 3 Using the Menus

### 3.1 Call center

#### ◆ Call history

##### ➤ Missed Calls / Dialed Calls/ Received Calls/ All calls

You can view a list of the above.

#### ◆ Call settings

##### ➤ Call waiting/Call divert/Call barring/Line switching

Furthermore, you can enter **Advanced settings** and set Auto redial, Call time reminder and Answer mode.

### **3.2 Messaging**

You can send and receive Text/Multimedia message. If the short message memory is full, a blinking message icon appears on the top of the screen.

### **3.3 Phonebook**

The mobile phone can store up to 300 telephone numbers. You can also view the **Owner number** choose the **Preferred storage** where the numbers will be saved in and check the **Memory status** of the phone.

### **3.4 Multimedia**

#### **Camera**

Use this function to capture pictures.

#### **Image viewer**

You can view the pictures or images through this function.

#### **Video Recorder**

Use this function to record video files.

#### **Video player**

Use this function to play video files.

#### **Audio Player**

Use this function to play audio files. In audio player interface, you can press + or - key to tune volume.

**Sound recorder**

Use this function to record audio files. The phone supports WAV and AMR format.

**FM Radio**

You can use the application as a traditional FM radio with automatic tuning and saved channels. Tap + or - key to tune volume.

**3.5 Mobile TV**

You can use the device to search television program. The antenna can help to receive good signal.

**3.6 Bluetooth**

You can use Bluetooth (BT) to transfer data and files after you pair your device with other device.

**3.7 File manager**

The phone provides a certain space for users to manage files and supports the Micro SD card. You can use the file manager to conveniently manage various directories and files on the phone and the Micro SD card.

**3.8 Organizer****Calendar**

There is a monthly-view calendar for you to keep track of important appointments, etc.

**Alarm**

Five alarm clocks are set but deactivated by default. For each alarm clock, the date and time can be set with a notification alert.

**World clock**

Access this menu to view time of main cities in various time zones. Set the time of the current city on the mobile phone.

**STK**

STK service is the tool kit of SIM card. This phone supports the service function .The specific items are depended by SIM card and network.

**Calculator**

This calculator provides limited precision and is only applicable to simple arithmetic calculation.

**Ebook**

You can use it to read txt-format book.

**3.9 Settings****Phone Settings**

- ◆ **Date and time:** Set the date format, the time format, and detail time of the location.
- ◆ **Schedule power on/off**
- ◆ **Language:** Select the display language for the mobile phone.



- ◆ **Input method settings:** Select one of the input methods as the prior. So while you write SMS, it will automatically display the selected input method by default.
- ◆ **Display:** Users can access this item to set wallpaper and show date and time.
- ◆ **Shortcuts:** you can add the function you want as shortcuts.
- ◆ **Dedicated keys:** Set Up/Down/Right/Left key as the desired shortcut function. For example, you can set Up Key as Alarm.
- ◆ **Flight mode:** To switch on the Flight mode, you will not receive SIM service.
- ◆ **Misc. settings:** you can set the brightness of LCD backlight.

#### **Profiles**

The mobile phone provides multiple user profiles. **General, Meeting, Outdoor** and **My style**.

You can customize settings on profile and then activate corresponding profiles.

There is no option for activating the Headset mode on the screen. When you insert an earpiece to the mobile phone, the mobile phone automatically enters the Headset mode.

For details on operation, refer to **General**. If you set **Call**

**settings > Common call settings > Answer mode to Any key,**  
incoming calls will be automatically answered.

#### **Network settings**

You can search the network again. Select your favorite network and choose to register the network automatically or manually.

Preferred networks: You can set the preferred registered network for SIM card.

#### **Security Settings**

This function provides you with related settings about safety use.

##### **◆ SIM security**

**SIM lock:** The PIN (Personal identification number, 4 to 8 digits) code prevents your SIM card from being used by unauthorized people.

**Fixed dial:** Firstly, you can set a list of fixed number as your fixed dialed number; Then you should choose Mode as On.

**Barred dial:** It needs the Local network support.

**Change password:** In general, the PIN is supplied with SIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input the wrong PIN code for three times.

◆ Phone security

**Phone lock:** Set the phone lock, the password is 1122 by default.

**Change password:** You should firstly input initial password 1122, and input the desired new password.

**Restore factory settings**

Use this function to restore factory settings. The initial password is 1122.

**4. FCC Statement**

RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types LX7 (FCC ID: ZC4LX7) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.599 W/kg and when properly worn on the body is 0.720W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and

similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications made to this equipment not expressly approved by the manufacturer may void the FCC authorization to operate this equipment.