

## 1 Welcome

Thank you for purchasing the phone. Your phone is packaged with the following state of the art features:

- VGA Camera
- 1.8 Inch screen
- Audio Player
- FM Radio
- Video and FM Recording
- Single SIM (WCDMA)
- T-Flash Card support (up to 32 GB)

**Important:**

1. Please read the contents of this manual to fully utilize the features of this phone.
2. Please read the Guidelines section provided with this Reference guide.

**User Guide**

# Table of Contents

<b>1</b>	<b>Welcome .....</b>	<b>2</b>
<b>2</b>	<b>Know Your Phone .....</b>	<b>6</b>
2.1	Keys and Parts	6
2.2	Insert SIM Card	7
2.2	Insert SIM Card	7
2.3	Insert Memory Card	7
<b>3</b>	<b>Basic Operations .....</b>	<b>7</b>
3.1	Switch Phone ON/OFF	7
3.2	Unlock the phone	8
3.3	Make a call	8
<b>4</b>	<b>Notable Features .....</b>	<b>9</b>
4.1	Secure your Phone	9
4.2	Blacklist and Whitelist	9
<b>5</b>	<b>Contacts Features .....</b>	<b>9</b>
5.1	Add New Contacts	10
5.2	Send SMS	10
5.3	Call a Contact	10
5.4	Delete Contacts	10
5.5	Delete multiple contacts	10
5.6	Delete Phone contacts	11
5.7	Delete SIM1 contacts	11
5.8	Delete SIM2 contacts	<b>Error!</b>
	<b>Bookmark not defined.</b>	
5.9	Move contacts	11


5.10	Add to Blacklist	11
5.11	Add to Whitelist	11
5.12	Import/Export Contacts	12
5.13	Send vCard	12
5.14	Others	12
5.15	Most used	13
5.16	Groups	13
<b>6</b>	<b>Messages .....</b>	<b>13</b>
6.1	Write message	13
6.2	Use message Templates	13
6.3	Voice mail server	14
6.4	Settings	14
6.5	Delete all	14
6.6	Message capacity	14
<b>7</b>	<b>Call center .....</b>	<b>15</b>
7.1	View Call center	15
<b>8</b>	<b>Settings .....</b>	<b>15</b>
8.1	Call settings	15
8.2	Phone settings	15
8.3	Display settings	16
8.4	Security settings	16
8.5	Connections	16
<b>9</b>	<b>Audio Player .....</b>	<b>16</b>
<b>10</b>	<b>Multimedia .....</b>	<b>17</b>
10.1	Image Viewer	17
10.2	Video Recorder	17

10.3	Video player	18
10.4	Recorder	18
10.5	FM Radio	18
<b>11</b>	<b>Games</b> .....	<b>19</b>
<b>12</b>	<b>Profiles</b> .....	<b>19</b>
<b>13</b>	<b>Files Manager</b> .....	<b>19</b>
<b>14</b>	<b>Organizer</b> .....	<b>19</b>
14.1	Calendar	19
14.2	Alarm	20
14.3	Calculator	20
14.4	Torch	20
14.5	Bluetooth	20
14.6	World clock	20
14.7	Stopwatch	20
14.8	Timer	21
14.9	Ebook	21
<b>15</b>	<b>Internet</b> .....	<b>21</b>
<b>16</b>	<b>Camera</b> .....	<b>21</b>
<b>17</b>	<b>Health and Safety Precautions</b> .....	<b>22</b>
<b>18</b>	<b>Taking Care of Your Device</b> .....	<b>24</b>
19	FCC Caution.....	27

## 2 Know Your Phone

### 2.1 Keys and Parts

Important keys and parts are listed here for you to use the phone better.

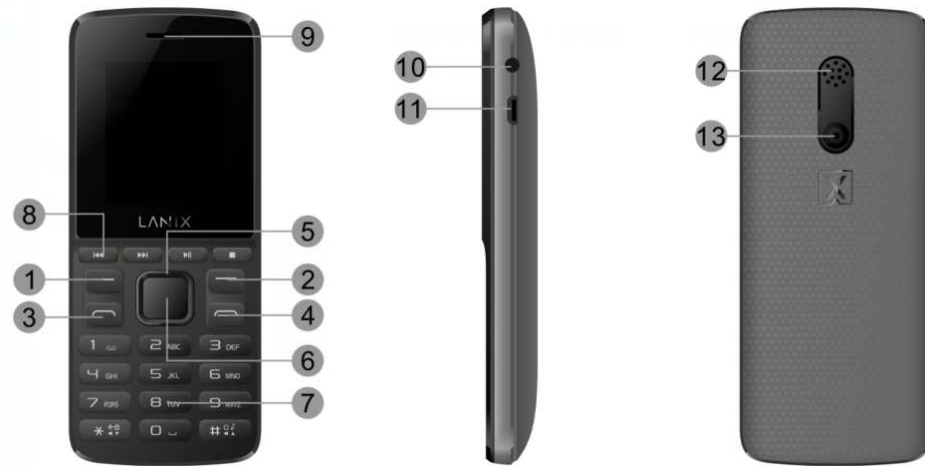

- |                       |                |                   |
|-----------------------|----------------|-------------------|
| 1. Left Key           | 2. Right Key   | 3. Navigation Key |
| 4. End Key            | 5. OK Key      | 6. Dial Key       |
| 7. Keypad             | 8. Short Cut   | 9. Receiver       |
| 10. Hands-free socket | 11. USB Socket | 12. speaker       |
| 13. Speaker           |                |                   |

### 2.2 Insert SIM Card

The U300 is a Single SIM mobile phone allowing you to use Single SIM Cards.

1. Switch off the mobile phone and remove the rear cover and battery.

### 2.2 Insert SIM Card

### 2.3 Insert Memory Card

1. Switch off the phone and remove the rear cover and the battery.
2. Insert the memory card into the slot.
3. Finally, insert the battery and the rear cover of the mobile phone.

Note: Use only compatible memory cards approved by U300. Incompatible cards may damage the slot or corrupt the data stored in the card.

## 3 Basic Operations

### 3.1 Switch Phone ON/OFF

To switch ON/OFF your phone, press and hold the **End key** for a few

seconds.

### 3.2 Unlock the phone

If you do not use the phone for a while, the screen is replaced with a locked screen.

1. Press any key to activate the screen.
2. Press **Left** key, and then press \* key.

### 3.3 Make a call

You can make a call in the following ways:

- Enter the desired number in standby mode and press the **Call key** to make the call.
- Go to **Menu > Phonebook** and then select and dial the desired number.
- Just press the **Call key** to dial the contacts listed in Call logs.
- You can also dial a contact from the messages.

## 4 Notable Features

### 4.1 Secure your Phone

**Menu > Settings > Security settings> Phone Locked**

Let you lock/unlock your phone via a security password which you can change anytime.

The default security code to unlock the phone is **1234**.

Note: After you activate the phone lock, you would be asked for a password when you power on your phone next time.

### 4.2 Blacklist and Whitelist

**Menu > Settings > Call settings > Advanced settings > Blacklist**

Blacklist undesired SMS senders and caller so that you do not receive SMS and calling from them.

**Menu > Settings > Call settings > Advanced settings > Whitelist**

When you check the Whitelist settings, that only the list in the Whitelist can call and send messages.

## 5 Contacts Features

Your phonebook stores all your saved contacts for anytime use. Your phonebook data can be stored in your SIM card or your phone memory.

You can manage your contacts from here.

**Menu > Phonebook**

### 5.1 Add New Contacts

**Menu > Phonebook > Left Key > New**

### 5.2 Send SMS

**Menu > Phonebook > Left Key > Write message > SMS**

### 5.3 Call a Contact

**Menu > Phonebook > Left Key > Call>Voice call**

Allow you to make a call to the contact you are viewing. Or you can just highlight a number and press the **Call** key.

### 5.4 Delete Contacts

**Menu > Phonebook > Left Key> Delete**

In the Contacts list, select the entry you want to delete.

### 5.5 Delete multiple contacts

**Menu > Phonebook > Left Key> Delete multiple**

In the Contacts list, select the entry you want to delete.

### 5.6 Delete Phone contacts

**Menu > Phonebook > Left Key> Delete Phone**

In the Contacts list, select the entry you want to delete in phone.

### 5.7 Delete SIM contacts

**Menu > Phonebook > Left Key> Delete SIM**

In the Contacts list, select the entry you want to delete in SIM1.

### 5.8 Move contacts

**Menu > Phonebook > Left Key> Move**

In the Contacts list, select the entry you want to move to SIM or phone.

### 5.9 Add to Blacklist

**Menu > Phonebook > Left Key > Add to blacklist**

Allow you to black list selected numbers. In this case the contact will be blocked from calling you up.

### 5.10 Add to Whitelist

**Menu > Phonebook > Left Key > Add to Whitelist**

Allow you to white list selected numbers. In this case the other contacts will be blocked from calling you up.

### 5.11 Import/Export Contacts

**Menu > Phonebook > Left Key > Import/Export**

You can copy, Import or Export contacts entries stored in the SIM card to the phone memory and vice-versa.

### 5.12 Send vCard

**Menu > Phonebook > Left Key > Send vCard**

Allow you to send vCard to other numbers and export vCard.

### 5.13 Others

**Speed dial**

**Menu > Phonebook > Left Key >Others> Speed dial**

Set speed dial and view memory status.

**Own number**

**Menu > Contacts > Left Key >Others> Own number**

Set names of your own number.

**Memory status**

**Menu > Phonebook > Left Key >Others> Memory status**

Check the memory status of SIM, and Phone.

### 5.14 Most used

**Menu > Phonebook > Most used**

View the contacts that most used.

### 5.15 Groups

**Menu > Phonebook > Groups**

Press the Left/Right navigation key to access the Group tab. Set up a list of numbers with similar preferences such as ringtone, profile etc.

## 6 Messages

### 6.1 Write message

**Menu > Messages > Write message > New SMS**

You can compose and send SMS. Pressing the **Left Key** during/after composing the message gives you a host of messaging features.

### 6.2 Use message Templates

**Menu > Messages > Templates**

Enter into preset message templates and use them. These preset templates can save you time if the theme of your message is the same as those existing in the template.

### 6.3 Voice mail server

**Menu > Messages > Voice mail server**

You can activate voicemail service to redirect your incoming calls (based on your call settings) to a voicemail server and retrieve them later via SMS alerts.

To divert incoming calls to a voicemail server, go to Settings>Phone tab > Call Divert> Voice> (choose the desired call divert condition)> Activate> Phone Number/Voicemail Number.

### 6.4 Settings

**Menu > Messages > Options>Settings**

You can set your desired parameters for SMS push message and Others.

### 6.5 Delete all

**Menu > Messages > Options>Delete all**

You can choose all messages in the Inbox or others to delete.

### 6.6 Message capacity

**Menu > Messages >Options> Message capacity**

View the memory status of your SMS.

## 7 Call center

### 7.1 View Call center

#### Menu > Call center

Tip: Directly access the call center of by pressing the **Call** key in idle mode.

The Call center lists the calls you have recently dialed, received, missed for SIM1 and SIM 2.

Press the Left/right navigation keys to access various call center and work on the call center.

## 8 Settings

Choose various preferences to customize your handset according to your requirements. You can set:

### 8.1 Call settings

#### Menu > Settings>Call settings

To perform the Fixed dialing, call divert, call waiting, call barring, Hide ID, Advanced Settings.

### 8.2 Phone settings

#### Menu > Settings>Phone settings

To perform the Date&time, Language settings, Shortcut settings, Auto power on/off, Restore factory settings.

### 8.3 Display settings

#### Menu > Settings>Display settings

Perform related Settings shown as switch Animation effect, wallpaper settings, Idle display settings, according to some of the protective screen, backlight and the backlight time, key backlight time setting.

### 8.4 Security settings

#### Menu > Settings>Security settings

Execute related the SIM1 security, mobile security, automatic keyboard lock, and end keys locked fast, anti-theft tracking and fixed dialing, blacklist and whitelist privacy protection.

### 8.5 Connections

#### Menu > Settings>Connections

You can set connectivity including B-tooth, data account.

## 9 Audio Player

#### Menu >Audio Player



The phone comes with an inbuilt Music that plays all your favorite songs stored in the phone memory or memory card.

- While in music mode, press the Left key to choose various music options
- **Adjust Volume:** Press # and \* keys to change volume.

## 10 Multimedia

### 10.1 Image Viewer

**Menu > Multimedia > Image Viewer**

Let you to view your saved images. You can also send the images via MMS or Bluetooth or use it as contact icon or wallpaper, etc.

### 10.2 Video Recorder

**Menu > Multimedia > Video Recorder**

Press the **OK** Key to start recording.

- You can press **Options** switch to **Camera** and vice versa.
- You can also press **Options** key to choose memory
- Press Left key to choose various settings

Shortcut keys: Press the number keys as shortcuts on the phone's keypad to choose various video settings.

### 10.3 Video player

**Menu > Multimedia > Video player**

Let you play videos stored in your phone or memory card.

Press 2 key while playing a video to change the display mode.

### 10.4 Recorder

**Menu > Multimedia > Recorder**

You can record surrounding sounds using this feature

### 10.5 FM Radio

**Menu > Multimedia > FM Radio**

Your phone comes with an FM radio to let you listen to FM channels.

- Go to Options> Search Channels> Auto Search and save to fill up the channels.
- Press the number keys on your keypad in accordance to the channel list.
- Press OK key to start/stop the radio.
- Press the # or \* key to increase/decrease the volume.
- Press the Left key for various radio options.

### 11 Games

#### Menu > Games

You may play the built-in games and perform the game .

### 12 Profiles

#### Menu > Profiles

Activation and customize the required profile is general, silent, meeting, indoor, outdoor, headphones, bluetooth's style.

### 13 Files Manager

#### Menu > File manager

The File Manager lists the all the files stored in your memory card.

### 14 Organizer

#### 14.1 Calendar

##### Menu > Organizer > Calendar

Call the other directly, you can hear the other side of the recording

#### 14.2 Alarm

##### Menu > Organizer > Alarm

To use the alarm service available with your mobile phone.

#### 14.3 Calculator

##### Menu > Organizer > Calculator

To arrange your journey according to calendar.

#### 14.4 Torch

##### Menu > Organizer > Torch

To turn on/off Torch.

#### 14.5 Bluetooth

##### Menu > Organizer > Bluetooth

Open the Bluetooth, for file transfer and acceptance

#### 14.6 World clock

##### Menu > Organizer > World clock

To use the world clock function.

#### 14.7 Stopwatch

##### Menu > Organizer > Stopwatch

To use the stopwatch function.

### 14.8 Timer

**Menu > Organizer > Timer**

Set up time, time will have ring tone hint

### 14.9 Ebook

**Menu > Organizer > Ebook**

Tread TXT files on the card

## 15 Internet

**Menu > Internet**

To access this menu, enter the Main Menu in the standby mode and then select Internet. You can use the network-related services with this function.

## 16 Camera

**Menu > Multimedia>Camera**

Press the left key in camera mode to choose various settings

Shortcut keys: Press the number keys on the phone's keypad to choose.

## 17 Health and Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

### SAR Compliance

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories or other accessories.

### SAR Recommendations

- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women
- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.

- Maintain a preferable distance of 15 mm from the device.

### Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

### During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

### In Hospitals

- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:
- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
- Do not carry the wireless device in a breast pocket.

- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

### Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

## 18 Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.

## User Guide

---

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

### Battery Recommendations:

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and

## User Guide

---

guidelines.

- Use manufacturer approved batteries, chargers, accessories and supplies. U300 will not be held responsible for user's safety when using unapproved accessories or supplies.

### Recycle Your Handset



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Specified collection points for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: [www.micromaxinfo.com/weee.php](http://www.micromaxinfo.com/weee.php).

2. U300 keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content

of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

### Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of U300 is strictly prohibited.

## 19 FCC Caution

### Federal Communication Commission Interference Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference,

and (2) this device must accept any interference received, including

interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this

equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

▶ RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. \*Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model device as reported to the FCC when tested for use at the ear is 0.7W/kg and when worn on the body, as described in this user guide, is 0.71W/kg (Body-worn measurements differ among device models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of [www.fcc.gov/oet/ea/fccid](http://www.fcc.gov/oet/ea/fccid) after searching on FCC ID: ZC4U300.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and be positioned a minimum of 1.0cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the device at the ear, position the handset a minimum of 1.0cm from your body when the device is switched on.