



Clear and Simple  
Quick Start Guide

SAMSUNG  
Galaxy Halo

Getting to know your  
Galaxy Halo

Unlocking your phone

- 1. Press the Power/Lock key on the side of the phone.
- 2. Swipe the screen.



Phone setup

Inserting the battery and SIM card

- 1. Remove back cover using the groove behind the volume key on the device.
- 2. Insert SIM with gold-colored contacts facing down.
- 3. Insert microSD™ card (not included) with gold-colored contacts facing down.
- 4. Insert battery making sure the gold contacts align.
- 5. Replace back cover and charge your phone.




Touch screen

Navigating your phone

- Use your fingertip to lightly touch the screen.
- Use quick flicks of your finger on the touchscreen to swipe up, down, left, and right.
- To return to the previous screen, tap the **Back** key.
- Press the **Home** key at any time to return to the main home screen.
  - Press and hold the **Home** key to open **Google Now**.
- Tap **Apps** to access applications on your phone.
- Tap the **Recent** key to view recent apps

Notifications panel

- The Notifications panel provides quick access to alerts including new messages, emails and software updates.
- Touch the Notifications bar and drag your finger down to see the Notifications panel. Drag your finger down a second time to reveal additional options.
  - Swipe right to clear individual notifications or tap **CLEAR ALL** to clear all.

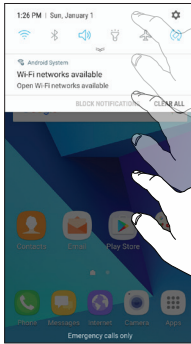

Personalize

- 1. Tap and hold a blank space on one of the home screens and choose:
  - **Wallpapers and themes** allows you to assign wallpapers and themes for the Home screen, and Lock screen.
  - **Widgets** allows you to quickly access the Widget tab where you can drag and drop a widget on a selected screen.
  - **Screen grid** allows you to change the number of icons that can be placed on a Home screen.
- 2. Tap the option you desire and follow the instructions.



Organizing home screens

- To move a widget, shortcut, or folder, tap and hold and drag it to a new location. To delete it, tap and hold and drag it to the trash bin.
- To add a home screen, place two fingers on the screen and pinch them together to enable edit mode.

Swipe left and tap **+** to add a screen. To remove, tap and hold screen thumbnail and drag it to the trash bin.


Creating a folder

- You can create a folder on a home screen, simply touch and drag one app on top of another app and tap **Enter folder name** to add a name. Tap **Add** on the keyboard. Tap the **Home** key to complete the folder setup.

Calls and voicemail

Make a call

- 1. From the home screen, tap **Phone**.
- 2. Select an option to place a call:
  - **Keypad:** Manually enter telephone number.
  - **Recents:** Return or retry a previous call.
  - **Contacts:** Call from your address book.

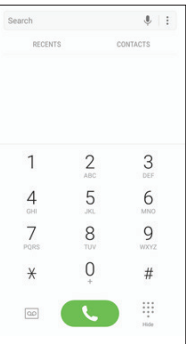

Note: Tap the icon to hide the keypad. Tap the icon to show the keypad.

Call waiting

To answer a new call while you have a call in progress:

- 1. Touch and slide in any direction.
  - Tap **Swap** to switch between the two calls.
  - Tap **Merge** to merge the calls.

Check voicemail

- 1. From the home screen, tap **Phone**.
- 2. Tap **Voicemail**.

More information

On the web

Detailed support information, including device specifications and a full user's guide are available at [www.cricketwireless.com/support/devices](http://www.cricketwireless.com/support/devices).

On the phone

- Call Customer Care at **1-855-246-2461** or
- Dial **611** from your phone

 
Accessories

Cricket offers a full line of accessories. For more information, go to [www.cricketwireless.com/shop/accessories](http://www.cricketwireless.com/shop/accessories) or visit your local Cricket retailer.

Messaging

Send a message

- 1. From the home screen, tap **Messages** and then tap **Compose**.
- 2. Tap **Compose** to compose message.
- 3. Enter either the recipient's name, phone number, or email address.
- 4. Tap the **Enter Message** field and use the keypad to enter a message.
  - Tap **Attach** and select a file type.
  - Tap **Emoticons** to choose an emoticon.
- 5. Review the message and tap **SEND**.

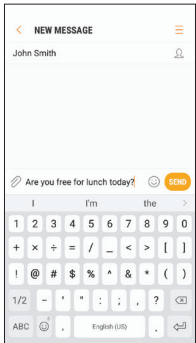


Email

Email setup

- 1. From the home screen, tap **Email**.
- 2. Enter email address and password and then tap **SIGN IN**.

Create and send an email message

 - 1. From the home screen, tap **Email**.
- 2. To compose a new message, tap **Compose**.
- 3. Tap the **To** field and enter an email address or name.
- 4. Enter a subject and email message.
- 5. To attach files to the email message, tap **ATTACH** and then follow the on-screen instructions.
- 6. Tap **SEND** to send message.

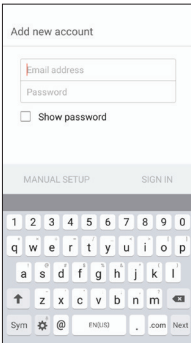

Cricket services

These services make using Cricket even better and easier!

- **myCricket:** Access billing, make a quick payment, view usage and access support from the palm of your hand.
- **Visual Voicemail:** Quickly view, access and play back your voicemail messages, easily save important numbers to your Favorites lists and respond to messages by calling back or texting.
- **Deezer:** Listen on-the-go with ad-free streaming music, download your favorites to your phone and get customized playlists based on your preferences.

 
Apps on Google Play™

Access Google Play

- 1. From the home screen, tap **Play Store**.
- 2. Use your existing Google™ account or create one following the steps on the screen.

Navigate Google Play

- From Play Store, you have multiple ways to search for apps, games and more.
- 1. Tap a category to browse popular APPS & GAMES or MOVIES, MUSIC, BOOKS.
  - 2. Search or browse for content.
  - 3. To install, tap the app and follow instructions.

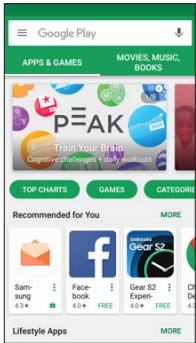

Camera and video

Take a picture

- 1. From the home screen, tap **Camera**.
- 2. Tap **Capture** to take a photo.
  - Swipe right to select a shooting mode.
  - Swipe left to select a shooting effect.



Take a video

- 1. From the home screen, tap **Camera**,
  - Tap **Record** to start recording.
  - Tap **Camera** to take pictures while recording.
  - Tap **Pause** to pause recording.
  - Tap **Stop** to end recording.

Send a Picture

- 1. After taking the picture, tap the image viewer next to the camera button, and then tap **Share** at the bottom of the screen.
- 2. Select desired option to send via text messaging or email and more.

Product meets FCC Radio Frequency Exposure Guidelines—FCC ID A3LSMJ727A. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. © 2017 Samsung Electronics America, Inc. Samsung and Galaxy Amp Prime 2 are trademarks of Samsung Electronics Co., Ltd. Screen images simulated. Appearance of device may vary.

© 2017 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are trademarks under license to Cricket Wireless LLC.

Note: To set up your corporate email, contact your IT administrator.

Note: A Google Checkout payment method is required to purchase apps

Tip: Double press the Home key to launch the camera.