

Meet your
new phone

xfinitymōbile

SAMSUNG
Galaxy Note8

A map of the hardware





Samsung Care

How can we help you?

Get to know your product

To access user manuals, tips and more visit

samsung.com/us/support

Ask the community

To ask questions and get solutions from other Samsung customers visit

us.community.samsung.com

Contact us for support

For hardware or software support call us at 800.SAMSUNG or visit



samsung.com/us/support/contact

 
To find a service location near you visit

support-us.samsung.com/cyber/locator/asc_locator.jsp

Edge screen functions

Tap the Edge handle for fast & easy access to people, information and apps.

From the Home screen, swipe up for **Apps** and then tap  **Settings** >  **Display** > **Edge screen**.

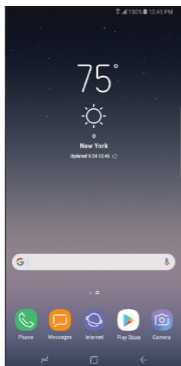


Swipe the Edge handle to view Edge panels.

Apps edge

Create shortcuts to access frequently used apps.

People edge

 
See notifications of missed calls and messages from your important contacts.

Tap  to customize, download, and add new Edge panels.

Hello Bixby

To launch **Hello Bixby**, press the **Bixby** key.

Hello Bixby allows you to quickly set reminders, create voice dictation, search and access content on your phone and on the Internet.

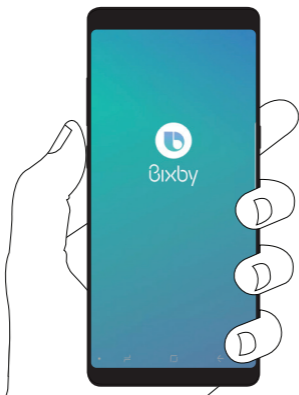


For more information about Bixby, visit samsung.com/us/support/owners/app/Bixby.

Steps to phone setup

Charge up

 Included here you'll find an Adaptive Fast Charger and USB cable. Connect them to each other, and then to your phone. Plug it in until your phone reaches 100%.

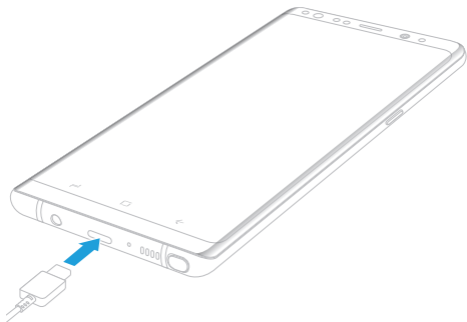


WARNING: Use only Samsung-approved charging devices. Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

Activate!

Before turning on your phone, activation is essential. On another device, pull up this site: **xfinitymobile.com/activate**. Log in and you'll be stepped right through the process.

microSD™*/SIM Card Tray

 If you have a microSD Card, insert it here:

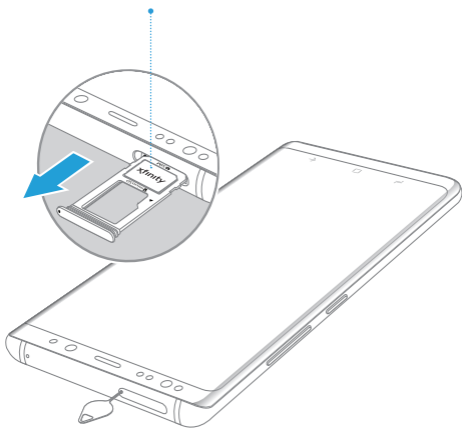


NOTE: To access the microSD Card slot, remove the microSD/SIM Card tray from the device. *microSD card sold separately.

The how-to basics

Powering on and off

 
To turn your phone on, press and hold the power/lock button. Once it's on, press and hold that same button to power it off.

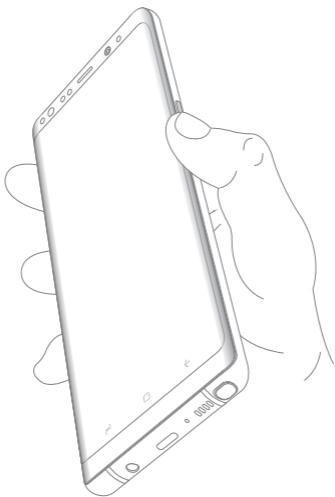

The screen basics


To turn on your screen, press the power/lock button, then swipe up onscreen to unlock it.

 To turn your screen off, just press the power/lock button.

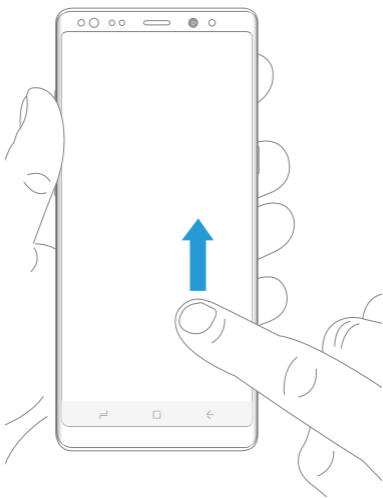


The Xfinity Mobile app

 The Xfinity Mobile app is preloaded on your phone. Consider it your control center to track your usage, manage your account and ask anything.

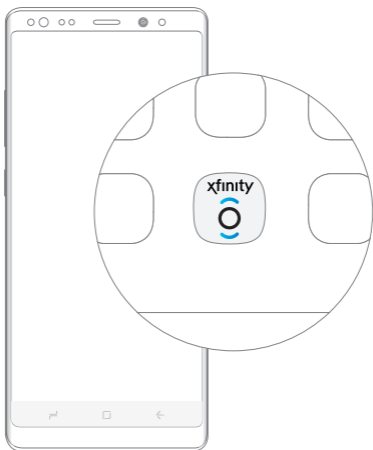

Voicemail 101

 The Voicemail app is preloaded on your phone. You can use it to listen to your messages or read them as text and record a custom greeting.

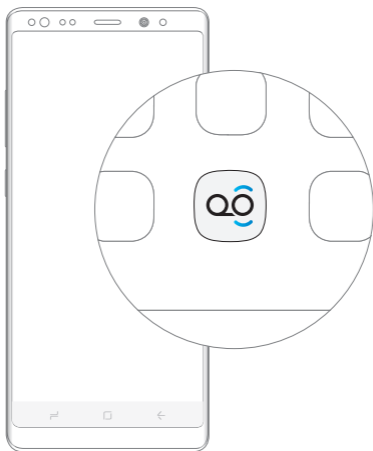

S Pen

The S Pen™ enables fast, accurate, and precise input while providing a natural writing experience.

Create note: Quickly create short notes.

View all notes: View all notes created.

Smart select: Outline, crop, edit and share a screen with others.

 
Screen write: Capture a screen and write or draw on it.

Live message: Create live messages, and GIFs.

Translate: Translate and hear pronunciations.

Bixby Vision: Shop and discover images, products, and places.

Add shortcuts: Select an app to add to the Air command menu.

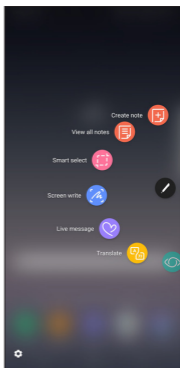

Need Help? We're here.
Call Xfinity Support at 1 (888) 936-4968

Copyright 2017 Samsung Electronics Company, Ltd. Samsung, Galaxy S, and Samsung Pay, are trademarks of Samsung Electronics Co., Ltd. Android, Google, the Google Logo and Google Play are trademarks of Google Inc. Screen images simulated.

Appearance of device may vary.

The XFINITY Mobile logo and the New Network mark ("O") are trademarks of Comcast. All rights reserved.

