



MAIL TO: IZZO GOLF
1635 COMMONS PARKWAY
MACEDON, NY 14502-9191

[PLEASE PLACE INSIDE ENVELOPE]





User Manual

TABLE OF CONTENTS

Thank You for Choosing Swami GT	2
Warranty/Video	2-3
1. General	4
1.1 Screen Display/Button Description	4
1.2 Basic Specifications	5
1.3 Accessories List	6
1.4 Charging Instructions	7
2. Getting Started	8
2.1 Set Up	8
2.2 Main Menu	8
2.3 Pairing Clubs	9
3. On the Golf Course	10
3.1 Course/Mode Selection	10
3.2 Game Tracker Mode	10-11
3.3 Advancing Holes	11
3.4 E-Caddie	11-12
3.5 Hazard Screen	12
3.6 Play Menu	12-13
3.7 Special Scenarios	13-14
3.8 End Round	14
4. Settings	15-16
5. Online Portal	16-23
5.1 Uploading Rounds	22-23
5.2 Reviewing Rounds	23
5.3 Deleting Rounds	23
7. Caution/About GPS	24-26



REGISTER YOUR SWAMI GT

FILL OUT THE INFORMATION BELOW OR GO TO
WWW.SWAMIGPS.COM/REGISTRATION

NAME: _____

ADDRESS: _____

EMAIL: _____

PHONE: () _____

DATE PURCHASED: _____ / _____ / _____



Thank You for Choosing Swami GT

Utilizing NFC technology the Swami GT communicates with your clubs, tracking club data from every shot and statistics from round to round. In order to ensure the best performance of the product and extend its service life, please read this manual before using your Swami GT.

Warranty / Return Policy

SWAMI is warranted to be free from defects for up to (1) year from your purchase date. Software updates are free of charge. IZZO cannot refund your purchase. IZZO will replace any defective unit within the warranty period. Please call Swami Support at 800-777-7899 to request a Return Authorization. All defective product must be returned to:


IZZO Golf
1635 Commons Parkway
Macedon, NY 14502
RA:_____

Please include a note with your Name, Address, Phone # and the Return Authorization #.

Recommended: Prior to using your SWAMI GT, please watch the instructional video by visiting ***www.swamiGPS.com/swami-gt***

1. General

1.1 Screen Display/Button Description

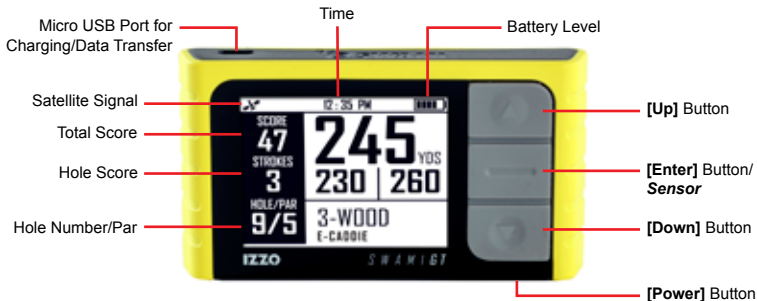

Button Description:

- **[Power] Button**: Hold for a few seconds to power on/off.
- **[Enter] Button**: Press to select options.
Press to toggle between distances to Green or Hazards in **Play Mode**.
Hold for a few seconds to access **Play Menu**.
- **Sensor**: Hold club tags near sensor to register each shot.
- **[Up] Key**: Scroll Up
- **[Down] Key**: Scroll Down

1.2 Basic Specifications

Number of courses stored	30,000 Worldwide
Battery Type	Rechargeable Lithium-Ion Battery
Battery Life	About 6-8 hours
Charging Time	About 3-5 hours
Dimensions	Length 4" x width 2.2" x thickness .6"
Weight	3.52 oz
Display Size	2.5 inches
Water Resistant	Yes

1.3 Accessories List

Thank you for purchasing the SWAMI GT. Please confirm whether your Swami GT contains the following items:



Micro USB Cord



14 Club Tags

* Should any item above be missing, please contact IZZO Golf.

IZZO Golf
1635 Commons Parkway
Macedon, NY 14502
www.izzo.com
1-800-777-7899

1.4 Charging Instructions

- A rechargeable lithium battery is built in the body of Swami GT.
- Insert one end of the USB cord into the connection port located on the top of the device. Plug the other end of the USB cord into a PC or AC adapter (not included).
- The Swami GT can be used for about 6-8 hours after a full charge.
- Battery can be charged before being completely drained, but please do not charge it excessively.
- The best and fastest charging method is to charge the battery after the device is powered off.
- While unit is turned off the charging screen will show a battery with bars repeatedly blinking. When the bars stop blinking, unit is fully charged.

2. Getting Started


2.1 Set Up



1. Attach **Club Tags** to the end of the grip for each club by firmly pressing down and twisting to tighten.
2. Hold Power button for 3 seconds to power device on and then proceed to **Pair Clubs** (see page 9).

2.2 Main Menu

1. Use [Up/Down] buttons to scroll through the menu choices. Press [OK] to select any choice.

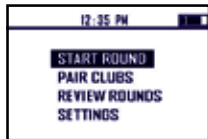

- **Start Round:** Initiates satellite fix to begin your round of golf.
- **Pair Clubs:** Synchronize your golf clubs with the device (using the tags provided).
- **Review Rounds:** View the data from your previous rounds.
- **Settings:** Adjust the settings on the device.

2.3 Pairing Clubs

NOTE: This step is necessary prior to your first use and NOT prior to each subsequent round.

1. Use **[Up/Down]** buttons to scroll to **Pair Clubs**. Press **[OK]** button to select.
2. The screen will display a “*spinning arrow*” 
3. While holding golf club, hold attached **Club Tag** near the **Sensor** (located in the middle of the gray button panel).
4. Once **Club Tag** is recognized, device will vibrate.
5. Use **[Up/Down]** buttons to select **New** (for first time registration) or **Existing club** (for re-registering a club) then press **[OK]** button.
6. Use **[Up/Down]** buttons to select **Club Type** then press **[OK]** button.
7. Use **[Up/Down]** buttons to scroll to the specific club, then press **[OK]** button to assign the **Club Tag** to that club.
8. Club is now paired with device.
9. To pair another club, use **[Up/Down]** buttons to select **Yes**, then press **[OK]** button to confirm.
10. Repeat steps 1-9 until each club as been paired with the device.
11. To re-assign a **Club Tag** to a different club, repeat steps 1-4 using the same **Club Tag**. You will be asked if you wish to re-assign the **Club Tag**. Select **Yes**, then proceed with steps 5-7.

3. On the Golf Course

3.1 Course/Mode Selection

1. Hold **[Power]** button for 3 seconds to power the device on.
2. Use **[Up/Down]** buttons to scroll to **Start Round**. Press **[OK]** button to select.
3. Device will begin searching for satellite fix. Once satellite connection is established the 5 nearest golf courses will be listed.
4. Use **[Up/Down]** buttons to scroll to desired golf course then press **[OK]** button to select.
5. Use **[Up/Down]** buttons to select mode, then press **[OK]** button to confirm:
 - **Game Tracker Mode:** GPS mode with Game Tracking data.
 - **GPS Mode:** Standard GPS distances without Game Tracking data.

3.2 Game Tracker Mode

Note: To ensure Game Tracking accuracy, we recommend playing 1-3 rounds using GT Mode to become familiar with the Game Tracking process. Then delete those rounds and start tracking your game once you are accustomed to the process.

1. Hold **Club Tag** near **Sensor** while on tee box of 1st hole until the device provides feedback. (depending on which **Feedback** option is selected in **Settings** See section 4.6 on page 15).
2. Hit shot and travel to ball.
3. Hold **Club Tag** for upcoming shot near **Sensor** before hitting each shot, until reaching green.

4. Hold **Club Tag** near **Sensor** before each putt.
5. Travel to next tee box.
6. Repeat steps 1-5 for remainder of round.

3.3 Advancing Holes

1. Once a putt is registered, or **Add Putt** is selected in the **Play Menu**, the device will advance to the next hole *after registering your club for the next tee shot*.
2. If you need to see the yardage on your tee shot prior to selecting a club (such as on a par 3 tee box), simply press the **[Up]** button once to view the yardage, then select and register your club.
3. In the event no putts are registered (you chip in, or you are 'given' a putt), Pressing the **[Up]** button and then the **[OK]** button will also advance the device to the next hole.
4. In **GPS ONLY Mode**, in most cases, the device will auto-advance to the next hole while traveling from the green to the next tee box. If the unit does not auto advance (in GPS ONLY mode) then press the **[Up]** button.

3.4 E-Caddie

1. After playing three rounds in **Game Tracker Mode**, the **E-Caddie** will become available and make club recommendations based on your previous club distance data stored over time.
2. Club recommendations will be made if you are 50-250 yards away from the green.
3. If, after three rounds logged, a shot does not travel at least 75% of your avg. distance for that particular club, it will not be used in calculating your avg. distance for that club.

4. **E-Caddie** can also be used in **GPS ONLY Mode** and can be turned off in **Settings**.

Note: It might take some time to build up accurate distance averages for each club. The more rounds that are stored on the device, the more accurate the **E-Caddie** will become.

3.5 Hazard Screen

1. Press and release the **[OK]** button *quickly* to view distances to the front and back of hazards & doglegs. Press and release the **[OK]** button *quickly* again to return to the **Play Screen** (distances to green).



Bunker



Water



Dogleg

122/129

Distance to
Layup/Carry

3.6 Play Menu (for Game Tracker mode only)

1. Hold the **[OK]** button for 3 seconds to access **Play Menu**.
 - **Resume Round:** Select to return to your round.
 - **End Round:** Select to end your round and view round data.
 - **Add Putt:** Use if you forgot to register a putt or if you were “given” a putt (see **Special Scenarios**, page 13).

- **Add/Delete Stroke:** Use to manually edit the score on any given hole. The score can only be adjusted on the hole you are currently playing (see **Special Scenarios** below).
- **Last Yardage Removal:** Select to disregard the shot yardage data from your previous shot.
- **Change Hole Par:** Use to edit the par for a particular hole (if ever necessary).
- **Switch to Next 9 Holes:** Use if playing a course with only 9 holes to create an 18 hole round.
- **Pair Clubs:** Use to pair clubs during your round if needed (see **Pairing Clubs**, page 9).
- **Settings:** Select to change settings on the device (see **Settings**, page 15 for more details).

Note: To exit the **Play Menu**, select **Resume Round**, or wait 3 seconds and the device will automatically return to the **Play Screen** if no options are selected.

3.7 Special Scenarios

1. **Adding putts:** If you forget to register a putt or you are “given” a putt, hold **[OK]** button for 3 seconds to access the **Play Menu**. Use **[Up/Down]** buttons to scroll to **Add Putt** then press **[OK]** button. This adds one put at a time.
2. **Penalty Strokes:** Hold **[OK]** button for 3 seconds to access the **Play Menu**. Use **[Up/Down]** buttons to scroll to **Add/Delete Stroke**, then press **[OK]** button. Use **[Up/Down]** buttons until the correct number of total strokes --including the penalty strokes-- is displayed, then press **[OK]** button to confirm.
3. **Chip in, hole out, or hole-in-one:** Any time that a putt is not registered (or added). The device must be manually advanced to the next hole (see **Advancing Holes**, page 11).

4. **Changing club selection:** If you decide to change your club prior to your shot but already registered that club, hold **[OK]** button for 3 seconds to access the **Play Menu**. Use **[Up/Down]** buttons to scroll to **Add/Delete Stroke** then press **[OK]** button. Use **[Down]** button to remove the registered stroke, then press **[OK]** button to confirm. Proceed to register your newly selected club.
5. **Putting off the green:** If you putt off the green then have to chip back onto the green, **do not register your chip shot**. Instead, Hold **[OK]** button for 3 seconds to access the **Play Menu**. Use the **[Up/Down]** buttons to scroll to **Add/Delete Stroke**, then press **[OK]** button. Use the **[Up/Down]** buttons until the correct number of total strokes --including the chip-- is displayed, then press **[OK]** button to confirm. Then proceed to register each subsequent putt until you hole out.
6. **Lost Club Tag:** If you lose a **Club Tag**, select **Pair Clubs** from the **Main Menu** or the **Play Menu** (if during a round). Register an extra **Club Tag** and select **Exisiting Club**. Use **[Down]** button to scroll to the club that the missing **Club Tag** was assigned to and then press **[OK]** button.

3.8 End Round

1. Once your round is finished, hold the **[OK]** button for 3 seconds to access the **Play Menu**. Use the **[Up/Down]** buttons to scroll to **End Round**, then press **[OK]** button to confirm.
2. Use the **[Up/Down]** buttons to scroll and view the data from your round.
3. Hold the **[OK]** button to exit and return to the **Main Menu**.

4. Settings

- To return to the **Main Menu**, hold the **[OK]** button for 3 seconds, or use the **[Down]** button to scroll down and select **Back**.
1. **Score Display:** Choose if you want your total score to be displayed numerically or relative to par (+1, E, -1).
 2. **Recommend Clubs:** Turn club recommendations on/off (**E-Caddie**).
 3. **Clear Stats:** Deletes all saved round data.
 4. **Sleep Time:** This is the amount of idle time before the screen turns dark to conserve battery life. Select from 30 sec, 1 min, 2 min, off.
 5. **Auto Power Down:** This is the amount of idle time before the device powers off. Select from 30 min, 1 hr, 2 hr, off.
 6. **Feedback:** Select the notification type when registering a shot.
 - **Audio & Vibration-** After registering a shot, device will vibrate then make a “beeping” sound.
 - **Audio Only-** After registering a shot, device will only “beep.”
 - **Vibration Only-** After registering a shot, device will only vibrate.
 7. **Brightness:** Adjust the brightness of the screen display.
 8. **Daylight Saving:** Turn **Daylight Saving Time** on/off.
 9. **Time Adjustment:** The time will set automatically once connected to satellites. Use this option to manually adjust the time by hour (if needed).

- 10. **Meter/Yard:** Select unit of measure, **Yards** or **Meters**.
- 11. **Factory Reset:** Returns device to factory settings and deletes all saved data.
- 12. **About:** View device information.
- 13. **Back:** Return to **Main Menu**.

5. Online Portal

PC requirements

- 1. 1-gigahertz (GHz) or faster 32-bit (x86) or 64-bit (x64) processor
- 2. 1-gigabyte (GB) RAM (32-bit) or 2 GB RAM (64-bit)
- 3. 16 GB available hard disk space (32-bit) or 20 GB (64-bit)
- 4. Internet access
- 5. Windows .NET Framework 4.0 or above installed
- 6. Minimum of 1024x768 screen resolution

Note: If using Windows 8, please visit www.swamigps.com/swami-gt and complete the required steps prior to uploading round data for the first time.

1. Plug **Swami GT** into PC via USB cable. Device must be powered on and on the Main Menu Screen.
2. Go to www.swamigps.com and click **GT Portal** at the top of the page.
3. Register a new account or Log-In with your existing account.

A screenshot of the Swami GT login and registration interface. At the top left is the Swami GT logo, which consists of a stylized flame icon next to the text "SWAMI GT". In the top right corner is a small circular button with an "X" icon. Below the logo are two input fields: the first is labeled "ENTER YOUR USERNAME" and the second is labeled "ENTER YOUR PASSWORD". Below these fields are two buttons: "LOG IN" on the left and "REGISTER" on the right. Below the buttons is a checkbox labeled "REMEMBER ME". At the bottom of the form is a link that says "Forgot Password?".

SWAMI GT

ENTER YOUR USERNAME

ENTER YOUR PASSWORD

LOG IN REGISTER

☐ REMEMBER ME

[Forgot Password?](#)

Installation

1. When using the online portal for the first time, you will have to install the **Swami Helper Application** to allow the portal to communicate with your Swami GT.



 
1. Click Download
2. Click Run

For Internet Explorer:

- A window will pop up at the bottom of the page click **Run** to install.



- Click **Run** again to continue



For Firefox:

- Click **Save File**.



- Then go to Downloads (top right corner of Browser Window)
- Click **Run**.

For Chrome:


- Click on the downloaded program (lower left corner of Browser window).
- Click **Run**.

3. The setup screen will pop up and then click **Next**.



4. Click **Next** again to continue.

5. Click **Next** to confirm installation.

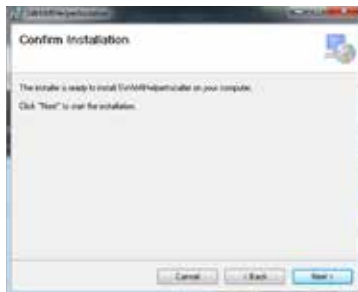

6. Then, the **Swami Helper Application** will start to install.



7. After the installation is complete, click **Close**.



8. During this process the driver installation window will pop up to install the driver and then disappear once the driver has been installed.



5.1 Uploading Rounds


1. Click on the Upload Round Data tab at the top of the web page.
2. Click on **UPLOAD**
3. Give permission for the program to run.



Internet Explorer



Firefox

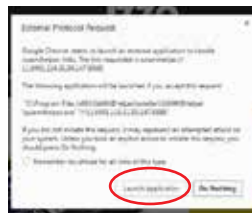

Chrome

4. Then Click **UPLOAD** again.
5. The round data on your Swami GT will begin to upload to the Portal.



6. After the upload has completed, close the upload window.

5.2 Reviewing Round Data

1. Click the View Round Data tab at the top of the web page.
2. Click on the **Select Round** drop down box located on the left side menu of the web page. Then click on the round you want to view.
3. View your round hole by hole and shot by shot by clicking on each hole number. Below the aerial view of your round, view your statistics for that round.
4. You can view and track your average statistics from your last 5 rounds or last 10 rounds by clicking **Summary** or **Detail** on the left side menu of the web page.

5.3 Deleting Rounds

1. To delete a round, click **Delete Round** on the left side menu of the web page.
2. Click the checkbox next to the round you want to delete.
3. Click **DELETE** and the round will be deleted.

CAUTION

Global Position System (GPS) was developed and is managed by the United States Department of Defense (DOD,) which is responsible for its normal operation and position precision control; the U.S. is entitled to affect function or position precision of the whole system without prior notification or announcement based on its political considerations or safety of national defense.

In order to use the SWAMI GT correctly and safely, you must be aware of some specific knowledge; please read the following attentions in the manual prior to operating the device:

- SWAMI GT was only designed for the purpose of leisure and recreation and it isn't applicable for industrial or special measurement.
- SWAMI GT is only an auxiliary device, so we will not accept any legal liability for accidents due to mistaken operation or poor judgment by using SWAMI GT for measurement.
- Please do not try to disassemble SWAMI GT or repair any part of the device.
- Please do not place SWAMI GT in a place exposing to direct sunlight or high temperature.

About GPS

Global Position System (GPS) is a satellite system developed by the Department of Defense of US. GPS consists of 32 satellites that circle the earth and are 11,000 miles away from the ground. These satellites make two circles of the earth per day and emit signals of extremely low power which will be received and recorded by 5 ground stations. These ground stations will use precise time signals to confirm accurate position of each satellite. Your GPS receiver can “pick” signals sent out by the satellites. An accurate latitude, longitude and height can be determined through calculation on positions and distances of at least 4 satellites.

WAAS (Wide Area Augmentation System) can enhance the precision of GPS. It was designed by the Federal Aviation Administration and is mainly used to enhance precision of GPS on planes. WAAS is combined with extra ground station groups that are set up in precisely located places. These ground stations work together with a master console to improve accuracy of satellite signals and reduce errors to about 3 meters.

Using Conditions

As Swami GT uses GPS, it is available only in the places that can receive satellite signals, excluding places indoor or in water.

QUESTIONS & ANSWERS

Situations	Possible Problems	Solutions
The device cannot be started	A. Battery voltage is too low. B. You didn't press and hold the [Power] key for 3 seconds.	A. Charge the battery. B. Press and hold the [Power] key until the power is on.
The device cannot detect satellites	A. Time for accessing satellite signal is not enough. B. The device is being started indoors.	A. Check whether the satellite icon keeps blinking; if it stops blinking, the satellite location has been fixed. B. Keep the device in an open outdoor space.

For U.S. customers, if you have any other questions or concerns, please call 1-800-777-7899 or go to www.swamigps.com

For U.K. customers, if you have any other questions or concerns, please call 01342 836376 or email richard@skymaxsport.co.uk.