

# QUICK START

**dynaPad™**  
**WT12PE-A Series**

**TOSHIBA**  
Leading Innovation >>>

# Check the components

## Your device comes with:

- AC adaptor with Micro USB power cable
- Documentation, including this Quick Start document and a Standard Limited Warranty.
- Other components, depending upon model

## Getting started

**Please read the General Safety Instruction information on the other side of this document.**

### **Connect to a power source**

Connect the AC adaptor with micro USB power cable to your computer and a live electrical outlet. You are now ready to start using your computer.

### **Connect to the Internet**

Connect to a network to take full advantage of your computer's features.

### **Backup your computer**

It is strongly recommended that you create a back up of your computer before using it for the first time. This will enable you to return it to its out-of-box state, if necessary. For complete instructions on how to create recovery media, see the "Creating recovery media" section in the electronic User's Guide.

 
### **Register your computer**

Enhance your ownership experience by taking a few minutes to register your Toshiba Product at **register.toshiba.com**. Completing Product registration allows Toshiba to provide you with Product information updates, special offers and promotions. Failure to complete Product registration will not diminish your rights under the Standard Limited Warranty.

### **California Prop 65 Warning**

**▲ WARNING** This product contains chemicals, including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. ***Wash hands after handling.***

# Quick Tour

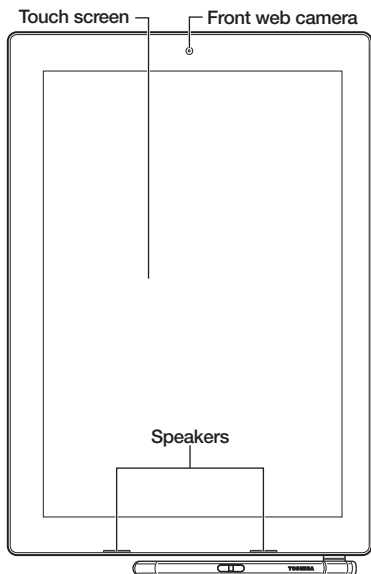

## Front

 
### Note:

When you rotate the device from portrait to landscape (or vice versa), the screen orientation automatically changes according to the rotation angle.


To lock the screen so that it does not rotate automatically, orient the device in the desired screen rotation (portrait or landscape) and do the following steps:

1. Touch the **Action Center** (☰) icon.  
The Action Center opens.
2. Touch the **Rotation lock** (🔒) icon.  
You can toggle the lock ON/OFF.


## Back

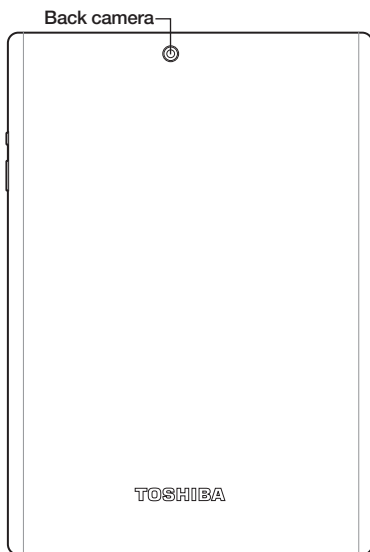


## Top

 


## Bottom

 


## Left

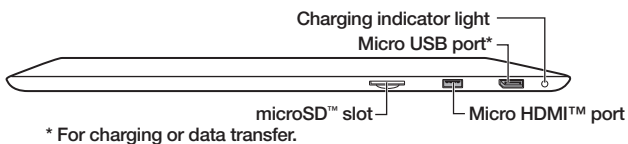 

## Right

 

## TruPen

 

### Note:

 
To avoid draining the TruPen battery, place the cap over the tip when not in use.

# Navigation

## Start menu

Select the **Start**  button on your device.

### Start menu (left side)

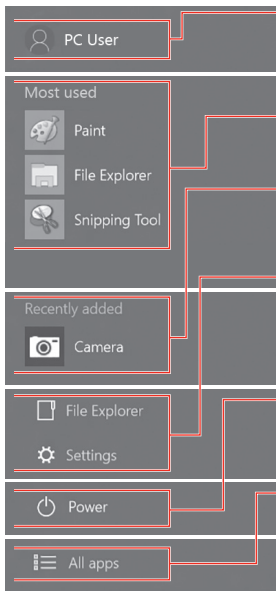

**User Profile**  
Settings – Change Account Settings, Lock or Sign Out

**Most used** – List of frequently used apps

**Recently added** – List of newly installed apps and programs


**Places** – Access File Explorer, Documents and Settings

**Power** – Sleep, Shut down, or Restart your computer

**All apps** – A list of all your installed apps, arranged for easy alphabetical browsing

*(Sample image)*

### Start menu (right side)

 

*(Sample image)*

**Tiles** – Fast access to apps, programs, folders, people, or websites.


### Task view

 


*(Sample image)*


Located in the taskbar, select to manage multiple windows and virtual desktops

## Action center

Open the Action Center by clicking on the Action Center icon  in the taskbar.



 The Action Center puts important notifications, from your apps and elsewhere, right on your taskbar.

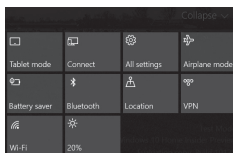

Use the Action Center to quickly change settings or tackle important tasks without interrupting your workflow.

*(Sample image)*

**NOTE:** Menu settings and images may vary.

# General Safety Instructions

Please read the following safety and operating instructions before using your Product. Keep the information near your Product for future reference. Also, please be sure to read your electronic User's Guide as it contains additional important Safety Information.

**▲ WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.

---

## AC Adaptor

Always use the Toshiba AC adaptor that was provided with your device or as specified by Toshiba and use correct power source specified on the regulatory label of device or adaptor. Always ensure a secure electrical connection. Be careful if you use a multiple connector to avoid current overload on one socket.

## Battery Pack

Do not expose the battery pack to heat or shock.

## Disassembly, Modification or Tampering

Do not disassemble, modify, tamper with or repair your device (including AC adaptor or power cable/cord).

## Choking Hazards

Keep device away from small children. This device is not a toy and may be hazardous to small children, for example, small detachable parts may be a choking hazard.

## Cleaning

Unplug device from the electrical outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. The injected combustible gas produced by these types of cleaners may remain inside of your product. The electrostatic spark from the motor or contact point of switch may ignite the gas residue, which could result in an explosion, fire, or burn injury. Instead use a lightly dampened cloth for cleaning in general and remove dust with a dry cloth.

## Hot Surfaces

Allow the equipment's internal components and hot-pluggable drives to cool before touching them

## Power Cables/Cords and Power Source

Always use power cables/cords and power sources that comply with the voltage and frequency specifications and requirements of the country of use.

## Service Provider

Disconnect device from the electrical outlet and take device to an authorized Toshiba service provider if:

- AC adaptor or Micro USB power cable is damaged.
- Liquid has spilled into device or an object (such as a screw, staple or paper clip) has entered device.
- Device has been dropped, subject to shock or impact and/or damaged in some way.
- Noticeable signs of overheating, smoke, deformation, cracks, leaks or unusual odor occur.
- Service is needed on component inside compartments requiring opening or removal of covers.

## Unstable Surfaces

Do not use Product on an unstable table, cart or stand.

## Viewing Recommendations

Some individuals may experience health-related complications when exposed to certain images or flashing lights (for example when playing videos or games). Discontinue use and consult a physician if you experience any health-related complications.

## Wireless Functionalities

Turn off your device and/or all wireless functionalities where electronic devices are regulated or controlled or when near a person with any medical electric devices.

## Water and moisture

Do not use device in a wet location. Do not connect/disconnect a power plug/cord with wet hands.

**⚠ CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

---

## Comfort Recommendations

When you use your Product, rest your eyes periodically and relax or stretch your muscles to avoid strain.

**CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in property damage.

---

## Foreign Objects

Never push a foreign object through an opening in the Product. Never allow metal objects (such as screws, staples, or paper clips) to enter Product. This could cause a short circuit.

## Operating Environment

Never expose your Product to excess heat, extremely low temperatures, sudden temperature variations, or dusty environments. This could cause system malfunction, loss of data or damage to Product.

## Thunderstorm

Never operate your Product during a thunderstorm. An electrical surge caused by the storm may cause system failure, loss of data or hardware damage.

**NOTE: Provides important and/or helpful information.**

---

Dispose of Product or any components in compliance with all applicable laws. The device's battery is not accessible by the user.

# Need Help?

**Most problems are easy to correct. Save time with one of these simple solutions.**

**Consult the electronic User's Guide**

(Internet connection required)

**To access the electronic User's Guide:**

1. In the Search field, type **User's Guide**
2. Click or touch **User's Guide**. The User's Guide will automatically open.

**Note:** The User's Guide will be automatically downloaded and saved on your computer so that you can access it at a later time.

For solutions to the most common problems, refer to the "If Something Goes Wrong" section of the User's Guide.

## Visit Toshiba's Support Web site

Technical support is available online at Toshiba's Web site at **support.toshiba.com**. At this Web site, you will find the User's Guide, answers for many commonly asked technical questions plus many downloadable software drivers, BIOS updates, and other downloads.

Product Specifications are subject to change without notice.

dynaPad is a trademark of Toshiba Corporation.

TruTalk and TruNote are trademarks of Toshiba America Information Systems, Inc. and/or Toshiba Corporation.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Secure Digital, SD, and microSD are trademarks or registered trademarks of SD-3C, LLC in the United States, other countries or both.

Wi-Fi® is a registered trademark of the Wi-Fi Alliance®.

All other brand and product names are trademarks or registered trademarks of their respective companies.

 Printed on recycled paper

**TOSHIBA**  
Leading Innovation >>>



© 2015 Toshiba America Information Systems, Inc.

GMA501453010 • 11/15